

---

[Notes]

R20TS0244EJ0100

Rev.1.00

Dec. 16, 2017

CS+ Code Generator for RL78 (CS+ for CC),  
CS+ Code Generator for RL78 (CS+ for CA,CX),  
e<sup>2</sup> studio Code Generator Plug-in,  
Applilet3 Coding Assistance Tool for RL78

---

## Outline

When using the products in the title, note the following point.

1. When continuous transfer mode is selected in the CSI configuration

## 1. When Continuous Transfer Mode is Selected in the CSI Configuration

### 1.1 Applicable Products

- V2.03.00 and later versions of the CS+ Code Generator for RL78 (CS+ for CC)
- V2.03.00 and later versions of the CS+ Code Generator for RL78 (CS+ for CA,CX)
- V3.0.1.9 and later versions of e<sup>2</sup> studio (V2.0.2 and later versions of the Code Generator plug-in)
- V1.07.00 and later versions of Applilet3 for RL78

### 1.2 Applicable MCUs

- RL78 Family: RL78/D1A, RL78/F12, RL78/F13, RL78/F14, RL78/F15, and RL78/L12 groups

### 1.3 Details

When CSI transmission or CSI transmission/reception is selected in applicable products and "continuous transfer mode" is selected for the "transfer mode settings", an additional setting is required for the output code.

## 1.4 Workaround

The buffer empty interrupt settings of channel xx need to be specified in the SMR serial mode register. Add SMR<sub>xx</sub> |= \_0001\_SAU\_BUFFER\_EMPTY to the transmission start function (R\_CSI<sub>xx</sub>\_Send) or the transmission/reception start function (R\_CSI<sub>xx</sub>\_Send\_Receive). (xx means the channel number.)

The following is an example of the modification required when CSI00 transmission/reception is selected for RL78/F14, channel 0, and the transfer mode is set to continuous transfer. The modification is shown in red.

Note: This addition is required every time code is generated.

R\_CSI00\_Send\_Receive function in r\_cg\_serial.c

```
MD_STATUS R_CSI00_Send_Receive(uint8_t * const tx_buf, uint16_t tx_num, uint8_t * const
rx_buf)
{
    MD_STATUS status = MD_OK;

    if (tx_num < 1U)
    {
        status = MD_ARGERROR;
    }
    else
    {
        g_csi00_send_length = tx_num;    /* send data length */
        g_csi00_tx_count = tx_num;      /* send data count */
        SMR00 |= _0001_SAU_BUFFER_EMPTY;
        gp_csi00_tx_address = tx_buf;    /* send buffer pointer */
        gp_csi00_rx_address = rx_buf;    /* receive buffer pointer */
        CSIMK00 = 1U;    /* disable INTCSI00 interrupt */

        if (0U != gp_csi00_tx_address)
        {
            SDR00L = *gp_csi00_tx_address;    /* started by writing data to SDR[7:0] */
            gp_csi00_tx_address++;
        }
        else
        {
            SDR00L = 0xFFU;
        }

        g_csi00_tx_count--;
        CSIMK00 = 0U;    /* enable INTCSI00 interrupt */
    }

    return (status);
}
```

## 1.5 Schedule for Fixing the Problem

This problem will be fixed in a later version.  
A revised version will be available in July 2018.

**Revision History**

Rev.	Date	Description	
		Page	Summary
1.00	Dec. 16, 2017	-	First edition issued

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061 Japan  
 Renesas Electronics Corporation

■Inquiry

<https://www.renesas.com/contact/>

Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.

The past news contents have been based on information at the time of publication. Now changed or invalid information may be included.

The URLs in the Tool News also may be subject to change or become invalid without prior notice.

All trademarks and registered trademarks are the property of their respective owners.