

Author: Bilal Qamar Date: November 4, 2016

Introduction

This application note shows how a LCD display can be controlled via an Android application using Bluetooth. The SLG46620V GreenPAK4 IC has been used as the main controller for the project.

Following is a list (along with brief details) of the components/modules used in the project:

- 1. LCD 16X2 character display
- 2. SLG46620V GreenPAK4 IC
- 3. HC-06 Bluetooth
- 4. The Android application

LCD Character Display

The liquid crystal chosen for the project has a 16x2 (16 columns and 2 rows) display. The LCD, as shown below, has 16 pins; we have also described the use of each below.

R/W:

When this signal is '1' = Data is to be read from the LCD RAM

When this signal is '0' = Data is written on the LCD RAM.

'Enable' is basically a Latch signal. First, you have to send '1', followed by the '0' signal (after specific delay) to latch the data.

Register Select Control signal:

When this signal is '1' = It accepts data i.e. to be displayed

When this signal is '0' = It accepts instructions for the LCD (setting fonts, cursor positions etc.).

The D0 to D7 pins constitute an 8-bit Data bus. It is used to send both data as well as Instructions to the LCD based upon the control signals.

Backlight + and Backlight GND: Turns the backlight of the LCD ON for visibility.

VEE: is a contrast voltage. Using a potentiometer, you can adjust the contrast of the LCD.

The greater the voltage, the more contrast you get and vice versa (voltage should never exceed VCC = +5 volts).



Figure 1. LCD Display

This LCD has 2 lines and can write maximum 16 characters per line.

SLG46620V GreenPAK4 IC

The SLG46620V is the first member of the 4th generation of GreenPAK products. It combines the best analog and digital resources from previous generations with expanded functionality and improved accuracy. The chip is available in a tiny $2.0 \times 3.0 \times 0.55$ mm 20-pin STQFN package.

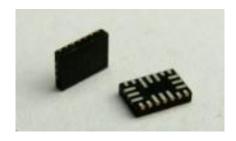


Figure 2. SLG46620V GreenPAK4 IC



Code (Hex)	Instruction	
1	Clear display screen	
2	Return home	
4	Decrement cursor (shift cursor to left)	
6	Increment cursor (shift cursor to right)	
5	Shift display right	
7	Shift display left	
8	Display off, cursor off	
A	Display off, cursor on	
С	Display on, cursor off	
E	Display on, cursor blinking	
F	Display on, cursor blinking	
10	Shift cursor position to left	
14	Shift cursor position to right	
18	Shift the entire display to the left	
1C	Shift the entire display to the right	
80	Force cursor to beginning of 1st line	
CO	Force cursor to beginning of 2nd line	
90	Force cursor to beginning of 3rd line	
D0	Force cursor to beginning of 4th line	
38	2 lines and 5×7 matrix (8-bit mode)	
28	2 lines and 5×7 matrix (4-bit mode)	
n	Next line	
t	Tab	

Table 1. 16 x 2 LCD Commands



HC-06 Bluetooth

Bluetooth is a wireless technology standard used to exchange data over short distances from fixed and mobile devices. It can also be used to build personal area networks (PANs). Range of a Bluetooth module is approximately 10 Meters. The Bluetooth is interfaced with the IC via the UART interface. As no data is being sent back to the LCD, only the TX and the GND pins are connected with the IC. A separate power supply is connected to the VCC.



Figure 3. HC-06 Bluetooth

Android Application

A custom Android application is developed for the JHD162A 16x2 LCD display. It connects with the server Bluetooth (HC-06) as a client. Main features of this application are as follows:

- Bluetooth client application; turns on Bluetooth on application startup
- Send ASCII
- Send HEX
- Adjustable delay in between every byte sent
- Custom initialization sequence for the LCD

The application is built using the Object Oriented programming principles.

Application Screenshots and use cases:

There are 2 screens in the application: Home Screen and the terminal. Both of the entities are shown in Fig. 5 & Fig. 6.

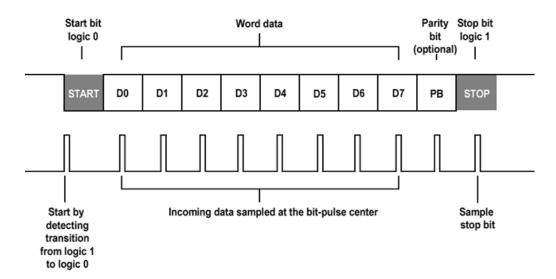


Figure 4. HC-06 Data Frame



- 1. First of all, the user needs to press the *INITIALIZE* button to send an initialization sequence before sending any data. This is required by the LCD as it needs to be initialized with a specific sequence/commands first. Without the initialization, the LCD will not function properly. If the entered initialization sequence on the home screen was not the valid hexadecimal data, the application will give an error and won't send any data. In such a case, the user needs to press *DISCONNECT* and change the initialization sequence to a valid hexadecimal format (or enter the initialization sequence manually and send it by pressing the HEX pushbutton).
- 2. Enter text in the text box available on the screen. The user has two options to send the data. If the user presses the *ASCII* button, the application will send data as it is, with propagation delays as selected in the previous screen.
- 3. If the user presses the HEX button, the application will check whether the user has entered the data in valid hexadecimal format. If yes, then the application will similarly send the data with propagation delays. (Check appendix for hex format for this application.)
- 4. User should be able to disconnect from the connected device by pressing the *DISCONNECT* button.

GreenPAK Designer Circuit

GreenPAK designer was used to design the circuit for the LCD. With the objective of zero code for LCD driving, the LCD must be driven from the IC. The GreenPAK IC had to be intelligently configured to drive the LCD. The GreenPAK designer divides the IC into 2 matrices; 0 and 1. Following is a detail of the designed circuit.

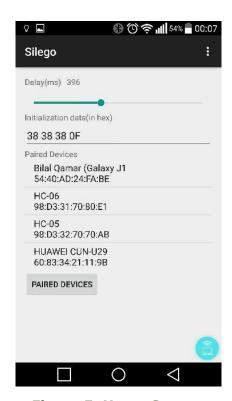


Figure 5. Home Screen

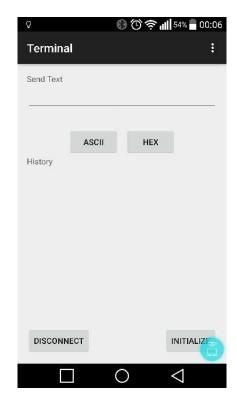


Figure 6. Terminal Screen



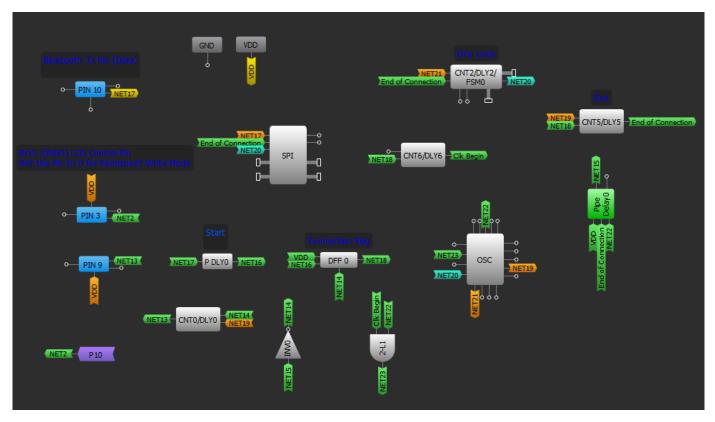


Figure 7. Matrix 0

The first matrix receives the data from the Bluetooth device via the UART protocol. The Tx pin of the Bluetooth is connected to the PIN 10 of the GreenPAK IC. The data received via Bluetooth is 8-bit with an additional start and stop bit. A counter is deployed which increments with the incoming bits.

A SPI block is used to receive data via Bluetooth. As the SPI protocol is different from UART, slight modifications help us to receive the incoming data from the Bluetooth module.


PIN 9 is attached to the enable pin of the LCD. The enable is by default *always high* and momentarily goes to zero when the data needs to be latched onto the LCD.

The CNT/DLY0 (which is being used as the delay when the enable is active low) is configurable.

The LCD requires an active low signal of at least 30-60ms according to the datasheet. However, maximum delay values are used in order to make sure that no data gets lost, as the application is not time critical.

Matrix 1 shows the SPI block (which receives the data via Bluetooth) directly connected to the 8-bit data bus from D0 to D7. The data bus pins are in turn connected to the pins from 20 to 13, as shown in Table 2.



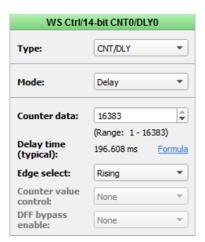

For RS and R/W of the LCD, 4-bit and 3-bit LUTs have been used, to differentiate between the control and the data commands.

The RS control pin is connected to PIN 12 of the GreenPAK IC while the R/W pin is connected to PIN 3 (in matrix 0). As the communication is half duplex i.e. the LCD is receiving commands via Bluetooth and the IC but no data/information is sent back to the Android app; the R/W is always active low (write mode).

Figure 8. CNT/DLY0 properties

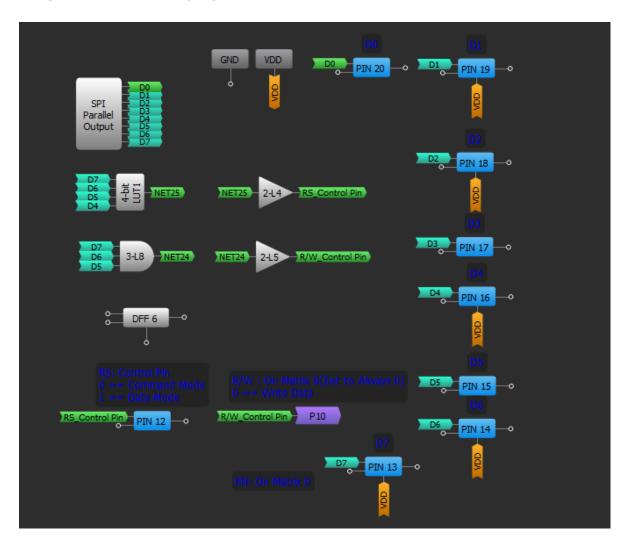


Figure 9. Matrix 1



The RS, R/W and EN pins of the LCD each require a pull-up resistor while the data bus pins are connected directly via the GreenPAK IC pins to the LCD.

Conclusion

In this application example, data sent to the SLG46620V IC via the Bluetooth module was displayed on the LCD. The GreenPAK IC worked effectively for the task at hand. The Android app is designed to ensure that the IC is able to configure any other LCD, which may have a different initialization sequence. The GreenPAK IC provides developers ease in transforming their ideas to products; without the hassle of coding!

	PIN Number	Data bit
MSB to LSB	20	D0
	19	D1
	18	D2
	17	D3
	16	D4
	15	D5
	14	D6
	13	D7

Table 2. Data PINs

IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES ("RENESAS") PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01 Jan 2024)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit www.renesas.com/contact-us/.