

## HLQFP, HTQFP Mount Pad Dimensions

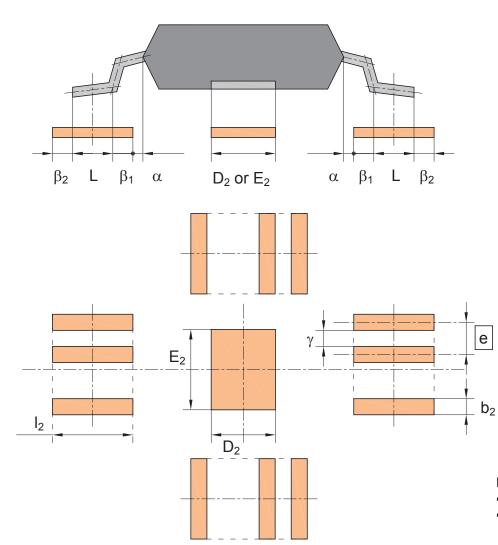

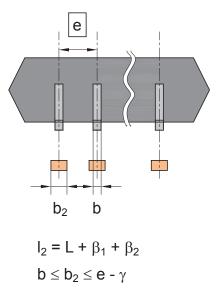

 $l_2$  and  $b_2$  can get by following formula and value e and b from package drawing figure and below parameter table.

Dimension parameter				(Unit: mm)
e	0.80	0.65	0.50	0.40
α	0.10 to 0.30	←	$\leftarrow$	$\leftarrow$
β <sub>1</sub>	0.20 to 0.40	$\leftarrow$	$\leftarrow$	$\leftarrow$
β2	0.20 to 0.40	←	$\leftarrow$	$\leftarrow$
γ	0.30	$\leftarrow$	0.25	0.20

(Reference values based on the former EIAJ ED-7404 standard)

## Note

- Lead parts are designed in the same way as LQFP and TQFP.
- In case to use thermal pad, the size of thermal pad should be the same as the diepad. (E<sub>2</sub> x D<sub>2</sub>)