


CP1		CP2		CP3		CP4	
GND	48	GND	32	GND	28	GND	54
47	46	31	49			53	52
45	44	50				51	64
43	42					65	66
41	40					67	68
39	38					69	70
37	36			29	26	71	72
35	34			27	N.C.	73	
33	N.C.		N.C.	6	56	57	58
61	62			55			N.C.
63	25					3	4
24	23					5	74
22	21					75	76
20	19					77	
18	17					78	79
16	15		59			80	1
14	13		12			2	10
		11	30			9	8
GND	GND	60	GND	GND		7	GND
RL78/G13 80FA/80FB		RL78/G13 80FA/80FB		RL78/G13 80FA/80FB		RL78/G13 80FA/80FB	

[使用方法]

[The way to use]

- 1.本紙をプリントする注
- 1.Print out this paper ^{note}
- 2.線に沿って切り取る
- 2.Cut off along the line
- 3.図のようにはめ込む
- 3.Insert it as the figure

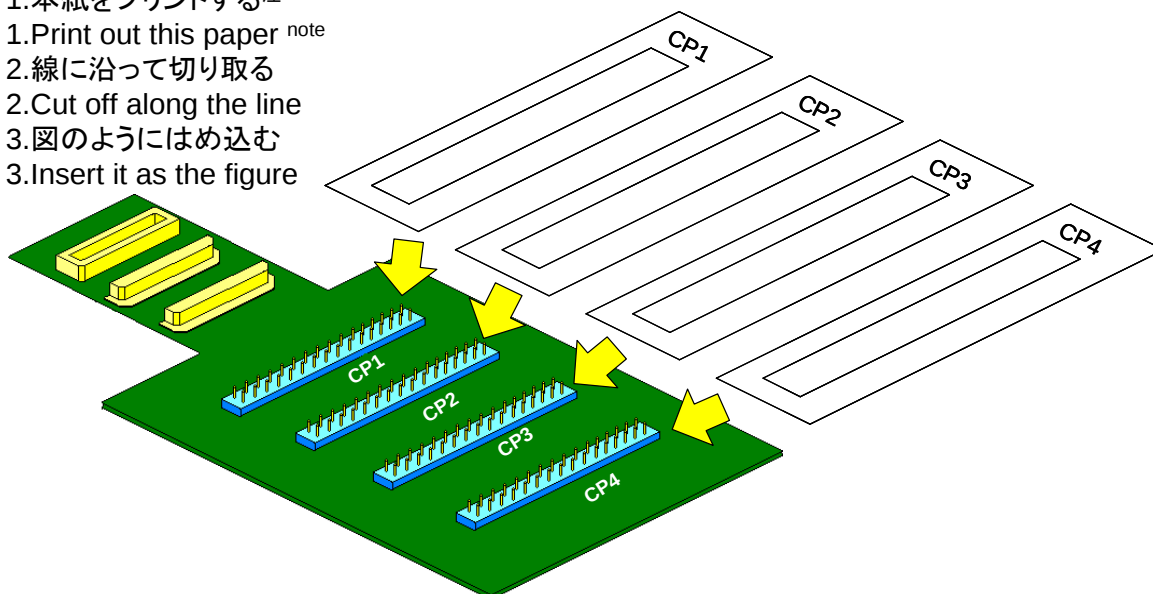

注 : プリンタにより若干寸法がずれることが有ります。
 その際は印刷の倍率で調整してください。

Note : Sometimes, the size of this paper shifts a little by the printer.
 In this case, adjust for the magnification of printing.