

To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.

"Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.

8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

To all our customers

Regarding the change of names mentioned in the document, such as Hitachi Electric and Hitachi XX, to Renesas Technology Corp.

The semiconductor operations of Mitsubishi Electric and Hitachi were transferred to Renesas Technology Corporation on April 1st 2003. These operations include microcomputer, logic, analog and discrete devices, and memory chips other than DRAMs (flash memory, SRAMs etc.) Accordingly, although Hitachi, Hitachi, Ltd., Hitachi Semiconductors, and other Hitachi brand names are mentioned in the document, these names have in fact all been changed to Renesas Technology Corp. Thank you for your understanding. Except for our corporate trademark, logo and corporate statement, no changes whatsoever have been made to the contents of the document, and these changes do not constitute any alteration to the contents of the document itself.

Renesas Technology Home Page: <http://www.renesas.com>

Renesas Technology Corp.
Customer Support Dept.
April 1, 2003

Cautions

Keep safety first in your circuit designs!

1. Renesas Technology Corporation puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage.
Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corporation product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation or a third party.
2. Renesas Technology Corporation assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor for the latest product information before purchasing a product listed herein.
The information described here may contain technical inaccuracies or typographical errors.
Renesas Technology Corporation assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.
Please also pay attention to information published by Renesas Technology Corporation by various means, including the Renesas Technology Corporation Semiconductor home page (<http://www.renesas.com>).
4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
5. Renesas Technology Corporation semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
6. The prior written approval of Renesas Technology Corporation is necessary to reprint or reproduce in whole or in part these materials.
7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination.
Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
8. Please contact Renesas Technology Corporation for further details on these materials or the products contained therein.

SH7751R E10A
Emulation Memory Board
(HS7751REJH01H)
User's Manual

Cautions

1. Hitachi neither warrants nor grants licenses of any rights of Hitachi's or any third party's patent, copyright, trademark, or other intellectual property rights for information contained in this document. Hitachi bears no responsibility for problems that may arise with third party's rights, including intellectual property rights, in connection with use of the information contained in this document.
2. Products and product specifications may be subject to change without notice. Confirm that you have received the latest product standards or specifications before final design, purchase or use.
3. Hitachi makes every attempt to ensure that its products are of high quality and reliability. However, contact Hitachi's sales office before using the product in an application that demands especially high quality and reliability or where its failure or malfunction may directly threaten human life or cause risk of bodily injury, such as aerospace, aeronautics, nuclear power, combustion control, transportation, traffic, safety equipment or medical equipment for life support.
4. Design your application so that the product is used within the ranges guaranteed by Hitachi particularly for maximum rating, operating supply voltage range, heat radiation characteristics, installation conditions and other characteristics. Hitachi bears no responsibility for failure or damage when used beyond the guaranteed ranges. Even within the guaranteed ranges, consider normally foreseeable failure rates or failure modes in semiconductor devices and employ systemic measures such as fail-safes, so that the equipment incorporating Hitachi product does not cause bodily injury, fire or other consequential damage due to operation of the Hitachi product.
5. This product is not designed to be radiation resistant.
6. No one is permitted to reproduce or duplicate, in any form, the whole or part of this document without written approval from Hitachi.
7. Contact Hitachi's sales office for any questions regarding this document or Hitachi semiconductor products.

IMPORTANT INFORMATION

READ FIRST

- **READ** this user's manual before using this emulation memory board.
- **KEEP** the user's manual handy for future reference.

Do not attempt to use the emulation memory board until you fully understand its mechanism.

Emulation Memory Board:

Throughout this document, the term "emulation memory board" shall be defined as the following products produced only by Hitachi, Ltd. excluding all subsidiary products.

- Emulation memory board
- Power cables supplied together with this emulation memory board

The user system or a host computer is not included in this definition.

Purpose of the Emulation Memory Board:

This emulation memory board is an optional board for supporting the development of the systems using Hitachi microcomputer SH7751R. This emulation memory board must only be used for the above purpose.

Limited Applications:

This emulation memory board is not authorized for use in MEDICAL, atomic energy, aeronautical or space technology applications without consent of the appropriate officer of a Hitachi sales company. Such use includes, but is not limited to, use in life support systems. Buyers of this emulation memory board must notify the relevant Hitachi sales offices before planning to use the product in such applications.

Improvement Policy:

Hitachi, Ltd. (including its subsidiaries, hereafter collectively referred to as Hitachi) pursues a policy of continuing improvement in design, functions, performance, and safety of the emulation memory board. Hitachi reserves the right to change, wholly or partially, the specifications, design, user's manual, and other documentation at any time without notice.

Target User of the Emulation Memory Board:

This emulation memory board should only be used by those who have carefully read and thoroughly understood the information and restrictions contained in the user's manual. Do not attempt to use the emulation memory board until you fully understand its mechanism.

It is highly recommended that first-time users be instructed by users that are well versed in the operation of the emulation memory board.

LIMITED WARRANTY

Hitachi warrants its emulation memory boards to be manufactured in accordance with published specifications and free from defects in material and/or workmanship. Hitachi, at its option, will repair or replace any emulation memory boards returned intact to the factory, transportation charges prepaid, which Hitachi, upon inspection, determine to be defective in material and/or workmanship. The foregoing shall constitute the sole remedy for any breach of Hitachi's warranty. See the Hitachi warranty booklet for details on the warranty period. This warranty extends only to you, the original Purchaser. It is not transferable to anyone who subsequently purchases the emulation memory board from you. Hitachi is not liable for any claim made by a third party or made by you for a third party.

DISCLAIMER

HITACHI MAKES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR USE, OR AGAINST INFRINGEMENT OF ANY PATENT. IN NO EVENT SHALL HITACHI BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM ANY DEFECTIVE EMULATION MEMORY BOARD, THE USE OF ANY EMULATION MEMORY BOARD, OR ITS DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS EXPRESSLY STATED OTHERWISE IN THIS WARRANTY, THIS EMULATION MEMORY BOARD IS SOLD "AS IS", AND YOU MUST ASSUME ALL RISK FOR THE USE AND RESULTS OBTAINED FROM THE EMULATION MEMORY BOARD.

State Law:

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which may vary from state to state.

The Warranty is Void in the Following Cases:

Hitachi shall have no liability or legal responsibility for any problems caused by misuse, abuse, misapplication, neglect, improper handling, installation, repair or modifications of the emulation memory board without Hitachi's prior written consent or any problems caused by the user system.

All Rights Reserved:

This user's manual and emulation memory board are copyrighted and all rights are reserved by Hitachi. No part of this user's manual, all or part, may be reproduced or duplicated in any form, in hard-copy or machine-readable form, by any means available without Hitachi's prior written consent.

Other Important Things to Keep in Mind:

1. Circuitry and other examples described herein are meant merely to indicate the characteristics and performance of Hitachi's semiconductor products. Hitachi assumes no responsibility for any intellectual property claims or other problems that may result from applications based on the examples described herein.
2. No license is granted by implication or otherwise under any patents or other rights of any third party or Hitachi.

Figures:

Some figures in this user's manual may show items different from your actual system.

Limited Anticipation of Danger:

Hitachi cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this user's manual and on the emulation memory board are therefore not all inclusive. Therefore, you must use the emulation memory board safely at your own risk.

SAFETY PAGE

READ FIRST

- **READ** this user's manual before using this emulation memory board.
- **KEEP** the user's manual handy for future reference.

Do not attempt to use the emulation memory board until you fully understand its mechanism.

DEFINITION OF SIGNAL WORDS



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTE emphasizes essential information.

WARNING

Observe the precautions listed below. Failure to do so will result in a FIRE HAZARD and will damage the user system, the emulation memory board, and the emulator product or will result in PERSONAL INJURY. The USER PROGRAM will be LOST.

- 1. Do not repair or remodel the emulation memory board by yourself for electric shock prevention and quality assurance.**
- 2. Always switch OFF the emulator product, the emulation memory board, and the user system before connecting or disconnecting any CABLES or JUMPERS.**
- 3. Always switch OFF the emulation memory board and the user system before connecting or disconnecting the IC socket or the user system interface connector.**
- 4. When connecting the user system interface connector to the IC socket on the user system, ensure that pin 1 on both sides are correctly aligned.**
- 5. Supply power according to the power specifications and do not supply an incorrect power voltage. Use only the provided power cables.**

Warnings on Emulation Memory Board Usage

Be sure to read and understand the warnings below before using this emulation memory board. Note that these are the main warnings, not a complete list.

WARNING

Always switch OFF the emulator product, the emulation memory board, and the user system before connecting or disconnecting any CABLES, JUMPERS, or PARTS. Failure to do so will result in a FIRE HAZARD and will damage the emulator product, the emulation memory board, or the user system, or will result in PERSONAL INJURY. The USER PROGRAM will be LOST.

CAUTION

Position the emulator product, the emulation memory board, and the user system so that no cable is bent or twisted. A bent or twisted cable will impose stress on the user system interface leading to connection or contact failure. Make sure that the emulation memory board is placed in a secure position so that it does not move during use nor impose stress on the user system interface.

Preface

Thank you for purchasing the SH7751R E10A emulation memory board. The emulation memory board supports the development of systems using Hitachi microcomputer SH7751R.

Read this user's manual before using the emulation memory board, and keep the manual handy for future reference.

CAUTION

READ this user's manual before using the emulation memory board. Incorrect operation or connection will damage the emulation memory board and the user system. The USER PROGRAM will be LOST.

Related Manuals:

- SH7751 Series Hardware Manual
- SH7751R E10A Emulator User's Manual

Related Hardware: SH7751R E10A Emulators

- HS7751RKCM01H
- HS7751RKCM02H
- HS7751RKCI01H
- HS7751RKCI02H

Contents

Section 1 Overview	1
1.1 Features	1
1.2 Components	2
Section 2 Notes on Use	4
Section 3 Emulation Memory Board Functions.....	5
Section 4 Emulation Memory Board Operation	7
4.1 Switch Setting	8
4.1.1 Power Source Switch Setting.....	8
4.1.2 Jumper Switch Setting	8
4.1.3 DIP Switch (SW2) Setting	10
4.1.4 RESET Switch (SW1).....	14
4.2 Monitor LEDs	15
Section 5 Connection Procedures	17
5.1 Connecting Emulation Memory Board to Emulator and User System	17
5.2 Operating Emulation Memory Board Without Connecting User System	23
5.3 Disconnecting Emulation Memory Board from User System.....	25
5.4 Recommended Dimensions for User System Mount Pad	26
Section 6 Limitations	27
6.1 Limitations on User System	27
Section 7 User System Interface	29
7.1 Pin Assignment and Handling of User System Interface Signals	29
7.2 Signal Line Handling on the Emulation Memory Board and User System	34
Section 8 Emulation Memory Board Block Diagram.....	35
Section 9 Using the Emulator in a Case.....	37

Section 1 Overview

The SH7751R E10A emulation memory board (hereinafter referred to as the emulation memory board) has an SH7751R (hereinafter referred to as the MCU), interface connectors (H-UDI port connectors) for the E10A emulator (hereinafter referred to as the emulator), a user system interface connector, and SRAM devices. User programs can be emulated by connecting this emulation memory board to the emulator.

1.1 Features

1. The emulation memory board has emulator connectors and a user system interface connector (YQPACK256SE). When the user system has an IC socket (NQPACK256SE) but has no H-UDI connector, the user system can be connected to the emulator through the emulation memory board and the user program can be emulated.
2. The emulation memory board has SRAM devices that can be used as a substitute for the flash memory or EPROM devices. User programs can be emulated by connecting the emulation memory board to the emulator and supplying external power to the emulation memory board, even when no user system is connected to the emulator.
3. The emulation memory board has switches for various settings. These switches can select
 - (1) the source of the power supplied to the emulation memory board,
 - (2) the source of the clock supplied to the MCU on the emulation memory board, and
 - (3) the destination of the CS0 signal output from the MCU.
4. The emulation memory board has a DIP switch, which can set the MCU's MD terminal status.

1.2 Components

Figure 1.1 and table 1.1 show the components of the emulation memory board. Please make sure you have all of these components when unpacking.

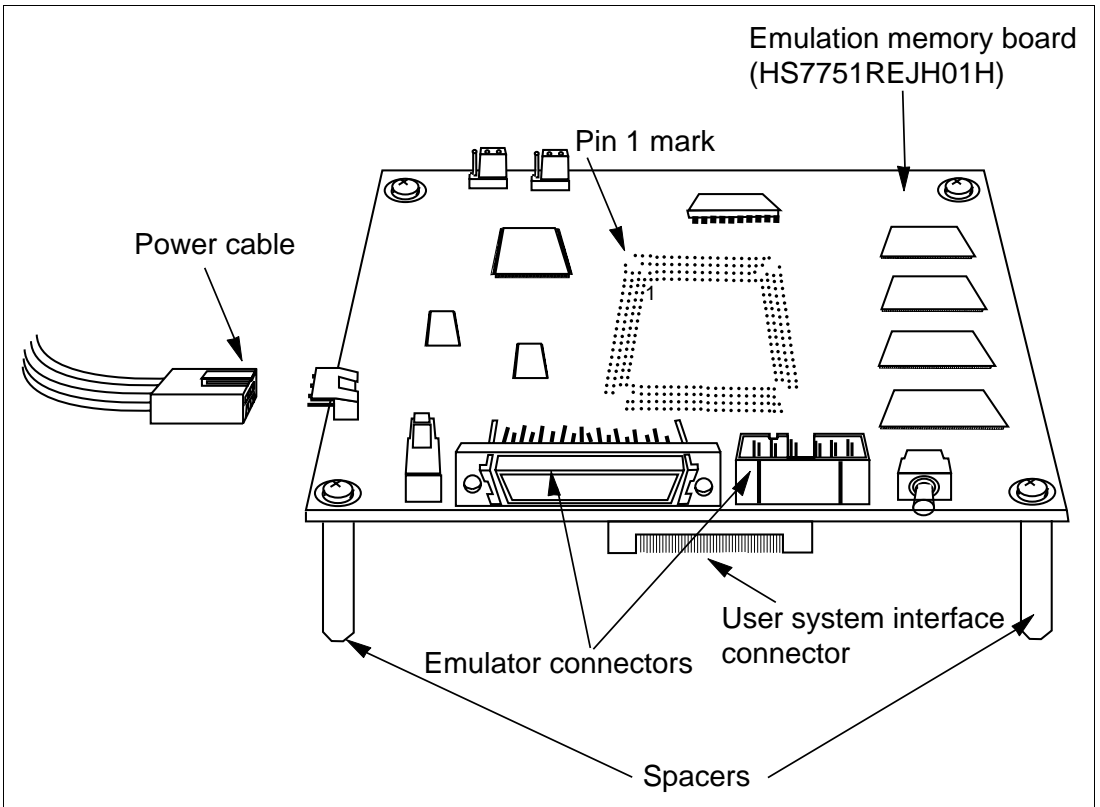


Figure 1.1 Emulation Memory Board Appearance

Table 1.1 Emulation Memory Board Components (HS7751REJH01H)

Item	Quantity	Notes
Emulation memory board	1	
Power cables (2 cables for 5 V and 2 cables for GND)	1 set	For an external power supply
Screws (M2 x 10 mm)	4	For fastening user system interface connector
NQPACK256SE	1	Connector for interfacing with the user system
Guide pins for NQPACK256SE	3	Provided with NQPACK256SE
Screwdriver	1	Provided with NQPACK256SE
Spacers (13 mm)	4	Fixed to the emulation memory board
SH7751R E10A Emulation Memory Board User's Manual	1	This manual

CAUTION

READ the following warnings before using the emulation memory board. Incorrect operation will damage the emulation memory board, the user system, and the emulator product. The USER PROGRAM will be LOST.

1. Cover the emulation memory board with a casing before using it. If using the emulation memory board without a casing, do not touch any component and prevent any short circuit.
2. Never place heavy objects on the emulation memory board.
3. Protect the emulation memory board from excessive impacts and stresses.
4. Do not supply power outside the specified voltage range.
5. When moving the emulation memory board, take care not to vibrate or damage it.
6. Supply power to the connected equipment only after connecting all cables. Cables must not be connected or removed while the power is on.
7. The emulation memory board may operate incorrectly due to static electricity. In this case, connect the GND patterns (the spacer-fixed sections at the four corners) on the emulation memory board to those of the user system through cables to discharge static electricity.
8. The emulation memory board can operate only when connected to the emulator; the emulation memory board cannot be used alone or only by connecting to the user system.

Section 3 Emulation Memory Board Functions

The functions of the emulation memory board are listed in table 3.1.

Table 3.1 Emulation Memory Board Functions

Function	Specifications
Clock	<ul style="list-style-type: none">• $I\phi$ (CPU clock) = 240 MHz (max.)• Clock installed in this emulation memory board: 20 MHz (EXTAL input)
Substitution emulation memory	<ul style="list-style-type: none">• Capacity: 4 Mbytes (8 blocks of 256 kwords x 16 bits)• 84 MHz (max.) = $B\phi$ (bus clock): Two wait cycles inserted by WCR2• Can be allocated to the CS0 area (Substitution memory area: H'00000000 to H'003FFFFFF)• Data bus width can be selected from 16 or 32 bits (8-bit width is not supported)
User interface	Supported package: 256 pin QFP
Crystal oscillator	Supported frequency for crystal oscillation: 16.7 MHz to 20 MHz
Switch settings	<ul style="list-style-type: none">• SW3: Selects the power source• JP1: Selects the clock source• JP2: Selects the CS0 signal output destination
DIP switch settings	<ul style="list-style-type: none">• SW2-1 to SW2-3: Selects the clock operating mode• SW2-4, SW2-5, and SW2-7: Selects the memory type and bus width for area 0• SW2-6: Selects the endian• SW2-8: Selects the master or slave mode• SW2-9: Selects the clock source• SW2-0: Selects whether or not to write-protect the substitution emulation memory
RESET switch	SW1: Issues a RESET signal
LEDs	<ul style="list-style-type: none">• LED1: RESET and POWER• LED2: RDY and U-RUN• LED3: BREQ and NMI• LED4: STATUS1 and STATUS0

Table 3.1 Emulation Memory Board Functions (cont)

Function	Specifications
Power supply	<ul style="list-style-type: none">• The emulation memory board can operate without connecting the user system by supplying +5 V through power connector J1 (IL-4P-S3FP2: manufactured by Japan Aviation Electronics Industry, Ltd.) The power connector pins work as follows: Pin 1: GND (black) Pin 2: 5 V (red) Pin 3: 5 V (red) Pin 4: GND (black)• When the emulation memory board is connected to the user system, supply +3.3 V from the VDDQ pin on the YQPACK256SE connector, respectively.

- Notes:**
1. For the substitution emulation memory, a 16-bit bus and a 32-bit bus are supported. Do not set the bus width to 8 bits when using the substitution emulation memory.
 2. When allocating substitution emulation memory to an area, set WCR2 of the bus state controller to provide an appropriate cycle access state.
 3. When connecting the emulation memory board to the user system, note that the RDY signal is pulled down to ground on the emulation memory board so that the bus processing will be completed if any area other than the substitution emulation memory (CS0 area) is accessed.

CAUTION

Restriction on Buffer Control Using the RD Signal:

RD signal output cannot be disabled from the emulator. Consequently, when the buffer control on the user system uses only the RD signal, data read from this emulation memory board and data output from the buffer may conflict. For this reason, when using the emulation memory board, be sure to control the data bus buffer of the user system with both the CS and RD (used in direction control) signals.

Section 4 Emulation Memory Board Operation

The emulation memory board has a RESET switch (SW1) for issuing a reset signal, a DIP switch (SW2) and jumper switches (JP1 and JP2) for various settings, a switch (SW3) for selecting the power source, a socket (SP1) for installing a crystal oscillator, and LEDs (LED1 to LED4) for signal monitoring. Figure 4.1 shows the switches, socket (SP1), and LEDs.

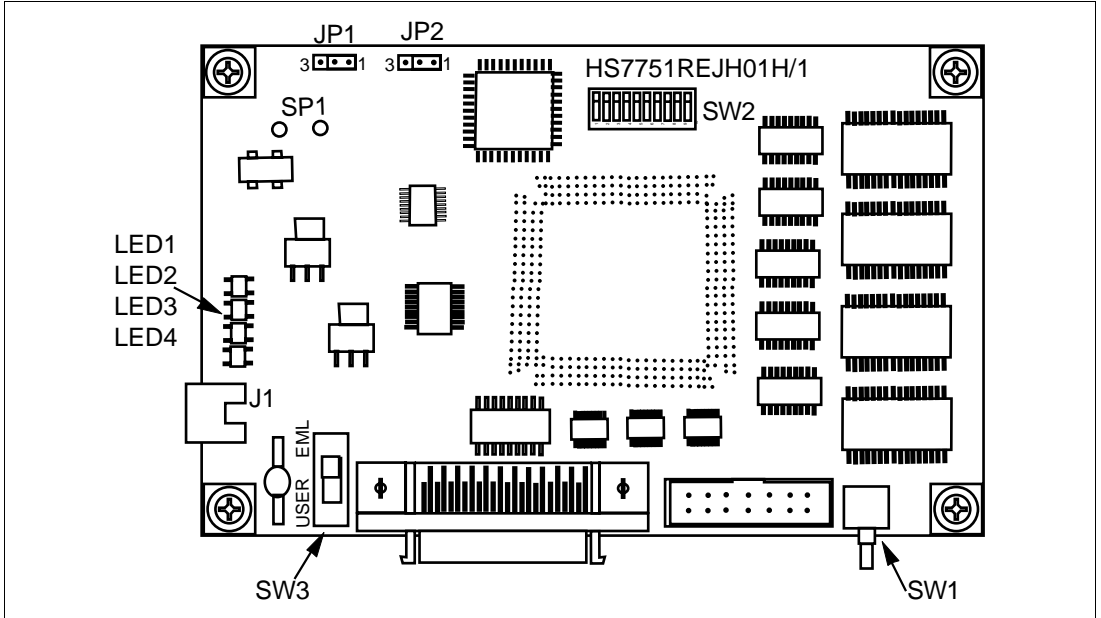


Figure 4.1 Switches, Socket, and LEDs

4.1 Switch Setting


4.1.1 Power Source Switch Setting

The SW3 selects whether the power for the emulation memory board is supplied from an external source or through the user system interface.

WARNING

Always switch OFF the user system and the emulation memory board before power source switch (SW3) setting. Failure to do so will damage the user system and the emulation memory board.

To supply power from an external source (sliding the switch to EML):

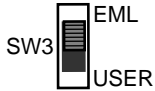

To supply power through the user system interface (sliding the switch to USER):




4.1.2 Jumper Switch Setting

The emulation memory board has two jumper switches JP1 and JP2 for the following settings.

JP1 Function: The JP1 selects whether the clock for the MCU is supplied from the emulation memory board or from the user system. When installing a crystal oscillator into the socket (SP1) on the emulation memory board, open JP1. In this case, set the jumper connector on pin 1 as shown below so that the jumper connector will not be lost.


To supply the clock from the emulation memory board (EML side: pins 2-1 closed):

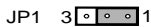

To supply the clock from the user system (USER side: pins 3-2 closed):



To install a crystal oscillator into the SP1 socket on the emulation memory board (JP1 is open):

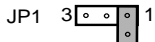


- Notes: 1. When closing 1-2 pins or 2-3 pins of JP1, turn switch 9 of SW2 ON (see table 4.5). When leaving JP1 open (installing a crystal oscillator), turn switch 9 of SW2 OFF.
2. The emulation memory board supports the external clock input through the EXTAL pin and the clock generated by the crystal oscillator installed on the SP1 socket. Therefore, be sure to supply the clock to the EXTAL pin when using the user system clock. If the clock is supplied to the XTAL, EXTAL2, or XTAL2 pin, the emulation memory board cannot operate.

JP2 Function: The JP2 selects the CS0 signal output destination to specify whether the substitution memory on the emulation memory board or the memory of the user system is used.

CAUTION

- 1. Restriction on Buffer Control Using the RD Signal:**
RD signal output cannot be disabled from the emulator. Consequently, when the buffer control on the user system uses only the RD signal, data read from this emulation memory board and data output from the buffer may conflict. For this reason, when using the emulation memory board, be sure to control the data bus buffer of the user system with both the CS and RD (used in direction control) signals.
- 2. The substitution emulation memory is allocated to the 4 Mbytes from the start address of area 0. If the memory of the user system is allocated to area 0, that is, the same area as the substitution emulation memory, only the memory selected by the JP2 setting is used. When the substitution emulation memory is selected by JP2, the CS0 signal is not output to the user system.**

To use the substitution memory on the emulation memory board (EML side: pins 2-1 closed):

JP2 3  1

To use the memory of the user system (USER side: pins 3-2 closed):

JP2 3  1

4.1.3 DIP Switch (SW2) Setting

The emulation memory board has one DIP switch for the following settings.

- Selecting the clock operating mode: Three switches
- Selecting the memory type and bus width for area 0: Three switches
- Selecting the endian: One switch
- Selecting the master or slave mode: One switch
- Selecting the clock source: One switch
- Selecting whether or not to write-protect the substitution emulation memory: One switch

Tables 4.1 to 4.7 show the SW2 functions.

Note: For details on the mode control terminals (MD0 to MD10), refer to the SH7751 Series Hardware Manual.

CAUTION

1. When a user system is connected to the emulation memory board, the DIP switch (SW2) settings are ignored, and the MD0 to MD10 signals input to the user system are used.

The setting on pin 0 of SW2 is only valid when JP2 is set to select the EML side (pins 2-1 closed), regardless of whether or not the user system is connected to the emulation memory board.

2. When the emulation memory board is not connected to the user system, the PCI controller is not supported. In this case, the PCI mode setting (MD9 and MD10) cannot be modified.

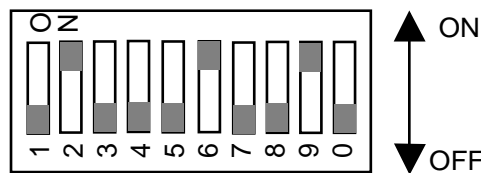


Figure 4.2 DIP Switch (SW2) Appearance and Settings at Shipment

Clock Operating Mode Setting: Select the clock operating mode as shown in table 4.1.

Table 4.1 Clock Operating Mode Setting (Switches 1 to 3 in SW2)

Switches in SW2 (Corresponding Mode Pins)			Clock Mode	Remarks
3 (MD2)	2 (MD1)	1 (MD0)		
ON	ON	ON	0	
ON	ON	OFF	1	
ON	OFF	ON	2	
ON	OFF	OFF	3	
OFF	ON	ON	4	
OFF	ON	OFF	5	Initial setting at shipment

Area 0 Memory Type and Bus Width Setting: Select the memory type and bus width for area 0 as shown in table 4.2.

Table 4.2 Memory Bus Width Setting (Switches 4, 5, and 7 in SW2)

Switches in SW2 (Corresponding Mode Pins)			Memory Type	Bus Width	Remarks
7 (MD6)	5 (MD4)	4 (MD3)			
ON	ON	ON	Reserved	Reserved	Do not use this setting
ON	ON	OFF	Reserved	Reserved	Do not use this setting
ON	OFF	ON	Reserved	Reserved	Do not use this setting
ON	OFF	OFF	MPX	32 bits	*1
OFF	ON	ON	Reserved	Reserved	Do not use this setting
OFF	ON	OFF	SRAM	8 bits	Do not use this setting*2
OFF	OFF	ON	SRAM	16 bits	
OFF	OFF	OFF	SRAM	32 bits	Initial setting at shipment

Notes: 1. When using the substitution emulation memory, turn off switch 7 (MD6).

2. The substitution emulation memory does not support the 8-bit bus width.

Endian Setting: Select the endian as shown in table 4.3.

Table 4.3 Endian Setting (Switch 6 in SW2)

**Switch in SW2
(Corresponding Mode Pin)**

6 (MD5)	Endian	Remarks
ON	Big endian	Initial setting at shipment
OFF	Little endian	

Master or Slave Mode Setting: Select the master or slave mode as shown in table 4.4.

Table 4.4 Master or Slave Mode Setting (Switch 8 in SW2)

**Switch in SW2
(Corresponding Pin)**

8 (MD7)	Master or Slave Mode	Remarks
ON	Slave mode	
OFF	Master mode	Initial setting at shipment

Clock Source Setting: Select whether to input the clock from the EXTAL or a crystal oscillator as shown in table 4.5.

WARNING

Always switch OFF the user system and the emulation memory board before installing or uninstalling the crystal oscillator to/from the SP1 socket. Failure to do so will damage the user system, the emulation memory board, and the crystal oscillator.

Table 4.5 Clock Source Setting (Switch 9 in SW2)

Switch in SW2 (Corresponding Pin)

9 (MD8)	Clock Source	Remarks
ON	External clock	Initial setting at shipment
OFF	Crystal oscillator	

Note: When setting this switch to ON, do not open JP1. When setting this switch to OFF, be sure to install a crystal oscillator into the SP1 socket on the emulation memory board.

Write-Protection Setting: Select whether to write-protect the substitution emulation memory while the user program is running as shown in table 4.6. When write-protection is not specified, the substitution emulation memory can be written to.

Table 4.6 Write-Protection Setting (Switch 0 in SW2)

Switch in SW2 (Corresponding Pin)

0 (WP)	Write-Protection	Remarks
ON	Write-protected	
OFF	Write-enabled	Initial setting at shipment

- Notes:**
- 1. In the following two situations, the substitution emulation memory will not be write-protected even when this switch is set to ON (write-protected): when an E10A emulator break is executed immediately after a write instruction and when single-step execution is performed.**
 - 2. When JP2 is set to select the USER side (user system memory), the write-protection setting switch (switch 0 in SW2) becomes invalid; the substitution emulation memory is not write-protected even when switch 0 in SW2 is set to ON (write-protected).**

PCI Mode Setting: The PCI controller is not supported when the user system is not connected to the emulation memory board. The emulation memory board does not therefore have a switch for setting the PCI mode. When the user system is not connected, the PCI mode is PCI-disabled. When the user system is connected, the PCI mode is determined by the MD9 and MD10 signals from the user system.

Table 4.7 PCI Mode

Mode	Pins		PCI Mode
	MD10	MD9	
0	0	0	PCI host, external input clock
1	0	1	PCI host, CKIO feedback input clock
2	1	0	PCI not host, external input clock
3	1	1	PCI disabled

Note: When the user system is not connected to the emulation memory board, the PCI mode setting cannot be modified.

4.1.4 RESET Switch (SW1)

The emulation memory board has RESET switch for issuing a reset signal.

The /RESET signal to the MCU is obtained by ORing the reset signal from the RESET switch, that from the power-on reset circuit on the emulation memory board, and the /RESET signal from the user system interface. The manual reset, on the other hand, is done using only the input signal from the user system interface. Figure 4.3 shows the logic diagram for the reset circuit.

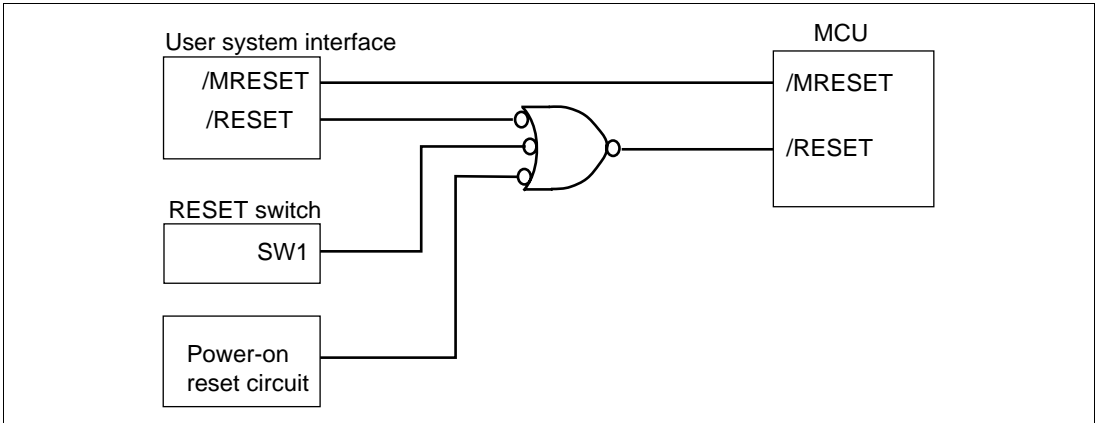


Figure 4.3 Reset Circuit Logic Diagram

4.2 Monitor LEDs

The emulation memory board has LEDs for monitoring the operating state. Table 4.8 shows the LEDs and the states to be monitored.

For details on STATUS1 and STATUS0 signals, refer to the SH7751 Series Hardware Manual.

Table 4.8 LEDs and States to Be Monitored

LED	Indication on the Board	LED Status	Remarks
LED1	RESET	Green LED lit when /RESET is asserted	
	POWER	Red LED lit when power is supplied	
LED2	RDY	Green LED lit when /RDY is asserted	
	U-RUN	Red LED lit when in USER RUN state	Signal: ASEBRKAK
LED3	BREQ	Green LED lit when /BREQ is asserted	
	NMI	Red LED lit when /NMI is asserted	
LED4	STATUS1	Green LED lit when STATUS1 is 0 (low)	
	STATUS0	Red LED lit when STATUS0 is 0 (low)	

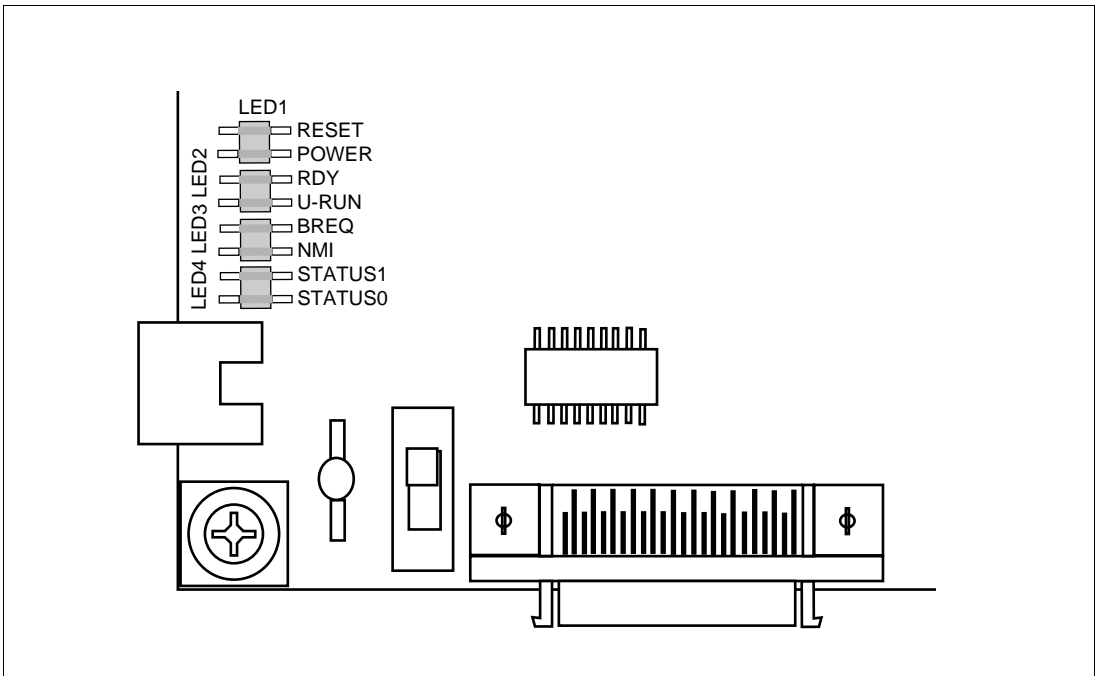


Figure 4.4 LED Location and Indication on the Board

Section 5 Connection Procedures

5.1 Connecting Emulation Memory Board to Emulator and User System

Be sure to switch off the emulator and user system before connecting the emulation memory board, emulator, and user system. Do not supply power to the power connector on the emulation memory board when using the user system.

WARNING

Observe the precautions listed below. Failure to do so will result in a FIRE HAZARD and will damage the user system, the emulation memory board, and the emulator product or will result in PERSONAL INJURY. The USER PROGRAM will be LOST.

- 1. Always switch OFF the emulator product, the emulation memory board, and the user system before connecting the EMULATOR PRODUCT, EMULATION MEMORY BOARD, or USER SYSTEM.**
- 2. DO NOT supply power to the emulation memory board power connector (J1) when the emulation memory board is connected to the user system. When connected to the user system, the emulation memory board receives power from the VDDQ pin of the IC socket (NQPAC256SE) and operates by the user system power.**

Connecting Emulation Memory Board to Emulator: Connect the emulator to the 14-pin connector (CN1) or 36-pin connector (CN2) on the emulation memory board, depending on the emulator type as follows:

HS7751RKCM01H or HS7751RKCI01H: 14-pin connector (CN1)

HS7751RKCM02H or HS7751RKCI02H: 36-pin connector (CN2)

For details on the connection procedure, refer to the SH7751R E10A Emulator User's Manual.

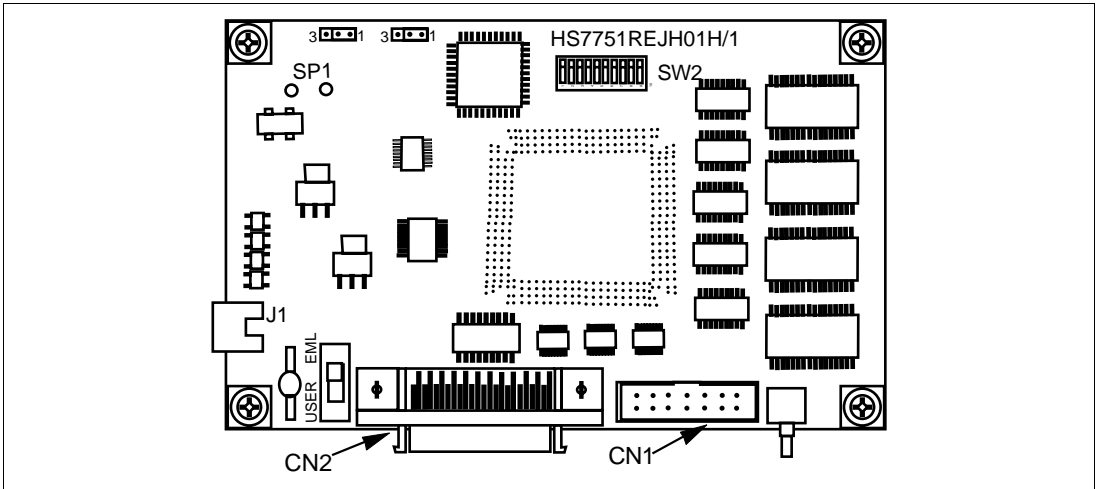


Figure 5.1 Connectors for Emulator

WARNING

Observe the precautions listed below. Failure to do so will result in a FIRE HAZARD and will damage the user system, the emulation memory board, and the emulator product or will result in PERSONAL INJURY.

- 1. Always switch OFF the emulator product, the emulation memory board, and the user system before connecting the EMULATOR PRODUCT, EMULATION MEMORY BOARD, or USER SYSTEM.**
- 2. Use the recommended IC socket on the user system. Otherwise, excessive force will be applied to the emulation memory board and the user system when the emulation memory board is connected to or disconnected from the user system.**

CAUTION

- 1. Use NQPACK256SE (manufactured by Tokyo Eletech Corporation) as the QFP256 IC socket on the user system.**
- 2. To mount the MCU directly on the NQPACK256SE socket, a socket cover must be used. Separately purchase HQPACK256SE (manufactured by Tokyo Eletech Corporation).**

1. Confirm that the pins of the YQPACK connector on the emulation memory board are not bent.
2. Align pin 1 of the YQPACK connector on the emulation memory board with pin 1 of the NQPACK socket on the user system, and insert the connector into the socket.

CAUTION

The structures of the YQPACK connector and NQPACK socket prevent the connector from being fully inserted in the wrong direction. If the connector cannot be inserted fully, pin 1 on the connector and that on the socket may not be aligned correctly. Check the pin 1 locations on the connector and socket and re-insert the YQPACK connector.

3. After inserting the YQPACK connector on the emulation memory board into the NQPACK socket of the user system, fix the emulation memory board in place with the supplied screws, as shown in figure 5.2.

CAUTION

1. Use the supplied screwdriver.
2. The tightening torque must be 0.054 N•m or less. Stop tightening when the force required to turn the screw becomes significantly greater than that needed when first tightening.
3. If a screw is tightened too much, the screw head may break or an IC socket contact error may be caused by a crack in the IC socket solder.
4. If the emulator does not operate correctly, cracks might have occurred in the solder. Check conduction with a tester and re-solder the IC socket if necessary.

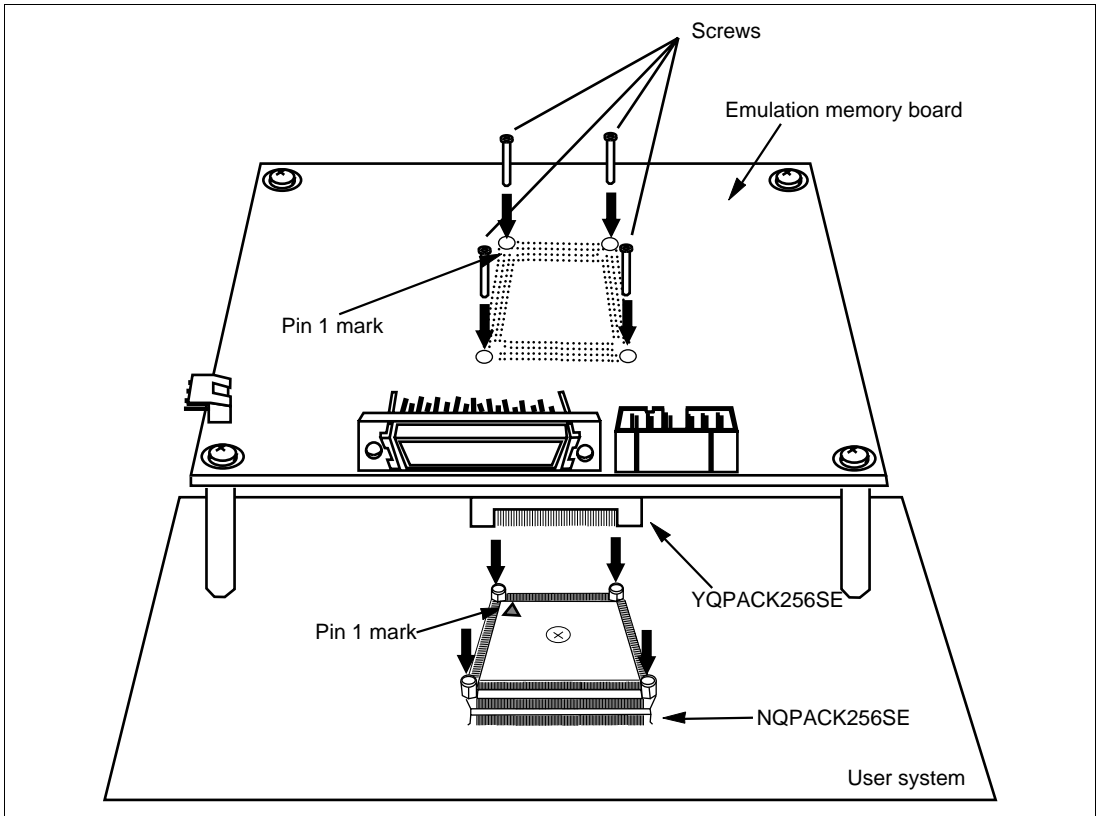


Figure 5.2 Connecting Emulation Memory Board to User System

Power Supply Specifications: When the user system is connected, the emulation memory board operates by the user system power. Supply the user system power according to the specifications and rising timing shown in table 5.1 and figure 5.3.

CAUTION

1. Check that the SW3 switch is set to the power supply through the user system interface, and supply 3.3-V power to the VDDQ pin. Do not supply power to the power connector (J1) on the emulation memory board.
2. When power is supplied through the user system interface (YQPACK), only 3.3-V power should be supplied from the user system, and the emulation memory board generates 1.5-V power from the 3.3-V power. Therefore, the VDD pin (1.5 V) of the user system interface (YQPACK) is not connected to the MCU on the emulation memory board.

Table 5.1 Power Supply Specifications

Allowable Power Range	Current Consumption
+ 3.3 VDC \pm 5%	1.74 A (max.)

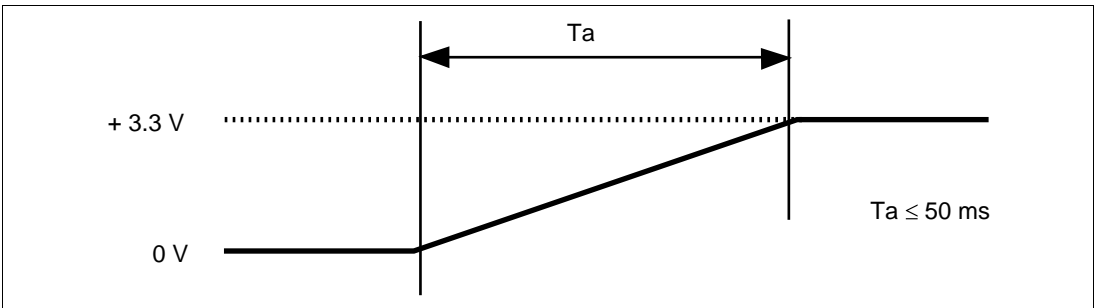


Figure 5.3 Characteristics of DC Rising Timing

5.2 Operating Emulation Memory Board Without Connecting User System

Be sure to switch off the emulator and emulation memory board before connecting them together and before connecting the power cables to the emulation memory board.

WARNING

Always switch OFF the emulator product and the emulation memory board before connecting the EMULATOR PRODUCT, EMULATION MEMORY BOARD, or POWER CABLES. Failure to do so will result in a FIRE HAZARD and will damage the emulator product and the emulation memory board or will result in PERSONAL INJURY.

Connecting to the Emulator: Connect the emulation memory board to the emulator by using the same procedure as in section 5.1, Connecting Emulation Memory Board to Emulator and User System.

Connecting the Power Cables: After making sure the alignment is correct, connect the provided power cables to the power connector (J1) on the emulation memory board to supply power, as shown in figure 5.4. (The power cable and connector structures will prevent the power cables from being connected in the wrong direction.)

Note that the red cables are for 5-V power and the black ones are for GND; connect them to the DC power source correctly.

WARNING

Be sure to connect the power cables to the DC power source correctly, that is, the red cables to the 5-V power and the black ones to GND. Failure to do so will result in a FIRE HAZARD and will damage the emulator product and the emulation memory board or will result in PERSONAL INJURY.

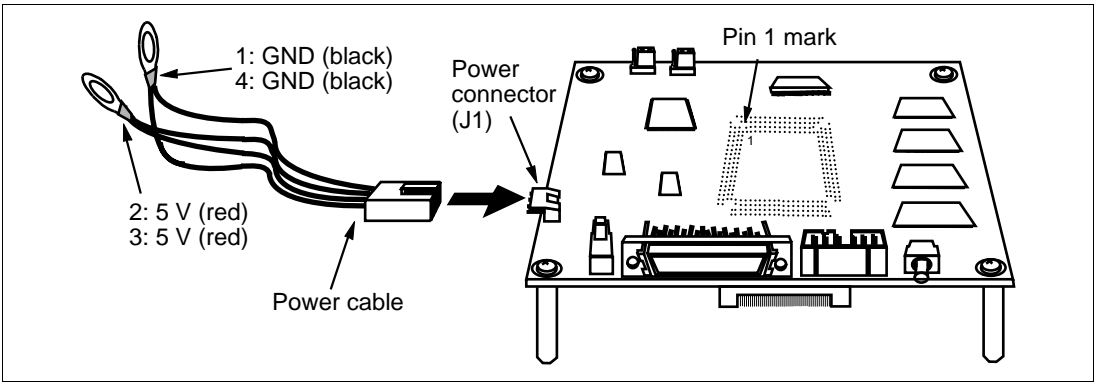


Figure 5.4 Connecting Power Cables to Power Connector

Power Supply Specifications: Table 5.2 shows the power supply specifications, and figure 5.5 shows the rising timing of the power.

Table 5.2 Power Supply Specifications

Allowable Power Range	Current Consumption
+ 5.0 VDC \pm 5%	1.74 A (max.)

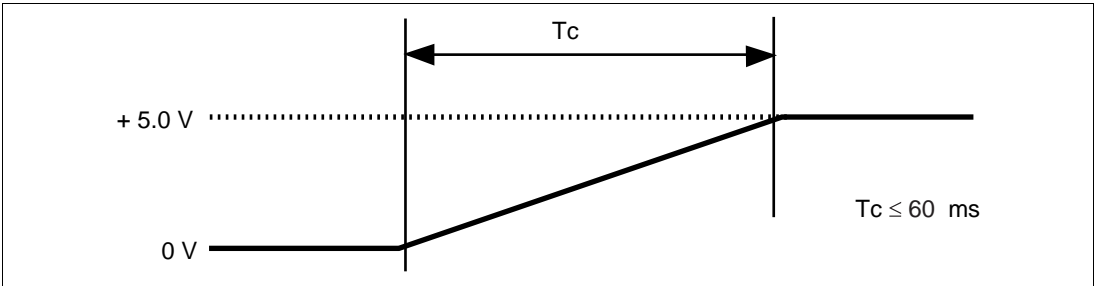


Figure 5.5 Characteristics of DC Rising Timing

5.3 Disconnecting Emulation Memory Board from User System

Be sure to switch off the emulator and user system before disconnection.

WARNING

Always switch OFF the emulator product, the emulation memory board, and the user system before disconnecting the EMULATOR PRODUCT, EMULATION MEMORY BOARD, or USER SYSTEM. Failure to do so will result in a FIRE HAZARD and will damage the emulator product, the emulation memory board, and the user system or will result in PERSONAL INJURY.

Disconnecting Emulation Memory Board from User System: Follow the instructions below.

1. Remove the screws that connect the YQPACK connector and the NQPACK socket.
2. After removing all screws, remove the emulation memory board from the user system, taking care not to bend any of the pins.

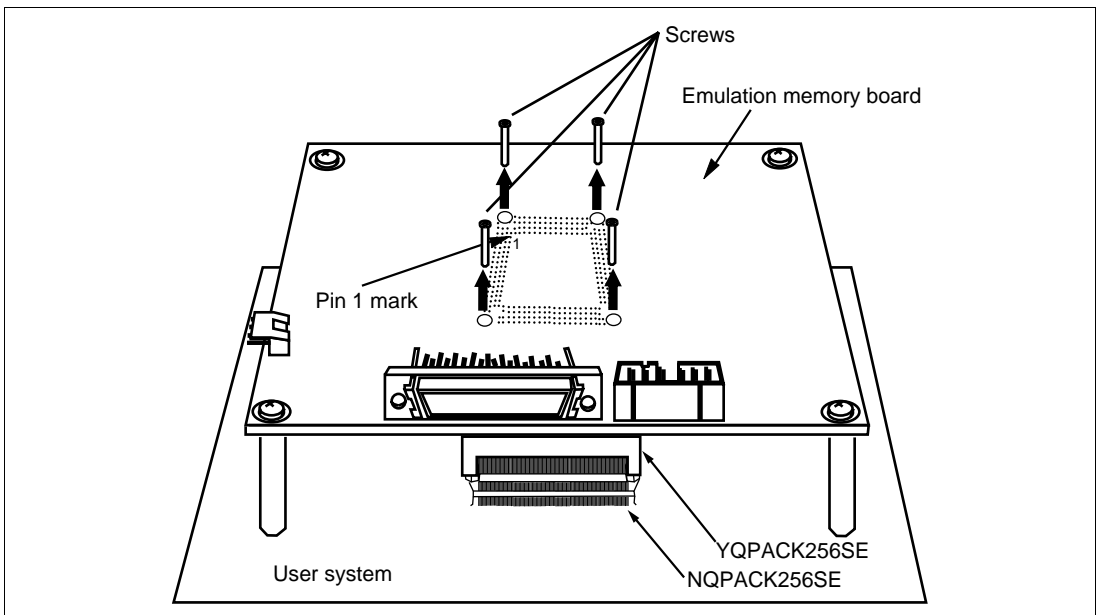


Figure 5.6 Disconnecting Emulation Memory Board

5.4 Recommended Dimensions for User System Mount Pad

Figure 5.7 shows the recommended dimensions for the mount pad (footprint) for the user system with an IC socket for a QFP256 package (NQPACK256SE: manufactured by Tokyo Eletech Corporation). Note that the dimensions in figure 5.7 are somewhat different from those of the actual chip's mount pad.

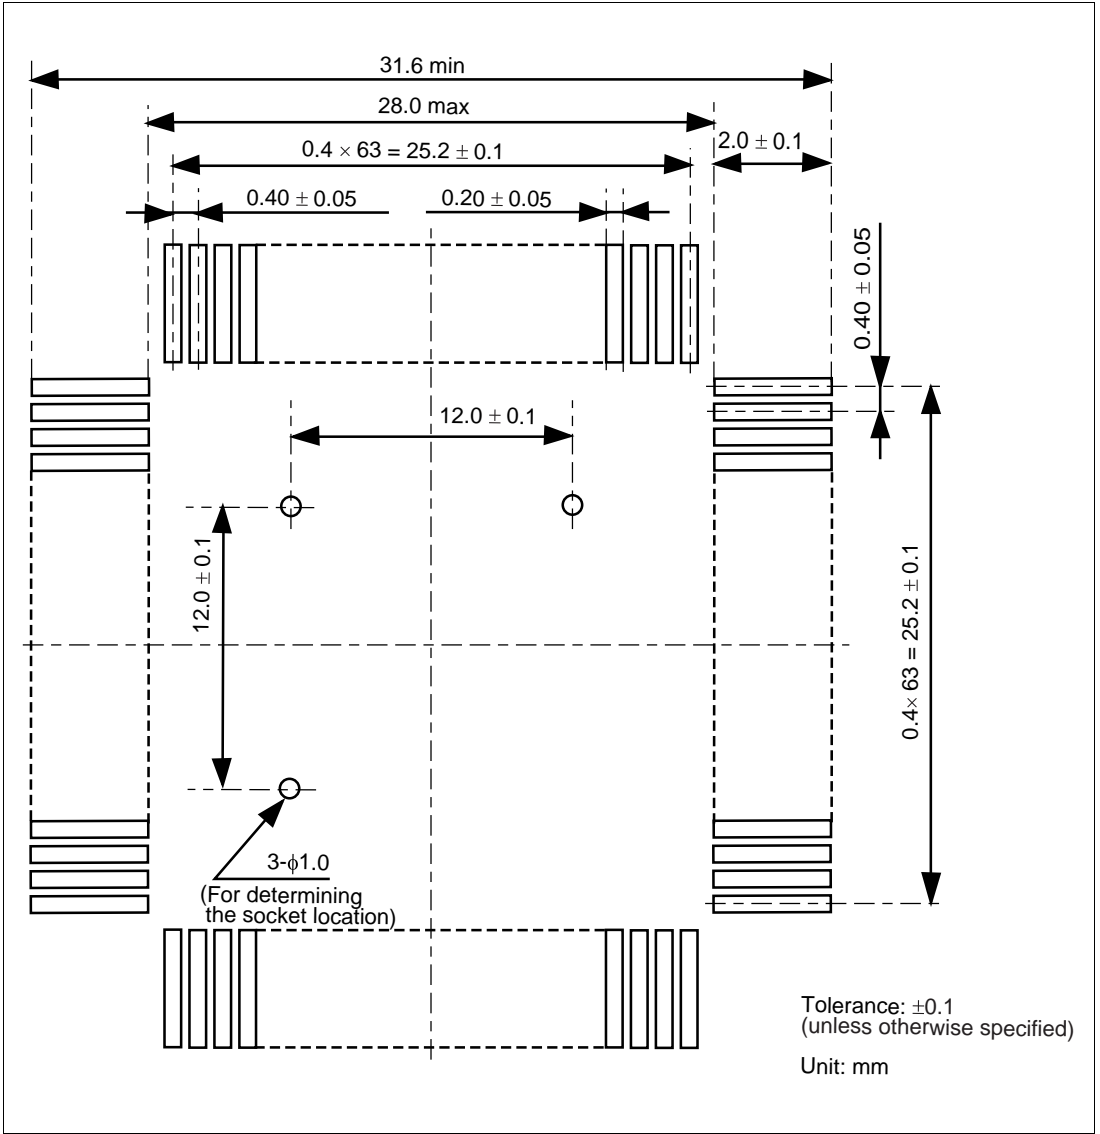


Figure 5.7 Recommended Dimensions for Mount Pad

Section 6 Limitations

6.1 Limitations on User System

To use the emulation memory board together with the user system, do not mount any components in the mount-prohibited areas (figure 6.1) of the user system. If any component is mounted on any of these areas, remove the corresponding spacer from the emulation memory board. In this case, take special care not to give any stress to the user system interface section (NQPACK).

The height of the mounted components must be 8.0 mm or shorter in the height-limited area (figure 6.1) of the user system. If any component in this area is higher than 8.0 mm, the emulation memory board cannot be connected to the user system.

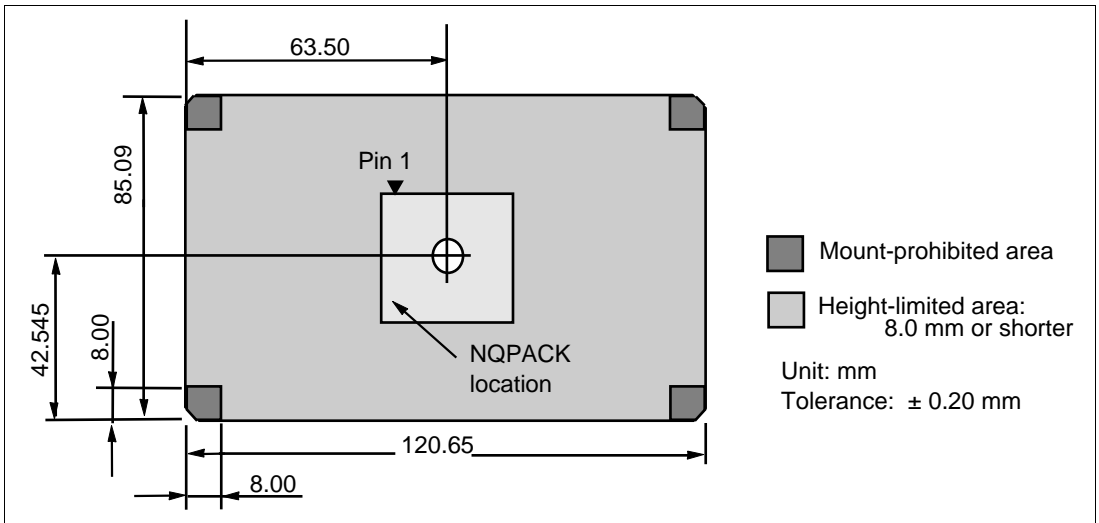


Figure 6.1 Mount-Prohibited and Height-Limited Areas of User System

Section 7 User System Interface

7.1 Pin Assignment and Handling of User System Interface Signals

The emulation memory board has a connector (YQPACK) for user system interface. Table 7.1 shows the pin assignment of the user system interface connector and signal handling on the emulation memory board.

Table 7.1 Pin Assignment and Handling of User System Interface

No.	Signal Name	Handling	Notes	No.	Signal Name	Handling	Notes
1	TMS	NC		26	D8		
2	TCK	NC		27	D9		
3	VDDQ	3.3 V		28	D10		
4	VSSQ	GND		29	VDDQ	3.3 V	
5	TDI	NC		30	VSSQ	GND	
6	CS0	Pull-up	47 k Ω	31	D11		
7	CS1			32	D12		
8	CS4			33	D13		
9	CS5			34	D14		
10	CS6			35	D15		
11	BS			36	CAS0/DQM0		
12	WE0/REG			37	CAS1/DQM1		
13	WE1			38	RD/WR		
14	DO			39	CKIO	Pull-up	47 k Ω
15	VDDQ	3.3 V		40	Reserved	NC	
16	VSSQ	GND		41	VDDQ	3.3 V	
17	VDD	NC		42	VSSQ	GND	
18	VSS	GND		43	Reserved	NC	
19	D1			44	RD/CASS/FRAME		
20	D2			45	CKE		
21	D3			46	RAS		
22	D4			47	VDD	NC	
23	D5			48	VSS	GND	
24	D6			49	CS2		
25	D7			50	CS3		

Table 7.1 Pin Assignment and Handling of User System Interface (cont)

No.	Signal Name	Handling	Notes	No.	Signal Name	Handling	Notes
51	A0			81	VDD	NC	
52	A1			82	VSS	GND	
53	A2			83	D20		
54	A3			84	D21		
55	VDDQ	3.3 V		85	D22		
56	VSSQ	GND		86	D23		
57	A4			87	D24		
58	A5			88	D25		
59	A6			89	D26		
60	A7			90	D27		
61	A8			91	D28		
62	A9			92	D29		
63	A10			93	VDDQ	3.3 V	
64	A11			94	VSSQ	GND	
65	A12			95	D30		
66	A13			96	D31		
67	VDDQ	3.3 V		97	VDD	NC	
68	VSSQ	GND		98	VSS	GND	
69	A14			99	A18		
70	A15			100	A19		
71	A16			101	A20		
72	A17			102	A21		
73	CAS2/DQM2			103	A22		
74	CAS3/DQM3			104	A23		
75	D16			105	VDDQ	3.3 V	
76	D17			106	VSSQ	GND	
77	D18			107	A24		
78	D19			108	A25		
79	VDDQ	3.3 V		109	WE2/ICIORD		
80	VSSQ	GND		110	WE3/ICIORW		

Table 7.1 Pin Assignment and Handling of User System Interface (cont)

No.	Signal Name	Handling	Notes	No.	Signal Name	Handling	Notes
111	VDD	NC		141	AD22		
112	VSS	GND		142	AD21		
113	SLEEP	Pull-up	47 k Ω	143	VDDQ	3.3 V	
114	PCIGNT4			144	VSSQ	GND	
115	PCIGNT3			145	VDD	NC	
116	PCIGNT2			146	VSS	GND	
117	PCIREQ4			147	AD20		
118	PCIREQ3/MD10	Pull-up	47 k Ω	148	AD19		
119	VDDQ	3.3 V		149	AD18		
120	VSSQ	GND		150	AD17		
121	PCIREQ2/MD9	Pull-up	47 k Ω	151	AD16		
122	IDSEL			152	C/BE2		
123	INTA			153	PCIFRAME		
124	PCIRST			154	IRDY		
125	PCICLK			155	TRDY		
126	PCIGNT1/REQOUT			156	DEVSEL		
127	PCIREQ1/GNTIN			157	VDDQ	3.3 V	
128	SERR			158	VSSQ	GND	
129	AD31			159	PCISTOP		
130	AD30			160	PCILOCK		
131	VDDQ	3.3 V		161	PERR		
132	VSSQ	GND		162	PAR		
133	AD29			163	C/BE1		
134	AD28			164	AD15		
135	AD27			165	AD14		
136	AD26			166	AD13		
137	AD25			167	AD12		
138	AD24			168	AD11		
139	C/BE3			169	VDDQ	3.3 V	
140	AD23			170	VSSQ	GND	

Table 7.1 Pin Assignment and Handling of User System Interface (cont)

No.	Signal Name	Handling	Notes	No.	Signal Name	Handling	Notes
171	AD10			201	NMI	Pull-up	47 k Ω
172	AD9			202	BACK/BSREQ	Pull-up	47 k Ω
173	AD8			203	BREQ/BSACK	Pull-up	47 k Ω
174	C/BE0			204	MD6/IOIS16	Pull-up	47 k Ω
175	VDD	NC		205	RDY	Pull-down	4.7 k Ω
176	VSS	GND		206	TXD		
177	AD7			207	VDDQ	3.3 V	
178	AD6			208	VSSQ	GND	
179	AD5			209	VDD	NC	
180	AD4			210	VSS	GND	
181	AD3			211	MD2/RXD2	Pull-up	47 k Ω
182	AD2			212	RXD	Pull-up	47 k Ω
183	VDDQ	3.3 V		213	TCLK	Pull-up	47 k Ω
184	VSSQ	GND		214	MD8/RTS2	Pull-up	47 k Ω
185	AD1			215	SCK	Pull-up	47 k Ω
186	AD0			216	MD1/TXD2	Pull-up	47 k Ω
187	IRL0	Pull-up	47 k Ω	217	MD0/SCK2	Pull-up	47 k Ω
188	IRL1	Pull-up	47 k Ω	218	MD7/CTS2	Pull-up	47 k Ω
189	IRL2	Pull-up	47 k Ω	219	AUDSYNC	NC	
190	IRL3	Pull-up	47 k Ω	220	AUDCK	NC	
191	VSSQ	GND		221	VDDQ	3.3 V	
192	VDDQ	3.3 V		222	VSSQ	GND	
193	XTAL2	NC		223	AUDATA0	NC	
194	EXTAL2	NC		224	AUDATA1	NC	
195	VDD-RTC	3.3 V		225	VDD	NC	
196	VSS-RTC	GND		226	VSS	GND	
197	CA	Pull-up	47 k Ω	227	AUDATA2	NC	
198	RESET	Pull-up	47 k Ω	228	AUDATA3	NC	
199	TRST	NC		229	Reserved	NC	
200	MRESET	Pull-up	47 k Ω	230	MD3/CE2A	Pull-up	47 k Ω

Table 7.1 Pin Assignment and Handling of User System Interface (cont)

No.	Signal Name	Handling	Notes	No.	Signal Name	Handling	Notes
231	MD4/CE2B	Pull-up	47 k Ω	244	DREQ1	Pull-up	47 k Ω
232	MD5	Pull-up	47 k Ω	245	ASEBRK/BRKACK	NC	
233	VDDQ	3.3 V		246	TDO	NC	
234	VSSQ	GND		247	VDDQ	3.3 V	
235	DACK0			248	VSSQ	GND	
236	DACK1			249	VDD-PLL2	NC	
237	DRAK0			250	VSS-PLL2	U-GND	
238	DRAK1			251	VDD-PLL1	NC	
239	VDD	NC		252	VSS-PLL1	GND	
240	VSS	GND		253	VDD-CPG	3.3 V	
241	STATUS0	Pull-up	47 k Ω	254	VSS-CPG	GND	
242	STATUS1	Pull-up	47 k Ω	255	XTAL	NC	
243	DREQ0	Pull-up	47 k Ω	256	EXTAL	Pull-up	47 k Ω

CAUTION

When power is supplied through the user system interface (YQPACK), only 3.3-V power should be supplied from the user system, and the emulation memory board generates 1.5-V power from the 3.3-V power. Therefore, the VDD pin (1.5 V) of the user system interface (YQPACK) is not connected to the MCU on the emulation memory board.

Handling:

- Pull-up: The pin is pulled up to 3.3 V through a 47-k Ω resistor on the board.
- Pull-down: The pin is pulled down to GND through a 4.7-k Ω resistor on the board.
- 3.3 V: 3.3 V is supplied from the user system (when sliding the switch to USER).
- U-GND: The pin is connected to user system GND (to check whether or not the user system is connected).
- GND: The pin is connected to GND on the board.
- NC: The MCU pin is not connected to the user system interface connector.
- Blank: The MCU pin is directly connected to the user system interface connector.

7.2 Signal Line Handling on the Emulation Memory Board and User System

The emulation memory board is connected to the user system through the user system interface connector (YQPACK) and the IC socket (NQPACK). Figure 7.1 shows the signal line handling on the emulation memory board and the user system.

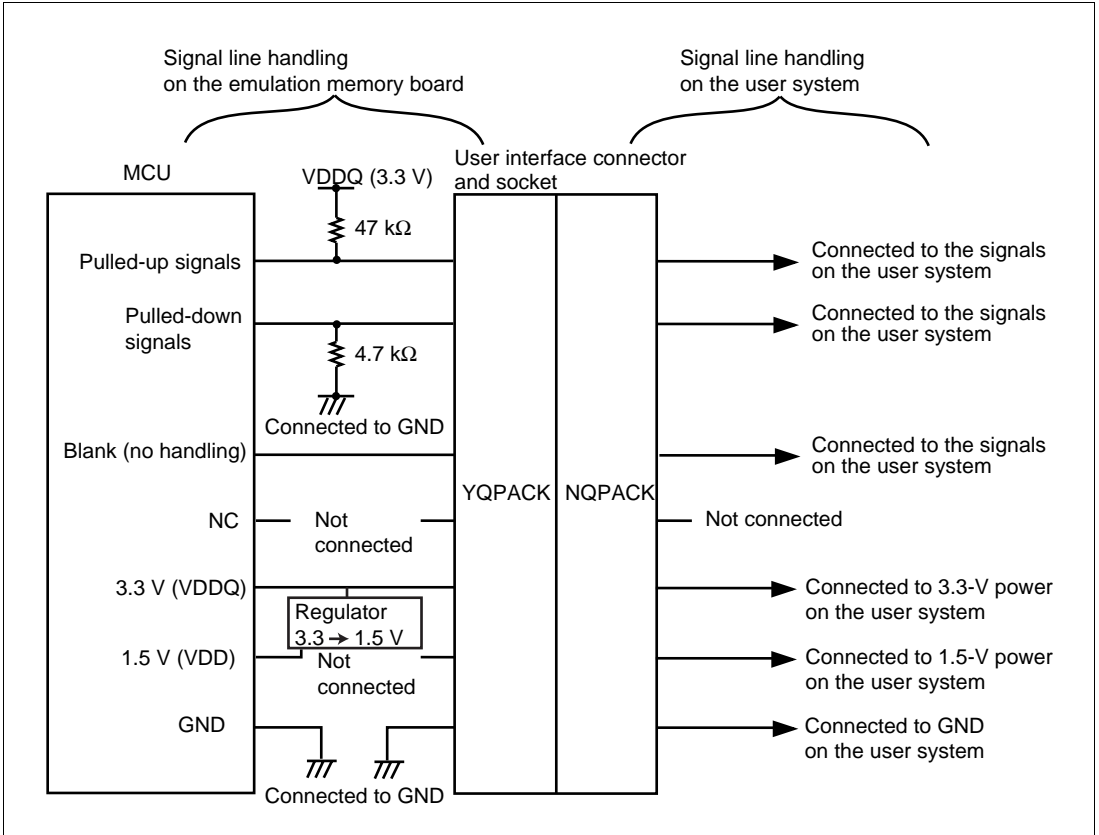


Figure 7.1 Signal Line Handling on the Emulation Memory Board and User System

Section 8 Emulation Memory Board Block Diagram

The emulation memory board has an MCU, a user system interface connector, emulator connectors, and memory. Figure 8.1 shows the block diagram of the emulation memory board.

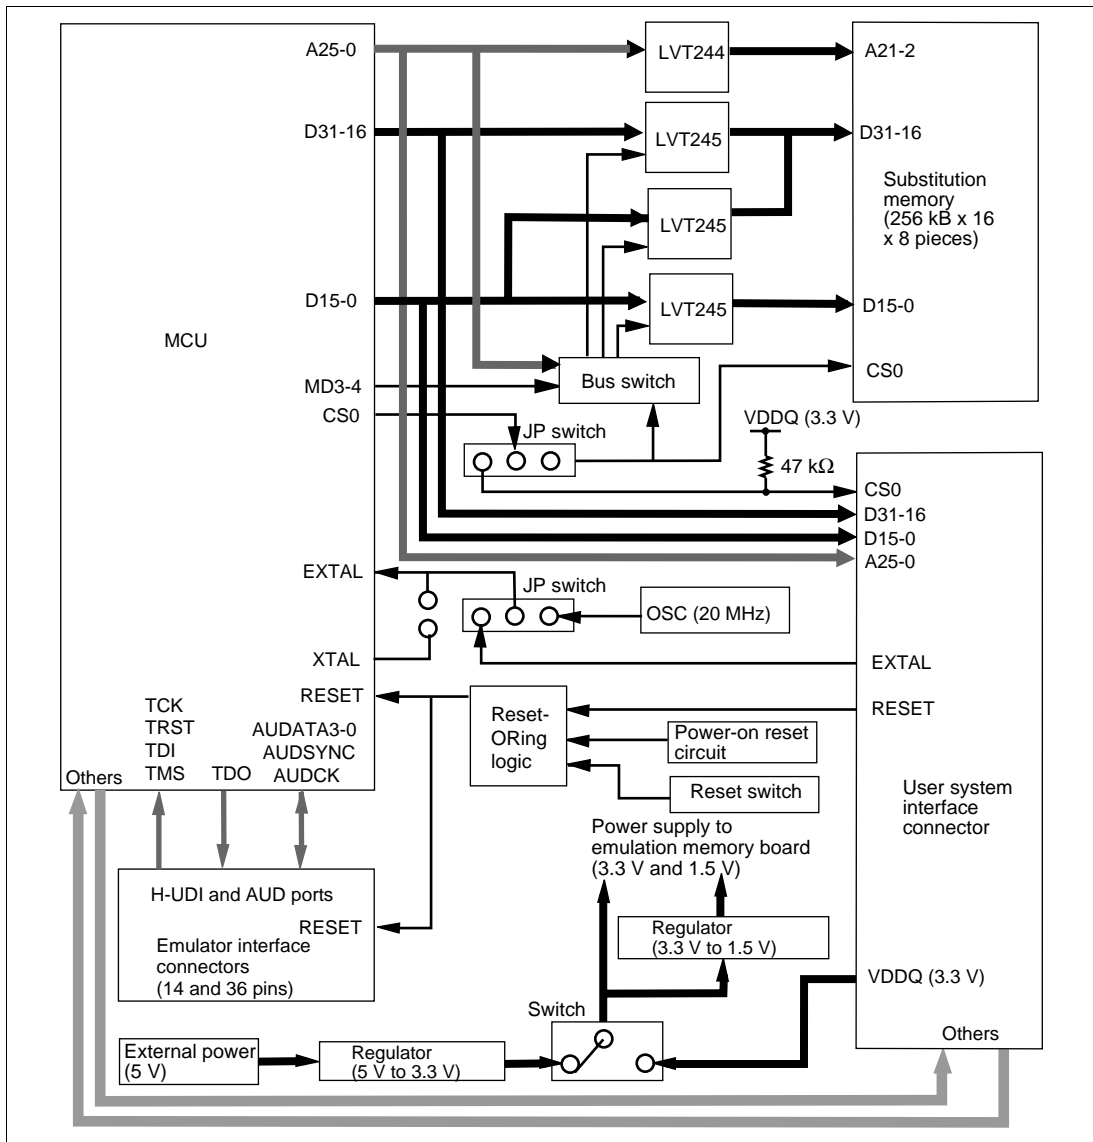


Figure 8.1 Emulation Memory Board Block Diagram

Section 9 Using the Emulator in a Case

Package the emulator and the emulation memory board in a case as shown below. The recommended material of the case to prevent EMI noise is iron plated with nickel or resin plated with nickel inside. The case must have enough size to hold the emulation memory board and the user system.

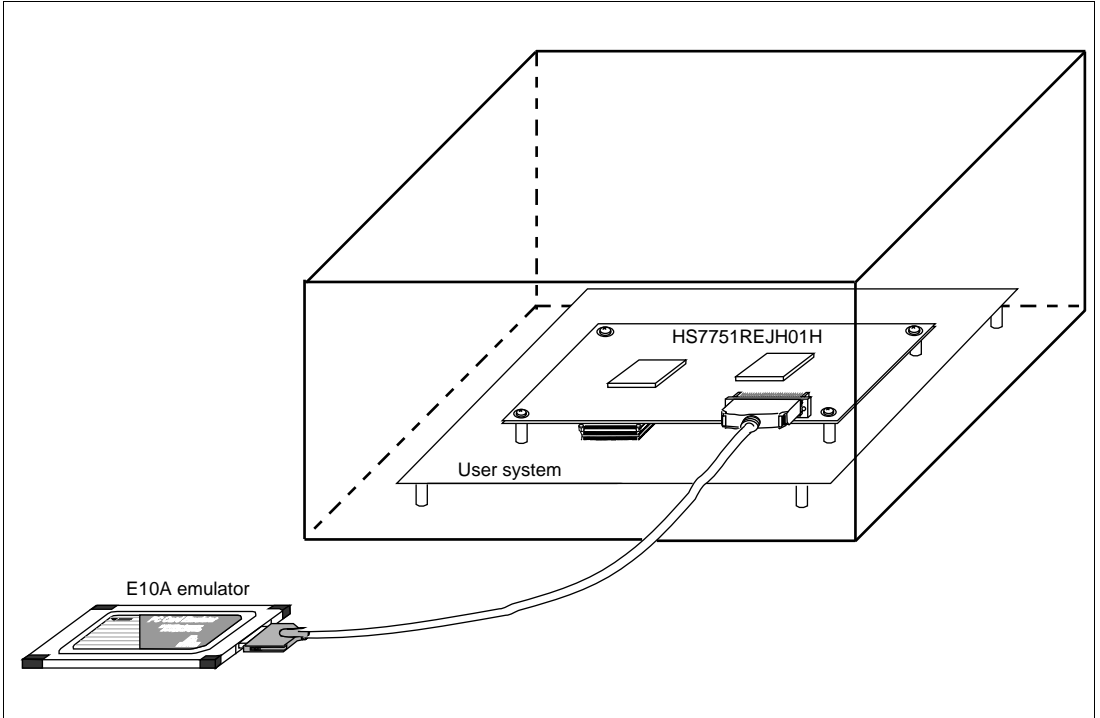


Figure 9.1 Configuration for Countermeasure against EMI Noise

Note: EMI stands for Electrical Magnetic Interference.

