

HARDWARE RING TRIP FUNCTION

**INTRODUCTION**

In the telephone subscriber line card design, how fast the ringing signal can be stopped at the moment of off-hook is very critical, because in off-hook state, high voltage ringing signals could damage telephone sets. IDT821068 can be programmed to associate a SLIC output pin to a SLIC input pin. When an off-hook signal is captured by the SLIC input pin, the associated SLIC output pin will change its status immediately even the corresponding register has not yet been set by the MCU. This associated

SLIC output pin can be used to control a relay to turn off the ringing signal, and this is called Hardware Ring Trip\*.

**CONFIGURE REGISTERS**

The Global Command 15 is used to enable the hardware ring trip circuit, select the SLIC input pin to capture the off-hook signal and choose the associated SLIC output pin to stop the ringing signal.

**SLIC Ring Trip Setting (Global Command 15)**

	b7	b6	b5	b4	b3	b2	b1	b0
Command	R/W	0	1	0	1	1	1	0
I/O data	OPI	Reserved	IPI	IS	RTE	OS[2]	OS[1]	OS[0]

**OPI: Output Polarity Indicator**

This bit should be set according to the ringing control method. If a level change from high to low on the associated SLIC output pin activates the ringing, this bit should be set to "0" (default). If a level change from low to high activates the ringing, this bit should be set to "1".

off-hook signal. If S11 is selected, this bit should be set to "0" (default). If S12 is selected, this bit should be set to "1".

**IPI: Input Polarity Indicator**

This bit should be set according to the arrangement of the active level of the selected SLIC input pin. If a low level on the selected SLIC input pin represents the capture of an off-hook signal, this bit should be set to "0" (default). If a high level on the selected SLIC input pin represents the capture of an off-hook signal, this bit should be set to "1".

**RTE: Ring Trip Enable**

Setting this bit to "1" will enable the hardware ring trip function. The default status of this bit is "0", which means the hardware ring trip function is disabled.

**IS: Input Select**

This bit determines which SLIC input pin will be used to capture the

**OS[2:0]: Output Selection**

These three bits select one of the SLIC output pins to control the ringing relay, as shown in the following table.

If SB1 pin or SB2 pin is selected to control the ringing relay, the Global Command 13 or Global Command 14 must be used first to set the SB1 or SB2 as output pins. These two commands globally affect all eight channels.

OS[2]	OS[1]	OS[0]	Selected Output Pin
0	1	1	SB1
1	0	0	SB2
1	0	1	SO1
1	1	0	SO2
1	1	1	SO3
Others			Reserved

\*This description is also applicable for IDT821054/821064 CODEC's. Please refer to their Data Sheets for the corresponding registers.

## PROGRAMMING CONSIDERATIONS

The Local Command 9 is used to change the status of the SLIC output pins.

### Local Command 9

	b7	b6	b5	b4	b3	b2	b1	b0
Command	$\bar{R}/W$	0	0	0	1	0	1	0
I/O data	Reserved	SO3	SO2	SO1	SI1	SI2	SB1	SB2

When the Global Command 15 is used to enable the hardware ring trip function, the associated SLIC output pin will change its status as soon as the selected SLIC input pin captures an off-hook signal. At this moment, the internal register will not be changed automatically to reflect the real status of the associated SLIC output pin. So, Local Command 9 should be used to change the internal register to make it coincident with the real status of the associated SLIC output pin.

If SB1 or SB2 is selected as the associated SLIC output pin, Global Command 11 or Global Command 12 should be used to change the internal register to reflect the real status of the associated SLIC output pin. Because Local Command 9 can not be used as a write command to change the status of SB1 or SB2.

## IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01)

### Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

### Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

### Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit [www.renesas.com/contact-us/](http://www.renesas.com/contact-us/).