

CS+ V3.02.00

Integrated Development Environment

User's Manual: Message

Target Device

RL78 Family

RX Family

RH850 Family

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.

Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

How to Use This Manual

This manual describes the role of the CS+ integrated development environment for developing applications and systems for RH850 family, RX family, RL78 family, and provides an outline of its features.

CS+ is an integrated development environment (IDE) for RH850 family, RX family, RL78 family, integrating the necessary tools for the development phase of software (e.g. design, implementation, and debugging) into a single platform.

By providing an integrated environment, it is possible to perform all development using just this product, without the need to use many different tools separately.

Readers	This manual is intended for users who wish to understand the functions of the CS+ and design software and hardware application systems.
Purpose	This manual is intended to give users an understanding of the functions of the CS+ to use for reference in developing the hardware or software of systems using these devices.
Organization	This manual can be broadly divided into the following units. 1.GENERAL 2.MESSAGE FORMATS 3.MESSAGE TYPES 4.COMPONENT NUMBERS 5.MESSAGES
How to Read This Manual	It is assumed that the readers of this manual have general knowledge of electricity, logic circuits, and microcontrollers.
Conventions	Data significance: <u>Higher</u> digits on the left and lower digits on the right Active low representation: XXX (overscore over pin or signal name) Note: Footnote for item marked with Note in the text Caution: Information requiring particular attention Remarks: Supplementary information Numeric representation: Decimal ... XXXX Hexadecimal ... 0xXXXX

TABLE OF CONTENTS

1.	GENERAL	5
2.	MESSAGE FORMATS	6
3.	MESSAGE TYPES.....	7
4.	COMPONENT NUMBERS.....	8
5.	MESSAGES	9
5.1	Internal Errors	10
5.2	Fatal Errors	12
5.3	Information.....	111
5.4	Choices	121
5.5	Warnings	139
	Revision Record	162

1. GENERAL

This document describes internal error message, fatal error message, information message, choice message and warning message that CS+ outputs.

The message is output to Output panel or Message dialog box, etc..

2. MESSAGE FORMATS

This chapter describes the output formats of messages.

The output format when CS+ is operated is as follows.

- (1) When the file name and line number are included

```
file-name (line-number) : message-type component-number message-number : message
```

- (2) When the file name and line number aren't included

```
message-type component-number message-number : message
```

Remark Following contents are output as the continued character string.

MESSAGE TYPES	:	1 alphabetic character
COMPONENT NUMBERS	:	2 digits
MESSAGE NUMBERS	:	5 digits

3. MESSAGE TYPES

This chapter describes the message types displayed by CS+.

The message types (1 alphabetic character) when CS+ is operated are as follows.

Table 3.1 Message Type

Message Type		Description
C	Internal error	Processing terminated (suspended) due to internal error.
E	Fatal error	Processing terminated (suspended) due to fatal error.
M	Information	Informational message. Check the message and continue the process.
Q	Choice	This type of message is displayed when a choice is necessary in order to carry on with the next operation. It performs the selected action.
W	Warning	Warning message. Check the message and continue the process.

4. COMPONENT NUMBERS

This chapter describes the component number displayed by CS+.

The component number (2 digits) categories when CS+ is operated are as follows.

Table 4.1 Component Number

Component Number	Description
00	Common processing
01	Update Manager/Installer/License Manager
02	Integrated Development Environment Framework
03	Design Tool (Pin Configurator)
04	Design Tool (Code Generator)
06	Debug Tool (Emulator/Simulator)
08	Analyze Tool
12	Debug Tool (Emulator/Simulator)
13	Debug Tool (Simulator)
17	Console
18	Debug Tool
20	Editor
22	I/O header file Generation Tool

5. MESSAGES

This chapter describes the messages displayed by CS+.

5.1 Internal Errors

Table 5.1 Internal Errors

C0100001	[Message]	xxx is empty.
C0100002	[Message]	xxx is too large.
C0100003	[Message]	Unexpected xxx is specified.
C0149999	[Message]	Internal Error : Exceeds check_folder limit (1024).
	[Explanation]	This appears when the limit value (1024) of target on a start process check was exceeded.
	[Message]	Internal Error : VIA_ENV_SETUP is not correct.
	[Explanation]	This appears when the installer for installing a required environment calls the integrated installer, and an integration installer couldn't be started right.
C0190000	[Message]	Specified device is invalid.
C0190001	[Message]	xxx is empty.
C0190002	[Message]	xxx is too large.
C0190003	[Message]	xxx is too small.
C0600000	[Message]	Internal error.
C0600001	[Message]	Illegal argument. (xxx=yyy)
C0600002	[Message]	Illegal argument. (xxx=nullptr)
C0600003	[Message]	It has already registered.
C0600004	[Message]	It is not registered.
C0602000	[Message]	Already connected.
C0602001	[Message]	Already disconnected.
C0602002	[Message]	A device file is non-setting.
C0602003	[Message]	Unhandled exception occurred.
C0602100	[Message]	Please check connection with the target board.
C0602101	[Message]	Please check connection with the target board, and power on it.
C0602103	[Message]	Please disconnect the target board.
C0602104	[Message]	Please power off the target board, and disconnect it.
C0602200	[Message]	Incorrect ID Code. Flash memory was erased.
C0602201	[Message]	Disabled ID Code. Flash memory was erased.
C0602202	[Message]	Incorrect ID Code.
	[Explanation]	This message appears when the security ID written in flash memory does not match the security ID specified by the debug tool.
	[Action by User]	Check if the security ID (ID code) setting of flash memory matches that of the debug tool.
C1700000	[Message]	Failed to execute the callback event (ID = xxx).
	[Action by User]	Restart CS+.

C1700001	[Message]	Failed to execute the hook event (ID = xxx).
	[Action by User]	Restart CS+.
C1700002	[Message]	Failed to execute the code
	[Action by User]	Restart CS+.
C1700003	[Message]	Failed to execute the script file.
	[Action by User]	Restart CS+.
C1700004	[Message]	Failed to display the string. [direct error]
	[Action by User]	Restart CS+.
C1710000	[Message]	The specified name is illegal.
	[Action by User]	Restart CS+. If this does not resolve the problem, reinstall CS+.
C1710001	[Message]	The specified name is already used.
	[Action by User]	Restart CS+. If this does not resolve the problem, reinstall CS+.
C1710002	[Message]	Failed to read the necessary DLL.
	[Action by User]	Restart CS+. If this does not resolve the problem, reinstall CS+.
C1710003	[Message]	Cannot find the specified name.
	[Action by User]	Restart CS+. If this does not resolve the problem, reinstall CS+.
C1710004	[Message]	Specified GUID is illegal.
	[Explanation]	This appears when the GUID for access is illegal.
	[Action by User]	Specify a correct GUID.
C1720000	[Message]	Specified GUID is illegal.
	[Explanation]	This appears when access to a Bip execution instance fails.
C1720001	[Message]	Specified name is illegal.
	[Explanation]	This appears when access to a Bip execution instance fails.
C1720100	[Message]	Specified GUID is illegal.
	[Explanation]	This appears when access to a Pip execution instance fails.
C1720101	[Message]	Specified name is illegal.
	[Explanation]	This appears when access to a Pip execution instance fails.
C1813701	[Message]	Internal error (FFWERR_BEXE_LEVEL0).
C1813702	[Message]	Internal error (FFWERR_EML_ENDCODE).
C1813703	[Message]	Internal error (FFWERR_FDT_ENDCODE).
C1813704	[Message]	Internal error (FFWERR_EML_TO_FDT).
C1813705	[Message]	Internal error (FFWERR_FDT_TO_EML).
C1813706	[Message]	Internal error (FFWERR_MONP_ILLEGALEML).

5.2 Fatal Errors

Table 5.2 Fatal Errors

E0020001	[Message]	Cannot find product list file 'xxxx'.
E0020002	[Message]	Not Support this device 'xxxx'.
E0020003	[Message]	Cannot read file.
E0021001	[Message]	Cannot find product file 'xxxx'.
E0021002	[Message]	Not Support this device 'xxxx'.
E0021003	[Message]	Cannot read file.
E0021004	[Message]	Failed update of Device dependent information.
E0022001	[Message]	Not Support this device 'xxxx'.
E0022002	[Message]	Cannot find terminal information file 'xxxx'.
E0022003	[Message]	Cannot read file.
E0023001	[Message]	Not Support this device 'xxxx'.
E0023002	[Message]	Cannot find device file 'xxxx'.
E0023003	[Message]	Cannot find device extended information file 'xxxx'.
E0023004	[Message]	Cannot read file.
E0023005	[Message]	xxxx isn't a device file.
E0023006	[Message]	V850 microcontroller is not supported.
E0023007	[Message]	78K microcontroller is not supported.
E0023008	[Message]	78K0/78K0S and V850 microcontroller are not supported.
E0023009	[Message]	RL78 Family,78K0R microcontroller is not supported.
E0023010	[Message]	RL78 Family,78K0R and V850 microcontroller are not supported.
E0023011	[Message]	Cannot find CategoryName 'xxxx'.
E0023012	[Message]	V850E2 microcontroller is not supported.
E0023013	[Message]	78K0/78K0S microcontroller is not supported.
E0023014	[Message]	78K0 microcontroller is not supported.
E0023015	[Message]	Duplicate Device dependent information files exist. Delete from Device_custom folder. Please delete Device dependent information file from Device_custom folder: <i>aaaa bbbb</i> (Please delete both Device dependent information file and list file in the Device_Custom folder.)
E0023017	[Message]	RX microcontroller is not supported.
E0023018	[Message]	RH850 microcontroller is not supported.
E0024001	[Message]	Not Support this device 'xxxx'.
E0024002	[Message]	Cannot find device extended file 'xxxx'.
E0024003	[Message]	Cannot read file.
E0025001	[Message]	Not Support this device 'xxxx'.

E0025002	[Message]	Cannot find device file 'xxxx'.
E0025003	[Message]	Cannot find terminal information file 'xxxx'.
E0025004	[Message]	Cannot find device extended file 'xxxx'.
E0025005	[Message]	Cannot read file.
E0100000	[Message]	Failed to start the CS+ update manager. Please install CS+ again.
E0100003	[Message]	Failed to start "xxx". Failed to read "yyy".
	[Action by User]	Reinstall CS+. If this does not resolve the problem, reinstall after deleting all files in the folder containing file noted in the message.
E0100004	[Message]	Failed to write "xxx".
	[Action by User]	Reinstall CS+. If this does not resolve the problem, reinstall after deleting all files in the folder containing file noted in the message.
E0100005	[Message]	Failed to start "xxx".
	[Action by User]	If it occurred in the installer, perform the update again. If it occurred in an installed tool, reinstall it.
E0100006	[Message]	Failed to restart "xxx".
	[Action by User]	Start manually
E0100007	[Message]	The CS+ update manager is not installed.
	[Action by User]	Install CS+ update manager.
E0100008	[Message]	Can not start this CS+ update manager because it is moved from its installed folder.
	[Action by User]	Start up the CS+ update manager from the [Start] menu.
E0100009	[Message]	Failed to read "xxx"
	[Action by User]	Reinstall CS+. If this does not resolve the problem, reinstall after deleting all files in the folder containing file noted in the message.
E0100010	[Message]	Failed to start "xxx". Failed to write "yyy".
	[Action by User]	Reinstall CS+. If this does not resolve the problem, reinstall after deleting all files in the folder containing file noted in the message.
E0100014	[Message]	Failed to write temporary file.
	[Explanation]	This appears when the user specified the pass which can't write a file in environment variable TEMP, or when more than 65,535 temporary files exist in the folder.
	[Action by User]	Make sure that it is possible to write files in the folder specified by the environment variable TMP.
E0100019	[Message]	Failed to read temporary file.
	[Explanation]	Temporary files created by the Update Manager may have been deleted or otherwise manipulated by other than the Update Manager.

E0110004	[Message]	Failed to get update information. The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0110010	[Message]	Failed to read install information. Can not get the version of "xxx" for the following reason. yyy
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0110011	[Message]	Failed to read update condition. The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0110012	[Message]	Failed to read update condition. The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0110013	[Message]	Failed to read update condition. The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0111000	[Message]	Failed to read download source. The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0111001	[Message]	An internal error occurred in Update Manager. Failed to write downloaded file.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0111002	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.

E0111003	[Message]	Download source is invalid. The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0111004	[Message]	Failed to write downloaded file. The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0111005	[Message]	Failed to write downloaded file. Aborting the download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0111006	[Message]	Failed to write downloaded file. The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0111007	[Message]	Failed to write downloaded file "xxx". Aborting the download.
	[Action by User]	Make sure that it is possible to write files in the path specified in the message. If you cannot identify the cause, please contact your vendor or your Renesas Electronics overseas representative.
E0111008	[Message]	Failed to write downloaded file "xxx". Aborting the download.
	[Action by User]	Make sure that it is possible to write files in the path specified in the message. If you cannot identify the cause, please contact your vendor or your Renesas Electronics overseas representative.
E0111009	[Message]	The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0111010	[Message]	The response from the server was not correct. Please check for updates after a while.
	[Explanation]	This appears when there is an error in the update information on the server.
	[Action by User]	Please check for updates after a while. If this error persists, please contact your vendor or your Renesas Electronics overseas representative.

E0111011	[Message]	Failed to resume download. Please retry the operation.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0111012	[Message]	Failed to write downloaded file "xxx". Aborting the download.
	[Action by User]	Check the free space of the disk. When being no problem, make sure that it is possible to write files in the path specified in the message. If you cannot identify the cause, please contact your vendor or your Renesas Electronics overseas representative.
E0111013	[Message]	Failed to write downloaded file "xxx". Please retry the operation.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0111100	[Message]	Failed to write internal data. Aborting the download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0111101	[Message]	Failed to write internal data because saving destination is not found. Aborting the download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0111102	[Message]	Failed to write internal data. Aborting the download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0111103	[Message]	Failed to write internal data because denied to write. Aborting the download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0111104	[Message]	I/O error occurred while downloading a file.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0112000	[Message]	The server returned an error (xxx). Please retry the operation after a while.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0112200	[Message]	The server returned an error. Please retry the operation after a while.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0112300	[Message]	The server returned invalid response. Please retry the operation after a while.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0112406	[Message]	Failed to authenticate with proxy server at xxx.
	[Action by User]	Enter your user name and password in the Proxy Authentication dialog box. If you are unclear about anything, please contact your network administrator.

E0112503	[Message]	The server is temporary unavailable. Please retry the operation after a while.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0112996	[Message]	Failed to authenticate with proxy server.
	[Action by User]	Enter your user name and password in the Proxy Authentication dialog box. If you are unclear about anything, please contact your network administrator.
E0112997	[Message]	Failed to authenticate with proxy server at xxx. Failed to recognize authentication scheme (yyy) that the server requires.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0112998	[Message]	A connection with the server could not be established.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0112999	[Message]	The server returned an error. Please retry the operation after a while.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0113000	[Message]	A connection with the server could not be established. Cannot find server or DNS error.
	[Action by User]	Make sure that you can display Internet sites in Internet Explorer. Contact your network administrator if you cannot. If you can display Internet sites, there is probably a temporary issue with the server. Please try again after waiting for a while.
E0113001	[Message]	A connection with the server could not be established.
	[Action by User]	Make sure that you can display secure Internet sites (starting with "https://") in Internet Explorer. Contact your network administrator if you cannot. If you can display Internet sites, there is probably a temporary issue with the server. Please try again after waiting for a while.
E0113002	[Message]	A complete response was not received from the server. The server may have a problem. Please retry the operation after a while.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0113003	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0113004	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0113005	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.

E0113006	[Message]	A connection with the server is untrusted. A server certificate for secure connection could not be validated. Please retry the operation after a while.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0113007	[Message]	A secure connection with the server could not be established. Please retry the operation after a while.
	[Action by User]	Make sure that you can display secure Internet sites (starting with "https://") in Internet Explorer. Contact your network administrator if you cannot. If you can display Internet sites, there is probably a temporary issue with the server. Please try again after waiting for a while.
E0113008	[Message]	The server response was not a valid. Please retry the operation after a while.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0113009	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0113010	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0113011	[Message]	A connection with the proxy server could not be established. Cannot find server or DNS error.
	[Action by User]	Make sure that you can display ordinary and secure Internet sites (sites starting with "https://") in Internet Explorer. Contact your network administrator if you cannot.
E0113012	[Message]	The server response was not a valid. Please retry the operation after a while.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0113013	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0113014	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0113015	[Message]	A connection with the proxy server was denied. Please contact your network administrator.
	[Action by User]	Make sure that you can display ordinary and secure Internet sites (sites starting with "https://") in Internet Explorer. Contact your network administrator if you cannot.
E0113098	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.

E0113099	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0114000	[Message]	A connection with the server has timed out.
	[Action by User]	Make sure that you can display ordinary and secure Internet sites (sites starting with "https://") in Internet Explorer. Contact your network administrator if you cannot. If you can, the site may be blocked by a personal firewall or other security software. Allow the Update Manager to conduct http and https communication. The following executable file must be allowed. <Installation location>\CS+\UpdateManager.exe
E0115000	[Message]	Download was canceled.
E0115001	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0119999	[Message]	An internal error occurred in Update Manager. Failed to download.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E0120001	[Message]	Failed to download. xxx
E0120002	[Message]	Download was aborted.
E0120003	[Message]	Because downloading related updates are failed, installation was aborted.
E0120004	[Message]	Installation was aborted.
E0120005	[Message]	Install failure. (Error code:xxx)
E0120006	[Message]	Another program is running an update. Please run the update after the current update is completed.
E0120007	[Message]	Failed to acquire administrative privileges.
	[Action by User]	If you specified a user who is not an administrator, perform the action again.
E0120008	[Message]	Because installing related updates are failed, installation was aborted.
E0120009	[Message]	Can not find the installer.
	[Action by User]	Perform the update again.
E0120010	[Message]	Downloaded file was broken. Please retry the operation.
	[Action by User]	If this error persists, please contact your vendor or your Renesas Electronics overseas representative.
E0120011	[Message]	Installer is untrusted. Digital signature could not be validated. Root certificate store in Windows may be old.
E0130000	[Message]	Please select the object to copy.
E0130001	[Message]	Please select the object to delete.
E0130002	[Message]	Please select the object to restore.
E0130003	[Message]	Failed to delete "xxx".

E0140001	[Message]	This product is not guaranteed on the Windows xxx operating system. Cannot install this product. Canceling installation.
	[Explanation]	This appears when starting the integrated installer on a non-guaranteed version of Windows.
E0140002	[Message]	Cannot write installation information because user rights are not set to the appropriate level. Administrator rights are required to install this product. Canceling installation.
	[Explanation]	This appears when started by a user without administrator privileges.
E0140003	[Message]	.NET Framework 4 is not installed. .NET Framework 4 is required to install this product. Canceling installation.
	[Explanation]	This appears when the integrated installer is started on a host machine without the .NET Framework 4 installed.
E0140005	[Message]	Cannot access file (xxx). A file needed to install this product may be missing or damaged. Canceling installation.
	[Explanation]	This appears when there are missing components or the information file is corrupt.
E0140008	[Message]	A file necessary for installing this product was not able to be read and/or write. Canceling installation.
	[Explanation]	This appears when the Renesas Electronics sales offices information files could not be copied to the host machine.
E0140009	[Message]	Cannot copy the file (xxx) required for installation of this product. A file with the same name already exists at the copy destination. Canceling installation.
	[Explanation]	This appears when the Renesas Electronics sales offices information files could not be copied to the host machine.
E0140010	[Message]	Cannot obtain information required for installation. xxx
	[Explanation]	This appears when the information required for installation is not set. The file may be damaged.
E0140012	[Message]	Cannot access the license agreement file. A file needed to install this product may be missing or damaged. Canceling installation.
E0140013	[Message]	Cannot display the license agreement file. The file may be damaged. Canceling installation.
E0140014	[Message]	Cannot obtain information about the destination folder of the previous installation. Canceling installation.
	[Explanation]	This appears when there is a file with information about the installation folder from the last install, but the information could not be read.
E0140015	[Message]	The specified installation destination drive does not exist, or is on a network. Please specify a local disk drive.
	[Explanation]	This appears when the installation folder contains specifies a non-existent drive, or invalid characters or a drive that is not a local disc.

E0140016	[Message]	Invalid installation folder.
	[Explanation]	This appears when the character that cannot be used as a folder is specified for the folder at the installation destination.
E0140017	[Message]	Not enough free disk space. Please make enough free space on the installation destination.
	[Explanation]	This appears when there is not enough free disc space.
E0140019	[Message]	Installation failed. Please reboot your computer.
	[Explanation]	This appears when some tools failed to install, but the installation was successful, and the system must therefore be restarted.
E0140020	[Message]	Installation failed. The installation was aborted before finish. Please reboot your computer.
	[Explanation]	This appears when the installation was aborted, and some of the tools from the completed portion (before cancellation) failed to install, but the installation was successful, and the system must therefore be restarted.
E0140021	[Message]	Some installations have failed. The installations of the specified tools are not completed.
	[Explanation]	This appears when there has been a failed installation.
E0140023	[Message]	Installation failed. The installation was aborted before finish.
	[Explanation]	This appears when the installation was aborted, and the installation of the completed portion (before cancelling) failed.
E0140024	[Message]	Could not create a directory necessary for installing this product. Installation aborted.
	[Explanation]	This appears when the folder in which to allocate the linking information for other tools could not be created.
E0140026	[Message]	Could not start xxx.
	[Explanation]	This appears when The "Launch Update Manager." check box in the Setup completion Window is checked, and Update Manager failed to start. Or this appears when you click [Next] in the installation window when installing a required environment, and the integrated installer fails to launch.
E0140027	[Message]	The system may not be properly configured for installation. Canceling installation.
	[Explanation]	This appears when the registry could not be referenced while checking for installed tools.
E0140028	[Message]	"CS+ Utilities" is already installed. Please remove "CS+ Utilities" Programs and Features dialog box. Canceling installation.
	[Explanation]	The integrated installer has detected that only "CS+ Utilities" are installed as CS+-related tools. All CS+-related tools need to be uninstalled in advance if you wish to change the installation folder. Delete "CS+ Utilities" before starting the installation process.
	[Action by User]	Uninstall "CS+ Utilities" before starting up the integrated installer.

E0140030	[Message]	Cannot open the install information file (xxx). Canceling installation.
	[Explanation]	This error appears if the "preparing installation" window could not be displayed when running the self-extracting file for the free tools.
E0140034	[Message]	A file necessary for uninstalling this product was not able to be read and/or write. Canceling uninstallation.
	[Explanation]	This appears when the integrated uninstaller was not able to obtain the information necessary to uninstall the CS+ Utilities.
	[Action by User]	To uninstall all CS+ products, manually remove "CS+ Utilities" using the Windows uninstallation functionality.
E0140036	[Message]	Cannot obtain information required for installation. Canceling installation.
	[Explanation]	This appears when the installer is unable to get the required information from the OS, and determines that it is not appropriate to continue with the installation.
E0140038	[Message]	The following product failed in installation. - xxx Stop the installation.
	[Explanation]	This appears when the installation of a required environment fails.
E0140039	[Message]	The following product failed in installation. - xxx The following products are required to reboot Windows to complete the installation. Please reboot your computer. - xxx : Please install the latest service packs and security updates for this product using Windows Update and Microsoft Update. Stop the installation.
	[Explanation]	This appears when the installation of a required environment fails, but when it's necessary to be a restart by the installation which succeeded.
E0140040	[Message]	The following product failed in installation. - xxx The following product succeeded in installation. - xxx : Please install the latest service packs and security updates for this product using Windows Update and Microsoft Update. Stop the installation.
	[Explanation]	This appears when the installation of a required environment fails, but when installation besides that succeeded.

E0140041	[Message]	<p>The following product failed in installation. - xxx</p> <p>The following products are required to reboot Windows to complete the installation. Please reboot your computer. - xxx</p> <p>The following product succeeded in installation. - xxx</p> <p>Please install the latest service packs and security updates for this product using Windows Update and Microsoft Update.</p> <p>Stop the installation.</p>
	[Explanation]	This appears when the installation of a required environment fails, but when it's necessary to be a restart by the installation which succeeded.
E0180000	[Message]	This license key is invalid.
E0180001	[Message]	"xxxxxx" This license key is already registered.
E0182000	[Message]	Could not write the license information to "xxx".
E0190000	[Message]	Failed to start License Manager.
	[Action by User]	Please reinstall the CS+.
E0190001	[Message]	Failed to start License Manager. Can not find the folder to store the license information.
	[Action by User]	Please reinstall the CS+.
E0200001	[Message]	A critical error occurred.
	[Explanation]	Appears when a fatal error has occurred.
	[Action by User]	Please update this product. Please install runtime components of Visual C++ 2010 x86 SP1 Libraries. Please contact your vendor or your Renesas Electronics overseas representative.
E0200002	[Message]	Launching program <i>program-name</i> failed.
	[Explanation]	This appears when the IDE fails to launch a Windows program.
	[Action by User]	Check that the program exists and the name you have specified was that of an executable application.
E0200003	[Message]	Could not open a file with Explorer.
	[Explanation]	This error occurs when the open action fails for some reason.
	[Action by User]	Check the path to Explorer.
E0200004	[Message]	Could not open a file with the specified application.
	[Explanation]	This appears when an application file specified in the project tree could not be opened.
	[Action by User]	Make sure that an executable application was specified.
E0200005	[Message]	Clipboard setting failed.
	[Explanation]	This error occurs when data could not be set in the clipboard.
	[Action by User]	There may not be enough memory.

E0200006	[Message]	Can not open the help.
	[Explanation]	When help is not opened, it is displayed.
	[Action by User]	Please update this product. Please contact your vendor or your Renesas Electronics overseas representative.
E0200007	[Message]	The target item cannot be moved because it is not on the same row as the destination item.
	[Explanation]	This message appears when a sub-item fails to be moved within the same hierarchy level of the tree.
E0200008	[Message]	Failed to restart this product. You may not have permission to restart.
	[Explanation]	This error occurs when failing in a restart of IDE.
	[Action by User]	Make sure you have access privileges to a restart of this product. The case when IDE was downloaded via a network, the case when you have no access privileges to an account, or etc..
E0200009	[Message]	Failed to launch this product.
	[Explanation]	Starting up the IDE has failed.
	[Action by User]	- Check that this product has been correctly installed. - Check that no project files are corrupt.
E0201001	[Message]	Renaming failed.
	[Explanation]	This error occurs when a rename fails.
	[Action by User]	Make sure you have access privileges to the file before renaming it.
E0201002	[Message]	Check whether the file or folder has been set to read-only.
	[Explanation]	This error occurs when the program fails to save project information.
	[Action by User]	Make sure that the folder or file is not read-only.
E0201003	[Message]	Could not find the file.
	[Explanation]	A file (e.g. source file) required for the build was not found.
E0201004	[Message]	Could not find the folder.
	[Explanation]	This indicates that the copy destination folder was not found when packing.
	[Action by User]	Make sure that the pack-destination folder is not read-only.
E0201005	[Message]	Folder creation failed.
	[Explanation]	This error occurs when the program fails to create a folder.
	[Action by User]	Check the access privileges to the file.
E0201006	[Message]	Reading xxx failed.
	[Explanation]	This error occurs when the program fails to load a file.
	[Action by User]	Check the access privileges to the file.
E0201007	[Message]	Writing xxx failed.
	[Explanation]	This error occurs when the program fails to write a file
	[Action by User]	Check the access privileges to the file.

E0201008	[Message]	Moving the file xxx to yyy failed.
	[Explanation]	This error occurs when the program fails to move a file.
	[Action by User]	Check the access privileges to the file.
E0201009	[Message]	Temporary file creation failed.
	[Explanation]	This message appears when a temporary file could not be created.
	[Action by User]	Check the access privileges to the file.
E0201010	[Message]	Temporary file deletion failed.
	[Explanation]	This message appears when a temporary file could not be removed.
	[Action by User]	Check the access privileges to the file.
E0201011	[Message]	Saving xxx failed.
	[Explanation]	Failed to save file.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0201012	[Message]	Copy failed.
	[Explanation]	This message appears when copy fails for some reason, such as the file already exists where it was attempted to be copied.
E0201013	[Message]	Creating the file xxx failed.
	[Explanation]	This message appears when a file could not be created.
	[Action by User]	Check the access privileges to the file.
E0201015	[Message]	Failed to apply save settings for the file xxx.
	[Explanation]	Failed to save file settings.
	[Action by User]	There could be a problem with the file contents.
E0201016	[Message]	Creating the folder xxx failed.
	[Explanation]	This message appears when a folder could not be created.
	[Action by User]	Check the access privileges to the folder.
E0202001	[Message]	New project creation failed.
	[Explanation]	This message appears when the program fails to create a project.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0202002	[Message]	Opening a project failed.
	[Explanation]	This message appears when the program fails to load a project.
	[Action by User]	Follow the instructions in the message to remedy the problem. If [Direct Error Cause] is "Cannot find product list file 'X:\...\Yyyy_ProductList.xml'.", select the check box of the microcontroller family tool that corresponds to Yyyy in the [Development Tools Selection] screen of the CS+ installer and install the tool.
E0202003	[Message]	Saving a project failed.
	[Explanation]	This message appears when the program fails to save a project.
	[Action by User]	Follow the instructions in the message to remedy the problem.

E0202004	[Message]	Packing a project failed.
	[Explanation]	This message appears when the program fails to pack a project.
	[Action by User]	Make sure that an invalid path is not specified as the pack-destination folder. Make sure that the pack-destination folder is not read-only.
E0202005	[Message]	The project file is broken.
	[Explanation]	This error occurs when the program fails to parse a file.
	[Action by User]	Specify a project file which can be handled by this product to open.
E0202006	[Message]	This is not a convertible project file.
	[Explanation]	This error occurs when attempting to open a file other than a project file that this product can handle.
	[Action by User]	Specify a project file which can be handled by this product to open.
E0202007	[Message]	The project information cannot be restored.
	[Explanation]	This error occurs when the program fails to restore or convert project information. It will also occur if the program fails to extract the structure of a project to copy.
	[Action by User]	Specify a project file which can be handled by this product to open.
E0202008	[Message]	This is not a valid project file.
	[Explanation]	This error occurs when the program fails to restore project information.
	[Action by User]	Specify a project file which can be handled by this product to open.
E0202009	[Message]	The specified item could not be removed from the project.
	[Explanation]	This error occurs when a deletion operation fails.
	[Action by User]	This item cannot be removed.
E0202010	[Message]	Subproject addition failed.
	[Explanation]	This error occurs when an add operation fails.
	[Action by User]	Make sure that the file exists and is not corrupt.
E0202011	[Message]	The project information is invalid.
	[Explanation]	This error occurs when the program fails to parse a file.
	[Action by User]	Specify a project file which can be handled by this product to open.
E0202012	[Message]	Valid project information cannot be found.
	[Explanation]	This error occurs when the program fails to restore or convert project information. It will also occur if the program fails to extract the structure of a project to copy.
	[Action by User]	Specify a project file which can be handled by this product to open.
E0202013	[Message]	The item information cannot be restored.
	[Explanation]	This error occurs when the program fails to restore or convert project information. It will also occur if the program fails to extract the structure of a project to copy.
	[Action by User]	Specify a project file which can be handled by this product to open.
E0202014	[Message]	The file information cannot be restored.
	[Explanation]	This error occurs when the program fails to restore or convert project information. It will also occur if the program fails to extract the structure of a project to copy.
	[Action by User]	Specify a project file which can be handled by this product to open.

E0202015	[Message]	The category information cannot be restored.
	[Explanation]	This error occurs when the program fails to restore or convert project information. It will also occur if the program fails to extract the structure of a project to copy.
	[Action by User]	Specify a project file which can be handled by this product to open.
E0202016	[Message]	A subproject with the same ID has already been registered.
	[Explanation]	This error occurs when attempting to add a sub-project with the same ID.
	[Action by User]	It is not possible to add sub-projects with the same ID. Create a new sub-project, copying from the sub-project file you wish to add.
E0202017	[Message]	Saving build options failed.
	[Explanation]	Failed to save build options to the project file.
	[Action by User]	Check the version of the project file.
E0202018	[Message]	Restoring build options failed.
	[Explanation]	Failed to restore build options from the project file.
	[Action by User]	Check the version of the project file.
E0202019	[Message]	Saving general options failed.
	[Explanation]	Failed to save common options to the project file.
	[Action by User]	Check the version of the project file.
E0202020	[Message]	Restoring general options failed.
	[Explanation]	Failed to restore common options from the project file.
	[Action by User]	Check the version of the project file.
E0202021	[Message]	Saving compile options failed.
	[Explanation]	Failed to save compile options to the project file.
	[Action by User]	Check the version of the project file.
E0202022	[Message]	Restoring compile options failed.
	[Explanation]	Failed to restore compile options from the project file.
	[Action by User]	Check the version of the project file.
E0202023	[Message]	Saving assemble options failed.
	[Explanation]	Failed to save assembly options to the project file.
	[Action by User]	Check the version of the project file.
E0202024	[Message]	Restoring assemble options failed.
	[Explanation]	Failed to restore assembly options from the project file.
	[Action by User]	Check the version of the project file.
E0202025	[Message]	Saving link options failed.
	[Explanation]	Failed to save link options to the project file.
	[Action by User]	Check the version of the project file.

E0202026	[Message]	Restoring link options failed.
	[Explanation]	Failed to restore link options from the project file.
	[Action by User]	Check the version of the project file.
E0202027	[Message]	Saving library options failed.
	[Explanation]	Failed to save library options to the project file.
	[Action by User]	Check the version of the project file.
E0202028	[Message]	Restoring library options failed.
	[Explanation]	Failed to restore library options from the project file.
	[Action by User]	Check the version of the project file.
E0202029	[Message]	Saving object convert options failed.
	[Explanation]	Failed to save object conversion options to the project file.
	[Action by User]	Check the version of the project file.
E0202030	[Message]	Restoring object convert options failed.
	[Explanation]	Failed to restore object conversion options from the project file.
	[Action by User]	Check the version of the project file.
E0202031	[Message]	Saving compile build setting options failed.
	[Explanation]	Failed to save compile build preference options to the project file.
	[Action by User]	Check the version of the project file.
E0202032	[Message]	Restoring compile build setting options failed.
	[Explanation]	Failed to restore compile build preference options from the project file.
	[Action by User]	Check the version of the project file.
E0202033	[Message]	Setting assemble build setting options failed.
	[Explanation]	Failed to restore assembly build preference options from the project file.
	[Action by User]	Check the version of the project file.
E0202034	[Message]	Restoring assemble build setting options failed.
	[Explanation]	Failed to restore assembly build preference options from the project file.
	[Action by User]	Check the version of the project file.
E0202035	[Message]	Saving individual compile options failed.
	[Explanation]	Failed to save individual compile options to the project file.
	[Action by User]	Check the version of the project file.
E0202036	[Message]	Restoring individual compile options failed.
	[Explanation]	Failed to restore individual compile options from the project file.
	[Action by User]	Check the version of the project file.
E0202037	[Message]	Saving individual assemble options failed.
	[Explanation]	Failed to save individual assembly options to the project file.
	[Action by User]	Check the version of the project file.

E0202038	[Message]	Restoring individual assemble options failed.
	[Explanation]	Failed to restore individual assembly options from the project file.
	[Action by User]	Check the version of the project file.
E0202039	[Message]	Project manipulation is prohibited.
	[Explanation]	This error occurs when trying to change the construction of the project when project actions are prohibited (in build).
	[Action by User]	Wait until the current process completes.
E0202040	[Message]	Project manipulation could not be enabled.
	[Explanation]	This error occurs when the program fails to remote a prohibition on project actions.
	[Action by User]	Wait until the current process completes.
E0202041	[Message]	Projects and windows cannot be closed during build.
	[Explanation]	This error occurs when failing to close a project.
	[Action by User]	Projects cannot be closed during a build.
E0202042	[Message]	Projects and windows cannot be closed during search.
	[Explanation]	This error occurs when failing to close a project.
	[Action by User]	Projects cannot be closed during a search.
E0202044	[Message]	Restoring object options failed.
	[Explanation]	Failed to restore object options from the project file.
	[Action by User]	Check the version of the project file.
E0202045	[Message]	Saving ROMize options failed.
	[Explanation]	Failed to save ROM-creation process options to the project file.
	[Action by User]	Check the version of the project file.
E0202046	[Message]	Restoring ROMize options failed.
	[Explanation]	Failed to restore ROM-creation process options from the project file.
	[Action by User]	Check the version of the project file.
E0202047	[Message]	Saving archive options failed.
	[Explanation]	Failed to save archive options to the project file.
	[Action by User]	Check the version of the project file.
E0202048	[Message]	Restoring archive options failed.
	[Explanation]	Failed to restore archive options from the project file.
	[Action by User]	Check the version of the project file.
E0202049	[Message]	This is not a convertible PM+ project file.
	[Explanation]	This error occurs when attempting to open a PM+ project (*.prj) older than version 6.00. CS+ can only handle PM+ project format version 6.00 and above.
	[Action by User]	Specify a project file which can be handled by this product to open.

E0202050	[Message]	The location specified as save destination is invalid. Specify a folder other than the project folder.
	[Explanation]	The path specified as the creation location is illegal.
	[Action by User]	Specify a different creation location.
E0202051	[Message]	Saving section file generate options failed.
	[Explanation]	Failed to save section file generation options to the project file.
	[Action by User]	Check the version of the project file.
E0202052	[Message]	Restoring section file generate options failed.
	[Explanation]	Failed to restore section file generation options form the project file
	[Action by User]	Check the version of the project file.
E0202053	[Message]	Saving cross reference options failed.
	[Explanation]	Failed to save cross-reference options to the project file.
	[Action by User]	Check the version of the project file.
E0202054	[Message]	Restoring cross reference options failed.
	[Explanation]	Failed to restore cross-reference options from the project file.
	[Action by User]	Check the version of the project file.
E0202055	[Message]	Saving memory layout visualization options failed.
	[Explanation]	Failed to save memory layout visualization options to the project file.
	[Action by User]	Check the version of the project file.
E0202056	[Message]	Restoring memory layout visualization options failed.
	[Explanation]	Failed to restore memory layout visualization options from the project file.
	[Action by User]	Check the version of the project file.
E0202057	[Message]	Saving dump options failed.
	[Explanation]	Failed to save dump options to the project file.
	[Action by User]	Check the version of the project file.
E0202058	[Message]	Restoring dump options failed.
	[Explanation]	Failed to restore dump options from the project file.
	[Action by User]	Check the version of the project file.
E0202059	[Message]	Saving memory bank relocation options failed.
	[Explanation]	Failed to save memory bank allocation options to the project file.
	[Action by User]	Check the version of the project file.
E0202060	[Message]	Restoring memory bank relocation options failed.
	[Explanation]	Failed to restore memory bank allocation options from the project file.
	[Action by User]	Check the version of the project file.
E0202061	[Message]	Saving variables/functions information options failed.
	[Explanation]	Failed to save variable/function information options to the project file.
	[Action by User]	Check the version of the project file.

E0202062	[Message]	Restoring variables/functions information options failed.
	[Explanation]	Failed to restore variable/function information options from the project file.
	[Action by User]	Check the version of the project file.
E0202063	[Message]	Saving link-directive setting information failed.
	[Explanation]	Failed to save link directive configuration data to the project file.
	[Action by User]	Check the version of the project file.
E0202064	[Message]	Restoring link-directive setting information failed.
	[Explanation]	Failed to restore link directive configuration data from the project file.
	[Action by User]	Check the version of the project file.
E0202065	[Message]	Upper bounds of the number of files (xxx) that is able to be registered in the project were exceeded.
	[Explanation]	The maximum number of files that can be registered was exceeded while adding files to the project.
	[Action by User]	Reduce the number of registered files by removing unneeded files from the project.
E0202066	[Message]	Because the format version is different, this product cannot read this project file.
	[Explanation]	Tried to read the project file to which it isn't compatible.
	[Action by User]	Confirm whether it's identical with tool version made created project file. When it's necessary, update integrated development environment framework and a plug-in.
E0202067	[Message]	Saving hex output options failed.
	[Explanation]	Failed to save hex output options to the project file.
	[Action by User]	Check the version of the project file.
E0202068	[Message]	Restoring hex output options failed.
	[Explanation]	Failed to restore hex output options from the project file.
	[Action by User]	Check the version of the project file.
E0202069	[Message]	Failed to import build options.
	[Explanation]	This appears when importing build options fails.
	[Action by User]	Check if the project file specified for import is corrupt, or if the project cannot be imported.
E0202070	[Message]	Specified project file is not supported for the build tool.
	[Explanation]	The project file specified for import in the build options is not supported.
	[Action by User]	Make sure that the build tool and project type are correct.
E0202071	[Message]	Upper bounds of the number of subprojects (xxx) that is able to be registered in the project were exceeded.
	[Explanation]	This message appears when the maximum number of subprojects is exceeded while subprojects are being added to the project.
	[Action by User]	Delete unnecessary subprojects from the project in order to reduce the total number of subprojects.

E0202072	[Message]	This is not a convertible e ² studio project file.
	[Explanation]	This message appears when an attempt is made to convert the rcpc file of a non-supported version or e ² studio.
	[Action by User]	Only specify projects files that can be handled by CS+.
E0202073	[Message]	The last opened project has not been found. xxx
	[Explanation]	This message appears when the most recently opened project was not found (if you have made the setting for automatic loading of the most recently opened project) during the process of starting up CS+.
	[Action by User]	Manually open the desired project.
E0202074	[Message]	Failed to restore settings from the file(xxx). The file can be corrupted or opened by other process. [Abort] : Abort launching this application. [Retry] : Check whether it can restore settings again. [Ignore] : Initialize settings and continue launching.
	[Explanation]	When reading information for each user in the PC has failed, the full path to the target file is output to xxx. The following may have caused loading to fail. - Another application (e.g. virus checker) has locked the file. - In the middle of closing CS+, another CS+ was started.
	[Action by User]	Check that the file is not opened by another process (CS+ or editor) and is readable and writable. If the file has not been opened by another process and the same message appears even after attempting [Retry], select [Ignore]. However, if the color settings of CS+ have been saved, the settings are initialized.
E0202075	[Message]	Failed to store settings to the file(xxx). The file can be opened by other process or you don't have a write permission. [Retry] : Check whether it can store settings again. [Cancel] : Do not store settings and continue exiting.
	[Explanation]	When storing information for each user in the PC has failed, the full path to the target file is output to xxx.
	[Action by User]	Check that the file is not opened by another process (CS+ or editor) and is readable and writable.
E0202076	[Message]	Failed to store settings to the file(xxx). The file can be opened by other process or you don't have a write permission. [Retry] : Check whether it can store settings again. [Cancel] : Do not store settings and continue processing.
	[Explanation]	When storing information for each user in the PC has failed, the full path to the target file is output to xxx.
	[Action by User]	Check that the file is not opened by another process (CS+ or editor) and is readable and writable.

E0203001	[Message]	An error occurred during build.
	[Explanation]	This appears when an error occurred during the build.
	[Action by User]	Follow the instructions in the message to remedy the problem. If [Direct Error Cause] is "The system cannot find the file specified" and "Launching program Xxx failed.(E0200002)" is displayed as the detailed error information, check [Using compiler package version] property in the [Version Select] category on the [Common Options] tab of the build tool to confirm that the compiler of that version has been installed.
E0203002	[Message]	An error occurred during rebuild.
	[Explanation]	This appears when an error occurred during the rebuild.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0203003	[Message]	An error occurred during clean.
	[Explanation]	This appears when an error occurred during a clean operation.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0203004	[Message]	An error occurred while build was stopped.
	[Explanation]	This appears when an error occurred stopping the build.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0203005	[Message]	Batch build failed.
	[Explanation]	This message appears when an exception (not a build error) is thrown when executing a batch build from the Batch Build dialog box.
	[Action by User]	Make sure that the build tool exists.
E0203006	[Message]	Batch rebuild failed.
	[Explanation]	This message appears when an exception (not a build error) is thrown when executing a batch rebuild from the Batch Build dialog box.
	[Action by User]	Make sure that the build tool exists.
E0203007	[Message]	Batch clean failed.
	[Explanation]	This message appears when an exception (not a build error) is thrown when executing a batch clean from the Batch Build dialog box.
	[Action by User]	Make sure that the build tool exists.
E0203008	[Message]	Setting build mode failed.
	[Explanation]	This message appears when an error occurs in the Build Mode Settings dialog box.
	[Action by User]	Make sure the input value is correct.
E0203009	[Message]	Displaying build options list failed.
	[Explanation]	This message appears when the program fails to show the build options list.
	[Action by User]	Make sure that the build tool is installed.
E0203010	[Message]	Updating dependency failed.
	[Explanation]	This message appears when the program fails to update the file dependencies.
	[Action by User]	Check the access privileges to the file. Make sure that there are no invalid paths in the C source.

E0203011	[Message]	Setting link order failed.
	[Explanation]	This message appears when the program fails to set the link order.
	[Action by User]	Make sure that there are no errors in the link-order specification.
E0203012	[Message]	Assembling failed.
	[Explanation]	This error occurs when a command could not be executed.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0203013	[Message]	Compiling failed.
	[Explanation]	This error occurs when a command could not be executed.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0203014	[Message]	No builder has been set to the project.
	[Action by User]	Make sure that the build tool is correctly installed.
E0203015	[Message]	Adding build mode failed.
	[Explanation]	This message appears when an add operation fails in the Build Mode Settings dialog box.
	[Action by User]	Make sure the input value is correct.
E0203016	[Message]	Changing build mode name failed.
	[Explanation]	This message appears when an invalid build-mode name is entered.
	[Action by User]	Make sure the input value is correct.
E0203017	[Message]	Changing current build mode failed.
	[Explanation]	The specified build mode does not exist.
	[Action by User]	Make sure the input value is correct.
E0203018	[Message]	Duplicating build mode failed.
	[Explanation]	The specified build mode does not exist.
	[Action by User]	Make sure the input value is correct.
E0203019	[Message]	Removing build mode failed.
	[Explanation]	The specified build mode does not exist.
	[Action by User]	Make sure the input value is correct.
E0203021	[Message]	A build mode with the same name already exists.
	[Explanation]	This message appears when a build mode with the same name already exists.
	[Action by User]	Make sure the input value is correct.
E0203023	[Message]	Build in progress.
	[Explanation]	This error occurs when attempting to perform a build when a build is in progress.
	[Action by User]	Wait until the build completes.
E0203025	[Message]	Number of include paths exceeded the maximum limit(xxx).
	[Explanation]	This message appears when the number of include path settings exceeds the maximum when the build starts.
	[Action by User]	Reduce the number of include paths you have added.

E0203026	[Message]	Number of library paths exceeded the maximum limit(xxx).
	[Explanation]	This message appears when the number of library path settings exceeds the maximum when the build starts.
	[Action by User]	Reduce the number of include paths you have added.
E0203027	[Message]	Number of library files exceeded the maximum limit(xxx).
	[Explanation]	This message appears when the number of library settings exceeds the maximum when the build starts.
	[Action by User]	Reduce the number of library files used.
E0203028	[Message]	Any Compiler package(xxx) using the project is not installed.
	[Explanation]	This appears when there are no compiler packages installed.
	[Action by User]	Make sure that the build tool is correctly installed.
E0203029	[Message]	IronPython Console Plug-in is not installed.
	[Explanation]	This error occurs when the IronPython Console Plug-in could not be used.
	[Action by User]	Check if the IronPython Console Plug-in has been installed and validated from the [Tool] menu -> [Plug-in Setting...].
E0203030	[Message]	Failed to apply the setting value to the build mode(xxx).
	[Explanation]	This message appears when applying the option setting to the build mode has failed.
	[Action by User]	Check if the setting value is correct.
E0204001	[Message]	Download failed.
	[Explanation]	This error appears when an error has occurred while performing a download.
	[Action by User]	Make sure that the debugging tool is connected. Check the memory mapping.
E0205002	[Message]	Editing could not be done.
	[Explanation]	This error occurs when the edit action fails for some reason.
E0205003	[Message]	Searching or replacing failed.
	[Explanation]	This error occurs when the search or replace action fails for some reason.
	[Action by User]	There may not be enough memory.
E0205004	[Message]	Searching or replacing xxx failed.
	[Explanation]	This error occurs when the search or replace action fails for some reason.
	[Action by User]	There may not be enough memory.
E0206001	[Message]	Search in progress. The next search cannot be done until the current search finishes.
	[Explanation]	This message appears when attempting to perform a search while one is in progress.
	[Action by User]	Cancel the search or wait until it completes.
E0207001	[Message]	Writing to memory failed.
	[Explanation]	An error occurred in the debugging tool when writing data to memory.
	[Action by User]	Make sure that the debugging tool is connected.

E0207002	[Message]	The specified range includes the memory area that cannot be written.
	[Explanation]	This message appears when the [OK] button is clicked in the Memory Initialize dialog box.
	[Action by User]	Check whether to contain the memory area that cannot be written within the specified area.
E0207003	[Message]	Failed to write the Flash Options to a debugger.
	[Explanation]	This error occurs when the [Write] button is clicked in the [Flash Options Setting] dialog box.
	[Action by User]	Make sure that there are no problems with the debug tool connection or settings.
E0207004	[Message]	Failed to read the Flash Options from a debugger.
	[Explanation]	This occurs when the [Load] button is clicked in the [Flash Options Setting] dialog box.
	[Action by User]	Make sure that there are no problems with the debugging tool connection or settings.
E0208001	[Message]	Could not remove break event.
	[Explanation]	This error occurs when a breakpoint could not be removed from the Editor or Disassemble panel.
	[Action by User]	Make sure that the debugging tool is connected.
E0208002	[Message]	Could not set break event.
	[Explanation]	This error occurs when a breakpoint could not be set on the Editor or Disassemble panel.
	[Action by User]	The setting may be invalid. Make sure that the debugging tool is connected.
E0208003	[Message]	The file xxx was modified after it was downloaded. The settings which depends on line number, such as the event setting and PC position changes, cannot be done from this panel.
	[Explanation]	This error occurs when a file was modified after downloading.
	[Action by User]	Download a new built module.
E0208004	[Message]	Setting action event failed.
	[Explanation]	This error occurs when setting an action event fails.
E0208005	[Message]	Trace event could not be set.
	[Explanation]	This error occurs when a trace event could not be set on the Editor or Disassemble panel.
	[Action by User]	The setting may be invalid. Make sure that the debugging tool is connected.
E0208006	[Message]	Timer event could not be set.
	[Explanation]	This error occurs when a timer event could not be set on the Editor or Disassemble panel.
	[Action by User]	The setting may be invalid. Make sure that the debugging tool is connected.

E0208009	[Message]	An event could not be set to the specified location.
	[Explanation]	This error occurs from the [Event Setup] menu.
	[Action by User]	This error occurs when there is no symbol information.
E0208010	[Message]	Event could not be disabled.
	[Explanation]	This error occurs from the [Event Setup] menu. This error occurs when there is no symbol information.
E0208011	[Message]	Event could not be removed.
	[Explanation]	This error occurs from the [Event Setup] menu. This error occurs when there is no symbol information.
E0208012	[Message]	Event could not be enabled.
	[Explanation]	This error occurs from the [Event Setup] menu. This error occurs when there is no symbol information.
E0208013	[Message]	Up to xxx action events can be set.
	[Explanation]	You can register up to the number of action events shown.
	[Action by User]	Delete unneeded action events.
E0209001	[Message]	Resetting program failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Reset] menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0209002	[Message]	Executing program failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Run] menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0209003	[Message]	Stopping program failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Stop] menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0209004	[Message]	Executing step-in failed.
	[Explanation]	This message appears when an exception is thrown while executing the step in menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0209005	[Message]	Executing step-over failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Step Over] menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0209006	[Message]	Return out failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Return Out] menu command.
	[Action by User]	Make sure that the debugging tool is connected.

E0209007	[Message]	Setting PC value failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Set PC Value] menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0209008	[Message]	Go-to-here failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Run to Here] menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0209009	[Message]	Restart failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Restart] menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0209010	[Message]	Return-to-here failed.
	[Action by User]	Make sure that the debugging tool is connected.
E0209011	[Message]	Executing a hook process failed(xxx.yyy).
	[Explanation]	This message appears when a hook process executing failed.
	[Action by User]	Check whether it's without errors in description of hook processing.
E0210001	[Message]	Quitting debugger failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Disconnect Debugger] menu command.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0210002	[Message]	Launching debugger failed.
	[Explanation]	This message appears when an exception is thrown while executing the [Connect to Debugger] menu command.
	[Action by User]	Make sure that the debugging tool is connected.
E0210003	[Message]	Connection with a debug tool lost. Abort debugging.
	[Explanation]	This error appears when the USB connection or emulator power turned off.
	[Action by User]	Check the emulator power. Check whether the USB cable isn't cut.
E0210004	[Message]	Failed to save the result of coverage for reusing. Retry : Retry saving. Cancel : Keep disconnection processing.
	[Explanation]	This appears upon failure to save the coverage results.
	[Action by User]	Check the access privileges to the file.
E0210005	[Message]	Failed to reuse the last result of coverage. Retry : Retry reusing. Cancel : Keep connection processing.
	[Explanation]	This appears upon failure to load the coverage results.
	[Action by User]	Check the access privileges to the file.

E0210006	[Message]	Disconnecting from a debug tool because the connection has timed out.
	[Explanation]	This message appears when communication with the debugging tool times out.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut.
E0210007	[Message]	Failed to set data to a debug tool.
	[Explanation]	This appears upon failure to set of data to a debug tool.
	[Action by User]	(1) Follow the instructions in the message to remedy the problem. (2) Check the emulator power. (3) Check whether the USB cable isn't cut.
E0210008	[Message]	Hot Plug-in is failed
	[Explanation]	This message appears when a hot plug-in fails.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut.
E0210009	[Message]	Failed to download.
	[Explanation]	This appears when a download has failed.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut. (3) Make sure that there are no problems with the file to download.
E0210010	[Message]	This operation has been cancelled because not currently allowed to disconnect from the debug tool.
	[Explanation]	This message appears when disconnection of the debugging tool was attempted even though this was not allowed.
	[Action by User]	Stop the debugger if it is operating.
E0210011	[Message]	This operation has been cancelled because the command related to the state save feature can not use at the current product license.
	[Explanation]	This message appears when saving or restoring the state and when there is no additional license related to state saving.
	[Action by User]	Switch to a license which can use the state save feature.
E0210012	[Message]	Failed to load RAM or register values.
	[Explanation]	This message appears when loading of RAM or register values has failed.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut. (3) Follow the instructions in the message to remedy the problem.
E0210013	[Message]	Failed to save RAM or register values.
	[Explanation]	This message appears when saving of RAM or register values has failed.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut. (3) Follow the instructions in the message to remedy the problem.

E0210014	[Message]	Failed to save RAM or register values to the file(xxx).
	[Explanation]	This message appears when saving of RAM or register values has failed.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut. (3) Follow the instructions in the message to remedy the problem.
E0210015	[Message]	Failed to restore RAM or register values from the file(xxx).
	[Explanation]	This message appears when restoring of RAM or register values has failed.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut. (3) Follow the instructions in the message to remedy the problem.
E0213001	[Message]	Initializing microcontroller information failed.
	[Explanation]	This error occurs when attempting to load or convert a project that uses information for a device that is not installed. The device-information file is corrupt.
	[Action by User]	Check whether the device file has been located correctly if the project uses a custom device.
E0213002	[Message]	The specified microcontroller is unsupported.
	[Explanation]	This error occurs when attempting to load or convert a project that uses information for a device that is not installed. The device-information file is corrupt.
	[Action by User]	Check whether the device file has been located correctly if the project uses a custom device.
E0213003	[Message]	Getting microcontroller information failed.
	[Explanation]	This error occurs when getting target information failed when using microcontroller information.
	[Action by User]	Make sure that correct microcontroller information file is installed.
E0218003	[Message]	Unknown command-line options xxx were specified.
	[Explanation]	This appears when an option was specified that was not processed by the IDE or a plug-in.
	[Action by User]	Specify the options correctly.
E0218004	[Message]	Command-line options, /bb, /bc, /bcb, and /br, are mutually exclusive.
	[Explanation]	This appears when the /bb, /bc, /bcb, or /br options were specified at the same time.
	[Action by User]	Do not specify the /bb, /bc, /bcb, or /br options at the same time.
E0218005	[Message]	Command-line option xxx was able to specify yyy parameters.
	[Explanation]	This appears when more than the maximum number of parameters has been specified for an option.
	[Action by User]	Specify an allowable number of parameters.

E0218006	[Message]	Specify valid project file.
	[Explanation]	This appears when no project file was specified when launched from the command line.
	[Action by User]	Specify a valid project file.
E0218007	[Message]	Command-line option xxx was not able to specify in yyy.
	[Explanation]	This appears when an option that cannot be used in GUI mode was specified when starting GUI mode from the command line.
	[Action by User]	Do not specify invalid options when starting GUI mode from the command line.
E0218001	[Message]	A non-existing build mode was specified.
	[Explanation]	This error appears when the IDE is launched via a command.
	[Action by User]	Specify a build mode defined by the project.
E0218002	[Message]	Illegal command-line options were specified.
	[Explanation]	This appears when an undefined combination of options is specified.
	[Action by User]	Specify the options correctly.
E0219001	[Message]	Executing external tool failed.
	[Explanation]	This message appears when an external tool could not be executed (e.g. the file was not found) from the [Tool] or [Tool name] menu.
	[Action by User]	Make sure that the path of the specified command is correct.
E0220001	[Message]	Jump-to-source failed.
	[Explanation]	This message appears when an exception is thrown when executing the [Jump to Source] menu command.
	[Action by User]	There may be no source information at the specified location. In this case, it is not possible to jump from here. Check whether the target source file exists. Make sure that the debugging tool is connected.
E0220002	[Message]	Jump-to-disassemble failed.
	[Explanation]	This message appears when an exception is thrown when executing the [Jump to Disassembly] menu command.
	[Action by User]	The program may have failed to obtain the jump destination address from the specified location. In this case, it is not possible to jump from here. Make sure that the debugging tool is connected.
E0220003	[Message]	Jump-to-memory failed.
	[Explanation]	This message appears when an exception is thrown when executing the [Jump to Memory] menu command.
	[Action by User]	The program may have failed to obtain the jump destination address from the specified location. In this case, it is not possible to jump from here. Make sure that the debugging tool is connected.
E0220004	[Message]	Displaying the local variable at this time failed.
	[Explanation]	This message appears when an error occurs executing the [Show Current Local Variables] menu command.
	[Action by User]	Make sure that the debugging tool is connected.

E0220005	[Message]	Could not move.
	[Explanation]	This error occurs when the move command fails from the Disassembly panel.
	[Action by User]	This error occurs when the program fails to resolve the move destination address.
E0220006	[Message]	Deletion failed.
	[Explanation]	This error occurs when a deletion operation fails.
	[Action by User]	Make sure you have access privileges to the file before deleting it.
E0220007	[Message]	Clearance failed.
	[Explanation]	This error occurs when a clear operation fails.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0220008	[Message]	Executing xxx failed.
	[Explanation]	This error occurs when an execution operation fails.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0222001	[Message]	The location where the project is to be created does not exist.
	[Explanation]	This indicates that the specified folder was not found in the project creation location.
	[Action by User]	Specify the existing folder.
E0222002	[Message]	The project name is invalid. Enter characters that can be used as a file name.
	[Explanation]	This appears when the character that cannot be used as a file name is specified for the project name.
	[Action by User]	Specify a different project name.
E0222003	[Message]	The location for project creation is invalid. Enter characters that can be used as a path name.
	[Explanation]	The path specified as the creation location is illegal.
	[Action by User]	Specify a different creation location.
E0222005	[Message]	Creating project folder xxx failed.
	[Explanation]	Failed to create the specified folder.
	[Action by User]	Follow the instructions in the message to remedy the problem.
E0222006	[Message]	The divert project does not exist.
	[Explanation]	The specified project is not found.
	[Action by User]	Specify a different project.
E0222007	[Message]	The divert project name is invalid. Enter characters that can be used as a file name.
	[Explanation]	The project name for specified project is invalid.
	[Action by User]	Specify a different project.
E0222009	[Message]	The project which is being used can't be diverted.
	[Explanation]	The specified project is already open.
	[Action by User]	Specify a different project.

E0222010	[Message]	The specified file is invalid. Enter a divert project file.
	[Explanation]	The specified file is invalid.
	[Action by User]	Specify a different project.
E0222011	[Message]	The file name including the path is too long. Make it within xxx characters.
	[Explanation]	The path specified by the project name and location is too long.
	[Action by User]	Specify a different project name or location.
E0222012	[Message]	The subproject name is invalid. A subproject with the same name cannot be made in the location where the main project exists.
	[Explanation]	There is already a main project with the same name (excluding extension) in the specified location.
	[Action by User]	Specify a different project name or location.
E0222013	[Message]	Any microcontroller type can be created doesn't exist. Check the installation.
	[Explanation]	Microcontroller not found.
	[Action by User]	Make sure that the product is correctly installed.
E0222014	[Message]	Failed to copy some files. See the [All Messages] tab in the Output panel.
	[Explanation]	This indicates that there was a file-copy error when cloning (copying) a project.
	[Action by User]	Check the files making up the project to be copied.
E0222015	[Message]	Overwriting project file failed. The project file may be read-only.
	[Explanation]	This appears when the application fails to create a project file by overwriting an existing one.
	[Action by User]	Specify a different project file name to create.
E0223001	[Message]	The specified file could not be opened.
	[Explanation]	This error occurs when the Project Tree panel fails to open the file.
	[Action by User]	Make sure that the file exists and is not corrupt. Check the access privileges to the file.
E0223002	[Message]	Deleting xxx failed.
	[Explanation]	This message appears when the program fails to delete a file or other object.
	[Action by User]	Make sure you have access privileges to the file before deleting it.
E0223003	[Message]	The specified file xxx could not be opened.
	[Explanation]	This error occurs when the Editor panel fails to open the file.
	[Action by User]	Make sure that the file exists and is not corrupt. Check the access privileges to the file. Make sure that the file format is supported.
E0223004	[Message]	Detecting character code failed.
	[Explanation]	This error occurs when the Editor panel fails to detect the file's character encoding.
	[Action by User]	Make sure that the file is not corrupt. Make sure that the file format is supported.

E0223005	[Message]	No additional characters can be entered.
	[Explanation]	This error occurs when the Editor panel fails to detect the file's character encoding.
	[Action by User]	The maximum text length has been exceeded.
E0223006	[Message]	Upper bounds of the number of nests of categories (xxx) that were able to be registered in the project tree were exceeded.
	[Explanation]	The maximum allowable level of category nesting was exceeded while adding a category to the project tree.
	[Action by User]	Add the category to the project so that the maximum nesting level is not exceeded.
E0223007	[Message]	Failed to open the Windows Explorer menu for the specified file or folder.
	[Explanation]	This message appears when the Windows Explorer menu was not displayed in the Project Tree panel.
	[Action by User]	<ul style="list-style-type: none"> - When multiple nodes have been selected, check that all of them are files or folders in the same folder. - Check that you have access rights for the files and folders. - Check that the files and folders exist.
E0223008	[Message]	Failed to get information for specified files or folders or not contains in a same parent folder.
	[Explanation]	This message appears when the Windows Explorer menu was not displayed in the Project Tree panel.
	[Action by User]	<ul style="list-style-type: none"> - When multiple nodes have been selected, check that all of them are files or folders in the same folder. - Check that you have access rights for the files and folders. - Check that the files and folders exist.
E0223009	[Message]	Failed to invoke the Windows Explorer menu for the specified file or folder.
	[Explanation]	This message appears when the Windows Explorer menu was not displayed in the Project Tree panel.
	[Action by User]	<ul style="list-style-type: none"> - When multiple nodes have been selected, check that all of them are files or folders in the same folder. - Check that you have access rights for the files and folders. - Check that the files and folders exist.
E0223010	[Message]	Failed to change the microcontroller.
	[Explanation]	This message appears when changing the microcontroller in the Project Tree panel was not possible.
	[Action by User]	Check that the device file has been installed.
E0223011	[Message]	There is no any selectable microcontroller.
	[Explanation]	This message appears in response to an attempt to change the microcontroller but there is no specifiable microcontroller in the target for the change.
	[Action by User]	Check that the device file has been installed.
E0223012	[Message]	Can not change the extension of the editing file.
	[Explanation]	This message appears when an attempt is made to change the extension of the file being edited.
	[Action by User]	Close the editing file and change the extension of the file.

E0223013	[Message]	Can not change the extension of the file has child nodes.
	[Explanation]	This message appears when an attempt is made to change the extension of a file that has child nodes.
	[Action by User]	Remove the child nodes from the project.
E0233001	[Message]	No additional new panel could be opened.
	[Explanation]	This error occurs when a new Editor panel cannot be opened.
	[Action by User]	A maximum of 100 Editor panels can be opened at once. Close unneeded panels before opening new ones.
E0233002	[Message]	Binary files are not supported.
	[Explanation]	Appears when trying to load a binary file in the editor.
	[Action by User]	Open a text file.
E0233003	[Message]	The specified file could not be displayed.
	[Explanation]	No application is assigned to the file's extension in the OS. This message appears when the maximum number of editors is open. This message appears when an external editor cannot be opened.
	[Action by User]	Check the access privileges to the file. Reduce the number of open editors.
E0233004	[Message]	The maximum number of editor panels exceeded. Please close some editor panels to keep working.
	[Explanation]	This message appears when an attempt is made to open another Editor panel while the maximum number (100) of Editor panels have been open on CS+.
	[Action by User]	Close a few Editor panels.
E0244001	[Message]	The address range is invalid. Can not specify address range that contain sections the endianness is different.
	[Explanation]	This appears when an address range is specified whose start and end addresses cause it to overlap areas with different endianness.
	[Action by User]	Specify a range that does not overlap areas with different endianness.
E0255001	[Message]	Could not select the specified font.
	[Explanation]	This appears when an exception is thrown from the Font dialog box.
	[Action by User]	Select an available font.
E0261001	[Message]	Generating link-directive-file failed.
	[Explanation]	This appears when the application fails to generate a link directive file.
	[Action by User]	Enter correct settings. Make sure that the file is writable. Make sure that the project file is writable/allows appends.
E0261002	[Message]	Copying is failed. It isn't possible to include this section attribute in a segment of designation by a cause of the attribute.
	[Explanation]	This appears when trying to copy a section into a segment where that section cannot appear due to the attribute settings.
	[Action by User]	Change the attributes of the section to copy. Change the attributes of the segment to copy into.

E0261003	[Message]	Opening link-directive-file generation dialog failed.
	[Explanation]	This appears when the application fails to open link-directive-file generation dialog box.
	[Action by User]	Set correct microcontroller information.
E0262001	[Message]	Executing source-converter failed.
	[Explanation]	This appears when the necessary files could not be created when the source converter started.
	[Action by User]	Change (for example) the location where the project is created, and try again.
E0269001	[Message]	No column to save a file.
	[Explanation]	No columns have been selected for saving when file output has been requested.
	[Action by User]	Select the columns that you wish to save in the [Column Chooser] dialog box.
E0269002	[Message]	No row to save a file.
	[Explanation]	No rows have been selected for saving when file output has been requested.
	[Action by User]	Select the rows that you wish to save in the [Filter Settings] dialog box.
E0269003	[Message]	Failed to save a file because the number of lines had exceeded the limitation value of Excel.
	[Explanation]	The number of lines has exceeded the limit for an Excel file.
	[Action by User]	Ensure that the number of lines set in the [Filter Settings] dialog box is no greater than 65535.
E0269004	[Message]	Specify the condition here when the condition is one.
	[Explanation]	This message appears to the right of the [Condition 1] combo box when it is blank and the [Condition 2] combo box is not.
	[Action by User]	Enter a value in the [Condition 1] combo box.
E0290001	[Message]	This section information file (*.hsi) cannot be read.
	[Explanation]	This message appears when format of the specified section information file is invalid or not supported.
	[Action by User]	Check if the section information file is a text file. Please contact your vendor or your Renesas Electronics overseas representative.
E0291001	[Message]	Can not specify this option.
	[Explanation]	This message appears when an invalid option has been selected.
	[Action by User]	For the options that can be specified simultaneously, refer to the user's manual of the compiler.
E0291004	[Message]	The project excludes the file which cannot be specified as an excluded file. File name: xxx
	[Explanation]	This appears when changing the HEW project as which exclusion set the file which can't be established (cfg file).
E0291005	[Message]	Failed to back up the xxx file. Generating the I/O header file is aborted.
	[Explanation]	This message appears in case of failure to delete an existing .bak file or to rename iodefine.h as iodefine.bak.
	[Action by User]	If iodefine.bak has been opened by a text editor or the like, close it. Check the access privileges to iodefine.bak. After carrying out the above operations, perform generation again.

E0291006	[Message]	Launching program <i>program-name</i> failed.
	[Explanation]	Shown on failing to invoke a Windows program from the IDE.
	[Action by User]	Check that the program has been installed correctly.
E0292001	[Message]	The workspace is invalid.
	[Explanation]	The workspace file is invalid.
	[Action by User]	Specify a valid workspace file.
E0292002	[Message]	The workspace contains no projects.
	[Explanation]	There are no projects in the workspace.
	[Action by User]	Specify a valid workspace file.
E0292003	[Message]	Could not read HEW project.
	[Explanation]	An invalid project was specified.
	[Action by User]	Specify a valid project.
E0292004	[Message]	Project file name is invalid.
	[Explanation]	The project file is invalid.
	[Action by User]	Specify a valid project file.
E0292005	[Message]	The project uses an unsupported toolchain:
	[Explanation]	A project using an unsupported toolchain was specified.
	[Action by User]	Specify a valid workspace.
E0292006	[Message]	File xxx already exists.
	[Explanation]	There is already a file with the same name as the converted project file.
	[Action by User]	Check the files in the folder. Change the folder to convert.
E0292007	[Message]	The project does not contain a debugger.
	[Explanation]	An invalid project was specified.
	[Action by User]	Specify a valid project.
E0292008	[Message]	The project uses an unsupported target.
	[Explanation]	An invalid project was specified.
	[Action by User]	Specify a valid project.
E0292009	[Message]	The conversion of project xxx was aborted.
	[Explanation]	The Cancel button was clicked in the Select Session dialog box.
E0292021	[Message]	Project xxx cannot be converted. The project is invalid.
	[Explanation]	The project file is invalid.
	[Action by User]	Specify a valid project file.
E0292022	[Message]	xxx was not found.
	[Explanation]	The project file was not found.
	[Action by User]	Specify a valid project file.

E0292023	[Message]	Project xxx cannot be converted. The project was created by an earlier version of HEW. Please open it in HEW 4.07.00 or newer, save the project and try again.
	[Explanation]	This appears when the project version is older than HEW 4.07.00.
	[Action by User]	Open the project with HEW 4.07.00 or a later version, save it, and convert it again.
E0292024	[Message]	xxx Session invalid.
	[Action by User]	Specify a valid project file.
E0292025	[Message]	xxx was not found.
	[Explanation]	Session is invalid.
	[Action by User]	Specify a valid project file.
E0292026	[Message]	Session xxx cannot be converted. The session was created by an earlier version of HEW. Please open it in HEW 4.07.00 or newer, save the project and try again.
	[Explanation]	This appears when the session version is older than HEW 4.07.00.
	[Action by User]	Open the project with HEW 4.07.00 or a later version, save it, and convert it again.
E0292027	[Message]	Project xxx cannot be converted. The project is invalid.
	[Explanation]	The project file is invalid.
	[Action by User]	Specify a valid project.
E0292028	[Message]	xxx was not found.
	[Explanation]	Workspace-name is invalid.
	[Action by User]	Specify a valid workspace.
E0292029	[Message]	Workspace xxx cannot be converted. The workspace was created by an earlier version of HEW. Please open it in HEW 4.07.00 or newer, save the workspace and try again.
	[Explanation]	This appears when the workspace version is older than HEW 4.07.00.
	[Action by User]	Open the project with HEW 4.07.00 or a later version, save it, and convert it again.
E0292030	[Message]	All of the session files referenced in <i>project-name</i> were missing or saved by an earlier version of HEW (Please open it in HEW 4.07.00 or newer, save the project and try again).
	[Explanation]	All of the .hsf files in the project were missing or were saved by an earlier version of HEW.
	[Action by User]	Obtain a workspace that includes the .hwp file. If this is not possible, open the workspace in HEW 4.07.00 or a later version, save after activating the session, and repeat the conversion.
E0292031	[Message]	Project <i>project-name</i> has no relation to a toolchain. (Conversion of debugger-only project is not supported.)
	[Explanation]	This message appears when a project that does not use toolchains has been specified.
	[Action by User]	Specify a valid Project.
E0293002	[Message]	Launching program xxx failed.
	[Explanation]	This appears when Windows program execution was attempted from the IDE but failed.
	[Action by User]	Check that the program exists. Check that the specified program is an executable application.

E0294002	[Message]	Launching program xxx failed.
	[Explanation]	You have attempted to run a Windows program from the IDE and this has failed.
	[Action by User]	Check that the program exists. Check that the specified program is an executable application.
E0300001	[Message]	Can not find ' <i>file name</i> ' to start pin configurator plug-in.
	[Action by User]	Make sure that the files are included. It is possible that the necessary files were not included.
E0300002	[Message]	Could not load ' <i>file name</i> ' to start pin configurator plug-in.
	[Action by User]	Make sure that the correct files are included. It is possible that a necessary file is corrupt.
E0300003	[Message]	Could not load the necessary information to start pin configurator plug-in.
	[Action by User]	This appears when a project file could not be opened in the same state in which it was saved. Check the installation status of CS+.
E0300004	[Message]	The setting of pin No. xxx was not changed.
	[Explanation]	When functions are assigned by code generator, this message appears if there are differences between the pin information generated by the code generator and that in the common libraries.
	[Action by User]	Re-install the correct file.
E0400000	[Message]	This function name has been used. Please use another one.
E0400001	[Message]	This file name has been used. Please use another one.
E0400002	[Message]	Invalid function name. The function name must be constructed with _, a-z, A-Z, 0-9.
E0400003	[Message]	Invalid file name. The file name must be constructed with _, a-z, A-Z, 0-9.
E0400004	[Message]	The output path is invalid. Please check "[Generation] -> [Generate File Mode] -> [Output folder]".
E0400005	[Message]	Save xxx failed.
E0600005	[Message]	This function is not supported.
E0602203	[Message]	Simulator Configuration file not found.
E0602204	[Message]	The specification of the main clock source is mistake.
E0602205	[Message]	The specification of the sub clock source is mistake.
E0602206	[Message]	Illegal the flash self emulation settings.
E0602207	[Message]	Illegal the DataFlash emulation settings.
E0602208	[Message]	Illegal the memory mapping settings.
E0602209	[Message]	The coverage-board is not equipped with.
E0602210	[Message]	Could not create the simulator project file 'xxx'.
E0602211	[Message]	SymbolLoad cannot be nested.
E0602212	[Message]	Please install runtime components of Visual C++ 2010 SP1 Libraries. (xxx)
E0602213	[Message]	Debugger I/F used from a thread other than the thread the debugger was created on.

E0602214	[Message]	Specified feature is not supported. (xxx)
E0602216	[Message]	Starting up with the hot plug-in failed, because the user system has already connected to the emulator. User program was reset.
E0602217	[Message]	Fatal problem occurred at the time of a connection of a hot plug-in.
E0602218	[Message]	Time out error occurred by security authentication during hot plug-in.
E0602219	[Message]	Incorrect ID Code.
E0602220	[Message]	Starting up with the hot plug-in failed. User program was reset.
E0604000	[Message]	Failed to assemble. ("xxx")
E0608000	[Message]	It failed in the preservation of the "xxx" because the right of access of the coverage file had not been permitted or the capacity of the disk was insufficient.
E0608001	[Message]	It failed in reading the "xxx" because the coverage file did not exist or the right of access had not been permitted.
E0608002	[Message]	The verify error occurred while reading the "xxx" because abnormality had been found in the coverage file.
E0608003	[Message]	The code flash area doesn't exist.
E0608004	[Message]	The data flash area doesn't exist.
E0608005	[Message]	The external flash area doesn't exist.
E0608006	[Message]	The address was acquired and the ID Tag was not able to be acquired illegally.
E0608007	[Message]	The address range is invalid. Can not specify address range that contain sections the endianness is different.
E0608009	[Message]	Accessed the memory area you can't access during execution.
	[Explanation]	Changing the settings of the [Access Memory While Running] category on the [Debug Tool Settings] tabbed page of the Property panel may lead to access to some memory areas during execution of the program.
E0611000	[Message]	Failed to convert address. ("xxx")
E0613000	[Message]	The memory can't be read because the stop during the moment isn't permitted.
E0613001	[Message]	The memory can't be written because the stop during the moment isn't permitted.
E0613002	[Message]	The register can't be read because the stop during the moment isn't permitted.
E0613003	[Message]	The register can't be written because the stop during the moment isn't permitted.
E0613004	[Message]	The Sfr can't be read because the stop during the moment isn't permitted.
E0613005	[Message]	The Sfr can't be written because the stop during the moment isn't permitted.
E0613006	[Message]	The breakpoint can't be set because the stop during the moment isn't permitted.
E0613007	[Message]	The breakpoint can't be deleted because the stop during the moment isn't permitted.
E0613010	[Message]	Two or more events cannot be set to one timer event.
E0613012	[Message]	Because the event of the same name already exists, the event can't be made.
E0613013	[Message]	A software break has already been set to the address. except [Simulator]
E0613014	[Message]	Enable this event.

E0613015	[Message]	Two or more events cannot be set to one trace event. [RL78-MINICUBE2]
E0613016	[Message]	An event can't be set as a variable beyond xxx bytes of size.
	[Action by User]	- For example, if an event is to happen in the value of a four-byte variable, set the event as two points by dividing the variable into the two lower- and two higher-order bytes. - In the case of a more detailed event, change the setting by specifying the address range and not specifying a range of data.
E0615000	[Message]	This is not a importable watch data file.
E0617002	[Message]	A software break has already been set to the address.
	[Explanation]	More than one software breakpoint cannot be set at the same address.
	[Action by User]	Check the software breakpoint settings from the Event panel or the like.
E0617003	[Message]	"Use software break" is "No".
E0617004	[Message]	Specified event has not been registered.
E0617005	[Message]	Software break can not be set on this area.
E0617006	[Message]	Software break call conditions number overflow.
E0800001	[Message]	Analysis aborted because memory is low.
	[Explanation]	This appears when an out-of-memory exception is detected during analysis.
	[Action by User]	Restart CS+, close all other panels, and open the panel in which you wish to view analysis results.
E0801003	[Message]	Could not find the file.
	[Explanation]	This appears when the specified file was not found.
	[Action by User]	Make sure that the file exists. Check the access privileges to the file. Make sure that the file is not corrupt.
E0820002	[Message]	The input name can't release registration.
	[Action by User]	Make sure that the specified name is registered on the Analysis Chart panel.
E0820003	[Message]	Failed to Register to Analysis Chart.
	[Explanation]	This message appears when the execution of the command registered in Analysis Chart failed for some reason.
	[Action by User]	Make sure that the number of variables registered in the Analysis Chart panel does not exceed the limit of 16.
E0821001	[Message]	No column to save a file.
	[Action by User]	Execute analysis and update the data. Display the row you wish to save in the Select Field dialog box.
E0821002	[Message]	No row to save a file.
	[Action by User]	Execute analysis and update the data. Display the column you saved in the Folder Settings dialog box.
E0821003	[Message]	Failed to save a file because the number of lines had exceeded the limitation value of Excel.
	[Action by User]	Set the column to display in the Folder Settings dialog box to no more than 65,535.

E0821004	[Message]	Jump-to-source failed.
	[Action by User]	Make sure that the file exists. Check the access privileges to the file. Make sure that the file is not corrupt. Make sure that there is an associated application for opening the file.
E0821005	[Message]	Jump-to-interrupt-control-register failed.
	[Explanation]	This message appears when the interrupt control register jump command from the Function List panel fails.
	[Action by User]	Make sure that the SFR/IOR panel can be opened. Make sure that the SFR exists.
E0822001	[Message]	Could not set a break point at the head of function.
	[Action by User]	The debugging tool may not have enough resources. Make sure that the number of breaks is within the number that can be set.
E0822002	[Message]	Jump-to-function-list failed.
	[Explanation]	This appears when a jump command is executed to the Function List panel, and the specified location cannot be opened.
	[Action by User]	Make sure that the specified function is displayed in the Function List.
E0822003	[Message]	Jump-to-variable-list failed.
	[Explanation]	This appears when a jump command is executed to the Variable List panel, and the specified location cannot be opened.
	[Action by User]	Make sure that the specified variable is displayed in the Variable List.
E0823001	[Message]	Could not set a access break to the variable.
	[Action by User]	The debugging tool may not have enough resources. Make sure that the number of breaks is within the number that can be set.
E0825001	[Message]	Specify the condition here when the condition is one.
	[Explanation]	The [Condition 1] combo box is empty, and the [Condition 2] combo box is not.
E0826001	[Message]	Failed to save the image, because the image size is too huge.
	[Explanation]	A limitation of the Microsoft .NET Framework and GDI+ (images with a size of greater than 2 gigabytes in memory cannot be created) has been reached.
	[Action by User]	Use the "Visible region only" save command.
E0827001	[Message]	Executing program.
	[Explanation]	A search was executed during program execution.
	[Action by User]	Perform searches while the program is halted.
E1200002	[Message]	This feature is not supported.
E1200256	[Message]	Can not communicate with Emulator. Please confirm the installation of the device driver for the PC interface board.
	[Action by User]	Reinstall the device driver.
E1200257	[Message]	Can not find initialization file (expc.ini).
E1200258	[Message]	Host name not found.
E1200259	[Message]	Data transfer to Emulator is timed out. Please confirm the power of Emulator, connection of the interface cable, or I/O address of the PC interface board.

E1200260	[Message]	Data receive from Emulator is timed out. Please confirm the power of Emulator, connection of the interface cable, or I/O address of the PC interface board.
E1200261	[Message]	Failed in reading device dependent information file.
	[Action by User]	Reinstall the device file.
E1200262	[Message]	Illegal data received.
E1200263	[Message]	Can not communicate with Emulator.
	[Action by User]	<ul style="list-style-type: none"> - There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect. - There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.
E1200264	[Message]	Failed in reading initialization file (expc.ini).
E1200265	[Message]	Can not communicate with Emulator. Please terminate the debugger and check the power of Emulator or the connection of cable then restart the debugger.
	[Action by User]	<ul style="list-style-type: none"> - There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect. - There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.
E1200266	[Message]	Cannot run debugger and a utility at the same time.
	[Action by User]	Check if any other software is using the emulator in the host PC.

E1200416	[Message]	No response from the emulation CPU. Please confirm the signal of the CLOCK or RESET, WAIT and so on.
	[Action by User]	<p>[RL78]</p> <p>(1) Confirm that wire connection between the microcontroller and E1/E20 emulator does not differ from the recommended circuits. Refer to the recommended circuit examples for connection given in "E1/E20 Emulator Additional Document for User's Manual (Notes on Connecting RL78)" and check connection. Communication may not be successful if wire connection is different from that for recommended circuits.</p> <p>(2) Check if the clock settings are correct. When an external clock source is used, it is necessary to make clock settings for a property in the [Clock] category on the [Connect Settings] tab of the debug tool.</p> <p>(3) Confirm that the stack area to be used by the debugger has been allocated. There needs to be four bytes of empty space in the stack area for the E1/E20 emulator. Set a stack pointer estimating the amount of (stack area used by the user program + 4 bytes). For details, refer to "E1/E20 Emulator Additional Document for User's Manual (Notes on Connecting RL78)".</p>
E1200418	[Message]	Break board is not connected.
E1200419	[Message]	Emulation board is not connected.
E1200420	[Message]	There is contradiction between the choice device and the connection emulator. The debugger is aborted.
E1200421	[Message]	POD/EM board is not connected.
E1200422	[Message]	Executor is running.
E1200424	[Message]	Failed in reading initialization file (expc.ini).
E1200429	[Message]	Please update the device driver for the PC interface board.
E1200430	[Message]	Failed in reading initialization file (expc.ini).
E1200431	[Message]	Failed in executing monitor command.
E1200432	[Message]	Can not communicate with monitor program. Please check the availability of communication port, the setting of CPU board or the type of cable.
	[Action by User]	<ul style="list-style-type: none"> - There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect. - There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.

E1200433	[Message]	Can not communicate with monitor program. Please terminate the debugger and check the power of CPU board or the connection of cable then restart the debugger.
	[Action by User]	<p>- There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p> <p>- There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p>
E1200434	[Message]	The firmware of the emulator is old version. Please update it with utility to the latest firmware.
E1200435	[Message]	A setup of the wireless is not being done. Please set up by the wireless utilities.
E1200464	[Message]	Failed in starting simulator.
E1200465	[Message]	Not enough memory in starting simulator.
E1200466	[Message]	The value which is set as a RBASE register value or the PE which is set as a target core of the RBASE register value is not correct.
E1200467	[Message]	The value set for the Option bytes is incorrect.
	[Explanation]	Confirm the setting of the option bytes value in the Flash Options Setting dialog box.
E1200512	[Message]	Verification error occurred. Failed in writing memory.
E1200672	[Message]	Bus hold error.
E1200674	[Message]	Can not compulsory break.
E1200675	[Message]	Reset under continuation.
E1200722	[Message]	Not enough memory for trace-buffer.
E1200768	[Message]	User program is running.
E1200769	[Message]	User program has been stopped.
E1200770	[Message]	User program is being traced.
E1200771	[Message]	Not traced.
E1200772	[Message]	Trace memory is not set.
E1200774	[Message]	No trace block exists.
E1200775	[Message]	No event condition exists.
E1200776	[Message]	No timer measurement is done.
E1200777	[Message]	No trigger frame exists.
E1200778	[Message]	Tracer is being stopped.
E1200779	[Message]	Specified snap-event has not been registered.
E1200780	[Message]	Specified stub-event has not been registered.
E1200781	[Message]	Timer is running.

E1200782	[Message]	Memory copy area is overlapped.
E1200783	[Message]	Trace has been already set.
E1200784	[Message]	Event condition is not set.
E1200785	[Message]	Too many valid timer event conditions.
E1200786	[Message]	Specified timer event is not set.
E1200787	[Message]	Illegal map range.
E1200788	[Message]	Only trace delay mode can set with delay trigger.
E1200789	[Message]	Delay trigger cannot set without trace delay mode.
E1200790	[Message]	Overflowed the number of mapping.
E1200928	[Message]	Target is not turned on.
	[Action by User]	Check the power supply of the target board.
E1200929	[Message]	Step execution is being done.
E1200930	[Message]	Timer and Tracer are running.
E1200931	[Message]	Event link and BRS events are mixed.
E1200932	[Message]	Specified DMM number has not been registered.
E1200976	[Message]	Back-trace is being executed.
E1200977	[Message]	Back-trace is being stopped.
E1200978	[Message]	Back-trace execution point overrun oldest frame.
E1200979	[Message]	Register status or Memory status cannot be set up other than Phase of event link.
E1200980	[Message]	No back-trace information exists.
E1200981	[Message]	Last command can not be backstepped.
E1201024	[Message]	Illegal condition.
E1201025	[Message]	Result of timer measurement overflowed.
E1201026	[Message]	Too many event conditions with path count.
E1201027	[Message]	Too many address range conditions.
E1201028	[Message]	Too many simultaneously-usable-event conditions.
E1201029	[Message]	Too many snap-events.
E1201030	[Message]	Too many stub-events.
E1201031	[Message]	Too many initialization data.
E1201032	[Message]	Too large search data (> 16 byte).
E1201033	[Message]	Too large search data (> search range).
E1201034	[Message]	Too many event link conditions.
E1201184	[Message]	Software break conditions number overflow.
E1201185	[Message]	Not enough memory for emulation.
E1201186	[Message]	Too many partition of bus size.
E1201187	[Message]	Too many execution-event conditions.

E1201188	[Message]	Too many bus-event conditions.
E1201190	[Message]	Too many DMM number conditions.
E1201232	[Message]	Specified event has been already use.
E1201376	[Message]	Settings have to be mutually exclusive.
E1201377	[Message]	Data to be written to a memory other than flash memory was included.
E1201378	[Message]	Access to flash memory is not supported.
E1201379	[Message]	The specified timer number cannot be used because it is already being used by another timer or for performance measurement.
E1201380	[Message]	The specified performance number cannot be used because it is already being used by the timer.
E1201381	[Message]	The specified event is currently being used by the slave.
E1201382	[Message]	The number of specified events is greater than the settable number of events.
E1201383	[Message]	The specified area is not accessible because it encompasses multiple memory resources in the MCU.
E1201384	[Message]	The core with the specified number is not currently selectable since it is disabled.
E1201424	[Message]	The trace recording start processing did not end normally.
E1201425	[Message]	The trace recording stop processing did not end normally.
E1201426	[Message]	Acquisition of data stored in the trace buffer in the TRC did not finish during the trace recording stop processing.
E1201427	[Message]	Trace functions were not implemented.
E1201428	[Message]	The selected trace function was not implemented.
E1201429	[Message]	The trace output was invalid.
E1201430	[Message]	The specified slave resource was not installed in the MCU and therefore it could not be set.
E1201431	[Message]	The specified performance measurement function was not installed in the MCU and therefore it could not be set.
E1201432	[Message]	The function to issue a break for peripheral macros was not installed in the MCU and therefore it could not be set.
E1201433	[Message]	The specified slave resource was not installed in the TEU and therefore it could not be set.
E1201434	[Message]	The specified area is not accessible because it does not support access from the MAU.
E1201435	[Message]	Incorrect ID Code.
E1201536	[Message]	Could not allocate memory required for starting the debug tool.
	[Action by User]	Terminate the software running on the host PC.
E1201537	[Message]	Not enough resource of operating system.
E1202819	[Message]	Use emulator and a device file are a mismatch.

E1202820	[Message]	Target power mode mismatch.
	[Action by User]	Though a setting to supply power from the emulator has been made, power is already being supplied to the target board. Check the setting of the [Power target from the emulator (MAX 200mA)] property of the [Connect Settings] tab of the debug tool.
E1202848	[Message]	This event number can not be used.
E1202854	[Message]	Hot plug-in failed.
E1202855	[Message]	User data is written to the debug monitor area. Before starting, please set "Yes" to "Erase flash ROM when starting".
E1202856	[Message]	On-chip Debug Option Byte controlling value is invalid. Before starting, please set "Yes" to "Erase flash ROM when starting".
E1202857	[Message]	Can not write the flash memory because the clock frequency is beyond the limits of regulations. It may be avoidable by the following setting change or processing change. - Select the frequency value of the External clock source with a [Main clock frequency] property. - Select the [System] with a [Monitor clock] property. - Change from a system clock to a main clock by SFR rewriting.
	[Explanation]	Flash programming has been stopped because the sub-clock is currently selected as the operating clock or the value of [Main clock frequency] in the debugger exceeds the limit. [RL78 OCD]
E1202913	[Message]	Section Trace event conditions overflow.
E1202918	[Message]	Cannot use the break before execution event and the software break at the same time.
E1202976	[Message]	FPGA data file was not found.
E1202977	[Message]	The smaller FPGA data version of the emulator version.
E1202978	[Message]	The larger FPGA data version of the emulator version.
E1202979	[Message]	Version of the specified FPGA data was not found.
E1202980	[Message]	Failed in initializing FPGA or failed in writing FPGA data.
E1202981	[Message]	Use emulator and a transfer of flash firmware version are a mismatch.
E1203072	[Message]	Monitor file read error.
E1203073	[Message]	During access of register, CPU did timeout.
E1203074	[Message]	During access of memory, CPU did timeout.
E1203075	[Message]	During access of I/O register, CPU did timeout.
E1203076	[Message]	Flash memory information file was not found or failed in reading the file.
E1203077	[Message]	Failed in updating monitor code.
E1203102	[Message]	There is no instruction code necessary of pseudo emulation for the flash self-programming function.
E1203103	[Message]	Rewriting security ID code directly is prohibited.

E1203104	[Message]	Guarded area can not be accessed.
	[Action by User]	Data in a guarded area is included in the download data. Check the following. <ol style="list-style-type: none"> (1) Check the link map file generated by the build tool. Confirm that there is no section allocated to an address in a guarded area of the device. (2) Check the allocated state of the address of the relevant section. Check the property in the [Section] category on the [Link Options] tab of the build tool. Confirm that the address of the relevant section is not set in a guarded area of the device. If it is set, change the section address. If no section has been specified, the address is automatically allocated to a memory area where there is space. Since this may cause the address to be allocated to a guarded area, specify an appropriate section.
E1203105	[Message]	Memory was unready status.
E1203107	[Message]	Bus hold under continuation.
E1203108	[Message]	It cannot shift to debug mode.
	[Explanation]	There may be a problem with the connection to the target system. <ol style="list-style-type: none"> (1) The clock may be stopped or slow. (2) This occurs when there is no response from the monitor program after a reset cancellation. [MINICUBE2]
	[Action by User]	The combination of the target microcontroller and device file may be incorrect. Another possibility is the microcontroller entering the runaway state during the preparation period for communication. Erase code flash using a programmer (Renesas Flash Programmer or PG-FP5) or other tool and then reconnect.
E1203109	[Message]	Flash macro service ROM was accessed or stepped in.
E1203110	[Message]	FLMD terminal is in a write-protected state.
E1203111	[Message]	Security flag is in a write-protected state.
E1203112	[Message]	Writing of flash memory is not made. Internal RAM is not enough or may have deteriorated internal flash memory.
	[Action by User]	Replace the POD. [Full-spec emulator] Replace the chip. [MINICUBE][MINICUBE2][E1/E20]
E1203113	[Message]	Failed in blank check flash memory. May have deteriorated internal flash memory.
	[Action by User]	Replace the POD. [Full-spec emulator] Replace the chip. [MINICUBE][MINICUBE2][E1/E20]
E1203114	[Message]	Failed in erasing flash memory. May have deteriorated internal flash memory.
	[Action by User]	Replace the POD. [Full-spec emulator] Replace the chip. [MINICUBE][MINICUBE2][E1/E20]
E1203115	[Message]	Failed in writing flash memory. May have deteriorated internal flash memory.
	[Action by User]	Replace the POD. [Full-spec emulator] Replace the chip. [MINICUBE][MINICUBE2][E1/E20]

E1203116	[Message]	Failed in internal verification flash memory. May have deteriorated internal flash memory.
	[Action by User]	Replace the POD. [Full-spec emulator] Replace the chip. [MINICUBE][MINICUBE2][E1/E20]
E1203117	[Message]	Failed in writing flash memory.
	[Action by User]	Check whether the main clock frequency actually input to the device matches the setting of the [Main clock frequency [MHz]] property of the [Connect Settings] tab of the debug tool.
E1203118	[Message]	There is no response from flash macro service. May have deteriorated internal flash memory.
	[Action by User]	Replace the POD. [Full-spec emulator] Replace the chip. [MINICUBE][MINICUBE2][E1/E20]
E1203119	[Message]	Response from flash macro service is not right. May have deteriorated internal flash memory.
	[Action by User]	Replace the POD. [Full-spec emulator] Replace the chip. [MINICUBE][MINICUBE2][E1/E20]
E1203120	[Message]	Flash I/O register operation prohibition setup needs to be canceled.
E1203121	[Message]	STOP mode under continuation. Can not compulsory break. Please release STOP mode or reset the CPU.
E1203123	[Message]	Disabling the on-chip debug function is prohibited.
E1203124	[Message]	Writing to the on-chip debug reserved area is prohibited.
E1203125	[Message]	The program for flash writing cannot be written in internal RAM.
E1203126	[Message]	Abnormal Internal ROM size. The size is different from the default of the device.
E1203127	[Message]	The voltage is too low to operate flash programming.
E1203128	[Message]	Extended monitor area is not blank.
E1203129	[Message]	Real-time RAM monitoring failed.
E1203130	[Message]	Writing the DataFlash area is not supported.
	[Action by User]	Check that the device has data flash memory.
E1203131	[Message]	Can not write the DataFlash memory because of it is not in the DataFlash environment.
E1203132	[Message]	External flash memory information is not set.
E1203133	[Message]	Can not erase external flash memory.
E1203134	[Message]	Can not write external flash memory.
E1203135	[Message]	The intended value is not permitted for on-chip debugging.
E1203136	[Message]	Status of effective event conditions cannot be changed.
E1203137	[Message]	Coverage test is being executed.
E1203138	[Message]	Monitor has failed in shift in the debugging mode. Please reset the CPU.
E1203139	[Message]	Connection of emulator cannot be performed.
	[Action by User]	The main emulator unit of the full-spec emulator may have been disconnected from the POD. Check the connection state of the main emulator unit of the full-spec emulator and the POD.

E1203140	[Message]	Dropped the trace packet data.
E1203141	[Message]	Inside of Power off reset emulation cannot carry out program execution.
E1203142	[Message]	Change of Internal ROM size or Internal RAM size or RAM monitor or DMM is not valid during Flash Self Emulation.
E1203143	[Message]	Emulation of ROM correction has already been enabled.
E1203144	[Message]	Flash programming is not permitted by the debugger setting.
E1203149	[Message]	Security unlocking failed.
	[Action by User]	Check whether the specification by the [Security ID] property of the [Connect Settings] tab of the debug tool matches the security ID set in the actual device.
E1203152	[Message]	Flash memory cannot be read or written to because the MCU is in the flash programming mode (P/E mode).
	[Action by User]	Exit from flash programming mode (P/E mode) before reading from or writing to flash resources.
E1203153	[Message]	Flash memory cannot be read or written to because the FCU firmware resource has been selected for the FCU firmware area.
E1203154	[Message]	Cannot be used because the device is in asynchronous debugging mode.
E1203155	[Message]	Cannot be used because the device is a non-target core in asynchronous debugging mode.
E1203156	[Message]	Cannot be used because another core is executing the program.
	[Action by User]	Operate after stopping execution in all cores.
E1203157	[Message]	Can not delete specified event.
E1203158	[Message]	Processing was stopped without any break request because fetching is stopped.
E1203159	[Message]	A synchronous break could not be generated because fetching is stopped.
E1203160	[Message]	A synchronous break could not be generated.
E1203161	[Message]	The XC area cannot be accessed because the AXI clock is not supplied.
E1203162	[Message]	The device cannot be set to asynchronous debugging mode.
	[Action by User]	Set a value other than [Stop] in the [Operation after trace memory is full] property in the [Trace] category on the [Debug Tool Settings] tab of the debug tool. [E1/E20]
E1203163	[Message]	Cannot be used this function because asynchronous debugging mode.
E1203164	[Message]	SerialFlash area cannot be accessed because the SerialFlash clock is not supplied.
E1203165	[Message]	SDRAM area cannot be accessed because the SDRAM clock is not supplied.
E1203166	[Message]	The item you have specified is not executable because "Initialize RAM when connecting" is "NO".
	[Action by User]	Disconnect the debug tool for the present, change the [Initialize RAM when connecting] property of the [Connect Settings] tab of the debug tool to [Yes], and then reconnect.
E1203168	[Message]	Event before execution cannot be set up other than break conditions.
E1203169	[Message]	Can not register event numbers which can not be used for hardware break.
E1203170	[Message]	Event numbers reserved for hardware breaks can not be used.
E1203171	[Message]	Event link conditions cannot set.

E1203172	[Message]	Too many ROM-emulation-RAM areas.
E1203175	[Message]	Writing to two flash memory blocks is prohibited.
E1203176	[Message]	Cannot emulate of ROM correction in undefined code.
E1203177	[Message]	The address outside the DataFlash area was specified.
	[Action by User]	Make sure no specification exceeds the range of the data flash area.
E1203178	[Message]	The address outside the external flash memory area was specified.
E1203179	[Message]	A pseudo interrupt was set for an event that had already been used for another purpose.
E1203180	[Message]	This setting cannot be made for the selected trace resource.
E1203181	[Message]	The specified event cannot be processed because its event number is for another core.
E1203182	[Message]	The specified timer cannot be processed because its timer number is for another core.
E1203184	[Message]	DCU cannot be accessed.
	[Action by User]	<p>There is a possibility that communication between the PC, emulator, and target microcontroller has been disconnected during connection. Stop the power supply to the target board for the present and check whether connection or settings of the target board is normal.</p> <p>[RH850]</p> <p>(1) Check if there is a possibility that an internal reset (WDT reset, etc.) has occurred.</p> <p>The flash memory of the RH850/F1L has an extended area (option byte) where data specified by the user can be held for various purposes. This option byte can enable or disable the WDT or specify the start mode. Because of this, when an internal reset by the WDT occurs when the E1/E20 emulator is connected, connection to the E1/E20 emulator fails.</p> <p>If tools cannot be connected after the option byte has been changed, it is highly probable that the above phenomenon is the cause. Therefore, after changing the option byte to its initial value, reconnect the tools. If the option byte has not been changed, after initializing the flash area with a programmer (Renesas Flash Programmer or PG-FP5) or changing the program to enter an infinite loop at the reset vector address just to make sure, reconnect the tools.</p> <p>(2) Check if a transition to standby mode or an internal reset has occurred due to an existing program.</p> <p>After initializing the flash area with a programmer (Renesas Flash Programmer or PG-FP5) or changing the program to enter an infinite loop at the reset vector address, reconnect the tools.</p>
E1203185	[Message]	Reset cannot be performed.
E1203186	[Message]	Monitor memory cannot be accessed.
	[Action by User]	The main emulator unit of the full-spec emulator may have been disconnected from the POD. Check the connection state of the main emulator unit of the full-spec emulator and the POD.
E1203187	[Message]	Monitor execution cannot be performed.
E1203188	[Message]	CPU register cannot be accessed.

E1203189	[Message]	Monitor has failed in shift in the debugging mode. Please reset the CPU.
E1203190	[Message]	Initial state at the time of DCU access start is unusual.
E1203191	[Message]	DCU access is unusual.
E1203192	[Message]	Failed in reading of trace data.
E1203193	[Message]	The on-chip debug function had been disabled in the device.
E1203194	[Message]	Can not write the flash memory because the clock frequency is beyond the limits of regulations.
E1203195	[Message]	Failed in connect by LPD.
	[Action by User]	Select [Yes] in the [Set OPJTAG in LPD connection before connecting] property of the [Connect Settings] tab of the debug tool. Also, check whether the setting of the [LPD mode] property of the [Connect Settings] tab of the debug tool matches the setting of the OPJTAG bits in the option byte of the device.
E1203196	[Message]	Failed in connect. Please check the security settings.
	[Action by User]	Check whether the specification by the [Security ID] property of the [Connect Settings] tab of the debug tool matches the security ID set in the actual device.
E1203216	[Message]	Access to the DCU failed.
E1203232	[Message]	Can not communicate with Emulator. Please confirm the power of Emulator, connection of the interface cable, or I/O address of the PC interface board.
E1203233	[Message]	Monitor file not found.
E1203234	[Message]	This device file does not include the on-chip debug information.
E1203235	[Message]	Unsupported information is included in the on-chip debug information in the device file.
E1203236	[Message]	This device file does not include the IECUBE information.

E1203237	[Message]	Failed in connect. Please check the connection of the emulator and target.
	[Action by User]	<p>[RH850]</p> <p>(1) Confirm that wire connection between the microcontroller and E1/E20 emulator does not differ from the recommended circuits. Refer to the recommended circuit examples for connection given in "E1/E20 Emulator Additional Document for User's Manual (Notes on Connecting RH850/F1L)" and check connection. Communication may not be successful if wire connection is different from that for recommended circuits.</p> <p>Example The RESET pin has not been pulled up. The pin is processed incorrectly. The pull-up/pull-down resistor values are not the recommended values.</p> <p>(2) Check if there is no problem with processing of debugging-related pins that are not used by the E1/E20 emulator. Debugging-related pins that are not used by the E1/E20 emulator must be processed as unused pins. For processing to be applied to unused pins, refer to the user's manual of the device in use.</p> <p>(3) Check if there is no mistake in the settings for connection made with the following properties.</p> <ul style="list-style-type: none"> - [Main clock frequency [MHz]] property of [Connect Settings] tab of the debug tool - [LPD mode] property of [Connect Settings] tab of the debug tool - [Power target from the emulator (MAX 200mA)] property of [Connect Settings] tab of the debug tool <p>(4) Check if there is no problem with the signal quality of the debugging-related pins. Make sure whether a stable prescribed voltage is supplied to the debugging-related pins or there is no problem with the signal level.</p> <p>(5) Check if there is a possibility that the AC specifications are not satisfied due to wiring. Lower the LPD clock frequency which is a setting for connection made with the [LPD clock frequency [kHz]] property of the [Connect Settings] tab of the debug tool. The initial value of the LPD clock frequency which is a setting for connection is "Default". Note that the default frequency differs according to the device in use. For RH850/F1L: Default = 11 MHz For RH850/E1x: Default = 16.5 MHz</p> <p>(6) Check if there is no problem with the option byte setting. When the E1/E20 emulator is used, the debugging interface of the option byte needs to be "LPD". Set [Yes] in the [Set OPJTAG in LPD connection before connecting] property of the [Connect Settings] tab of the debug tool.</p>
E1203238	[Message]	Failed in the operation of the option byte. Please check the security settings in flash.
	[Action by User]	Exchange the chip. [E1/E20]

E1203239	[Message]	Failed in the operation of the option byte. Please check the security settings in flash.
	[Action by User]	Exchange the chip. [E1/E20]
E1203240	[Message]	Failed in connect by LPD. Please check the LPD connection settings.
	[Action by User]	Check whether the main clock frequency actually input to the device matches the setting of the [Main clock frequency [MHz]] property of the [Connect Settings] tab of the debug tool. Select [Yes] in the [Set OPJTAG in LPD connection before connecting] property of the [Connect Settings] tab of the debug tool. Also, check whether the setting of the [LPD mode] property of the [Connect Settings] tab of the debug tool matches the setting of the OPJTAG bits in the option byte of the device.
E1203241	[Message]	The type of the firmware (CTFW) in the main emulator unit is incorrect.Update it with the programming tool.
E1203242	[Message]	The version of the firmware (CTFW) in the main emulator unit did not match.Update it with the programming tool.
E1203243	[Message]	The type of the FPGA (IFPGA) in the main emulator unit is incorrect.Update it with the programming tool.
E1203244	[Message]	The version of the FPGA (IFPGA) in the main emulator unit did not match.Update it with the programming tool.
E1203246	[Message]	The combination of the target MCU and emulator pod is incorrect.Update it with the programming tool.
E1203247	[Message]	Trace block can not be stepped over.
E1203251	[Message]	The version of the FPGA (TFPGA) in the emulator pod did not match.Update it with the programming tool.
E1203253	[Message]	Target is not connected.
E1203254	[Message]	Failed in connect by LPD. Please check the LPD connection settings.
E1203255	[Message]	Can not find ENV file.
	[Explanation]	Opening the ENV file (RH850Emulator.env) that is used for managing the combinations of RH850 emulator products was not possible.
	[Action by User]	Reinstall CS+.
E1203256	[Message]	Failed in reading ENV file.
	[Explanation]	The format of the ENV file (RH850Emulator.env) that is used for managing the combinations of RH850 emulator products is incorrect.
	[Action by User]	Reinstall CS+.
E1203257	[Message]	The emulator connected is over the number of restriction (4 sets).
	[Explanation]	This message appears if the CS+ is connected to a debugger while five or more E1 or E20 emulators are connected to the host machine via USB.
	[Action by User]	Ensure that no more than four E1 or E20 emulators are connected to the host machine.
E1204096	[Message]	Failed in initializing Emulator.
E1204097	[Message]	No entry exists for specified number.
E1204098	[Message]	Can not relocate internal RAM.
E1204099	[Message]	Illegal relocation address.

E1204100	[Message]	Illegal condition.
E1204101	[Message]	Invalid attribute.
E1204102	[Message]	Illegal address.
E1204103	[Message]	Not enough memory on Emulator.
E1204104	[Message]	Not enough memory for tables.
E1204105	[Message]	Already initialized.
E1204106	[Message]	Not initialized.
E1204107	[Message]	User program is running.
E1204108	[Message]	Different bus size has been already specified.
E1204109	[Message]	Too large bus size.
E1204110	[Message]	Too large bus partition size.
E1204112	[Message]	Illegal map range.
E1204113	[Message]	Failed in setting internal ROM and RAM.
E1204114	[Message]	This feature is not supported.
E1204115	[Message]	No terminal name.
E1204117	[Message]	Programmable-IOR does not exist.
E1204118	[Message]	Programmable-IOR does not movable.
E1204119	[Message]	I/O Protect mapping is possible a target attribute only.
E1204120	[Message]	Illegal internal ROM size.
E1204121	[Message]	Illegal internal ROM size or internal RAM size.
E1204122	[Message]	Specified Simulator configuration file was not found.
E1204123	[Message]	Simulator configuration file was not specified.
E1204124	[Message]	Illegal Simulator configuration file.
E1204125	[Message]	DataFlash area does not movable.
E1204126	[Message]	DataFlash area does not exist.
E1204127	[Message]	Can not be specified with ID Tag.
E1204351	[Message] [Action by User]	Can not communicate with Emulator. - There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect. - There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.
E1207614	[Message]	Error occurred inside debugger.
E1208192	[Message]	Illegal SFR/IOR name.

E1208193	[Message]	Illegal address.
E1208194	[Message]	User program is running.
E1208195	[Message]	Illegal SFR/IOR number.
E1208196	[Message]	Illegal bit number.
E1208197	[Message]	SFR/IOR of Read Protect attribute was specified.
E1208198	[Message]	Hidden SFR/IOR was specified.
E1208199	[Message]	SFR/IOR of ban read or write was specified.
E1208200	[Message]	SFR/IOR not existing was specified.
E1208201	[Message]	Device file is damaged or error is in file.
E1208202	[Message]	Illegal value specified for SFR/IOR.
E1208203	[Message]	Can not copy.
E1208204	[Message]	Not enough memory.
E1208206	[Message]	SFR/IOR area can not be accessed.
E1208207	[Message]	The specified name exceeds 15 characters.
E1208208	[Message]	SFR/IOR name characters other than the alphanumeric or under bar cannot be specified.
E1208447	[Message]	Can not communicate with Emulator.
	[Action by User]	<p>- There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p> <p>- There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p>
E1208738	[Message]	Illegal condition.
E1212288	[Message]	No mapped address was accessed.
E1212289	[Message]	Memory has different value.
E1212290	[Message]	Illegal start address.
E1212291	[Message]	Illegal end address.
E1212292	[Message]	Illegal start address and end address.
E1212293	[Message]	Illegal condition.
E1212294	[Message]	User program is running.
E1212295	[Message]	Verification error.
E1212296	[Message]	No condition specified.
E1212297	[Message]	Parameter size does not align with access size alignment.
E1212298	[Message]	Specified address does not align with access size alignment.
E1212299	[Message]	Source address does not align with access size alignment.

E1212300	[Message]	Destination address does not align with access size alignment.
E1212301	[Message]	Illegal end address.
E1212302	[Message]	Different access size in specified area.
E1212303	[Message]	Different access size both in source and destination areas.
E1212304	[Message]	Different access size in destination area.
E1212305	[Message]	Different access size, source and destination.
E1212306	[Message]	Not enough memory.
E1212307	[Message]	Failed in writing DMM.
E1212308	[Message]	Overflowed mapping area.
E1212309	[Message]	Processing was interrupted.
E1212310	[Message]	This feature is not supported.
E1212543	[Message]	Can not communicate with Emulator.
	[Action by User]	<p>- There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p> <p>- There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p>
E1216384	[Message]	Can not delete specified event.
E1216385	[Message]	Illegal table number.
E1216386	[Message]	Illegal start address.
E1216387	[Message]	Illegal end address.
E1216388	[Message]	Illegal status.
E1216389	[Message]	Illegal data.
E1216390	[Message]	Specified event number has been already used.
E1216391	[Message]	Too many same events are registered.
E1216392	[Message]	Specified event has not been registered.
E1216393	[Message]	Illegal data size.
E1216394	[Message]	Illegal mode.
E1216395	[Message]	Setting value is inaccurate.
E1216396	[Message]	Event link conditions cannot be used for section trace conditions.
E1216397	[Message]	Too many identical events are registered (≥ 32767).
E1216398	[Message]	Specified event condition does not exist.
E1216399	[Message]	Illegal event link condition.
E1216400	[Message]	Function not found.

E1216401	[Message]	Not enough memory.
E1216402	[Message]	Timer is being disabled.
E1216403	[Message]	Access size is different from its mapped bus size.
E1216404	[Message]	Can not use software break.
E1216405	[Message]	Can not use event condition specifying address range.
E1216406	[Message]	Can not change event condition.
E1216407	[Message]	Can not access word at odd address.
E1216408	[Message]	Not enough memory.
E1216409	[Message]	This feature is not supported.
E1216410	[Message]	No Event.
E1216411	[Message]	Can not use tag-event.
E1216413	[Message]	Start event and end event of timer are not made to the same setup.
E1216414	[Message]	Too many trace-events.
E1216415	[Message]	Path count cannot be set up.
E1216416	[Message]	Address range cannot be set up in event before execution.
E1216417	[Message]	Event conditions number overflow.
E1216418	[Message]	Software DMM conditions number overflow.
E1216419	[Message]	Real-time call conditions number overflow.
E1216420	[Message]	Software break call conditions number overflow.
E1216421	[Message]	Illegal snap condition.
E1216422	[Message]	Too many event conditions cannot be set as Phase1 and Phase2 of event link conditions.
E1216423	[Message]	Software break conditions number which can be set as internal ROM was overflow.
E1216424	[Message]	Software break can not be set, because internal instruction RAM area is invalid.
E1217176	[Message]	Illegal memory bank setting.
E1220480	[Message]	Illegal device file type.
E1220481	[Message]	Not enough memory.
E1220482	[Message]	Can not open device file.
E1220483	[Message]	Reading of device file went wrong.
E1220484	[Message]	Can not close device file.
E1220485	[Message]	Illegal device file format.
E1220486	[Message]	Failed in initializing Emulator.
E1220487	[Message]	Device file has broken or error is in a file.
E1220488	[Message]	Can not open device file.
E1220490	[Message]	Specified device file is illegal version.
E1220491	[Message]	Specified device file does not relocate internal RAM.
E1220492	[Message]	Failed in reading expc.ini.

E1220493	[Message]	Not enough memory.
E1221248	[Message]	Illegal device file type.
E1221249	[Message]	Not enough memory.
E1221250	[Message]	Can not open database file.
E1221251	[Message]	Reading of database file went wrong.
E1221252	[Message]	Can not close database file.
E1221253	[Message]	Illegal database file format.
E1221254	[Message]	Database information has been already initialized.
E1221255	[Message]	Database information does not exist.
E1221256	[Message]	Can not open specified database file.
E1221257	[Message]	Specified database file is illegal version.
E1224576	[Message]	Current function does not exist.
E1224577	[Message]	Illegal symbol name.
E1224578	[Message]	Illegal condition.
E1224579	[Message]	Illegal function name.
E1224580	[Message]	Overflowed output buffer size.
E1224581	[Message]	Illegal expression.
E1228672	[Message]	Illegal mode.
E1228673	[Message]	User program is running.
E1228674	[Message]	User program has been stopped.
E1228675	[Message]	Trace enabled.
E1228676	[Message]	Trace memory is not set.
E1228677	[Message]	Function return address does not exist, can not do step execution.
E1228690	[Message]	Not enough memory.
E1228926	[Message]	Bus hold error.
E1228927	[Message]	Can not communicate with Emulator.
	[Action by User]	<p>- There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p> <p>- There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p>
E1230721	[Message]	Canceled step wait.
E1230722	[Message]	End waiting state of step execution was canceled.
E1232512	[Message]	Aborted step execution.

E1232514	[Message]	Suspended step execution.
E1232515	[Message]	Failed in canceling RUN/STEP.
E1232516	[Message]	Can not execute non-mapped area.
E1232517	[Message]	This feature is not supported.
E1232768	[Message]	Specified file was not found.
E1232769	[Message]	Illegal line number.
E1232770	[Message]	Current information is not set.
E1232771	[Message]	Illegal address.
E1232772	[Message]	This feature is not supported.
E1236864	[Message]	Specified register symbol does not exist.
E1236865	[Message]	Specified register symbol ID does not exist.
E1236866	[Message]	Illegal value.
E1236867	[Message]	Illegal condition.
E1236868	[Message]	Too large register size.
E1236869	[Message]	This feature is not supported.
E1236870	[Message]	Please change PSW register not by 1-bit but by 8-bits.
E1240961	[Message]	Illegal expression.
E1240962	[Message]	Start address is bigger than the end address.
E1240963	[Message]	Illegal source path.
E1240964	[Message]	Too long expression.
E1240965	[Message]	Not enough memory.
E1240966	[Message]	Illegal argument.
E1240967	[Message]	Illegal program number.
E1240968	[Message]	Source path is not set.
E1240969	[Message]	File not found.
E1240970	[Message]	Can not open file.
E1240971	[Message]	Can not close file.
E1240972	[Message]	Failed in reading file.
E1240973	[Message]	Not source file of load module.
E1240974	[Message]	Illegal line number.
E1240975	[Message]	Variable does not exist.

E1240976	[Message]	Can not communicate with Emulator.
	[Action by User]	<p>- There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p> <p>- There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p>
E1240977	[Message]	Can not access register.
E1240978	[Message]	Can not access memory.
E1240979	[Message]	Reading of file went wrong.
E1240980	[Message]	It was going to open the binary file.
E1240981	[Message]	Can not get temporary path.
E1240982	[Message]	Can not create temporary file.
E1240983	[Message]	Can not remove temporary file.
E1240992	[Message]	This feature is not supported.
E1240993	[Message]	Symbol assigned to register cannot be specified.
E1240994	[Message]	The character which cannot be used for the folder is contained or the folder does not exist.
E1245056	[Message]	Illegal command line.
E1245057	[Message]	Program information does not exist in specified load module file.
E1245058	[Message]	File not found.
E1245059	[Message]	Function not found.
E1245060	[Message]	Selected load module different from kind(Chip) was loaded.
E1245061	[Message]	Symbol not found.
E1245064	[Message]	Illegal expression.
E1245065	[Message]	Not enough memory.
E1245066	[Message]	Illegal symbol in load module file.
E1245067	[Message]	Current program does not exist.
E1245068	[Message]	Current file does not exist.
E1245069	[Message]	Current function does not exist.
E1245070	[Message]	Current line does not exist.
E1245071	[Message]	Tag not found.
E1245072	[Message]	Failed in loading symbol information.
E1245073	[Message]	Illegal line number.
E1245074	[Message]	Too large line number.
E1245077	[Message]	Reading of file went wrong.

E1245078	[Message]	Can not open file.
E1245079	[Message]	Failed in writing file.
E1245081	[Message]	Reading of file went wrong.
E1245082	[Message]	Can not close file.
E1245083	[Message]	Too long load module file name.
E1245084	[Message]	Too many entries of the task kind.
E1245085	[Message]	Address not found.
E1245087	[Message]	Can not find structure member.
E1245088	[Message]	Can not find value.
E1245089	[Message]	There are neither debug information nor symbol information in load module file.
E1245090	[Message]	Illegal line number.
E1245091	[Message]	Current stack frame is not active.
E1245092	[Message]	Different section.
E1245094	[Message]	Too many array dimensions (> 4).
E1245095	[Message]	Found end of file.
E1245096	[Message]	This feature is not supported.
E1245097	[Message]	Illegal address.
E1245098	[Message]	Can not communicate with Emulator.
	[Action by User]	<ul style="list-style-type: none"> - There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect. - There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.
E1245099	[Message]	Can not stack trace with current PC value.
E1245100	[Message]	Too many blocks for one function.
E1245101	[Message]	Illegal argument.
E1245102	[Message]	The file does not exist in the SOURCE PATH.
E1245103	[Message]	Information has been deleted because of optimization.
E1245104	[Message]	Monitor timed out.
E1245105	[Message]	Already set in memory.
E1245106	[Message]	Out of scope.
E1245107	[Message]	LP is not stored.

E1245108	[Message]	Return execution from present PC position cannot be performed.
	[Action by User]	Return cannot be executed if the PC is located at other than the start address of a source line (an error appears). Since it is not at the start address of a source line immediately after executing a return, it is not possible to execute returns consecutively. Execute a return after executing a step at the source level, so that the PC indicates the start address of the next line.
E1245109	[Message]	Return-out execution from current PC position cannot be performed, please execute source mode step before return-out execution
E1245111	[Message]	Too Many Line-Numbers Information.
E1245112	[Message]	Compiler version mismatch.
E1245113	[Message]	Failed in loading debug information.
E1245114	[Message]	No more section information.
E1245120	[Message]	Specified file is not load module.
E1245121	[Message]	Too many files in load module to download.
E1245870	[Message]	Illegal port number.
E1245871	[Message]	Illegal port name.
E1245872	[Message]	Illegal port position.
E1245873	[Message]	Illegal increment number.
E1245874	[Message]	Port for memory bank is not set.
E1245875	[Message]	Illegal bank number.
E1245876	[Message]	Area for memory bank is not set.
E1249153	[Message]	Can not open file.
	[Action by User]	The load module to be downloaded is a load module of the active project. Check if the project you wish to debug has been made active. Also make sure a load module of an unbuilt active project is not attempted to be downloaded.
E1249154	[Message]	Can not close file.
E1249155	[Message]	Reading of file went wrong.
E1249156	[Message]	Reading of file went wrong.
E1249157	[Message]	Illegal file type.
E1249158	[Message]	Kind(Chip) of load module is illegal.
E1249159	[Message]	Specified file is not load module.
E1249160	[Message]	Specified load module file (ELF) is old version.
E1249161	[Message]	Not enough memory.
E1249162	[Message]	No mapped address was accessed.
E1249163	[Message]	Load module is not loaded.
E1249164	[Message]	Illegal argument.
E1249165	[Message]	User program is running.
E1249166	[Message]	User program is being traced.
E1249167	[Message]	Interrupted.

E1249168	[Message]	Can not communicate with Emulator.
	[Action by User]	<p>- There may have been an error in the USB communication (e.g. power or cable disconnected), or the IECUBE may be malfunctioning. [IECUBE] Select [Debug]->[Disconnect from Debug Tool], then turn off the power to the IECUBE. After checking the connection, turn the power of the IECUBE back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p> <p>- There may have been an error in the USB connection (e.g. power or cable disconnected), or the MINICUBE or MINICUBE2 may be malfunctioning. [MINICUBE] [MINICUBE2] Select [Debug]->[Disconnect from Debug Tool]. After checking the connection, turn the power back on, then select [Debug]->[Connect to Debug Tool] to reconnect.</p>
E1249169	[Message]	Illegal load module file format.
E1249170	[Message]	Check sum error.
E1249171	[Message]	Too wide address range to upload (> 1M byte).
E1249172	[Message]	Failed in writing file.
E1249173	[Message]	Illegal program number.
E1249174	[Message]	Load information is full.
E1249176	[Message]	Specified file is not load module.
E1249177	[Message]	Failed in writing memory.
E1249179	[Message]	Programmable-IOR address not specified.
E1249182	[Message]	Flash erase is not supported.
E1249183	[Message]	This feature is not supported.
E1249185	[Message]	The debugger can't download at high speed because the object file has the code out of the internal ROM and the internal RAM.
E1249186	[Message]	Please specify the start address and area by 4 bytes boundary.
E1249187	[Message]	Specified file is not hex file.
E1253248	[Message]	Error occurred inside debugger.
E1253249	[Message]	Not enough memory.
E1253250	[Message]	Failed in reading initialization file (expc.ini).
E1253251	[Message]	Emulator is not connected.
E1253252	[Message]	Can not find Dynamic Link Library.
E1253254	[Message]	Unable to connect to the emulator (...).
	[Action by User]	<p>Check if the emulator is connected to the host PC. Check if any other software is using the emulator in the host PC.</p>
E1257344	[Message]	Illegal argument.
E1257345	[Message]	Illegal start address.
E1257346	[Message]	Illegal end address.
E1257347	[Message]	Too large size.
E1257348	[Message]	Can not open file.
E1257349	[Message]	Failed in reading file.

E1257350	[Message]	Reading of file went wrong.
E1257351	[Message]	Failed in writing file.
E1257352	[Message]	Not enough memory.
E1257353	[Message]	Illegal file format.
E1257354	[Message]	Verification error.
E1257360	[Message]	This feature is not supported.
E1257361	[Message]	Load it outside the mapping area.
E1265535	[Message]	Interrupted.
E1310000	[Message]	Can't allocate memory.
	[Explanation]	Could not obtain memory required for processing.
	[Action by User]	Close other applications or increase Windows' virtual memory, then acquire the memory.
E1310001	[Message]	Can't open file.
	[Explanation]	Could not open the specified file.
	[Action by User]	Make sure that the file exists, and check its attributes.
E1310002	[Message]	Illegal file format.
	[Explanation]	The format of the specified file is invalid.
	[Action by User]	Make sure that the attributes of the specified file (Open File dialog box) are correct, and check the contents of the file.
E1310003	[Message]	Can't write file.
	[Explanation]	Could not write to the specified file.
	[Action by User]	Make sure that the file exists, check its attributes, and make sure that there is enough disk space.
E1310180	[Message]	A user model file is not specified.
	[Explanation]	No user model file was specified for loading a user model into the configuration file.
	[Action by User]	Specify a user model file.
E1310181	[Message]	Can't open the user model file.
	[Explanation]	Cannot open the specified user model file, or there is no MakeUserModel function.
	[Action by User]	Make sure that the file exists, check its attributes, and make sure that the MakeUserModel function exists.
E1310200	[Message]	The pin name is invalid.
	[Explanation]	The specified terminal name is incorrect (target device does not exist).
	[Action by User]	Specify the terminal name for an existing target device.
E1310440	[Message]	Program is running
	[Explanation]	Processing cannot be performed in the timing chart because the program is running.
	[Action by User]	Perform the action after halting program execution.

E1310500	[Message]	Correspondence of loop is not correct.
	[Explanation]	The loop starts and ends do not correctly correspond in the Signal Data editor.
	[Action by User]	Correct the corresponding loop starts and ends.
E1310501	[Message]	The data number exceeded maximum.
	[Explanation]	The data number (line number) in the Signal Data editor has exceeded the maximum value (1,048,576).
	[Action by User]	Edit it so that the maximum value is not exceeded.
E1310502	[Message]	The pin name is invalid.
	[Explanation]	The specified terminal name in the Signal Data editor is incorrect (target device does not exist).
	[Action by User]	Specify the terminal name for an existing target device.
E1310503	[Message]	Illegal loop count.
	[Explanation]	The loop count in the Loop Setup dialog box is invalid or outside the valid range (0 to 99).
	[Action by User]	Specify a correct value.
E1310700	[Message]	The pin name is invalid.
	[Explanation]	The specified terminal name in the I/O panel is incorrect (target device does not exist).
	[Action by User]	Specify the terminal name for an existing target device.
E1310702	[Message]	Illegal thickness of line.
	[Explanation]	The line weight specified in the I/O panel Style Settings is invalid or outside the valid range (1 to 100).
	[Action by User]	Specify a correct value.
E1310703	[Message]	Illegal hold time.
	[Explanation]	The hold time specified in the I/O panel Input Component Settings is invalid or outside the valid range (0.001 to 999).
	[Action by User]	Specify a correct value.
E1310704	[Message]	Illegal maximum input. Please input an integer from 1 to 65535.
	[Explanation]	The maximum input value specified in the I/O panel Level Gauge Settings is invalid or outside the valid range (1 to 65,535).
	[Action by User]	Specify a correct value.
E1310710	[Message]	A bitmap path is not specified.
	[Explanation]	In the I/O panel, under Add Bitmap, one or both of the active and inactive bitmaps are not set.
	[Action by User]	Specify a bitmap file.
E1310711	[Message]	A bitmap path is invalid.
	[Explanation]	In the I/O panel, under Add Bitmap, the specified bitmap file is incorrect.
	[Action by User]	Make sure that the file exists, and check its attributes.

E1310720	[Message]	Illegal active voltage(s). Please input positive integer(s).
	[Explanation]	In the I/O panel, under Analog Button Settings, non-numeric characters have been entered for the active voltage.
	[Action by User]	Enter a correct value.
E1310721	[Message]	Illegal inactive voltage. Please input a positive integer.
	[Explanation]	In the I/O panel, under Analog Button Settings, non-numeric characters have been entered for the inactive voltage.
	[Action by User]	Enter a correct value.
E1310722	[Message]	The value of active voltage(s) is over the range.
	[Explanation]	In the I/O panel, under Analog Button Settings, the active voltage is outside the valid range (0 to 65,535).
	[Action by User]	Enter a correct value.
E1310723	[Message]	The value of inactive voltage is over the range.
	[Explanation]	In the I/O panel, under Analog Button Settings, the inactive voltage is outside the valid range (0 to 65,535).
	[Action by User]	Enter a correct value.
E1310724	[Message]	Illegal default voltage.
	[Explanation]	The initial voltage specified in the I/O panel Level Gauge Settings is invalid or outside the valid range (0 to the maximum input value setting).
	[Action by User]	Enter a correct value.
E1310730	[Message]	Can't change any properties while program is running.
	[Explanation]	The object property sheet cannot be manipulated in the I/O panel while the program is running.
	[Action by User]	Perform the action after halting program execution.
E1310740	[Message]	Program is running
	[Explanation]	Processing cannot be performed in the I/O panel because the program is running.
	[Action by User]	Perform the action after halting program execution.
E1310800	[Message]	The interface address is invalid.
	[Explanation]	The setting interface address is invalid in standard library interface page.
	[Action by User]	Set a correct value.
E1310900	[Message]	Illegal baudrate value.
	[Explanation]	The baud rate specified in the Format Settings dialog box (UART) is not a valid number.
	[Action by User]	Refer to the User's Manual for the device, and specify an integral value within the appropriate range.
E1310901	[Message]	Illegal transfer clock value.
	[Explanation]	The transfer clock value specified in the Format Settings dialog box (CSI) is not a valid number.
	[Action by User]	Refer to the User's Manual for the device, and specify an integral value within the appropriate range.

E1310902	[Message]	Illegal data bit length.
	[Explanation]	The data bit length set in the Format Settings dialog box (UART) or Format Settings dialog box (CSI) is outside the valid range (integral value of 32 or lower).
	[Action by User]	Specify an integral value in the valid range.
E1319999	[Message]	The internal error occurred.
	[Explanation]	An internal error has occurred.
	[Action by User]	Please contact your vendor or your Renesas Electronics overseas representative.
E1700000	[Message]	Failed to initialize the Python Console.
	[Action by User]	Reinstall CS+.
E1700001	[Message]	Failed to save the content that display on the Python Console.
	[Action by User]	Check the save destination of the file.
E1700010	[Message]	Failed to start the Python Console.
	[Action by User]	Restart CS+. If this does not resolve the problem, reinstall CS+.
E1700011	[Message]	Failed to set font and color of the Python Console.
	[Action by User]	Restart CS+.
E1700100	[Message]	Failed to parse the input string.
E1700200	[Message]	Failed to display the history.
E1700201	[Message]	Failed to add the history.
E1700202	[Message]	Failed to get the history.
E1700203	[Message]	Failed to clear the history.
E1700210	[Message]	The specified argument is invalid. Please specify only one argument.
	[Explanation]	This appears when argument is specified in case of all except for 1 by an argument of the CUI mode.
	[Action by User]	Specify only one argument.
E1700300	[Message]	This problem may occur if it fails to compile the script file.
	[Explanation]	This message appears in case of failure to compile a script file.
	[Action by User]	Correct the script file.
E1700301	[Message]	Failed to run the script file. [direct cause]
	[Explanation]	This message appears in case of failure to execute a script file.
	[Action by User]	Solve the problem displayed as [direct cause].
E1700400	[Message]	Failed to write to the Output panel. [direct cause]
	[Explanation]	This message appears in case of failure to output a message to the Output panel.
E1700401	[Message]	Failed to get the Output panel contents. [direct cause]
	[Explanation]	This appears when acquisition of the contents displayed in the Output panel failed.
	[Action by User]	Solve the problem displayed as [direct cause].

E1700407	[Message]	Path contain invalid character.
	[Action by User]	Specify a correct file path.
E1710000	[Message]	The exception was generated by Python function for CS+. [direct cause]
E1710001	[Message]	The debugger is not connected. Please connect it with the debugger.
	[Action by User]	Connect with a debugger.
E1710007	[Message]	It was not possible to write it at the specified address.
E1710008	[Message]	Failed to read from the specified address.
E1710010	[Message]	Failed to copy.
E1710011	[Message]	Failed to fill.
E1710015	[Message]	Failed to identify the address. Please confirm the address.
E1710017	[Message]	The file already exists.
	[Explanation]	This message is shown, when the overwrite option is not specified and a file exists at an upload destination.
	[Action by User]	Specify the overwrite option or change the upload destination or delete a file in an upload destination.
E1710019	[Message]	Failed in upload. [direct cause]
E1710020	[Message]	Failed to upload. [direct cause]
E1710021	[Message]	The specified RunOption is illegal.
E1710022	[Message]	Failed to step-in/step-over. [direct cause]
E1710023	[Message]	The specified StepOption is illegal.
E1710024	[Message]	Failed to stop the debugging tool. [direct cause]
E1710025	[Message]	Failed to display the stack trace. [direct cause]
E1710026	[Message]	Failed to obtain the PC value. [direct cause]
E1710027	[Message]	Failed to clear the coverage data. [direct cause]
E1710028	[Message]	The function name must be specified.
E1710029	[Message]	Failed to read the coverage data. [direct cause]
E1710030	[Message]	Failed to obtain the coverage data.
E1710031	[Message]	XRunBreak can only be used in the simulator environment.
E1710033	[Message]	The unit of the input break set time is illegal. Please input the value within the range of 0 - 4.
E1710034	[Message]	Failed to set XRunBreak. [direct cause]

E1710035	[Message]	Failed to refer XRunBreak. [direct cause]
E1710036	[Message]	Sum of time-tag can only be used in the simulator environment.
E1710037	[Message]	Cannot use the sum of time-tag option.
E1710038	[Message]	The trace control mode can only be used in the simulator and IECUBE environment.
E1710039	[Message]	Cannot use the trace control mode option.
E1710040	[Message]	The trace complement can only be used in the IECUBE environment.
E1710041	[Message]	Cannot used the trace complement option.
E1710045	[Message]	Failed to obtain the trace data. [direct cause]
E1710046	[Message]	No trace data.
E1710047	[Message]	Failed to write in. [direct cause]
E1710048	[Message]	Failed to reset. [direct cause]
E1710049	[Message]	Failed to execute the procedure step. [direct cause]
E1710050	[Message]	Could not find the specified file.
E1710051	[Message]	Please input the script file name.
E1710052	[Message]	Failed to return out. [direct cause]
E1710054	[Message]	Failed to execute the go command.
E1710055	[Message]	The coverage function is not supported in this debugger.
E1710056	[Message]	The coverage function is not supported in this environment.
E1710057	[Message]	The error occurred by referring to the coverage function. [direct cause] error message
E1710058	[Message]	The function is not supported in this debugger.
E1710059	[Message]	The function is not supported in this environment.
E1710060	[Message]	The error occurred by referring to the function function. [direct cause] error message
E1710061	[Message]	The open break function is not supported in this debugger.
E1710062	[Message]	The open break function is not supported in this environment.
E1710063	[Message]	The error occurred by the open break reference. [direct cause] error message
E1710064	[Message]	The timer function is not supported in this debugger.
E1710065	[Message]	The timer function is not supported in this environment.
E1710066	[Message]	The error occurred by referring to the timer function. [direct cause] error message
E1710067	[Message]	The trace function is not supported in this debugger.
E1710068	[Message]	The trace function is not supported in this environment.

E1710069	[Message]	The error occurred by referring to the trace facility. [direct cause] <i>error message</i>
E1710070	[Message]	The error occurred by setting the coverage function. [direct cause] <i>error message</i>
E1710071	[Message]	The error occurred by setting the function function. [direct cause] <i>error message</i>
E1710072	[Message]	The error occurred by setting the open break function. [direct cause] <i>error message</i>
E1710073	[Message]	The error occurred by setting the timer function. [direct cause] <i>error message</i>
E1710074	[Message]	The error occurred by setting the trace function. [direct cause]
E1710076	[Message]	The input value is illegal. Please input either a character string or a numerical value.
E1710077	[Message]	Failed to obtain the download information. [direct cause]
E1710079	[Message]	Failed to set the download property.
E1710081	[Message]	Failed to download. [direct cause]
E1710082	[Message]	Failed to line assemble. [direct cause]
E1710083	[Message]	Failed to disassemble. [direct cause]
E1710085	[Message]	Failed to obtain the register value. [direct cause]
E1710086	[Message]	Failed to set the register value. [direct cause]
E1710087	[Message]	Failed to erase. [direct cause]
E1710088	[Message]	The specified option is illegal.
E1710089	[Message]	Could not find the specified variable.
E1710090	[Message]	Failed to read the value of the variable. [direct cause]
E1710091	[Message]	Failed to set the value of the variable. [direct cause]
E1710092	[Message]	Failed to delete the XRunBreak. [direct cause]
E1710093	[Message]	Failed to display the editor panel. [direct cause]
E1710094	[Message]	Failed to display the disassembly panel. [direct cause]
E1710095	[Message]	Failed to display the memory panel. [direct cause]
E1710096	[Message]	The specified MemoryOption is not supported in this environment.
E1710097	[Message]	Please specify 0xyyy - 0xzzz when you specify xxx in the memory option.

E1710099	[Message]	Failed to set the memory option.
E1710100	[Message]	Failed to read the IE register.
E1710101	[Message]	Please check the connection to the debugger.
E1710102	[Message]	Failed to set the IE register.
E1710103	[Message]	Failed to refer to the DCU register.
E1710104	[Message]	Failed to set the DCU register.
E1710105	[Message]	The specified MapType is illegal.
E1710106	[Message]	Please specify the chip select information.
E1710111	[Message]	Failed to delete the breakpoint. [direct cause]
E1710112	[Message]	The specified break event was not found.
	[Action by User]	Specify the existing break event number.
E1710113	[Message]	Failed to enable the specified breakpoint. [direct cause]
E1710114	[Message]	Failed to disable the specified breakpoint. [direct cause]
E1710115	[Message]	Address condition is not set.
E1710116	[Message]	Failed to set the breakpoint. [direct cause]
E1710117	[Message]	The specified break event type is illegal. [direct cause]
	[Action by User]	Specify a correct break event type.
E1710118	[Message]	Failed to disconnect the debugger. [direct cause]
E1710119	[Message]	Failed to connect to the debugger. [direct cause]
E1710120	[Message]	The specified register was not found.
	[Action by User]	Specify the existing register name.
E1710121	[Message]	The specified debug tool is not supported.
	[Action by User]	Use a simulator or MINICUBE, MINICUBE2, IECUBE.
E1710122	[Message]	The input chip select is illegal.
	[Action by User]	Specify the value within the range of cs0 - cs7.
E1710123	[Message]	Cannot change to the specified debug tool.
	[Action by User]	Specify the debug tool it's possible to change.
E1710124	[Message]	Please connect to the debug tool before downloading.
	[Action by User]	Connect to the debug tool before downloading.
E1710125	[Message]	Cannot set the specified map type.
E1710126	[Message]	Please connect to the debug tool before executing the function.
	[Action by User]	Connect to the debug tool before executing.

E1710128	[Message]	The coverage data can only be uploaded in the simulator environment.
	[Action by User]	Upload in the simulator environment.
E1710129	[Message]	Cannot upload the coverage data.
	[Action by User]	Upload a coverage on the platform which is being supported.
E1710130	[Message]	The recycling setting of the coverage data is set to No.
	[Action by User]	Set to Yes the recycling setting of the coverage data before uploading.
E1710132	[Message]	The platform is not supported.
E1710133	[Message]	Acquisition of break factor went wrong. [direct cause]
E1710134	[Message]	The specified parameter is illegal.
	[Explanation]	This message is shown, when "None" is set in the parameter or the parameter is not specified.
E1710135	[Message]	ReuseCoverageData setting function cannot be used.
	[Explanation]	This appears when you try to configure reuse of coverage data when the platform or debugging tool does not support this setting.
	[Action by User]	Use a platform or debugging tool that supports this setting.
E1710136	[Message]	Cannot use IE Register in this Debugging Tool.
	[Explanation]	This appears when the selected debugging tool does not support the IE register.
	[Action by User]	Use a debugging tool that supports it.
E1710137	[Message]	Acquisition of cpu status went wrong. [direct cause]
	[Explanation]	This appears upon failure to obtain the CPU status.
E1710138	[Message]	Acquisition of ie status went wrong. [direct cause]
	[Explanation]	This appears upon failure to obtain the IE status.
E1710139	[Message]	The specified address is straddling boundary of endian.
	[Explanation]	This appears when the specification spans an endian boundary.
	[Action by User]	Revise your address specification.
E1710140	[Message]	Function is not supported.
	[Explanation]	This appears when a command to get or set ProcessorElement is called in a project for a product that does not support multicore.
	[Action by User]	Do not use this with products that do not support multicore.
E1710141	[Message]	It is not connected with a debugger. In changing, please connect with a debugger.
	[Explanation]	This appears when a command is called to change the processor number when the debugger is not connected.
	[Action by User]	Connect the debugger.

E1710142	[Message]	Processor element used now is the same as specified processor element.
	[Explanation]	This appears when the specified processor number is the same as the one currently in use.
	[Action by User]	Specify a processor number that is different from the one currently in use.
E1710143	[Message]	Acquisition of the processor element went wrong. [direct cause]
	[Explanation]	This appears on failure to obtain the processor number from the IDE.
E1710144	[Message]	A setup of the processor element went wrong. [direct cause]
	[Explanation]	This appears on failure to set the processor number from the IDE.
E1710145	[Message]	Function is not supported.
	[Explanation]	This appears when specific user-added information is not found when CS+ starts.
	[Action by User]	Add the user-added information, and restart.
E1710146	[Message]	Failed to set ADConvertInExcution. [direct cause]
	[Explanation]	This appears on failure to access the data collection feature.
E1710147	[Message]	Failed to get ADConvertInExcution. [direct cause]
	[Explanation]	This appears on failure to set the data collection feature.
E1710148	[Message]	ADConvertInExcution function is not supported.
	[Explanation]	This appears when the data collection feature is not supported.
E1710149	[Message]	Failed to start the trace. [direct cause]
	[Explanation]	This appears on failure to start tracing during execution.
E1710150	[Message]	Cannot start the trace.
	[Explanation]	This appears on failure to start tracing during execution.
E1710151	[Message]	Failed to start the trace. [direct cause]
	[Explanation]	This appears on failure to stop tracing during execution.
E1710152	[Message]	Cannot stop the trace.
	[Explanation]	This appears on failure to stop tracing during execution.
E1710153	[Message]	Failed to get the running state.
	[Action by User]	Connect the debugging tool.
E1710154	[Message]	Failed to get connection status.
	[Action by User]	Connect the debugging tool.
E1710155	[Message]	Failed to delete the timer event. [direct cause]
	[Explanation]	This message appears in case of failure to delete a timer event.
	[Action by User]	Solve the problem indicated as [direct cause].

E1710156	[Message]	The specified timer event was not found.
	[Explanation]	This message appears when the specified timer event does not exist.
	[Action by User]	Specify the number of a timer event that does exist.
E1710157	[Message]	Failed to enable the specified timer event. [direct cause]
	[Explanation]	This message appears when the debug tool encounters an error at the time a timer event is enabled.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710158	[Message]	Failed to disable the specified timer event. [direct cause]
	[Explanation]	This message appears when the debug tool encounters an error at the time a timer event is disabled.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710159	[Message]	Address condition is not set.
	[Explanation]	This message appears when no address condition is set for the specified timer event.
	[Action by User]	Set the address.
E1710160	[Message]	Failed to set the timer event. [direct cause]
	[Explanation]	This message appears when the debug tool encounters an error at the time a timer event is set.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710161	[Message]	The specified timer event type is illegal. [direct cause]
	[Explanation]	This message appears when the type condition of the specified timer event is illegal.
	[Action by User]	Specify a correct type.
E1710162	[Message]	Failed to delete the specified timer event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to delete a timer event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710163	[Message]	Failed to enable the timer event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to enable a timer event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710164	[Message]	Failed to disable the timer event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to disable a timer event.
	[Action by User]	Solve the problem indicated as [direct cause].

E1710165	[Message]	Failed to delete the specified breakpoint. [direct cause]
	[Explanation]	This message appears when the debugger has failed to delete a timer event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710166	[Message]	Failed to enable the breakpoint. [direct cause]
	[Explanation]	This message appears when the debugger has failed to enable a breakpoint.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710167	[Message]	Failed to disable the breakpoint. [direct cause]
	[Explanation]	This message appears when the debugger has failed to disable a breakpoint.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710168	[Message]	Failed to delete the trace event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to delete a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710169	[Message]	The specified trace event was not found.
	[Explanation]	This message appears when the specified trace event does not exist.
	[Action by User]	Specify the number of a trace event that does exist.
E1710170	[Message]	Failed to enable the specified trace event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to enable a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710171	[Message]	Failed to disable the specified trace event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to disable a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710172	[Message]	Address condition is not set.
	[Explanation]	This message appears when an address condition was not specified.
	[Action by User]	Specify an address condition.
E1710173	[Message]	Failed to set the trace event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to set a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710174	[Message]	The specified trace event type is illegal. [direct cause]
	[Explanation]	This message appears when the type condition of the specified trace event is illegal.
	[Action by User]	Solve the problem indicated as [direct cause].

E1710175	[Message]	Failed to delete the specified trace event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to delete a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710176	[Message]	Failed to enable the trace event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to enable a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710177	[Message]	Failed to disable the trace event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to disable a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710178	[Message]	Failed to set the start trace event item. [direct cause]
	[Explanation]	This message appears when the debugger was unable to set the condition for starting a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710179	[Message]	Failed to set the end trace event item. [direct cause]
	[Explanation]	This message appears when the debugger was unable to set the condition for ending a trace event.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710180	[Message]	The section timer is not supported in this debugger.
	[Explanation]	This appears when a debugger doesn't support the section timer.
E1710181	[Message]	The access event of section timer is not supported in this debugger.
	[Explanation]	This appears when a debugger support to only an event of the execution type of the section timer, when setting an event of an access type.
E1710182	[Message]	The specified processor element was not found.
	[Explanation]	This appears when the specified PE number is illegal.
	[Action by User]	Specify an existing PE number.
E1710183	[Message]	Combination break is not supported.
	[Explanation]	A combination break condition has been set but the emulator or simulator in use does not support combination breaks.
	[Action by User]	Be sure to use an emulator or simulator that supports combination breaks.
E1710184	[Message]	Failed to set the action event item. [direct cause]
	[Explanation]	This message appears when the debugger has failed to set the action event.
	[Action by User]	Take appropriate measures in response to [direct cause].

E1710185	[Message]	Failed to delete the action event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to delete the action event.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710186	[Message]	Failed to delete the specified action event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to delete the action event.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710187	[Message]	Failed to enable the action event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to enable the action event.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710188	[Message]	Failed to enable the specified action event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to enable the action event.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710189	[Message]	Failed to disable the action event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to disable the action event.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710190	[Message]	Failed to disable the specified action event. [direct cause]
	[Explanation]	This message appears when the debugger has failed to disable the action event.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710191	[Message]	The specified action event was not found.
	[Explanation]	This appears when the specified action event number is illegal.
	[Action by User]	Specify the number of an action event that does exist.
E1710192	[Message]	Address or variable expression condition is not set.
	[Explanation]	This message appears when address or variable expression condition was not specified.
	[Action by User]	Set address or variable expression condition.
E1710193	[Message]	Failed to set the access by stopping execution. [direct cause]
	[Explanation]	This message appears when the debugger has failed to set the access by stopping execution.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710194	[Message]	Failed to get the access by stopping execution. [direct cause]
	[Explanation]	This message appears when the debugger has failed to get the access by stopping execution.
	[Action by User]	Take appropriate measures in response to [direct cause].

E1710195	[Message]	Failed to set the operation after trace memory is full. [direct cause]
	[Explanation]	This message appears when the debugger has failed to set the operation after trace memory is full.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710196	[Message]	Failed to get the operation after trace memory is full. [direct cause]
	[Explanation]	This message appears when the debugger has failed to get the operation after trace memory is full.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1710197	[Message]	The specified category is not found.
	[Explanation]	This appears when the specified category is illegal.
	[Action by User]	Specify the category that does exist.
E1710198	[Message]	Access by stopping execution function cannot be used.
	[Explanation]	This message appears when the debugger does not have the function of access by stopping execution.
E1710199	[Message]	Operation after trace memory is full function cannot be used.
	[Explanation]	This message appears when the debugger does not have the function of operation after trace memory is full.
E1710200	[Message]	The specified output string is not found.
	[Action by User]	Specify the output string that does exist.
E1710201	[Message]	Output string and variable expression conditions are not set.
	[Explanation]	This appears when both the output string and the variable expression condition are not set.
	[Action by User]	Specify the output string or the variable expression condition or both.
E1710202	[Message]	Failed to occur FE level exception. [direct cause]
	[Action by User]	Solve the problem indicated as [direct cause].
E1710203	[Message]	Failed to set the receiving notification of the exception. [direct cause]
	[Action by User]	Solve the problem indicated as [direct cause].
E1710204	[Message]	Exception cause code is not set.
	[Action by User]	Specify a list of exception cause code.
E1710205	[Message]	Failed to occur EI level exception. [direct cause]
	[Action by User]	Solve the problem indicated as [direct cause].
E1710206	[Message]	Failed to get exception cause code. [direct cause]
	[Action by User]	Solve the problem indicated as [direct cause].

E1710207	[Message]	Path contain invalid character.
	[Explanation]	This message appears when the argument of the path has contained invalid characters.
	[Action by User]	Specify a correct file path.
E1710208	[Message]	Please specify the full path of data file.
	[Explanation]	This message appears when the specified file path is the relative path.
	[Action by User]	Specify the relative path.
E1710209	[Message]	The specified data file was not found.
	[Explanation]	This message appears when the specified file does not exist.
	[Action by User]	Specify the existing file.
E1710210	[Message]	Cannot restore debug tool state from the specified data file. [direct cause]
	[Explanation]	This message appears when restoring the state of the debug tool to the one saved in the file failed.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710211	[Message]	Cannot save debug tool state to the specified data file. [direct cause]
	[Explanation]	This message appears when saving the state of the debug tool to the file failed.
	[Action by User]	Solve the problem indicated as [direct cause].
E1710212	[Message]	User program is running.
	[Explanation]	This message appears when the program is running.
	[Action by User]	Stop the program if it is operating.
E1720000	[Message]	Exception was generated by Python function for CS+. [direct cause]
	[Explanation]	This appears when an unexpected exception occurs in the called function.
E1720010	[Message]	Specified file was not found in an active project.
	[Explanation]	This appears when the specified file is not in the active project.
E1720011	[Message]	Failed in the clean project. [direct cause]
	[Explanation]	This appears when cleaning of the project fails.
E1720012	[Message]	Specified build name is empty or null.
	[Explanation]	This appears when the null character or null is specified as the argument.
E1720013	[Message]	Failed in change BuildMode [direct cause]
	[Explanation]	This appears when the change of the build mode fails.
E1720014	[Message]	building acquisition of being inside went wrong. [direct cause]
	[Explanation]	This appears on failure to obtain the "building" or other flag.

E1720015	[Message]	Acquisition of a library file went wrong. [direct cause]
	[Explanation]	This appears on failure to obtain the library file.
E1720016	[Message]	Build tool was not found.
	[Explanation]	This appears when the build tool is not found.
E1720017	[Message]	It is building. demanded operation cannot be performed.
	[Explanation]	This appears when a manipulation request is received for a library file during a build.
	[Action by User]	Repeat the command when a build is not being performed.
E1720018	[Message]	Acquisition of a library file went wrong. [direct cause]
	[Explanation]	This appears on failure to obtain the library file of link option.
E1720019	[Message]	A setup of a library file went wrong. [direct cause]
	[Explanation]	This appears on failure to set the library file of link option.
E1720020	[Message]	Renewal of a dependency went wrong. [direct cause]
	[Explanation]	This appears when renewal of a dependency went wrong.
E1720021	[Message]	The not corresponding build tool is set up.
	[Explanation]	This appears when a build tool to which a Python console doesn't correspond is set up.
E1720022	[Message]	The exception occurred within the event. [direct cause]
	[Explanation]	This appears when an exception occurred in the method connected to BuildCompleted.
	[Action by User]	Modify the connected method.
E1720023	[Message]	Too many build modes.
	[Explanation]	If a non-existent build mode is specified, it is added as a new build mode. This message appears when the number of build modes exceeds the maximum.
E1720024	[Message]	Failed to get the include paths. [direct cause]
	[Explanation]	This appears when reference to [Additional include paths] in the compiler property failed.
E1720025	[Message]	Failed to set the include paths. [direct cause]
	[Explanation]	This appears when setting to [Additional include paths] in the compiler property failed.
E1720026	[Message]	The build mode name is invalid. The following characters cannot be used: \, /, :, *, ?, ", <, >, .
	[Explanation]	This appears when an illegal character is used in the build mode name.
	[Action by User]	Modify the build mode name so that it does not include an illegal character.

E1720027	[Message]	Failed to get the section start address. [direct cause]
	[Explanation]	This appears when the current linker does not support setting of the section start address.
E1720028	[Message]	Failed to set the section start address. [direct cause]
	[Explanation]	This appears when the current linker does not support setting of the section start address or when an illegal value is specified.
	[Action by User]	Correct the setting when it is illegal.
E1720029	[Message]	Failed to get the alignment of the section. [direct cause]
	[Explanation]	This appears when the current linker does not support section alignment.
E1720030	[Message]	Failed to set the alignment of the section. [direct cause]
	[Explanation]	This appears when the current linker does not support section alignment or when an illegal value is specified.
	[Action by User]	Correct the setting when it is illegal.
E1720031	[Message]	Failed to get the ROM to RAM mapped section. [direct cause]
	[Explanation]	This appears when the current linker does not support section mapping from ROM to RAM.
E1720032	[Message]	Failed to set the ROM to RAM mapped section. [direct cause]
	[Explanation]	This appears when the current linker does not support section mapping from ROM to RAM or when an illegal value is specified.
	[Action by User]	Correct the setting when it is illegal.
E1720033	[Message]	Failed to get the specified section that outputs externally defined symbols to the file. [direct cause]
	[Explanation]	This appears when the current linker does not support setting of a section from which externally defined symbols are output to a file.
E1720034	[Message]	Failed to set the specified section that outputs externally defined symbols to the file. [direct cause]
	[Explanation]	This appears when the current linker does not support setting of a section from which externally defined symbols are output to a file or when an illegal value is specified.
	[Action by User]	Correct the setting when it is illegal.
E1720035	[Message]	Failed to get the output ROMized object file. [direct cause]
	[Explanation]	This appears when the current ROMization process option does not support [Output ROMized object file].

E1720036	[Message]	Failed to set the output ROMized object file. [direct cause]
	[Explanation]	This appears when the current ROMization process option does not support [Output ROMized object file] or when an illegal value is specified.
	[Action by User]	Correct the setting when it is illegal.
E1720037	[Message]	The specified string is invalid.
	[Explanation]	This appears when an invalid string is specified.
E1720038	[Message]	More than xxx lines cannot be specified.
	[Explanation]	This appears when the maximum number of elements that can be specified in a list has been exceeded.
	[Action by User]	Specify no more than the maximum number of elements.
E1720039	[Message]	Failed to get the macro definitions of the compiler. [direct cause]
	[Explanation]	Reference to a macro definition for the compiler has failed.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1720040	[Message]	Failed to set the macro definitions of the compiler. [direct cause]
	[Explanation]	Setting of a macro definition for the compiler has failed.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1720041	[Message]	Failed to get the compiler package version. [direct cause]
	[Explanation]	Reference to the version number of the compiler package has failed.
	[Action by User]	Take appropriate measures in response to [direct cause].
E1720042	[Message]	Path contain invalid character.
	[Action by User]	Specify a correct file path.
E1720100	[Message]	The exception was generated by Python function for CS+. [direct cause]
	[Explanation]	This appears when an unexpected exception occurs in the called function.
E1720101	[Message]	Failed to close the project. [direct cause]
	[Explanation]	This appears when closing the project fails.
E1720102	[Message]	Failed to open the project. [direct cause]
	[Explanation]	This appears when opening the project fails.
E1720103	[Message]	Failed to add the project. [direct cause]
	[Explanation]	This appears when adding a file to the project fails.
E1720104	[Message]	Failed to remove the project. [direct cause]
	[Explanation]	This appears when removing a file from the project fails.

E1720105	[Message]	xxx could not be found.
	[Explanation]	This appears when the specified file was not found in the project.
E1720106	[Message]	Failed to change the active project. [direct cause]
	[Explanation]	This appears when changing the active project fails.
E1720107	[Message]	The specified project was not found.
	[Explanation]	This appears when the specified project is not found.
E1720108	[Message]	The specified project is the active project.
	[Explanation]	This appears when the specified project is set as the active project.
E1720109	[Message]	Failed to obtain project information. [direct cause]
	[Explanation]	This appears when obtaining the project information fails.
E1720110	[Message]	The specified file does not exist.
	[Explanation]	This appears when the specified file does not exist.
E1720111	[Message]	Debug tool is connected, if you want to change the project, please disconnect from the debugging tools.
	[Explanation]	This appears when attempting to change the active project while connected to a debugging tool.
E1720112	[Message]	Project is not loaded.
	[Explanation]	This appears when an action is performed on a project that is not loaded.
E1720113	[Message]	Failed to save the project. [direct cause]
	[Explanation]	This appears when saving the project fails.
E1720114	[Message]	Please enter the category specified in the string.
	[Explanation]	This appears when the specified category is not a string.
E1720115	[Message]	Failed to get the state of the project. [direct cause]
	[Explanation]	This appears on failure to obtain the current project in CS+.
E1720116	[Message]	Failed to check the file. [direct cause]
	[Explanation]	This appears on failure to check a project file.
E1720117	[Message]	xxx has already been set.
	[Explanation]	This appears when attempting to add a file that is already set in the project.
E1720118	[Message]	The specified project was not found.
	[Explanation]	This appears when the specified project path is not found.
E1720119	[Message]	Failed to close the project.
	[Explanation]	This message appears in case of failure to close a project.
E1720120	[Message]	Failed to open the project.
	[Explanation]	This message appears in case of failure to open a project.

E1720121	[Message]	The specified project file is open.
	[Explanation]	This message appears when the specified project is already open.
	[Action by User]	Specify a different project.
E1720122	[Message]	Please enter the file specification string all.
	[Explanation]	This message appears when the specified filename was not a string.
E1720123	[Message]	"File" could not be found.
	[Explanation]	This message appears when the [File] category was not found in the project.
E1720124	[Message]	Please enter the category name is in the character from 1 to 200.
	[Explanation]	This message appears when the category name is blank or null, or has a number of characters outside the range from 1 to 200.
	[Action by User]	Ensure that the category name consists of 1 to 200 characters.
E1720125	[Message]	Device information specified was not found. [direct cause]
	[Explanation]	This message appears when the specified device information was not found for the specified [MicomType].
	[Action by User]	Specify device information that does exist.
E1720126	[Message]	MicomType specified is invalid.
	[Explanation]	This message appears when the specified [MicomType] is invalid.
	[Action by User]	Specify a valid [MicomType].
E1720127	[Message]	Compiler is not supported.
	[Explanation]	This message appears when the compiler does not support the specified [MicomType], or no applicable compilers were found even though [Auto] had been specified.
E1720128	[Message]	Failed to create the project. [direct cause]
	[Explanation]	This message appears in case of failure to create a project.
	[Action by User]	Solve the problem displayed as [direct cause].
E1720129	[Message]	The specified project already exists.
	[Explanation]	This message appears when the specified project is already exists.
	[Action by User]	Delete the existing project or specify another path.
E1720130	[Message]	Program Analyzer Plug-in is not loaded.
	[Explanation]	This appears when the Program Analyzer Plug-in is not loaded.
	[Action by User]	Enable the Program Analyzer Plug-in in the Plug-in Manager dialog box.
E1720131	[Message]	Path contain invalid character.
	[Action by User]	Specify a correct file path.
E1730000	[Message]	Error Occurred during the execution.
	[Explanation]	This appears when you specified True to generate exceptions, and an exception occurred when executing Python code or a Python script.
	[Action by User]	Execute correct code and scripts.

E1730001	[Message]	Failed to compile the script.
	[Explanation]	This appears when compiling a script fails.
	[Action by User]	Specify a correct script.
E1730002	[Message]	Failed to register callback. [direct cause]
	[Explanation]	This appears on failure to register a callback class.
	[Action by User]	Initialize the server.
E1730003	[Message]	Failed to unregister the callback. [direct cause]
	[Explanation]	This appears on failure to unregister a callback class.
	[Action by User]	Initialize the server.
E1810000	[Message]	The specified parameter is incorrect.
E1810001	[Message]	An undefined emulator firmware command has been received.
E1810002	[Message]	The firmware version may be older to use the debugger.
	[Action by User]	Check that the latest firmware is in use.
E1810200	[Message]	An error has occurred in erasing of the flash ROM for storage of the emulator firmware.
E1810201	[Message]	An error has occurred in programming of the flash ROM for storage of the emulator firmware.
E1810203	[Message]	An error has occurred during FPGA configuration.
E1810306	[Message]	An error has occurred in erasing of the internal flash ROM. The flash ROM may have been degraded.
E1810307	[Message]	An error has occurred in programming of the on-chip flash ROM. The flash ROM may have been degraded.
E1810309	[Message]	The setting of the peripheral module clock (PCLK) is outside the range. Please check the setting of the input clock(EXTAL) and the system clock control register (SCKCR).
E1810316	[Message]	As "Allow to change the clock source on writing internal flash memory" is not checked, Internal flash memory can not be rewritten.
	[Action by User]	Change the [Allow to change the clock source on writing internal flash memory] property of the [Connect Settings] tab of the debug tool to [Yes] and reconnect.
E1810317	[Message]	Internal flash memory can not be rewritten. The EXTAL value is less than the lowest frequency.
E1810900	[Message]	The character count of the emulator serial number is out of range.
E1811000	[Message]	The firmware stored in the emulator does not correspond to the MCU to be debugged.
	[Action by User]	Download the correct firmware.
E1811001	[Message]	The firmware stored in the emulator is a not corresponding version.
	[Action by User]	Check that the latest firmware is in use.
E1811002	[Message]	Internal error (FFWERR_TMRCTRL_OVER).

E1811104	[Message]	ID code does not match.
	[Action by User]	Check if the input value of the [ID code] property of the [Connect Settings] tab of the debug tool is correct. If the input value is correct, confirm whether the specification of the [Input Mode of ID code] property is correct.
E1811105	[Message]	A JTAG communication error. Please retry with reducing the JTAG clock.
	[Action by User]	If connection is not possible even after lowering the JTAG clock frequency, check if the MCU and emulator are connected correctly.
E1811106	[Message]	The device ID code does not match the one for the selected device. Please check the device name.
	[Action by User]	If the device name specified at startup is incorrect, after selecting the microcontroller node in the Project Tree panel, select the correct device in [Change Microcontroller...] from the context menu.
E1811109	[Message]	The emulator failed to connect with the MCU. There is a possibility that pin states or operating mode of the MCU is not correct.
E1811113	[Message]	ID code authentication failed. Please turn the mcu off and try to re-connect with the debugger.
E1811114	[Message]	Failed to start up with user boot mode, because USB boot codes are written at the UB codes area in the internal flash ROM.
	[Action by User]	Start CS+ in single chip mode and remove the UB code area.
E1811125	[Message]	Failed to connect with the mcu. The mcu did not permit to be connected with the emulator.
E1811300	[Message]	Verification error.
E1811301	[Message]	Programming of the on-chip ROM area is not available during execution of the user program.
E1811303	[Message]	Unidentified instruction has been detected.
E1811304	[Message]	Access to the data flash ROM is not available during execution of the user program.
E1811307	[Message]	Because the access violation etc. to on-chip ROM area are generated, the flash rewriting cannot be executed.
E1811308	[Message]	The access violation to on-chip ROM was detected, and the flash rewriting was not able to be executed normally.
E1811319	[Message]	Data for MDE register is different from the endian which was specified on starting up.
E1811320	[Message]	Data for UB code is different from the operating mode, which was specified on starting up.
E1811324	[Message]	When debugging the cpu re-write mode, the internal ROM areas can not be accessed.
E1811327	[Message]	Writing process was terminated, because a voltage-monitoring 0 reset may cause a failure of the debugger. Please confirm the data for OFS1.
E1811329	[Message]	It is unable to enable "Startup Voltage Monitoring 1 Reset".
	[Action by User]	Specify a value that will disable "Startup Voltage Monitoring 1 Reset".
E1811331	[Message]	It is unable to write data to the work ram area for start/stop function.
	[Action by User]	Change the address of the work RAM area.

E1811332	[Message]	It is unable to enable the voltage monitoring 0 reset of OFS1.
	[Action by User]	Check the setting of the OFS1 register.
E1811335	[Message]	It is unable to write data to the Trusted Memory area.
	[Explanation]	You have attempted writing to the trusted memory area.
	[Action by User]	Avoid writing to the trusted memory area.
E1811401	[Message]	The event channel for the sequential combination is not correct.
E1811402	[Message]	The before PC break has overlapped with the PC event break.
E1811403	[Message]	The PC event break has overlapped with the operand access event break.
E1811406	[Message]	The performance counter is opened to user program, and the emulator debugger can not modify the setting for performance.
E1811407	[Message]	The same event has been specified for both the before-PC event and the trace start event.
E1811408	[Message]	The events used for AND/Sequential combination can not be set to the other conditions.
E1811413	[Message]	The specified function is not supported for this mcu.
E1811600	[Message]	The number of software breakpoints has exceeded the maximum value (256).
E1811601	[Message]	No software breakpoint has been set.
E1811602	[Message]	Software breakpoints cannot be set in the selected area.
E1811606	[Message]	No software breakpoints can be set in the on-chip ROM area during execution of the user program.
E1811608	[Message]	No software break points can be set in the on-chip ROM area during debugging CPU re-write mode.
E1811613	[Message]	Failed to halt the program, because the program was being reset.
E1811700	[Message]	Address areas specified for RAM monitoring overlap.
E1811702	[Message]	The RAM-monitoring block to which an address area has been assigned is disabled.
E1811703	[Message]	RAM-monitor function is not supported now.
E1811902	[Message]	Tracing is in progress.
E1811903	[Message]	There is no trace data.
E1811910	[Message]	The specified trace mode is not corresponding to the current pin count.
E1811911	[Message]	The specified address range for ROM spaces is not correct.
E1811912	[Message]	The address range for window trace is not correct.
E1811913	[Message]	Failed to stop tracing.
E1811914	[Message]	This feature is not supported for the current trace mode.
E1811915	[Message]	The trace facility doesn't work.
E1811916	[Message]	Trace function is not available.
	[Action by User]	The trace facility is not available when the coverage measurement facility is in use.
E1812100	[Message]	Address areas allocated for the coverage memory are overlapped.
	[Action by User]	Specify coverage measurement areas so that they do not overlap each other.

E1812101	[Message]	The coverage block to which an address area has been assigned is disabled.
	[Action by User]	Check the coverage measurement areas.
E1812102	[Message]	No coverage data found.
	[Action by User]	Check the coverage measurement areas.
E1812103	[Message]	Warning: Some coverage data may have been lost.
	[Action by User]	Data loss occurred and there may be a lack of data in coverage measurement results.
E1812104	[Message]	Warning: Coverage measurement failure may have occurred because of the reset operation.
	[Action by User]	There may be a lack of data in coverage measurement results before and after a reset.
E1812105	[Message]	Warning: Both coverage measurement failure caused by the reset operation and data lost may have occurred.
	[Action by User]	There may be a lack of data in coverage measurement results.
E1812106	[Message]	Coverage function is not available.
	[Action by User]	Check the connection between the emulator and the PC.
E1812500	[Message]	PPC is used by the user program.
E1812501	[Message]	PPC1 is not enabled.
E1812502	[Message]	PPC is working now.
E1812503	[Message]	The specified function is not supported for this mcu.
E1812700	[Message]	Can't invoke the Go with program break points because there's no events to use.
E1812701	[Message]	The step command is not executable because the current address is in the Trusted Memory area.
	[Explanation]	You have attempted to start stepped execution from an address in the trusted memory area. Stepped execution cannot be started from any addresses in the trusted memory area.
E1812800	[Message]	An error has occurred in erasing of the external flash ROM. The flash ROM may have been degraded.
E1812801	[Message]	An error has occurred in programming of the external flash ROM. The flash ROM may have been degraded.
E1812802	[Message]	An error has occurred in verification of the external flash ROM. The flash ROM may have been degraded.
E1812803	[Message]	Failed to read data. The external bus setting would be incorrect.
E1812804	[Message]	Maker ID or device ID for the external flash ROM is not corresponding. ([0XXXXXXXX-0XXXXXXXX] Maker ID=XXXX(expected value:XXXX), Device ID=XXXX(expected value:XXXX))
E1812805	[Message]	Script file for the external flash ROM is not found.
E1812806	[Message]	The verify error occurred when the writing program was downloaded for external flash ROM.
E1812807	[Message]	The verify error occurred in the batch file execution before and after the writing program download for external flash ROM.
E1812900	[Message]	C2E buffer has no data.

E1813000	[Message]	The command is not executable because the user program is running.
E1813001	[Message]	The command is not executable because the user program is halted.
E1813004	[Message]	Not connected to MCU.
E1813100	[Message]	The command is not executable because the power supply to the MCU is off.
E1813101	[Message]	The command is not executable because the signal on the reset pin is assert status.
E1813104	[Message]	User system is not connected.
E1813105	[Message]	The power-supply voltage of the user system has already been supplied.
E1813106	[Message]	Command is not executable because the MD pin level on the target system is 'L'.
E1813201	[Message]	The command is not executable because the MCU is in the reset state.
E1813203	[Message]	The internal clock is halted because the MCU is in the standby mode.
E1813204	[Message]	The internal clock is halted because the MCU is in the sleep mode.
E1813207	[Message]	FFWERR_BMCU_DEEPSTANBY
E1813208	[Message]	The command is not executable because an internal reset of MCU was generated.
E1813403	[Message]	Failed to connect with the mcu. EMLE pin level on the target system does not come to 'H'.
E1813404	[Message]	Failed to connect with the MCU, because the emulator could not control the signal for TRSTn pin.
E1813405	[Message]	Failed to connect with the MCU, because the emulator could not control the signal for TMS pin.
E1813406	[Message]	Failed to connect with the mcu. The pin to specify user boot is not controllable.
E1813407	[Message]	Failed to connect with the mcu. MD pin is not controllable.
E1813500	[Message]	Specified baud rate is smaller than its limit.
E1813501	[Message]	Specified baud rate is larger than its limit.
E1813502	[Message]	Internal error (FFWERR_ASCII_COMERR).
E1813503	[Message]	Internal error (FFWERR_ASCII_COMOV).
E1813504	[Message]	A serial communication error (Framing error).
E1813505	[Message]	A serial communication error (Overrun error).
E1813506	[Message]	A serial communication error (Parity error).
E1813507	[Message]	A serial communication error (Sending timeout error).
E1813508	[Message]	A serial communication error (Receiving timeout error).
E1813509	[Message]	A serial communication error (Releasing reset timeout error).
E1813512	[Message]	A serial communication error (Send timeout error).
E1813600	[Message]	Failed to communicate with the mcu because its source clock of serial communication is changed. Please retry with the baud rate reduced.
E1813700	[Message]	The firmware area has been damaged. Please try to re-connect the debugger.
E1814000	[Message]	A timeout error. The power supply to the MCU is off.

E1814001	[Message]	A timeout error. The MCU is in the reset state.
	[Action by User]	<ul style="list-style-type: none"> - Check if the supplied voltage to the microcontroller is correct. - Check if the RESET pin of the microcontroller has become low.
E1814003	[Message]	A timeout error. The internal clock is halted because the MCU is in the standby mode.
E1814004	[Message]	A timeout error. The internal clock is halted because the MCU is in the sleep mode.
E1814016	[Message]	A timeout error. MCU transitioned to sleep mode.
E1814017	[Message]	ID code authentication is now invalid.
E1814300	[Message]	A timeout error. The emulator does not connected with the target system.
E1814301	[Message]	A timeout error. The command is not executable because the MCU power supply in the target system is turned off.
E1814302	[Message]	A timeout error. The command is not executable because the signal on the RESET pin is active.
E1814600	[Message]	Failed to start up with the hot plug-in. The specified endian does not match the current endian.
E1814601	[Message]	Failed to start up with the hot plug-in. The specified UB code does not match the current code.
E1814602	[Message]	Failed to start up with the hot plug-in. The specified operating mode is user boot mode.
E1815000	[Message]	A timeout error has occurred in EFW processing. The location of the error is unknown.
E1815001	[Message]	A timeout error has occurred in emulator firmware processing.
E1815002	[Message]	A timeout error has occurred in START/STOP function processing.
E1816000	[Message]	FFWERR_TRGHALT_OK
E1816100	[Message]	FFWERR_TRGHALT_NGBFWRUN
E1816101	[Message]	FFWERR_TRGHALT_NGEFWRUN
E1817000	[Message]	A fatal communication error. Disconnect the debugger and check if the emulator is correctly connected to the target board. Then turn on the power of the emulator and initiate the debugger.
E1817001	[Message]	A communication error. An incorrect start code has been received from emulator firmware. Please restart the emulator and the debugger.
E1817002	[Message]	A communication error. An incorrect command code has been received from emulator firmware. Please restart the emulator and the debugger.
E1817003	[Message]	A communication error. An undefined error code or termination code has been received from emulator firmware or the combination of the error code and termination code is incorrect. Please restart the emulator and the debugger.
E1817004	[Message]	A communication error. Incorrect data (excluding the start, command, error, and termination codes) have been received from emulator firmware. Please restart the emulator and the debugger.
E1817005	[Message]	A communication error. Failed to send a command to emulator firmware since some data remains in the buffer. This is because larger data has been received in processing of the previous command. Please restart the emulator and the debugger.

E1817006	[Message]	A communication error. At the first command sending and receiving with emulator firmware. Please restart the emulator and the debugger.
E1817007	[Message]	A communication error. The error occurred after having changed the USB forwarding size. Please restart the emulator and the debugger.
E1818000	[Message]	Could not find the firmware rewrite program. Please re-install the debugger.
E1818001	[Message]	Internal error (FFWERR_WTR_NOTLOAD). Writing control program is not loaded.
E1818002	[Message]	Unsupported operation was invoked.
	[Explanation]	This operation is not supported by the emulator.
E1818003	[Message]	Memory allocation failed.
	[Action by User]	Close unused panels so that the required amount of memory becomes available.
E1830000	[Message]	The specified parameter is incorrect.
E1830001	[Message]	The simulator version may be older to use the debugger.
	[Action by User]	Check that the simulator version is the latest.
E1830107	[Message]	Memory allocation failed.
E1830108	[Message]	An error has occurred during a memory access.
E1830200	[Message]	The number of events has exceeded the maximum value.
E1830201	[Message]	The specified event is not set.
E1830202	[Message]	The specified pass count is outside the supported range.
E1830203	[Message]	The specified data is outside the selected access size.
E1830204	[Message]	The specified data range is not correct. The compare data1 should be smaller than the compare data2.
E1830205	[Message]	The specified interrupt vector is outside the supported range.
E1830206	[Message]	The specified interrupt priority level is outside the supported range.
E1830700	[Message]	Tracing is in progress.
E1830701	[Message]	There is no trace data.
E1830702	[Message]	There is no trace data of the specified frame.
E1830800	[Message]	This function cannot be used during time measurement.
	[Action by User]	Only use this function while timer measurement is halted.
E1830801	[Message]	Specified channel number is out of range.
	[Action by User]	Specify a channel number in the specifiable range.
E1830802	[Message]	The measurement section is not being set to the specified channel number.
	[Action by User]	Specify a channel number that is set for the measurement section.
E1831301	[Message]	C2E buffer has no data.
E1831400	[Message]	I/O DLL loading failed. I/O DLL name : " <i>file name</i> "
E1831500	[Message]	The operating frequency of the system clock is outside the supported range.
E1831501	[Message]	The ratio of peripheral clock is not correct.
E1833300	[Message]	The command is not executable because the user program is running.

E1833301	[Message]	The command is not executable because the user program is halted.
E1890001	[Message]	Address range error. The starting address should be smaller than the end address.
E1890002	[Message]	Because the setting of the memory access prohibition under execution was effective, this processing was interrupted.
E1890003	[Message]	This function interrupted processing because it was not able to use it while executing it.
E1890004	[Message]	The specified address is over the maximum address of the target MCU.
E1890101	[Message]	This function cannot be used, when debugging the program which rewrites the internal flash memory.
E1890324	[Message]	The communication error occurred.
E1890400	[Message]	A number of blocks necessary for being set was not able to be secured. Please review the range of the address or release other blocks.
E1890500	[Message]	The specified range of the address exceeds the capacity of code coverage RAM (2MB).
E1890501	[Message]	The specified range of the address exceeds the capacity of code coverage RAM (1MB).
E1890502	[Message]	The code coverage function is invalid. The memory cannot be allocated.
E1890600	[Message]	The specified range of the address exceeds the capacity of data coverage RAM (512k byte).
E1890601	[Message]	The data coverage function is invalid. The memory cannot be allocated.
E1890900	[Message]	A number of blocks necessary for being set was not able to be secured. Please review the range of the address or release other blocks.
E1890901	[Message]	The specified range of the address exceeds the capacity of profile RAM (1MB).
E1891102	[Message]	The RAM monitoring block for uninitialized detection cannot be set any further.
E1891103	[Message]	The section name is empty.
E1891104	[Message]	The section name is invalid.
E1891105	[Message]	The data is empty.
E1891106	[Message]	The data is invalid.
E1891107	[Message]	The start address is empty.
E1891108	[Message]	The end address is empty.
E1891150	[Message]	Specified channel number is out of its range.
E1891151	[Message]	Because the performance is being measured, the result cannot be acquired.
E1891152	[Message]	Because the operating frequency is not set, the count value cannot be converted.
E1891200	[Message]	The number of instructions being analyzed has exceeded the maximum number of lines of disassembled code that can be displayed.
E1891201	[Message]	There is no trace data.
E1891202	[Message]	There is no trace data in the specified cycle.
E1891203	[Message]	Failed in the analysis of disassembled code.
E1891204	[Message]	Failed to get information of the trace cycle.
E1891300	[Message]	Trigger cable not connected.

E1891301	[Message]	Temporary file create failure.
E1891302	[Message]	To transfer settings to the emulator failed.
E1891304	[Message]	There are too many events.
E1891308	[Message]	Address range is over.
E1891309	[Message]	The label is invalid.
E1891310	[Message]	Address range is over.
E1891311	[Message]	The settings cannot be changed while the target program is running.
E1891312	[Message]	Now, this event condition is locked by another debugging function.
E1891313	[Message]	The trace full break settings cannot be changed while the target program is running.
E1891314	[Message]	An on-chip break point has already been set to the address.
E1891315	[Message]	The on-chip break point cannot be added any further.
E1891316	[Message]	Target event is not found.
E1891317	[Message]	Failed to get information of the event.
E1891318	[Message]	Value of the mask is invalid.
E1891319	[Message]	Value of the compare data is invalid.
E1891320	[Message]	Value of the pass count is invalid.
E1891321	[Message]	Value of the pass count exceeds the range.
E1891323	[Message]	Unable to evaluate the value. Failed to create event.
E1891324	[Message]	Value of the frequency is invalid.
E1891325	[Message]	Sequential orderxx event is incorrect or over resources.
E1891326	[Message]	The reset event for sequential combination is incorrect.
E1891327	[Message]	The event related to the other event can not be changed its enabled/disabled status.
E1891328	[Message]	Failed to enable the event.
E1891329	[Message]	The AND condition and the sequential condition are used at the same time.
E1891331	[Message]	The pass count can be set only for one event.
E1891332	[Message]	Data Access events can be used up to 3rd order.
E1891333	[Message]	The event with address range condition can be set only for the 1st order.
E1891334	[Message]	PC event is full.
E1891335	[Message]	The event with pass count can not be set as the reset event.
E1891336	[Message]	The address range condition can be set only for the one event.
E1891337	[Message]	Both the event with address range condition and the data access event at the 1st order of the sequential condition have been specified. These conditions can not be set at the same time.
E1891338	[Message]	Data access event is full.
E1891355	[Message]	Registered event count exceeds its limit of the combination condition.
E1891356	[Message]	The function is not selectable because the RAM-function is enabled.

E1891358	[Message]	Data Access event can not be set as the reset event.
E1891359	[Message]	Data Access events can be used up to 2nd order.
E1891360	[Message]	A PC break has already been set to the address.
E1891361	[Message]	The PC break cannot be added any further.
E1891363	[Message]	Specified event id has already been used.
E1891364	[Message]	Specified address condition is incorrect.
E1891365	[Message]	Specified access attribute is incorrect.
E1891366	[Message]	Specified access size is incorrect.
E1891367	[Message]	Specified channel is incorrect.
E1891368	[Message]	Specified measurement item is incorrect.
E1891369	[Message]	Specified event type does not support the combination AND/Sequential.
E1891372	[Message]	Specified combination condition is incorrect.
E1891373	[Message]	Specified address comparison condition is incorrect.
E1891374	[Message]	Specified data comparison condition is incorrect.
E1891375	[Message]	Specified events for the combination condition are incorrect.
E1891500	[Message]	The block cannot be set any further.
E1891501	[Message]	The table cannot be set any further.
E1891600	[Message]	The block cannot be set any further.
E1891601	[Message]	The table cannot be set any further.
E1891602	[Message]	The entire range exceeds it to 4K.
E1891603	[Message]	The input value of task ID is up to max block size.
E1891604	[Message]	The start/end address acquisition failed.
E1891605	[Message]	Task ID acquisition failed.
E1891606	[Message]	Task ID is wrong.
E1891607	[Message]	The area size is exaggerated.
E1891608	[Message]	Task ID has already been set.
E1891609	[Message]	The range has already been set.
E1891610	[Message]	Failed in the block conversion.
E1891700	[Message]	Operation was canceled.
E1891701	[Message]	Cannot detect the user system. Please check the connection between the emulator and the user system.
E1891702	[Message]	The power supply to a user system was detected. Please change the setting for the power supply from the emulator.
E1891703	[Message]	Invalid voltage setting. Please check the power supply setting.
E1891704	[Message]	Power on the user system or please change the setting for the power supply from the emulator.
E1891705	[Message]	Includes invalid value or symbol:

E1891706	[Message]	Please enter the code within xx characters.
E1891707	[Message]	Please confirm that the emulator is not connected to the user system.
E1891708	[Message]	Connect the emulator with the user system.
E1891710	[Message]	The loaded emulator firmware does not correspond to the MCU. Update now?
E1891711	[Message]	The power supply voltage has dropped.
E1891712	[Message]	This emulator can not supply power to the target. Please connect the external power to the target board.
E1891713	[Message]	The value of the main clock frequency is incorrect.
	[Action by User]	Enter the correct value in the [Main clock frequency [MHz]] property of the [Connect Settings] tab.
E1891714	[Message]	Work ram address is incorrect.
	[Action by User]	Specify an address within the range of the on-chip RAM area in the [Work RAM start address] property of the [Connect Settings] tab of the debug tool.
E1891715	[Message]	Work ram exceeds the internal RAM range.
	[Action by User]	Specify an address within the range of the on-chip RAM area in the [Work RAM start address] property of the [Connect Settings] tab of the debug tool.
E1891716	[Message]	Invalid LEVEL0 status. Unable to download the firmware.
E1891717	[Message]	The version of LEVEL0 is not corresponding to the debugger.
E1891718	[Message]	Please select the voltage.
E1891719	[Message]	Please select the MCU group and device name.
E1891721	[Message]	The power voltage has exceeded 5.9V. Please check the user system setting.
E1891722	[Message]	Updating of the firmware has been completed. Click on the [OK] button. If you are using the E1, disconnect the USB interface cable and then re-connect it. If you are using the E20, turn off the power for the emulator and then turn it on again.
E1891723	[Message]	Invalid LEVEL EML status. Unable to download the firmware.
E1891724	[Message]	Input clock was rounded down to xx.
E1891725	[Message]	Starting up with the hot plug-in failed, because the user system has already connected to the emulator. User program was reset.
	[Action by User]	Start up the hot plug-in with the emulator disconnected from the user system. After the Message dialog box of "Hot Plug-in is prepared." has opened, connect the emulator to the user system and then click the [OK] button in the Message dialog box.
E1891726	[Message]	Failed to connect with the mcu. Please confirm the state of the MD pin and the pin to specify user boot on the target system.
E1891727	[Message]	The specified endian is not corresponding to the endian of CPU.
	[Action by User]	Check if the specification in [Endian] of the [Connect Settings] tab of the debug tool is correct.
E1891728	[Message]	Please enter the value of Vcc supplied actually to the user target board.
	[Action by User]	Enter the Vcc value.
E1891800	[Message]	The endian defined in the USD file is not corresponding to the endian of the CPU.
E1891801	[Message]	It is not possible to allocate it to other than an external address space of the MCU. Please confirm the contents of the USD file.

E1891802	[Message]	The range of allocated addresses overlaps. Please confirm the contents of the USD file.
E1891803	[Message]	USD file is not found.
E1891804	[Message]	Address is incorrect.
E1891805	[Message]	Address range error.
E1891806	[Message]	Work ram exceeds the RAM range.
E1891807	[Message]	Custom program size exceeds its limit.
E1891808	[Message]	It is not possible to allocate it beyond the boundary of the CS area. Please confirm the contents of the USD file.
E1891809	[Message]	Sector information in xxx is different from the previous one. Continue to load it?
E1891810	[Message]	USD file can not be registered when the operating mode is Single processor mode. Remove the USD file information?
E1891900	[Message]	Please re-set start/stop function.
E1896000	[Message]	The specified address is over the maximum address of the target MCU.
E1896100	[Message]	Stream I/O error occurred.
E1896101	[Message]	An undefined-instruction exception has occurred.
E1896102	[Message]	A privileged-instruction exception has occurred.
E1896103	[Message]	An access exception has occurred.
E1896104	[Message]	A floating-point exception has occurred.
E1896105	[Message]	An error has occurred during a memory access.
E1896106	[Message]	Information on interrupt is incorrect.
E1896107	[Message]	An error has occurred during a memory access to the peripheral function.
E1899000	[Message]	Unable to connect to the emulator (xxx).
E1899050	[Message]	A software break has already been set to the address.
E1899051	[Message]	The software break cannot be added any further.
E1899100	[Message]	The trace extract event can be Data Access events.
E1899101	[Message]	Specified event type accepts execution address event only.
E1899900	[Message]	Undefined error.
E1899901	[Message]	I/F is not supported.
E1899902	[Message]	Memory allocation failed.
E1899903	[Message]	Mcu file loading failed.
E1899904	[Message]	Target device driver missing, connection cancelled.
E1899905	[Message]	The system was reset.
E1899906	[Message]	File opening failed.
E1899907	[Message]	File loading failed.
E1899908	[Message]	This function interrupted processing because it was not able to use it while executing it.

E2000002	[Message]	Error opening file: xxxyyyzzz
	[Explanation]	This message dialog box appears when an error occurred attempting to open the specified file.
E2000003	[Message]	Error saving file: xxxyyyzzz
	[Explanation]	This message dialog box appears when an error occurred attempting to save the specified file.
	[Action by User]	Check that the file is writable. If a shortage of memory is the reason for the failure, close all panels except the target Editor panel and try to save the file again.
E2000004	[Message]	Searching or replacing failed.
	[Explanation]	This message dialog box appears when an error occurred attempting to perform a find or replace operation.
E2000006	[Message]	Cannot open file because this would exceed the maximum allowed memory usage.
	[Explanation]	This message dialog box appears when attempting to open an editor file which might results in an out-of-memory exception. This might be due to a very large file being opened, or by opening many files which cause the memory limit to be reached. If there is another large file open, close it and open the file again.
E2000007	[Message]	Copy size is too large for the clipboard, cannot complete request.
	[Explanation]	The clipboard has a memory limit based on the current OS state. This message appears when attempting to copy data larger than the clipboard.
E2000008	[Message]	Expression in Go To dialog is invalid.
	[Explanation]	The Go To dialog can only accept a line number or a Debugger expression that evaluates to an address.
E2000009	[Message]	The maximum bookmarks limit (50) has been reached. Please consider deleting some existing bookmarks.
	[Explanation]	This message appears when the number of registered bookmarks has exceeded the maximum value.
E2000010	[Message]	Could not set break event.
	[Explanation]	This message appears in case of failure to set a breakpoint by using the Editor panel.
E2000011	[Message]	Could not remove break event.
	[Explanation]	This message appears in case of failure to remove a breakpoint by using the Editor panel.
E2000012	[Message]	Searching or replacing failed.
	[Explanation]	This message appears when a search or replacement has failed.
E2000013	[Message]	The specified file xxx could not be opened.
	[Explanation]	This message appears in case of failure to open a file by using the Editor panel.
E2000014	[Message]	Could not create a temporary file.
	[Explanation]	This message appears in case of failure to create a temporary file at the time a file was saved.
E2200001	[Message]	file not found.
	[Explanation]	This appears when the device file specified by the -df option does not exist.

E2200002	[Message]	cannot open file.
	[Explanation]	This appears when the device file specified by the -df option could not be opened.
E2200003	[Message]	device file is not designated.
	[Explanation]	This appears when the device file could not be specified by the -df option.
E2200004	[Message]	critical error occurred.
	[Explanation]	This appears when an unexpected exception occurred. The stack trace for the exception that occurred immediately before the unexpected exception is output.
E2200011	[Message]	cannot output header file.
	[Explanation]	This appears when writing to the I/O header file failed.
	[Action by User]	Check that the specified path exists and the file is writable.
E2201001	[Message]	cannot read device file(unknown file).
	[Explanation]	The specified file is not a device file, so reading it as one was not possible.
E2201002	[Message]	cannot read device file(unknown format version).
	[Explanation]	The device file was for a non-supported format version, so reading it as one was not possible.
E2201003	[Message]	cannot read device file(unknown series).
	[Explanation]	The device file was for a non-supported device, so reading it as one was not possible.
E2201004	[Message]	cannot read device file(unknown series version).
	[Explanation]	The device file was for a non-supported device version, so reading it as one was not possible.

5.3 Information

Table 5.3 Information

M0120001	[Message]	Installation is suspended because xxx is running. It will be resumed next time you start the tool.
M0120002	[Message]	You must restart your system for the updates to take effect.
M0120003	[Message]	Installation is suspended because related updates are suspended. It will be resumed next time you start the tool.
M0140033	[Message]	All CS+ related tools were uninstalled, so Integrated Uninstaller will be deleted.
	[Explanation]	All of the CS+-related tools that are displayed have been uninstalled by the integrated uninstaller.
M0140044	[Message]	The following product was also installed at the same time. - xxx : Please install the latest service packs and security updates for this product using Windows Update and Microsoft Update.
	[Explanation]	This message appears when all installation of required environments has completed successfully without a reboot request, and the window of the subsequently executed integrated installer has been closed.
M0190000	[Message]	Failed to read license information. The file is broken. Please re-enter license keys.
M0200001	[Message]	Please enter the e-mail address of your technical support contact.
M0200002	[Message]	The following plug-ins are not enabled. xxxxxxxxxxxx : You can use [Plug-in Manager] dialog to enable these plug-ins.
	[Explanation]	The Basic plug-in and Additional plug-in are disabled.
M0201001	[Message]	The specified path is read-only.
	[Explanation]	This appears when failing in writing in of a generated log file when performing conversion of a project, diversion of a project or pack function of the project.
	[Action by User]	Make the folder writable in Explorer or the like.
M0201003	[Message]	Saving the data to the file.
	[Explanation]	This is the string shown in the Progress Status dialog box when data is being saved to a file.
M0201004	[Message]	The processing was canceled by the user.
	[Explanation]	The ongoing action was cancelled by the user.
M0201005	[Message]	The specified file is read-only.
	[Explanation]	This message appears when the specified file is write-protected after checking file write.
	[Action by User]	Make the folder writable in Explorer or the like.
M0201006	[Message]	Adding folder ...
	[Explanation]	This appears when a folder is dropped from Explorer into the project tree, and the contents of the folder are added.

M0201007	[Message]	Loading xxx ...
	[Explanation]	This appears when a file is open.
M0201008	[Message]	xxx is saved after replacing the unexpressible characters by the current encode(yyy).
	[Explanation]	This appears when saving the file that is open in the editor, and it cannot be saved correctly with the specified encoding.
	[Action by User]	Change the encoding, and then save the file.
M0202001	[Message]	Loading PM+ project ...
	[Explanation]	This message appears in the Progress Status dialog box while a PM+ project file is being loaded.
M0202002	[Message]	Creating project file ...
	[Explanation]	This message appears in the Progress Status dialog box while a project file is being created.
M0202003	[Message]	Loading project ...
	[Explanation]	This message appears in the Progress Status dialog box while a project file is being loaded.
M0202004	[Message]	Converting project file ...
	[Explanation]	This message appears in the Progress Status dialog box while a project file for another product is being converted.
M0202005	[Message]	Packing project ...
	[Explanation]	This message appears in the Progress Status dialog box while a project file for another product is being converted.
M0202006	[Message]	Loading project ...
	[Explanation]	This message appears in the Progress Status dialog box while a project file is being loaded.
M0202007	[Message]	xxx is not a project for the yyy.
	[Explanation]	This message appears when a project of another package was attempted to be loaded.
	[Action by User]	Load a project from CS+ of the correct package.
M0204001	[Message]	Downloading load module ...
	[Explanation]	This message appears in the Progress Status dialog box when the load module is being downloaded to the debugger. During download, the name of the file being downloaded appears in the third line of the message.
M0204002	[Message]	Connecting to xxx ...
	[Explanation]	This message is shown in the Progress Status dialog box when connecting. The name of the connected debugging tool appears in xxx.
M0204003	[Message]	Connecting to xxx ... Emulator firmware is automatically updated if necessary. Do not disconnect USB cable and power supply until connection is completed.
	[Explanation]	This message is shown in the Progress Status dialog box when connecting. The name of the connected debugging tool appears in xxx.

M0204004	[Message]	Preparing Hot Plug-in... Emulator firmware is automatically updated if necessary. Do not disconnect USB cable and power supply until connection is completed.
	[Explanation]	This message is shown in the Progress Status dialog box when preparing Hot Plug-in.
M0206001	[Message]	Searching ...
	[Explanation]	This message appears in the Progress Status dialog box when performing a search by specifying "In <i>current project</i> ," "Anywhere in project," or "In <i>specified folder</i> ."
M0209001	[Message]	Could not execute step-in for the following reason. xxxxxxxxxxxx
	[Explanation]	This message appears when an exception occurred on execution of [Step In] from the menu.
	[Action by User]	For details, refer to xxxxxxxxxxxx.
M0209002	[Message]	Could not execute step-over for the following reason. xxxxxxxxxxxx
	[Explanation]	This message appears when an exception occurred on execution of [Step Over] from the menu.
	[Action by User]	For details, refer to xxxxxxxxxxxx.
M0210001	[Message]	This operation has been cancelled because the command related to the state save feature can not use at the current product license.
	[Explanation]	This message appears when saving or restoring the state and when there is no additional license related to state saving.
	[Action by User]	Switch to a license which can use the state save feature.
M0210002	[Message]	Failed to save RAM or register values for rewinding.
	[Explanation]	This message appears when state saving has failed.
	[Action by User]	- Check the disk capacity. - Check if there is no problem in memory. - Check connection to the target.
M0210003	[Message]	Stores RAM and register values to the file(xxx).
	[Explanation]	This message appears when the state has been saved.
M0210004	[Message]	Restores RAM and register values to the file(xxx).
	[Explanation]	This message appears when restoring of RAM or register values has failed.
M0223001	[Message]	Source files were added to the Project Tree panel, but some files cannot be added to the project.
	[Explanation]	When a debug project is downloaded, source files included in the load module are added automatically. This appears when these files cannot be added, because the maximum number of files that can be added to the project is exceeded.
	[Action by User]	Remove unneeded files.

M0225001	[Message]	License for standard edition is currently in use by some projects.
	[Explanation]	This message appears if a floating license for editions other than the standard edition could not be acquired when a project was opened.
	[Action by User]	<ul style="list-style-type: none"> - Check if the number of floating licenses is sufficient. - Check if networks or servers related to floating licenses are operating.
M0225002	[Message]	License for standard edition is currently in use by the subproject xxx.
	[Explanation]	This message appears if a floating license for editions other than the standard edition could not be acquired when a subproject was added.
	[Action by User]	<ul style="list-style-type: none"> - Check if the number of floating licenses is sufficient. - Check if networks or servers related to floating licenses are operating.
M0229001	[Message]	There are files not registered in the project. See the [All Messages] tab in the Output panel for details.
	[Explanation]	This message appears when an imported file in the Link Order dialog box includes the names of files that are not actually registered with the project.
	[Action by User]	Register the files with the project.
M0233001	[Message]	Opens the Disassemble panel to show the current PC address because could not open an editor panel.
	[Explanation]	This message appears when no more Editor panels can be opened while the program is not running.
	[Action by User]	<ul style="list-style-type: none"> - Up to 100 Editor panels can be opened. Close unnecessary panels before opening new panels. - Check that you have permission to open source files.
M0238001	[Message]	Creates some files for error reporting on the desktop. Please attach these files when report the error.
	[Explanation]	This message appears in response to clicking on the [Record Screen] button in the Message dialog box.
M0244001	[Message]	Initializing memory ...
	[Explanation]	This message appears in the Progress Status dialog box when initializing memory from the Memory Initialize dialog box.
M0249001	[Message]	The specified value does not exist from the present location to the xxx of a tree.
	[Explanation]	This appears when moving in a search for values in the SFR panel / IOR panel, and the specified value is not found in the direction of movement.
M0251001	[Message]	Getting trace data ...
	[Explanation]	This appears when a large amount of time is required to get data in the Trace panel.
M0269001	[Message]	Generating memory mapping ... Press [ESC] key or [Cancel] button to abort processing
	[Explanation]	Wait for the information on the memory map to be acquired.
	[Action by User]	To cancel this processing, press the [ESC] key or click on the [Cancel] button.
M0269002	[Message]	Press [ESC] key to cancel processing.
	[Explanation]	Wait for the information on the memory map to be acquired.

M0291001	[Message]	xxx was generated.
	[Explanation]	This message appears when iodef.h was successfully generated.
M0291002	[Message]	The device was changed. Update the header file by selecting [Generate I/O header file].
	[Explanation]	This message appears when CS+ detects a change of device at the time it opens a project.
M0291003	[Message]	The device file was updated. Update the header file by selecting [Generate I/O header file].
	[Explanation]	This message appears when CS+ detects a change of device file version at the time it opens a project.
M0291004	[Message]	Due to the CS+ being old, following build tools are disabled. To use them, update CS+.
	[Explanation]	The core major version numbers of the files contained in build tools exceed the expected value and so are hidden when a project is opened.
	[Action by User]	Continue using the CS+ environment if this does not present a problem. Alternatively, update your CS+.
M0292001	[Message]	Loading HEW project ...
	[Explanation]	This message appears in the Progress Status dialog box while loading the HEW project file. The conversion may take several minutes.
M0293000	[Message]	<i>Compiler-name</i> : Moved next libraries in [Using libraries] property. xxxxxxxxxxxx :
	[Explanation]	This message appears in the Output panel when the library files being used are to be deleted while "Yes(Level 3)" is selected in the [Perform inter-module optimization] property of the [Optimization(Details)] category on the [Compile Options] tabbed page.
M0293001	[Message]	The settings of [Constituent Application Projects] property are removed because the Microcomputers are different.
	[Explanation]	This appears when the specified devices differ between associated projects during loading of the projects.
M0294000	[Message]	CC-RL : Moved next libraries in [Using libraries] property.
	[Explanation]	This message appears in the Output panel when library files in use are deleted while "Yes (Level 3)" is selected for the [Perform inter-module optimization] property under the [Optimization(Details)] category on the [Compile Options] tabbed page.
M0300001	[Message]	The setting of pin No. <i>pin number</i> was changed to unused.
M0409000	[Message]	xxx was generated.
M0409001	[Message]	The following files were generated:
M0409002	[Message]	The generating source folder is: xxx
M0409003	[Message]	The operation of generating file was successful.
M0409004	[Message]	xxx was overwritten.
M0409005	[Message]	Pin No. xxx was changed from yyy to zzz.
M0409006	[Message]	Start to reflect to PinConfig.

M0409007	[Message]	Finish reflecting to PinConfig.
M0409008	[Message]	The code generator report is output to the following files:
M0409100	[Message]	The device top view is output to the following files:
	[Explanation]	This is to notify you of the files in which the device top view has been saved.
M0409101	[Message]	The device list view is output to the following files:
	[Explanation]	This is to notify you of the files in which the device list view has been saved.
M0607000	[Message]	Stopped to step, because the debug target operating mode is different the device operating mode. Please Change the debug target operating mode to the device operating mode.
M0810001	[Message]	Could not change the setting that output the cross-reference files.
	[Explanation]	This error occurs when the [Enable static analysis information] property is set to [Yes], and the compiler properties could not be manipulated immediately prior to the build.
M0810003	[Message]	Failed to analyze cross-reference information.
	[Action by User]	Execute the build after setting [Enable static analysis information] property to [Yes].
M0810006	[Message]	Program analysis information is being generated. The trace data is acquired, and analyzed.
	[Action by User]	If you wish to suspend, then click [Cancel].
M0810007	[Message]	Program analysis information is being generated. The coverage data is acquired, and analyzed.
	[Action by User]	If you wish to suspend, then click [Cancel].
M0812001	[Message]	The buffer of the trace was filled. There is a possibility that the result of Analysis panels is incorrect.
	[Explanation]	This appears when the trace buffer is full when program execution is stopped.
	[Action by User]	Narrow the range of analysis.
M0812002	[Message]	Some trace data was lost. There is a possibility that the result of Analysis panels is incorrect.
	[Explanation]	This appears when trace data has been dropped during trace-data analysis.
	[Action by User]	Narrow the range of analysis.
M0812003	[Message]	The trace of the instruction was not included in the trace data. Please confirm the setting of the trace. There is a possibility that a part of the result of Analysis panels is not displayed.
	[Explanation]	This appears when the trace data being analyzed does not contain an M1/BRM1 fetch.
	[Action by User]	Check the trace-output settings.
M0812004	[Message]	The trace of the data access was not included in the trace data. Please confirm the setting of the trace. There is a possibility that a part of the result of Analysis panels is not displayed.
	[Explanation]	This appears when the trace data being analyzed does not contain read or write data.
	[Action by User]	Check the trace-output settings.

M0812005	[Message]	Variable information was not found (xxx).
	[Explanation]	This appears during moving analysis of values in a trace, when a matching line cannot be found in the variable-list data.
	[Action by User]	Make sure that the variable name exists. If there is a variable with this name, add the scope and specify it so that a unique line can be identified.
M0820001	[Message]	Could not be analyzed correctly. See the [Program Analyzer] tab in the Output panel.
	[Explanation]	A message was displayed on the Output panel to indicate that a problem occurred during trace analysis.
M0821001	[Message]	Could not import the information from a file xxx.
	[Explanation]	This message appears when an import file specified in the properties could not be loaded.
	[Action by User]	Make sure that the file exists. Check the access privileges of the file. Make sure that the file is not corrupt.
M0821002	[Message]	Could not find cross-reference file xxx.
	[Explanation]	This message appears when a cross-reference file was not found (the file will be excluded from analysis).
	[Action by User]	Execute the build after setting [Enable static analysis information] property to [Yes].
M0821003	[Message]	No cross-reference information in file xxx.
	[Explanation]	This message appears when the assembler listing file was output but the cross-reference information was not output in a project for an RL78.
	[Action by User]	Execute the build after setting [Enable static analysis information] property to [Yes].
M0821004	[Message]	Source file has been updated. Please build to update cross-reference files.
	[Explanation]	This appears when updating the Functions List/Variables List panel, and the source file is newer than the cross-reference information.
	[Action by User]	Execute the build after setting [Enable static analysis information] property to [Yes].
M0821005	[Message]	The load module file has not been updated. Please build to update the load module file.
	[Explanation]	This appears when updating the Functions List/Variables List panel, and rebuilding could change the load module.
	[Action by User]	Execute the build.
M0821006	[Message]	The load module file has been updated. Please download the load module file.
	[Explanation]	This appears when updating the Functions List/Variables List panel, and the current file is newer than the load module file being downloaded.
	[Action by User]	Perform the download.
M0821007	[Message]	Failed to analyze cross-reference file xxx.
	[Explanation]	This appears when the cross-reference information file is corrupt. This appears when the cross-reference information file could not be loaded.
	[Action by User]	Check the access privileges of the file. Make sure that the file is not corrupt.

M0821008	[Message]	Failed to analyze load module file xxx.
	[Explanation]	This appears when the file could not be downloaded to the debugger for analysis of address information or the like.
	[Action by User]	Execute the build. Check the access privileges of the file. Make sure that the file is not corrupt.
M0821009	[Message]	Could not find import file xxx.
	[Explanation]	This appears when the import file specified in the properties does not exist.
	[Action by User]	Make sure that the file exists.
M0824001	[Message]	Because the RRM function is not effective, a part of the result of [Analysis Chart] panel cannot be displayed. Please set to use the RRM function in the property of [Access Memory While Running] category of [Debug Tool Settings] category of debug tool.
	[Explanation]	This appears when the RRM function is not enabled in the debug tool settings, and the method for acquiring variables is set to real-time sampling in the Analysis Chart panel.
	[Action by User]	Enable the RRM function in the debug tool properties.
M0824002	[Message]	Because the trace function is not effective, a part of the result of [Analysis Chart] panel cannot be displayed. Please set to use the trace function in the property of [Trace] category of [Debug Tool Settings] tab of debug tool.
	[Explanation]	This appears when the trace function is not enabled in the debug tool settings, and the method for acquiring variables is set to trace-data analysis in the Analysis Chart panel.
	[Action by User]	Enable the trace function in the debug tool properties.
M0824003	[Message]	The specified value does not exist from the present location to the xxx of a chart.
	[Explanation]	This appears when moving in analysis graph value trends, and the specified value is not found in the direction of movement. "start" or "end" is displayed in xxx.
M0824005	[Message]	There is no execution time information
	[Explanation]	This appears when the trace function is not enabled in the properties of the debugging tool or there is no trace data.
	[Action by User]	Enable the trace function in the properties of the debugging tool.
M0824006	[Message]	The chart of the channel number xxx is never displayed. Review the setting value of the properties.
	[Explanation]	This appears when none of the data fit within the upper and lower limits (the graph for the target channel is not drawn although horizontal scrolling is performed from the start to the end points). One or more channel numbers (delimited by commas) to which the message applies are shown as "xxx".
	[Action by User]	Check [Value per grid [Val/Div]] or the offset value in the properties of the analysis tool.

M0824007	[Message]	RRM lost or buffer overflow has occurred, during data sampling.
	[Explanation]	This message appears when a value is lost (in the case of the normal RRM function) or a buffer overflows (in the dedicated data collection mode for Smart Analog devices) during data acquisition by real-time sampling. If a value has been registered as a target of a graph without a scope having been specified, the value is handled as lost because the value cannot be acquired if it is beyond the scope due to the location indicated by the PC position at the time of sampling. Depending on the structure of the user program, if a static variable in a function has been registered as a target of a graph without specifying a scope, a lost value will be likely.
	[Action by User]	If overflows are frequent, do not run applications other than CS+.
M0824008	[Message]	The auto adjustment function was turned off.
	[Explanation]	This message appears to notify that auto adjustment is disabled when the value of any of the following properties is manually changed. - [Time per grid[Time/Div]] property - [Value per grid[Val/Div] 1 - 16] property - [Offset 1 - 16] property
	[Action by User]	Check the [Auto adjustment] property setting.
M0825001	[Message]	The synchronization function was turned off.
	[Explanation]	Set the filtering conditions in the Filter Settings dialog box, then click [OK]. At this time, if the [Linking with the Project Tree panel] button, [Linking with the Editor panel] button or [Linking with the Debug Manager panel] button is enabled in the toolbar of the Function List/Variable List panel, it is disabled automatically.
M0825002	[Message]	The condition of filter settings of current panel was cleared.
	[Explanation]	Enable the [Linking with the Project Tree panel]/[Linking with the Editor panel]/[Linking with the Debug Manager panel] button in the toolbar of the Function List/Variable List panel. At this time, if filtering conditions have been set in the Filter Settings dialog box, then they are cleared automatically.
M0826001	[Message]	Saving a call graph image.
	[Action by User]	Press the Cancel button to abort.
M0827001	[Message]	Finished to the search.
	[Explanation]	This appears when a search was started from the target function (starting point), one or more functions meeting the search conditions were found, and the search has reached the function before the first target function (end point).
M0827002	[Message]	Corresponding function to the search condition was not found.
	[Explanation]	This message appears when all functions have been searched in the whole view, and no function meeting the specified search conditions has been found.
M0827003	[Message]	Corresponding function/variable to the search condition was not found.
	[Explanation]	This message appears when all functions/variables have been searched in the detailed view, and no function/variable meeting the specified search conditions has been found.
M0828001	[Message]	A node that contains the specified text does not exist from the present location to the xxx of a tree.
	[Explanation]	This appears when moving in the class view, and a node with the specified text is not found in the direction of movement. "start" or "end" is displayed in xxx.

M0829001	[Message]	There is no file to analyze.
	[Explanation]	This message appears when no check boxes are selected although it is necessary to select files to be analyzed.
	[Action by User]	Select at least one file that you wish to be analyzed.
M1790000	[Message]	Already connected to a debug tool.
	[Explanation]	This message is shown when executing the connect command in the state connected with a debug tool.
M2000001	[Message]	Generating full disassembled file for printing. Depending on the size of the source file this may take time and use a large amount of memory.
	[Explanation]	This appears when printing was performed in mixed-view mode.
M2000002	[Message]	Generating full disassembled file for print preview. Depending on the size of the source file this may take time and use a large amount of memory.
	[Explanation]	This appears when print preview was selected in mixed-view mode.
M2000003	[Message]	Generating a print image for this file. Please wait...
	[Explanation]	This appears when an image is generated in the print and print preview functions.
M2000004	[Message]	Generating full disassembled file for saving source mixed mode. Depending on the size of the source file this may take time and use a large amount of memory.
	[Explanation]	This message appears when the mixed display of the source file is being saved.
M2000005	[Message]	Selection has collapsed because used up memory.
	[Explanation]	This message appears when the selection of a string in the Editor panel was canceled due to a shortage of memory.
M2200002	[Message]	There are five or more unknown format blocks.
	[Explanation]	If W2200008 is output for five or more times, outputting the message for six times or more is omitted and this message is output instead.

5.4 Choices

Table 5.4 Choices

Q0120000	[Message]	The following updates must be installed to install the updates you selected. Do you want to select these updates?
Q0120004	[Message]	The following installations were suspended. Do you want to resume installation?
Q0120005	[Message]	There are suspended installations. Close the following applications before resuming the installations. The application may display the icon in the notification area (system tray). xxx
Q0120006	[Message]	Administrative privileges is required to run the updates. Do you want to acquire administrative privileges to continue updates? If you select [Yes], the dialogue for acquire the administrative privileges will be displayed.
Q0130001	[Message]	Do you want to delete files corresponding to the selected updates?
Q0140006	[Message]	Multiple information files used to update and obtain information about the software were found on your computer. Do you want to replace these files with the information file that is included in the product being installed? Select 'Yes' to replace the files and continue the installation. Select 'No' to cancel the installation now.
Q0140007	[Message]	A different version of the information file used to update and obtain information about the software was found on your computer. Do you want to replace the file with the information file that is included in the product being installed? Select 'Yes' to replace the file and continue the installation. Select 'No' to keep the original file and continue the installation.
Q0140011	[Message]	Are you sure you want to cancel the installation?
	[Explanation]	This appears when [Cancel] is clicked on a wizard page.
Q0140035	[Message]	The following applications in the installation folder are running. Close these applications and click Retry to continue. The application may display the icon in the notification area (system tray). - xxx - xxx - xxx
	[Explanation]	This appears when a CS+-associated tool is running while the integrated installer/uninstaller is being operated.
Q0140045	[Message]	Are you sure you want to cancel the installation? The following products installation has been completed. - xxx : Please install the latest service packs and security updates for this product using Windows Update and Microsoft Update.
	[Explanation]	This message appears when all installation of required environments has completed successfully without a reboot request, and the user then clicks [Cancel] in the windows of the integrated installer that is executed subsequently.

Q0200001	[Message]	Continue the processing?
	[Explanation]	This message appears to confirm whether to proceed with a given action.
	[Action by User]	[OK]: Continue action. [Cancel]: Cancel action.
Q0200002	[Message]	You need to restart this product to take effect. Do you want to restart now?
	[Explanation]	This appears when confirming a reboot.
	[Action by User]	[Yes]: Continue action. [No]: Cancel action.
Q0201001	[Message]	xxx has been changed. Save?
	[Explanation]	This Message dialog box appears to confirm whether you want to save a changed file when closing a window or the like. "xxx" is replaced by the display name of the open window (file name or panel name). When closing a project, "xxx" is replaced by "Project". If there are two or more items, this string is changed to "Items"
	[Action by User]	[Yes]: Save the content before closing the window or panel. [No]: Discard any changes and close the window or panel. [Cancel]: Stay in current state, without closing the window.
Q0201002	[Message]	xxx may have been changed by another program. Overwrite save?
	[Explanation]	This message appears when saving a file, and for some reason the last modified date is more recent than the time the file was opened or the time of the last save.
	[Action by User]	[Yes]: Overwrite and save. [No]: Cancel action.
Q0201003	[Message]	Folder does not exist. Create folder?
	[Explanation]	This appears to ask the user whether to create a folder when creating a file, if the specified path includes a folder that does not exist.
	[Action by User]	[Yes]: Create the folder. [No]: Close the dialog box.
Q0201004	[Message]	The file already exists. Overwrite?
	[Explanation]	This message is used in various dialog boxes that have a filename field.
	[Action by User]	[Yes]: Overwrite the file. [No]: Return the focus to the original dialog box, without overwriting the file.

Q0201005	[Message]	Save all the files currently being edited?
	[Explanation]	This message appears to ask the user whether to save files being edited.
	[Action by User]	[Yes]: Save all the files currently being edited. [No]: Cancel action.
Q0201006	[Message]	If the registered files opened by some external tools, exit that tools. To continue the processing, press [OK].
	[Explanation]	This message appears to ask the user whether to save files being edited by an external tool.
	[Action by User]	[Yes]: Continue the processing. [No]: Cancel action.
Q0201007	[Message]	xxx may have been changed by another program. Are you sure you want to reload the file?
	[Explanation]	This appears when changes have been made to the file (edits, deletions, or renaming).
	[Action by User]	[Yes]: Reload the file. [No]: Cancel action.
Q0201008	[Message]	The file(xxx) already exists. Overwrite?
	[Explanation]	This message appears in order to confirm with the user whether to overwrite a file that has already been saved.
	[Action by User]	[Yes]: Overwrite the file. [No]: Return the focus to the original dialog box, without overwriting the file.
Q0201009	[Message]	The folder(xxx) already exists. Overwrite?
	[Explanation]	This message appears in order to confirm with the user whether to overwrite a folder that has already been saved.
	[Action by User]	[Yes]: Overwrite the folder. [No]: Return the focus to the original dialog box, without overwriting the folder.
Q0201010	[Message]	Are you sure you want to change the file extension? If the file extension is changed, any settings of the file will be deleted.
	[Explanation]	This message appears to confirm that you wish to change the file extension in the project tree.
	[Action by User]	[Yes]: Change the file extension. [No]: Cancel action.

Q0202001	[Message]	Saving the project components may take a few minutes to a few dozen minutes. Start processing?
	[Explanation]	This appears when the [Save Project and <i>product name</i> as Package] menu item is selected.
	[Action by User]	[Yes]: Execute processing. [No]: Cancel action.
Q0202002	[Message]	Could not find the project file. Unregist the corresponding project from the list of favorite project?
	[Explanation]	This appears when selecting a project from favorites, and the project file does not exist.
	[Action by User]	[Yes]: Delete project. [No]: Do nothing.
Q0202003	[Message]	Are you sure you want to import build options? Current whole build options and build modes are replaced by specified project values.
	[Explanation]	This appears when selecting the [Import Build Options...] menu.
	[Action by User]	[Yes]: The import of the build options begins. [No]: Cancel action.
Q0202004	[Message]	xxx is not a project for the yyy. Do you want to reopen this project by the proper CS+ and close this product? If [No] is selected, restore only file structure on this product and you can not build and debug the project.
	[Explanation]	This appears when attempting to load a project from another package.
	[Action by User]	[Yes]: Re-open this project by the proper CS+. [No]: Open this project by the current CS+. [Cancel]: Cancel action.
Q0202005	[Message]	xxx is not a project for the yyy. Are you sure you want to just open the project? If you just open the project, only file structure will be restored, and you will not be able to build and debug the project. If you would like to build and debug, open the project by the proper CS+.
	[Explanation]	This appears when attempting to load a project from another package.
	[Action by User]	[OK]: Open this project by the current CS+. [Cancel]: Cancel action.

Q0202006	[Message]	xxx is not a subproject for the yyy. Are you sure you want to just open the subproject? If you just open the subproject, only file structure will be restored, and you will not be able to build and debug the project. If you would like to build and debug, open the subproject by the proper CS+.
	[Explanation]	This appears when attempting to add a sub-project from another package.
	[Action by User]	[OK]: Add a subproject by the current CS+. [Cancel]: Cancel action.
Q0202007	[Message]	xxx This project file may have been changed by another program. Would you like to reload the main project?
	[Explanation]	This message appears when external update of the project file is detected.
	[Action by User]	[Yes]: Reload the main project. [No]: Do nothing.
Q0203001	[Message]	Are you sure you want to set the current compile options to the individual compile options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This appears when specifying the individual compile options.
	[Action by User]	[Yes]: The individual compiler options are set for all build mode. [No]: The individual compiler options are only set for the current build mode. [Cancel]: Cancel action.
Q0203002	[Message]	Are you sure you want to set the current assemble options to the individual assemble options for all build modes?
	[Explanation]	This appears when specifying the individual assemble options.
	[Action by User]	[Yes]: The individual compiler options are set for all build mode. [No]: The individual compiler options are only set for the current build mode. [Cancel]: Cancel action.
Q0203003	[Message]	Are you sure you want to copy the current compile options to the assemble options for all build modes?
	[Explanation]	This appears when the [Build simultaneously] property on the [Common Options] tabbed page is changed from [Yes] to [No].
	[Action by User]	[Yes]: The compiler options are copied to all build mode. [No]: The compiler options are only copied to the current build mode. [Cancel]: Cancel action.

Q0203004	[Message]	It may not be built properly because a circular reference exists. Continue the processing?
	[Explanation]	This message appears when there is a circular reference between projects.
	[Action by User]	[Yes]: Execute Build/Clean. [Cancel]: Cancel Build/Clean.
Q0203005	[Message]	Are you sure you want to set the current compile options to the individual assemble options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This message appears when individual assemble options are specified (with simultaneous build enabled).
	[Action by User]	[Yes]: The individual compiler options are set for all build mode. [No]: The compiler options are only copied to the current build mode. [Cancel]: Cancel action.
Q0203006	[Message]	Are you sure you want to apply the setting value to all build modes? If [No] is selected, apply to the current build mode only.
	[Explanation]	This message appears when build options for all build modes are changed in a batch.
Q0204001	[Message]	Hot Plug-in is prepared. Connect the debug target to a PC and click OK.
	[Explanation]	This message appears while waiting for the connection of a hot plug-in.
	[Action by User]	[Yes]: Continue the processing. [No]: Cancel action.
Q0204002	[Message]	Load module file xxx has changed. Do you want to download it again?
	[Explanation]	This appears when [Observe downloaded load module files changing] is enabled, and the load module file is modified.
	[Action by User]	[Yes]: The download is executed. [No]: Cancel action.
Q0206001	[Message]	No data corresponding to the search conditions was found. Search from xxx of the specified range?
	[Explanation]	This appears in the Message dialog box when no results were found for the search parameters in the Memory Search or Trace Search dialog box. xxx will be either "start" or "end"
	[Action by User]	[Yes]: Close the Message dialog box and perform the search again from the beginning of the range. [No]: Close the Message dialog box and move the focus to the original dialog box.

Q0210001	[Message]	End debugging by disconnecting from the debug tool?
	[Explanation]	<ul style="list-style-type: none"> - When closing the Main window while connected to the debugging tool, a confirmation Message dialog box appears, asking the user whether to disconnect the debugging tool. - This message appears when closing a project while connected to the debugging tool. - This message appears when opening a project or making it newly while connected to the debugging tool.
	[Action by User]	<p>[Yes]: Disconnect and close the window.</p> <p>[No]: Close the window without disconnecting.</p> <p>[Cancel]: Cancel closing the Main window.</p>
Q0210002	[Message]	Also change the security ID of the debug tool?
	[Explanation]	In the Build Tool, when the [Security ID] property is changed, this message asks whether to also change the security ID of the debugging tool.
	[Action by User]	<p>[Yes]: Change the security ID of the debug tool.</p> <p>[No]: Cancel action.</p>
Q0210004	[Message]	Also change the programmable I/O area start address of the debug tool?
	[Explanation]	In the Build Tool, when the [Programmable I/O area start address] property is changed, this message asks whether to also change the Programmable I/O area start address of the debugging tool.
	[Action by User]	<p>[OK]: Change the programmable I/O area start address of the debug tool.</p> <p>[Cancel]: Cancel action.</p>
Q0210005	[Message]	Are you sure you want to clear all coverage information?
	[Explanation]	This appears when coverage information is cleared.
	[Action by User]	<p>[OK]: Clear all coverage information.</p> <p>[Cancel]: Cancel action.</p>
Q0210006	[Message]	Also change the endianness of the debug tool?
	[Explanation]	This appears when the endian property setting is changed in the build tool, and the application asks whether you want to change the endian property setting also in the debugging tool.
	[Action by User]	<p>[OK]: Change the endianness of the debug tool.</p> <p>[Cancel]: Cancel action.</p>

Q0210007	[Message]	Also enable the trace function of a debugging tool?
	[Explanation]	This appears when the trace RAM warning property setting is changed in the build tool, and the application confirms whether you want to change the enable trace property setting in the debugging tool as well.
	[Action by User]	[OK]: Enable the trace function of a debugging tool. [Cancel]: Cancel action.
Q0210008	[Message]	Also disable the trace function of a debugging tool?
	[Explanation]	This appears when the trace RAM warning property setting is changed in the build tool, and the application confirms whether you want to change the enable trace property setting in the debugging tool as well.
	[Action by User]	[OK]: Disable the trace function of a debugging tool. [Cancel]: Cancel action.
Q0212001	[Message]	The I/O protection area has been set in the specified target memory area. Also delete the I/O protection area?
	[Explanation]	This message appears when removing a target memory area, and an I/O protected area has been set on this area.
	[Action by User]	[OK]: Delete the I/O protection area. [Cancel]: Cancel action.
Q0225001	[Message]	All the property values on this sheet are reset to the default values. OK?
	[Explanation]	The program asks for user confirmation when the [Property]->[Reset All to Default] command is executed.
	[Action by User]	[Yes]: The property values are reset to the default values. [No]: Cancel action.
Q0232001	[Message]	Delete build mode xxx?
	[Explanation]	This message appears when attempting to delete a build mode.
	[Action by User]	[OK]: Delete build mode xxx. [Cancel]: Cancel action.
Q0232002	[Message]	Requires saving the current project to enable to restore the current project status after changing the microcontroller. Continue saving and processing?
	[Explanation]	This appears when the microcontroller is changed.
	[Action by User]	[OK]: Continue saving and processing. [Cancel]: Cancel action.

Q0261001	[Message]	The section has been set the specified segment. Also delete the section?
	[Explanation]	This appears when deleting a segment, and the segment to be deleted held one or more sections.
	[Action by User]	[Yes]: Delete the entire section. [No]: Cancel delete.
Q0261002	[Message]	The memory space has been set the specified memory area. Also delete the memory area and segment that includes?
	[Explanation]	This message appears when a memory area is included in the memory space that is to be deleted.
	[Action by User]	[Yes]: Delete the entire memory area. [No]: Cancel delete.
Q0261003	[Message]	The memory area has been set the specified segment. Also delete the segment?
	[Explanation]	This message appears when a segment is included in the memory area that is to be deleted.
	[Action by User]	[Yes]: Delete the entire memory area. [No]: Cancel delete.
Q0261004	[Message]	Some of the segments that are set in the memory area that have changed, fall outside the range of address. Continue saving and processing? (If you continue, the start address of the segment is outside the range will be empty)
	[Explanation]	This message appears when some of the segments in the memory area that has been changed are located outside the specified address range.
	[Action by User]	[Yes]: Apply the change. The addresses of the segments located outside the specified address range will be blank. [No]: Cancel the change.
Q0262001	[Message]	This product recommends that creating project at the same place as the original project folder. Are you sure you want to change the project folder? Selected folder : xxx Recommended folder(diverted project folder) : yyy * Build error may be occurred in the creating project. Because, the folder for a creating project is different from the original.
	[Explanation]	In the Create Project dialog box, if the source and destination project folders are different, and source conversion is to be performed, then you will be asked to confirm whether to perform the operation.
	[Action by User]	[Yes]: Change the creating folder to original project folder, proceed to source conversion. [No]: Without changing the creating folder, proceed to source conversion. [Cancel]: Return to the Create Project dialog box, and do not proceed to source conversion.

Q0268001	[Message]	Open the CubeSuite project without changing the settings? If you select [No], open a dialog to change other device or other compiler.
	[Explanation]	This appears when an old CubeSuite product (.cspj) is specified in [Open Project...].
	[Action by User]	[Yes]: The .cspj is opened as if it were a .mtpj file. [No]: The Project Conversion Settings dialog box opens. Specify the device, project name, and other properties for conversion. [Cancel]: The message dialog box closes, and the opening of the CubeSuite project is cancelled.
Q0268002	[Message]	A non-empty folder is specified. If you just convert project to the folder, to backup all files in the folder, it may take a long time to copy the files. Do you want to create a sub folder named with the project name? If [Yes] is selected, CS+ will create the folder and convert the project to the folder to prevent a large-amount copy.
	[Explanation]	This message appears if the [Backup the project composition after before conversion] check box is selected, the conversion source pass differs from the conversion destination pass, and the folder specified as the destination of conversion is not empty when converting a project in the Project Convert Setting dialog box.
	[Action by User]	[Yes]: Create a sub folder named with the project name in the destination folder of conversion, then execute conversion. [No]: Execute conversion without any other processes. [Cancel]: Close the message and abort the project conversion processing.
Q0269001	[Message]	The specified name already exists in the list. Are you sure you want to save it with the specified name? If you select "Yes", save it with duplicated name.
	[Explanation]	This message appears when the profile result is saved regardless of the same item name already existing.
	[Action by User]	[Yes]: Save the profile result under the specified name. [Cancel]: Do not save the profile result. Re-open the Character String Input dialog box to input the name.
Q0269002	[Message]	The specified name already exists in the list. Are you sure you want to rename it with the specified name? If you select "Yes", rename it with duplicated name.
	[Explanation]	This message appears when the profile result is renamed regardless of the same item name already existing.
	[Action by User]	[Yes]: Rename the profile result under the specified name. [Cancel]: Do not rename the profile result.

Q0291001	[Message]	Do you change a file extension?
	[Explanation]	[RH850][RX] This message appears when [Type of output file] property in [Output] category in [Link Options] tab will change the file extension of the output file. [RL78] This message appears when [Hex file format] property in [Hex Format] category in [Hex Output Options] tab will change the file extension of the output file.
	[Action by User]	[Yes]: Change the output file extension. [No]: Do not change the output file extension.
Q0291002	[Message]	The folder already contains the following file(s): xxx Would you like to change the existing files to *.bak? (Note: In the case of Yes, if *.bak files already exist they will be overwritten)
	[Explanation]	This message appears when file of the same name as a startup program created when project is created already exists at the project creating folder.
	[Action by User]	[Yes]: Change the existing files to *.bak and create new files. [No]: Overwrite the existing files.
Q0291003	[Message]	All or part of the following useful settings for the memory mapping profile are not enabled. Would you like to enable these options? In the [List] category of the [Link Options] tab, * the [Outputs the linkage list file] property * the [Outputs a symbol name list in a module] property * the [Shows the total sizes of sections] property
	[Explanation]	This message appears if the related options of the linker are not ON when the [Profile] button in the Memory Mapping Profiler panel is clicked and changed to the [Profile(Collect)] button (only the first time after the project is opened).
	[Action by User]	[Yes]: Change the options of the linker to ON and collect memory mapping information. [No]: Collect memory mapping information without changing the options of the linker.
Q0293001	[Message]	You are setting the Level3(Inter-module optimization). The individual compiler/assembler option becomes invalid by level 3. The object/library files you registered also becomes invalid once. And the libraries added in the [Using libraries] property are removed. See the [All Messages] tab in the Output panel. Continue the setting?
	[Explanation]	This appears when you have selected whole-program optimization (-Xwhole_program) in build properties, to confirm whether you really want to select this option.
	[Action by User]	[Yes]: This disables individual options, removes user-registered obj and lib files from the project, and enables -Xwhole_program. [No]: This restores the property selections, clearing the -Xwhole_program option.

Q0293003	[Message]	Are you sure you want to set the current compile options to the individual compile options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This message appears when individual compile options are specified.
	[Action by User]	[Yes]: The individual compiler options are set for all build mode. [No]: Apply the current compile options to the individual compile options for the current build mode only. [Cancel]: Cancel action.
Q0293004	[Message]	Are you sure you want to set the current assemble options to the individual assemble options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This message appears when individual assemble options are specified.
	[Action by User]	[Yes]: The individual compiler options are set for all build mode. [No]: Apply the current compile options to the individual compile options for the current build mode only. [Cancel]: Cancel action.
Q0293005	[Message]	Are you sure you want to copy the current compile options to the assemble options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This message appears when the [Build simultaneously] property on the [Common Options] tabbed page is changed from [Yes] to [No].
	[Action by User]	[Yes]: The compiler options are copied to all build mode. [No]: Copy the current compile options to the assemble options for the current build mode only. [Cancel]: Cancel action.
Q0293006	[Message]	Are you sure you want to set the current compile options to the individual assemble options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This message appears when individual assemble options are specified (with simultaneous build enabled).
	[Action by User]	[Yes]: The compiler options are copied to all build mode. [No]: Copy the current compile options to the assemble options for the current build mode only. [Cancel]: Cancel action.

Q0293007	[Message]	On the [Output Code]/[Default section of data area] property, ep_disp16 or ep_disp23 is selected. Would you like to change [Default section of data area] to "Not specify(None)" and set [Optimize accesses to external variables]?
	[Explanation]	This message appears when [Optimize accesses to external variables] is selected and an option that cannot be specified simultaneously is selected.
	[Action by User]	[Yes]: Change the [Default section of data area] property to [Not specify(None)] and set [Optimize accesses to external variables]. [No]: Do not set [Optimize accesses to external variables].
Q0293008	[Message]	All or part of the following useful settings for the memory mapping profile are not enabled. Would you like to enable these options? In the [List] category of the [Link Options] tab, * the [Output link map file] property * the [Output symbol information] property * the [Output total sizes of sections] property
	[Explanation]	This message appears if the related options of the linker are not ON when the [Profile] button in the Memory Mapping Profiler panel is clicked and changed to the [Profile(Collect)] button (only the first time after the project is opened).
	[Action by User]	[Yes]: Change the options of the linker to ON and collect memory mapping information. [No]: Collect memory mapping information without changing the options of the linker.
Q0294001	[Message]	You are setting the Level3(Inter-module optimization). The individual compiler/assembler option becomes invalid by level 3. The object/library file(s) you registered also becomes invalid once. And the libraries added in the [Using libraries] property are removed. See the [All Messages] tab in the Output panel. Continue the setting?
	[Explanation]	This is to confirm if you really wish to set the inter-module optimization (-Owhole_program) option as a build property of the CC-RL compiler.
	[Action by User]	[Yes]: Turn the individual options off, exclude obj/lib files added by the user, and turn -Owhole_program on. [No]: Ignore -Owhole_program and restore the previous property settings.
Q0294003	[Message]	Are you sure you want to set the current compile options to the individual compile options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This is to confirm the scope of individual compiler options when they are set.
	[Action by User]	[Yes]: Execute the command. [No]: Set the current compiler options for the current build mode only. [Cancel]: Cancel the command.

Q0294004	[Message]	Are you sure you want to set the current assemble options to the individual assemble options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This is to confirm the scope of individual assembler options when they are set.
	[Action by User]	[Yes]: Execute the command. [No]: Set the current assembler options for the current build mode only. [Cancel]: Cancel the command.
Q0294005	[Message]	Are you sure you want to copy the current compile options to the assemble options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This is to confirm changing of the value of the compiler option "Build simultaneously" from Yes to No.
	[Action by User]	[Yes]: Execute the command. [No]: Copy the current compiler options to the assembler options for the current build mode only. [Cancel]: Cancel the command.
Q0294006	[Message]	Are you sure you want to set the current compile options to the individual assemble options for all build modes? If [No] is selected, copy the current build mode options only.
	[Explanation]	This is to confirm the scope of individual assembler options when they are set (with simultaneous build enabled in CC-RL).
	[Action by User]	[Yes]: Execute the command. [No]: Copy the current compiler options to the individual assembler options for the current build mode only. [Cancel]: Cancel the command.
Q0294007	[Message]	All or part of the following useful settings for the memory mapping profile are not enabled. Would you like to enable these options? In the [List] category of the [Link Options] tab, * the [Output link map file] property * the [Output symbol information] property * the [Output total sizes of sections] property
	[Explanation]	This message appears if the related options of the linker are not ON when the [Profile] button in the Memory Mapping Profiler panel is clicked and changed to the [Profile(Collect)] button (only the first time after the project is opened).
	[Action by User]	[Yes]: Change the options of the linker to ON and collect memory mapping information. [No]: Collect memory mapping information without changing the options of the linker.

Q0300001	[Message]	The pin is connected to the external peripheral <external peripheral name>. If you change the setting, the pin is disconnected. Do you want to change the setting?
	[Action by User]	[Yes]: Disconnect from the external peripheral and change the settings. [No]: Close the dialog box without changing the settings.
Q0300002	[Message]	The selected pin No. <selected pin No.> is used in <macro function>. Do you want to change the setting?
	[Action by User]	[Yes]: Change the settings. [No]: Close the dialog box without changing the settings.
Q0300003	[Message]	Deleting the column "<column name>". Continue?
	[Action by User]	[Yes]: Delete the column. [No]: Close the dialog box without deleting the column.
Q0300004	[Message]	Do you want to delete the external peripheral <external peripheral name>? If you delete the external peripheral, the pins connected to the external peripheral is disconnected.
	[Action by User]	[Yes]: Delete the external peripheral. Disconnect the pin. [No]: Return to the original status without changing the settings.
Q0300005	[Message]	All the settings you have done in the pin configurator will be lost. Do you want to change the package type?
	[Action by User]	[Yes]: This will modify the package. Pin settings and external peripherals will be returned to their default values. [No]: Return to the original status without changing the settings.
Q0300006	[Message]	Disconnecting the pin No. <selected pin number> from the external peripheral <external peripheral name>. Continue?
	[Action by User]	[Yes]: This disconnects the pin from the external periphery. [No]: Return to the original status without changing the settings.
Q0300007	[Message]	<File name> already exists. Do you want to replace it?
	[Action by User]	[Yes]: Overwrite save the file. [No]: Return to the original status without changing the settings.
Q0300008	[Message]	One or more pins are connected to the external peripheral(s). If you change the settings, the pins are disconnected. Do you want to change all settings?
	[Action by User]	[Yes]: Disconnect the pin connected to the external periphery, and change the settings. [No]: Return to the original status without changing the settings.

Q0300009	[Message]	One or more pins are used in other macro. Do you want to change all settings?
	[Action by User]	[Yes]: Change the settings of all pins, including those otherwise in use. [No]: Return to the original status without changing the settings.
Q0404000	[Message]	xxx has been changed. Save?
Q0615000	[Message]	Also disable Access by stopping execution property of the debug tool?
Q0615001	[Message]	Also enable Access by stopping execution property of the debug tool?
Q0615002	[Message]	Also change Usage RAM monitoring and DMM by a debugging DTC system property of the debugtool?
Q0801001	[Message]	The file already exists. Overwrite?
	[Action by User]	[Yes]: Overwrite the file. [No]: Return the focus to the original dialog box, without overwriting the file.
Q0810001	[Message]	Discard analysis data and close the xxx panel of Program Analyzer to increase available memory?
	[Explanation]	When the application runs out of memory during analysis, this appears to confirm whether to discard analysis results.
	[Action by User]	[Yes]: This discards the analysis results, freeing the memory and closing the analysis plug-in panel. [No]: This continues the task without discarding analysis results. Operation may become unstable from this point, because the application is working at the limits of memory capacity.
Q0812001	[Message]	The break point can be set to two or more addresses. Set the break point to all the addresses?
	[Explanation]	This appears to confirm whether to set a break to all corresponding addresses when you have selected the [Set Break to Function] command, and the target function is a template function.
	[Action by User]	[Yes]: This sets break events to all addresses corresponding to the template function. [No]: This sets a break event only to address with the smallest value corresponding to the template function.
Q0824001	[Message]	No data corresponding to the search conditions was found. Is the search continued from the xxx?
	[Explanation]	This appears when searching analysis graph value trends, and the specified value is not found in the direction of search. "start" or "end" is displayed in xxx.
	[Action by User]	[Yes]: Close the Message dialog box and perform the search again from the beginning/end of the range. [No]: Close the Message dialog box and move the focus to the original dialog box.

Q0824002	[Message]	Restore the values of Variable/Address and Type/Size to the values before loading from a file?
	[Explanation]	This appears when you have selected [Load from file] for the analyze tool's Property panel >> [Variable Value Changing] tab >> [Analysis method] property, and then changed to another method. It confirms whether to restore the property setting to the values before loading from file.
	[Action by User]	[Yes]: Discards the values loaded from file, and restores the previous values. [No]: Retains the values loaded from file.
Q0826001	[Message]	When you save an image in this format may be very large file size.
	[Explanation]	This warns that the size of the file is large, and confirms whether to really save it.
	[Action by User]	[OK]: Save the image. [Cancel]: Do nothing.
Q1700000	[Message]	The file xxx cannot be saved as it is Read Only. Would you like to save the file as a different name or overwrite it?
	[Explanation]	This message appears when a read-only file is to be overwritten.
	[Action by User]	[Save As]: Save the file as a different name. [Overwrite]: The attribute of the file is changed and it's overwritten. [Cancel]: Cancel action.
Q2000001	[Message]	The current editor file contains unsaved changes. You must save these changes first.xxyyy. Would you like to save the changes to this file?
	[Explanation]	This message dialog box appears when switching the Editor panel from source file view to mixed source view. It is to inform the user that unsaved modifications have been made to the source file. The user must agree to save any modifications to the source file before source mixed mode can be displayed.
	[Action by User]	[OK]: The changes to the source file will be saved. If the changes are saved successfully then the editor view will continue to switch to source mixed view. [Cancel]: Cancel the operation of switching to source mixed view. The editor view will remain in source file view and the unsaved changes will remain.
Q2000002	[Message]	xxx has been changed. Save?
	[Explanation]	This message dialog box appears to prompt to save any unsaved modifications to the Editor panel. This prompt occurs when performing operations such as closing the Editor panel or reloading the current editor file.
	[Action by User]	[Yes]: This will save all unsaved modifications to the specified editor file. [No]: This will discard any unsaved modifications in the editor file. [Cancel]: This will cancel the operation that resulted in the prompt to save the file. The [Cancel] button may not be available if the save request is due to the application closing.

Q2000004	[Message]	The file xxx cannot be saved as it is Read Only. yyy Would you like to save the file as a different name or overwrite it?
	[Explanation]	This message dialog box appears when attempting to save an editor source file that is read-only on disk.
	[Action by User]	[Save As...]: This will open a Save As dialog box to allow saving the file as a different file name. [Overwrite]: This will overwrite the existing read-only file. The read-only attribute will be changed to readable/writable. [Cancel]: This will cancel the operation that resulted in the prompt to save the file.
Q2000005	[Message]	xxxxyyzzz This file may have been changed by another program. Would you like to reload it?
	[Explanation]	This message dialog box appears when a source file that is open in the editor has been modified externally in another application.
	[Action by User]	[Yes]: This will reload the editor source file, losing any unsaved modifications since the last save time of the file. [No]: This will ignore the external changes to the file, and will leave the Editor panel exactly as it is. Any unsaved changes will remain. [Cancel]: This will perform the same as the [No] button; ignoring any external changes to the file and leaving the Editor panel as it is.
Q2000006	[Message]	Generating a print image for large files may take a long time. Do you wish to continue?
	[Explanation]	This message appears when the [Print...] or [Print Preview] menu was selected for a file with 1000 or more lines.
	[Action by User]	[OK]: An image is created. [Cancel]: Creation of an image is canceled.
Q2000007	[Message]	xxx file size is more than 24MB. In the case of a large file, the processing of syntax coloring takes long time. Disable the processing? When syntax coloring is disabled, code outlining and smart editing also will be disabled. Hereafter, this selection is applied to larger files than 24MB.
	[Explanation]	This message appears to allow you to select whether to disable syntax coloring in a large file because of the time processing for this takes.
	[Action by User]	[Yes]: Syntax coloring, code outlining and smart edit function in files larger than 24 Mbytes is disabled. [No]: Syntax coloring, code outlining and smart edit function is always enabled.
Q2200001	[Message]	file-name is exist. overwrite? [y/n]
	[Explanation]	The specified file already exists.
	[Action by User]	[y]: The file is overwritten and processing is continued. [n]: Cancel action.

5.5 Warnings

Table 5.5 Warnings

W0023001	[Message]	No Tag 'xxx'.
W0023002	[Message]	Invalid data.
W0024001	[Message]	No Tag 'xxx'.
W0024002	[Message]	Invalid data.
W0130000	[Message]	Following updates are not displayed because the necessary license is not registered.
W0140018	[Message]	Installation succeeded. To complete the installation, please reboot your computer.
	[Explanation]	This appears when the entire installation was successful, and a restart is necessary.
W0140022	[Message]	The installation was interrupted before it finished.
	[Explanation]	This appears when the installation is aborted before completion.
W0140025	[Message]	The installation was aborted before finish. Please reboot your computer.
	[Explanation]	This appears when the installation was aborted, and the installation of the completed portion (before cancelling) requires a restart.
W0140031	[Message]	To complete the uninstallation, it is necessary to reboot your computer.
W0140042	[Message]	The following products are required to reboot Windows to complete the installation. Please reboot your computer. - xxx : Please install the latest service packs and security updates for this product using Windows Update and Microsoft Update. Stop the installation.
	[Explanation]	This message appears when all installation of required environments has succeeded, and a reboot is required for all of them.
W0140043	[Message]	The following products are required to reboot Windows to complete the installation. Please reboot your computer. - xxx : The following product succeeded in installation. - xxx : Please install the latest service packs and security updates for this product using Windows Update and Microsoft Update. Stop the installation.
	[Explanation]	This message appears when all installation of required environments has succeeded, and a reboot is required for some of them, but not for others.
W0190002	[Message]	Failed to read license information from "xxx". The file is broken.

W0200001	[Message]	There are multiple files used for inquiry and update in your PC. The file should be unique. Please reinstall xxx.
	[Explanation]	This appears when there is more than one information files used to update and obtain information about the software. Perform the installation again.
	[Action by User]	Perform the installation again.
W0201003	[Message]	Could not Change the Writable.
	[Explanation]	This message appears when can't change the " reading exclusive use" attribute of the target file.
	[Action by User]	Specify the file by which the current user can edit the attribute.
W0201004	[Message]	Illegal extension of the file. The extension of xxx must be specified for the extension of the file.
	[Explanation]	This appears when the extension of a file being loaded or imported is not supported.
	[Action by User]	Specify a file with a correct extension.
W0201005	[Message]	Illegal encode of the file. The encode of xxx must be specified for the encode of the file.
	[Explanation]	This appears when the encoding of a file being loaded or imported is not supported.
	[Action by User]	Specify a correct file encoding.
W0202001	[Message]	Diverting the project failed. The file composition and the properties of the tool is not applied.
	[Explanation]	This appears in cases such as when creating a new project using the copy project feature, and the project to copy could not be parsed. The properties of the file-hierarchy or tools could not be applied.
	[Action by User]	Copy a file that can be parsed successfully.
W0202002	[Message]	Applying the properties of the tool failed. (Target tools: xxx)
	[Explanation]	This appears in cases such as when creating a new project using the copy project feature, and a failure occurs while applying the tool properties. The file hierarchy of the copied project file has been applied.
	[Action by User]	Copy a file that can be parsed successfully.
W0202003	[Message]	The project file can be restored. But if you save the project, some information may be lost.
	[Explanation]	Tried to read the project file by which the compatibility isn't perfection. Can return, but when saved overwrite, a part of information is lost.
	[Action by User]	Confirm whether it's identical with tool version made created project file. When it's necessary, update integrated development environment framework and a plug-in.
W0202004	[Message]	There is a plug-in that doesn't correspond to the version of the specified compiler package. See the [All Messages] tab in the Output panel.
	[Explanation]	Some or all plug-ins no longer function because the compiler version has changed.
	[Action by User]	Make sure that the versions of the plug-ins and compiler package are compatible.

W0202005	[Message]	Can not open the project with last saved status. See the [All Messages] tab in the Output panel.
	[Explanation]	This appears when loading a project, and the project could not be loaded with the last status saved.
W0202006	[Message]	Can not import the project with last saved status. See the [All Messages] tab in the Output panel.
	[Explanation]	This message appears if the project could not be imported with the last saved status when importing build options.
W0203001	[Message]	Enabled the feature of applying the setting value for a property to all build modes at once. Please note that the setting value can be the incompatible value for other build mode.
	[Explanation]	This message appears when the [Change property value for all build modes at once] property is set to [Yes].
W0205001	[Message]	Fewer than xxx or more than yyy characters cannot be specified.
	[Explanation]	This message appears in the Message dialog box if a string is specified for the area that is shorter than xxx characters, or longer than yyy characters, when xxx and yyy are the minimum and maximum lengths, respectively. The values of xxx and yyy are dependent on the input area.
	[Action by User]	Specify a value that is in bounds.
W0205002	[Message]	More than xxx characters cannot be specified.
	[Explanation]	This message appears when a line in the display source set in the Text Edit dialog box is longer than the maximum number of characters.
	[Action by User]	Shorten the line that is greater than the maximum length so that it is within the maximum number of characters.
W0205003	[Message]	More than xxx lines cannot be specified.
	[Explanation]	This message appears when the display source set in the Text Edit dialog box is longer than the maximum number of lines.
	[Action by User]	Make sure that the number of lines is no more than the maximum limit.
W0205004	[Message]	Specify xxx digits in hexadecimal.
	[Explanation]	This message appears when the string contains characters that cannot be used to represent a base-16 number, including when the number of digits is valid.
	[Action by User]	Specify a hexadecimal number with effective number of digits.
W0205006	[Message]	Specify a numerical value.
	[Explanation]	A number specifying an area includes non-numeric characters.
	[Action by User]	Specify numeric characters.
W0205007	[Message]	Specify in decimal.
	[Explanation]	A decimal number specifying an area includes characters that cannot be used to represent a decimal number.
	[Action by User]	Specify numeric characters as base-10.

W0205008	[Message]	Fewer than xxx or more than yyy values cannot be specified.
	[Explanation]	This message appears when an out-of-range value is entered into a number input area in the properties or the like.
	[Action by User]	Specify a value between xxx and yyy.
W0205009	[Message]	Only ASCII character sets can be entered.
	[Explanation]	Numeric or ASCII characters specifying an area include characters that are not numeric or ASCII.
	[Action by User]	Specify a string that is a valid number or a valid ASCII string.
W0205010	[Message]	Specify a character string.
	[Explanation]	The field is empty.
	[Action by User]	Specify a valid string.
W0205011	[Message]	Specify a path.
	[Explanation]	The field is empty.
	[Action by User]	Specify a valid path.
W0205012	[Message]	The specified path contains a non-existent folder.
	[Explanation]	The specified path includes a non-existent folder.
	[Action by User]	Specify a valid path.
W0205013	[Message]	The file name or path name is invalid. The characters (* ? " < >) cannot be used.
	[Explanation]	The string includes illegal characters.
	[Action by User]	Specify a valid path.
W0205014	[Message]	The format is invalid.
	[Explanation]	This message appears when a string with invalid format is entered into the properties or the like having a specific format.
	[Action by User]	Enter a string in accordance with the specified format.
W0205015	[Message]	Specify in hexadecimal.
	[Explanation]	A hexadecimal number specifying an area includes characters that cannot be used to represent a hexadecimal number.
	[Action by User]	Specify numeric characters as base-16.
W0205016	[Message]	Specify in decimal or hexadecimal.
	[Explanation]	A decimal/hexadecimal number specifying an area includes characters that cannot be used to represent a decimal/hexadecimal number.
	[Action by User]	Specify a valid string of numeric characters in base-10 or base-16.
W0205017	[Message]	Enter a value smaller than the end address for the start address.
	[Explanation]	This message appears when an area in which an address or symbol range is specified has a start address that is larger than the end address.
	[Action by User]	Specify an end address that is larger than the start address.

W0205018	[Message]	Enter a value in the range of xxx to yyy.
	[Explanation]	This message appears when an area in which an address or symbol range is specified has a value greater than the address space of the debugging tool.
	[Action by User]	Specify an address range that fits in the address space of the debugging tool.
W0205020	[Message]	The address cannot be omitted.
	[Explanation]	This message appears when an area for an address/symbol is left blank, and blank entries are not allowed.
	[Action by User]	Specify an address, symbol, or address expression.
W0205021	[Message]	The character string is too long. Specify a character string with xxx or fewer characters.
	[Explanation]	This message appears when a string was specified in a string area that was longer than the maximum length.
	[Action by User]	Specify a string of no more than the maximum number of characters.
W0205022	[Message]	The address expression is invalid. Specify a symbol or numerical value.
	[Explanation]	This message appears when a string that is invalid as an address expression is entered in an area for specifying an address expression.
	[Action by User]	Specify a string that is correct as an address expression.
W0205023	[Message]	The specified value is out of range.
	[Explanation]	This message appears when an out-of-bounds value is entered into a numeric input area in the properties or the like.
	[Action by User]	Enter a value within the correct range.
W0205024	[Message]	The file name is invalid. The characters (\ / : * ? " < >) cannot be used.
	[Explanation]	The string includes illegal characters.
	[Action by User]	Specify a valid file name.
W0205025	[Message]	xxx cannot be specified.
	[Explanation]	This message appears when an input value in the properties could not be specified especially.
	[Action by User]	Specify the different value within the correct range.
W0205026	[Message]	Can not specify the odd address.
	[Explanation]	This message appears when the value entered in the field for a property is odd but an even value is required.
	[Action by User]	Specify an even value.
W0205027	[Message]	Names that begin with a number can not be specified.
	[Explanation]	This message appears when no names that begin with numbers are allowed.
	[Action by User]	Specify a name that does not begin with a number.
W0205028	[Message]	Can not specify a reserved word. (xxx)
	[Explanation]	This message appears when the specified value is invalid as a reserved word. xxx indicates a list of reserved words.
	[Action by User]	Specify a value that is not a reserved word.

W0208001	[Message]	Break could not be set. Specify a global variable.
	[Explanation]	Failed to set a breakpoint that is triggered when a global variable is read, written, or read/written.
	[Action by User]	Specify a global variable in the Editor panel or Watch panel.
W0208002	[Message]	Setting for recording to trace could not be done. Specify a global variable.
	[Explanation]	Failed to set a trace that logs when a global variable is read, written, or read/written.
	[Action by User]	Specify a global variable in the Editor panel or Watch panel.
W0208003	[Message]	Setting for recording to timer could not be done. Specify a global variable.
	[Explanation]	Failed to configure timer control when a global variable is read, written, or read/written. Specify a global variable in the Editor panel or Watch panel.
	[Action by User]	Specify a global variable in the Editor panel or Watch panel.
W0209001	[Message]	Executing program ...
	[Explanation]	The action cannot be performed because the program is running.
	[Action by User]	Perform the action again after the program execution halts.
W0210001	[Message]	The connection to the debugger was completed, but the following problem may exist.
	[Explanation]	Displays a warning to check the connection of the target card.
	[Action by User]	Check the connection of the conversion adapter (EA). We recommend attaching the conversion adapter when a target is not connected.
W0210002	[Message]	Download was completed, but the following problem may exist.
	[Explanation]	A warning appears upon download.
W0210003	[Message]	Software break and hardware break are conflicted. Invalid instruction may be executed by restart.
	[Explanation]	This appears when software breakpoint and hardware breakpoint are conflicted.
	[Action by User]	The PC value may be invalid. Reset CPU, and execute it again.
W0210004	[Message]	Some RAM or register values are not restored due to some kind of problem.
	[Explanation]	This message appears when loading of RAM or register values has failed.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut. (3) Follow the instructions in the message to remedy the problem.
W0210005	[Message]	Some RAM or register values are not saved due to some kind of problem.
	[Explanation]	This message appears when saving of RAM or register values has failed.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut. (3) Follow the instructions in the message to remedy the problem.

W0210006	[Message]	Saved RAM and register values to the file(xxx), but some RAM or register values are not saved due to some kind of problem.
	[Explanation]	This message appears when saving of RAM or register values has failed.
	[Action by User]	(1) Check the emulator power. (2) Check whether the USB cable isn't cut. (3) Follow the instructions in the message to remedy the problem.
W0212001	[Message]	Overlaps xxx.
	[Explanation]	Set a size in the internal ROM size property that is different from other mapping areas. A value was set in the Mapping dialog box that overlaps with other mapping areas. xxx is a list of overlapping areas, separated by commas (,).
	[Action by User]	Set the value so that it does not overlap with other areas.
W0212002	[Message]	The specified I/O protection area does not fit within single target memory area.
	[Explanation]	The specified I/O protected area must fit inside a single configured target memory area. This message appears when the specified area protrudes from a single target memory area.
	[Action by User]	Specify an area range that will fit inside a single target memory area.
W0220001	[Message]	Default docking layout has been restored because the invalid docking layout data specified.
	[Explanation]	This message appears when restoring of the docking layout has failed.
	[Action by User]	After adjusting the docking layout, save the layout again.
W0222001	[Message]	The list of microcontrollers has not been updated.
	[Explanation]	This appears when an exception was thrown from the update library (such as when there are no updates or a restart is required).
	[Action by User]	Follow the instructions in the message.
W0223001	[Message]	Source files were added to the Project Tree panel, but some files does not exist.
	[Explanation]	When a debug project is downloaded, source files included in the load module are added automatically. This appears when any of the source files to be added are not on the file system.
	[Action by User]	Add the source files manually to the Project Tree panel.
W0231001	[Message]	Specify the file to be downloaded.
	[Explanation]	This message appears when, from the Download Files dialog box, the user clicks [OK] with the added download item file path left empty.
	[Action by User]	Set the file path.
W0233001	[Message]	Could not move to the definition location of the function. Specify the function.
	[Explanation]	Failed to move to the function definition specified in the Editor panel.
	[Action by User]	Specify the function in the Editor panel.
W0235001	[Message]	The specified xxx does not exist.
	[Explanation]	This appears when the user called the Go To The Location dialog box from the SFR/IOR panel, and a non-existent SFR/IOR name was specified.
	[Action by User]	Specify an existing SFR/IOR.

W0238001	[Message]	The information of project files, the information of source files and the window images are output. Remove these information if there is a confidential problem.
	[Explanation]	This message appears in response to clicking on the [Record Screen] button in the Message dialog box.
W0240001	[Message]	Could not move to the definition location of the symbol. Specify the symbol.
	[Explanation]	Failed to move to the definition of the specified symbol from the Disassemble panel.
	[Action by User]	Specify the symbol in the Disassemble panel.
W0241001	[Message]	The trace number cannot be omitted.
	[Explanation]	This message appears when saving trace data in the Data Save dialog box, and the [Save] button is clicked while the trace-number field is left blank.
	[Action by User]	Enter a trace number in the field.
W0241002	[Message]	Enter a decimal value for the trace number.
	[Explanation]	This message appears when saving trace data in the Data Save dialog box, and the [Save] button is clicked while a value other than a decimal number is in the trace-number field.
	[Action by User]	Specify a decimal number in the trace-number field.
W0241003	[Message]	A trace number equal to or greater than the maximum trace number xxx has been specified.
	[Explanation]	This message appears when saving trace data in the Data Save dialog box, and the [Save] button is clicked while a value greater than the maximum trace number is in the trace-number field.
	[Action by User]	Specify a number no larger than the maximum trace number in the trace-number field.
W0242001	[Message]	The upper limit (128) of watch expressions that can be registered to the Watch panel has been exceeded.
	[Explanation]	The maximum number of watch expressions that can be registered in a single Watch panel is 128.
	[Action by User]	Remove unnecessary watch expressions or register it in a new Watch panel.
W0242002	[Message]	The upper limit (64) of categories that can be registered to the Watch panel has been exceeded.
	[Explanation]	The maximum number of categories that can be registered in a single Watch panel is 64.
	[Action by User]	Remove unnecessary categories or register it in a new Watch panel.
W0243001	[Message]	Cannot paste because the display format (notation system, bit width) is different.
	[Explanation]	This message appears when pasting a memory value or ASCII characters in the Memory panel, and the display formats of the string to paste and the Memory panel are different (number base and bit width), and the paste can therefore not be performed.
	[Action by User]	In the Memory panel, set the display format (number base and bit width) the same as the text to paste.

W0243002	[Message]	Characters that cannot be pasted in the [Memory Value Display] area are included.
	[Explanation]	Illegal characters have been typed or pasted into the Memory panel's [Memory Value Display] area.
	[Action by User]	Specify a string that can be treated as a memory value.
W0243003	[Message]	Only ASCII code can be pasted in the [Character Display] area.
	[Explanation]	On the Memory panel, in the [Character Display] area, text can only be pasted when the encoding is specified as ASCII.
	[Action by User]	Use the [Memory Value Display] area to paste text in other than ASCII encoding.
W0243004	[Message]	Cannot paste because the area contain write-protected area.
	[Explanation]	This message appears when a memory value or ASCII characters are pasted into the Memory panel, and the area being pasted into is read-only.
	[Action by User]	Change the length of text copied or the location copied to, in order to avoid pasting into a read-only area.
W0244001	[Message]	Too many initialization data.Only up to 16 initialization data can be specified.
	[Explanation]	This message appears when 17 or more initial values are entered in the Memory Initialize dialog box, then the [OK] button is clicked.
	[Action by User]	Set 16 or fewer initial values.
W0244002	[Message]	Each initialization data cannot exceed 4 bytes.
	[Explanation]	This message appears when an initial value is 5 bytes or larger in size.
	[Action by User]	Specify an initial value of no more than 4 bytes in size.
W0244003	[Message]	Enter the initialization data.
	[Explanation]	This message appears when the initial data text box in the Memory Initialize dialog box is left empty, and the [OK] button is clicked.
	[Action by User]	Enter initial values in the input box.
W0244004	[Message]	Enter the initialization data in hexadecimal.
	[Explanation]	This message appears when non-hexadecimal values are entered in the initial data text box in the Memory Initialize dialog box.
	[Action by User]	Enter initial values in the input box in hexadecimal format.
W0245001	[Message]	The search data cannot be omitted.
	[Explanation]	When a search data input box of the Memory Search dialog box was in the state of the blank, and a [OK] button was clicked, it's shown to an error service provider.
	[Action by User]	Input a character string to a search data input box.
W0245002	[Message]	The search data format is invalid. Specify with yyy of xxx.
	[Explanation]	This appears in an error services provider when the format specified in the Memory Search dialog box differs from the notation or size shown in the Memory panel.
	[Action by User]	Specify the data format displayed in the Memory panel in the search data.
W0245003	[Message]	Up to xxx bytes of data can be searched at one time.
	[Explanation]	This appears in an error services provider when the specified size of data in the Memory Search dialog box exceeds the number of specified bytes.
	[Action by User]	Specify data of the size less than the number of specified bytes.

W0245004	[Message]	An invalid character string has been entered. Enter a character string that can be encoded with xxx.
	[Explanation]	This appears when characters are specified for a text search the Memory Search dialog box that cannot be displayed in the current encoding format of the Memory panel.
	[Action by User]	Specify characters that can be encoded.
W0247001	[Message]	There is no available action event to set the specified location.
	[Explanation]	This appears when the Action Events dialog box is opened, and there are no action events that can be configured.
	[Action by User]	Specify a different location.
W0249001	[Message]	Clear out the category to be deleted.
	[Explanation]	This message appears when a non-empty category is selected in the SFR/IOR panel, and the [Delete (EditDelete)] command is selected.
	[Action by User]	Make the category empty. In the SFR/IOR panel, delete the categories below the category you wish to delete, after moving SFR/IOR below them.
W0261001	[Message]	The segment name is invalid. The characters (0-9 A-Z a-z _ . / \) can be used only.
	[Explanation]	This appears when a segment name is specified in the Link Directive File Generation dialog box using illegal characters.
	[Action by User]	Specify the segment name using valid characters.
W0261002	[Message]	A segment with the same name already exists.
	[Explanation]	This appears when an existing segment name is specified in the Link Directive File Generation dialog box.
	[Action by User]	Change the name of the segment to one that does not exist.
W0261003	[Message]	The section name is invalid. The characters (0-9 A-Z a-z _ . / \) can be used only.
	[Explanation]	This appears when a section name is specified in the Link Directive File Generation dialog box using illegal characters.
	[Action by User]	Specify the section name using valid characters.
W0261004	[Message]	A section with the same name already exists.
	[Explanation]	This appears when an existing section name is specified in the Link Directive File Generation dialog box.
	[Action by User]	Change the name of the section to one that does not exist.
W0261005	[Message]	The symbol name is invalid. The characters (0-9 A-Z a-z _ . / \) can be used only.
	[Explanation]	This appears when a symbol name is specified in the Link Directive File Generation dialog box using illegal characters.
	[Action by User]	Specify the symbol name using valid characters.
W0261006	[Message]	A symbol with the same name already exists.
	[Explanation]	This appears when an existing symbol name is specified in the Link Directive File Generation dialog box.
	[Action by User]	Change the name of the symbol to one that does not exist.

W0261007	[Message]	The section name is invalid. Specified name is a reserved section name for particular segment use only.
	[Explanation]	This appears when a reserved section with a fixed segment is specified within a different segment in the Link Directive File Generation dialog box.
	[Action by User]	Change the section to one that is not reserved.
W0261008	[Message]	The TP-symbol name is invalid. Specified TP-symbol name is no-exist.
	[Explanation]	This appears in the case of a base TP symbol, when the TP specified in the Link Directive File Generation dialog box does not exist.
	[Action by User]	Change to an existing TP symbol name.
W0261009	[Message]	The memory area name is invalid. The characters (0-9 A-Z a-z _ ? @) can be used only.
	[Explanation]	This message appears when invalid characters have been used for the name of a memory area in the Link Directive File Generation dialog box.
	[Action by User]	Only use valid characters for the names of memory areas.
W0261010	[Message]	A memory area with the same name already exists.
	[Explanation]	This message appears when the name of an existing memory area has been specified in the Link Directive File Generation dialog box.
	[Action by User]	Change the name of the memory area.
W0261012	[Message]	memory area range is invalid. Place the area without overlap to other memory area.
	[Explanation]	This message appears when the address or size of a memory area specified in the Link Directive File Generation dialog box overlaps with that of an existing address range.
	[Action by User]	Change the address or size of the memory area.
W0261013	[Message]	The start address of segment is invalid. Specify the address of the memory area to be placed.
	[Explanation]	This message appears when the address of a segment specified in the Link Directive File Generation dialog box is outside the memory area to which the segment is to be allocated.
	[Action by User]	Specify an address within the memory area to which the segment is to be allocated.
W0290001	[Message]	The Section field is empty. Input a correct section name.
	[Explanation]	This message appears when the section is empty.
	[Action by User]	Enter a valid section.
W0290002	[Message]	Use only the following characters in the field except that 0-9 cannot be the first letter of a section name. A-Z a-z 0-9 _ \$ * ?
	[Explanation]	This message appears when a string that is invalid as a section name is entered in an area for specifying a section name.
	[Action by User]	Enter a valid section.

W0290003	[Message]	Use only the following characters in the field except that 0-9 cannot be the first letter of a symbol. A-Z a-z 0-9 _ \$
	[Explanation]	This message appears when a string that is invalid as a symbol name is entered in an area for specifying a symbol name.
	[Action by User]	Enter a valid symbol name.
W0290004	[Message]	The Address which is already specified cannot be specified again.
	[Explanation]	This message appears when an address that has already been specified is specified again.
	[Action by User]	Enter a unique address.
W0290005	[Message]	The Address field is empty. Input an Address in the field.
	[Explanation]	This message appears when the address is empty.
	[Action by User]	Enter a valid address.
W0290006	[Message]	Please enter an integer.
	[Explanation]	This message appears when a string that is invalid as an integer is entered in an area for specifying an integer value.
	[Action by User]	Enter a string that represents a valid integer.
W0290007	[Message]	Please enter an integer between 0 and 0xfffff.
	[Explanation]	This message appears when an out-of-bounds value is entered into an area for specifying an address.
	[Action by User]	Enter a value within the range.
W0290008	[Message]	The 'Optimizes accesses to external variables' has been specified. Check 'Outputs the external symbol-allocation information file' in the Output category on the Link option tab.
	[Explanation]	This appears when choosing the option which linked.
W0290009	[Message]	The specification of 'Optimizes accesses to external variables' has been canceled in all files in the project. Uncheck 'Outputs the external symbol-allocation information file' in the Output category on the Link option tab.
	[Explanation]	This appears when choosing the option which linked.
W0290010	[Message]	The [Uses floating-point operation instructions] property is changed to [Depends on the CPU type option].
	[Explanation]	This appears when choosing the option which linked.
W0290011	[Message]	Use only the following characters in the field. A-Z a-z 0-9 @ _ . ~ *
	[Explanation]	This message appears when invalid characters have been detected in the field where a section name is specified.
	[Action by User]	Enter a valid section name.
W0290012	[Message]	Please enter an integer between 0 and xxx.
	[Explanation]	This message appears when an out-of-bounds value is entered into an area for specifying an address.
	[Action by User]	Enter a value within the range.

W0290013	[Message]	Use only the following characters in the field. A-Z a-z 0-9 @ _ . *
	[Explanation]	This message appears when invalid characters have been detected in the field where a section name is specified.
	[Action by User]	Enter a valid section name.
W0291001	[Message]	The format of section or address is invalid.
	[Explanation]	This message appears when a string with invalid format was entered when inputting a character string in [Specify a section start address] property in [Section] category in [Link Options] tab.
	[Action by User]	Enter a string in accordance with the specified format.
W0291002	[Message]	Section Setting dialog does not support parentheses in option "start".
	[Explanation]	This message appears when parentheses "(" are entered in [Specify a section start address] property in [Section] category in [Link Options] tab and the [...] button is clicked (instead of opening the Section Settings dialog box).
W0291003	[Message]	Specify valid rule number.
	[Explanation]	This message appears when invalid characters have been detected in the field where MISRA-C rule numbers are specified.
	[Action by User]	Enter valid rule numbers.
W0291004	[Message]	Specify valid predefined macro.
	[Explanation]	This message appears when a predefined macro that is not specifiable was selected in [Invalidates the predefined macro] in [Source] category in [Compile Options] tab.
	[Action by User]	Enter a valid predefined macro.
W0291005	[Message]	The following files cannot be specified as an excluded file. Project conversion continues, but following files are not registered to the project. xxx
	[Explanation]	This message appears at conversion of a HEW project in which a file type (cfg file) that cannot be specified as an excluded file was specified as an excluded file.
	[Action by User]	[OK]: Continue the conversion processing.
W0293001	[Message]	Watch your adding object/library files. In some build mode, -Xwhole_program is set. There is a possibility that an invalid code is made for adding the obj / lib file.Refer to the manual for details.
	[Explanation]	This message appears when the -Xwhole_program option is set in build properties, and an .obj or .lib file is registered.
	[Action by User]	Before using the -Xwhole_program option in build properties, make sure that none of the variables or functions to be compiled are referenced by external modules.
W0293002	[Message]	The 'Optimizes accesses to external variables' has been specified. Check 'Outputs the external symbol-allocation information file' in the Output category on the Link option tab.
	[Explanation]	This appears when the compiler option -Omap is set in the CC-RH build properties, but the linker -MAp option is not set to "ON." After displaying this warning, the build plug-in automatically enables the linker's -MAp option.

W0293003	[Message]	The specification of [Optimizes accesses to external variables] has been canceled in all files in the project. Uncheck [Output external symbol allocation information file] in the [Optimization(Details)] category on the Link option tab.
	[Explanation]	This message appears when the selected option is used in conjunction with another option.
W0293004	[Message]	The file name is invalid. The characters (\ / : * ? " < >) cannot be used.
	[Explanation]	This message appears when the filename includes invalid characters.
	[Action by User]	Specify a valid filename.
W0293006	[Message]	xxx is used as a Boot Loader project for stand-alone debugging.
	[Explanation]	This message appears when an active application project for a multicore is set as the configuration project of multiple boot loader projects while the [Priority debugging] property of each boot loader project is [Yes].
W0294001	[Message]	Watch your adding object/library file(s). In some build mode, -Owhole_program is set. There is a possibility that an invalid code is made for adding the obj / lib file. Refer to the manual for details.
	[Explanation]	A file with the filename extension .obj or .lib has been added in a case where the -Owhole_program option is set in the build properties of the CC-RL.
	[Action by User]	Before using the -Owhole_program option of the build properties of the CC-RL, ensure that there are no references from within external modules to functions and variables in the source files to be compiled.
W0294002	[Message]	The [Optimizes accesses to external variables] has been specified. Check [Output external symbol allocation information file] in the [Optimization(Details)] category on the Link option tab.
	[Explanation]	The [Optimize access to external variables] option needs to be used in combination with the [Output external symbol allocation information file] option.
W0294003	[Message]	The specification of [Optimizes accesses to external variables] has been canceled in all files in the project. Uncheck [Output external symbol allocation information file] in the [Optimization(Details)] category on the Link option tab.
	[Explanation]	Cancelling the [Optimize access to external variables] option also requires cancelling of the [Output external symbol allocation information file] option.
W0294004	[Message]	The file name is invalid. The characters (\ / : * ? " < >) cannot be used.
	[Explanation]	The filename contains invalid characters.
	[Action by User]	Specify a valid filename.
W0294005	[Message]	The specified value is out of range.
	[Explanation]	A value outside the supported range has been entered in a field for numerical values (e.g. for a property setting).
	[Action by User]	Enter a value within the supported range.
W0300001	[Message]	The name is already used. Please use another name.
	[Action by User]	Change to a different name.
W0300002	[Message]	Only the user defined column can be deleted.
	[Action by User]	Deselect non user-defined columns.

W0300003	[Message]	The column of the same name exists. Please input another name.
	[Action by User]	Change the name.
W0300004	[Message]	Please input the column name.
W0300005	[Message]	Please select a column to delete.
W0300006	[Message]	The external peripheral of the same name exists. Please input another name.
	[Action by User]	Change the name of the external peripheral.
W0300007	[Message]	Please input the external peripheral name.
W0300008	[Message]	The input value does not correspond to the type of the column. Please input a correct value.
	[Action by User]	Change the value.
W0403000	[Message]	Code generation failed.
W0403001	[Message]	The following pin conflicts have been detected. You must change the setting in that module before you can use it for other purpose.
W0403002	[Message]	Frequency of clock xxx is lower than clock yyy, you should change the setting in System.
		[RL78] No suitable value could be selected in valid range, please reset the peripheral clock in System module.
W0403003	[Message]	Please select the trigger.
W0403004	[Message]	Information of valid input value range: 0x00000000000000000000~0xfffffffffffffffx. Input 10 byte Hex value.
W0403005	[Message]	Information of valid input value range: 16~238 The input value must be even.
W0403006	[Message]	Can not use uart for it needs two channels.
W0403007	[Message]	xxx is not selected now, and you should select the clock in System module before you want to use it.
W0403008	[Message]	Information of valid input value range: xxx~yyy
W0403009	[Message]	Source address range: xxx
W0403010	[Message]	Destination address range: xxx
W0403011	[Message]	The start-up file for the build object was changed to "xxx".
W0403012	[Message]	The link directive file for the build object was changed to "xxx".
W0403013	[Message]	The address will overflow as a result of counting direction and byte
W0403014	[Message]	The combination operation can't be selected, because its slave channel has been used for other purposes.
W0403015	[Message]	P52/SLTI/SLTO has been used by channel n.
W0403016	[Message]	Please firstly input valid xxx value.
W0403017	[Message]	Please input or select a valid SFR address.
W0403018	[Message]	When 20 MHz has been selected, the circuit cannot be changed to a 1 MHz internal high-speed oscillator.
W0403019	[Message]	The following interrupt conflicts have been detected. You must change the setting in that module before you can use it for other purpose.

W0403020	[Message]	No channel can be used, please modify analog input pins selection.
W0403021	[Message]	xxx was changed, the following macros should be updated:yyy.
W0403022	[Message]	Cannot reflect user option byte to Code generator(Design Tool). Please change the value of user option byte or set it at Code Generator(Design Tool).
W0403023	[Message]	Cannot reflect build option to Code generator(Design Tool). Please change the setting of build option or Code Generator(Design Tool).
W0403028	[Message]	The xxx function shared by the yyy pin can be only used in input mode, using the port function in output mode is prohibited.
W0403029	[Message]	Please select pin assignment setting.
W0403030	[Message]	To use xxx module, please release yyy module firstly.
W0403031	[Message]	Please select the "xxx".
W0403032	[Message]	The following activation source conflicts have been detected.
W0403033	[Message]	To use xxx, please release yyy in zzz module firstly.
W0403034	[Message]	The following xxx conflicts have been detected.
W0403035	[Message]	Please set at least 2 slaves.
W0403036	[Message]	To use this selection, please unselect noise filter sampling clock from another channel.
W0403037	[Message]	Please set only 1 slave.
W0403038	[Message]	The combination operation can't be selected, because its master channel has been used for other purposes.
W0403039	[Message]	Please set master channel first.
W0403040	[Message]	Setting is not valid, because [xxx] is selected.
W0403041	[Message]	Setting is not valid, because no channel is used as analog input.
W0403042	[Message]	Setting is not valid, because [xxx] is changed.
W0403043	[Message]	Setting is not valid, because [High speed main mode] is not used in System module.
W0403044	[Message]	Please select one valid item.
W0403045	[Message]	Please input valid RAM address symbol.
W0403046	[Message]	There is an error in a set item. The source generation cannot be executed.
W0403047	[Message]	Input source setting is not valid.
W0403048	[Message]	To use xxx, please release yyy module firstly.
W0403049	[Message]	Comparator reference voltage is internal reference voltage, the temperature sensor output cannot be A/D converted.
W0403050	[Message]	Please select xxx (= yyy MHz) as zzz in System module before you want to use it.
W0403051	[Message]	Please input a valid text.
W0403052	[Message]	Oscillation stop detection can be used under either of the following conditions: - When bit 0 (WDSTBYON) and bit 4 (WDTON) of the option byte (000C0H) are set to 1 and bit 4 (WUTMMCK0) of the OSMC register is set to 0 - When bit 4 (WUTMMCK0) of the OSMC register is set to 1
W0403053	[Message]	Please select xxx (yyy MHz) in System module before you want to use it.

W0403054	[Message]	Setting is not valid, because it has been set as analog input by ADPC register.
W0403055	[Message]	Setting is not valid, because it has been set as digital I/O by ADPC register.
W0403059	[Message]	Setting is not valid, because [Low voltage main mode] is used in System module.
W0403060	[Message]	Setting is not valid, because Comparators use as the cutoff function.
W0403061	[Message]	Frequency of clock xxx is less than clock yyy or zzz, please reset the peripheral clock in System module.
W0403062	[Message]	Frequency of clock xxx is less than clock yyy, please reset the peripheral clock in System module.
W0403063	[Message]	Setting is not valid, because Window A and Window B select the same channel.
W0403064	[Message]	Setting is not valid, because Upper-side level is less than Lower-side level.
W0602102	[Message]	Please check connection of the exchange adapter.
W0603001	[Message]	Fewer than xxx or more than yyy characters cannot be specified.
	[Explanation]	This message appears in the Message dialog box if a string is specified for the area that is shorter than xxx characters, or longer than yyy characters, when xxx and yyy are the minimum and maximum lengths, respectively.
	[Action by User]	xxx is the minimum length of the character string, and yyy is the maximum length. The values of xxx and yyy are dependent on the input area.
W0603002	[Message]	More than xxx characters cannot be specified.
	[Explanation]	This message appears when a line in the display source set in the Edit Text dialog box is longer than the maximum number of characters.
	[Action by User]	Shorten the line that is greater than the maximum length so that it is within the maximum number of characters.
W0603003	[Message]	More than xxx lines cannot be specified.
	[Explanation]	This message appears when the display source set in the Text Edit dialog box is longer than the maximum number of lines.
	[Action by User]	Make sure that the number of lines is no more than the maximum limit.
W0603004	[Message]	Specify xxx digits in hexadecimal.
	[Explanation]	This message appears when a string containing characters that cannot be used to represent a base-16 number is entered in a base-16 number field, or when the number of digits is not valid.
	[Action by User]	Specify a hexadecimal number with <valid number of digits>.
W0603005	[Message]	This address expression is invalid. Check if the expression is correct or if the spelling of the symbols used in the expression is correct.
	[Explanation]	This message appears when the start address or end address in the Memory Initialize dialog box is an invalid address expression.
W0603006	[Message]	Specify a numerical value.
	[Explanation]	This message appears when a string containing characters that are invalid as numbers was entered in a numeric field.
	[Action by User]	Specify a string that represents a valid number.

W0603007	[Message]	Specify in decimal.
	[Explanation]	This message appears when a string containing characters that are invalid as a decimal number was entered in a decimal (base-10) numeric field.
	[Action by User]	Specify a string that represents a valid number in decimal notation.
W0603008	[Message]	Fewer than xxx or more than yyy values cannot be specified.
	[Explanation]	This message appears when an out-of-bounds value is entered into a numeric input area in the properties or the like.
	[Action by User]	Specify a value between xxx and yyy.
W0603009	[Message]	Only ASCII character sets can be entered.
	[Explanation]	This message appears when a string containing other than ASCII or numeric characters was entered in a field where only numbers or ASCII strings can be specified.
	[Action by User]	Specify a string that is a valid number or a valid ASCII string.
W0603010	[Message]	Specify a character string.
	[Explanation]	The field is empty.
	[Action by User]	Specify a valid string.
W0603011	[Message]	Specify a path.
	[Explanation]	The field is empty.
	[Action by User]	Specify a valid path.
W0603012	[Message]	The specified path contains a non-existent folder.
	[Action by User]	Specify a valid path.
	[Message]	The file name or path name is invalid. The characters (\ / : * ? " < >) cannot be used.
W0603013	[Explanation]	The string includes illegal characters.
	[Action by User]	Specify a valid filename or path.
	[Message]	The format is invalid.
W0603014	[Explanation]	This message appears when a string with invalid format is entered into the properties or the like having a specific string format.
	[Action by User]	Enter a string in accordance with the specified format.
	W0603015	[Message]
[Explanation]		This message appears when a string containing characters that are invalid as a hexadecimal number was entered in a hexadecimal (base-16) numeric field.
[Action by User]		Specify a string that represents a valid number in hexadecimal notation.
W0603016	[Message]	Specify in decimal or hexadecimal.
	[Explanation]	This message appears when a string containing characters that are invalid as a decimal/hexadecimal number was entered in a decimal (base-10)/hexadecimal (base-16) numeric field.
	[Action by User]	Specify a string that represents a valid number in decimal/hexadecimal notation.

W0603017	[Message]	Enter a value smaller than the end address for the start address.
	[Explanation]	This message appears when an area in which an address or symbol range is specified has a start address that is larger than the end address.
	[Action by User]	Specify a start address that is less than or equal to than the end address.
W0603018	[Message]	Enter a value in the range of xxx to yyy.
	[Explanation]	This message appears when a value greater than the address space of the debugging tool is specified in an area for an address or symbol range.
	[Action by User]	Specify an address range that fits in the address space of the debugging tool.
W0603019	[Message]	The specified symbol does not exist.
	[Explanation]	This message appears when a nonexistent symbol is specified in an area for an address or symbol range.
	[Action by User]	Specify an existing symbol.
W0603020	[Message]	The address cannot be omitted.
	[Explanation]	This message appears when an area for an address/symbol is left blank, and blank entries are not allowed.
	[Action by User]	Specify an address, symbol, or address expression.
W0603021	[Message]	The character string is too long. Specify a character string with xxx or fewer characters.
	[Explanation]	This message appears when a string was specified in a string area that was longer than the maximum length.
	[Action by User]	Specify a string of no more than the maximum number of characters.
W0603022	[Message]	The address expression is invalid. Specify a symbol or numerical value.
	[Explanation]	This message appears when a string that is invalid as an address expression is entered in an address-expression area.
	[Action by User]	Specify a string that is correct as an address expression.
W0603030	[Message]	The load module which linked the flash library not found.
W0603032	[Message]	Specify the address of the 1MB boundary unit as the starting address of coverage measurement area.
W0603034	[Message]	Specified value is already set.
W0603035	[Message]	Changed the trace target, because debug mode has been changed. If you want to change the trace target, change the "trace target" property.
W0603036	[Message]	Changed to enable the security function. If enable the security function, can not be returned disabled.
W0617000	[Message]	Set OPJTAG in LPD for debug tool connection.
	[Action by User]	The debug tool forcibly changes the OPJTAG setting to select LPD upon its connection to CS+. If you set the [Set OPJTAG in JTAG connection before disconnecting] property to [Yes], the JTAG connection will be restored after the debug tool is disconnected.
W0810001	[Message]	A variable or a register with the input name doesn't exist.

W0805001	[Message]	Specify in decimal.
	[Explanation]	This message appears when a string containing characters that are invalid as a decimal number was entered in a decimal (base-10) numeric field.
	[Action by User]	Specify a string that represents a valid number in decimal notation.
W0805002	[Message]	Specify in decimal or hexadecimal.
	[Explanation]	This appears when an area specifying a decimal/hexadecimal number includes characters that cannot be used to represent a decimal/hexadecimal number.
	[Action by User]	Specify a string that represents a valid number in decimal/hexadecimal notation.
W0805003	[Message]	The character string is too long. Specify a character string with xxx or fewer characters.
	[Explanation]	This message appears when a string was specified in a string area that was longer than the maximum length.
	[Action by User]	Specify a string of no more than the maximum number of characters.
W0805004	[Message]	Please input a value that is smaller than the upper bound value to lower bound value.
	[Explanation]	This message appears when entering the lower limit of the display range of an analysis graph or the lower limit of its valid range, and the sizes of the upper and lower limits are reversed.
	[Action by User]	Enter a lower limit that is smaller than the upper limit. If you will also enter a larger upper limit, enter the value for the upper limit first.
W0805005	[Message]	Please input a value that is bigger than lower bound value to the upper bound value.
	[Explanation]	This message appears when entering the upper limit of the display range of an analysis graph or the upper limit of its valid range, and the sizes of the upper and lower limits are reversed.
	[Action by User]	Enter a upper limit that is larger than the lower limit. If you will also enter a smaller lower limit, enter the value for the lower limit first.
W0805008	[Message]	Fewer than xxx or more than yyy values cannot be specified.
	[Explanation]	This message appears when an out-of-bounds value is entered into a numeric input area in the properties or the like.
	[Action by User]	Specify a value between xxx and yyy.
W0805009	[Message]	The file name or path name is invalid. The characters (\ / : * ? " < >) cannot be used.
	[Explanation]	The string includes illegal characters.
	[Action by User]	Specify a valid path name.
W0820001	[Message]	Unknown destination.
	[Explanation]	This message appears when a destination is unknown when executing the [Jump to Source] menu command, etc.. It is not possible to jump from specified location, because a destination is unknown.
W0827001	[Message]	Can not preview image.
	[Explanation]	This message appears when the generation of preview images was not possible due to the project having too many functions or another reason.
W1200723	[Message]	The specified trace-buffer size has been reduced due to memory shortage.

W1203106	[Message]	Memory unready status was canceled.
W1204111	[Message]	Target is not turned on.
W1204116	[Message]	Data is not exist.
W1208205	[Message]	No initialize data for SFR/IOR.
W1216412	[Message]	Software break can not be set on this area.
W1220491	[Message]	Specified device file does not relocate internal RAM.
W1220494	[Message]	No tag data which it was going to refer to device file.
W1228688	[Message]	No source information exists.
W1228689	[Message]	Unknown result of step execution.
W1245086	[Message]	No debug information (not compiled by the method of generating debug information).
W1245110	[Message]	Out of variable region.
W1245122	[Message]	Symbol module is not initialized.
W1245877	[Message]	Too long symbol name.
W1249175	[Message]	Symbol information is duplicated, please reset symbols.
W1249178	[Message]	BSS area is assigned to non-mapped area.
W1249180	[Message]	Programmable IOR address mismatch.
W1249181	[Message]	Selected load module different from kind(Chip) was loaded.
W1790000	[Message]	The timer overflow.
W1790001	[Message]	The timer function is not supported.
W1810204	[Message]	USB bus power voltage is low.
	[Action by User]	Change the host machine.
W1811110	[Message]	MDE register was modified.
W1811111	[Message]	UB code was modified.
W1811112	[Message]	MDE register and UB code are modified.
W1811115	[Message]	Started up with hot plug-in, but option setting memory is not written.
	[Action by User]	To set up the option-setting memory, start up the emulator and download a file with the required settings.
W1811126	[Message]	OSF1 register value was modified.
	[Explanation]	This message only appears during debugging. Data was modified.
W1811127	[Message]	MDE register value and OFS1 register value were modified.
	[Explanation]	This message only appears during debugging. Data was modified.
W1811306	[Message]	The read operation to the data flash area where reading was prohibited occurred.
W1811318	[Message]	The access violation to the internal flash ROM has occurred (ILGLERR bit is '1').
W1811321	[Message]	Data for MDE register was modified for the endian, which was specified on starting up.
W1811322	[Message]	Data for UB code was modified for the operating mode, which was specified on starting up.

W1811323	[Message]	Data for MDE register and UB code were modified for the setting, which was specified on starting up.
W1811325	[Message]	Internal ROM area was accessed while user program is running.
W1811326	[Message]	The emulator has recovered from a communication error which occurred because the clock was switched during memory access or due to other reasons.
W1811328	[Message]	The writing data for OFS1 register was modified to disable "Startup Voltage Monitoring 1 Reset".
	[Explanation]	This message only appears during debugging. Data was modified.
W1811330	[Message]	The area where CPU access is needed was accessed while the program is running.
	[Explanation]	This message only appears during debugging. The debugger is not allowed to read data from the CPU-access area while the user program is running.
W1811333	[Message]	The writing data for OFS1 register was modified to disable the voltage monitoring reset after a reset.
	[Explanation]	Ensure that the voltage monitoring reset is disabled after a reset (LVDAS bit = 1).
W1811334	[Message]	There's no data for option setting memory.
	[Action by User]	Specify the values to be set for the option-setting memory in the file for downloading.
W1811336	[Message]	Warning: The download data were not written in the Trusted Memory area.
	[Explanation]	The area for the downloading of data includes locations in the trusted memory area.
	[Action by User]	Ensure that the area for the downloading of data does not include any locations in the trusted memory area.
W1811337	[Message]	Warning: The wait setting for the RAM was changed temporarily to access it correctly.
	[Explanation]	The memory-wait cycle setting is incorrect.
	[Action by User]	Check the memory-wait cycle setting.
W1811338	[Message]	Warning: The wait setting for the ROM was changed temporarily to access it correctly.
	[Explanation]	The memory-wait cycle setting is incorrect.
	[Action by User]	Check the memory-wait cycle setting.
W1812808	[Message]	There was a sector that could not be written/erased in the external flash ROM, because it was locked.
W1891371	[Message]	Order of the sequential event might have been modified. Please check the detail setting of the event combination.
	[Action by User]	Set the event sequence again by editing the combination of conditions.
W1891901	[Message]	Because the value of the operating frequency has not been set, 25.0MHz is used as its initial value. The timer measurement result may be incorrect.
W1892250	[Message]	Register ID is invalid.
	[Action by User]	Specify the correct register ID.
W1892251	[Message]	The specified value is over the maximum value which can be set to the register.
	[Action by User]	Enter a value within the specifiable range.

W2000001	[Message]	The function xxx cannot be found.
	[Explanation]	This message dialog box appears when the selected function name cannot be jumped to using the "Jump to function" operation.
W2000003	[Message]	The symbol or address xxx cannot be found.
	[Explanation]	This message appears when the given symbol or address was not found, so jumping to the location of the symbol or the address was not possible.
W2200001	[Message]	<i>option-name</i> is unknown option, ignore.
	[Explanation]	The specified option is not supported. The setting is ignored and processing is continued.
W2200006	[Message]	Block information file not found.
	[Explanation]	This message appears when the file specified by the -iorblock option cannot be found.
	[Action by User]	Check if the information file that defines blocks exists.
W2200007	[Message]	Cannot read block information file (unknown file).
	[Explanation]	Loading of the information file that defines blocks has failed. A file that is not the information file that defines blocks was specified.
	[Action by User]	Specify the information file that defines blocks.
W2200008	[Message]	An IOR block has unknown format, ignore.
	[Explanation]	This message appears when the format of definition information of one block is illegal in the information file that defines blocks.
	[Action by User]	Confirm that the information file that defines blocks is a legitimate file.

Revision Record

Rev.	Date	Description	
		Page	Summary
1.00	Aug 01, 2015	-	First Edition issued

CS+ V3.02.00 User's Manual:
Message

Publication Date: Rev.1.00 Aug 01, 2015
Published by: Renesas Electronics Corporation

**SALES OFFICES****Renesas Electronics Corporation**<http://www.renesas.com>Refer to "<http://www.renesas.com/>" for the latest and detailed information.**Renesas Electronics America Inc.**2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130**Renesas Electronics Canada Limited**9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004**Renesas Electronics Europe Limited**Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900**Renesas Electronics Europe GmbH**Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327**Renesas Electronics (China) Co., Ltd.**Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679**Renesas Electronics (Shanghai) Co., Ltd.**Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999**Renesas Electronics Hong Kong Limited**Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022**Renesas Electronics Taiwan Co., Ltd.**13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670**Renesas Electronics Singapore Pte. Ltd.**80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300**Renesas Electronics Malaysia Sdn.Bhd.**Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510**Renesas Electronics India Pvt. Ltd.**No.777C, 100 Feet Road, HALII Stage, Indiranagar, Bangalore, India
Tel: +91-80-67208700, Fax: +91-80-67208777**Renesas Electronics Korea Co., Ltd.**12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141

CS+ V3.02.00