

# **User's Manual**

## **AB-050-FX3-U**

### **V850ES/Fx3 Starter Board**

#### **Hardware**

---

Document No.           EASE-UM-0019-2.1  
Date Published         February 2007

© NEC Electronics 2007

## DISCLAIMER

- The information in this document is current as of April 2006. The information is subject to change without notice. For actual design-in, refer to the latest publications of NEC Electronics data sheets or data books, etc., for the most up-to-date specifications of NEC Electronics products. Not all products and/or types are available in every country. Please check with an NEC sales representative for availability and additional information.
- No part of this document may be copied or reproduced in any form or by any means without prior written consent of NEC Electronics. NEC Electronics assumes no responsibility for any errors that may appear in this document.
- NEC Electronics does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of NEC Electronics products listed in this document or any other liability arising from the use of such NEC Electronics products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Electronics or others.
- Descriptions of circuits, software and other related information in this document are provided for illustrative purposes in semiconductor product operation and application examples. The incorporation of these circuits, software and information in the design of customer's equipment shall be done under the full responsibility of customer. NEC Electronics assumes no responsibility for any losses incurred by customers or third parties arising from the use of these circuits, software and information.
- While NEC Electronics endeavours to enhance the quality, reliability and safety of NEC Electronics products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated entirely. To minimize risks of damage to property or injury (including death) to persons arising from defects in NEC Electronics products, customers must incorporate sufficient safety measures in their design, such as redundancy, fire containment and anti-failure features.
- NEC Electronics products are classified into the following three quality grades: "Standard", "Special" and "Specific". The "Specific" quality grade applies only to NEC Electronics products developed based on a customer-designated "quality assurance program" for a specific application. The recommended applications of NEC Electronics product depend on its quality grade, as indicated below. Customers must check the quality grade of each NEC Electronics product before using it in a particular application.

"Standard": Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots.

"Special": "Special": Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support).

"Specific": "Specific": Aircraft, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems and medical equipment for life support, etc.

The quality grade of NEC Electronics products is "Standard" unless otherwise expressly specified in NEC Electronics data sheets or data books, etc. If customers wish to use NEC Electronics products in applications not intended by NEC Electronics, they must contact NEC Electronics sales representative in advance to determine NEC Electronics 's willingness to support a given application.

- Note:**
1. "NEC Electronics" as used in this statement means NEC Electronics Corporation and also includes its majority-owned subsidiaries.
  2. "NEC Electronics products" means any product developed or manufactured by or for NEC Electronics (as defined above).

## Table of Contents

1	Introduction .....	6
2	Board description .....	7
2.1	Overview .....	7
2.1.1	Electrical Area .....	7
2.1.2	Functional Area .....	8
2.1.3	Connecting both areas .....	8
2.2	Reset .....	9
2.3	NWire connection .....	9
2.4	PG-FP4 connection .....	9
2.5	RS-232 / LIN .....	10
2.6	CAN .....	13
3	Mounting the FK3 device on the board .....	14
4	Connecting the Power Supply .....	15
5	UART / LIN CAN DSUB connectors .....	16
5.1	UART / LIN connectors .....	16
5.2	CAN connectors .....	17
6	Mounting other Fx3 devices on the board .....	18
6.1	Mounting devices .....	18
6.1.1	Mounting a FE3 device .....	18
6.1.2	Mounting a FF3 device .....	19
6.1.3	Mounting a FG3 device .....	19
6.1.4	Mounting a FJ3 device .....	20
6.2	Pin connection .....	21
6.2.1	Power supply pins .....	21
6.2.2	REGC pin .....	22
6.2.3	X1, X2 pins .....	23
6.2.4	XT1, FLMD0 .....	24
6.3	Functional pin connection .....	25
6.3.1	Jumper overview .....	25
6.3.2	Testpoints .....	26
6.3.3	Reset signal .....	26
6.3.4	NWIRE signals .....	27
6.3.5	Flash Programming interface .....	27
6.3.6	CAN interface .....	28
6.3.7	UARTD interface .....	29
7	Revision History .....	30
8	Appendix A – Pin Number templates .....	31
9	Appendix B - Schematic .....	32

## List of Figures

Figure 1	AB-050-FX3-U with FK3 Device .....	6
Figure 2-1	Board overview .....	7
Figure 2-2	Pin Patch Area .....	8
Figure 3-1	FK3 device mounting (1) .....	14
Figure 3-2	FK3 device mounting (2) .....	14
Figure 5-1	UART / LIN DSUB connectors .....	16
Figure 5-2	CAN DSUB connector .....	17
Figure 6-1	Mounting a FE3 device .....	18
Figure 6-2	Mounting a FF3 device .....	19
Figure 6-3	Mounting a FG3 device .....	19
Figure 6-4	Mounting a FJ3 device .....	20
Figure 6-5	Device power supply .....	21
Figure 6-6	REGC pin components .....	22
Figure 6-7	X1, X2 pin components .....	23
Figure 6-8	Pins with Pull-Down .....	24
Figure 6-9	Jumpers location .....	25
Figure 6-10	Test Point location .....	26

## List of Tables

Table 2-1	Overview of functional signals .....	8
Table 2-2	CN48 – Nwire .....	9
Table 2-3	FP4 (CSI) Jumpers .....	9
Table 2-4	FP4 (UART) Jumpers.....	10
Table 2-5	UARTDn signal jumpers .....	10
Table 2-6	RS-232 signal jumpers.....	11
Table 2-7	LIN bus signal jumpers.....	12
Table 2-8	CAN signal jumpers .....	13
Table 5-1	UART / LIN DSUB connectors .....	16
Table 5-2	CAN DSUB connectors .....	17
Table 6-1	VSS signal connection .....	21
Table 6-2	VDD signal connection.....	22
Table 6-3	REGC signal connection .....	22
Table 6-4	X1, X2 signal connection .....	23
Table 6-5	XT1, FLMD0 signal connection.....	24
Table 6-6	Colours of Jumper functionality.....	26
Table 6-7	Reset signal connection .....	26
Table 6-8	NWire interface signals .....	27
Table 6-9	Flash programming jumper settings.....	27
Table 6-10	CAN jumper settings .....	28
Table 6-11	UARTD jumper settings .....	29

## 1 Introduction

The AB-050-FX3-U is designed as a simple and easy to use Starter Board to support users with the first steps when starting with the Fx3-Series family.

The Starter Board is prepared to hold a V850ES/FK3 device (uPD70F3385). As the largest device of the Fx3-Series the FK3 offers the complete range of all Fx3 peripherals. Therefore software development for all other Fx3-Series devices is possible as well. Due to the software compatibility between the different family members porting of SW from FK3 to smaller devices is possible with only minimum efforts.

Mounting other members of the Fx3-Series on the board also is possible, at the cost of manual replacement of components and rewiring of signals.

With the NWire Debug interface and the Flash Programming interface for the NEC PG-FP4 Flash Programmer the standard NEC programming interfaces are directly available.

To enable further application development the board features drivers for five high speed CAN interfaces, eight RS-232 interfaces and eight LIN bus interfaces.

With on-board voltage regulator and reset generator a simple external DC power supply is sufficient to operate the board.

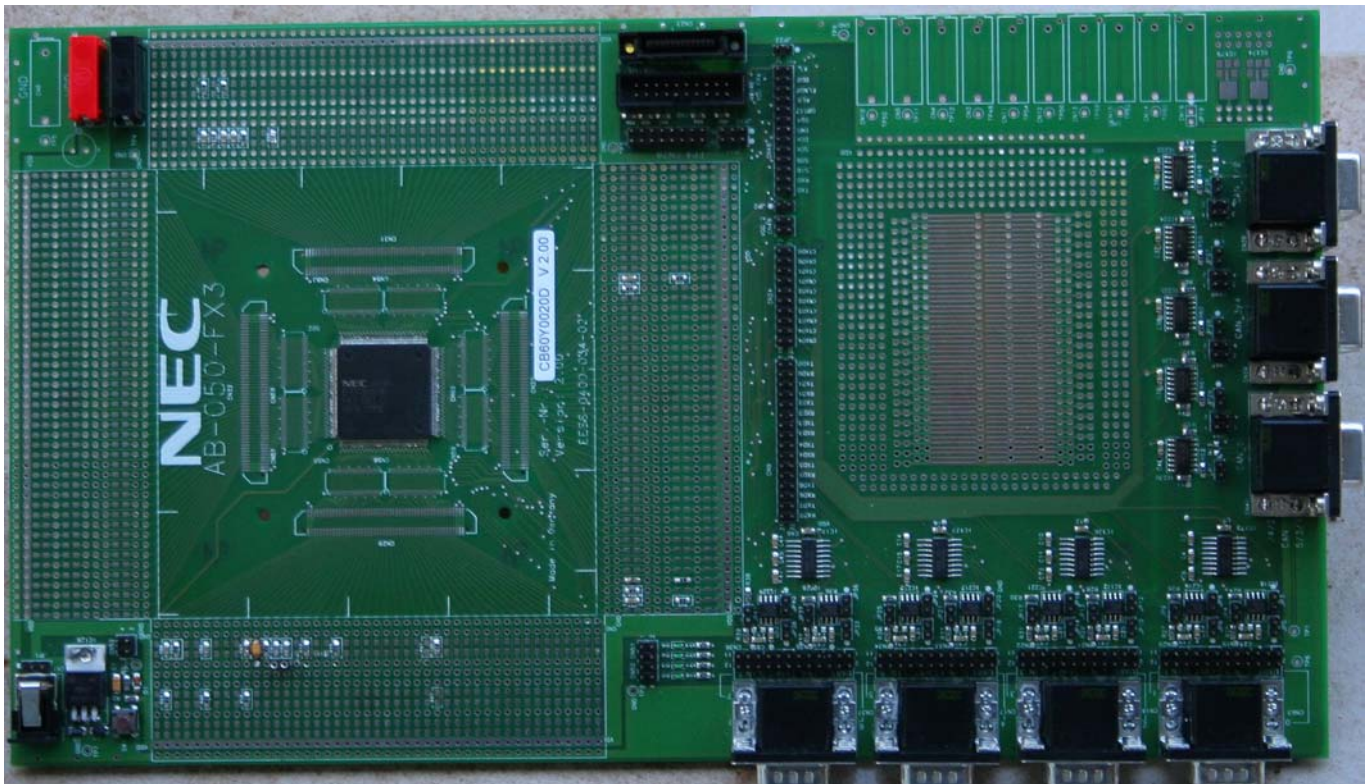


Figure 1 AB-050-FX3-U with FK3 Device

## 2 Board description

### 2.1 Overview

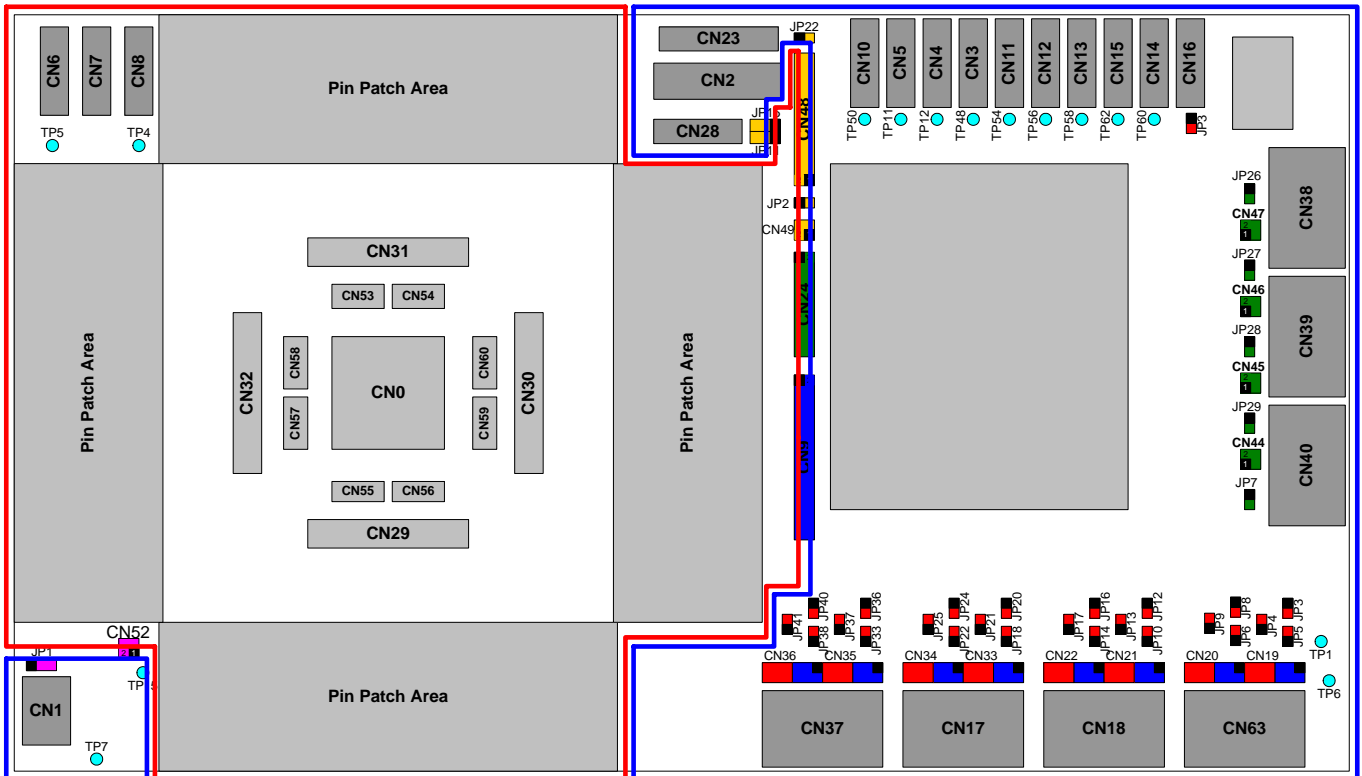


Figure 2-1 Board overview

Basically the board is divided into two areas, an 'Electrical Area' and a 'Functional Area'. In Figure 2-1 the Electrical Area is surrounded in by a red line and the Functional Area is surrounded by a blue line.

#### 2.1.1 Electrical Area


In the center of the Electrical Area a 180 pin SMD pad field is located that any of the F-Series devices can be assembled to.

On each side of the Device Pad Field a Pin Patch Area is located. In this patch area access is given to

- each pin of the device
- VDD
- VSS

Further more SMD and through hole components can directly be soldered onto the Pin Patch Area to allow simple networks to be easily built up.

The circuitry available at each pin inside the Pin Patch Area is described in the figure below:

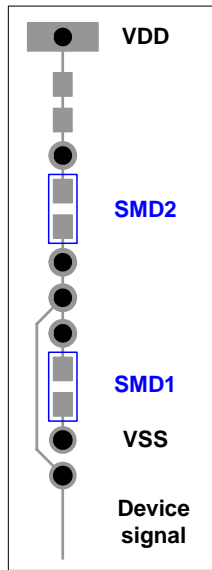

**Figure 2-2 Pin Patch Area**

A component assembled to the SMD1 field will therefore be connected between the device pin and VSS. A component assembled to the SMD2 field will be connected between the device pin and VCC.

### 2.1.2 Functional Area

The Functional Area holds the drivers for RS-232, LIN bus and CAN. Additionally other patch areas are available as well to directly assemble LEDs, PowerDrivers and connectors to the board.

**Note:**

For detailed information about the operation of the used RS-232, LIN bus and CAN drivers refer to the related datasheets of those devices.

### 2.1.3 Connecting both areas

The Electrical and Functional Areas are not connected to one another except by a common VSS plane. Nevertheless by use of Jumpers a signal connection between the Electrical Area and the Functional Area is possible.

The following signals are available on the related jumper fields:

Signal	Jumper
_Reset	CN52
VDD	CN49
Flash programming (PG-FP4)	CN48 JP2
NWIRE	CN48
UARTDn (n=0..7)	CN9
CANn (n=0..4)	CN24

**Table 2-1 Overview of functional signals**

## 2.2 Reset

A simple Reset Generator using analog circuitry is available.  
To connect the on-board Reset generator to the FK3 device close CN52 3-4.

If an external Reset signal shall be connected to the board the following setup must be used:

- a) Use TP15 to physically connect the external reset signal.
- b) Close CN52 1-2 to connect the external reset signal to the FK3 device.
- c) Open CN52 3-4 to disconnect the onboard Reset circuitry from the device.

## 2.3 NWire connection

The NWire debug cable from a NEC Debug Tool (e.g. MiniCube) can be connected to CN2.

Additionally a KEL connector (CN23) is available to connect third party NWire Debug Tools.

The following jumpers on CN48 must be closed in order to physically connect the NWire signals from CN2 to the corresponding pins of the FK3 device:

Signal	CN48 Pin number
SCK	9 – 10
DCK	11 – 12
DMS	13 – 14
DDI	15 – 16
DRST	17 – 18
RES	19 – 20
FLMDO	21 – 22
DDO	23 – 24

**Table 2-2 CN48 – Nwire**

Additionally JP2 must be closed.

## 2.4 PG-FP4 connection

The programming cable of the PG-FP4 Flash programmer can be connected to CN28.

To program the device via the CSI interface the following jumpers must be closed:

Connector	Pin number
JP15	2 – 3
JP11	2 – 3
CN48	5 – 6
	7 – 8

**Table 2-3 FP4 (CSI) Jumpers**

To program the device via the UART interface the following jumpers must be closed:

Connector	Pin number
JP15	1 – 2
JP11	1 – 2
CN48	1 – 2
	3 – 4

**Table 2-4 FP4 (UART) Jumpers**

For Flash programming using the PG-FP4 device power can either be supplied by the PG-FP4 or by the AB-050-FX3.

- a) For PG-FP4 power supply open JP2.
- b) For AB-050-FJ3 power supply close JP2.

If the clock supply for PG-FP4 programming is not on board, close CN48 Pins 25-26 to supply the clock from PG-FP4.

## 2.5 RS-232 / LIN

Close CN49 1 – 2 and 3 – 4 to supply power to RS-232 / LIN bus drivers.

For the LIN bus drivers additionally a VBAT voltage must be supplied. This voltage must be in a range of 5V to 12V. For the exact specification refer to the Datasheet of the LIN Drivers.

To supply VBAT to the board use either of the two connections:

- Use TP1
- Close JP19 and use Cn16

Close the following jumpers on CN9 to physically connect the UARTD signals from the Electrical Area to the Functional Area.

Signal		CN9 Pin #
<b>UARTD0</b>	TXD0	1 – 2
	RXD0	3 – 4
<b>UARTD1</b>	TXD1	5 – 6
	RXD1	7 – 8
<b>UARTD2</b>	TXD2	9 – 10
	RXD2	11 – 12
<b>UARTD3</b>	TXD3	13 – 14
	RXD3	15 – 16
<b>UARTD4</b>	TXD4	17 – 18
	RXD4	19 – 20
<b>UARTD5</b>	TXD5	21 – 22
	RXD5	23 – 24
<b>UARTD7</b>	TXD6	25 – 26
	RXD6	27 – 28
<b>UARTD6</b>	TXD7	29 – 30
	RXD7	31 – 32

**Table 2-5 UARTDn signal jumpers**

To connect the RS-232 / LIN bus driver signals to the RS-232 / LIN bus connectors close the following jumpers:

Signal		Connector	Pin #
UARTD0	TXD0	CN19	1 – 2
	RXD0		3 – 4
	GND		5 – 6
UARTD1	TXD1	CN20	1 – 2
	RXD1		3 – 4
	GND		5 – 6
UARTD2	TXD2	CN21	1 – 2
	RXD2		3 – 4
	GND		5 – 6
UARTD3	TXD3	CN22	1 – 2
	RXD3		3 – 4
	GND		5 – 6
UARTD4	TXD4	CN33	1 – 2
	RXD4		3 – 4
	GND		5 – 6
UARTD5	TXD5	CN34	1 – 2
	RXD5		3 – 4
	GND		5 – 6
UARTD6	TXD6	CN35	1 – 2
	RXD6		3 – 4
	GND		5 – 6
UARTD7	TXD7	CN36	1 – 2
	RXD7		3 – 4
	GND		5 – 6

**Table 2-6 RS-232 signal jumpers**

To connect the LIN bus driver signals to the related RS-232/LIN bus connector close the following jumpers:

Signal		Connector	Pin #
LIN0	12V	CN19	7 – 8
	LIN		9 – 10
	GND		11 – 12
LIN1	12V	CN20	7 – 8
	LIN		9 – 10
	GND		11 – 12
LIN2	12V	CN21	7 – 8
	LIN		9 – 10
	GND		11 – 12
LIN3	12V	CN22	7 – 8
	LIN		9 – 10
	GND		11 – 12
LIN4	12V	CN33	7 – 8
	LIN		9 – 10
	GND		11 – 12
LIN5	12V	CN34	7 – 8
	LIN		9 – 10
	GND		11 – 12
LIN6	12V	CN35	7 – 8
	LIN		9 – 10
	GND		11 – 12
LIN7	12V	CN36	7 – 8
	LIN		9 – 10
	GND		11 – 12

**Table 2-7 LIN bus signal jumpers**

To enable the LIN drivers (IC218, IC219, IC172, IC221, IC217, IC223, IC228, IC229) the NSLP pin of the drivers must be pulled high. To do so a Jumper is available to connect the pin to VDD.

LIN channel	NSLP Jumper
0	JP3
1	JP8
2	JP12
3	JP16
4	JP20
5	JP24
6	JP40
7	JP36

The RxD pin of the LIN driver (pin #1) is an open drain output. The necessary pull-up resistor in order to interface to the Fx3 device is not assembled on the board. To enable operation of the RxD signal

- either connect an appropriate pull up resistor to the related RxD input pin of the LIN channel, or
- enable the internal Pull-Up resistors available in the Fx3 devices for each LIN input pin.

The corresponding input pin for each RxD pin can be found in Table 6-11.

For additional information on the LIN driver refer to its User's Manual / Datasheet.

**Caution:** The RXD reception output pin of the LIN driver (e.g. IC218 pin1) and the RxD reception output pin of the UART driver (e.g. IC173 pin 12) are physically connected to the same pin on connector CN9 (e.g. CN9 pin 4).

Therefore

- when using the LIN driver lift the connected UART driver RxD output pin from the PCB.
- when using the UART driver place the connected LIN driver in standby mode or lift the LIN driver RxD output pin from the board.

## 2.6 CAN

Close CN49 1 – 2 and 3 – 4 to supply power to the CAN drivers.

Close the following jumpers to physically connect the devices CAN signals to the CAN interface drivers located on the Functional Area of the board:

Signal		CN24 Pin #
<b>CAN0</b>	CTXD0	1 – 2
	CRXD0	3 – 4
<b>CAN1</b>	CTXD1	5 – 6
	CRXD1	7 – 8
<b>CAN2</b>	CTXD2	9 – 10
	CRXD2	11 – 12
<b>CAN3</b>	CTXD3	13 – 14
	CRXD3	15 – 16

**Table 2-8 CAN signal jumpers**

### 3 Mounting the FK3 device on the board

The AB-050-FX3-U boards is shipped with a mounted V850ES/FK3 device. Nevertheless, if mounting of another V850ES/FK3 device is required at a later time the following guideline is supplied:

To mount a FK3 device on the AB-050-FX3-U place the package in the top right corner of the SMD area. As the FK3 with 176 pins is placed on an SMD area with 180 pins 4 pads will not be used. Due to the alignment of the device in the top right corner two pads in the lowest line and two pads in the left most line remain empty. Therefore align pin 1 of the device with pin 2 of the SMD pad area. For details see Figure 3-1 and Figure 3-2.

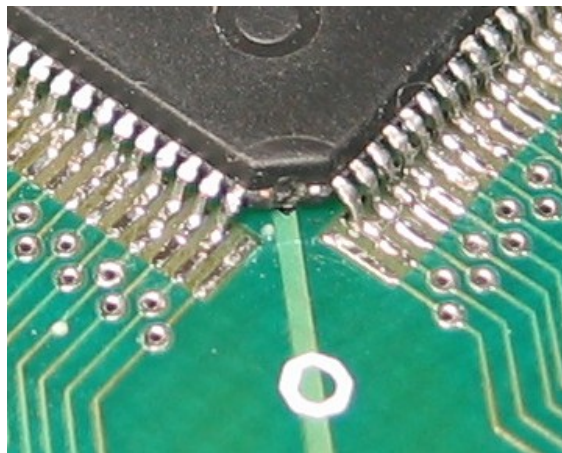


Figure 3-1 FK3 device mounting (1)

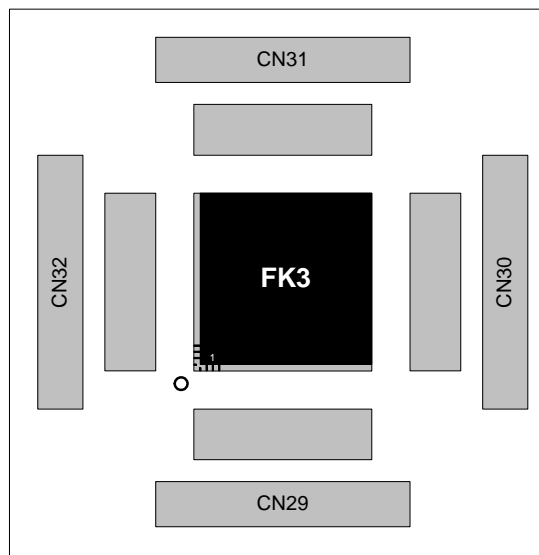


Figure 3-2 FK3 device mounting (2)

## 4 Connecting the Power Supply

Power can be supplied to the board either

- a) by directly supplying the device operating voltage, or
- b) via the onboard 7805 type voltage regulator.

### Direct voltage supply:

A direct supply of the device operating voltage can either be implied by using CN7 to connect VCC (typical +5V for Fx3 devices) and CN8 to connect VSS (0V), or by using CN1.

As the supplied voltage is directly connected to the device the input voltage must not exceed the specified power supply voltage range of the assembled device.

Close JP1 1-2 when directly supplying the devices voltage.

### Voltage regulator supply:

Use CN1 to supply a stabilized voltage of 6V - 12V to the board. The on board 7805 type regulator will generate the 5V supply of the board.

Close JP1 2-3 when using the on board voltage regulator.

**Caution:** On CN1 the inner pin connects to VSS and the outer pin connects to VCC.  
Applying a voltage to the device outside the specified device operating voltage range may damage the device!

## 5 UART / LIN CAN DSUB connectors

To physically connect the Starter Board to other UART / LIN / CAN devices DSUB type connectors are available..

### 5.1 UART / LIN connectors


To interface the AB-050-FX3-U board to external to UART / LIN devices a 9 pin male D-SUB connector is supplied for each of the eight available UART / LIN interfaces.

The signal layout of the UART/LIN DSUB connector can be seen in Table 5-1.

Male D-SUB, 9pin	Function
1	n/c
6	n/c
2	RS-232 TxD
7	LIN
3	RS-232 Rxd or GND
8	n/c
4	n/c
9	+12V
5	GND

**Table 5-1 UART / LIN DSUB connectors**

Figure 5-1 displays the assignment of each DSUB connector to its related peripheral:

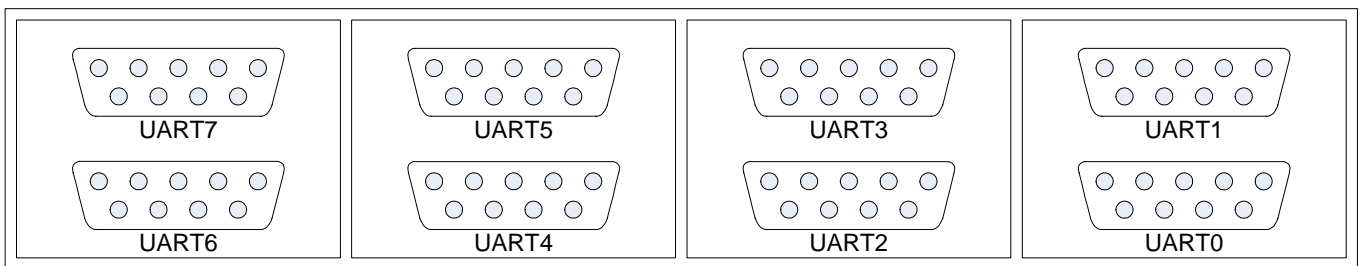

**Figure 5-1 UART / LIN DSUB connectors**

## 5.2 CAN connectors


To interface the AB-050-FX3-U board to external CAN devices a 9 pin female D-SUB connector is supplied for each of the five available CAN interfaces.

The pin functions of the CAN DSUB connectors can be seen in Table 5-2.

Female D-SUB, 9pin	Function
1	n/c
6	GND
2	CANL
7	CANH
3	GND (if jumpered)
8	n/c
4	n/c
9	n/c
5	n/c

**Table 5-2 CAN DSUB connectors**

Figure 5-2 displays the assignment of each DSUB connector to its related peripheral:

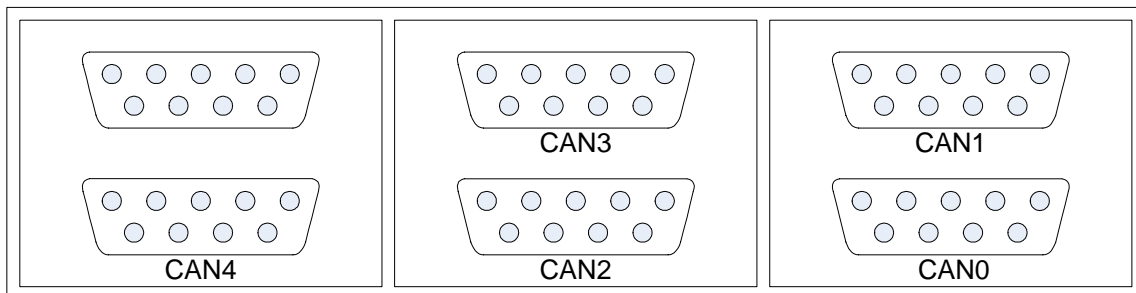

**Figure 5-2 CAN DSUB connector**

## 6 Mounting other Fx3 devices on the board

Even though the AB-050-FX3-U is prepared for operation of the FK3 device also other devices of the Fx3-Line can be mounted on the board.

Besides mounting the new device to the board

- the components in the Pin Patch Area must be replaced according to the pin layout of the new device and
- the signals between the device pins and the jumpers connecting the Electrical Area and the Functional Area must be wired manually.

Therefore the following changes must be applied:

### 6.1 Mounting devices

First the device must be mounted to the PCB. The alignment of the different Fx3-family devices is explained below.

#### 6.1.1 Mounting a FE3 device

To mount a FE3 device on the AB-050-FX3-U place the package in the lower left corner of the SMD area but do not use the two pins most in the corner. Place pin 1 of the device on pin 2 of the SMD area.

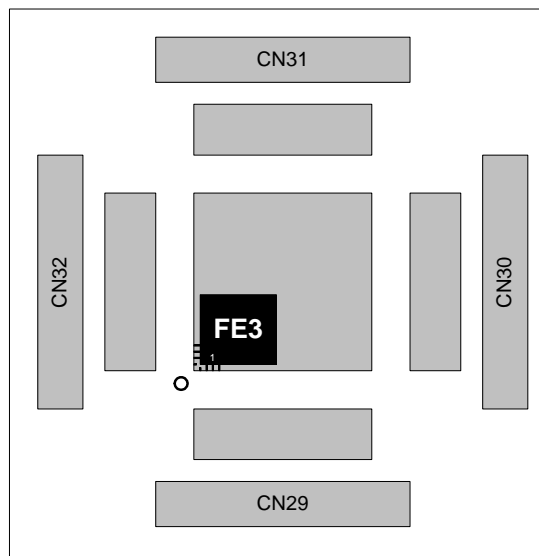


Figure 6-1 Mounting a FE3 device

### 6.1.2 Mounting a FF3 device

To mount a FF3 device on the AB-050-FX3-U place the package in the lower left corner of the SMD area but do not use the two pins most in the corner. Place pin 1 of the device on pin 2 of the SMD area.

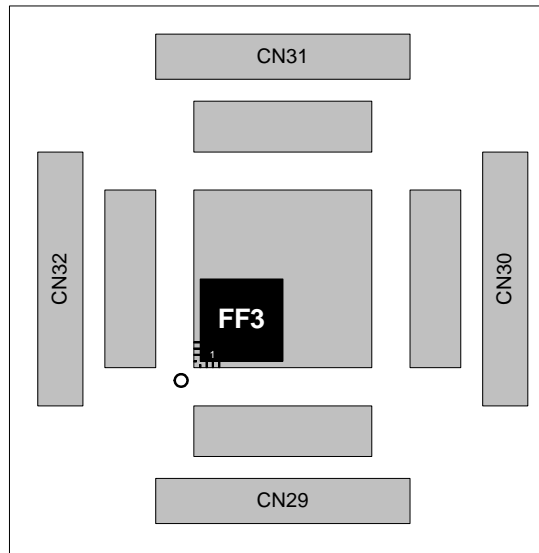


Figure 6-2 Mounting a FF3 device

### 6.1.3 Mounting a FG3 device

To mount a FF3 device on the AB-050-FX3-U place the package in the lower left corner of the SMD area. Place pin 1 of the device on pin 1 of the SMD area.

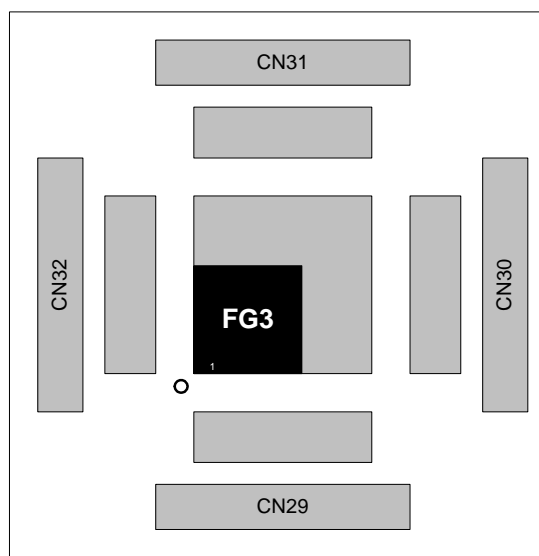


Figure 6-3 Mounting a FG3 device

## 6.1.4 Mounting a FJ3 device

To mount a FJ3 device on the AB-050-FX3-U place the package in the lower left corner of the SMD area. Place pin 1 of the device on pin 1 of the SMD area.

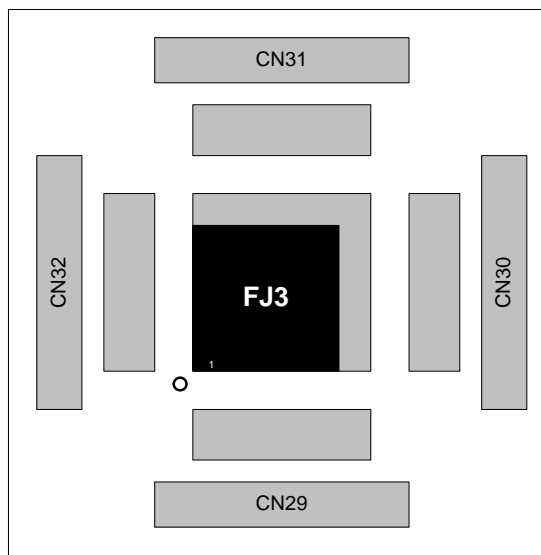


Figure 6-4 Mounting a FJ3 device

## 6.2 Pin connection

### 6.2.1 Power supply pins

Connect the devices power supply pins to the related power lines using the available SMD pads in the Pin Patch Areas.

Refer to the Fx3 User's Manual and Table 6-1 for the location of the VDD and VSS pins on the different devices.

Connect the VDD and VSS pins in the Pin Patch Areas like this:

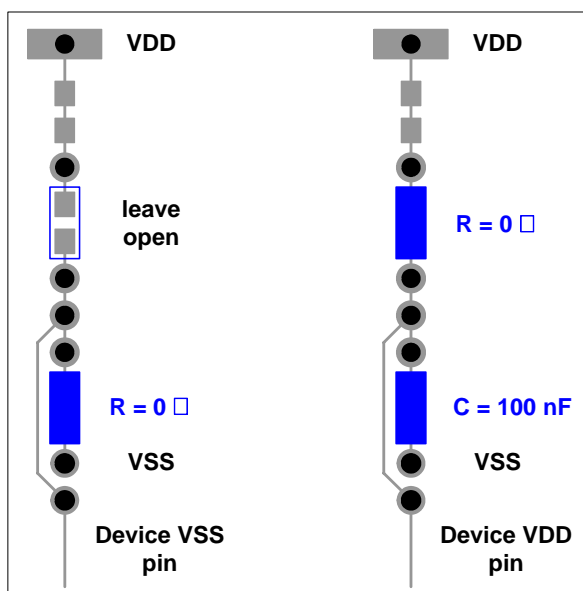


Figure 6-5 Device power supply

To connect the devices VSS pins to the VSS lane of the board place a 0 Ohm resistor on the SMD1 pad.

Signal	Fx3 pinning				
	FE3	FF3	FG3	FJ3	FK3
VSS	6	11	11	11	11
VSS1	n/a	n/a	n/a	n/a	124
AVSS	2	2	2	2	2
AVSS1	n/a	n/a	n/a	n/a	46
EVSS	32	30	33	33	28
	n/a	n/a	n/a	n/a	76
BVSS	n/a	n/a	69	103	127

Table 6-1 VSS signal connection


To connect the devices VDD pins to the VDD lane of the board place a 0 Ohm resistor on the SMD2 pad and place a 100 nF buffering capacitor on the SMD1 pad.

Signal	Fx3 pinning				
	FE3	FF3	FG3	FJ3	FK3
VDD	4	9	9	9	9
VDD1	n/a	n/a	n/a	n/a	126
AVREF0	1	1	1	1	1
AVREF1	n/a	n/a	n/a	n/a	45
EVDD	33	31	34	34	47
	n/a	n/a	5	5	5
	n/a	n/a	n/a	n/a	77
BVDD	n/a	n/a	70	104	128

**Table 6-2 VDD signal connection**

## 6.2.2 REGC pin

A buffering capacitor between the devices REGC pin(s) and VSS should be placed. Assemble the capacitor to the SMD1 pad field.

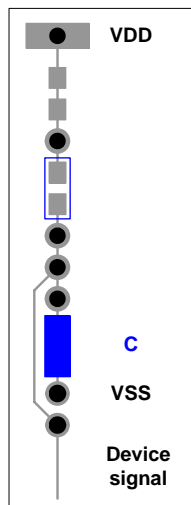

**Figure 6-6 REGC pin components**

Refer to the Fx3 User’s Manual and Table 6-3 for the location of the RECC pin on the different devices.

Signal	Fx3 pinning				
	FE3	FF3	FG3	FJ3	FK3
REGC	5	10	10	10	10
REGC1	n/a	n/a	n/a	n/a	125

**Table 6-3 REGC signal connection**

### 6.2.3 X1, X2 pins

An external oscillator can be connected to the X1 and X2 pins of the device. Connect the oscillator between the X1 and X2 pins and place a small capacitor on the SMD1 areas of those pins. For size of the capacitor refer to the oscillator manufacturer specification / recommendation.

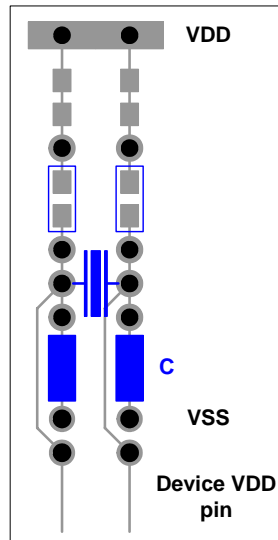


Figure 6-7 X1, X2 pin components


Refer to the Fx3 User's Manual and Table 6-4 for the location of the X1 and X2 pins on the different devices.

Signal	Fx3 pinning				
	FE3	FF3	FG3	FJ3	FK3
X1	7	12	12	12	12
X2	8	13	13	13	13

Table 6-4 X1, X2 signal connection

## 6.2.4 XT1, FLMD0

A pull-down resistor should be connected to input pins XT1 and FLMD0.

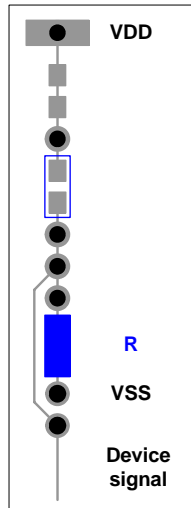

**Figure 6-8 Pins with Pull-Down**

Refer to the Fx3 User's Manual and Table 6-5 for the location of the XT1 and FLMD0 pins on the different devices.

Signal	Fx3 pinning				
	FE3	FF3	FG3	FJ3	FK3
XT1	10	15	15	15	15
FLMD0	3	8	8	8	8

**Table 6-5 XT1, FLMD0 signal connection**




The different jumper groups are highlighted in different colours according to their related functionality:

Jumper colour	Related functionality
Yellow	NWire Debug interface and Flash programming interface
Green	CAN interface signals
Blue	RS-232 interface signals
Red	LIN bus interface signals
Magenta	Power supply and Reset

**Table 6-6 Colours of Jumper functionality**

### 6.3.2 Testpoints

The available Test Points can be seen in

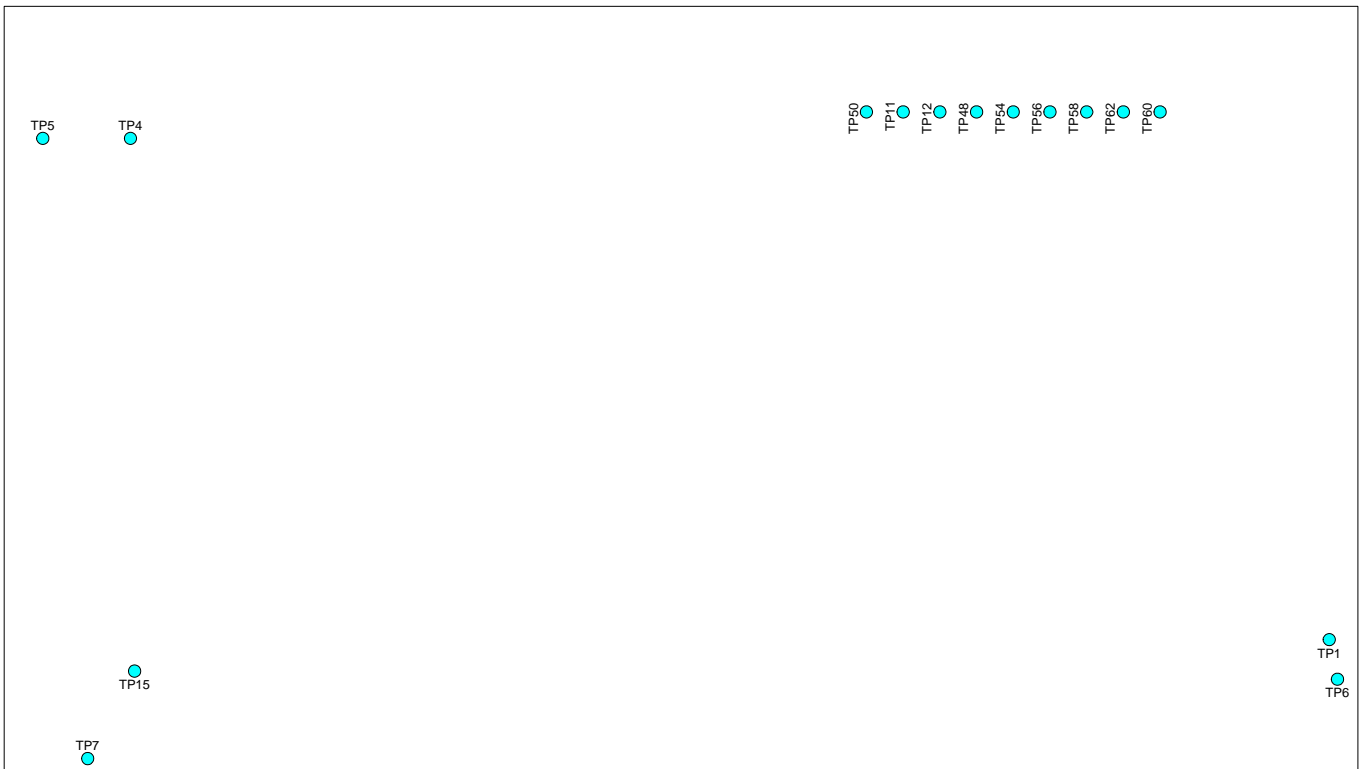

**Figure 6-10 Test Point location**

### 6.3.3 Reset signal

To connect the RESET signal place a wire according to the table below:

Signal	Fx3 pin number					CN52 pin number
	FE3	FF3	FG3	FJ3	FK3	
Reset	9	14	14	14	14	4

**Table 6-7 Reset signal connection**

### 6.3.4 NWIRE signals

To connect the NWIRE signals place wires according to the table below:

Signal	Fx3 pin number					CN48 pin number
	FE3	FF3	FG3	FJ3	FK3	
<b>DCK</b>	34	36	41	41	60	11
<b>DMS</b>	35	37	42	42	61	13
<b>DDI</b>	30	34	39	39	58	15
<b>DRSTZ</b>	17	17	20	20	21	17
<b>RESET</b>	9	14	14	14	14	19
<b>FLMD0</b>	3	8	8	8	8	21
<b>DDO</b>	31	35	40	40	59	23

**Table 6-8 NWire interface signals**

### 6.3.5 Flash Programming interface

To connect the Flash Programming signals place wires according to the table below:

Signal	Fx3 pin number					CN48 Pin number
	FE3	FF3	FG3	FJ3	FK3	
<b>TxD</b>	22	22	25	25	26	1
<b>RxD</b>	23	23	26	26	47	3
<b>SIB</b>	19	19	22	22	23	5
<b>SOB</b>	20	20	23	23	24	7
<b>SCK</b>	21	21	24	24	25	9

**Table 6-9 Flash programming jumper settings**

## 6.3.6 CAN interface

To connect the CAN interface signals place wires according to the table below:

Signal	Fx3 pin number					CN24 Pin number
	FE3	FF3	FG3	FJ3	FK3	
CTXD0	25 (*)	25 (*)	28 (*)	28 (*)	49 (*)	2
	18	18	21	21	22	
CRXD0	26 (*)	26 (*)	29 (*)	29 (*)	50 (*)	4
	16	7	19	19	20	
CTXD1	n/a	n/a	31	31	52	6
CRXD1	n/a	n/a	32	32	53	8
CTXD2	n/a	n/a	n/a	67 (*)	48 (*)	10
	n/a	n/a	n/a	71	92	
CRXD2	n/a	n/a	n/a	68 (*)	49 (*)	12
	n/a	n/a	n/a	72	93	
CTXD3	n/a	n/a	n/a	50	69	14
CRXD3	n/a	n/a	n/a	51	70	16
CTXD4	n/a	n/a	n/a	n/a	104	18
CRXD4	n/a	n/a	n/a	n/a	105	20

**Table 6-10 CAN jumper settings**

(\*) Compatible pinning to the corresponding Fx2 device.

### 6.3.7 UARTD interface

To connect the UARTD interface signal place wires according to the table below:

Signal	Fx3 pin number					CN9
	FE3	FF3	FG3	FJ3	FK3	
TxD0	22	22	25	25	26	5
RxD0	23	23	26	26	27	7
TxD1	36	38	43	61	82	1
RxD1	37	39	44	62	83	3
TxD2	n/a	n/a	35	54	28	9
RxD2	n/a	n/a	36	55	29	11
TxD3	n/a	n/a	23	60 (*)	81 (*)	13
				23	24	
RxD3	n/a	n/a	22	59 (*)	80 (*)	15
				22	23	
TxD4	n/a	n/a	58	76	97	17
RxD4	n/a	n/a	57	75	96	19
TxD5	n/a	n/a	n/a	73	94	21
RxD5	n/a	n/a	n/a	74	95	23
TxD6	n/a	n/a	n/a	n/a	64	25
RxD6	n/a	n/a	n/a	n/a	65	27
TxD7	n/a	n/a	n/a	n/a	78	29
RxD7	n/a	n/a	n/a	n/a	79	31

**Table 6-11 UARTD jumper settings**

(\*) Compatible pinning to the corresponding Fx2 device.

## 7 Revision History

Version	Chapter	Comment
1.0		Initial release
1.1	6.2.1 - 6.2.4 6.3.3 - 6.3.7	Added pin tables for the different devices
	All	Modified / expanded text
	<b>Error! Reference source not found.</b>	Added chapter 'Cautions'
	7	Added chapter 'Revision History'
1.2	<b>Error! Reference source not found.</b>	Added chapter for cable description
	2.5	Added information on LIN operation
2.0		Update for V2.0 revision of the AB-050-FX3 board.
2.1		Updated naming of board to AB-050-FX3-U
	2.5	Added Caution on UART / LIN driver usage

## 8 Appendix A – Pin Number templates

If wanted the tables below can be printed and the pin numbers for the device placed on the AB-050-FX3-U glued to board.

This allows for an easier handling of the devices pins.

FE3			
1	17	33	49
2	18	34	50
3	19	35	51
4	20	36	52
5	21	37	53
6	22	38	54
7	23	39	55
8	24	40	56
9	25	41	57
10	26	42	58
11	27	43	59
12	28	44	60
13	29	45	61
14	30	46	62
15	31	47	63
16	32	48	64

FF3			
1	21	41	61
2	22	42	62
3	23	43	63
4	24	44	64
5	25	45	65
6	26	46	66
7	27	47	67
8	28	48	68
9	29	49	69
10	30	50	70
11	31	51	71
12	32	52	72
13	33	53	73
14	34	54	74
15	35	55	75
16	36	56	76
17	37	57	77
18	38	58	78
19	39	59	79
20	40	60	80


FG3			
1	26	51	76
2	27	52	77
3	28	53	78
4	29	54	79
5	30	55	80
6	31	56	81
7	32	57	82
8	33	58	83
9	34	59	84
10	35	60	85
11	36	61	86
12	37	62	87
13	38	63	88
14	39	64	89
15	40	65	90
16	41	66	91
17	42	67	92
18	43	68	93
19	44	69	94
20	45	70	95
21	46	71	96
22	47	72	97
23	48	73	98
24	49	74	99
25	50	75	100

FJ3			
1	37	73	109
2	38	74	110
3	39	75	111
4	40	76	112
5	41	77	113
6	42	78	114
7	43	79	115
8	44	80	116
9	45	81	117
10	46	82	118
11	47	83	119
12	48	84	120
13	49	85	121
14	50	86	122
15	51	87	123
16	52	88	124
17	53	89	125
18	54	90	126
19	55	91	127
20	56	92	128
21	57	93	129
22	58	94	130
23	59	95	131
24	60	96	132
25	61	97	133
26	62	98	134
27	63	99	135
28	64	100	136
29	65	101	137
30	66	102	138
31	67	103	139
32	68	104	140
33	69	105	141
34	70	106	142
35	71	107	143
36	72	108	144

FK3			
1	45	89	133
2	46	90	134
3	47	91	135
4	48	92	136
5	49	93	137
6	50	94	138
7	51	95	139
8	52	96	140
9	53	97	141
10	54	98	142
11	55	99	143
12	56	100	144
13	57	101	145
14	58	102	146
15	59	103	147
16	60	104	148
17	61	105	149
18	62	106	150
19	63	107	151
20	64	108	152
21	65	109	153
22	66	110	154
23	67	111	155
24	68	112	156
25	69	113	157
26	70	114	158
27	71	115	159
28	72	116	160
29	73	117	161
30	74	118	162
31	75	119	163
32	76	120	164
33	77	121	165
34	78	122	166
35	79	123	167
36	80	124	168
37	81	125	169
38	82	126	170
39	83	127	171
40	84	128	172
41	85	129	173
42	86	130	174
43	87	131	175
44	88	132	176

**9 Appendix B - Schematic**

Issue	
Version	Date
1	
2	
3	
4	
5	

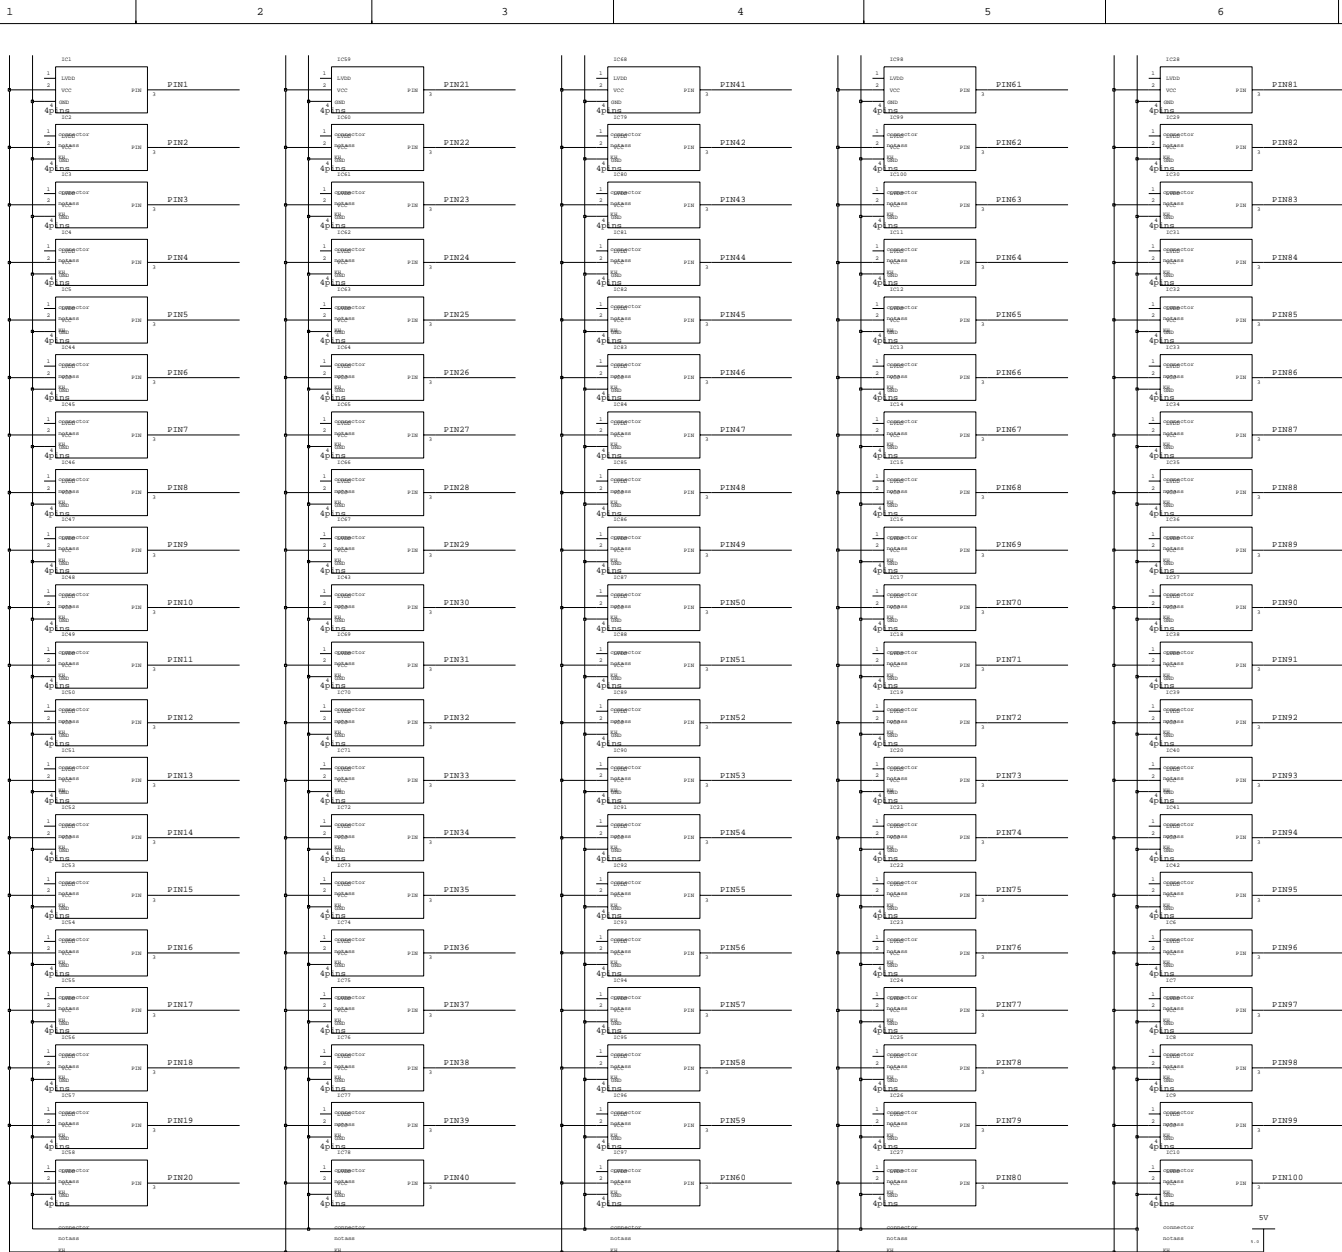

Version	Item	Approved
1		
Scale		
Designed	Checked	Approved
K.Hesse		S.Gupta
<del>Spec. Assembly drawing</del>		
<b>AB-050-FK3</b>		
Sheet1	Page	4/8
<b>EESS-0400-034-02</b>		

Distribution:

**NEC Corporation**










Issue	
Version	Date
1	
2	
3	
4	
5	

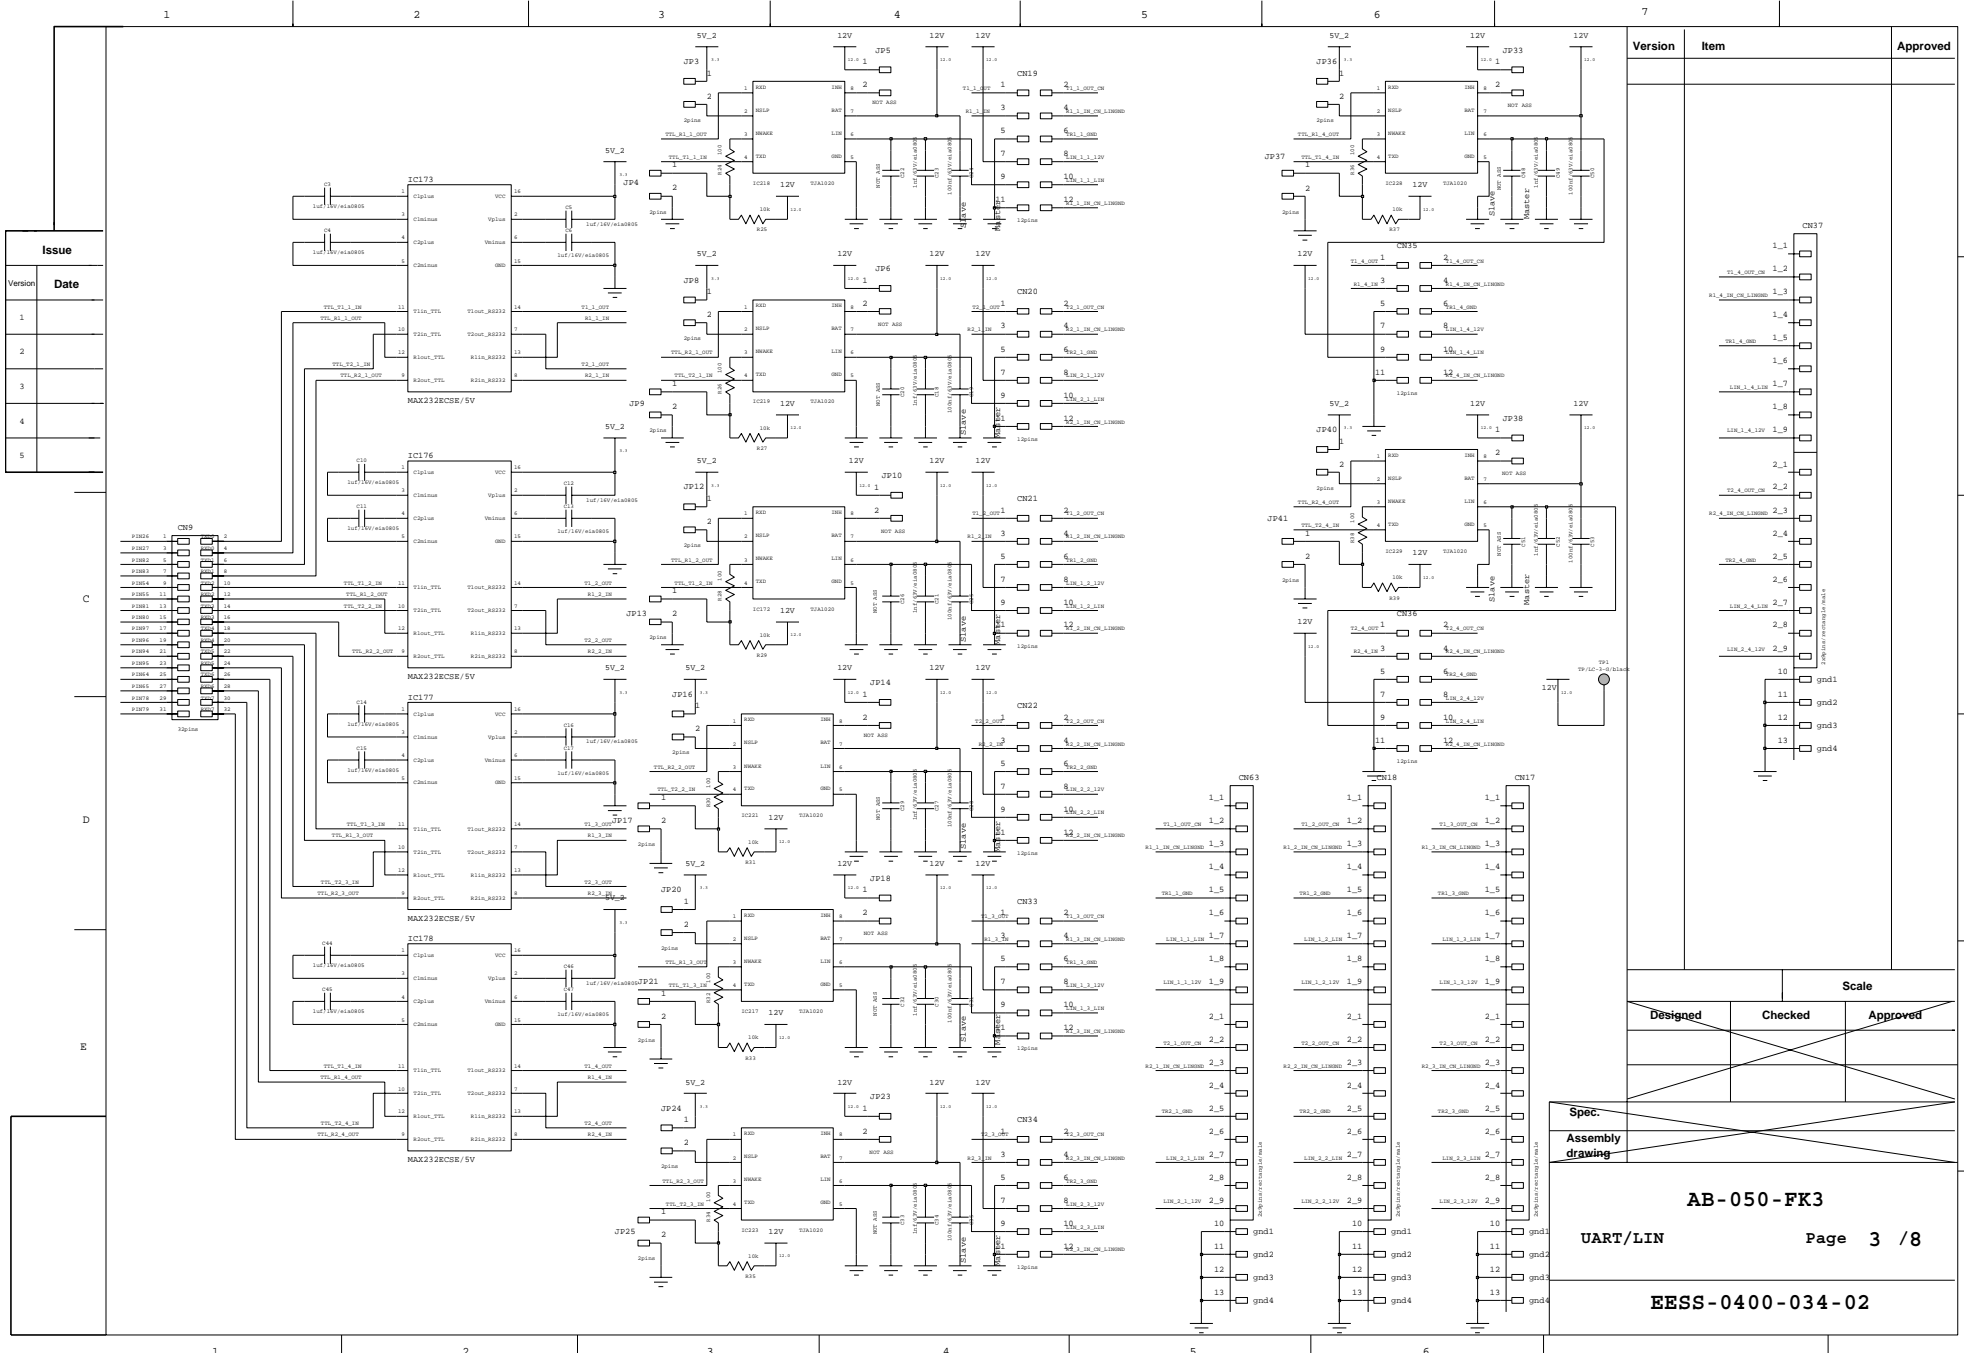

Version	Item	Approved
		A
		B
		C
		D
		E

Scale		
Designed	Checked	Approved

Spec.  
~~Assembly drawing~~

**AB-050-FK3**


 

UART/LIN Page 3 / 8

**EES-0400-034-02**



Components for Power/Ground connection.

FK3 Device

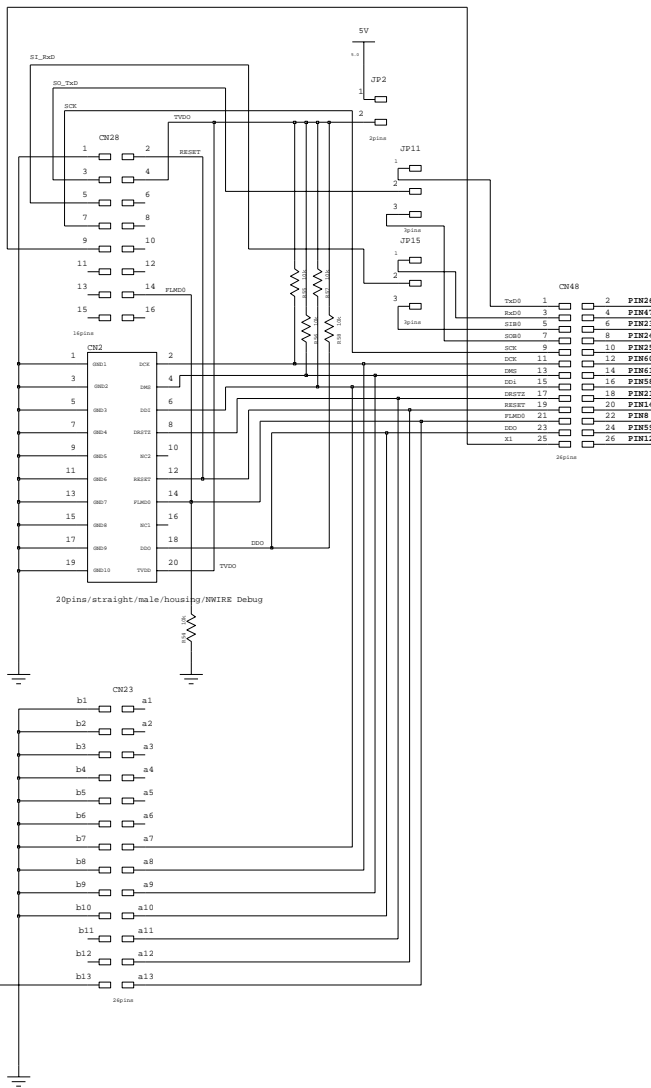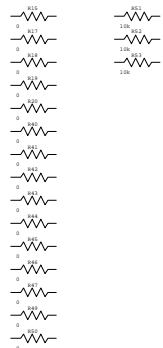

Issue	
Version	Date
1	
2	
3	
4	
5	

Version	Item	Approved

Scale		
Designed	Checked	Approved

Spec.  
Assembly drawing

**AB-050-FK3**  
Board VER. 1.00

Nwire/FP4 Page /

**EISS-0400-034-02**