

User's Manual

RTE7701412CBF484T000R

RENESAS

Exchange Adapter for Connecting RH850/D1x Series in 484-pin 1.0-mm-pitch BGA

1. Outline

The RTE7701412CBF484T000R is an exchange adapter (EA) for connecting an RTE7701412EPA00000R or RTE7701460EPA00000R emulator pod (subsequently referred to as the pod) for the RH850/D1x to pad patterns for a 484-pin 1.0-mm-pitch BGA (PRBG0484FF-A).

2. Package Components

Check to see if the RTE7701412CBF484T000R package has all the following contents with reference to Contents of the Package included in the package after purchasing this product.

- (1) RTE7701412CBF484T000R exchange adapter 1 pc.
- (2) Table of Toxic and Hazardous Substance and Elements 1 sh.

3. Specifications

Table 1 Specifications

Applicable package	PRBG0484FF-A
	(484-pin 1.0-mm-pitch BGA)
Insertion/removal	100 times guaranteed
iterations of connector	

4. Usage (See Figure 2)

The RTE7701412CBF484T000R can be used for debugging and on-board evaluation in common by mounting the TC on the target system.

(1) For debugging

Mount the TC on the pad pattern for the MCU on the target system board. In addition, connect the RTE7701412CBF484T000R to the pod, and then attach the RTE7701412CBF484T000R above the TC. The height of the socket is adjustable by inserting the SA1 or SA2 between the TC and RTE7701412CBF484T000R if this is desired. Before using the SA1 or SA2, be sure to read the precautions on page 3.

(2) For on-board evaluation

The TC on the user system is used to attach the MA after it has been fitted with an MCU that has flash ROM or a one-time PROM.

SA1: Space adapter (sold separately, product of Tokyo Eletech
Corporation)
Model Name: CSSOCKET484Z2627RE03
SA2: Space adapter (sold separately, product of Tokyo Eletech
Corporation)
Model Name: CSSOCKET484Z2627RE04
TC: Target connector (sold separately, product of Tokyo Eletech
Corporation)
Model name: BSSOCKET484Z2627RE21N
MA: Mounting adapter (sold separately, product of Tokyo Eletech
Corporation)
Model name: LSPACK484Z2627RE01









RENESAS



RTE7701412CBF484T000R

User's Manual

5. Connection Procedure (See Figure 3)

The procedure for connecting the RTE7701412CBF484T000R is shown below.

- (1) Mount the TC on the user system.
- (2) Attach the RTE7701412CBF484T000R to the pod.
- (3) Attach the RTE7701412CBF484T000R to the TC.

Confirm that there are neither cracks nor bends on the contact pins of the RTE7701412CBF484T000R at the time it is attached.

• Adjusting the height of the socket The height of the socket is adjustable by inserting an SA1 or SA2 between the TC and the RTE7701412CBF484T000R. For more information on the SA1 and SA2, contact Tokyo Eletech Corporation.



Figure 3 Procedure for Connecting the RTE7701412CBF484T000R



6. Drawing of the Socket Assembly, Drawing with Dimensions, and Pad Pattern for Reference



Figure 4 Drawing of the Socket Assembly (for RTE7701412EPA00000R)





Figure 5 Drawing of the Socket Assembly (for RTE7701460EPA00000R)



Figure 6 Drawing with Dimensions and a Pad Pattern for Reference



7. Precautions and WEEE Directive



N If the requirements shown in the "CAUTION" sentences are ignored, the equipment may cause personal injury or damage to the products.



Scheme. To register for the program, click here "http://www.renesas.com/weee

All trademarks and registered trademarks are the property of their respective owners.



1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information, Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics 2 ssumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein 3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends or the product's quality grade, as indicated below Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc. "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc. Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics. 6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges. 7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you. 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.

Notice

- Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations.
- 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
- 11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

Refer to "http://www.renesas.com/" for the latest and detailed information



SALES OFFICES

Renesas Electronics Corporation

http://www.renesas.com

Renesas Electronics America Inc. 2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A. Tel: +1-408-588-5000, Fax: +1-408-588-6130 Renesas Electronics Canada Limited 1011 Nicholson Road, Newmarket, Ontario L3Y 9C3, Canada Tel: +1-905-889-5441, Fax: +1-905-898-3220 Renesas Electronics Europe Limited Dukes Meadow, Milliboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K Tel: +44-1628-585-100, Fax: +44-1628-585-900 Renesas Electronics Europe GmbH Arcadiastrasse 10, 40472 Dusseldorf, Germany Tel: +49-211-6503-0, Fax: +44-1628-585-900 Renesas Electronics (China) Co., Ltd. Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China Tel: +49-211-6503-0, Fax: +48-211-623-57767 Renesas Electronics (Shanghal) Co., Ltd. Norm 4, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333 Tel: +86-21020 Shanghal) Co., Ltd. Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333 Tel: +86-212226-0688, Fax: +86-2192999 Renesas Electronics Iong Kong Limited Unit 101-113, 10FF., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong Tel: +85-2256-6688, Fax: +852 2886-9022/904 Renesas Electronics Taiwan Co., Ltd. 135, No. 363, Fu Shing North Road, Taipei 10543, Taiwan Tel: +86-24175-9600, Fax: +852 2886-9022/904 Renesas Electronics Singapore Pte. Ltd. 80 Bendemer Road, Unit 70-00, Fill Unit Intoxation Centre, Singapore 339949 Tel: +855-213-0200, Fax: +652-213-0300 Renesas Electronics Korea Co., Ltd. 126, 234 T59-59030, Fax: +655-59510 Renesas Electronics Korea Co., Ltd. 127, 234 Teheran-ro, Gangman-Ku, Seo, Korea Tel: +855-258-5737, Fax: +802-2485-9510