

Digital power design allows for optimal configuration, parametric monitoring and increased efficiency while reducing the number of power supply components. Communication with digital power devices is required to take full advantage of digital power capabilities.

The System Management Interface (SMI) Forum and the Power Management Bus Implementers Forum created a hardware interface and a command language to deal with standardization of a communication interface. This Power Management Bus (PMBus™) command language standard is a comprehensive set of commands used with the industry-standard SMBus to enhance the control and monitoring of digital power circuits and thermal management. The PMBus specification is written in two parts. The first, [“Specification Part I – General Requirements Transport and Electrical Interface” on page 5](#) specifies the physical interface to the PMBus. It includes the SMBus communication bus as the electrical interface and protocol. The second part, [“Specification Part II – Command Language” on page 5](#), describes the command set. This command set includes provisions for manufacturer specifiable commands and data.

Intersil Digital-DC™ (DDC) based ICs feature the implementation of PMBus in an efficient power supply controller device. The DDC™ bus is an intra-device communication bus for coordination of Intersil devices. This document describes the standard PMBus commands available in the following Intersil devices and modules that include the DDC™ bus:

- Controllers with internal drivers  
[ZL2006](#), [ZL2008](#), [ZL6100](#), [ZL6105](#)
- Controllers with external drivers  
[ZL2004](#), [ZL8101](#)
- Regulators with integrated MOSFETs  
[ZL2101](#), [ZL2103](#), [ZL2106](#)
- Power module controllers  
[ZL9101M](#)

Manufacturer specific commands are also described in this document. Each command description includes the parameters defined by Intersil that are necessary for its use. This document should be used in conjunction with the PMBus specification documents standard command description and Intersil application notes. The commands in this document are grouped in functional sections in similar fashion to the “PMBus Power System Management Protocol Specifications” found in the following website.

<http://pmbus.org/Home>

Each PMBus command is described in the following format:

### <Command Name in PMBus Syntax>

Devices: <list of devices that support this command>

Command Code: <in hex>

Type: <SMBus transfer type>

Data Length in Bytes: <number>

Data Format: <PMBus data format>

Factory Value: <in hex and (decimal)>

Units: <data units>

Reference: <reference to related document or App Note>

Definition: <brief description of command's operation>

## Table of Contents

|  |          |
|--|----------|
| <b>Reference Documents</b> .....   | <b>5</b> |
| Forum Websites .....   | 5        |
| The System Management Interface Forum (SMIF) .....                                   | 5        |
| Power Management Bus Implementers Forum (PMBus-IF) .....                             | 5        |
| PMBus – Power System Management Bus Protocol Documents .....                         | 5        |
| Specification Part I – General Requirements Transport and Electrical Interface ..... | 5        |
| Specification Part II – Command Language .....                                       | 5        |
| SMBus – System Management Bus Documents .....  | 5        |
| SMBus Control Method Interface Specification .....                                   | 5        |
| <b>PMBus Use Guidelines</b> .....  | <b>5</b> |
| Summary .....  | 5        |
| <b>Intersil PMBus Commands</b> .....   | <b>6</b> |
| Control Commands .....   | 6        |
| OPERATION .....  | 6        |
| ON_OFF_CONFIG .....  | 6        |
| Output Commands .....  | 6        |
| VOUT_MODE .....  | 6        |
| VOUT_COMMAND .....   | 6        |
| VOUT_TRIM .....  | 7        |
| VOUT_CAL_OFFSET .....  | 7        |
| VOUT_MAX .....   | 7        |
| VOUT_MARGIN_HIGH .....   | 7        |
| VOUT_MARGIN_LOW .....  | 8        |
| VOUT_TRANSITION_RATE .....   | 8        |
| VOUT_DROOP .....   | 8        |
| MAX_DUTY .....   | 8        |
| FREQUENCY_SWITCH .....   | 9        |
| IOUT_CAL_GAIN .....  | 9        |
| IOUT_CAL_OFFSET .....  | 9        |
| XTEMP_SCALE .....  | 9        |
| Fault Limit Commands .....   | 10       |
| POWER_GOOD_ON .....  | 10       |
| VOUT_OV_FAULT_LIMIT .....  | 10       |
| VOUT_UV_FAULT_LIMIT .....  | 10       |
| IOUT_AVG_OC_FAULT_LIMIT .....  | 11       |
| IOUT_UC_FAULT_LIMIT .....  | 11       |
| IOUT_AVG_UC_FAULT_LIMIT .....  | 11       |
| OT_FAULT_LIMIT .....   | 12       |
| OT_WARN_LIMIT .....  | 12       |
| UT_WARN_LIMIT .....  | 12       |
| UT_FAULT_LIMIT .....   | 12       |
| VIN_OV_FAULT_LIMIT .....   | 12       |
| VIN_OV_WARN_LIMIT .....  | 13       |
| VIN_UV_WARN_LIMIT .....  | 13       |
| VIN_UV_FAULT_LIMIT .....   | 13       |
| MFR_VMON_OV_FAULT_LIMIT .....  | 13       |
| MFR_VMON_UV_FAULT_LIMIT .....  | 13       |
| Fault Response Commands .....  | 14       |
| VOUT_OV_FAULT_RESPONSE .....   | 14       |
| VOUT_UV_FAULT_RESPONSE .....   | 14       |
| MFR_IOUT_OC_FAULT_RESPONSE .....   | 15       |
| MFR_IOUT_UC_FAULT_RESPONSE .....   | 15       |
| OT_FAULT_RESPONSE .....  | 15       |
| UT_FAULT_RESPONSE .....  | 15       |
| VIN_OV_FAULT_RESPONSE .....  | 16       |
| VIN_UV_FAULT_RESPONSE .....  | 16       |
| VMON_OV_FAULT_RESPONSE .....   | 16       |
| VMON_UV_FAULT_RESPONSE .....   | 16       |

|                                    |    |
|------------------------------------|----|
| OVUV_CONFIG .....                  | 17 |
| Time Setting Commands .....        | 17 |
| TON_DELAY .....                    | 17 |
| TON_RISE .....                     | 17 |
| TOFF_DELAY .....                   | 18 |
| TOFF_FALL .....                    | 18 |
| POWER_GOOD_DELAY .....             | 18 |
| Status Commands .....              | 18 |
| CLEAR_FAULTS .....                 | 18 |
| STATUS_BYTE .....                  | 19 |
| STATUS_WORD .....                  | 19 |
| STATUS_VOUT .....                  | 19 |
| STATUS_IOUT .....                  | 19 |
| STATUS_INPUT .....                 | 20 |
| STATUS_TEMPERATURE .....           | 20 |
| STATUS_CML .....                   | 20 |
| STATUS_MFR_SPECIFIC .....          | 21 |
| Monitor Commands .....             | 21 |
| READ_VIN .....                     | 21 |
| READ_VOUT .....                    | 22 |
| READ_IOUT .....                    | 22 |
| READ_TEMPERATURE_1 .....           | 22 |
| READ_TEMPERATURE_2 .....           | 22 |
| READ_DUTY_CYCLE .....              | 23 |
| READ_FREQUENCY .....               | 23 |
| MFR_READ_VMON .....                | 23 |
| SNAPSHOT_CONTROL .....             | 23 |
| SNAPSHOT .....                     | 24 |
| Identification Commands .....      | 24 |
| DEVICE_ID .....                    | 24 |
| PMBUS_REVISION .....               | 25 |
| MFR_ID .....                       | 25 |
| MFR_MODEL .....                    | 25 |
| MFR_REVISION .....                 | 26 |
| MFR_LOCATION .....                 | 26 |
| MFR_DATE .....                     | 26 |
| MFR_SERIAL .....                   | 26 |
| USER_DATA_00 .....                 | 27 |
| Other Configuration Commands ..... | 27 |
| MFR_CONFIG .....                   | 27 |
| USER_CONFIG .....                  | 28 |
| MISC_CONFIG .....                  | 29 |
| PID_TAPS .....                     | 31 |
| PID_TAPS_ADAPT .....               | 32 |
| PID_TAPS_CALC .....                | 32 |
| IOUT_OMEGA_OFFSET .....            | 32 |
| INDUCTOR .....                     | 33 |
| NLR_CONFIG .....                   | 33 |
| TEMPCO_CONFIG .....                | 34 |
| AUTO_COMP_CONTROL .....            | 34 |
| AUTO_COMP_CONFIG .....             | 35 |
| DEADTIME .....                     | 35 |
| DEADTIME_CONFIG .....              | 36 |
| DEADTIME_MAX .....                 | 36 |
| Group Commands .....               | 37 |
| SEQUENCE .....                     | 37 |
| TRACK_CONFIG .....                 | 38 |
| INTERLEAVE .....                   | 38 |
| ISHARE_CONFIG .....                | 39 |
| PHASE_CONTROL .....                | 39 |
| DDC_CONFIG .....                   | 40 |

|  |           |
|--|-----------|
| DDC_GROUP .....                              | 40        |
| Supervisory Commands .....                   | 41        |
| STORE_DEFAULT_ALL .....                      | 41        |
| RESTORE_DEFAULT_ALL .....                    | 41        |
| STORE_USER_ALL .....                         | 41        |
| RESTORE_USER_ALL .....                       | 41        |
| RESTORE_FACTORY .....                        | 42        |
| BLANK_PARAMS .....                           | 42        |
| PRIVATE_PASSWORD .....                       | 42        |
| PUBLIC_PASSWORD .....                        | 42        |
| UNPROTECT .....                              | 43        |
| SECURITY_LEVEL .....                         | 43        |
| <b>Glossary .....</b>                        | <b>45</b> |
| <b>Quick Reference Table .....</b>           | <b>45</b> |
| <b>Related Tools and Documentation .....</b> | <b>48</b> |
| <b>Revision History .....</b>                | <b>48</b> |

## Reference Documents

### Forum Websites

#### THE SYSTEM MANAGEMENT INTERFACE FORUM (SMIF)

<http://www.powersig.org/>

The System Management Interface Forum (SMIF) supports the rapid advancement of an efficient and compatible technology base that promotes power management and systems technology implementations. The SMIF provides a membership path for any company or individual to be active participants in any or all of the various working groups established by the implementer forums.

#### POWER MANAGEMENT BUS IMPLEMENTERS FORUM (PMBUS-IF)

<http://pmbus.org/Home>

The PMBus-IF supports the advancement and early adoption of the PMBus protocol for power management. This website offers recent PMBus specification documents, PMBus articles, as well as upcoming PMBus presentations and seminars, PMBus Document Review Board (DRB) meeting notes, and other PMBus related news.

### PMBus – Power System Management Bus Protocol Documents

These specification documents may be obtained from the PMBus-IF website described above. These are required reading for complete understanding of the PMBus implementation. This application note will not readdress all of the details contained within the two PMBus Specification documents.

#### SPECIFICATION PART I – GENERAL REQUIREMENTS TRANSPORT AND ELECTRICAL INTERFACE

Includes the general requirements, defines the transport and electrical interface and timing requirements of hardwired signals.

#### SPECIFICATION PART II – COMMAND LANGUAGE

Describes the operation of commands, data formats, fault management and defines the command language used with the PMBus.

### SMBus – System Management Bus Documents

#### SMBUS CONTROL METHOD INTERFACE SPECIFICATION

<http://www.smbus.org/specs/>

This specification defines a System Management Bus (SMBus) interface for Advanced Configuration and Power Interface (ACPI).

## PMBus Use Guidelines

The PMBus is a powerful tool that allows the user to optimize circuit performance by configuring devices for their application. When configuring a device in a circuit, the device should be disabled whenever most settings are changed with PMBus commands. Some exceptions to this recommendation are OPERATION, ON\_OFF\_CONFIG, CLEAR\_FAULTS, VOUT\_COMMAND, VOUT\_MARGIN\_HIGH, VOUT\_MARGIN\_LOW, and ASCCR\_CONFIG. While the device is enabled any command can be read. Many commands do not take effect until after the device has been re-enabled, hence the recommendation that commands that change device settings are written while the device is disabled.

When sending the STORE\_DEFAULT\_ALL, STORE\_USER\_ALL, RESTORE\_DEFAULT\_ALL, and RESTORE\_USER\_ALL commands, it is recommended that no other commands are sent to the device for 100ms after sending STORE or RESTORE commands.

In addition, there should be a 2ms delay between repeated READ commands sent to the same device. When sending any other command, a 5ms delay is recommended between repeated commands sent to the same device.

### Summary

All commands can be read at any time.

Always disable the device when writing commands that change device settings. Exceptions to this rule are commands intended to be written while the device is enabled, for example, VOUT\_MARGIN\_HIGH.

To be sure a change to a device setting has taken effect, write the STORE\_USER\_ALL command, then cycle input power and re-enable.

## Intersil PMBus Commands

### Control Commands

#### OPERATION

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x01

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Custom

Factory Value: N/A

Units: N/A

Reference: Section 12.1 - PMBus Spec Part II

Definition: Sets Enable, Disable and  $V_{OUT}$  Margin modes. Please note that data values of OPERATION that force margin high or low only take effect when the MGN pin is left open (i.e., in the NOMINAL margin state).

NOTE: All margin settings are “Act on Fault” type. “Ignore Fault” settings are ignored and “Act on Fault” is used.

#### ON\_OFF\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x02

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x16

Units: N/A

Reference: Section 12.2 - PMBus Spec Part II

Definition: Configures the interpretation and coordination of the OPERATION command and the Enable pin (EN).

### Output Commands

#### VOUT\_MODE

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x20

Type: Read byte

Data Length in Bytes: 1

Data Format: Mode + Exponent Format Section 8.2 - PMBus Spec Part II

Factory Value: 0x13 (Linear Mode, Exponent = -13)

Units: N/A

Reference: Section 8 - PMBus Spec Part II

Definition: Preset to defined data format of  $V_{OUT}$  commands.

#### VOUT\_COMMAND

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x21

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 8.3.1 - PMBus Spec Part II -  $V_{OUT}$  Linear Mode

Factory Value: Pin-strap setting value (V1:V0)

Units: V

Reference: Section 8 - PMBus Spec Part II - VOUT\_MODE

Definition: Sets the nominal value of the output voltage.

Output voltage =  $V_{OUT\_COMMAND} \times 2^{-13}$ .  $V_{OUT\_COMMAND}$  cannot be set greater than the lesser of 110% of the pin-strap setting or  $V_{OUT\_MAX}$ .

### **VOUT\_TRIM**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x22

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Signed VOUT linear mode (see definition)

Factory Value: 0x0000

Units: V

Reference: Section 13.3 - PMBus Spec Part II - VOUT\_MODE

Definition: Sets V<sub>OUT</sub> trim value. The two bytes are formatted as a two's complement binary mantissa, used in conjunction with the exponent set in VOUT\_MODE.

### **VOUT\_CAL\_OFFSET**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x23

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Signed V<sub>OUT</sub> linear mode (see definition)

Factory Value: 0x0000

Units: V

Reference: Section 13.4 - PMBus Spec Part II - VOUT\_MODE

Definition: Sets V<sub>OUT</sub> calibration offset (same function as VOUT\_TRIM). The two bytes are formatted as a two's complement binary mantissa, used in conjunction with the exponent set in VOUT\_MODE.

NOTE: This command was previously known as VOUT\_CAL.

### **VOUT\_MAX**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x24

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 8.3.1 - PMBus Spec Part II - V<sub>OUT</sub> Linear Mode

Factory Value: 1.10 x VOUT\_COMMAND

Units: V

Reference: Section 13.5 - PMBus Spec Part II - VOUT\_MODE

Definition: Sets the maximum possible value setting of V<sub>OUT</sub>. The maximum VOUT\_MAX setting is 110% of the pin-strap setting.

### **VOUT\_MARGIN\_HIGH**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x25

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 8.3.1 - PMBus Spec Part II - V<sub>OUT</sub> Linear Mode

Factory Value: 1.05 x VOUT\_COMMAND

Units: V

Reference: Section 13.6 - PMBus Spec Part II - VOUT\_MODE

Definition: Sets the value of the V<sub>OUT</sub> during a margin high.

### **VOUT\_MARGIN\_LOW**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x26

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 8.3.1 - PMBus Spec Part II - V<sub>OUT</sub> Linear Mode

Factory Value: 0.95 x VOUT\_COMMAND

Units: V

Reference: Section 13.7 - PMBus Spec Part II - VOUT\_MODE

Definition: Sets the value of the V<sub>OUT</sub> during a margin low.

### **VOUT\_TRANSITION\_RATE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x27

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xBA00 (1)

Units: V/ms

Reference: Section 13.8 - PMBus Spec Part II

Definition: Sets the transition rate during margin or other change of V<sub>OUT</sub>.

### **VOUT\_DROOP**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x28

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0x0000

Units: mV/A

Reference: [AN2034](#) - Configuring Current Sharing on the ZL2004 and ZL2006; PMBus Spec Part II - Section 13.9

Definition: Sets the effective load line (V/I slope) for the rail in which the device is used.

### **MAX\_DUTY**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x32

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xEAF8 (95)

Units: %

Reference: Section 14.3 - PMBus Spec Part II

Definition: Sets the maximum allowable duty cycle of the switching frequency.

NOTE: MAX\_DUTY should not be used to set the output voltage of the device. VOUT\_COMMAND is the proper method to set the output voltage.



## FREQUENCY\_SWITCH

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x33

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: Pin-strap setting value (SYNC)

Units: kHz

Reference: Section 14.4 - PMBus Spec Part II

Definition: Sets the switching frequency.

## IOUT\_CAL\_GAIN

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x38

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value:

ZL2004, ZL2006, ZL2008, ZL6100, ZL6105, ZL8101, ZL9101: 0xC200 (2mΩ)

ZL2101, ZL2103, ZL2106: 0xE2B0 (43mΩ)

Units: mΩ

Reference: Section 14.8 - PMBus Spec Part I

Definition: Sets the effective impedance for current sensing at +25 °C.

NOTE: This command was previously known as IOUT\_SCALE.

## IOUT\_CAL\_OFFSET

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x39

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0x0000 (0A)

Units: A

Reference: Section 14.9 - PMBus Spec Part II

Definition: Sets an offset to I<sub>OUT</sub> readings. Use to compensate for delayed measurements of current ramp.

## XTEMP\_SCALE

Devices: ZL2004, ZL2006, ZL2008, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD9

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xBA00 (1)

Units: 1/°C

Reference:

Definition: Sets a scalar value that is used for calibrating the external temperature. The constant is applied in [Equation 1](#) to produce the read value of XTEMP via the PMBus command READ\_TEMPERATURE\_2.

NOTE: This value must be ≥ to 1.

$$\text{READ\_TEMPERATURE\_2} = \left( \frac{\text{ExternalTemperature}}{\text{XTEMP\_SCALE}} \right) + \text{XTEMP\_OFFSET} \quad (\text{EQ. 1})$$

### XTEMP\_OFFSET

Devices: ZL2004, ZL2006, ZL2008, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xDA

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0x8000 (0)

Units: °C

Reference:

Definition: Sets an offset value that is used for calibrating the external temperature. The constant is applied in [Equation 2](#) to produce the read value of XTEMP via the PMBus command READ\_TEMPERATURE\_2.

$$\text{READ\_TEMPERATURE\_2} = \left( \frac{\text{ExternalTemperature}}{\text{XTEMP\_SCALE}} \right) + \text{XTEMP\_OFFSET} \quad (\text{EQ. 2})$$

## Fault Limit Commands

### POWER\_GOOD\_ON

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x5E

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 8.3.1 - PMBus Spec Part II - V<sub>OUT</sub> Linear Mode

Factory Value: 0.9 x VOUT\_COMMAND

Units: V

Reference: Section 15.32.1 - PMBus Spec Part II

Definition: Sets the voltage threshold for power-good indication. Power-Good asserts when the output voltage exceeds POWER\_GOOD\_ON and de-asserts when the output voltage is less than VOUT\_UV\_FAULT\_LIMIT.

### VOUT\_OV\_FAULT\_LIMIT

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x40

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 8.3.1 - PMBus Spec Part II - V<sub>OUT</sub> Linear Mode

Factory Value: 1.15 x VOUT\_COMMAND

Units: V

Reference: Section 15.2 - PMBus Spec Part II

Definition: Sets the V<sub>OUT</sub> overvoltage fault threshold.

### VOUT\_UV\_FAULT\_LIMIT

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x44

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 8.3.1 - PMBus Spec Part II - V<sub>OUT</sub> Linear Mode

Factory Value: 0.85 x VOUT\_COMMAND

Units: V

Reference: Section 15.6 - PMBus Spec Part II

Definition: Sets the V<sub>OUT</sub> undervoltage fault threshold.

### **IOUT\_OC\_FAULT\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x46

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: Pin-strap setting value. ZL6100, ZL2006 (ILIM1:ILIM0); ZL2004 (ILIM)

Units: A

Reference: Section 15.8 - PMBus Spec Part II

Definition: Sets the  $I_{OUT}$  peak overcurrent fault threshold. For down-slope sensing, this corresponds to the first current sample after the Current Sense Blanking Time has expired during the (1-D) time interval. For up-slope sensing, this corresponds to the last current sample of the D time interval. This feature shares the OC fault bit operation (in STATUS\_IOUT) and OC fault response with IOUT\_AVG\_OC\_FAULT\_LIMIT.

### **IOUT\_AVG\_OC\_FAULT\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE7

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 1 x IOUT\_OC\_FAULT\_LIMIT

Units: A

Reference:

Definition: Sets the  $I_{OUT}$  average overcurrent fault threshold. For down-slope sensing, this corresponds to the average of all the current samples taken during the (1-D) time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the 1-D interval). For up-slope sensing, this corresponds to the average of all the current samples taken during the D time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the D interval). This feature shares the OC fault bit operation (in STATUS\_IOUT) and OC fault response with IOUT\_OC\_FAULT\_LIMIT.

### **IOUT\_UC\_FAULT\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x4B

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: -1 x IOUT\_OC\_FAULT\_LIMIT

Units: A

Reference: Section 15.13 - PMBus Spec Part II

Definition: Sets the  $I_{OUT}$  valley undercurrent fault threshold. For down-slope sensing, this corresponds to the last current sample of the (1-D) time interval. For up-slope sensing, this corresponds to the first current sample of the D time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the D interval). This feature shares the UC fault bit operation (in STATUS\_IOUT) and UC fault response with IOUT\_AVG\_UC\_FAULT\_LIMIT.

### **IOUT\_AVG\_UC\_FAULT\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE8

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 1 x IOUT\_UC\_FAULT\_LIMIT

Units: A

Reference:

Definition: Sets the  $I_{OUT}$  average undercurrent fault threshold. For down-slope sensing, this corresponds to the average of all the current samples taken during the (1-D) time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the 1-D interval). For up-slope sensing, this corresponds to the average of all the current samples taken during the D time interval, excluding the Current Sense Blanking time (which occurs at the beginning of the D interval). This feature shares the UC fault bit operation (in STATUS\_IOUT) and UC fault response with IOUT\_UC\_FAULT\_LIMIT.

### **OT\_FAULT\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x4F

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xEBE8 (+125 °C)

Units: °C

Reference: Section 15.17 - PMBus Spec Part II

Definition: Sets the over-temperature fault threshold. Note that the temperature must drop below OT\_WARN\_LIMIT to clear this fault.

### **OT\_WARN\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x51

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xEB70 (+110 °C)

Units: °C

Reference: Section 15.19 - PMBus Spec Part II

Definition: Sets the over-temperature warning threshold. Also used as the hysteresis threshold for OT faults.

### **UT\_WARN\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x52

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xDC40 (-30 °C)

Units: °C

Reference: Section 15.20 - PMBus Spec Part II

Definition: Sets the under-temperature warning threshold. Also used as the hysteresis threshold for UT faults.

### **UT\_FAULT\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x53

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xE530 (-45 °C)

Units: °C

Reference: Section 15.21 - PMBus Spec Part II

Definition: Sets the under-temperature fault threshold. Note that the temperature must rise above UT\_WARN\_LIMIT to clear this fault.

### **VIN\_OV\_FAULT\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x55

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xD380 (14V)

Units: V

Reference: Section 15.23 - PMBus Spec Part II

Definition: Sets the VIN overvoltage fault threshold.

### **VIN\_OV\_WARN\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x57

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xD360 (13.5V)

Units: V

Reference: Section 15.25 - PMBus Spec Part II

Definition: Sets the  $V_{IN}$  overvoltage warning threshold.

### **VIN\_UV\_WARN\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x58

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 1.03 x VIN\_UV\_FAULT\_LIMIT

Units: V

Reference: Section 15.26 - PMBus Spec Part II

Definition: Sets the  $V_{IN}$  undervoltage warning threshold. If a VIN\_UV\_FAULT occurs, the input voltage must rise above VIN\_UV\_WARN\_LIMIT to clear the fault, which provides hysteresis to the fault threshold.

### **VIN\_UV\_FAULT\_LIMIT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x59

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: Pin-strap setting value (UVLO)

Units: V

Reference: Section 15.27 - PMBus Spec Part II

Definition: Sets the  $V_{IN}$  undervoltage fault threshold.

### **MFR\_VMON\_OV\_FAULT\_LIMIT**

Devices: ZL2004, ZL8101, ZL9101

Command Code: 0xF5

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xD300 (12V)

Units: V

Definition: Sets the  $V_{MON}$  overvoltage fault threshold. A  $V_{MON}$  parameter equals 16 times the voltage applied to the V<sub>MON</sub> pin. The  $V_{MON}$  overvoltage warn limit is automatically set to 90% of this fault value.

### **MFR\_VMON\_UV\_FAULT\_LIMIT**

Devices: ZL2004, ZL8101, ZL9101

Command Code: 0xF6

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xCA80 (5V)

Units: V

Definition: Sets the  $V_{MON}$  undervoltage fault threshold. A  $V_{MON}$  parameter equals 16x the voltage applied to the V<sub>MON</sub> pin. The  $V_{MON}$  undervoltage warn limit is automatically set to 110% of this fault value.

## Fault Response Commands

All Intersil devices' fault responses, including current faults, are defined by [Table 1](#). This table describes the specifics for the Intersil devices. If a device is used in a current sharing rail, the device will not attempt a retry until the entire current share rail attempts a retry following a disable event.

**TABLE 1. Intersil DEVICE SPECIFICATIONS**

| BITS | DESCRIPTION   | VALUE      | MEANING  |
|------|---|------------|--|
| 7:6  | Response:   | 00         | Continuous operation. (Ignore fault)   |
|      | For all modes set by Bits [7:6], the device:<br>• Pulls SALRT low<br>• Sets the related fault bit in the status registers. Fault bits are only cleared by the CLEAR_FAULTS command. | 01         | Delay, Disable and Retry<br>Delay time is specified by Bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit retries according to the setting in Bits [5:3].  |
|      |   | 10         | Disable and Retry according to the setting in Bits [5:3].  |
|      |   | 11         | The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.   |
| 5:3  | Retry Setting   | 000        | No Retry. The output remains disabled.   |
|      |   | 001 to 110 | The PMBus device attempts to restart the number of times set by these bits. The minimum number is 1 and the maximum number is 6. If the device fails to restart in the allowed number of retries, it disables the output and remains disabled. The time between the start of each attempt to retry is set by the value in Bits [2:0] along with the delay time unit specified for that particular fault. |
|      |   | 111        | The PMBus device attempts retry continuously until it is commanded to disable (by the Enable pin or OPERATION command), input power is removed, or another fault condition causes the unit to shut down.   |
| 2:0  | Retry Time and Delay Time   | 000 to 111 | This time count is used for both the amount of time between retry attempts and for the amount of time a rail is to delay its response after a fault is detected. The retry time and delay time units are defined by the type of fault within each device.  |

NOTE: The delay time is the time between restart attempts

### VO<sub>UT</sub>\_OV\_FAULT\_RESPONSE

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x41

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 8.2ms/LSB, Delay = 10ms/LSB

Reference: Section 15.3 - PMBus Spec Part II and [Table 1](#).

Definition: Configures the V<sub>OUT</sub> overvoltage fault response. Note that the two most significant bits can be written as 01 or 00. However, upon an overvoltage fault, these two bits will be set to 1:0 (i.e., Bits (7:6) = 1:0). Thus an overvoltage fault cannot be set to be ignored.

### VO<sub>UT</sub>\_UV\_FAULT\_RESPONSE

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x45

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 8.2ms/LSB, Delay = 10ms/LSB

Reference: Section 15.7 - PMBus Spec Part II and [Table 1](#)

Definition: Configures the V<sub>OUT</sub> undervoltage fault response.

### **MFR\_IOUT\_OC\_FAULT\_RESPONSE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE5

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 8.2ms/LSB, Delay = 10ms/LSB

Reference: Section 15.3 - PMBus Spec Part II and [Table 1 on page 14](#)

Definition: Configures the I<sub>OUT</sub> overcurrent fault response. The command format is the same as the PMBus standard responses for voltage and temperature faults except that it sets the overcurrent status bit.

Note: The delay time is the time between restart attempts.

### **MFR\_IOUT\_UC\_FAULT\_RESPONSE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE6

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 8.2ms/LSB, Delay = 10ms/LSB

Reference: Section 15.7 - PMBus Spec Part II and [Table 1 on page 14](#)

Definition: Configures the I<sub>OUT</sub> undercurrent fault response. The command format is the same as the PMBus standard responses for voltage and temperature faults except that it sets the undercurrent status bit.

Note: The delay time is the time between restart attempts

### **OT\_FAULT\_RESPONSE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x50

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 32ms/LSB, Delay = 80ms/LSB

Reference: Section 15.18 - PMBus Spec Part II and [Table 1 on page 14](#)

Definition: Configures the over-temperature fault response.

Note: The delay time is the time between restart attempts

### **UT\_FAULT\_RESPONSE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x54

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 32ms/LSB, Delay = 80ms/LSB

Reference: Section 15.22 - PMBus Spec Part II and [Table 1 on page 14](#)

Definition: Configures the undertemperature fault response.

Note: The delay time is the time between restart attempts

### **VIN\_OV\_FAULT\_RESPONSE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x56

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 8.2ms/LSB, Delay = 10ms/LSB

Reference: Section 15.24 - PMBus Spec Part II and [Table 1 on page 14](#)

Definition: Configures the  $V_{IN}$  overvoltage fault response.

Note: The delay time is the time between restart attempts

### **VIN\_UV\_FAULT\_RESPONSE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x5A

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 8.2ms/LSB, Delay = 10ms/LSB

Reference: Section 15.28 - PMBus Spec Part II and [Table 1 on page 14](#)

Definition: Configures the  $V_{IN}$  undervoltage fault response.

Note: The delay time is the time between restart attempts

### **VMON\_OV\_FAULT\_RESPONSE**

Devices: ZL2004, ZL8101, ZL9101

Command Code: 0xF8

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 8.2ms/LSB, Delay = 10ms/LSB

Reference: Section 15.24 - PMBus Spec Part II and [Table 1 on page 14](#)

Definition: Configures the  $V_{MON}$  overvoltage fault response.

Note: The delay time is the time between restart attempts

### **VMON\_UV\_FAULT\_RESPONSE**

Devices: ZL2004, ZL8101, ZL9101

Command Code: 0xF9

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Section 10.5.1 - Custom (PMBus Spec Part II)

Factory Value: 0xBF (Retry always, max delay)

Units: Retry time = 8.2ms/LSB, Delay = 10ms/LSB

Reference: Section 15.24 - PMBus Spec Part II and [Table 1 on page 14](#)

Definition: Configures the  $V_{MON}$  undervoltage fault response.

Note: The delay time is the time between restart attempts



## OVUV\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD8

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Custom (See [Table 2](#))

Factory Value: 0x80

Units: N/A

Reference:

Definition: Configures the output voltage OV and UV fault detection feature as given in [Table 2](#).

**TABLE 2. OV AND UV FAULT DETECTION FEATURE CONFIGURATION**

| BITS | PURPOSE  | VALUE | DESCRIPTION   |
|------|--|-------|---|
| 7    | Controls how an OV fault response shutdown sets the output driver state                  | 0     | An OV fault does not enable the low-side power device         |
|      |  | 1     | An OV fault enables the low-side power device                 |
| 6:4  | Reserved   | -     |   |
| 3:0  | Defines the number of consecutive limit violations required to declare an OV or UV fault | N     | N+1 consecutive OV or UV violations initiate a fault response |

## Time Setting Commands

### TON\_DELAY

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x60

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value:

ZL6100, ZL2006: Pin-strap setting value (DLY1:DLY0)

ZL2004: Pin-strap setting value (SS)

Units: ms

Reference: Section 16.1 - PMBus Spec Part II

Definition: Sets the delay time from ENABLE to start of  $V_{OUT}$  rise. The delay time setting can range from 0ms up to 500s, in steps of 125ns. Refer to device datasheet for specified accuracy.

### TON\_RISE

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x61

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: Pin-strap setting value (SS)

Units: ms

Reference: Section 16.2 - PMBus Spec Part II

Definition: Sets the rise time of  $V_{OUT}$  after ENABLE and TON\_DELAY. The rise time setting can range from 0ms to 200ms, in steps of 12.5μs. Refer to device datasheet for specified accuracy.

### **TOFF\_DELAY**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x64

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 1 x TON\_DELAY

Units: ms

Reference: Section 16.5 - PMBus Spec Part II

Definition: Sets the delay time from DISABLE to start of  $V_{OUT}$  fall. The delay time setting can range from 0ms up to 500s, in steps of 125ns. Refer to device datasheet for specified accuracy.

### **TOFF\_FALL**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x65

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 1 x TON\_RISE

Units: ms

Reference: Section 16.6 - PMBus Spec Part II

Definition: Sets the fall time for  $V_{OUT}$  after DISABLE and TOFF\_DELAY. The fall time setting can range from 0ms to 200ms, in steps of 12.5 $\mu$ s. Refer to device datasheet for specified accuracy.

### **POWER\_GOOD\_DELAY**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD4

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: Pin-strap setting value 1 x TON\_RISE

Units: ms

Reference:

Definition: Sets the delay applied between the output exceeding the PG threshold (POWER\_GOOD\_ON) and asserting the PG pin. The factory value is equal to TON\_RISE. The delay time can range from 0ms up to 500s, in steps of 125ns. A 1ms minimum configured value is recommended to apply proper debounce to this signal.

## **Status Commands**

### **CLEAR\_FAULTS**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x03

Type: Send Byte

Data Length in Bytes: 0

Data Format: N/A

Factory Value: N/A

Units: N/A

Reference: Section 15.1 - PMBus Spec Part II

Definition: Clears fault indications.

### **STATUS\_BYTE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x78

Type: Read byte

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x00

Units: N/A

Reference: Section 17.1 - PMBus Spec Part II

Definition: Returns an abbreviated status for fast reads.

### **STATUS\_WORD**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x79

Type: Read word

Data Length in Bytes: 2

Data Format: Custom

Factory Value: 0x0000

Units: N/A

Reference: Section 17.2 - PMBus Spec Part II

Definition: Returns the general status information used to indicate subsequent status to be read for more detail.

### **STATUS\_VOUT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x7A

Type: Read byte

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x00

Units: N/A

Reference: Section 17.3 - PMBus Spec Part II

Definition: Returns the  $V_{OUT}$  specific status.

### **STATUS\_IOUT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x7B

Type: Read byte

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x00

Units: N/A

Reference: Section 17.4 - PMBus Spec Part II

Definition: Returns the  $I_{OUT}$  specific status.

### **STATUS\_INPUT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x7C

Type: Read byte

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x00

Units: N/A

Reference: Section 17.5 - PMBus Spec Part II

Definition: Returns specific status specific to the input.

### **STATUS\_TEMPERATURE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x7D

Type: Read byte

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x00

Units: N/A

Reference: Section 17.6 - PMBus Spec Part II

Definition: Returns the temperature specific status.

### **STATUS\_CML**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x7E

Type: Read byte

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x00

Units: N/A

Reference: Section 17.7 - PMBus Spec Part II

Definition: Returns the Communication, Logic and Memory specific status.

## STATUS\_MFR\_SPECIFIC

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x80

Type: Read byte

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x00

Units: N/A

Reference: Section 17.9 - PMBus Spec Part II

Definition: Returns the Communication, Logic and Memory specific status. VMON fault and warning bits only apply to the ZL2004. The VMON warn thresholds are set according to [Equations 3](#) and [4](#):

$$\text{VMON\_UV Warn Limit} = 110\% \times \text{VMON\_UV\_FAULT\_LIMIT} \quad (\text{EQ. 3})$$

$$\text{VMON\_OV Warn Limit} = 90\% \times \text{VMON\_OV\_FAULT\_LIMIT} \quad (\text{EQ. 4})$$

TABLE 3.

| BIT | FAULT MEANING  |
|-----|--|
| 7   | Reserved   |
| 6   | Reserved   |
| 5   | VMON UV Warning  |
| 4   | VMON OV Warning  |
| 3   | External Switching Period Fault ( $t_{SW}$ ); indicates loss of external SYNC clock. |
| 2   | Reserved   |
| 1   | VMON UV Fault  |
| 0   | VMON OV Fault  |

## Monitor Commands

### READ\_VIN

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x88

Type: Read word

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: N/A

Units: V

Reference: Section 18.1 - PMBus Spec Part II

Definition: Returns the input voltage reading. The device will NACK this command when not enabled and not in the USER\_CONFIG monitor mode.

### **READ\_VOUT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x8B

Type: Read word

Data Length in Bytes: 2

Data Format: Section 8.3.1 - PMBus Spec Part II - VOUT Linear Mode

Factory Value: N/A

Units: V

Reference: Section 18.4 - PMBus Spec Part II

Definition: Returns the output voltage reading. The device will NACK this command when not enabled and not in the USER\_CONFIG monitor mode.

### **READ\_IOUT**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x8C

Type: Read word

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: N/A

Units: A

Reference: Section 18.5 - PMBus Spec Part II

Definition: Returns the output current reading. The device will NACK this command when not enabled and not in the USER\_CONFIG monitor mode.

### **READ\_TEMPERATURE\_1**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x8D

Type: Read word

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: N/A

Units: °C

Reference: Section 18.6 - PMBus Spec Part II

Definition: Returns the temperature reading internal to the device. The device will NACK this command when not enabled and not in the USER\_CONFIG monitor mode.

### **READ\_TEMPERATURE\_2**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x8E

Type: Read word

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: N/A

Units: °C

Reference: Section 18.6 - PMBus Spec Part II

Definition: Returns the reading from the external temperature device connected to XTEMP. The device will NACK this command when not enabled and not in the USER\_CONFIG monitor mode.

### **READ\_DUTY\_CYCLE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x94

Type: Read word

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: N/A

Units: %

Reference: Section 18.9 - PMBus Spec Part II

Definition: Returns the target duty cycle during the ENABLE state. The device will NACK this command when not enabled and not in the USER\_CONFIG monitor mode.

### **READ\_FREQUENCY**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x95

Type: Read word

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: N/A

Units: kHz

Reference: Section 18.10 - PMBus Spec Part II

Definition: Returns the measured operating switch frequency. The device will NACK this command when not enabled and not in the USER\_CONFIG monitor mode.

### **MFR\_READ\_VMON**

Devices: ZL2004, ZL8101, ZL9101

Command Code: 0xF7

Type: Read word

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: N/A

Units: V

Definition: Returns the value equal to 16x the voltage applied to the VMON pin. Devices will NACK this command when not enabled or not in the monitor mode (see "[USER\\_CONFIG](#)" on page 28).

### **SNAPSHOT\_CONTROL**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xF3

Type: R/W byte

Data Length in Bytes: 1

Data Format: Custom

Factory Value: N/A

Units: N/A

Definition:

Writing a 1 will cause the device to copy the current SNAPSHOT values from flash to the 32-byte SNAPSHOT command parameter.

Writing a 2 will cause the device to write the current SNAPSHOT values to a set location in flash.

All other values will be ignored.

## SNAPSHOT

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xEA

Type: Block Read

Data Length in Bytes: 32

Data Format: Custom

Factory Value: N/A

Units: N/A

Definition: The SNAPSHOT command is a 32-byte read-back of parametric and status values.

TABLE 4.

| BYTE NUMBER | VALUE                             | FORMAT                       |
|-------------|-----------------------------------|------------------------------|
| 31:22       | Reserved                          | 0x00                         |
| 21          | Manufacturer Specific Status Byte | Byte                         |
| 20          | CML Status Byte                   | Byte                         |
| 19          | Temperature Status Byte           | Byte                         |
| 18          | Input Status Byte                 | Byte                         |
| 17          | I <sub>OUT</sub> Status Byte      | Byte                         |
| 16          | V <sub>OUT</sub> Status Byte      | Byte                         |
| 15:14       | Switching Frequency               | Linear Data Format           |
| 13:12       | External Temperature              | Linear Data Format           |
| 11:10       | Internal Temperature              | Linear Data Format           |
| 9:8         | Duty Cycle                        | Linear Data Format           |
| 7:6         | Peak Current                      | Linear Data Format           |
| 5:4         | Load Current                      | Linear Data Format           |
| 3:2         | V <sub>OUT</sub>                  | V <sub>OUT</sub> linear mode |
| 1:0         | V <sub>IN</sub>                   | Linear Data Format           |

## Identification Commands

### DEVICE\_ID

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE4

Type: Block Read

Data Length in Bytes: 16

Data Format: ASCII

Factory Value: <part number/die revision/firmware revision>

Units: N/A

Reference: N/A

Definition: Returns the 16-byte (character) device identifier string.



### **PMBUS\_REVISION**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x98

Type: Read byte

Data Length in Bytes: 1

Data Format: Hex

Factory Value: <revision implemented>

Units: N/A

Reference: Section 22.1 - PMBus Spec Part II

Definition: Returns the revision of the PMBus implemented in the device.

### **MFR\_ID**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x99

Type: Block R/W - Protectable

Data Length in Bytes: User defined

Data Format: ASCII

Factory Value: Null

Units: N/A

Reference: Section 22.2 - PMBus Spec Part II

Definition: Sets a user defined identification. The sum total of characters in MFR\_ID, MFR\_MODEL, MFR\_REVISION, MFR\_LOCATION, MFR\_DATE, MFR\_SERIAL and USER\_DATA\_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

### **MFR\_MODEL**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x9A

Type: Block R/W - Protectable

Data Length in Bytes: User defined

Data Format: ASCII

Factory Value: Null

Units: N/A

Reference: Section 22.2.2 - PMBus Spec Part II

Definition: Sets a user defined model. The sum total of characters in MFR\_ID, MFR\_MODEL, MFR\_REVISION, MFR\_LOCATION, MFR\_DATE, MFR\_SERIAL and USER\_DATA\_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

### **MFR\_REVISION**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x9B

Type: Block R/W - Protectable

Data Length in Bytes: User defined

Data Format: ASCII

Factory Value: Null

Units: N/A

Reference: Section 22.2.3 - PMBus Spec Part II

Definition: Sets a user defined revision. The sum total of characters in MFR\_ID, MFR\_MODEL, MFR\_REVISION, MFR\_LOCATION, MFR\_DATE, MFR\_SERIAL and USER\_DATA\_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

### **MFR\_LOCATION**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x9C

Type: Block R/W - Protectable

Data Length in Bytes: User defined

Data Format: ASCII

Factory Value: Null

Units: N/A

Reference: Section 22.2.4 - PMBus Spec Part II

Definition: Sets a user defined location identifier. The sum total of characters in MFR\_ID, MFR\_MODEL, MFR\_REVISION, MFR\_LOCATION, MFR\_DATE, MFR\_SERIAL and USER\_DATA\_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

### **MFR\_DATE**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x9D

Type: Block R/W - Protectable

Data Length in Bytes: User defined

Data Format: ASCII

Factory Value: Null

Units: N/A

Reference: Section 22.2.5 - PMBus Spec Part II

Definition: Sets a user defined date. The sum total of characters in MFR\_ID, MFR\_MODEL, MFR\_REVISION, MFR\_LOCATION, MFR\_DATE, MFR\_SERIAL and USER\_DATA\_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

### **MFR\_SERIAL**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x9E

Type: Block R/W - Protectable

Data Length in Bytes: User defined

Data Format: ASCII

Factory Value: Null

Units: N/A

Reference: Section 22.2.6 - PMBus Spec Part II

Definition: Sets a user defined serialized identifier. The sum total of characters in MFR\_ID, MFR\_MODEL, MFR\_REVISION, MFR\_LOCATION, MFR\_DATE, MFR\_SERIAL and USER\_DATA\_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

## USER\_DATA\_00

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xB0

Type: Block R/W - Protectable

Data Length in Bytes: User defined

Data Format: ASCII

Factory Value: Null

Units: N/A

Reference: Section 23 - PMBus Spec Part II

Definition: Sets a user defined data. The sum total of characters in MFR\_ID, MFR\_MODEL, MFR\_REVISION, MFR\_LOCATION, MFR\_DATE, MFR\_SERIAL and USER\_DATA\_00 plus one byte per command cannot exceed 128 characters. This limitation includes multiple writes of this command before a STORE command. To clear multiple writes, perform a RESTORE, write this command then perform a STORE/RESTORE.

## Other Configuration Commands

### MFR\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD0

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value:

ZL2006, ZL6100: 0xAA01 (Bits 15:8 and 5:4 set by ILIM1 pin-strap)

ZL2008, ZL6105: 0xAA04 (Bits 5:4 set by CFG2 pin-strap)

ZL2004, ZL8101, ZL9101: 0x6A15 (Bits 5:4 set by ILIM1 pin-strap in ZL8101, ZL9101)

ZL2101, ZL2103, ZL2106: 0x4A01

Definition: Configures several manufacturer-level features. The data field is defined in [Table 5](#).

TABLE 5.

| BITS  | PURPOSE   | VALUE | DESCRIPTION   |
|-------|---|-------|---|
| 15:11 | Current Sense Blanking Delay                          | D     | Sets the delay, D, in 32ns steps  |
| 10:8  | Current Sense Fault Count                             | C     | Sets the number of consecutive OC or UC violations required for a fault to 2C+1.  |
| 7     | Enable XTEMP Measurements                             | 0     | No temperature measurements are performed on XTEMP                                |
|       |   | 1     | Temperature measurements are performed on XTEMP                                   |
| 6     | Temperature Sensor Control ( <a href="#">Note 1</a> ) | 0     | The internal temperature sensor is used for warning and fault checks              |
|       |   | 1     | An external 2N3904 NPN on XTEMP is used for warning and fault checks              |
| 5:4   | Current Sense Control                                 | 00    | Current sense uses GND-referenced, down-slope sense ( <a href="#">Note 2</a> )    |
|       |   | 01    | Current sense uses VOUT-referenced, down-slope sensing ( <a href="#">Note 3</a> ) |
|       |   | 10    | Current sense uses VOUT-referenced, up-slope sensing ( <a href="#">Note 3</a> )   |
|       |   | 11    | Reserved  |
| 3     | NLR During Ramp                                       | 0     | Wait for PG   |
|       |   | 1     | Always on   |
| 2     | Alternate Ramp Control ( <a href="#">Note 4</a> )     | 0     | Alternate ramp disabled   |
|       |   | 1     | Alternate ramp enabled  |
| 1     | PG Pin Output Control                                 | 0     | PG is open drain  |
|       |   | 1     | PG is push-pull   |
| 0     | SYNC Pin Output Control                               | 0     | SYNC is open drain  |
|       |   | 1     | SYNC is push-pull   |

#### NOTES:

- When selecting XTEMP (Bit 6), be sure to have the XTEMP enabled in Bit 7.
- Not available on ZL2004.
- Not available on the ZL2101, ZL2103, or ZL2106.
- Only available on ZL2006. Always enabled on all other devices.

## USER\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD1

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value: 0x0000 (bits 6:5 set by CFG pin-strap setting)

Units: N/A

Reference:

Definition: Configures several user-level features. The data field is defined [Table 6](#). This command overrides the CONFIG pin settings.

TABLE 6.

| BITS  | PURPOSE                    | VALUE | DESCRIPTION   |
|-------|----------------------------|-------|---|
| 15:14 | Minimum Duty Cycle         | N     | Sets the minimum duty cycle $((N+1)/(2^8))$ during a ramp when "Minimum Duty Cycle" (Bit 13) is enabled. For example, if minimum duty cycle input N is set to 3, the minimum duty cycle is $(3+1)/(2^8) = (1/64)$ . |
| 13    | Minimum Duty Cycle Control | 0     | Minimum duty cycle is disabled  |
|       |                            | 1     | Minimum duty cycle is enabled   |
| 12    | Alternate Ramp Down        | 0     | Output follows TOFF_FALL ramp time  |
|       |                            | 1     | Output is set to high impedance/open mode during ramp down VOUT_UV threshold is reached   |
| 11    | SYNC Time-Out Enable       | 0     | SYNC output remains on after device is disabled   |
|       |                            | 1     | SYNC turns off 500ms after device is disabled   |
| 10    | Reserved                   | -     | Reserved  |
| 9     | PID Feed-Forward Control   | 0     | PID Coefficients are corrected for VDD variation  |
|       |                            | 1     | PID Coefficients are not corrected for VDD variations   |
| 8     | Fault Spreading Mode       | 0     | If sequencing is disabled, this device will ignore faults from other devices. If sequencing is enabled, the devices will sequence down from the failed device outward.  |
|       |                            | 1     | Faults received from any device selected by the DDC_GROUP command will cause this device to shut down immediately.  |
| 7     | SMBus Transmit Clk Rate    | 0     | SMBus transmit is always disabled in DDC devices  |
| 6     | SYNC Utilization Control   | 0     | Auto-configure using the SYNC pin and FREQUENCY_SWITCH parameter  |
|       |                            | 1     | Switch using the SYNC input   |
| 5     | SYNC Output Control        | 0     | Configure the SYNC pin as an input-only   |
|       |                            | 1     | Drive the switch clock out of SYNC when using the internal oscillator   |
| 4     | SMBus Transmit Inhibit     | 0     | SMBus transmit is always disabled in DDC devices  |
| 3     | SMBus Timeout Inhibit      | 0     | SMBus transmit is always disabled in DDC devices  |
| 2     | OFF Low-Side Control       | 0     | The low-side drive is off when device is disabled   |
|       |                            | 1     | The low-side drive is on when device is disabled  |
| 1:0   | Standby Mode               | 00    | Enter low-power mode when device is disabled (no READ_xxxx data available)  |
|       |                            | 01    | Monitor for faults when device is disabled (READ_xxxx data available)   |
|       |                            | 10    | Reserved  |
|       |                            | 11    | Monitor for faults using pulsed mode. (READ_xxxx data available upon read command)  |

## MISC\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE9

Type: R/W word – Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value:

ZL2004, ZL8101, ZL9101: 0x0000 (bits 11:10 set by ILIM pin-strap)

ZL2006, ZL2008, ZL6100, ZL6105: 0x0000

ZL2004, ZL8101, ZL9101: 0x6A15 (bits 5:4 set by ILIM1 pin-strap in ZL8101, ZL9101)

ZL2101, ZL2103, ZL2106: 0x4A01

Definition: This command sets options pertaining to advanced features. The format of this command is shown in [Table 7](#).

TABLE 7.

| DEVICE(s)  | BITS  | PURPOSE  | VALUE | DESCRIPTION  |
|--|-------|--|-------|--|
| All  | 15    | Broadcast Margin<br>(see DDC_CONFIG)   | 0     | Disabled   |
|  |       |  | 1     | Enabled  |
| All  | 14    | Broadcast Enable<br>(see DDC_CONFIG)   | 0     | Disabled   |
|  |       |  | 1     | Enabled  |
| ZL2004, ZL2006, ZL6100, ZL9101   | 13    | Adaptive Compensation<br>Enable  | 0     | Disabled   |
|  |       |  | 1     | Enabled  |
| ZL2008, ZL6105   |       | Phase Enable Select  | 0     | Use PH_EN pin to add/drop current-share phases.  |
|  |       |  | 1     | Use PHASE_CONTROL command to add/drop phases.  |
| ZL2101, ZL2103, ZL2106, ZL8101   |       | Reserved   | 0     | Reserved   |
| All  | 12    | Reserved   | 0     | Reserved   |
| ZL2004, ZL8101,<br>ZL9101  | 11:10 | I-Sense Gain Factor  | 00    | DCR = 25mV, $r_{DS(ON)} = 25mV$  |
|  |       |  | 01    | DCR = 35mV, $r_{DS(ON)} = 50mV$  |
|  |       |  | 10    | DCR = 50mV, $r_{DS(ON)} = 100mV$   |
|  |       |  | 11    | Reserved   |
| ZL2006, ZL2008, ZL2101, ZL2103,<br>ZL2106, ZL6100, ZL6105                    |       | Reserved   | 00    | Reserved   |
| ZL2004, ZL2006, ZL6100, ZL9101   | 9     | Adaptive Compensation<br>Update Rate   | M     | Taps are updated every $(9 \cdot M + 3)$ ms  |
|  |       |  | 0     | Reserved   |
| ZL2008, ZL2101, ZL2103, ZL2106,<br>ZL6105, ZL8101                            |       | Reserved   | 0     | Reserved   |
| ZL2008   | 8     | I <sub>OUT</sub> Blanking Delay and<br>IOUT_OMEGA_OFFSET<br>Calibration Calculations | 0     | Disabled   |
|  |       |  | 1     | Enabled  |
| ZL2004, ZL2006, ZL2101, ZL2103,<br>ZL2106, ZL6100, ZL6105, ZL8101,<br>ZL9101 |       | Reserved   | 0     | Reserved   |
| ZL2004, ZL2006, ZL2008, ZL2103,<br>ZL2106, ZL6100, ZL9101                    | 7     | Precise Ramp-Up Delay  | 0     | Monitor mode enabled creating a more accurate delay time. This mode also enables certain circuits that may affect standby power. |
|  |       |  | 1     | Normal, low standby power, delay operation   |
|  |       |  | X     | Enabled when Auto-Comp is enabled, disabled when Auto-Comp is disabled and the device is in Low-Power Standby Mode               |
| ZL2101, ZL6105, ZL8101   |       |  |       |  |

TABLE 7. (Continued)

| DEVICE(s)   | BITS | PURPOSE  | VALUE  | DESCRIPTION  |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
|---|------|--|--|--|----|----|-----|-----|---|---|---|---|---|---|---|---|---|---|---|----|----|
| ZL2004, ZL2006, ZL2008, ZL6100,<br>ZL6105, ZL8101, ZL9101         | 6    | Diode Emulation  | 0  | Disabled   |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
|   |      |  | 1  | Enabled, enter diode emulation at light loads to improve efficiency  |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
| ZL2101, ZL2103, ZL2106  |      | Reserved   | 0  | Reserved   |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
| ZL2004, ZL2006, ZL2101, ZL2103,<br>ZL2106, ZL6100, ZL8101, ZL9101 | 5:3  | Adaptive Compensation<br>Half-Ripple Current<br>Factor | N  | Determines upper load point for Adaptive Compensation:<br>$I_{LOAD2} = C * I_{RIPPLE}/2$ , where $C = 2^{(N+1)} + 1$ , as shown below: |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
|   |      |  | <table border="1"> <tr> <td>N</td> <td>0</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> </tr> <tr> <td>C</td> <td>3</td> <td>5</td> <td>9</td> <td>17</td> <td>33</td> <td>65</td> <td>129</td> <td>257</td> </tr> </table> |  |    |    | N   | 0   | 1 | 2 | 3 | 4 | 5 | 6 | 7 | C | 3 | 5 | 9 | 17 | 33 |
| N   | 0    | 1  | 2  | 3  | 4  | 5  | 6   | 7   |   |   |   |   |   |   |   |   |   |   |   |    |    |
| C   | 3    | 5  | 9  | 17   | 33 | 65 | 129 | 257 |   |   |   |   |   |   |   |   |   |   |   |    |    |
| ZL2008, ZL6105  |      | Reserved   | 0  | Reserved   |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
| ZL2006, ZL2008, ZL6100, ZL6105                                    | 2    | Minimum GL Pulse                                       | 0  | Disabled   |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
|   |      |  | 1  | Enabled, GL pulse width limited to 10% * $t_{SW}$ minimum during diode emulation.  |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
| ZL2004, ZL2101, ZL2103, ZL2106,<br>ZL8101, ZL9101                 |      | Reserved   | 0  | Reserved   |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
| All   | 1    | Snapshot   | 0  | Disabled   |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
|   |      |  | 1  | Enabled  |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
| ZL2004, ZL2006, ZL2008, ZL6100                                    | 0    | Adaptive Frequency                                     | 0  | Disabled, $f_{SW}$ fixed   |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
|   |      |  | 1  | Enabled  |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |
| ZL2101, ZL2103, ZL2106, ZL6105,<br>ZL8101, ZL9101                 |      | Reserved   | 0  | Reserved   |    |    |     |     |   |   |   |   |   |   |   |   |   |   |   |    |    |

## PID\_TAPS

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD5

Type: Block R/W - Protectable

Data Length in Bytes: 9

Data Format: Custom

Factory Value:

ZL2006, ZL2008, ZL6100: Pin-strap setting value (FC1:FC0)

ZL2004, ZL2103, ZL2106, ZL9101: Pin-strap setting value (FC)

ZL2101, ZL6105, ZL8101:

Auto Comp Off, taps stored – (A,B,C) = stored values

Auto Comp Off, no taps stored – (A,B,C) correspond to (G,Q,fn) = (20dB, 2, fsw/10)

Auto Comp On – (A,B,C) = Auto Comp results

Units: N/A

Reference: [AN2035](#) – Compensation Using CompZL™

Definition: For all devices except the ZL2008, this command configures the control loop compensator coefficients. For the ZL2008, these are the baseline taps used as a multiplier for calculating PID\_TAPS\_CALC, and should not be changed.

The PID algorithm implements the following Z-domain function in [Equation 5](#):

$$\frac{A + Bz^{-1} + Cz^{-2}}{1 - z^{-1}} \quad (\text{EQ. 5})$$

The coefficients A, B, and C are represented using a pseudo-floating point format similar to the V<sub>OUT</sub> parameters (with the addition of a sign bit), defined as [Equation 6](#):

$$A = (-1)^S \cdot 2^E \cdot M \quad (\text{EQ. 6})$$

Where M is a two-byte unsigned mantissa, S is a sign-bit, and E is a 7-bit two's-complement signed integer. The 9-byte data field is defined in [Table 8](#). S is stored as the MSB of the E byte.

TABLE 8.

| BYTE | PURPOSE          | DEFINITION                        |
|------|------------------|-----------------------------------|
| 8    | Tap C - E        | Coefficient C exponent + S        |
| 7    | Tap C - M [15:8] | Coefficient C mantissa, high-byte |
| 6    | Tap C - M [7:0]  | Coefficient C mantissa, low-byte  |
| 5    | Tap B - E        | Coefficient B exponent + S        |
| 4    | Tap B - M [15:8] | Coefficient B mantissa, high-byte |
| 3    | Tap B - M [7:0]  | Coefficient B mantissa, low-byte  |
| 2    | Tap A - E        | Coefficient A exponent + S        |
| 1    | Tap A - M [15:8] | Coefficient A mantissa, high-byte |
| 0    | Tap A - M [7:0]  | Coefficient A mantissa, low-byte  |

NOTE: Data bytes are transmitted on the PMBus in the order of Byte 0 through Byte 8.

## PID\_TAPS\_ADAPT

Devices: ZL2004, ZL2006, ZL6100, ZL9101

Command Code: 0xF2

Type: Block R/W - Protectable

Data Length in Bytes: 9

Data Format: Custom (see [“PID\\_TAPS” on page 31](#)).

Factory Value:

ZL2006, ZL6100: Pin-strap setting value (FC1:FC0)

ZL2004, ZL9101: Pin-strap setting value (FC)

Units: N/A

Reference: [AN2035](#) – Compensation Using CompZL™

Definition: The PID\_TAPS\_ADAPT command is set to the calculated taps for an average load current equal to a multiple of one-half of the ripple current. The command follows the same format as the PID\_TAPS (see [“PID\\_TAPS” on page 31](#)) and is used by the adaptive compensation algorithm over varying load.

The algorithm uses a linear interpolation to adjust operating Taps A, B, and C, with respect to the average load current. Two optimal sets of taps are required. One set of taps corresponds to  $I_{\text{RIPPLE}}/2$ , which is configured by the PID\_TAPS command, while the other set is configured by the PID\_TAPS\_ADAPT command and corresponds to  $c \cdot I_{\text{RIPPLE}}/2$  where  $c$  is the Half-Ripple Factor,  $(2^{(N+1)} + 1)$ , and is configured using the Adaptive Compensation Half-Ripple Factor field (N, bits 5:3) in MISC\_CONFIG.

## PID\_TAPS\_CALC

Devices: ZL2008

Command Code: 0xF2

Type: Block R/W - Protectable

Data Length in Bytes: 9

Data Format: Custom (see [“PID\\_TAPS” on page 31](#)).

Factory Value: Pin-strap setting value (FC1:FC0)

Units: N/A

Reference: [AN2035](#) – Compensation Using CompZL™; ZL2008 Datasheet

Definition: The ZL2008 pinstrap settings are used as indexes into lookup tables to determine factors to multiply times the baseline taps in PID\_TAPS. The result of these operations may be read back in PID\_TAPS\_CALC, and are used to configure the control loop compensator coefficients. The user may override this feature by saving his preferred taps in PID\_TAPS\_CALC in the User or Default Store. Tables for specifying compensation coefficients by pinstrap are shown in the ZL2008 Datasheet.

## IOUT\_OMEGA\_OFFSET

Devices: ZL2008

Command Code: 0xBE

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0

Units: N/A

Reference:

Definition: If the current sense element (ex: LS FET for  $r_{\text{DS(ON)}}$ -sensing or RC filter capacitor for DCR-sensing) has significant parasitic series inductance in the package or layout, an offset in measured current results from the inductive-divider with the output filter inductor. This measurement offset is proportional to output voltage and inversely proportional to the current sense element resistance.

$$I_{\text{OUT, measurement offset}} = \frac{V_{\text{out}}}{I_{\text{OUT\_CAL\_GAIN(m}\Omega)}} \cdot \text{IOUT\_OMEGA\_OFFSET}$$

An offset factor, IOUT\_OMEGA\_OFFSET, may be calculated as the inductive divider ratio.

$$\text{IOUT\_OMEGA\_OFFSET} = \frac{L_{\text{CS\_pkg}}}{L_{\text{CS\_pkg}} + L_{\text{out}}}$$

A value of zero for IOUT\_OMEGA\_OFFSET effectively disables the inductive-divider measured current offset calculation.



## INDUCTOR

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD6

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Section 7.1 - PMBus Spec Part II - Linear Data Format

Factory Value: 0xB23D (0.56μH)

Units: μH

Reference: [AN2035](#) – Compensation Using CompZL™

Definition: Informs the device of circuit's inductor value. This is used in adaptive algorithm calculations relating to the inductor ripple current.

## NLR\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD7

Type: Block R/W - Protectable

Data Length in Bytes: 4

Data Format: Custom

Factory Value:

ZL6100, ZL2006: Pin-strap setting value (FC1:FC0)

ZL2004: Pin-strap setting value (FC)

Units: N/A

Reference: [AN2032](#) - NLR Configuration for DDC Products

Definition: Configures the Nonlinear Response (NLR) control parameters. The 4-byte data field is defined in [Table 9](#). Not available on the ZL2101, ZL2103, or ZL2106.

TABLE 9.

| BITS  | PURPOSE   | VALUE | DESCRIPTION   |
|-------|---|-------|---|
| 31:30 | Outer threshold multiplier                        | O     | Sets multiplier of inner threshold for outer threshold setting, $O * LI$ and $O * UI$         |
| 29:27 | NLR comparator threshold: Loading-Inner           | LI    | Sets inner threshold for a loading event to $\sim 0.5\% * (LI + 1) * V_{OUT}$                 |
| 26:24 | NLR comparator threshold: Unloading-Inner         | UI    | Sets inner threshold for an unloading event to $\sim 0.5\% * (UI + 1) * V_{OUT}$              |
| 23:20 | Loading-Outer Threshold Maximum Correction Time   | LOT   | Sets outer threshold, maximum correction time for a loading event to $LOT * t_{SW}/64$ (s)    |
| 19:16 | Loading-Inner Threshold Maximum Correction Time   | LIT   | Sets inner threshold, maximum correction time for a loading event to $LIT * t_{SW}/64$ (s)    |
| 15:12 | Unloading-Outer Threshold Maximum Correction Time | UOT   | Sets outer threshold, maximum correction time for an unloading event to $UOT * t_{SW}/64$ (s) |
| 11:8  | Unloading-Inner Threshold Maximum Correction Time | UIT   | Sets inner threshold, maximum correction time for an unloading event to $UIT * t_{SW}/64$ (s) |
| 7:4   | Load Blanking time control                        | LB    | Sets NLR blanking time for a loading event as described in <a href="#">Table 10</a> .         |
| 3:0   | Unload Blanking time control                      | UB    | Sets NLR blanking time for an unloading event as described in <a href="#">Table 10</a> .      |

TABLE 10. LOADING/UNLOADING BLANKING TIMES

| LB OR UB          | 0 | 1 | 2 | 3 | 4 | 5  | 6  | 7  | 8  | 9  | 10 | 11  | 12  | 13  | 14  | 15  |
|-------------------|---|---|---|---|---|----|----|----|----|----|----|-----|-----|-----|-----|-----|
| $t_{SW}/64$ UNITS | 1 | 2 | 3 | 5 | 9 | 17 | 33 | 49 | 65 | 81 | 97 | 129 | 161 | 177 | 193 | 225 |

## TEMPCO\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xDC

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Custom

Factory Value: ZL2006, ZL2004 0x2C (4400ppm/°C) (see Note 5)

Definition: Configures the correction factor and temperature measurement source when performing temperature coefficient correction for current sense. Current sense scale is corrected for external FET controllers and the current sense offset is corrected for internal FET controllers. The command parameter has the following format as shown in [Table 11](#).

To determine the hex value of the Tempco Correction factor (TC) for current scale of a power stage using  $r_{DS(ON)}$  current sensing, first determine the temperature coefficient of resistance for the conductor,  $\alpha$ . This is found with [Equation 7](#):

$$\alpha = \frac{R_{REF} - R}{R_{REF}(T_{REF} - T)} \quad (\text{EQ. 7})$$

Where: R = Conductor resistance at temperature “T”

$R_{REF}$  = Conductor resistance at reference temperature  $T_{REF}$

$\alpha$  = Temperature coefficient of resistance for the conductor material

T = Temperature measured by temperature sensor, in °C

$T_{REF}$  = Reference temperature that  $\alpha$  is specified at for the conductor material

After  $\alpha$  is determined, convert the value in units of 100ppm/°C. This is done with [Equation 8](#):

This value is then converted to a hex value.

$$TC = \frac{\alpha \times 10^6}{100} \quad (\text{EQ. 8})$$

Note: TEMP\_CO\_CONFIG values are applied as negative correction to a positive temperature coefficient.

TABLE 11.

| BITS | PURPOSE   | VALUE | DESCRIPTION   |
|------|---|-------|---|
| 7    | Selects the temp sensor source for tempco correction ( <a href="#">Note 6</a> )                 | 0     | Selects the internal temperature sensor   |
|      |   | 1     | Selects the XTEMP pin for temperature measurements (2N3904 junction typical)  |
| 6:0  | Sets tempco correction in units of 100ppm/°C for IOUT_CAL_GAIN and 100µA/°C for IOUT_CAL_OFFSET | TC    | $R_{SEN} (\text{EXT } r_{DS(ON)} \text{ and DCR}) = IOUT\_CAL\_GAIN \times (1 + TC \times (T - 25))$<br>where $R_{SEN}$ = resistance of sense element |
|      |   |       | $R_{SEN} (\text{INT FET}) = IOUT\_CAL\_OFFSET \times (1 + TC \times 10^{-4} \times (T - 25))$<br>where $R_{SEN}$ = resistance of sense element        |

NOTES:

5. Typical temperature coefficients are ~3900ppm/°C (0x27) for copper and ~4800ppm/°C (0x30) for silicon.

6. When selecting XTEMP (bit 7), be sure to have the XTEMP enabled in MFR\_CONFIG, bit 7.

## AUTO\_COMP\_CONTROL

Devices: ZL2101, ZL6105, ZL8101

Command Code: 0xBD

Type: Send Byte - Protectable

Data Length in Bytes: 0

Data Format: N/A

Factory Value: N/A

Units: N/A

Reference:

Definition: Causes the Auto Comp algorithm to initiate, if the Auto Comp feature is enabled in AUTO\_COMP\_CONFIG.

## AUTO\_COMP\_CONFIG

Devices: ZL2101, ZL6105, ZL8101

Command Code: 0xBC

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Custom

Factory Value:

ZL6105: Pin-strap setting value (FC1:FC0)

ZL2101, ZL8101: Pin-strap setting value (FC)

Units: N/A

Reference: Device datasheets

Definition: Controls configuration of Auto Compensation features. The data field is defined in [Table 12](#).

TABLE 12.

| BITS | PURPOSE                   | VALUE | DESCRIPTION   |
|------|---------------------------|-------|---|
| 7:4  | Auto Comp Gain Percentage | G     | Scale the Gain of the Auto-Compensation results by a factor of $(G+1)*10\%$ , where $0 \leq G \leq 9$ . $G = 0$ yields lowest jitter; $G = 9$ yields tightest transient response. |
| 3    | Power Good Assertion      | 0     | Use PG_DELAY  |
|      |                           | 1     | Assert PG after Auto-Comp completes   |
| 2    | Auto Comp Store           | 0     | Do not store Auto-Comp results  |
|      |                           | 1     | Store Auto-Comp results for use on future ramps   |
| 1:0  | Auto Comp Mode            | 0     | Off (Disabled). Compensation stored in PID_TAPS will be used.   |
|      |                           | 1     | Once (results are storable)   |
|      |                           | 2     | Repeat every ~1 second (only the first results are storable)  |
|      |                           | 3     | Repeat every ~1 minute (only the first results are storable)  |

## DEADTIME

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xDD

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Custom – two 2's complement bytes

Factory Value:

ZL2004: 0x0808; ZL2006: 0x3C20; ZL2101, ZL2103, ZL2106: 0x101C;

ZL2008, ZL6100, ZL6105, ZL8101, ZL9101: 0x0000;

Units: ns

Reference: N/A

Definition: Sets the non-overlap between PWM transitions using a 2-byte data field. The most-significant byte controls the high-side to low-side dead time value as a single 2's-complement signed value in units of ns. The least-significant byte controls the low-side to high-side dead time value. Positive values imply a non-overlap of the FET drive on-times. Negative values imply an overlap of the FET drive on-times. The default value of the maximum dead time for the adaptive dead time algorithm is 60ns. Writing a value to this command immediately before writing the DEADTIME\_CONFIG command will set a new maximum for the adaptive dead time algorithm. The device will operate at the dead time values written to this command when adaptive dead time is disabled.

## DEADTIME\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xDE

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value:

ZL2004: 0x8484; ZL2101, ZL2103, ZL2106: 0x8288;

ZL2006, ZL2008, ZL6100, ZL6105, ZL8101, ZL9101: 0x0404;

Units: N/A

Reference: N/A

Definition: Configures the dead time optimization mode. Also sets the minimum dead time value for the adaptive dead time mode range. The data field is described in [Table 13](#).

TABLE 13.

| BITS | PURPOSE  | VALUE | DESCRIPTION  |
|------|--|-------|--|
| 15   | Sets the high to low transition dead time mode                   | 0     | Adaptive HIGH to LOW dead time control                               |
|      |  | 1     | Freeze the HIGH to LOW dead time.                                    |
| 14:8 | Sets the minimum HIGH to LOW dead time of the dynamic mode range | H     | Limits the minimum allowed HIGH to LOW dead time to H x 2ns (signed) |
| 7    | Sets the low to high transition dead time mode                   | 0     | Adaptive LOW to HIGH dead time control                               |
|      |  | 1     | Freezes the LOW to HIGH dead time                                    |
| 6:0  | Sets the minimum LOW to HIGH dead time of the dynamic mode range | L     | Limits the minimum allowed LOW to HIGH dead time to L x 2ns (signed) |

## DEADTIME\_MAX

Devices: ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xBF

Type: R/W Word - Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value:

ZL2008, ZL6100, ZL6105, ZL8101, ZL9101: 0x3838

ZL2101, ZL2103, ZL2106: 0x2424

Units: N/A

Reference: N/A

Definition: Sets the maximum dead time value for the adaptive dead time mode range. The data field is described in [Table 14](#).

TABLE 14.

| BITS | PURPOSE  | VALUE | DESCRIPTION  |
|------|--|-------|--|
| 15   | N/A  | 0     |  |
| 14:8 | Sets the maximum HIGH to LOW dead time of the dynamic mode range | H     | Limits the maximum allowed HIGH to LOW dead time to H x 2ns (signed) |
| 7    | N/A  | 0     |  |
| 6:0  | Sets the maximum LOW to HIGH dead time of the dynamic mode range | L     | Limits the maximum allowed LOW to HIGH dead time to L x 2ns (signed) |

## Group Commands

### SEQUENCE

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE0

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value: Pin-strap setting value (CFG)

Units: N/A

Reference:

Definition: Identifies the Rail DDC ID of the prequel and sequel rails when performing multi-rail sequencing. The device will enable its output (using the programmed delay values in [Table 15](#)) when its EN or OPERATION enable state, as defined by ON\_OFF\_CONFIG, is set and the prequel device has issued a power-good event on the DDC bus. The device will disable its output (using the programmed delay values) when the sequel device has issued a power-down event on the DDC bus.

TABLE 15.

| BITS  | PURPOSE             | VALUE                  | DESCRIPTION  |
|-------|---------------------|------------------------|--|
| 15    | Prequel Enable      | 0                      | Disable, no prequel preceding this rail  |
|       |                     | 1                      | Enable, prequel to this rail is defined by bits 12:8   |
| 14:13 | Reserved            | 0                      | Reserved   |
| 12:8  | Prequel Rail DDC ID | 0 to 31 (0x00 to 0x1F) | Set to the Rail DDC ID of the rail that should precede this device's rail in a sequence order. |
| 7     | Sequel Enable       | 0                      | Disable, no sequel following this rail   |
|       |                     | 1                      | Enable, sequel to this rail is defined by bits 4:0   |
| 6:5   | Reserved            | 0                      | Reserved   |
| 4:0   | Sequel Rail DDC ID  | 0 to 31 (0x00 to 0x1F) | Set to the Rail DDC ID of the rail that should follow this device's rail in a sequence order.  |

The data field is a two-byte value. The most-significant byte contains the 5-bit Rail DDC ID of the prequel device. The least-significant byte contains the 5-bit Rail DDC ID of the sequel device. The most significant bit of each byte contains the enable of the prequel or sequel mode. This command overrides the corresponding sequence configuration set by the CONFIG pin settings.

## TRACK\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE1

Type: R/W byte - Protectable

Data Length in Bytes: 1

Data Format: Custom

Factory Value:

ZL2006, ZL6100: 0x01

ZL2004, ZL2008, ZL2101, ZL2103, ZL2106, ZL6105: Pin-strap setting value (SS)

Units: N/A

Reference:

Definition: Configures the voltage tracking modes of the device. The data field is described in [Table 16](#).

TABLE 16.

| BITS | PURPOSE                     | VALUE | DESCRIPTION  |
|------|-----------------------------|-------|--|
| 7    | Enables Voltage Tracking    | 0     | Tracking is disabled   |
|      |                             | 1     | Tracking is enabled  |
| 6:3  | Reserved                    | -     | Reserved   |
| 2    | Controls the Tracking Ratio | 0     | Output tracks 100% of VTRK                                     |
|      |                             | 1     | Output tracks 50% of VTRK                                      |
| 1    | Controls Upper Track Limit  | 0     | Output is limited by target voltage                            |
|      |                             | 1     | Output is limited by VTRK pin                                  |
| 0    | Controls Ramp-Up Behavior   | 0     | The output is not allowed to track VTRK down before power-good |
|      |                             | 1     | The output is allowed to track VTRK down before power-good     |

## INTERLEAVE

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x37

Type: R/W word - Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value:

Default Group Number: 0 (0x00)

Default Number in Group: 16 (0x00)

Default Position in Group: Four LSB's of SMBus address

Units: N/A

Reference: Section 14.7 - PMBus Spec Part I; [AN2034](#) - Configuring Current Sharing on the ZL2004 and ZL2006

Definition: Configures the phase offset of a device that is sharing a common SYNC clock with other devices. Note that for Intersil devices, a value of 0 for the Number in Group field is interpreted as 16, to allow for phase spreading groups of up to 16 devices.

For current sharing rails, INTERLEAVE is used to set the initial phase of the rail. The current share devices then automatically distribute their phase relative to the INTERLEAVE setting. Refer to [AN2034](#) for phase control rules of a current share rail.

TABLE 17.

| BITS  | PURPOSE           | VALUE                   | DESCRIPTION  |
|-------|-------------------|-------------------------|--|
| 15:12 | Reserved          | 0                       | Reserved   |
| 11:8  | Group Number      | 0 to 15                 | Sets a number to a group of interleaved rails                              |
| 7:4   | Number in Group   | 16, 1 to 15<br>(0 = 16) | Sets the number of rails in the group<br>A value of 0 is interpreted as 16 |
| 3:0   | Position in Group | 0 to 15                 | Sets position of the device's rail within the group                        |

## ISHARE\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD2

Type: R/W Word - Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value:

ZL2004, ZL2006, ZL6100, ZL8101, ZL9101: Pin-strap setting value (CFG)

ZL2008, ZL6105: Pin-strap setting value (CFG0)

Units: N/A

Reference: [AN2034](#) - Configuring Current Sharing on the ZL2004 and ZL2006

Definition: Configures the device for current sharing communication over the DDC bus. The command format is described in [Table 18](#).

TABLE 18.

| BITS | PURPOSE   | VALUE                     | DESCRIPTION  |
|------|---|---------------------------|--|
| 15:8 | IShare<br>DDC ID                                | 0 to 31<br>(0x00 to 0x1F) | Sets the current share rail's DDC ID for each device within a current share rail.<br>Set to the same DDC ID as in DDC_CONFIG.<br>This DDC ID is used for sequencing and fault spreading when used in a current share rail. |
| 7:5  | Number of Members<br>( <a href="#">Note 7</a> ) | 0 to 7                    | Number of devices in current share rail -1.<br>Example: 3 device current share rail, use 3 - 1 = 2   |
| 4:2  | Member Position                                 | 0 to 7                    | Position of device within current share rail   |
| 1    | Reserved  | 0                         | Reserved   |
| 0    | I-Share Control                                 | 1                         | Device is a member of a current share rail   |
|      |   | 0                         | Device is not a member of a current share rail   |

NOTE:

7. The following devices are appropriate for use in applications from one to seven phases: ZL2008E, ZL9101, ZL8101, ZL9117, ZL6105

## PHASE\_CONTROL

Devices: ZL2004, ZL2006, ZL2008, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xF0

Type: R/W Byte - Protectable

Data Length in Bytes: 1

Data Format: Custom

Factory Value: 0x00

Units: N/A

Reference: [AN2034](#) - Configuring Current Sharing on the ZL2004 and ZL2006

Definition: This command controls Phase adding/dropping when the device is setup for current sharing. If data written to this command is 0x01, the device phase is considered active while a value of 0x00 will be interpreted as disabled or dropped phase. Any other value written to this command will be ignored.

## DDC\_CONFIG

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xD3

Type: R/W Word - Protectable

Data Length in Bytes: 2

Data Format: Custom

Factory Value: Broadcast Group: 0; DDC ID: Lowest five bits of the SMBus Address.

Units: N/A

Reference:

Definition: Configures the DDC bus

TABLE 19.

| BITS  | PURPOSE         | VALUE   | DESCRIPTION   |
|-------|-----------------|---------|---|
| 15:13 | Reserved        | 0       | Reserved  |
| 12:8  | Broadcast Group | 0 to 31 | Group number used for broadcast events.<br>(i.e., Broadcast Enable and Broadcast Margin)<br>Set this number to the same value for all rails/devices that should respond to each other's broadcasted event. This function is enabled by the bits 15 and 14 in the MISC_CONFIG command. |
| 7:6   | Reserved        | 0       | Reserved  |
| 5     | DDC TX Inhibit  | 1       | DDC Transmission Inhibited  |
|       |                 | 0       | DDC Transmission Enabled  |
| 4:0   | DDC ID          | 0 to 31 | Sets the rail's DDC ID for sequencing and fault spreading.<br>For the current-sharing applications, set this value the same as the ID value in ISHARE_CONFIG for all devices in the current sharing rail.   |

## DDC\_GROUP

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xE2

Type: R/W Block - Protectable

Data Length in Bytes: 4

Data Format: Custom

Factory Value: 0x00000000

Units: N/A

Reference:

Definition: This command sets which rail DDC IDs should be listened to for fault spreading information. The data sent is a 4-byte, 32-bit, bit vector where every bit represents a rail's DDC ID. A bit set to 1 indicates a device DDC ID to which the configured device will respond upon receiving a fault spreading event. In this vector, bit 0 of byte 0 corresponds to the rail with DDC ID 0. Following through, Bit 7 of byte 3 corresponds to the rail with DDC ID 31.

Note: The device/rail's own DDC ID should not be set within the DDC\_GROUP command for that device/rail.

All devices in a current share rail must shutdown for the rail to report a shutdown.

If fault spread mode is enabled in USER\_CONFIG (Bit 8 set to 1), the device will immediately shut down if one of its DDC\_GROUP members fail. The device/rail will attempt its configured restart only after all devices/rails within the DDC\_GROUP have cleared their faults.

If fault spread mode is disabled in USER\_CONFIG (Bit 8 cleared to 0), the device will perform a sequenced shutdown as defined by the SEQUENCE command setting. The rails/devices in a sequencing set only attempt their configured restart after all faults have cleared within the DDC\_GROUP. If fault spread mode is disabled and sequencing is also disabled, the device will ignore faults from other devices and stay enabled.



## Supervisory Commands

### STORE\_DEFAULT\_ALL

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x11

Type: Send Byte

Data Length in Bytes: 0

Data Format: N/A

Factory Value: N/A

Units: N/A

Reference: Section 11.2 - PMBus Spec Part II

Definition: Stores, at the DEFAULT level, all PMBus values that were written since the last restore command. To clear the DEFAULT store, perform a RESTORE\_FACTORY then STORE\_DEFAULT\_ALL. To add to the DEFAULT store, perform a RESTORE\_DEFAULT\_ALL, write commands to be added, then STORE\_DEFAULT\_ALL. Wait 20ms after a STORE command.

### RESTORE\_DEFAULT\_ALL

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x12

Type: Send Byte

Data Length in Bytes: 0

Data Format: N/A

Factory Value: N/A

Units: N/A

Reference: Section 11.3 - PMBus Spec Part I

Definition: Restores PMBus settings that were stored using STORE\_DEFAULT\_ALL. Command performed at power up. Security level is changed to level 1 following this command.

### STORE\_USER\_ALL

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x15

Type: Send Byte

Data Length in Bytes: 0

Data Format: N/A

Factory Value: N/A

Units: N/A

Reference: Section 11.6 - PMBus Spec Part I

Definition: Stores, at the USER level, all PMBus values that were changed since the last restore command. To clear the USER store, perform a RESTORE\_FACTORY then STORE\_USER\_ALL. To add to the USER store, perform a RESTORE\_USER\_ALL, write commands to be added, then STORE\_USER\_ALL. Wait 20ms after a STORE command.

### RESTORE\_USER\_ALL

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0x16

Type: Send Byte

Data Length in Bytes: 0

Data Format: N/A

Factory Value: N/A

Units: N/A

Reference: Section 11.7 - PMBus Spec Part I

Definition: Restores PMBus settings that were stored using STORE\_USER\_ALL. Command performed at power up. Security level is changed to Level 1 following this command.

### **RESTORE\_FACTORY**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xF4

Type: Send Byte /Protectable

Data Length in Bytes: 0

Data Format: N/A

Factory Value: N/A

Units: N/A

Reference:

Definition: Restores the device to the hard-coded factory values and pin-strap definitions. The device retains the DEFAULT and USER stores for restoring. Security level is changed to Level 1 following this command.

### **BLANK\_PARAMS**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xEB

Type: Block Read

Data Length in Bytes: 16

Data Format: Custom

Factory Value: 0xFF...FF

Units: N/A

Reference:

Definition: Returns a 16-byte string which indicates which parameter values were either retrieved by the last RESTORE operation or have been written since that time. Reading BLANK\_PARAMS immediately after a restore operation allows the user to determine which parameters are stored in that store. A one indicates the parameter is not present in the store and has not been written since the RESTORE operation. The mapping of PMBus commands to bits in BLANK\_PARAMS is unique for each device type. Contact the factory for the BLANK\_PARAMS bit-map for your device type, if needed.

### **PRIVATE\_PASSWORD**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xFB

Type: Block R/W

Data Length in Bytes: 9

Data Format: Custom

Factory Value: 0x0000000000000000

Units: N/A

Reference: [AN2031](#) - Writing Configuration Files for Intersil Devices

Definition: Sets the private password string. Password strings have the same format as the MFR\_ID parameters.

### **PUBLIC\_PASSWORD**

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xFC

Type: Block R/W

Data Length in Bytes: 4

Data Format: Custom

Factory Value: 0x00000000

Units: N/A

Reference: [AN2031](#) - Writing Configuration Files for Intersil Devices

Definition: Sets the public password string.

## UNPROTECT

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xFD

Type: Block R/W

Data Length in Bytes: 32

Data Format: Custom

Factory Value: 0xFF...FF

Units: N/A

Reference: [AN2031](#) - Writing Configuration Files for Intersil Devices

Definition: Sets a 256-bit (32-byte) parameter which identifies which commands are to be protected against write-access at lower security levels. Each bit in this parameter corresponds to a command according to the command's code. The command with a code of 00h (PAGE) is protected by the least-significant bit of the least-significant byte, followed by the command with a code of 01h and so forth. Note that all possible commands have a corresponding bit regardless of whether they are protectable or supported by the device. Clearing a command's UNPROTECT bit indicates that write-access to that command is only allowed if the device's security level has been raised to an appropriate level. Although the UNPROTECT command is writeable at any security level, it only takes effect when it is stored in the Default or User store (storing in the Default store requires a security level of 3, and storing in the User store requires a security level of 2 or higher).

## SECURITY\_LEVEL

Devices: ZL2004, ZL2006, ZL2008, ZL2101, ZL2103, ZL2106, ZL6100, ZL6105, ZL8101, ZL9101

Command Code: 0xFA

Type: Read Byte

Data Length in Bytes: 1

Data Format: Hex

Factory Value: 0x01

Units: N/A

Reference: [AN2031](#) - Writing Configuration Files for Intersil Devices

Definition: The device provides write protection for individual commands. Each bit in the UNPROTECT parameter controls whether its corresponding command is writeable (commands are always readable). If a command is not writeable, a password must be entered in order to change its parameter (i.e., to enable writes to that command). There are two types of passwords, public and private. The public password provides a simple lock-and-key protection against accidental changes to the device. It would typically be sent to the device in the application prior to making changes. Private passwords allow commands marked as non-writeable in the UNPROTECT parameter to be changed. Private passwords are intended for protecting factory-installed configurations and would not typically be used in the application. Each store (USER and DEFAULT) can have its own UNPROTECT string and private password. If a command is marked as non-writeable in the DEFAULT UNPROTECT parameter (its corresponding bit is cleared), the private password in the DEFAULT Store must be sent in order to change that command. If a command is writeable according to the Default UNPROTECT parameter, it may still be marked as non-writeable in the User Store UNPROTECT parameter. In this case, the User private password can be sent to make the command writeable.

The device supports four levels of security. Each level is designed to be used by a particular class of users, ranging from module manufacturers to end users, as discussed below. Levels 0 and 1 correspond to the public password. All other levels require a private password. Writing a private password can only raise the security level. Writing a public password will reset the level down to 0 or 1. [Figure 1 on page 44](#) shows the algorithm used by the device to determine if a particular command write is allowed.

### Security Level 3 – Module Vendor

Level 3 is intended primarily for use by Module vendors to protect device configurations in the Default Store. Clearing a UNPROTECT bit in the Default Store implies that a command is writeable only at Level 3 and above. The device's security level is raised to Level 3 by writing the private password value previously stored in the Default Store. To be effective, the module vendor must clear the UNPROTECT bit corresponding to the STORE\_DEFAULT\_ALL and RESTORE\_FACTORY commands. Otherwise, Level 3 protection is ineffective since the entire store could be replaced by the user, including the enclosed private password.

### Security Level 2 – User

Level 2 is intended for use by the end user of the device. Clearing a UNPROTECT bit in the User Store implies that a command is writeable only at Level 2 and above. The device's security level is raised to Level 2 by writing the private password value previously stored in the User Store. To be effective, the user must clear the UNPROTECT bit corresponding to the STORE\_USER\_ALL, RESTORE\_DEFAULT\_ALL, STORE\_DEFAULT\_ALL, and RESTORE\_FACTORY commands. Otherwise, Level 2 protection is ineffective since the entire store could be replaced, including the enclosed private password.

**Security Level 1 – Public**

Level 1 is intended to protect against accidental changes to ordinary commands by providing a global write-enable. It can be used to protect the device from erroneous bus operations. It provides access to commands whose UNPROTECT bit is set in both the Default and User Store. Security is raised to Level 1 by writing the public password stored in the User Store using the PUBLIC\_PASSWORD command. The public password stored in the Default Store has no effect.

**Security Level 0 - Read-Only Mode**

Level 0 implies that only commands which are always writeable (namely, PUBLIC\_PASSWORD, PRIVATE\_PASSWORD, and UNPROTECT) are available. This represents the lowest authority level and hence the most protected state of the device. The level can be reduced to 0 by using PUBLIC\_PASSWORD to write any value which does not match the stored public password.

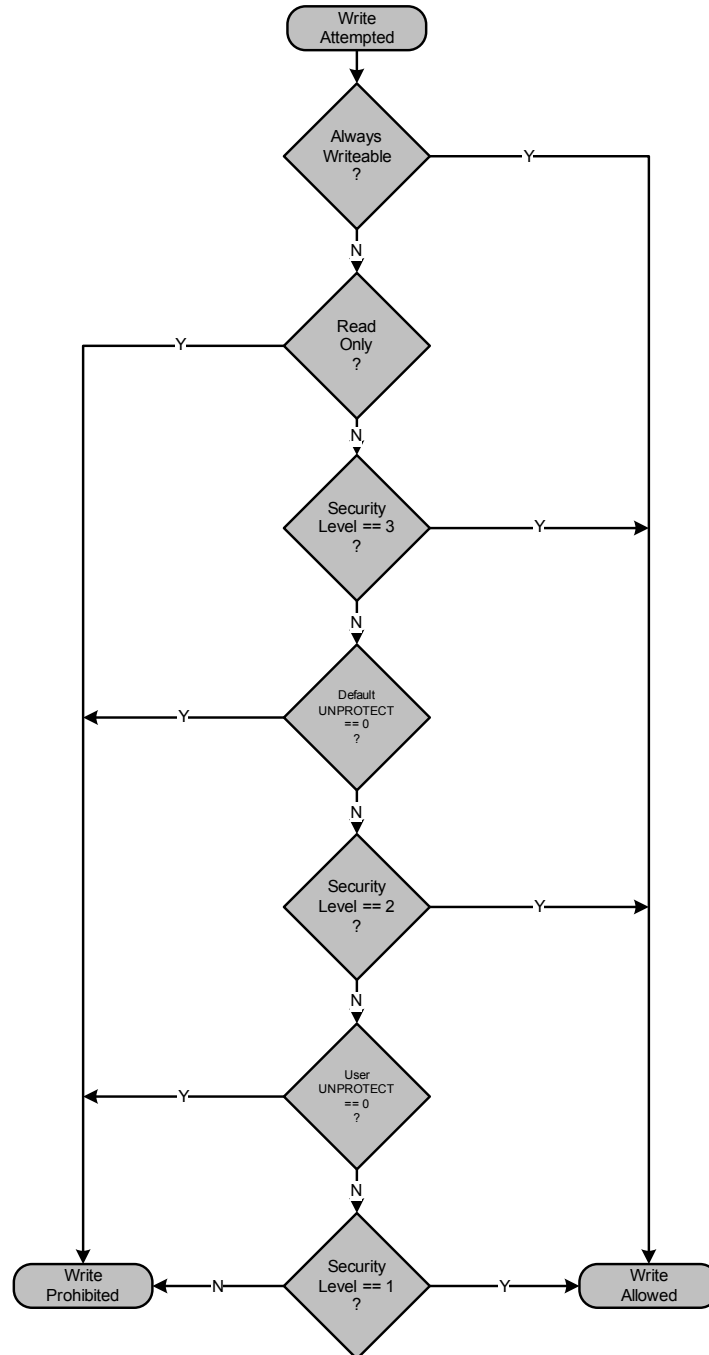


FIGURE 1. ALGORITHM USED TO DETERMINE WHEN A COMMAND IS WRITEABLE

## Glossary

**Protectable:** The data available in these commands are protectable. The UNPROTECT command is used for the protect function.

**Linear Format:** The linear format is defined in the PMBus specification as a two byte value consisting of an exponent and a mantissa.

**V<sub>OUT</sub> linear mode format:** The V<sub>OUT</sub> format is defined in the PMBus specification for a number of V<sub>OUT</sub> command modes. Intersil devices use the linear V<sub>OUT</sub> mode with an exponent of -13, resulting in V<sub>OUT</sub> command voltage = (V<sub>OUT</sub> command data) x 2<sup>-13</sup>.

**Custom Format:** The custom format describes the command data as being a collection of single bits or sets of bits.

## Quick Reference Table

| PMBUS COMMAND          | COMMAND CODE | DATA BYTES | PMBUS DATA FORMAT  | DATA UNITS | TYPE      | FACTORY VALUE HEX (DEC)   | AN2033 SECTION          |
|------------------------|--------------|------------|--------------------|------------|-----------|---------------------------|-------------------------|
| OPERATION              | 0x01         | 1          | CUSTOM             |            | R/W byte  | N/A                       | <a href="#">page 6</a>  |
| ON_OFF_CONFIG          | 0x02         | 1          | CUSTOM             |            | R/W byte  | 0x16                      | <a href="#">page 6</a>  |
| CLEAR_FAULTS           | 0x03         | 0          | N/A                |            | Send byte | N/A                       | <a href="#">page 18</a> |
| STORE_DEFAULT_ALL      | 0x11         | 0          | N/A                |            | Send byte | N/A                       | <a href="#">page 41</a> |
| RESTORE_DEFAULT_ALL    | 0x12         | 0          | N/A                |            | Send byte | N/A                       | <a href="#">page 41</a> |
| STORE_USER_ALL         | 0x15         | 0          | N/A                |            | Send byte | N/A                       | <a href="#">page 41</a> |
| RESTORE_USER_ALL       | 0x16         | 0          | N/A                |            | Send byte | N/A                       | <a href="#">page 41</a> |
| VOUT_MODE              | 0x20         | 1          | CUSTOM             |            | Read byte | 0x13                      | <a href="#">page 6</a>  |
| VOUT_COMMAND           | 0x21         | 2          | VOUT LINEAR        | V          | R/W word  | V1:V0 pins                | <a href="#">page 6</a>  |
| VOUT_TRIM              | 0x22         | 2          | SIGNED VOUT LINEAR | V          | R/W word  | 0x0000 (0)                | <a href="#">page 7</a>  |
| VOUT_CAL_OFFSET        | 0x23         | 2          | SIGNED VOUT LINEAR | V          | R/W word  | 0x0000 (0)                | <a href="#">page 7</a>  |
| VOUT_MAX               | 0x24         | 2          | VOUT LINEAR        | V          | R/W word  | 1.1 x VOUT_COMMAND        | <a href="#">page 7</a>  |
| VOUT_MARGIN_HIGH       | 0x25         | 2          | VOUT LINEAR        | V          | R/W word  | 1.05 x VOUT_COMMAND       | <a href="#">page 7</a>  |
| VOUT_MARGIN_LOW        | 0x26         | 2          | VOUT LINEAR        | V          | R/W word  | 0.95 x VOUT_COMMAND       | <a href="#">page 8</a>  |
| VOUT_TRANSITION_RATE   | 0x27         | 2          | LINEAR             | V/ms       | R/W word  | 0xBA00 (1.0)              | <a href="#">page 8</a>  |
| VOUT_DROOP             | 0x28         | 2          | LINEAR             | mV/A       | R/W word  | 0x0000 (0)                | <a href="#">page 8</a>  |
| MAX_DUTY               | 0x32         | 2          | LINEAR             | %          | R/W word  | 0xEAF8 (95)               | <a href="#">page 8</a>  |
| FREQUENCY_SWITCH       | 0x33         | 2          | LINEAR             | kHz        | R/W word  | SYNC pin                  | <a href="#">page 9</a>  |
| INTERLEAVE             | 0x37         | 2          | CUSTOM             |            | R/W word  | 0x01 (SA1:SA0)            | <a href="#">page 38</a> |
| IOUT_CAL_GAIN          | 0x38         | 2          | LINEAR             | mV/A       | R/W word  | 0xC200 (2)                | <a href="#">page 9</a>  |
| IOUT_CAL_OFFSET        | 0x39         | 2          | LINEAR             | A          | R/W word  | 0                         | <a href="#">page 9</a>  |
| VOUT_OV_FAULT_LIMIT    | 0x40         | 2          | VOUT LINEAR        | V          | R/W word  | 1.15 x VOUT_COMMAND       | <a href="#">page 10</a> |
| VOUT_OV_FAULT_RESPONSE | 0x41         | 1          | CUSTOM             |            | R/W byte  | 0xBF                      | <a href="#">page 14</a> |
| VOUT_UV_FAULT_LIMIT    | 0x44         | 2          | VOUT LINEAR        | V          | R/W word  | 0.85 x VOUT_COMMAND       | <a href="#">page 10</a> |
| VOUT_UV_FAULT_RESPONSE | 0x45         | 1          | CUSTOM             |            | R/W byte  | 0xBF                      | <a href="#">page 14</a> |
| IOUT_OC_FAULT_LIMIT    | 0x46         | 2          | LINEAR             | A          | R/W word  | ILIM pin(s)               | <a href="#">page 11</a> |
| IOUT_UC_FAULT_LIMIT    | 0x4B         | 2          | LINEAR             | A          | R/W word  | -1 x IOUT_OC_FAULT_LIMIT  | <a href="#">page 11</a> |
| OT_FAULT_LIMIT         | 0x4F         | 2          | LINEAR             | C          | R/W word  | 0xEBE8 (125)              | <a href="#">page 12</a> |
| OT_FAULT_RESPONSE      | 0x50         | 1          | CUSTOM             |            | R/W byte  | 0xBF                      | <a href="#">page 15</a> |
| OT_WARN_LIMIT          | 0x51         | 2          | LINEAR             | C          | R/W word  | 0xEB70 (110)              | <a href="#">page 12</a> |
| UT_WARN_LIMIT          | 0x52         | 2          | LINEAR             | C          | R/W word  | 0xDC40 (-30)              | <a href="#">page 12</a> |
| UT_FAULT_LIMIT         | 0x53         | 2          | LINEAR             | C          | R/W word  | 0xE530 (-45)              | <a href="#">page 12</a> |
| UT_FAULT_RESPONSE      | 0x54         | 1          | CUSTOM             |            | R/W byte  | 0xBF                      | <a href="#">page 15</a> |
| VIN_OV_FAULT_LIMIT     | 0x55         | 2          | LINEAR             | V          | R/W word  | 0xD380 (14)               | <a href="#">page 12</a> |
| VIN_OV_FAULT_RESPONSE  | 0x56         | 1          | CUSTOM             |            | R/W byte  | 0xBF                      | <a href="#">page 16</a> |
| VIN_OV_WARN_LIMIT      | 0x57         | 2          | LINEAR             | V          | R/W word  | 0xD360 (13.5)             | <a href="#">page 13</a> |
| VIN_UV_WARN_LIMIT      | 0x58         | 2          | LINEAR             | V          | R/W word  | 1.03 x VIN_UV_FAULT_LIMIT | <a href="#">page 13</a> |

## Quick Reference Table (Continued)

| PMBUS COMMAND         | COMMAND CODE | DATA BYTES | PMBUS DATA FORMAT | DATA UNITS | TYPE      | FACTORY VALUE HEX (DEC)    | AN2033 SECTION          |
|-----------------------|--------------|------------|-------------------|------------|-----------|----------------------------|-------------------------|
| VIN_UV_FAULT_LIMIT    | 0x59         | 2          | LINEAR            | V          | R/W word  | UVLO                       | <a href="#">page 13</a> |
| VIN_UV_FAULT_RESPONSE | 0x5A         | 1          | CUSTOM            |            | R/W byte  | 0xBF                       | <a href="#">page 16</a> |
| POWER_GOOD_ON         | 0x5E         | 2          | VOUT LINEAR       | V          | R/W word  | 0.9 x VOUT_COMMAND         | <a href="#">page 10</a> |
| TON_DELAY             | 0x60         | 2          | LINEAR            | ms         | R/W word  | DLY pin(s)                 | <a href="#">page 17</a> |
| TON_RISE              | 0x61         | 2          | LINEAR            | ms         | R/W word  | SS pin(s)                  | <a href="#">page 17</a> |
| TOFF_DELAY            | 0x64         | 2          | LINEAR            | ms         | R/W word  | 1 x TON_DLY                | <a href="#">page 18</a> |
| TOFF_FALL             | 0x65         | 2          | LINEAR            | ms         | R/W word  | 1 x TON_RISE               | <a href="#">page 18</a> |
| STATUS_BYTE           | 0x78         | 1          | CUSTOM            |            | Read byte | N/A                        | <a href="#">page 19</a> |
| STATUS_WORD           | 0x79         | 2          | CUSTOM            |            | Read word | N/A                        | <a href="#">page 19</a> |
| STATUS_VOUT           | 0x7A         | 1          | CUSTOM            |            | Read byte | N/A                        | <a href="#">page 19</a> |
| STATUS_IOUT           | 0x7B         | 1          | CUSTOM            |            | Read byte | N/A                        | <a href="#">page 19</a> |
| STATUS_INPUT          | 0x7C         | 1          | CUSTOM            |            | Read byte | N/A                        | <a href="#">page 20</a> |
| STATUS_TEMPERATURE    | 0x7D         | 1          | CUSTOM            |            | Read byte | N/A                        | <a href="#">page 20</a> |
| STATUS_CML            | 0x7E         | 1          | CUSTOM            |            | Read byte | N/A                        | <a href="#">page 20</a> |
| STATUS_MFR_SPECIFIC   | 0x80         | 1          | CUSTOM            |            | Read byte | N/A                        | <a href="#">page 21</a> |
| READ_VIN              | 0x88         | 2          | LINEAR            | V          | Read word | N/A                        | <a href="#">page 21</a> |
| READ_VOUT             | 0x8B         | 2          | VOUT LINEAR       | V          | Read word | N/A                        | <a href="#">page 22</a> |
| READ_IOUT             | 0x8C         | 2          | LINEAR            | A          | Read word | N/A                        | <a href="#">page 22</a> |
| READ_TEMPERATURE_1    | 0x8D         | 2          | LINEAR            | C          | Read word | N/A                        | <a href="#">page 22</a> |
| READ_TEMPERATURE_2    | 0x8E         | 2          | LINEAR            | C          | Read word | N/A                        | <a href="#">page 22</a> |
| READ_DUTY_CYCLE       | 0x94         | 2          | LINEAR            | %          | Read word | N/A                        | <a href="#">page 23</a> |
| READ_FREQUENCY        | 0x95         | 2          | LINEAR            | kHz        | Read word | N/A                        | <a href="#">page 23</a> |
| PMBUS_REVISION        | 0x98         | 1          | HEX               |            | Read byte | N/A                        | <a href="#">page 25</a> |
| MFR_ID                | 0x99         |            | ASCII             |            | Block R/W | <null>                     | <a href="#">page 25</a> |
| MFR_MODEL             | 0x9A         |            | ASCII             |            | Block R/W | <null>                     | <a href="#">page 25</a> |
| MFR_REVISION          | 0x9B         |            | ASCII             |            | Block R/W | <null>                     | <a href="#">page 26</a> |
| MFR_LOCATION          | 0x9C         |            | ASCII             |            | Block R/W | <null>                     | <a href="#">page 26</a> |
| MFR_DATE              | 0x9D         |            | ASCII             |            | Block R/W | <null>                     | <a href="#">page 26</a> |
| MFR_SERIAL            | 0x9E         |            | ASCII             |            | Block R/W | <null>                     | <a href="#">page 26</a> |
| AUTO_COMP_CONFIG      | 0xBC         | 1          | CUSTOM            |            | R/W byte  | FC pin(s)                  | <a href="#">page 35</a> |
| AUTO_COMP_CONTROL     | 0xBD         | 0          |                   |            | Send byte | FC pin(s)                  | <a href="#">page 34</a> |
| IOUT_OMEGA_OFFSET     | 0xBE         | 2          | LINEAR            |            | R/W word  | 0                          | <a href="#">page 32</a> |
| DEADTIME_MAX          | 0xBF         |            | CUSTOM            |            | R/W word  | Device-specific            | <a href="#">page 36</a> |
| USER_DATA_00          | 0xB0         |            | ASCII             |            | Block R/W | <null>                     | <a href="#">page 27</a> |
| MFR_CONFIG            | 0xD0         | 2          | CUSTOM            |            | R/W word  | ILIM1 pin                  | <a href="#">page 27</a> |
| USER_CONFIG           | 0xD1         | 2          | CUSTOM            |            | R/W word  | CFG pin                    | <a href="#">page 28</a> |
| ISHARE_CONFIG         | 0xD2         | 2          | CUSTOM            |            | R/W word  | 0x0000                     | <a href="#">page 39</a> |
| DDC_CONFIG            | 0xD3         | 2          | CUSTOM            |            | R/W word  | 5-bit LSB of SMBus Address | <a href="#">page 40</a> |
| POWER_GOOD_DELAY      | 0xD4         | 2          | LINEAR            | ms         | R/W word  | SS pin(s) (TON_RISE)       | <a href="#">page 18</a> |
| PID_TAPS              | 0xD5         | 9          | CUSTOM            |            | Block R/W | FC pin(s)                  | <a href="#">page 31</a> |
| INDUCTOR              | 0xD6         | 1          | LINEAR            |            | R/W byte  | V0 pin                     | <a href="#">page 33</a> |
| NLR_CONFIG            | 0xD7         | 2          | CUSTOM            |            | R/W word  | FC1                        | <a href="#">page 33</a> |
| OVUV_CONFIG           | 0xD8         | 1          | CUSTOM            |            | R/W byte  | 0x80                       | <a href="#">page 17</a> |

## Quick Reference Table (Continued)

| PMBUS COMMAND              | COMMAND CODE | DATA BYTES | PMBUS DATA FORMAT | DATA UNITS | TYPE       | FACTORY VALUE HEX (DEC) | AN2033 SECTION          |
|----------------------------|--------------|------------|-------------------|------------|------------|-------------------------|-------------------------|
| XTEMP_SCALE                | 0xD9         | 2          | LINEAR            | C          | R/W word   | 0xBA00 (1)              | <a href="#">page 9</a>  |
| XTEMP_OFFSET               | 0xDA         | 2          | LINEAR            | C          | R/W word   | 0x0000 (0)              | <a href="#">page 10</a> |
| TEMPCO_CONFIG              | 0xDC         | 1          | CUSTOM            |            | R/W byte   | 0x2C                    | <a href="#">page 34</a> |
| DEADTIME                   | 0xDD         | 2          | CUSTOM            | ns         | R/W word   | 0x3C3C                  | <a href="#">page 35</a> |
| DEADTIME_CONFIG            | 0xDE         | 2          | CUSTOM            |            | R/W word   | 0x0505                  | <a href="#">page 36</a> |
| SEQUENCE                   | 0xE0         | 2          | CUSTOM            |            | R/W word   | CFG pin                 | <a href="#">page 37</a> |
| TRACK_CONFIG               | 0xE1         | 1          | CUSTOM            |            | R/W byte   | SS1 pin                 | <a href="#">page 38</a> |
| DDC_GROUP                  | 0xE2         | 4          | CUSTOM            |            | Block R/W  | 0x00000000              | <a href="#">page 40</a> |
| DEVICE_ID                  | 0xE4         | 16         | ASCII             |            | Block read | N/A                     | <a href="#">page 24</a> |
| MFR_IOUT_OC_FAULT_RESPONSE | 0xE5         | 1          | CUSTOM            |            | R/W byte   | 0xBF                    | <a href="#">page 15</a> |
| MFR_IOUT_UC_FAULT_RESPONSE | 0xE6         | 1          | CUSTOM            |            | R/W byte   | 0xBF                    | <a href="#">page 15</a> |
| IOUT_AVG_OC_FAULT_LIMIT    | 0xE7         | 2          | LINEAR            | A          | R/W word   | IOUT_OC_FAULT_LIMIT     | <a href="#">page 11</a> |
| IOUT_AVG_UC_FAULT_LIMIT    | 0xE8         | 2          | LINEAR            | A          | R/W word   | IOUT_UC_FAULT_LIMIT     | <a href="#">page 11</a> |
| MISC_CONFIG                | 0xE9         | 2          | CUSTOM            |            | R/W word   |                         | <a href="#">page 29</a> |
| SNAPSHOT                   | 0xEA         | 32         | CUSTOM            |            | Block read |                         | <a href="#">page 24</a> |
| BLANK_PARAMS               | 0xEB         | 16         | CUSTOM            |            | Block read | 0xFF..FF                | <a href="#">page 42</a> |
| PHASE_CONTROL              | 0xF0         | 1          | CUSTOM            |            | R/W byte   |                         | <a href="#">page 39</a> |
| PID_TAPS_ADAPT             | 0xF2         | 9          | CUSTOM            |            | Block R/W  | FC pin(s)               | <a href="#">page 32</a> |
| PID_TAPS_CALC              | 0xF2         | 9          | CUSTOM            |            | Block R/W  | FC pin(s)               | <a href="#">page 32</a> |
| SNAPSHOT_CONTROL           | 0xF3         | 1          | CUSTOM            |            | R/W byte   |                         | <a href="#">page 23</a> |
| RESTORE_FACTORY            | 0xF4         | 0          | N/A               |            | Send byte  | N/A                     | <a href="#">page 42</a> |
| MFR_VMON_OV_FAULT_LIMIT    | 0xF5         | 2          | LINEAR            | V          | R/W word   | 0xD300 (12)             | <a href="#">page 13</a> |
| MFR_VMON_UV_FAULT_LIMIT    | 0xF6         | 2          | LINEAR            | V          | R/W word   | 0xCA80 (5)              | <a href="#">page 13</a> |
| MFR_READ_VMON              | 0xF7         | 2          | LINEAR            | V          | R/W word   | N/A                     | <a href="#">page 23</a> |
| VMON_OV_FAULT_RESPONSE     | 0xF8         | 1          | CUSTOM            |            | R/W byte   | 0xBF                    | <a href="#">page 16</a> |
| VMON_UV_FAULT_RESPONSE     | 0xF9         | 1          | CUSTOM            |            | R/W byte   | 0xBF                    | <a href="#">page 16</a> |
| SECURITY_LEVEL             | 0xFA         | 1          | HEX               |            | Read byte  | N/A                     | <a href="#">page 43</a> |
| PRIVATE_PASSWORD           | 0xFB         | 9          | ASCII             |            | Block R/W  | 0x000000000000000000    | <a href="#">page 42</a> |
| PUBLIC_PASSWORD            | 0xFC         | 4          | ASCII             |            | Block R/W  | 0x00000000              | <a href="#">page 42</a> |
| UNPROTECT                  | 0xFD         | 32         | CUSTOM            |            | Block R/W  | 0xFF...FF               | <a href="#">page 43</a> |

NOTE: "Factory Values" refers to hard coded values or pin-strap values that are loaded upon a "FACTORY\_RESTORE".

## Related Tools and Documentation

| DOCUMENT               | DESCRIPTION  |
|------------------------|--|
| <a href="#">AN2015</a> | Current Protection and Measurement                     |
| <a href="#">AN2031</a> | Writing Configuration Files for Intersil Digital Power |
| <a href="#">AN2032</a> | NLR Configuration for DDC Products                     |
| <a href="#">AN2034</a> | Configuring Current Sharing on the ZL2004 and ZL2006   |
| <a href="#">AN2035</a> | Compensation Using CompZL™                             |

## Revision History

| DATE               | REV. #   | COMMENT  |
|--------------------|----------|--|
| May 2008           | 1.0      | Initial release  |
| August 2008        | 1.1      | Added SEQUENCE command table<br>Corrected ISHARE_CONFIG and INTERLEAVE command descriptions<br>Updated TEMPCO_CONFIG command<br>Added "not while enabled" notes to certain commands<br>Corrected INTERLEAVE command table<br>Clarified Precise ramp bits in MISC_CONFIG          |
| October 2008       | 1.2      | Added ZL2103 and ZL2106 references<br>Corrected MFR_CONFIG: bit 2, '1' = Enabled<br>Added "DCR" descriptor to TC calculation in TEMPCO_CONFIG<br>Removed SMBus control bits 4 and 7 in USER_CONFIG<br>Added note 1 to TEMPCO_CONFIG<br>Corrected DEADTIME factory initial values |
| June 4, 2009       | AN2033.0 | Conversion from Word to Frame. Issued AN2033. Applied all Intersil Standards. Rev 0 marks New document.  |
| December 2009      | AN2033.1 | Product additions and PMBus command updates for AN2033.  |
| April 2011         | AN2033.2 | Product additions and PMBus command updates for AN2033.  |
| September 29, 2011 | AN2033.3 | Product additions and PMBus command updates for AN2033.  |
| March 21, 2016     | AN2033.4 | Replaced Zilker with Intersil throughout document.<br>Applied Intersil's new standards.<br>Removed ZL8100 and ZL9101A references.<br>Added "PMBus Use Guidelines" and "Summary" on page 5.   |



## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.  
Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.  
(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.  
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



### SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

**Renesas Electronics America Inc.**  
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.  
Tel: +1-408-432-8888, Fax: +1-408-434-5351

**Renesas Electronics Canada Limited**  
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

**Renesas Electronics Europe Limited**  
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K  
Tel: +44-1628-651-700, Fax: +44-1628-651-804

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852-2886-9022

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

**Renesas Electronics India Pvt. Ltd.**  
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

**Renesas Electronics Korea Co., Ltd.**  
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5338