Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: http://www.renesas.com

April 1st, 2010 Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (http://www.renesas.com)

Send any inquiries to http://www.renesas.com/inquiry.



Notice

- 1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
- Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights
 of third parties by or arising from the use of Renesas Electronics products or technical information described in this document.
 No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights
 of Renesas Electronics or others.
- 3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
- 4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
- 5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
- 6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
- 7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
 - "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
- 8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.



H8/300L SLP Series

PWM Producing DTMF Signal (DTMF)

Introduction

Dual Tone Multi-Frequency (DTMF) is generally used for telephony application. In the case when the MCU does not carry a DTMF generator, software implementation can be achieved by using the Pulse Width Modulation (PWM) module of the MCU.

This application note demonstrates ways to generate 16 distinct tones, in which each tone is the summation of two frequencies: one from a low and one from a high frequency group.

This technique can also be used for generating other composite signals.

Target Device

H8/38024

Contents

1.	Overview	2
2.	Hardware Implementation	6
3.	Operation and Observation	7
4.	Program Listing	9
5.	References	16



1. Overview

There are 16 distinct tones in DTMF. Each tone is the sum of two frequencies: one from a low and one from a high frequency group. There are four different frequencies in each group:

Table 1 DTMF Tones Group

Group	Frequency (Hz)
Low Tones	697Hz
	770Hz
	852Hz
	941Hz
High Tones	1209Hz
	1335Hz
	1477Hz
	1633Hz

The frequencies and the keypad layout of DTMF tone dialing have been internationally standardized, but the tolerances on individual frequencies may vary in different countries. The North American standard is 1.5% for the generator and 2% for the receiver. Since the DTMF tone is generated by PWM module and timer interrupt, the accuracy of the frequencies generated is directly affected by the accuracy of the frequency of the crystal oscillator of the system. If the system uses a different clock rate, the source code has to be adjusted accordingly.

Moreover, the tone has to be held for a specific minimum time before it is accepted as a valid dialing digit. In North America, the minimum time for a digit is about 50 ms and the inter-digit interval is also about 50 ms.

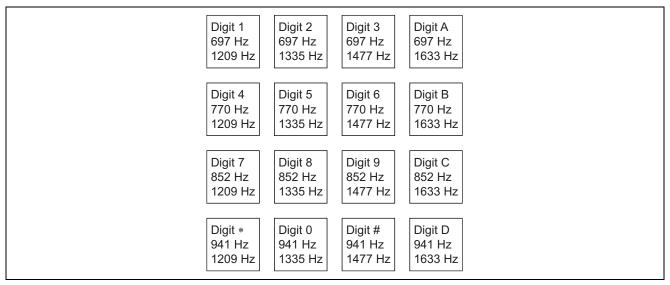


Figure 1 Keypad Digits and Frequencies of Tone Pairs



There are three processes to produce DTMF signal from PWM module:

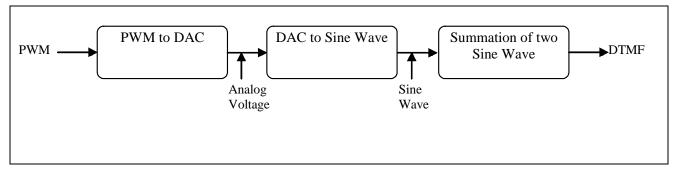


Figure 2 Overview of DTMF Signal Generation Process

1.1 PWM to D/A Converter

Analog voltage can be generated by connecting PWM module to a low-pass filter (a simple RC circuit). The PWM waveform will be charging through a capacitor when output at high level and discharging when output at low level. Figure 2 illustrates the operation of PWM to D/A converter process. For the detailed description of D/A converter, please refer to the Application Note: 03/03/004 – "PWM as a DAC".

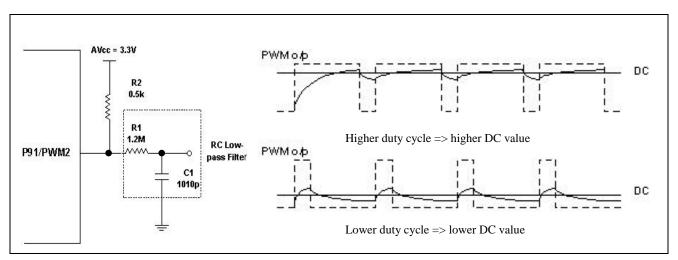


Figure 3 PWM to D/A Converter Example



1.2 D/A Converter to Sine Wave

If the generated DC voltage level is in a sinusoidal manner, a sine wave is generated. These two parameters need to be calculated:

- Signal period
- Sample period

Note: Please refer to Application Note: "PWM Sine Wave Generation"

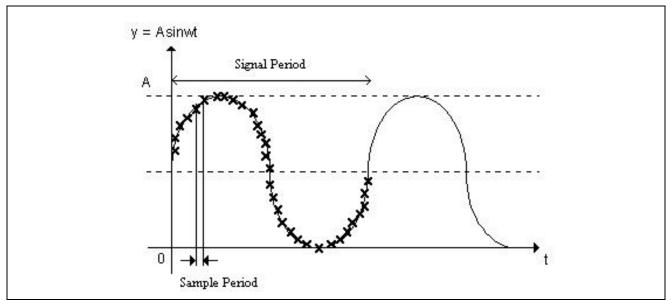


Figure 4 Typical Sine Wave Diagram

For this example, signal period is the desired frequency that user want to generate. The Asynchronous Event Counter (AEC) is selected to generate the sample period. AEC is configured as an 8-bit event counter and input clock source is set to $\emptyset/2$ (\emptyset = crystal frequency / 2). AEC interrupt is generated every 256 counts of input clock source.

For example crystal used is 9.8304 MHz,

Time for one AEC interrupt occur, Tinterrupt

$$T_{interrupt} = ((1 / (\varnothing/2)) \times 256 \text{ count}$$

= (1 / (crystal / 4)) x 256 count
= (1 / (9.8304MHz / 4) x 256 count
= $\underline{10.42\mu s}$

The sample period is equal one AEC interrupt occur, every time AEC interrupt generated the Interrupt Service Routine (ISR) will put the calculated pulse width into the PWM width register.

Sample frequency =
$$1 / T_{interrupt}$$

= $9600Hz$

The calculation of the pulse width requires increment counter value. The increment counter value is calculated as follows. Assumption:

- 256 samples for the complete sine wave table
- Sample frequency = 9600 Hz
- Signal frequency = 852 Hz



Increment counter value = 256 / number of increments

Number of increments depend on sample frequency and signal frequency and it's equal to how many time the given signal increments through the sine wave table in one complete cycle.

Number of increments = sample frequency / signal frequency

∴ Increment counter value = 256 / (sample frequency / signal frequency)

= 256 * signal frequency / sample frequency

= 256 * (852Hz) / (9600Hz)

= 22.72

All these calculations are done by compiler, therefore user must change the default value in order to use with other parameter.

Table 2 Calculation of Increment Counter Value

Frequency (Hz)	Increment Counter Value	
• 697 Hz	• 18.587	
 770 Hz 	• 20.533	
• 852 Hz	• 22.720	
• 941 Hz	• 25.093	
• 1209 Hz	• 32.240	
• 1335 Hz	• 35.600	
• 1477 Hz	• 39.387	
• 1633 Hz	• 43.547	

1.3 Summation of Two Sine Waves

The DTMF tone dialing requires the generation of two sine waves. The basic concept of modulation is to use two counters to increment through a sine wave table at different speed. To generate lower frequencies steps through the table in smaller steps. Similarly, higher frequencies require larger steps. The two sine waves are superimposed to give the desired DTMF waveform. The process is depicted in figure 5 below:

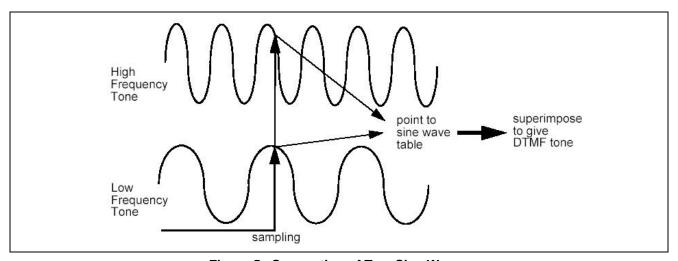


Figure 5 Summation of Two Sine Waves



2. Hardware Implementation

 


Figure 6 Block Diagram of DTMF Generation

The DTMF tone is generated by the Pulse Width Modulation (PWM) of the SLP series microcontroller. The software will modulate the sinusoidal signal into a pulse train of fixed periods but changing width. The changing width of the pulses corresponds to the voltage level of the sine wave. With an external low pass filter (LPF) at the PWM output pin, the PWM signal will be demodulated. The LPF acts as an integrator which transforms the pulse train into analog sinusoidal signal. The DTMF waveform is then sent to the audio amplifier for sound output.

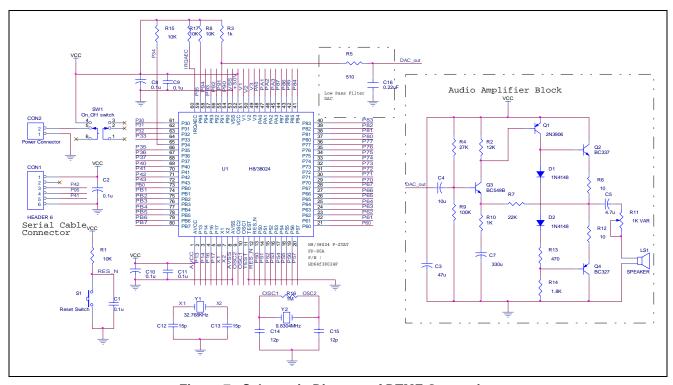


Figure 7 Schematic Diagram of DTMF Generation

In audio signal generations, the waveform has an average value at ground level, which is 0 V. The voltage varies between positive and negative values. However, in our application using PWM, the voltage level can only be positive. It means that the waveform is generated with a DC offset. Warm-up function is used to eliminate this problem, software code is written to warm-up the audio output so the reference pulse width can be gradually increased from 0 to 512 (mid value for 10-bit PWM). The longer the warm-up time, the smoother the waveform, and vice versa. In between any two digits, instead of disabling and enabling the PWM module, user can set PWM value at 512 and keep the D/A converter output voltage at 1.65 V.



3. Operation and Observation

The hardware circuitry provides Flash programming capability. User can download DTMF dialing demo program via PC serial port. The PC application software used to download user program is the freeware - Flash Development Toolkit (FDT) which is available from www.eu.renesas.com.

After the DTMF dialing program has been successfully downloaded, reset the MCU and execute the program. During the execution, user should be able to listen to the DTMF tone coming out from the speaker. The demo program will end after all the digits have been dialed. User can repeat this process by resetting the MCU.

The DTMF dialing demo program demonstrates the dialing of phone number through on-chip PWM module. The phone number to be dialed is stored in the variable array of PHONE_NO, which is set to "123456789" in this example. Telephone number of any length may be dialed, Digit 0 to 9 are represented in hexadecimal as H'00, H'01,, H'08, H'09, while H'0A to H'0F represents the digit A, B, C, D, * and #, respectively. The phone number should be terminated by the byte H'10.

The DTMF dialing demo program also can be used with other crystal oscillator value by changing the XTAL value in #define statement.

e.g. :

if crystal = 9.8304 MHz \rightarrow #define XTAL 9830400L (default)

if crystal = 4 MHz #define XTAL 4000000L

There are two PWM channel in H8/38024F MCU, user has to define which PWM channel to use before the source code compilation. e.g.:

if PWM1 is used #define PWM_use 1 (default)

if PWM2 is used → #define PWM_use 2

Figures 8 and 9 show the DTMF waveform and frequency spectrum for phone digit '8' captured from Tektronix TDS 3054 digital oscilloscope. From figure 8, the signal to noise ratio is about 30.4 dB. Figure 9 shows the two peak frequencies of phone digit '8' – 852 Hz and 1335 Hz.



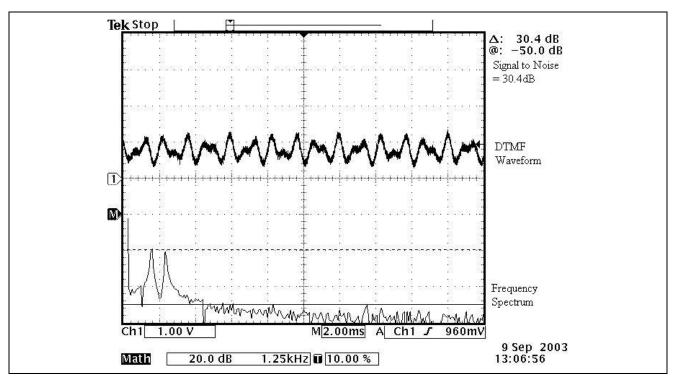


Figure 8 DTMF Waveform and Frequency Spectrum for Digit '8' (SNR)

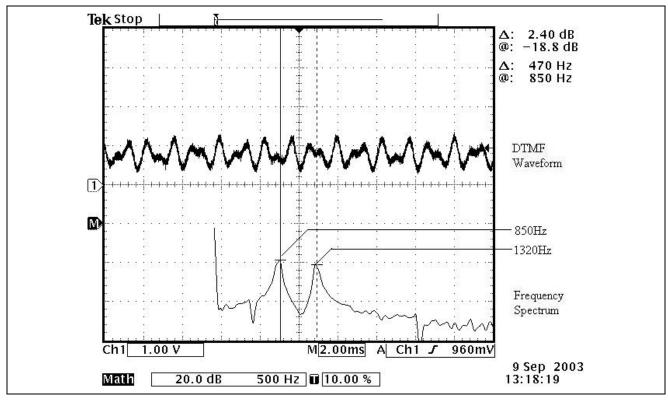


Figure 9 DTMF Waveform and Frequency Spectrum for Digit '8' (Peak Frequencies)



4. Program Listing

The attached code is generated using HEW project generator for the H8/38024F SLP MCU. The toolchain used is the free SLP/Tiny toolchain.

The following code listing is the main functionality of "DTMF_dialing.c"

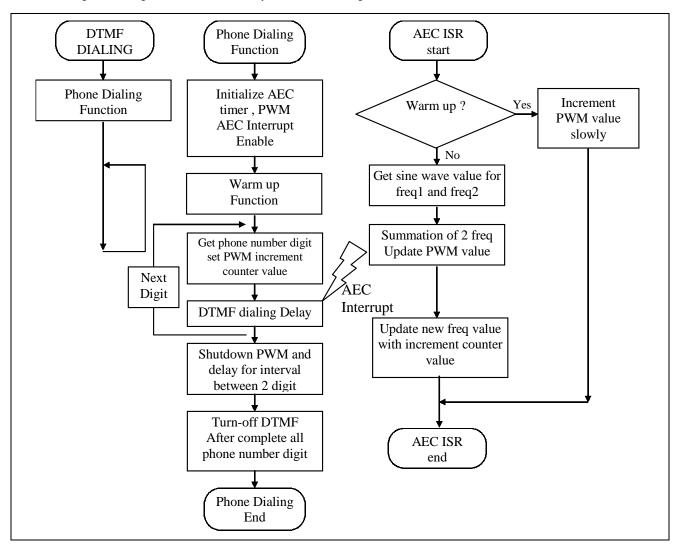


Figure 10 Flow Chart for DTMF_dialing.c



```
*****************
/*
                                                   * /
/* FILE
                                                   * /
           :DTMF_Dialing.c
/* DATE
          :Tue, Mar 04, 2003
                                                   * /
/* DESCRIPTION : Main Program
/* CPU TYPE :H8/38024F
/*
                                                   * /
/* This file is generated by Renesas Project Generator (Ver.2.1).
/*
/******************************
/* File Include
#include
      "iodefine.h"
        <machine.h>
#include
#define XTAL
            9830400L
#define sample_freq (XTAL/4L) / 256L //256 clock cycles per interrupt
#define tone_low_a ((256L * 697L)/100)/(sample_freq/100)
#define tone_low_b ((256L * 770L)/100)/(sample_freq/100)
#define tone low c ((256L * 852L)/100)/(sample freq/100)
#define tone_low_d ((256L * 941L)/100)/(sample_freq/100)
#define tone_high_a ((256L * 1209L)/100)/(sample_freq/100)
#define tone high b ((256L * 1335L)/100)/(sample freq/100)
#define tone_high_c ((256L * 1477L)/100)/(sample_freq/100)
#define tone_high_d ((256L * 1633L)/100)/(sample_freq/100)
                  //select "1" for PWM channel 2
#define PWM_use 2
                    //select "0" for PWM channel 1
/* Function define
                                           * /
/***********************
void init_PWM(unsigned char);
void storeCount(unsigned short);
void aecint( void );
void init AEC(void);
void init_DTMF(void);void off_DTMF(void);
void init_PWM1(unsigned char selClk1);
void init_PWM2(unsigned char selClk2);
void warm_up(void);
void dialing(void);
/*Constant Look up Table for Sine Wave value
const unsigned int sample =sample freq;
const unsigned int Sine_Table[256]=
512,518,525,531,537,543,550,556,
562,568,574,580,586,592,598,604,
610,616,621,627,633,638,644,649,
```



```
654,659,664,669,674,679,684,688,
693,697,702,706,710,714,717,721,
725,728,731,734,737,740,743,746,
748,750,753,755,756,758,760,761,
762,763,764,765,766,766,766,767,
767,767,766,766,766,765,764,763,
762,760,759,757,755,754,751,749,
747,744,742,739,736,733,730,726,
723,719,715,712,708,704,699,695,
691,686,681,677,672,667,662,657,
652,646,641,635,630,624,619,613,
607,601,595,589,583,577,571,565,
559,553,546,540,534,528,521,515,
509,503,496,490,484,478,471,465,
459, 453, 447, 441, 435, 429, 423, 417,
411,405,400,394,389,383,378,372,
367, 362, 357, 352, 347, 343, 338, 333,
329,325,320,316,312,309,305,301,
298, 294, 291, 288, 285, 282, 280, 277,
275, 273, 270, 269, 267, 265, 264, 262,
261, 260, 259, 258, 258, 257, 257, 257,
257, 257, 258, 258, 259, 260, 261, 262,
263, 264, 266, 268, 269, 271, 274, 276,
278, 281, 284, 287, 290, 293, 296, 299,
303,307,310,314,318,322,327,331,
336,340,345,350,355,360,365,370,
375,380,386,391,397,403,408,414,
420,426,432,438,444,450,456,462,
468,474,481,487,493,499,506,512
const unsigned char tone[16][2] =
                                 //Keypad digit Tone Pair (Hz)
                                                         941Hz, 1335Hz
{tone_low_d,tone_high_b},
                                 //
                                     '0'
{tone low a, tone high a},
                                 //
                                     '1'
                                                         697Hz, 1209Hz
                                     '2'
                                                         697Hz, 1335Hz
{tone_low_a,tone_high_b},
                                 //
                                     ' 3 '
                                                         697Hz, 1477Hz
{tone_low_a,tone_high_c},
                                 //
                                                         770Hz, 1209Hz
{tone low b, tone high a},
                                 //
                                    ' 4 '
                                    '5'
                                                         770Hz, 1335Hz
{tone_low_b,tone_high_b},
                                 //
                                                         770Hz, 1477Hz
                                 //
                                    '6'
{tone_low_b,tone_high_c},
{tone_low_c,tone_high_a},
                                 //
                                     '7'
                                                         852Hz, 1209Hz
                                     ' 8 '
{tone_low_c,tone_high_b},
                                 //
                                                         852Hz, 1335Hz
{tone_low_c,tone_high_c},
                                 //
                                     191
                                                         852Hz, 1477Hz
                                                         697Hz, 1633Hz
{tone low a, tone high d},
                                     'A'
                                                         770Hz, 1633Hz
{tone_low_b,tone_high_d},
                                 //
                                     'B'
{tone low c, tone high d},
                                 //
                                     ' C '
                                                         852Hz, 1633Hz
                                     'D'
                                                         941Hz, 1633Hz
{tone_low_d,tone_high_d},
                                 //
{tone_low_d,tone_high_a},
                                 //
                                     1 * 1
                                                         941Hz, 1209Hz
                                     '#'
{tone_low_d,tone_high_c},
                                 //
                                                         941Hz, 1477Hz
};
```



```
/*Global variable
unsigned char PWDR_L2, PWDR_U2;
unsigned int i=0,j=0, count=0, inc1=0, inc2=0, final=0;
unsigned int lowcnt=0, hicnt=0;
unsigned char Ready = 0, DIGIT = 0;
unsigned char PHONE_NO[]=\{0x01,0x02,0x03,0x04,0x05,0x06,0x07,0x08,0x09,0x10\};
/* Main Program
void main ( void )
  //Dialing
  dialing();
              //DTMF dialing
  while (1)
    //Write user program here
}
/* Initialize Program
//Initialize DTMF function
void init DTMF(void)
                         // Interrupt Disable
  set_imask_ccr(1);
  init_AEC();
  #if (PWM_use==1)
  init_PWM1(0); //Select conversion period = 512/(PWM input clock)
  init_PWM2(0); //Select conversion period = 512/(PWM input clock)
}
void init PWM1(unsigned char selClk1)
  if (selClk1 <= 3) // Check if valid, otherwise PWM2 is off
    P_IO.PMR9.BIT.PWM1 = 1; // Configure P91 as PWM2 output pin
    P_PWM1.PWCR1.BYTE = selClk1; // Clock select for PWM2, write only
  }
}
void init_PWM2(unsigned char selClk2)
  if (selClk2 <= 3) // Check if valid, otherwise PWM2 is off
    P_IO.PMR9.BIT.PWM2 = 1; // Configure P91 as PWM2 output pin
    P_PWM2.PWCR2.BYTE = selClk2; // Clock select for PWM2,write only
  }
}
```



```
void off_DTMF(void)
  P_SYSCR.IENR2.BIT.IENEC = 0;
  //compiler directive to select which code to be compile
  #if (PWM use==1)
  P IO.PMR9.BIT.PWM1 = 0;
                          // Turn off PWM1
  #else
  P_{IO.PMR9.BIT.PWM2} = 0;
                         // Turn off PWM2
  #endif
}
/* Initialize Program
void warm_up(void)
                          // Interrupts, 0-Enable, 1-Disable
  set_imask_ccr(0);
  while(count<0x3000);</pre>
  set_imask_ccr(1);
                          // Interrupts, 0-Enable, 1-Disable
  Ready = 1;
}
/* DTMF dialing Program
                                               * /
void dialing(void)
  init DTMF();
  warm_up();
  i = 0;
  while (PHONE NO[i]!=0x10)
    inc1 = tone[PHONE NO[i]][0];
    inc2 = tone[PHONE_NO[i]][1];
    //Dialing
                               // Interrupts, 0-Enable, 1-Disable
    set imask ccr(0);
                               // short delay Tone dialing
    for (j=0; j<15000; j++);
    set_imask_ccr(1);
                               // Interrupts, 0-Enable, 1-Disable
    storeCount(0);
    for (j=0; j<15000; j++);// short delay interval between 2 phone digit
    i++;
                               //next digit
  }
                               // Interrupts, 0-Enable, 1-Disable
  set_imask_ccr(1);
  off_DTMF();
}
```



```
/***********************
/* Write each digital code into PWDR registers
void storeCount(unsigned short PWDRval_2)
  //compiler directive to select which code to be compile
  #if (PWM use==1)
  P_PWM1.PWDRL1.BYTE = (unsigned char)(PWDRval_2 & 0x00FF);
                             // Write lower 8bits of 10bits data
  P_PWM1.PWDRU1.BYTE = (unsigned char) ((PWDRval_2 & 0x0300) >> 8);
                             // Write upper 8bits of 10bits data
  #else
  P_PWM2.PWDRL2.BYTE = (unsigned char)(PWDRval_2 & 0x00FF);
                              // Write lower 8bits of 10bits data
  P_PWM2.PWDRU2.BYTE = (unsigned char) ((PWDRval_2 & 0x0300) >> 8);
                             // Write upper 8bits of 10bits data
  #endif
}
/* AEC Interrupt Service Routine
/***********************
void aecint (void)
  P_SYSCR.IRR2.BIT.IRREC = 0;  // Clear IRREC flag
  if(P\_AEC.ECCSR.BIT.OVL == 1) // Check for ECL overflow flag
  { P AEC.ECCSR.BIT.OVL = 0; // Clears flag
     if(Ready == 0)
       storeCount(count++/128);
     else
     {
       final = (Sine_Table[lowcnt])/2+(Sine_Table[hicnt])/2;
       storeCount(final);
       lowcnt = lowcnt + inc1;
       if(lowcnt>255) lowcnt = lowcnt-255;
                             // If reached end of 1 period, then reset
       hicht = hicht + inc2;
         if(hicnt>255) hicnt = hicnt-255;
                              // If reached end of 1 period, then reset
     }
  }
}
void init_AEC(void)
  P AEC.ECCSR.BYTE = 0x15;
  P\_AEC.ECCR.BYTE = 0x10;
  P_SYSCR.IRR2.BIT.IRREC = 0;  // Clear IRREC flag
  P_SYSCR.IENR2.BIT.IENEC = 1; // AEC Interrupt Request
}
```



The following code listing is the Interrupt service program of "intprg.c", please insert the below code.



5. References

- 1. PWM Sine Wave Generation, (Application Note ref. no: AN0303003, http://sg.renesas.com,)
- 2. Use PWM as A DAC, (Application Note ref. no: AN0303003, http://sg.renesas.com,)



Revision Record

	Date	Description		
Rev.		Page	Summary	
1.00	Sep.10.04	_	First edition issued	



Keep safety first in your circuit designs!

1. Renesas Technology Corp. puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage.

Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

- These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corp. product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corp. or a third party.
- 2. Renesas Technology Corp. assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
- 3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corp. without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor for the latest product information before purchasing a product listed herein.
 - The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corp. assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.
 - Please also pay attention to information published by Renesas Technology Corp. by various means, including the Renesas Technology Corp. Semiconductor home page (http://www.renesas.com).
- 4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corp. assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
- 5. Renesas Technology Corp. semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
- 6. The prior written approval of Renesas Technology Corp. is necessary to reprint or reproduce in whole or in part these materials.
- 7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination.
 - Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
- 8. Please contact Renesas Technology Corp. for further details on these materials or the products contained therein.