

## A Note on Using High-performance Embedded Workshop

Please take note of the following problem in using High-performance Embedded Workshop:

- With editing files in the Editor window
- 

### 1. Product and Versions Concerned

High-performance Embedded Workshop V.4.01.00 through V.4.02.00

### 2. Description

When you are editing files in the Editor window, High-performance Embedded Workshop will go out of control if you type a 2-byte character set whose second byte is 0x7D followed by a newline character.

### 3. Workaround

Disable the automatic indenting function in the Editor window using the following procedure:

- (1) Open the Setup menu and select the Options command. The Options dialog box will appear.
- (2) In this dialog box, click the Editor tab.
- (3) Uncheck the Enable auto indentation checkbox in the Spacing group.
- (4) Click the OK button.

### 4. Schedule of Fixing the Problem

We are sorry that we are going to fix this problem not in the next release of the product (V.4.03) but in a later one.

---

#### [Disclaimer]

The past news contents have been based on information at the time of publication. Now changed or invalid information may be included. The URLs in the Tool News also may be subject to change or become invalid without prior notice.