

Contents

Chapter 1. Product Version	3
Chapter 2. Product History	4
Chapter 3. Details of Limitations and Additions to the Specifications	4
Chapter 4. Cautions.....	6

This document describes the following. See the Setup Guide for notes on using QB-MINI2-RF.

- Limitations and cautions for QB-MINI2-RF
- QB-MINI2-RF operation


See the following documentation for cautions and restrictions regarding QB-MINI2 (MINICUBE2 system) and the target device.

- QB-MINI2 User's Manual
- QB-MINI2 Release Notes
- User's Manual for target device
- Documentation of limitations of target device

Chapter 1. Product Version

You can check the version of the QB-MINI2-RF using the MINICUBE2 RF Utility ("RF Utility"), as shown below. If wireless communication has been established, you can check the versions of both the host and target firmware. If wireless communication has not been established, you can only check the version of the host firmware.

Figure 1. Checking the Control Code and Firmware Version

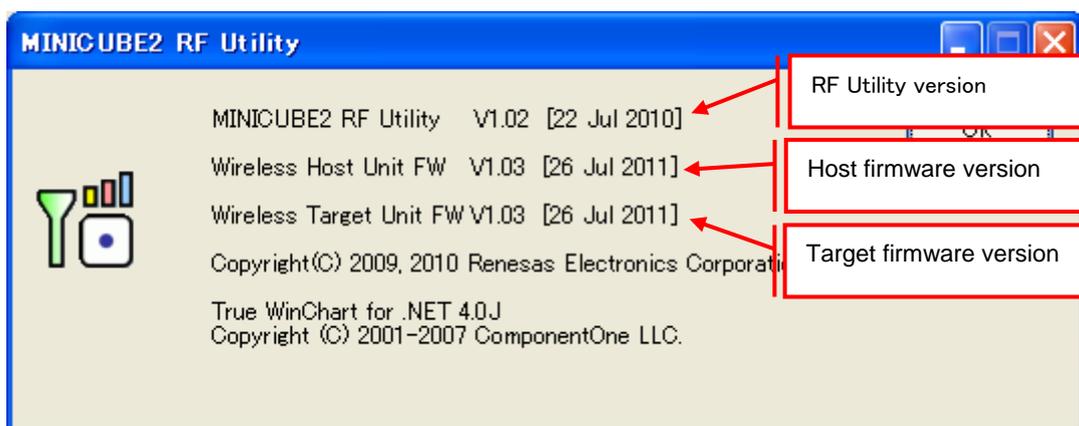

When using QB-MINI2-RF, use the following combinations of the firmware and RF Utility versions. Use the same version of the firmware on the host and target. See Chapter 5 for information about updating the firmware.

Table 0-1 Combinations of Firmware and RF Utility Versions

No.	Firmware Version	RF Utility Version
1	V1.00	V1.00
2	V1.01	V1.01
3	V1.03	V1.02

Chapter 2. Product History

Table 2-1 shows the limitations of QB-MINI2-RF, and a history of the changes and additions to the specifications.

Table 2-1 Limitations and Changes/Additions to the Specifications

No.	Limitations and Changes/additions to specifications	Firmware Version		
		1.00	1.01	V1.03
1	Changes to pairing specifications when configuring security	NO	YES	YES
2	Changes to frequency channel count specifications (support for SRRC (China)/KCC (South Korea))	NO	NO	YES

YES: Limitation does not apply or has been removed. Alternately, changes or additions have been made to the specification.


NO: The limitation applies. No changes or additions have been made to the specification.

Chapter 3. Details of Limitations and Additions to the Specifications

No. 1: Changes to pairing specifications when configuring security

[Description] Under the previous specifications, if an attempt was made to establish wireless communication when the security settings of the target and host unit differed, pairing was only performed between these two units, and wireless communication from other hosts was not possible. The specifications have been changed to enable such connections.

The specifications were changed in firmware version 1.01 and RF Utility version 1.01.

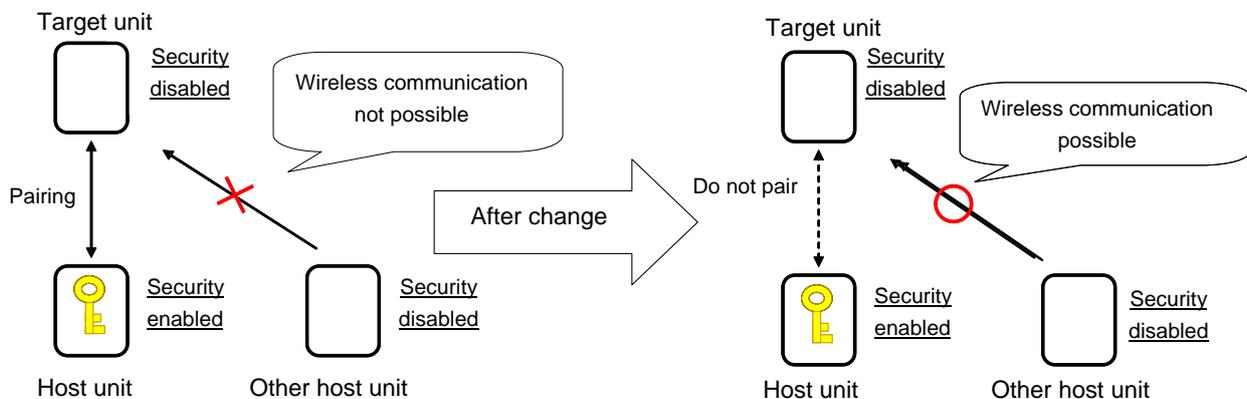

No. 2 Changes to frequency channel count specifications (support for SRRC (China)/KCC (South Korea))

[Description] Changes have been made to the number of frequency channels as follows so that the product can conform to the regulations of SRRC and KCC on radio-frequency interference:

- Before : 15 channels (from Channel 11 through Channel 25)
- After : 14 channels (from Channel 12 through Channel 25)

Here SRRC is the abbreviation of State Radio Regulatory Commission in China, and KCC is that of Korea Communications Commission in South Korea.

Note, however, that for customers to use the QB-MINI2-RF in China or South Korea, these product must conform to the regulations on radio-frequency interference in the country concerned. Whether each product conforms to the regulations can be checked by the markings inscribed on its backside.

- Products with CMIIT ID : Compliant with SRRC (China) regulations
- Products with KCC ID and KC mark : Compliant with KCC (South Korean) regulations



Note: Do not use the product in China or South Korea unless it has these markings.

Chapter 4. Cautions

This chapter describes cautions for the use of the QB-MINI2-RF.

No. 1: OCD0A/OCD0B pins of 78K0 microcontroller

If you use the OCD0A/OCD0B pins (dual use as clock) of a 78K0 microcontroller, as the on-chip debugging interface operation is supported using the built-in oscillator clock and external 4 MHz, 8 MHz, and 16 MHz clocks. Operation with other external clock frequencies is not supported.

No. 2: Operation of software tools when wireless communication is not connected

When performing debugging and other tasks using the QB-MINI2-RF, software tool tasks will sometimes fail to complete when wireless communication is not connected (including when the target system is powered down), leaving the system unresponsive. For example, when you are using the real-time RAM monitoring feature with the debugger, it may not be possible to read variable values. If this happens, you can recover the software tool by restoring wireless communication. If it is not possible to recover wireless communication, then you will need to kill the software tool's process.

No. 3: Operation when powering up the target system


If you power down the target system while it is connected to a wireless unit, wait until the power voltage falls to the earth potential before powering the target system back up. The wireless unit may fail to boot.

Self diagnostics and firmware updates

You can use the MINICUBE2 diagnostics tool to perform self diagnostics for faults in the QB-MINI2-RF, and update the firmware.


- Performing self diagnostics

- (1) Set the QB-MINI2-RF switch configuration to H, and connect to the MINICUBE2.
- (2) Connect the host machine and MINICUBE2 with a USB cable.
- (3) Start the MINICUBE2 diagnostics tool, and open the SELF-TEST tab.
- (4) As shown below, select the [Wireless Unit] checkbox, and click [START]. The results are displayed. The figure below shows the results when all tests pass. If any of the tests fail, the unit may be malfunctioning, consult a distributor or a Renesas Electronics Corporation sales representative.
- (5) After the self diagnostics are complete, unplug the USB cable from the MINICUBE2.

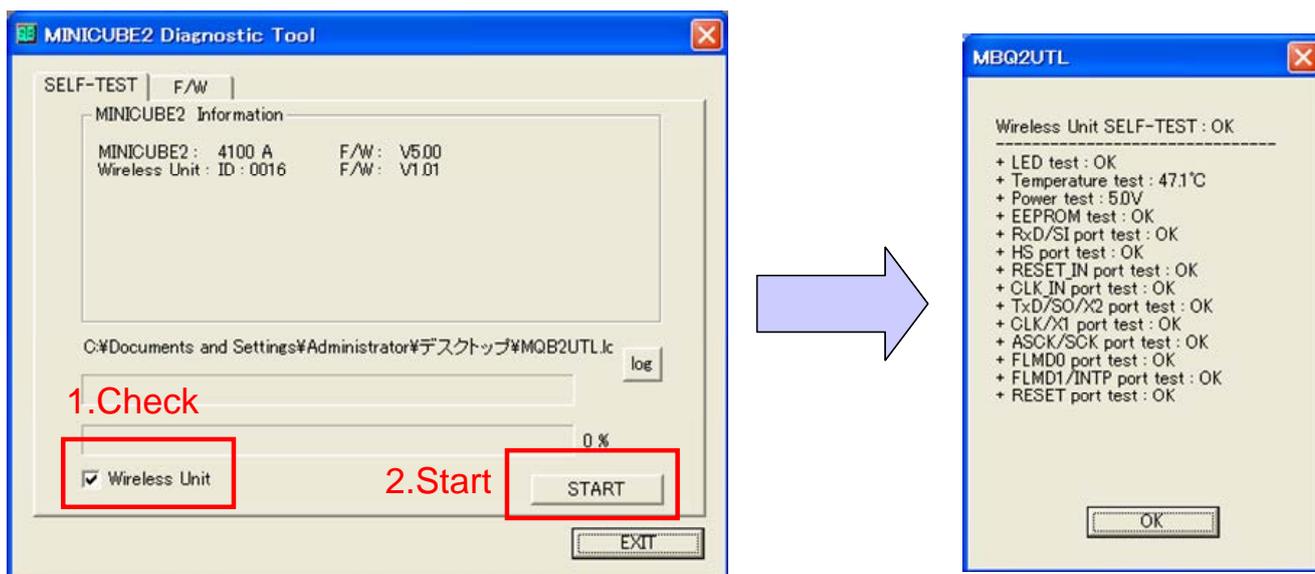

-Updating the firmware

- (1) Set the QB-MINI2-RF switch configuration to H, and connect to the MINICUBE2.
- (2) Connect the host machine and MINICUBE2 with a USB cable.
- (3) Start the MINICUBE2 diagnostics tool, and open the F/W tab.
- (4) As shown below, select the [Wireless Unit] checkbox, click [PATH], and then specify the firmware (HEX file). You can download the latest firmware from the upgrade service indicated in the setup manual.
- (5) Click [START], and follow the instructions in the wizard. The firmware update begins.
- (6) After the firmware update is complete, unplug the USB cable from the MINICUBE2.

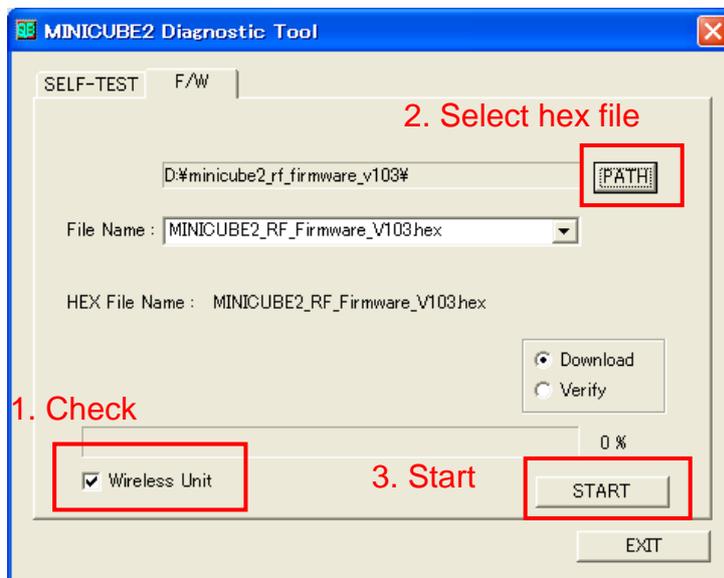

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
"Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.

2880 Scott Boulevard Santa Clara, CA 95050-2554, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited

1101 Nicholson Road, Newmarket, Ontario L3Y 9C3, Canada
Tel: +1-905-898-5441, Fax: +1-905-898-3220

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-65030, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

7th Floor, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100083, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 204, 205, AZIA Center, No.1233 Lujiazui Ring Rd., Pudong District, Shanghai 200120, China
Tel: +86-21-5877-1818, Fax: +86-21-6887-7858 / -7898

Renesas Electronics Hong Kong Limited

Unit 1601-1613, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2886-9318, Fax: +852-2886-9022/9044

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei, Taiwan
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

1 harbourFront Avenue, #06-10, Keppel Bay Tower, Singapore 098632
Tel: +65-6213-0200, Fax: +65-6278-8001

Renesas Electronics Malaysia Sdn.Bhd.

Unit 906, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics Korea Co., Ltd.

11F., Samik Lavied' or Bldg., 720-2 Yeoksam-Dong, Kangnam-Ku, Seoul 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141