



# Quick Start Renesas Starter Kit LCD Application Board V2

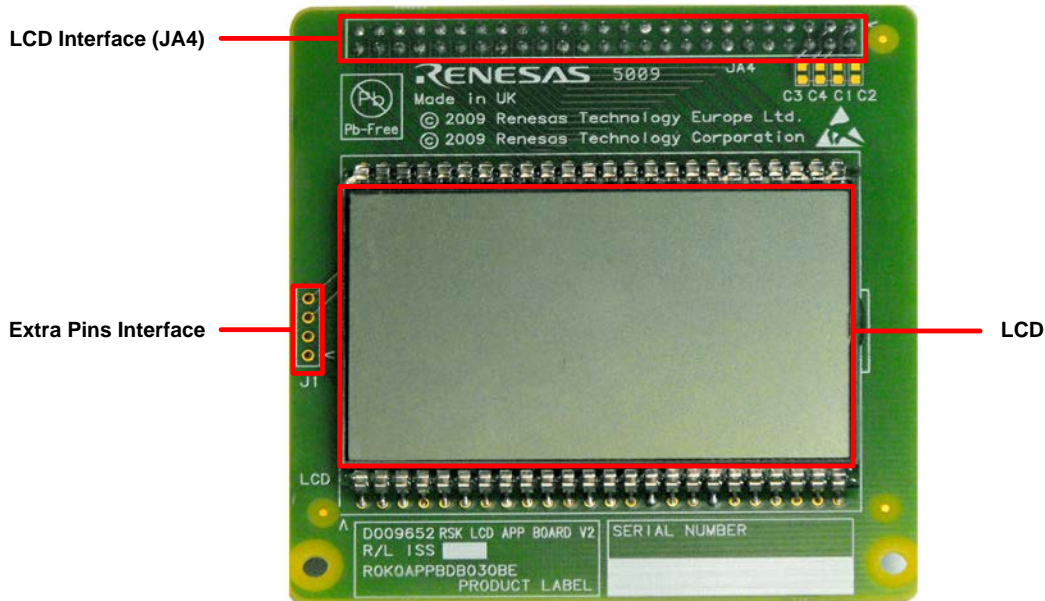


## 1. Assemble and Install the LCDAPPV2 Board

1. The LCDAPPV2 board requires minor assembly prior to use; and is supplied with 2 screws and 2 nylon pillars.
2. The supplied nylon pillars should be fitted to the underneath of the LCDAPPV2 board with the supplied screws as shown below.

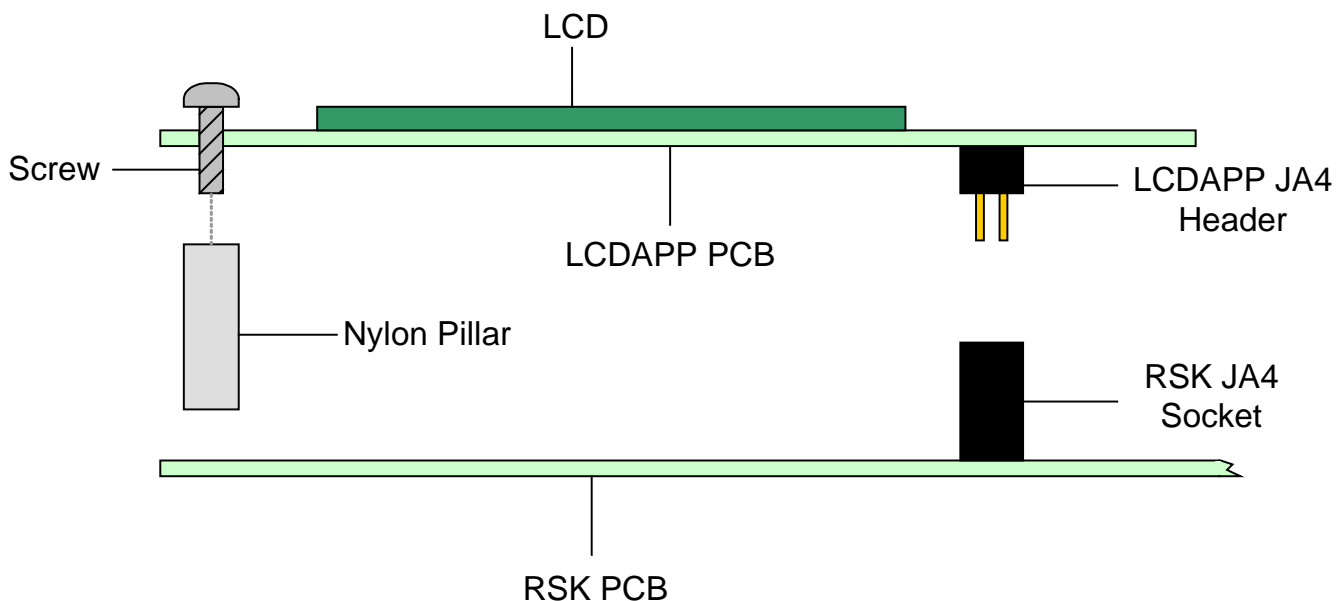

3. Once the assembly is complete, the LCDAPPV2 board should be fitted onto the target RSK.

4. Align the LCDAPPV2 board onto of the target RSK, ensuring that pin 1 of JA4 on both boards are in line as shown below.

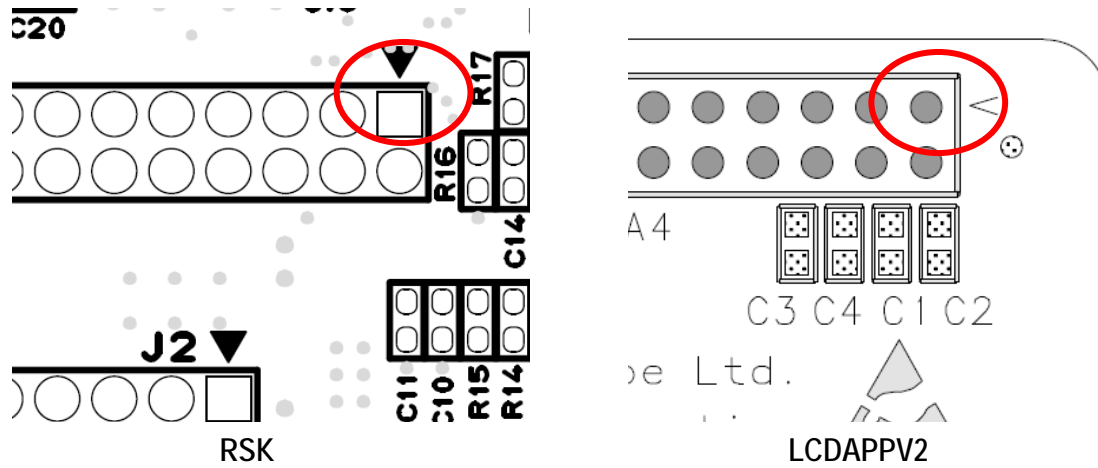

5. The LCDAPPV2 board should be fitted on top of the target RSK, mating the JA4 header and socket together. The nylon pillars should rest on the target RSK PCB.

## 2. Next Step

Follow the instructions in the Quick Start Guide provided with the RSK to be used with this LCD Application Board. This will install sample code and a development environment to use the LCD panel on this board.

For more information about this RSK Application Board, review the User's Manual which can be found with the manuals for the RSK to be used with this application board.

### 3. Support

Online technical support and information is available at: [http://www.renesas.com/renesas\\_starter\\_kits](http://www.renesas.com/renesas_starter_kits)

#### Technical Contact Details

America: [techsupport.america@renesas.com](mailto:techsupport.america@renesas.com)

Europe: <http://www.renesas.eu/ibg-kitsupport>

Japan: [csc@renesas.com](mailto:csc@renesas.com)

© 2013 Renesas Electronics Europe Limited. All rights reserved

© 2013 Renesas Electronics Corporation. All rights reserved.

© 2013 Renesas Solutions Corp. All rights reserved.

Website: <http://www.renesas.com>