


# QFN Mount Pad Dimensions


## Punch Type

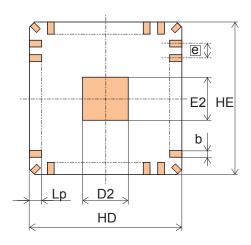


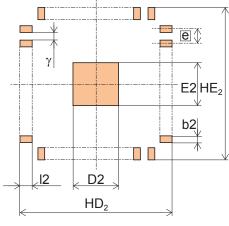

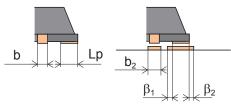

### Saw Type

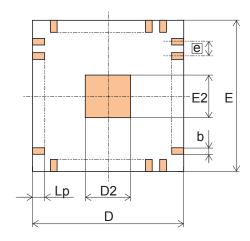

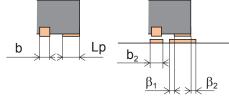

# $I_2 = L + \beta_1 + \beta_2$

$$b \le b_2 \le e - \gamma$$

l<sub>2</sub> and b<sub>2</sub> can get by following formula and value e and b from package drawing figure and below parameter table.

### • Dimension parameter

(Unit: mm)

e/	0.80	0.50	0.40
$\beta_1$	0 to 0.30	0 to 0.30	0 to 0.20
$\beta_2$	0 to 0.30	0 to 0.30	0 to 0.20
γ	0.10 to 0.30	0.10 to 0.30	0.10 to 0.20

(Reference value)

#### Note

- In case to use thermal pad, the size of thermalpad should be the same as the diepad.
- Don't mount die pad support leads (exposed to corners of package) on PWB
- ullet Make  $eta_1$  dimension of the corner mount pad short as needed.