Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: http://www.renesas.com

April 1st, 2010 Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (http://www.renesas.com)

Send any inquiries to http://www.renesas.com/inquiry.

Notice

- 1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
- Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
- 4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
- 5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
- 6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
- 7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anticrime systems; safety equipment; and medical equipment not specifically designed for life support.
 - "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
- 8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majorityowned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

M34559T2-CPE

User's Manual Compact Emulator for 4559 Group



Rev.1.00 2006.04

Keep safety first in your circuit designs!

 Renesas Technology Corp. puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

- 1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corp. product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corp. or a third party.
- 2. Renesas Technology Corp. assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.

3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corp. without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor for the latest product information before purchasing a product listed herein.

The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corp. assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.

Please also pay attention to information published by Renesas Technology Corp. by various means, including the Renesas Technology Corp. Semiconductor home page (http://www.renesas.com).

- 4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corp. assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
- 5. Renesas Technology Corp. semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
- 6. The prior written approval of Renesas Technology Corp. is necessary to reprint or reproduce in whole or in part these materials.
- 7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/ or the country of destination is prohibited.
- 8. Please contact Renesas Technology Corp. for further details on these materials or the products contained therein.

Preface

The M34559T2-CPE is a compact emulator for the 4559 Group MCUs with the real-time trace function. This user's manual mainly describes specifications of the M34559T2-CPE compact emulator and how to setup it. For details on the following products included with the M34559T2-CPE, refer to each product's online manual.

Emulator debugger: M3T-PD45M
Assembler: ASM45

All the components of this product are shown in "1.1 Package Components" (page 13). If there is any question or doubt about this product, contact your local distributor.

The related manuals for using this product are listed below. You can download the latest manuals from the Renesas Tools homepage (http://www.renesas.com/en/tools).

Related manuals

Item	Manual		
Emulator debugger	M3T-PD45M User's Manual		
Assembler	ASM45 User's Manual		



Important

Before using this product, be sure to read this user's manual carefully. Keep this user's manual, and refer to this when you have questions about this product.

Emulator:

The emulator in this document refers to the following products that are manufactured by Renesas Technology Corp.:

- (1) Compact emulator main unit
- (2) Package converter board for connecting the user system

The emulator herein does not include the customer's user system and host machine.

Purpose of use of the emulator:

This emulator is a device to support the development of a system that uses the 4500 Series 4559 Group of Renesas 4-bit singlechip MCUs. It provides support for system development in both software and hardware.

Be sure to use this emulator correctly according to said purpose of use. Please avoid using this emulator for other than its intended purpose of use.

For those who use this emulator:

This emulator can only be used by those who have carefully read this user's manual and know how to use it. Use of this emulator requires the basic knowledge of electric circuits, logical circuits, and MCUs.

When using the emulator:

- (1) This product is a development supporting unit for use in your program development and evaluation stages. In mass-producing your program you have finished developing, be sure to make a judgment on your own risk that it can be put to practical use by performing integration test, evaluation, or some experiment else.
- (2) In no event shall Renesas Solutions Corp. be liable for any consequence arising from the use of this product.
- (3) Renesas Solutions Corp. strives to renovate or provide a workaround for product malfunction at some charge or without charge. However, this does not necessarily mean that Renesas Solutions Corp. guarantees the renovation or the provision under any circumstances.
- (4) This product has been developed by assuming its use for program development and evaluation in laboratories. Therefore, it does not fall under the application of Electrical Appliance and Material Safety Law and protection against electromagnetic interference when used in Japan.
- (5) Renesas Solutions Corp. cannot predict all possible situations or possible cases of misuse where a potential danger exists. Therefore, the warnings written in this user's manual and the warning labels attached to this emulator do not necessarily cover all of such possible situations or cases. Please be sure to use this emulator correctly and safely on your own responsibility.
- (6) This product is not qualified under UL or other safety standards and IEC or other industry standards. This fact must be taken into account when taking this product from Japan to some other country.



Usage restrictions:

This emulator has been developed as a means of supporting system development by users. Therefore, do not use it as a device used for equipment-embedded applications. Also, do not use it for developing the systems or equipment used for the following purposes either:

- (1) Transportation and vehicular
- (2) Medical (equipment where human life is concerned)
- (3) Aerospace
- (4) Nuclear power control
- (5) Undersea repeater

If you are considering the use of this emulator for one of the above purposes, please be sure to consult your local distributor.

About product changes:

We are constantly making efforts to improve the design and performance of this emulator. Therefore, the specification or design of this emulator or its user's manual may be changed without prior notice.

About the rights:

- (1) We assume no responsibility for any damage or infringement on patent rights or any other rights arising from the use of any information, products or circuits presented in this user's manual.
- (2) The information or data in this user's manual does not implicitly or otherwise grant a license for patent rights or any other rights belonging to us or third parties.
- (3) This user's manual and this emulator are copyrighted, with all rights reserved by us. This user's manual may not be copied, duplicated or reproduced, in whole or part, without prior written consent of us.

About diagrams:

The diagrams in this user's manual may not all represent exactly the actual object.





Precautions for Safety

Definitions of Signal Words

In both the user's manual and on the product itself, several icons are used to insure proper handling of this product and also to prevent injuries to you or other persons, or damage to your properties.

This chapter describes the precautions which should be taken in order to use this product safely and properly. Be sure to read this chapter before using this product.

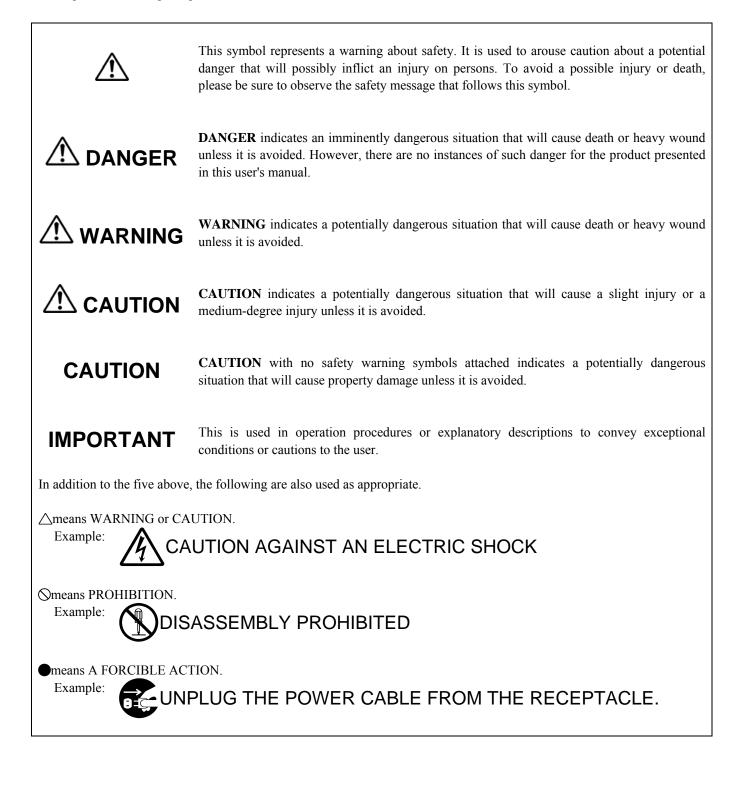

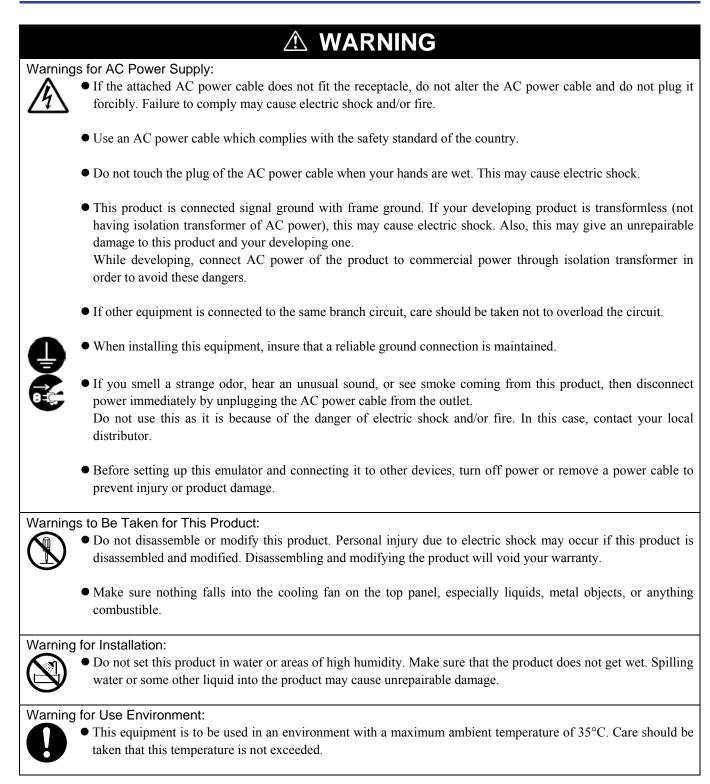



	onnecting the Power Supply of the Emulator: The product of the context of the context of the second second second second second second second second second
	The power cable included with the product has its positive and negative poles color-coded by red and black, espectively.
	Pay attention to the polarities of the power supply. If its positive and negative poles are connected in reverse, he internal circuit may be broken.
	Do not apply any voltages exceeding the product's rated power supply voltage (5.0 V \pm 5%). Extreme voltages nay cause a burn due to abnormal heat or cause the internal circuit to break down.
Cautions to	Be Taken for Turning On the Power:
	Furn ON/OFF the power of the emulator and user system as simultaneously as possible.
	Do not leave either the emulator or user system powered on, because of leakage current the internal circuits may be damaged.
• V	When turning on the power again after shutting off the power, wait about 10 seconds.
Cautions to	Be Taken for Handling This Product:
	Jse caution when handling the main unit. Be careful not to apply a mechanical shock.
	Do not touch the connector pins of the emulator main unit and the target MCU connector pins directly. Static electricity may damage the internal circuits.
	Do not pull this emulator by the communications interface cable or the flexible cable for connecting the user ystem. And, excessive flexing or force may break conductors.
Caution to B	e Taken for System Malfunctions:
	f the emulator malfunctions because of interference like external noise, do the following to remedy the trouble.1) Press the RESET button on the emulator upper panel.2) If normal operation is not restored after step (1), shut OFF the emulator once and then reactivate it.
	,

Contents

	Page
Preface	3
Important	4
Precautions for Safety	6
Contents	9
User Registration	11
Terminology	12
1. Outline	13
1.1 Package Components	13
1.2 System Configuration	14
1.2.1 System Configuration	14
1.2.2 Names and Functions of each part of the Emulator	16
1.3 Specifications	18
1.4 Operating Environment	19
2. Setup	20
2.1 Flowchart of Starting Up the Emulator	20
2.2 Installing the Emulator Debugger	21
2.2.1 Installing the Emulator Debugger M3T-PD45M	21
2.2.2 Installing the USB Device Driver	21
2.3 Changing Settings	22
2.3.1 Initial Setting of the Emulator	22
2.3.2 Selecting Clock Supply	25
2.4 Connecting the External Trace/Trigger Cable	27
2.4.1 Connecting the External Trace/Trigger Cable to the Emulator System	27
2.4.2 Connecting the External Trace/Trigger Cable to the User System	27
2.4.3 Specifications of the External Trace/Trigger Cable	28
2.5 Watchdog Timer Initialization Cycle Check Pin	29
2.5.1 Check Pin WRST (TP3) on the Emulator Main Unit	29
2.5.2 Output Waveform of the Check Pin WRST	
2.6 Connecting the Power Supply for the Emulator	
2.7 Connecting the Host Machine	31
2.8 Turning ON the Power	32
2.8.1 Checking Connections of the Emulator System	32
2.8.2 Turning ON/OFF the Power	
2.8.3 Power Supply to the User System	
2.8.4 LED Display When the Emulator Starts Up Normally	
2.9 Downloading Firmware	
2.9.1 When It is Necessary to Download Firmware	
2.9.2 Downloading Firmware in Maintenance Mode	
2.10 Self-check	
2.10.1 Self-check Procedure	
2.10.2 If an Error is Detected in the Self-check	
2.11 Connecting the User System	
2.11.1 Connecting to a 52-pin 2.54mm pitch Dual In-line Pins	
2.11.2 Connecting to a 52-pin 0.65mm pitch Foot Pattern	41



	Page
3. Usage (How to Use the Emulator Debugger)	
3.1 Starting Up the Emulator Debugger (Init Dialog Box)	43
3.2 Program Window	
3.3 Hardware Breakpoint Setting Window	49
3.4 Trace Window	51
3.5 Time Measurement	55
4. Hardware Specifications	
4.1 Target MCU Specifications	
4.2 Differences between the Actual MCU and Emulator	57
4.3 Connection Diagram	
4.4 External Dimensions	
4.4.1 External Dimensions of the Compact Emulator	
4.4.2 External Dimensions of the M34552T-CPEA	
4.5 Notes on Using This Product	
5. Troubleshooting	
5.1 Flowchart to Remedy the Troubles	
5.2 When the Emulator Debugger Does Not Start Up Properly	
5.3 How to Request for Support	
6. Maintenance and Guarantee	
6.1 User Registration	
6.2 Maintenance	
6.3 Guarantee	
6.4 Repair Provisions	
6.5 How to Make Request for Repair	72



User Registration

When you have purchased the emulator presented in this user's manual, please be sure to register it. As the H/W Tool Customer Registration Sheet is included with this manual, fill it in and email to the following address Your registered information is used for only after-sale services, and not for any other purposes. Without user registration, you will not be able to receive maintenance services such as a notification of field changes or trouble information. So be sure to carry out the user registration.

For more information about user registration, please email to the following address.

regist_tool@renesas.com



Terminology

Some specific words used in this user's manual are defined as follows:

Emulator M34559T2-CPE

This means the compact emulator (this product) for 4559 Group MCUs.

Emulator system

This means an emulator system built around the M34559T2-CPE emulator. The M34559T2-CPE emulator system is configured with an emulator main unit M34559T2-CPE, emulator debugger M3T-PD45M and host machine.

Emulator debugger M3T-PD45M

This means a software tool which you can control the emulator from a host machine through the USB interface.

Firmware

This means a program stored in the flash ROM of the emulator. It analyzes contents of communication with the emulator debugger and controls the emulator M34559T2-CPE. This program is downloadable from the emulator debugger to upgrade, etc.

Host machine

This means a personal computer used to control the emulator system.

Target MCU

This means the microcomputer you are going to debug.

User system

This means a user's application system using the microcomputer to be debugged.

User program

This means a user's application program to be debugged.

Evaluation MCU

This means a microcomputer mounted on the emulator which is operated in the special mode for the emulator.

#

In this user's manual, this symbol is used to show active LOW. (e.g. RESET#)

This chapter describes the package components, the system configuration and the preparation for using this product for the first time.

1.1 Package Components

The M34559T2-CPE package consists of the following items. When unpacking it, check to see if your M34559T2-CPE contains all of these items.

Table 1.1 Package components

Item	Quantity		
M34559T2-CPE compact emulator			
64-wire half-pitch cable for connecting user system	1		
M34559T-PTCA converter board for 52-pin 2.54mm pitch dual line pin	1		
External trace cable	1		
OSC-2 (6MHz) oscillator circuit board	1		
OSC-2 oscillator circuit bare board	1		
USB interface cable for connecting host machine and emulator			
Power supply cable for compact emulator			
H/W Tool Customer Registration Sheet (English)			
H/W Tool Customer Registration Sheet (Japanese)			
M34559T2-CPE User's Manual (this manual)			
M34559T2-CPE User's Manual (Japanese)			
M34559T2-CPE Release Notes (English)			
M34559T2-CPE Release Notes (Japanese)			
CD-ROM - Emulator debugger M3T-PD45M	1		
- Assembler ASM45			

* Please keep the M34559T2-CPE's packing box and cushion material in your place for reuse at a later time when sending your product for repair or other purposes. Always use these packing box and cushion material when transporting this product.

* If there is any question or doubt about the packaged product, contact your local distributor.



1.2.1 System Configuration

Figure 1.1 shows a configuration of the M34559T2-CPE system.

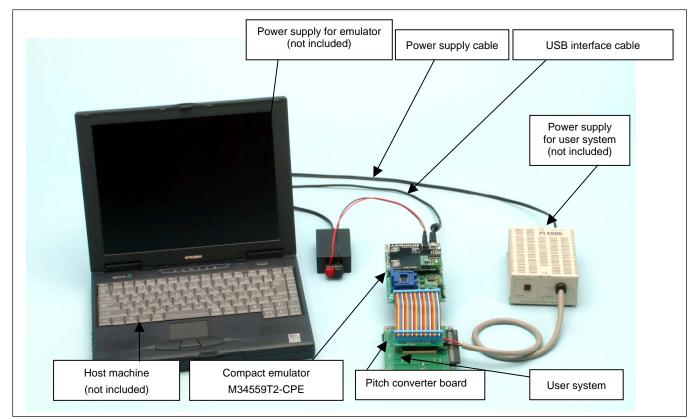


Figure 1.1 System configuration

 Compact emulator M34559T2-CPE (this product) This is a compact emulator for the 4559 Group with the real-time trace functions (hereafter, emulator).

(2) USB interface cable (included)

This is an interface cable for the host machine and the emulator.

(3) Power supply for emulator

This is a power supply for the emulator. Supply 5.0 V \pm 5% (DC).

Prepare a power supply separately. The power cable is included with this product.

Note: Be aware that there are some AC adapters whose power supply voltage varies rather widely with its load. You are recommended to use an AC adapter with a switching power supply or a stabilized power supply.

(4) User system

This is your application system. This emulator can be used without the user system.



(5) Power supply for the user system

This is a power supply for the user system. As this emulator cannot supply the power to the user system, supply the power to the user system separately from the emulator.

(6) Host machine

This is a personal computer for controlling the emulator.

(7) Pitch converter board

This is a pitch converter board for connecting to an MCU foot pattern on the user system. For details, refer to "2.11 Connecting the User System" (page 38).



1.2.2 Names and Functions of each part of the Emulator

Figure 1.2 shows the names of the LEDs on the upper panel of the emulator.

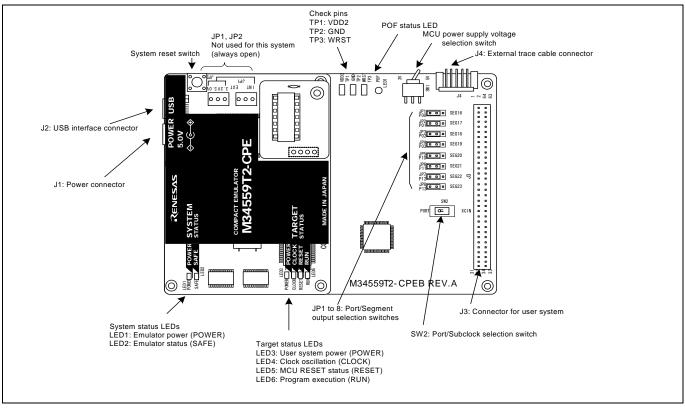


Figure 1.2 Names of the LEDs on the upper panel of the M34559T2-CPE

(1) System Status LEDs

The system status LEDs indicate the emulator main unit's operating status etc. Table 1.2 lists the definition of the system status LEDs.

Tuble 1.2 Definitions of the system status DED's						
Name	Number	Color	Status	Meaning		
POWER	LED1	Orange	ON	Power is supplied to the emulator.		
			OFF	Power is not supplied to the emulator.		
SAFE	LED2	Green	ON	Emulator system has started normally.		
			OFF	Emulator system has not started normally.		

Table 1.2 Definitions of the system status LEDs

(2) Target Status LEDs

The target status LEDs indicate the target MCU's power supply and operating status. Table 1.3 lists the definition of each target status LED.

Name	Number	Color	Status	Meaning	
POWER	LED3	Orange	ON	Power is supplied to the target MCU.	
			OFF	Power is not supplied to the target MCU.	
CLOCK	LED4	Green	ON	Clock is supplied to the target MCU.	
			OFF	Clock is not supplied to the target MCU.	
RESET	LED5	Red	ON	Target MCU is being reset.	
			OFF	Target MCU is not being reset.	
RUN	LED6	Green	ON	User program is being executed.	
			OFF	User program is not being executed.	



(3) POF Status LED

This LED shows whether the MCU is in a state of power down.

Table 1.4 Definitions of the target status LEDs

Name	Color	Status	Meaning			
DOE OWNER ON		ON	MCU is in a state of power down.			
POF Orange OFF	MCU is not in a state of power down, but normal.					

(4) System Reset Switch

By pressing the system reset switch, you can initialize the emulator system. Table 1.5 shows the functions of the system reset switch depending on the state of the emulator.

Table 1.5 Definitions of the target status LEDs

State of Emulator	Function
Pressing the system reset switch when	Initializes the emulator and waits for a command from the
the user's program is halted	emulator debugger
Pressing the system reset switch when	Stops the user's program, initializes the emulator, and
the user's program is executed	waits for a command from the emulator debugger.

IMPORTANT

Notes on a System Reset:

- After pressing the system reset switch, restart the emulator debugger M3T-PD45M. Otherwise the display of emulator debugger and the actual value (in the emulator) may not match.
- When the emulator debugger does not start up normally even after rebooting, turn off the emulator and then turn on again.

(5) Power Connector (J1)

This is a connector for connecting the power supply to this product. For details, refer to "2.6 Connecting the Power Supply for the Emulator" (page 30).

(6) USB Cable Connector (J2)

This is a USB cable connector for connecting the host machine to this product. For details, "2.7 Connecting the Host Machine" (page 31).

(7) External Trace Cable Connector (J4)

This is an external trace cable connector when using an external trace function. For details, "2.4 Connecting the External Trace/Trigger Cable" (page 27).

(8) MCU Power Supply Voltage Selection Switch (SW1)

This is a setting for an MCU power supply voltage. For details, refer to "2.3.1 Initial Setting of the Emulator" (page 22).

(9) Port/Segment Output Selection Switches (JP1 to JP8)

These are the switches to select usages of pins P00/SEG16 to P03/SEG19, P10/SEG20 to P13/ SEG23. For details, refer to "2.3.1 Initial Setting of the Emulator" (page 22).

(10) Port/Subclock Selection Switch (SW2)

This is a switch to select usages of pins XCIN/D6 and XCOUT/D7. For details, refer to "2.3.1 Initial Setting of the Emulator" (page 22).

1.3 Specifications

Table 1.6 lists specifications of the M34559T2-CPE.

Applicable MCUs	4559 Group					
Evaluation MCU	M34559G8EFP (mo	unted in the socket of the	emulator)			
Maximum operating frequency	3.0V		Divided-by 8-mode			
	Set the MCU power supply voltage selection switch			Divided-by 4-mode	6.0MHz	
	(SW1) to 3V.			Divided-by 2-mode		
			Through mode	4.4MHz		
	5.0V		Divided-by 8-mode			
	Set the MCU power supply voltage selection switch (SW1) to 5V.			Divided-by 4-mode	6.0MHz	
				Divided-by 2-mode	0.011112	
			Through mode			
Applicable power supply	3.0V ±5 % or 5.0V =	±5 %				
	- The power supply can be selected by a switch on the M34559T2-CPEB - Available only from the emulator, not from the user system					
	-	in the emanator, not norm th	le user sys			
Basic debugging functions	- Download	our Quainta brast-	(antian)			
		hax. 8 points, break after ex n/stop (allows free-run exe	,	porting coffware breek	c)	
	-	- ·	cution sup	porting software break	5)	
	Memory reference/settingRegister reference/setting					
	- Disassemble displ	-				
Real-time trace function	Recording cycle 32768 cycles					
	Trace point - 2 address points (range/pass count can be set)					
	- 1 external trigger point					
	Trace mode - Before Break mode (Records 32768 cycles before program stops)					
	- Before Trace mode (Records 32768 cycles before event on)					
	- About Trace mode (Records 327			•		
		- After Trace mode (Rec)	
Hardware break function	Hardware break					
	point	- 1 external trigger point				
	Break mode	- Address break or trigger break				
		- Stack over/under flow				
		- Trace event				
	- Break at end of trace					
T:	T:	- Timer				
Time measurement	Time measurement point: 2 address point designation (range can be set) Resolution: 100 ns					
	Measurement interval: 8 types					
		ator timer or MCU cycle				
Coverage	C0 coverage					
Connection to user system	52-pin 2.54mm pitch DIP M34559T-PTCA (included)					
(see "2.11 Connecting the User						
System" on page 39)						
Power supply for emulator	DC 5.0 V \pm 5 %/2 A externally supplied (Prepare a power supply separately.)					
Host machine interface	USB *1 (USB 1.1 ft	Ill-speed, mini-B standard	connector)			

*1 Available to connect the host machine that supports USB 2.0. With the USB interface, not all hardware (such as host machine, USB devices, USB hub) combination will work and guaranteed.

Be sure to use thins emulator with the operating environmental of the emulator and host machine listed in Tables 1.7 and 1.8.

Table 1.7 Operating environmental conditions

Item	Description
Operating temperature	5 to 35°C (no dew)
Storage temperature	-10 to 60°C (no dew)

Table 1.8 Operating environment of the host machine

Item	Description
Host machine	IBM PC/AT compatibles with USB1.1
OS	Windows 98*1
	Windows Me
	Windows XP
	Windows 2000
CPU	Pentium III 233 MHz or more recommended
Memory	128 MB or more recommended
Pointing device such as mouse	Mouse or any other pointing device usable with the above OS that can be
	connected to the main body of the host machine.
CD drive	Needed to install the emulator debugger or refer to the user's manual

* Windows and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.




2. Setup

This chapter describes the preparation for using this product, the procedure for starting up the emulator and how to change settings.

2.1 Flowchart of Starting Up the Emulator

The procedure for starting up the emulator is shown in Figure 2.1. For details, refer to each section hereafter. And, when the emulator does not start up normally, refer to "5. Troubleshooting" (page 67).

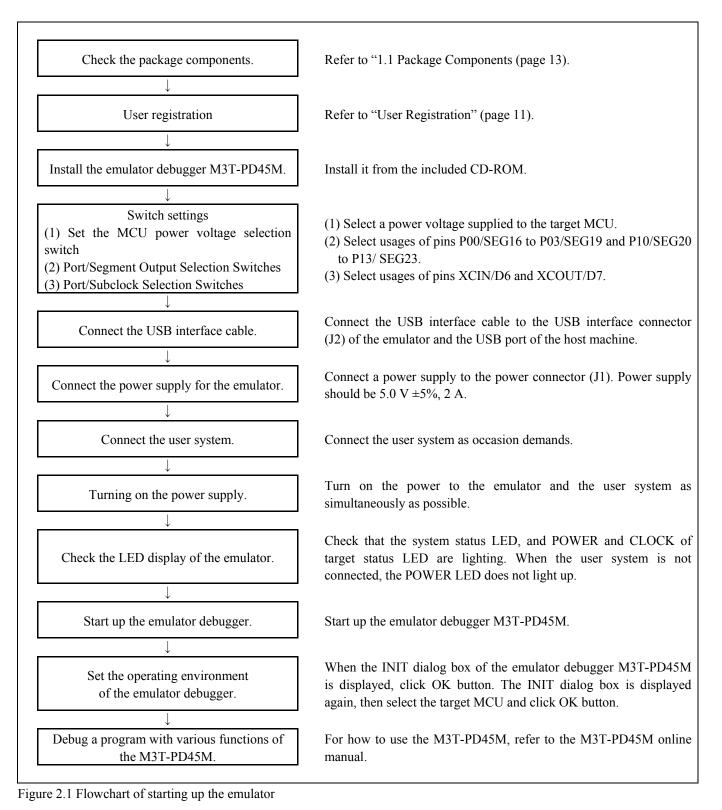



2.2 Installing the Emulator Debugger

If the OS used in your host machine is Windows XP or 2000, this installation must be executed by a user with administrator rights. Be aware that users without administrator rights cannot complete the installation.

2.2.1 Installing the Emulator Debugger M3T-PD45M

From the CD-ROM included with your product, install the emulator debugger M3T-PD45M following the procedure described below.

- Launching the installer
 From Windows Explorer, etc., start the "setup.exe" program present in the \PD45M\W95E folder of the product disc.
- (2) Entering the user information

In the "user information" dialog box, enter the user information (contractor, section, contact address, and host machine). The supplied information will be turned into a format by which technical support will be provided by e-mail.

(3) Selecting components

In the "component selection" dialog box, select the components you want to install. In this dialog box you can change the directory in which to install.

(4) Completing the installation

A dialog box will be displayed indicating that setup has been completed. It means that the installation you made is completed.

2.2.2 Installing the USB Device Driver

Install the USB device driver following the procedure described below.

- (1) Connect the host machine and the compact emulator M34559T2-CPE with the USB cable.
- (2) Turn on the power to the compact emulator M34559T2-CPE.
- (3) A USB device will be detected, and the wizard to install the corresponding device driver will start up. Follow the instructions of the wizard, and a dialog box for specifying the setup information file (inf file) will appear. In this dialog box, specify the musbdrv.inf file present in or below the directory in which you installed the M3T-PD45M (e.g., c:\mtool\pdxx\drivers).

While you are installing, a message may be output indicating that the device driver proper musbdrv.sys cannot be found. Because musbdrv.sys is stored in the same directory as is the musbdrv.inf file, look into the directory and specify it.



2.3 Changing Settings

2.3.1 Initial Setting of the Emulator

Set the MCU power supply source selection switch of the emulator according to conditions of use.

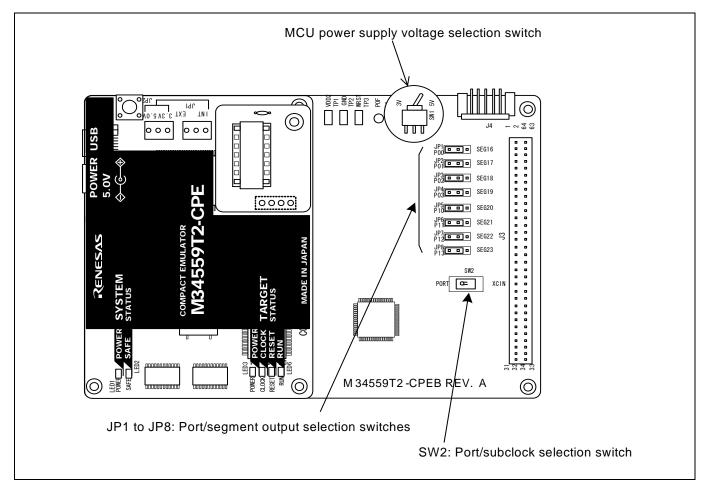


Figure 2.2 Jumper switch locations of the emulator

(1) MCU Power Supply Voltage Selection Switch

These are the jumper switches to select power supply to the MCU and its power voltage. As shown in Table 2.1 below, set the switch according to the connection to the user system.

Table 2.1 Setting jumper switches

MCU power supply voltage selection switch (SW1)	Description
3V	Supplied from the emulator. The MCU operating voltage is 3.0V.
5V	Supplied from the emulator. The MCU operating voltage is 5.0V.

Note on Jumper Switch Settings:

• Always shut OFF the emulator before changing the setting of the jumper switches, and connecting the cable. Otherwise the internal circuit may cause a break.

(2) Port/Segment Output Selection Switches

These are the switches to select usages of pins P00/SEG16 to P03/SEG19, P10/SEG20 to P13/ SEG23. As shown in Table 2.2 below, set the switch according to the connection to the user system.

	Switch	Description						
Name	Factory-settings							
JP1	P00 0 16	P00 side To use pin P00/SEG16 as a port, set to P00 side.	16 side To use pin P00/SEG16 as segment output, set to 16 side					
JP2	P0117	P01 side To use pin P01/SEG17 as a port, set to P01 side.	17 side To use pin P01/SEG17 as segment output, set to 17 side					
JP3	P02 0 18	P02 side To use pin P02/SEG18 as a port, set to P02 side.	18 side To use pin P02/SEG18 as segment output, set to 18 side					
JP4	P03 9	P03 side To use pin P03/SEG19 as a port, set to P03 side.	19 side To use pin P03/SEG19 as segment output, set to 19 side					
JP5	P1020	P10 side To use pin P10/SEG20 as a port, set to P10 side.	20 side To use pin P10/SEG20 as segment output, set to 20 side					
JP6	P11 21	P11 side To use pin P11/SEG21 as a port, set to P11 side.	21 side To use pin P11/SEG21 as segment output, set to 21 side					
JP7	P12 22	P12 side To use pin P12/SEG22 as a port, set to P12 side.	22 side To use pin P12/SEG22 as segment output, set to 22 side					
JP8	P13 23	P13 side To use pin P13/SEG23 as a port, set to P13 side.	23 side To use pin P13/SEG23 as segment output, set to 23 side					

Note on Setting Switches:

- 0
- Always shut OFF the emulator before changing the setting of the switch, and connecting the cable. Otherwise the internal circuit may cause a break.



This is a switch to select usages of pins XCIN/D6 and XCOUT/D7. As shown in Table 2.3 below, set the switch according to the connection to the user system.

Table 2.3 Setting the Port/Subc	lock selection switches
---------------------------------	-------------------------

	Switch	Description			
Name	Factory-settings	Deserr	ption		
SW2	PORT XCIN	PORT side To use pin XCIN/D6 or XCOUT/D7 as a port, set to PORT side.	XCIN side To use a subclock, set to XCIN side. At this time, subclock is supplied to pin XCIN/D6 from emulator. And pin XCOUT/D7 is open.		

Note on Setting Switches:

• Always shut OFF the emulator before changing the setting of the switch, and connecting the cable. Otherwise the internal circuit may cause a break.



2.3.2 Selecting Clock Supply

This product always uses the internal oscillator circuit as a clock supply to the evaluation MCU.

1. Kinds of Oscillator Boards

The M34559T2-CPE comes with an oscillator circuit board OSC-2 (6MHz). And an oscillator circuit bare board OSC-2 is included with this product. A clock supplied to an MCU can be changed by replacing oscillator circuit boards. 2. Replacing Oscillator Circuit Boards

Figure 2.3 shows how to replace the oscillator circuit boards.

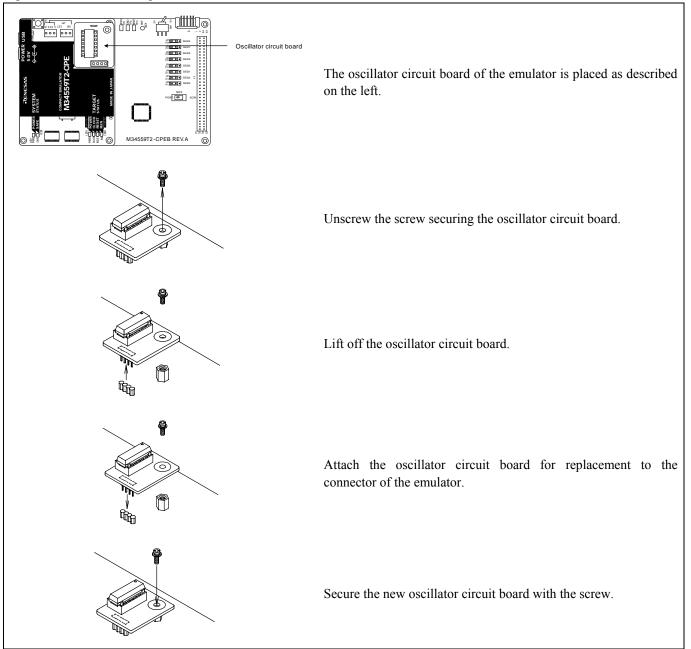


Figure 2.3 Replacing oscillator circuit boards

Note on Replacing the Oscillator Circuit Board:

• When removing the upper cover or replacing the oscillator circuit boards, be sure to shut OFF the power supply. Otherwise the internal circuit may cause a break.



3 Using the Internal Oscillator Circuit Bare Board

To use this product at a frequency you like, build a desired oscillator circuit on the included OSC-2 oscillator circuit bare board. Figure 2.4 shows an external view of the OSC-2 oscillator circuit bare board and the connector pin locations. Figure 2.5 shows the circuitry of the oscillator circuit bare board OSC-2. Use the number of oscillator circuits recommended by the oscillator manufacturer.

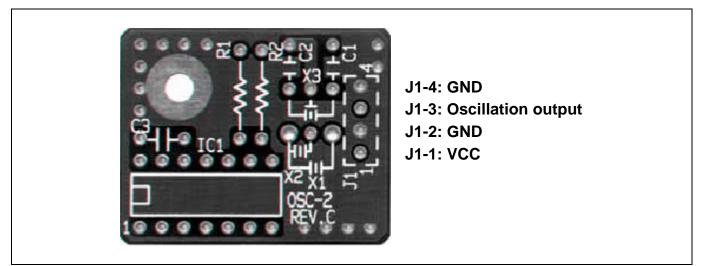


Figure 2.4 External view of the oscillator circuit board OSC-2 and its connector pin locations

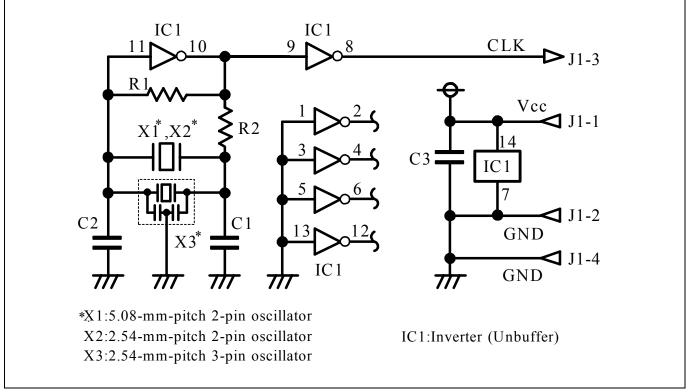


Figure 2.5 Circuits of the oscillator circuit bare board OSC-2

RENESAS

2.4 Connecting the External Trace/Trigger Cable

Using the external trace/trigger cable enables record/reference a hardware break by the external trigger, and changes of an external signal level in the trace window.

(1) Connecting the External Trace/Trigger Cable to the Emulator System

Figure 2.6 shows how to connect the external trace/trigger cable to the connector J4 of the emulator.

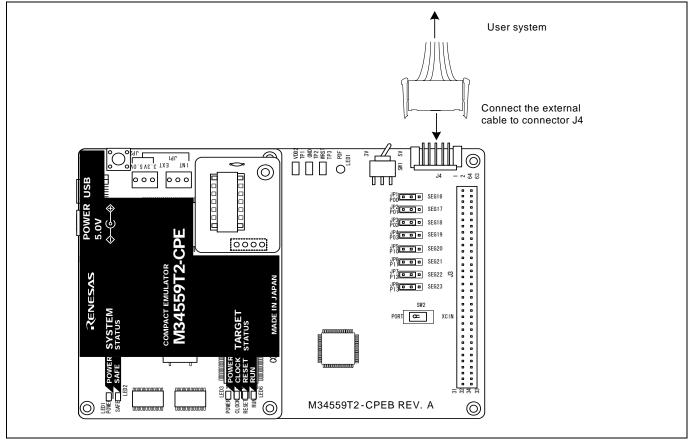


Figure 2.6 Connecting the external trace/trigger cable

(2) Connecting the External Trace/Trigger Cable to the User System

Figure 2.7 shows the pin assignment of the external trace cable.

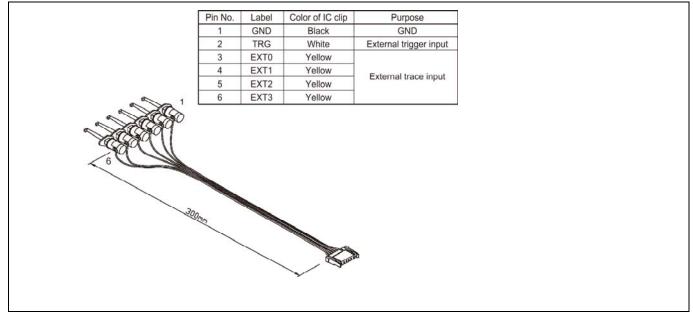


Figure 2.7 Pin assignment of the external trace cable



(3) Specifications of the External Trace/Trigger Cable

Voltage input characteristics of external trace input and external trigger input are shown in Table 2.4.

External trace input is latched in the timing shown in Figure 2.8, and external trigger input is latched in the timing shown in Figure 2.9.

Item	Symbol	Min.	Max.
Input voltage	V_{IN}	0V	5.5V
"H" level input voltage	V_{IH}	2.0V	-
"L" level input voltage	V_{IL}	-	0.8V

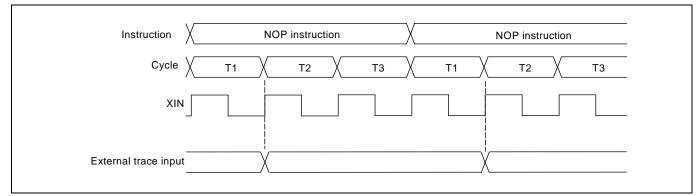


Figure 2.8 Latch timing of external trace input

Instruction	NOP instruction			NOP instruction				
Cycle	T1	T2	тз	T1	_X	T2	_X	Т3
XIN								
External trigger input								

Figure 2.9 Latch timing of external trace input

2.5 Watchdog Timer Initialization Cycle Check Pin

The watchdog time cannot be used with this emulator system. The watchdog timer initialization cycle can be verified by observing the waveform at the check pin (WRST) of the emulator.

(1) Check Pin WRST (TP3) on the Emulator Main Unit

Figure 2.10 shows the positions of the check pins WRST (TP3) and GND (TP2).

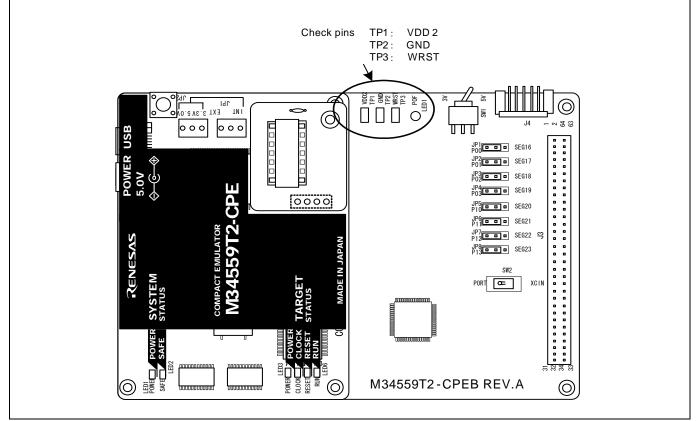


Figure 2.10 Positions of the check pins

(2) Output Waveform of the Check Pin WRST

A waveform similar to the one shown in Figure 2.11 is output when executing the WRST instruction hat initializes the watchdog timer. By observing a period in which the check pin (WRST) is goes high, it is possible to know when the watchdog timer is initialized.

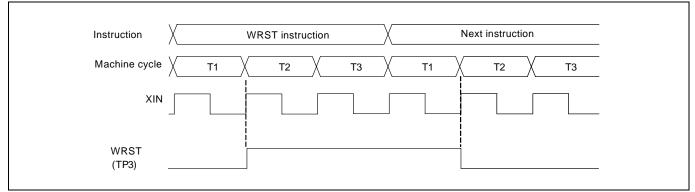



Figure 2.11 Output waveform of the check pin WRST

2.6 Connecting the Power Supply for the Emulator

Connect the power supply for the emulator to the power connector (J1). The specification of the power supply for the emulator is listed in Table 2.5.

Table 2.5 Specification of power supply of the emulatorPower supply voltageDC 5.0 V±5%/2 A

Figures 2.12 and 2.13 show the specifications of the power connector (J1) and an applicable plug, respectively.

 

 


Figure 2.12 Power connector specifications

Figure 2.13 Applicable plug specifications

Notes on Connecting a Power Supply of the Emulator:

- The power cable included in this product package is colored red (+) and black (-).
- Be careful about the polarity of the power supply. Connecting to the wrong electrode could destroy internal circuits.
- Do not apply a voltage exceeding the specified voltage of the product (5.0V ±5%), because it may cause burn injuries and the failure of internal circuits.

2.7 Connecting the Host Machine

Connect the emulator and the host machine with the USB interface cable.

Connect the USB interface cable (included) to the USB interface connector (J2) and the USB port of the host machine (see Figure 2.14).

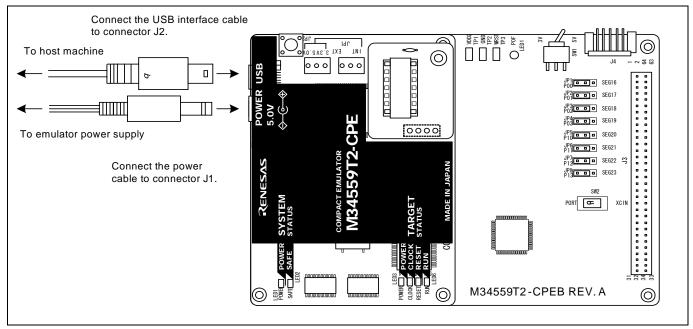


Figure 2.14 Connecting the host machine

2.8 Turning ON the Power

2.8.1 Checking Connections of the Emulator System

Before turning the power ON, check the connection of the interface cable to the host machine, emulator, and user system.

2.8.2 Turning ON/OFF the Power

Turn ON/OFF the power of the emulator and user system as simultaneously as possible.


Do not leave either the emulator or user system powered on, because of leakage current the internal circuits may be damaged. When turning ON the power again after shutting OFF the power, wait for about 10 seconds.

2.8.3 Power Supply to the User System

This emulator cannot supply the power to the user system. Therefore design your system so that the user system is powered separately.

The voltage of the user system should be within the range of $3.0V\pm5\%$ or $5.0V\pm5\%$. Do not change the voltage of the user system after turning on the power.

Note on Jumper Switch Settings:

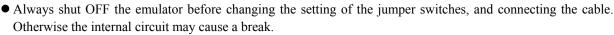



2.8.4 LED Display When the Emulator Starts Up Normally

After the emulator starts up, check the status of the LEDs to see whether the emulator operation is enabled or not. Figure 2.15 shows the positions of the emulator status LEDs.

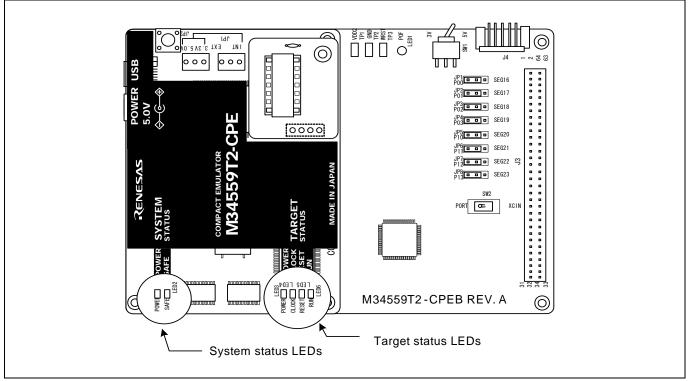


Figure 2.15 Positions of the system status LEDs and target status LEDs

(1) System status LEDs

Check that the LED1 and LED2 of the system status LEDs are lit immediately after the power is activated. If it is not lit, shut off the emulator and check the power supply for the emulator is properly connected.

(2) Target status LEDs

Target status LEDs light as shown in Figure 2.16 when the user system is not connected and as shown in Figure 2.17 when a user system is connected. When the self-check is terminated after turning the power on, only the LED2 (SAFE) lights on as shown in Figures 2.16 and 2.17

When the target status LEDs do not display as shown in Figures 2.16 and 2.17, refer to "5. Troubleshooting" (page 67).

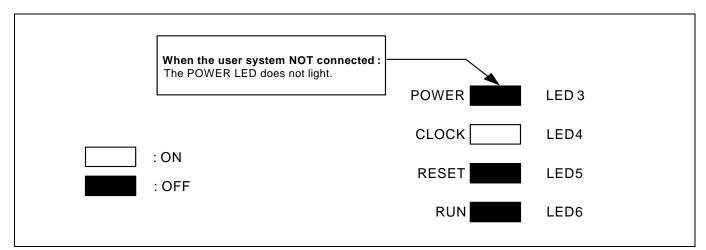


Figure 2.16 Target status LEDs display when the emulator starts up normally (when user system not connected)

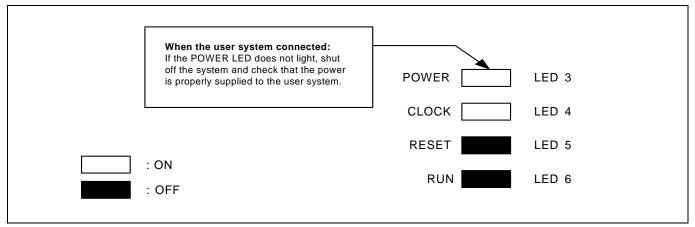


Figure 2.17 Target status LEDs display when the emulator starts up normally (when user system connected)

2.9 Downloading Firmware

2.9.1 When It is Necessary to Download Firmware

It is necessary to download the firmware when:

- (1) the firmware has been upgraded
- (2) the emulator debugger M3T-PD45M has been upgraded
- If downloading firmware from the M3T-PD45M is not completed in the cases below, redownload the firmware.
- When the power is unexpectedly shut down during a download from the emulator debugger
- When a communications interface cable is unexpectedly pulled out

2.9.2 Downloading Firmware in Maintenance Mode

Download the firmware in maintenance mode as explained here following. The user system must not be connected when downloading the firmware.

- (1) Connect the USB interface cable to the compact emulator and the host machine.
- (2) Within 2 seconds of activating power to the emulator, press the RESET switch on the compact emulator to switch to maintenance mode.

Switched to maintenance mode, the SAFE SYSTEM STATUS LED begins to flash.

(3) Start up the emulator debugger M3T-PD45M. When the Init dialog box setup is complete, the dialog which urges to download the firmware will appear. Download the firmware following messages. Required time for downloading the firmware is about 60 seconds.

IMPORTANT

Note on Downloading Firmware:

• Do not shut OFF power while the firmware is being downloaded. Doing so, the emulator will not start up properly. If power is shut OFF by mistake, redownload the firmware in maintenance mode.



2.10 Self-check

2.10.1 Self-check Procedure

To run the self-check of the emulator, do so as explained here below. While the self-check is in progress, the LEDs will change as shown in Figure 2.18.

- (1) If the user system is connected, disconnect it.
- (2) Set the switches as the factory-settings to execute the self-check (see Table 2.6).
- (3) Within 2 seconds of activating power to the emulator, press the system reset switch on the emulator upper panel.
- (4) Check the SAFE LED starts flashing and then press the system reset switch again.
- (5) The self-check will start. If the normal result is displayed in about 10 seconds, the self-check terminated normally.
- (6) The self-check will be terminated when the LED display is normal as shown in Figure 18.

Table 2.6 Switch settings for the self-check

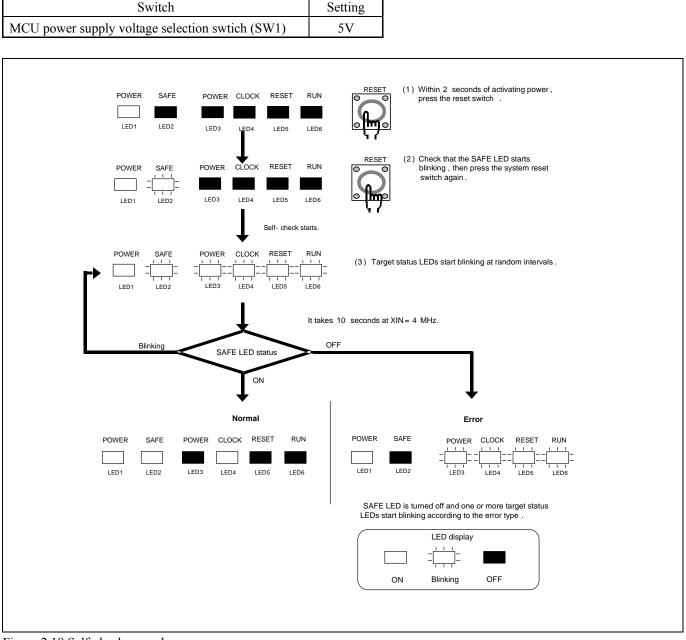


Figure 2.18 Self-check procedure

2.10.2 If an Error is Detected in the Self-check

Table 2.7 lists how to remedy the troubles if the target status LED display is abnormal in the self-check. When an error is detected, shut off the emulator and the user system and follow the steps in the Table 2.7.

Table 2.7 Error display in the self-check and how to ren	nedy it
--	---------

	LED c	lisplay OFF	Γ	Problem & Remedy
POWER	CLOCK	RESET	RUN	
				The emulator system is not working properly.Check that power is supplied to the emulator.The emulator may be damaged. Contact your local distributor.
				 A clock is not supplied to the emulator. Check that the oscillator circuit board (OSC-2) is attached. Check that the oscillator or oscillation module on an oscillator circuit board (OSC-2) is operating normally.
				 The MCU is not controlled properly. Check that the MCU is mounted properly Check that the oscillation frequency of the oscillator circuit board (OSC-2) is within the MCU specifications.
	Oth	iers		The emulator system is not working properly.The emulator may be damaged. Contact your local distributor.

IMPORTANT

Notes on the Self-check:

- Be sure to disconnect the user system before executing the self-check.
 - Use the preinstalled oscillator circuit board OSC-2 (6MHz) to execute the self-check.
- If the self-check does not result normally (excluding target status errors), the emulator may be damaged. Then, contact your local distributor.

2.11 Connecting the User System

Figure 2.19 shows the connection of the M34559T2-CPE and the user system.

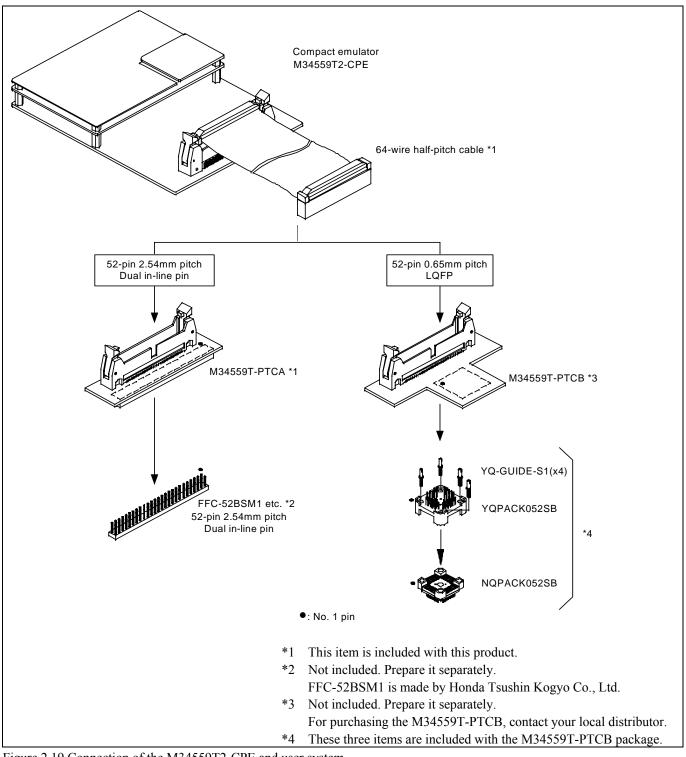


Figure 2.19 Connection of the M34559T2-CPE and user system

Note on Connecting the User System:

• Take care not to attach the converter board in a wrong direction. It may cause a fatal damage to the emulator.

• NQPACK, YQPACK, YQSOCKET, YQ-GUIDE and HQPACK are trademarks of Tokyo Eletech Corporation.

RENESAS

2.11.1 Connecting to a 52-pin 2.54mm pitch Dual In-line Pins

Here following is a procedure of connecting the 52-pin dual in-line pin using the M34559T-PTCA (included with the M34559T2-CPE). Table 2.8 lists the connector assignment and Figure 2.20 shows the pin assignment of the M34559T-PTCA.

- (1) Mount the 64-wire half-pitch cable (included) to the J3 of the M34559T2-CPE.
- (2) Attach the J1 of the M34559T-PTCA to the other side of the 64-wire half-pitch cable.
- (3) Attach the J2 side of the M34559T-PTCA to the 52-pin dual in-line pin on the user system.

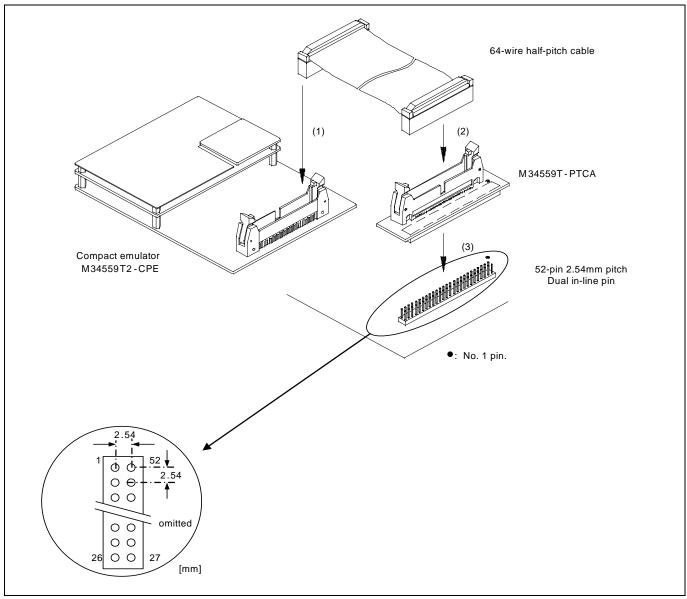


Figure 2.20 Connecting to a 52-pin 2.54mm pitch dual in-line pin

Notes on Connecting the User System:

• Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and user system.

M34559T-PTCA J2 connector No.	MCU pin No.	Signal	M34559T-PTCA J2 connector No.	MCU pin No.	Signal
1	1	D2	52	52	D1
2	2	D3	51	51	D0
3	3	D4	50	50	P33/SEG31
4	4	D5/INT	49	49	P32/SEG30
5	5	CNVSS	48	48	P31/SEG29
6	6	XCIN/D6	47	47	P30/SEG28
7	7	XCOUT/D7	46	46	P23/SEG27
8	8	RESET	45	45	P22/SEG26
9	9	XOUT	44	44	P21/SEG25
10	10	VSS	43	43	P20/SEG24
11	11	XIN	42	42	P13/SEG23
12	12	VDD	41	41	P12/SEG22
13	13	C/CINTR	40	40	P11/SEG21
14	14	VDCE	39	39	P10/SEG20
15	15	COM0	38	38	P03/SEG19
16	16	COM1	37	37	P02/SEG18
17	17	COM2	36	36	P01/SEG17
18	18	COM3	35	35	P00/SEG16
19	19	SEG0/VLC3	34	34	SEG15
20	20	SEG1/VLC2	33	33	SEG14
21	21	SEG2/VLC1	32	32	SEG13
22	22	SEG3	31	31	SEG12
23	23	SEG4	30	30	SEG11
24	24	SEG5	29	29	SEG10
25	25	SEG6	28	28	SEG9
26	26	SEG7	27	27	SEG8

Table 2.8 Connector assignments of the M34559T-PTCA

* VDD is connected for the emulator system to monitor power supply of the user system, and the emulator system does not supply power to the user system

* XIN and XOUT are not connected. XIN is input from oscillator board OSC-2 to the MCU, and it is not input from an oscillator circuit on the user system. To change a system clock frequency, change the circuit of the oscillator board OSC-2.

* If the SW2 is set to the "XCIN" side, pins XCIN and XCOUT are not connected to the user system. A 32.768kHz internal oscillator circuit of the emulator is selected.



2.11.2 Connecting to a 52-pin 0.65mm pitch Foot Pattern

Here following is a procedure of connecting the 52-pin 0.65mm pitch foot pattern using the M34559T-PTCB (not included). Table 2.9 lists the connector assignment of the M34559T-PTCB and Figure 2.21 shows the pin assignment of the M34559T-PTC.

- (1) Mount the NQPACK052SB (included with the M34559T-PTCB) to the foot pattern on the user system.
- (2) Attach the YQPACK052SB (included with the M34559T-PTCB) to the NQPACK052SB and secure it with the YQ-GUIDE-SI (included with the M34559T-PTCB).
- (3) Attach the 64-wire half-pitch cable (included) to the J3 connector of the M34559T2-CPE.
- (4) Attach the backside of the 64-wire half-pitch cable to the J1 connector of the M34559T-PTCB.
- (5) Attach the J2 of the M34559T-PTCB to the YQPACK052SB.

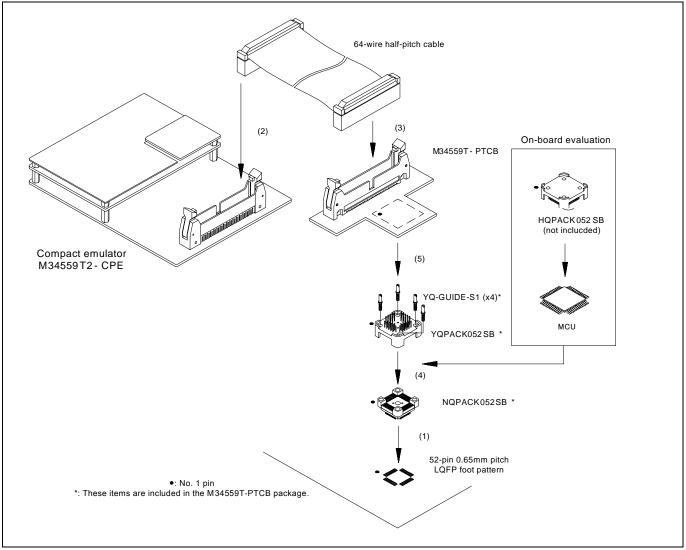


Figure 2.21 Connecting to a 52-pin 0.65mm pitch foot pattern

Notes on Connecting the User System:

• Take care not to attach a converter board in a wrong direction. It may cause a fatal damage to the emulator and user system.

M34559T-PTCB J2 connector No.	MCU pin No.	Signal	M34559T-PTCB J2 connector No.	MCU pin No.	Signal
1	1	D2	52	52	D1
2	2	D3	51	51	D0
3	3	D4	50	50	P33/SEG31
4	4	D5/INT	49	49	P32/SEG30
5	5	CNVSS	48	48	P31/SEG29
6	6	XCIN/D6	47	47	P30/SEG28
7	7	XCOUT/D7	46	46	P23/SEG27
8	8	RESET	45	45	P22/SEG26
9	9	XOUT	44	44	P21/SEG25
10	10	VSS	43	43	P20/SEG24
11	11	XIN	42	42	P13/SEG23
12	12	VDD	41	41	P12/SEG22
13	13	C/CINTR	40	40	P11/SEG21
14	14	VDCE	39	39	P10/SEG20
15	15	COM0	38	38	P03/SEG19
16	16	COM1	37	37	P02/SEG18
17	17	COM2	36	36	P01/SEG17
18	18	COM3	35	35	P00/SEG16
19	19	SEG0/VLC3	34	34	SEG15
20	20	SEG1/VLC2	33	33	SEG14
21	21	SEG2/VLC1	32	32	SEG13
22	22	SEG3	31	31	SEG12
23	23	SEG4	30	30	SEG11
24	24	SEG5	29	29	SEG10
25	25	SEG6	28	28	SEG9
26	26	SEG7	27	27	SEG8

Table 2.9 Connector assignments of the M34559T-PTCB

* VDD is connected for the emulator system to monitor power supply of the user system, and the emulator system does not supply power to the user system

* XIN and XOUT are not connected. XIN is input from oscillator board OSC-2 to the MCU, and it is not input from an oscillator circuit on the user system. To change a system clock frequency, change the circuit of the oscillator board OSC-2.

* If the SW2 is "XCIN" side, pins XCIN and XCOUT are not connected to the user system. A 32.768kHz internal oscillator circuit of the emulator is selected.

3. Usage (How to Use the Emulator Debugger)

This chapter describes how to start up the emulator debugger and how to use the major windows.


3.1 Starting Up the Emulator Debugger (Init Dialog Box)

To launch the emulator debugger, click the Start menu of Windows and then select

Programs (P) >> [Renesas] >> [PD45M V.xx.xx Release x] >> [PD45M].

When the emulator debugger started up, the Init dialog box appears.

(1) Setting the Init dialog box (1/2)

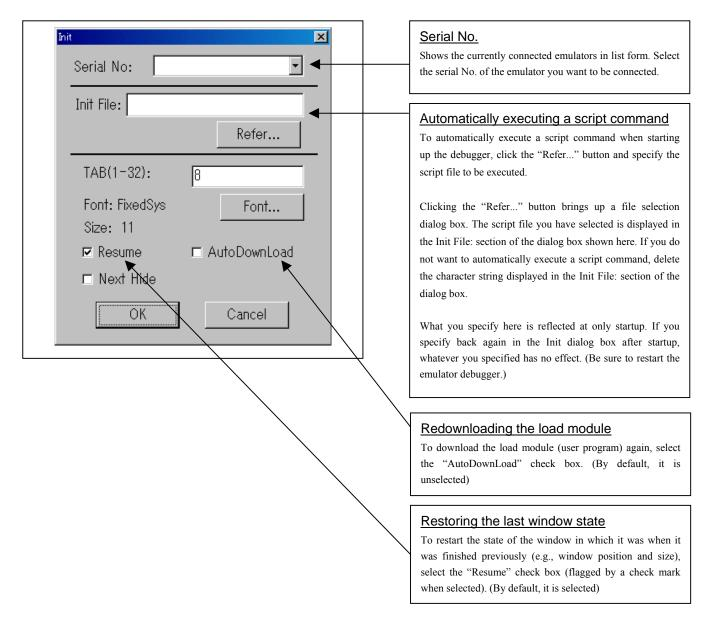



(2) Setting the Init dialog box (2/2)


By pressing [OK] after setting the Init dialog box (1/2), the following Init dialog box will be displayed.

Init X MCU: M34559G6 M34559G6 Init File: Refer	Specifying the MCU file Specify the MCU to be debugged.
TAB(1-32):	
Font: System Font	
E Resume E AutoDownLoad	
🗖 Next Hide	
OK Cancel	

3.2 Program Window

(1) Downloading a program

1. Initial screen of the program window

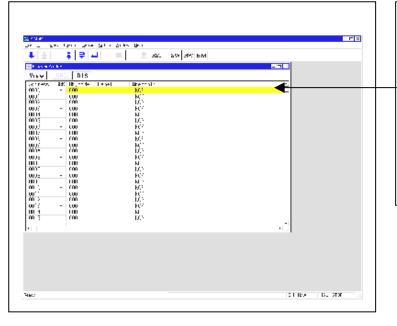


Initial screen of the program window

The program window is a window that always shows the content of the source file corresponding to the current position of the program counter. It automatically opens when the emulator starts up. The program counter position is identified by the yellow background color. Here, you can execute the program up to the cursor position, and set or clear software breakpoints.

With the emulator system, the ROM area at power-on in initialized to 000h (NOP instruction).

2. Downloading the program

Menu	Menu item	Function
<u>F</u> ile	<u>D</u> ownload <u>L</u> oad Module <u>M</u> emory Image <u>S</u> ymbol	Downloads the user program. Downloads machine language data and debug information. Downloads only machine language data. Downloads only debug information.
	<u>R</u> eload	Reloads the user program.
	<u>U</u> pload	Uploads the user program.
	<u>S</u> ave Disasm	Saves the disassembled result.

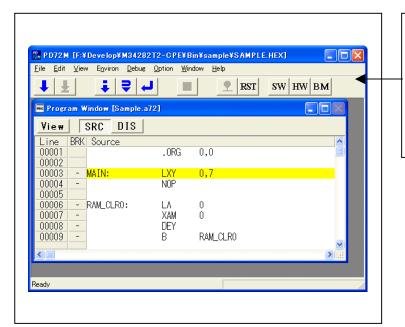

Display after downloading the program


The program window has the following two display modes.

- Source display mode (SRC) Displays the source file of the user program.
- Disassemble display mode (DIS) Displays the disassembled result of the user program.




(2) Executing the program

1. Resetting the user program

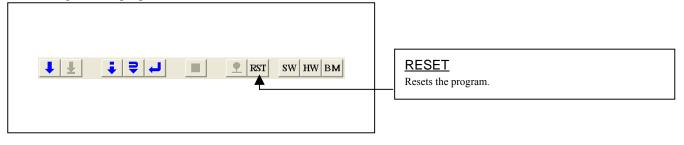


2. Executing the user program

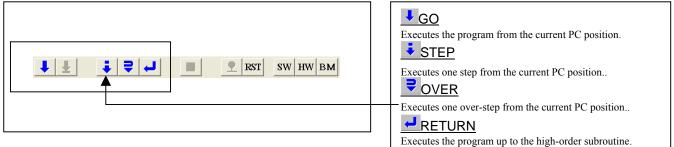

3. Stopping the user program

Stops the program.

4. Program window screen after the user program has stopped

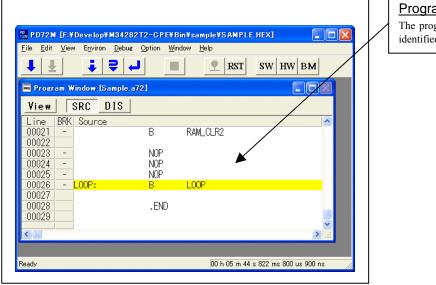

Program window screen

The program position at which the program has stopped is identified by the yellow background color.

(3) Setting breakpoints

1. Screen after breakpoint setup


	SR3 [11: 1] 5.1.10					
-	-	.08 0.1	Brea	ak mode s	elect butt	on
-	19.15 19.15	<u>- 22 0.3 1</u> 30				
Ξ,	De la			_		
1		(A) 0 300° 1 1490 0				
: 1		37 1.59 U	·			
1	100			22		
			E	Break mod	le display	area
E	Breakpoi	nt display are			1.7	120032
_	eenster	1.2			×	
2			11.04.07		- (Jar
E	Breakpoi	nt display are	-	121 AF 11	(m. w)

Breakpoint setup screen					
There are two types of breakpoints as described below. It is					
necessary to select the breakpoint by the break mode button.					
The current breakpoint is displayed in the break mode					
display area.					
BM:SW Software break mode					
BM:HW Hardware break mode					
- Software breakpoint (B)					
A software breakpoint can be set or cleared by double-					
clicking the breakpoint display area.					
If the breakpoint you set is a software breakpoint, the					
program stops before executing the instruction at the set					
breakpoint. Up to eight breakpoints can be set.					
- Hardware breakpoint					
A hardware breakpoint can be set or cleared by the					
hardware break point setting dialog box.					
If the breakpoint you set is a hardware breakpoint, the					
program stops after executing the instruction at the set					
breakpoint. Up to two breakpoints can be set, and					
conditions of an address range or external trigger, etc.,					

can be also set.



- (4) Executing up to the cursor position (Come command)
- 1. Specifying the Come command

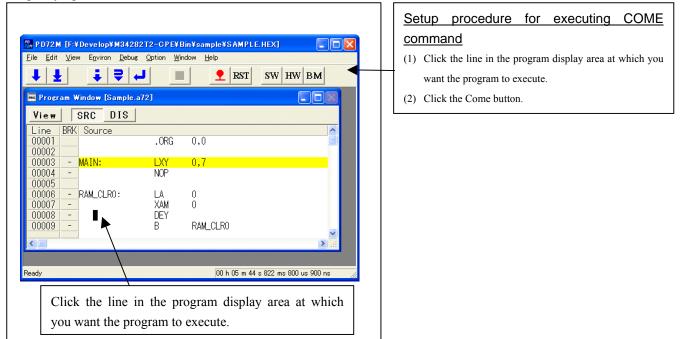

2. After the Come command has finished


↓ ⊥	\$ ₹			RST	SW HW B	M
🛤 Program V	Step Vindow (Samp	le.a72]				
View	SRC DIS					
Line BRK	Source					~
00001		.ORG	0,0			
00002						
	MAIN:	LXY	0,7			
00004 -		NOP				
00005						
00006 -	RAM_CLR0:	LA	Û			
00007 -		XAM	0			
- 80000		DEY				
00009 -		В	RAM_CL	LRO		_
						×
<						>




3.3 Hardware Breakpoint Setting Window

(1) Breakpoint setup dialog box

 
1. Opening the hardware breakpoint setup dialog box



2. Hardware Break Point Setting Window in initial state

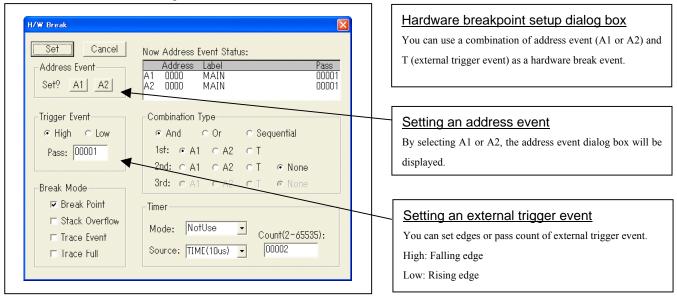

3. Address event setting dialog box

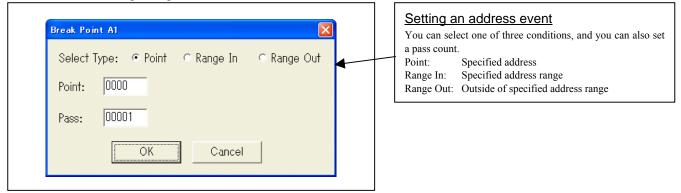


(2) Setting the combinatorial event condition


1. Window for setting the combinatorial event condition

H/W Break Set Cancel Now Address Event Status: Address Label Address Event Pass 00001 Set? A1 A2 Α2 0000 MAIN 00001 Trigger Event Combination Type ● High ● Low • And • Or Sequential 1st: • A1 • A2 • T Pass: 00001 2nd: © A1 © A2 © T None 3rd: C A1 C A2 OT © No Break Mode 🔽 Break Point Timer E Stack Overflow Mode: NotUse • Count(2-65535): Trace Event Source: TIME(10us) 00002 -🗆 Irace Full

2. Setting a break event

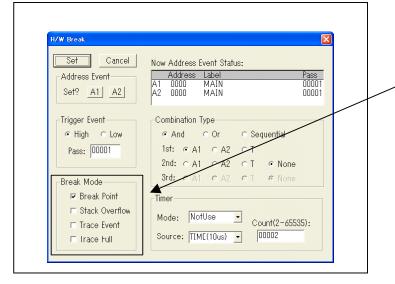

3. Timer setup area

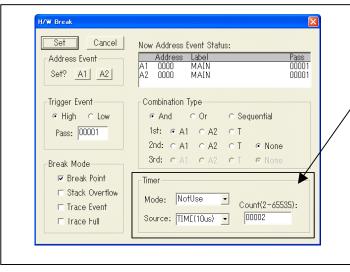

Setting the combinatorial event condition Select a combinatorial condition for A1, A2, and T. One of the following three combinatorial conditions can be selected. - AND All of the specified conditions are met. - OR One of the specified conditions is met. - Sequential The specified conditions are met sequentially in a specified order. When you have finished setting the combinatorial event condition, click the "Set" button.

Setting a break event The following four break conditions can be set. You can set two or more break conditions at the same time. Break Point: The program breaks when a breakpoint is reached. Stack Overflow: The program breaks when the stack overflow or underflows. Trace Event: The program breaks when a trace event is met. Trace Full: The program breaks when it finished writing to the trace memory.

r.		
	Timer setu	up area
		g four operation modes of the timer can be
I	specified.	
ł	NotUse:	The timer is not used.
	TimeOut:	The program loops at a constant frequency breaks when a breakpoint is reached within a
		specified time again. As an operating condition, a breakpoint must be reached at
I		least once.
	TimeCount:	The program breaks when a specified time
	DelayCount:	has elapsed after it started running. The program breaks when a specified time has elapsed after a breakpoint is reached.
I	One of the f	following two can be specified as the count
I	source for the	timer.
	TIME (10us):	The passage of time if counted using the emulator's timer(10us fixed)
	CYCLE:	The passage time is counted by using MCU cycle.
1		



3.4 Trace Window

(1) Trace window

1. Trace window

Menu	Menu item	Function
Windows	Trace Window	Opens the trace window.

BUS	DIS	SRC	For	ward B	ack	Step)	Cor	пе		
Range:	-32767 ,	0000	Area:	Break	File:	Cycle:	-002	6 A	Address:	05F7	
Cycle	Label		Addres	s Data	Areg	Skip	Int	So	0123		
-0026			05F7	0EB	F	0	0	0	0000		
-0025			05F8	276	F	1	0	0	0000		
-0024	W1		05F6	281	F	0	0	0	0000		
-0023			05F7	0EB	F	0	0	0	0000		
-0022			05F8	276	F	1	0	0	0000		
-0021	₩1		05F6	281	F	0	0	0	0000		
-0020			05F7	0EB	F	0	0	0	0000		
-0019			05F8	276	F	1	0 🖌	4	0000		
-0018	W1		05F6	281	F	0	0	Ū	0000		
-0017			05F7	0EB	F	0	0	0	0000		
-0016			05F8	276	F	1	0	0	0000		
-0015	W1		05F6	281	F	0	0	0	0000		
-0014			05F7	0EB	F	0	0	0	0000		
-0013			05F8	276	F	1	0	0	0000		
-0012	₩1		05F6	281	F	0	0	0	0000		
-0011			05F7	0EB	F	0	0	0	0000		
-0010			05F8	276	F	1	0	0	0000		
-0009	₩1		05F6 05F7	281 0EB	F F	0 0	0 0	0 0	0000 0000		

Trace window

The trace window is used to show the results of real-time trace measurements. It has the following three display modes:

- Bus mode

Bus information per cycle can be inspected. The contents are displayed in order of execution paths.

- Disassemble mode

The execution paths of the executed instructions can be inspected. The contents are displayed in order of execution paths.

- Source mode

The execution paths of the source program can be inspected.

These modes can be switched over using the respective toolbar buttons.

The trace window shows the measurement result when a real-time trace measurement has finished. The trace window remains blank until the real-time trace measurement in progress finishes.

2. Trace window (bus display)

BUS	DI			rward B		Ste		Go			×
Range: Cycle	-32767 Lab	. 0000 e	Area: Addre:	Break ss Data	File: Areg	Cycle: Skip		26 . So	Address: 0123	05F7	
-0026	Lot		05F7	0EB	F	0	0	0	0000		
-0025 -0024	W1		05F8 05F6	276 281	F	1 0	0 0	0 0	0000 0000		
-0023			05F7	0EB	F	Ő	Ő	Ő	0000		/
-0022	W1		05F8	276	F F	1	0	0	0000		ĺ
-0021	W1		05F6 05F7	281 0EB	F	0 0	0 0	0 0	0000 0000		
-0019			05F8	276	F F F F	1	Ó	Ó	0000		
-0018	W1		05F6 05F7	281 0EB	F	0 0	0 0	0 0	0000 0000		
-0016			05F8	276	F	1	0	0	0000		
-0015 -0014	₩1		05F6 05F7	281 0EB	F F F	0 0	0 0	0 0	0000 0000		
-0013			05F8	276	F	1	Ó	Ó	0000		
-0012	W1		05F6 05F7	281 0EB	F F	0 0	0 0	0 0	0000 0000		
-0010			05F8	276	F	1	Ő	ŏ	0000		
-0009	W1		05F6	281	F	0 0	0 0	0	0000		
-0008			05F7	0EB	F	Ų	Ų	0	0000	Þ	Ň
		D	isas	sem	ble D	lispl	ay (DIS	S)		
🌆 Trace	_						1		1		×
BUS	JDI			forward	Back		Step	_	Come		
Range:	-0103 /cle	. 0000 Address	Area:	Break code	File: Label	Сус		0103 :mon	Address:	0000	-
	103	0000	007	code	MAIN:		LXY		07		
-0	102	0001	000			5.0	NOP				
)101)100	0002 0003	0B0 060		RAM_CI	_RU:	LA XAN		0 MAIN 0 MAIN		
	1099	0004	017				DEY		0 mail	*	
	098	0005	182		DAM O	D0 -	B		0002(00		F
	1097 1096	0002 0003	0B0 060		RAM_CI	_RU:	LA XAN		0 MAIN 0 MAIN		
-0	095	0004	017				DEY				
	1094 1093	0005 0002	182 0B0		RAM_CI	R۵۰	B LA		0002(00 0 MAIN		F
	092	0003	060				XAN		0 MAIN		
	091	0004	017				DEY B		0002(00	1/021	٢.
-(<)	1090	0005	182				D		0002(00		
			Sou	rce D	Displa	ay (S	SRC	;)			
🚾 Trace	1								1		×
BUS	DI		_	Forward	Back		Step		Come		
Range:	-0103	. 0000 Source	Area:	Break	File:	Samp	le.a72	C)	vole: -0	103 Add	-
Line 00001	NOW	Source		. ORI	G O	,0					
00002		NAME TO THE STREET		1.102							
00003	>> 	MAIN:		LXY NOP	U	,7					
00005											
00006	-	RAM_CLR):	LA	0						
00007	-			XAM DEY	0						
00009	-			В	R.	AM_CLI	RO				
00010	-			LXY	1	,7					
00012	-	RAM_CLR	1:	LA	ó	, (
00013	-			XAM	0						
00014	-			DEY						>	
<											_
<											

Explanation of the trace window (bus display)

The following explains the displayed contents, from left to right.

- Address
- Shows the status of the address bus.
- Data Shows the status of the data bus.
- Areg
 - Shows the status of the register A.
- Skip
 - When marked by 1, it means a skipped instruction.
- Int

_

When marked by 1, it means an interrupt has occurred.


- So When marked by 1, it means that stack overflow or underflow has occurred.
- 0123
 - Shows the signal level of external trace cable of EXT0 to EXT3

(2) Trace point setup dialog box


Opening the trace point setup dialog box

Menu	Menu item	Function
<u>D</u> ebug	Trace Point	Setting the trace point dialog box

1. Setting the trace point dialog box

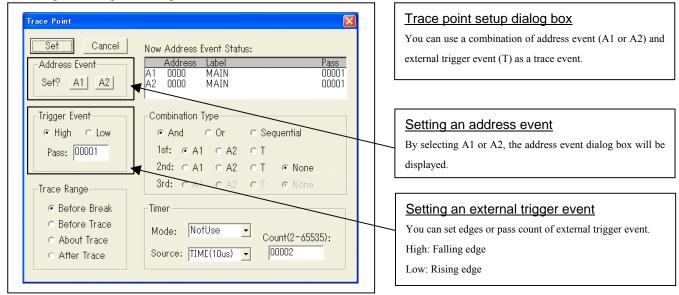

2. Address event setting window in initial state

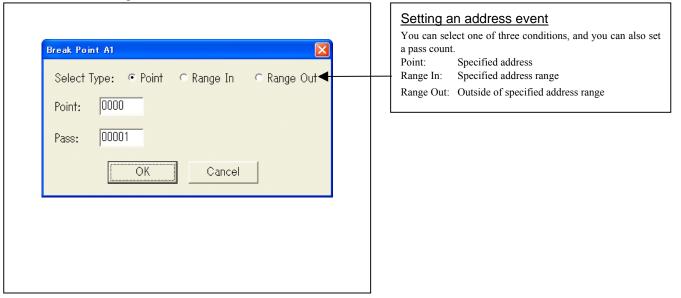


(3) Setting the combinatorial event condition


1. Window for setting the combinatorial event condition

Trace Point X Set Cancel Now Address Event Status: Addre∞ Label A1 0000 MAIN Address Event-Pass 00001 Set? A1 A2 A2 0000 MAIN 00001 Trigger Event Combination Type- ● High ● Low Sequential 1st: © A1 © A2 © T Pass: 00001 2nd: c A1 c A2 c T • None M 3rd: C A1 C A2 C T © None Trace Range Before Break Timer C Before Trace Mode: NotUse • Count(2-65535): About Trace Source: TIME(10us) -00002 C After Trace

2. Setting a break event

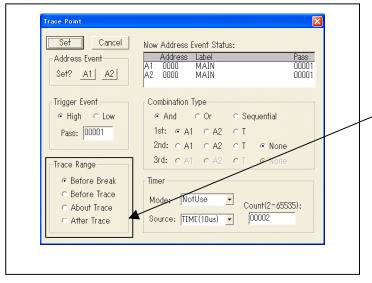

3. Timer setup area

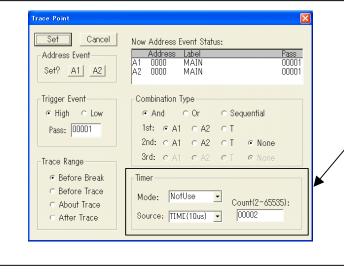

Setting the combinatorial event condition Select a combinatorial condition for A1, A2, and T. One of

the following three combinatorial conditions can be selected..

- AND
 - All of the specified conditions are met.
- OR

One of the specified conditions is met.

- Sequential

The specified conditions are met sequentially in a specified order.

Setting a b	preak event
The following	g four break conditions can be set. You can set
two or more b	reak conditions at the same time.
Before break:	32K cycles of instruction execution before the
-	user program stopped is recorded.
Before Trace:	32K cycles of instruction execution before the
	user program stopped is recorded.
About Trace:	32K cycles of instruction execution before and
	after a trace point condition was met is recorded.
After Trace:	32K cycles of instruction execution after a trace
	point condition was met is recorded.

Timer setu The followin specified.	up area g four operation modes of the timer can be
NotUse:	The timer is not used.
TimeOut:	The program breaks when a breakpoint is reached within a specified time.
TimeCount:	The program breaks when a specified time has elapsed after it started running.
DelayCount:	The program breaks when a specified time has elapsed after a breakpoint is reached.
One of the fo	llowing two can be specified as the count source
for the timer.	
TIME (10us):	The passage of time if counted using the emulator's timer (10us fixed)
CYCLE: The	passage time is counted by using MCU cycle.



3.5 Time Measurement

- (1) Trace window
- 1. Setting time measurement points

Menu	Menu item	Function
<u>D</u> ebug	Measurement Point	Sets up the time measurement points dialog box.

	Setting time measurement points
	A time measurement range can be specified by selecting one
Measurement Point	of the following eight time intervals.
	1.From Go to Break:
	From when the program starts running to when it stops.
Mode: 1. From Go to Break	2.From Go to MP End:
Mode. II. Hom oo to broak	From when the program starts running to when the end of
	measurement point passed.
Source: TIME 💌	3.From Go to Trace Event:
	From when the program starts running to when a trace
	event is met.
MP Start: 0000 MP End: 0000	4.From Trace Event to MP End:
	From where trace event is met to when the measurement
	end point passed.
Set Cancel	5.From Trace Event to Break:
	From when a trace event is met to when execution of the
	program finished.
	6.From MP Start to MP End:
	From when the measurement start point passed to when a
	trace even is met.
	7.From MP Start to Trace Event:
	From when the measurement start point passed to when a
	trace even is met.
	8.From MP Start to Break:
	From when the measurement start point passed to when
	execution of the program finished.
	Furthermore, one of the following two can be specified as
	the count source for the timer.
	TIME(100ns): The passage of time is counted using the
	emulator's timer (100ns fixed).
	CYCLE: The passage time is counted by using MCU cycle.
🔀 POTZHI ICYTOwnicytH04202T2: OPCYClinYtwngik/SAMPUCHICKI 🔰 📮 🗖 🔯 Die Sati Zew Egisch Sebue Sator Satow Leb	
🖻 Program Winkow (Sample 202)	
View SRR DIS ins Tek Source	
1001 (K3 1.0	
00000 - Ka Ma X ^a 0.7 00001 - KCP	
100:7 100:7 E RAN CL71: LA 1 200:7 - SAN CL71: SAN C	
00004 - XW 0 00002 - H-*	
	Display of the time measurement result
Time measurement result display area	The time measurement result is displayed in the status bar at
	the bottom of the window.
Peery Division and C22 mo 200 ws 400 ws Division Http://CC01.	



4. Hardware Specifications

This chapter describes specifications of this product.

4.1 Target MCU Specifications

Table 4.1 lists the specifications of target MCUs which can be debugged with this product.

Table 4.1 S	necifications	oftarget	MCUs fo	or the N	131550T2	CPE
1 able 4.1 S	pecifications	of target	MCUS IC	JI the N	15455912-	CLE

Item		D	escription				
Applicable MCU	4500 Series 4559 Group						
Evaluation MCU	M34559G6	EFP (mounted in the socket of	r)				
Applicable power supply	3.0V ±5 %	or 5.0V ±5 %					
	- Available	only from the emulator, not f	from the user s	ystem			
Maximum operating frequency	3.0V			Divided-	-by 8-mode		
	Set the MC	CU power supply voltage sele	ection switch	Divided-	-by 4-mode	6.0MHz	
	to 3V.			Divided-	-by 2-mode		
				Through	mode	4.4MHz	
	5.0V			Divided-	-by 8-mode		
	Set the MC	CU power supply voltage sele	ection switch	Divided-	-by 4-mode		
	to 5V.			Divided-	-by 2-mode	6.0MHz	
				Through	mode		
Clock supply	Main clock	(X _{IN})		Clock m	ounted on emu	ulator	
				(6MHz:	preinstalled, re	eplacable)	
Port emulation	Pin	Output type	Direction	Device			
	P00P03	NT 1 1 1		Input	74HC4050		
	P10P13	N-channel open drain or	I/O	Output	74ALS641A(Nch)		
	D0D5	C-MOS output		1	74VHC126(C-MOS)	
	P20P23	N-channel open drain	I/O	I/O	74HC4066		
Connection to the user system	52-pin 2.54	mm pitch DIP	M34559	Г-РТСА (included)		
	-	mm pitch LQFP 52P6A-A:	M34559	T-PTCB (not included)		



4.2 Differences between the Actual MCU and Emulator

Differences between the actual MCU and emulator are shown below. When debugging the MCU using this product, be careful about the following precautions.

IMPORTANT

Note on Differences between the Actual MCU and Emulator:

- Operations of the emulator system differ from those of actual MCUs as listed below.
 - (1) Initial values of internal resource data of an MCU at power-on
 - With the emulator system, the ROM area at power-on in initialized to 000h (NOP instruction).
 - (2) Voltage drop detection circuit Because the operating voltage of this product is fixed to 3V or 5V, it cannot evaluate any system using a voltage drop detection circuit.
 - (3) Power-on reset You can reset this emulator system by the reset command of the emulator debugger M3T-PD45M, however, this emulator system cannot emulate operation at a power-on reset. Therefore, check the operation at a power-on reset using an actual MCU.
 - RESET# output
 Because an emulation circuit exists in pin RESET#, systems that use RESET output cannot be evaluated.
 - (5) Internal pull-up transistor control Because this product has an emulation circuit present in ports P0, P1 and D0 to D5, you cannot use the MCU's internal pullup transistors. Therefore, the M34559T2-CPE controls on/off of external pullup resistors (68kΩ) by decoding the pullup control register transfer instruction (TPU0A or TPU1A).
 - (6) Unconnected pins

Following pins are not connected to the user system.

- Xin, Xout
- CNVSS
- VDCE

Notes on RESET# Input:

- A low input to pin RESET# from the user system is accepted only when a user program is being executed (when the RUN status LED on the emulator's upper panel is lit).
- You cannot use an SRST instruction. If it is executed, it acts as a NOP instruction

Notes on Operating Clock:

- The clock generated on the OSC board only is usable as the operating clock, and the clocks listed below cannot be used.
- (1) External input clocks on the user system
- (2) Clocks generated by external RC oscillation circuit
- (3) Clocks generated by internal on-chip oscillators
- *1 NOP operation is performed when the CRCK instruction is executed.
- After releasing RESET, a clock on the OSC board is effective for the operating clock in initial state, however, the MR0 register (system clock selection bit) is "1" (on-chip oscillator selected).
- The main clock (f(XIN)) does not stop oscillating even if the system clock is switched to the sub clock f(XCIN).
- Clock input to the MCU is supplied from the oscillator circuit board OCS-2 in the emulator, and cannot be supplied from the oscillator circuit in the user system. If the system clock frequency needs to be changed, alter the circuit on the oscillator circuit board OCS-2 before use. For details, refer to Section 2.3.2, "Selecting Clock Supply" (page 26).



lote on Watchdog Timer: • With this product, the	e watchdog function cannot be used. However, the watchdog timer initialization cycle c
-	ving the waveform at the check pin (WRST) of the emulator. For details, refer to "2
-	alization Cycle Check Pin" (page 29). VDT instruction (stop of the watchdog timer function enabled) cannot be used.
• with this product, Dv	vD1 instruction (stop of the watchdog time) function chaoled) cannot be used.
lotes on Port Electrical Charac	
	g ports are configured with port emulation circuits, electrical characteristics differ from
those of the actual Mo	20.
- P00P03	
- P10P13	
- P20P23	
- D0D5	
- RESET#	
For more details, refe	r to "4.3 Connection Diagram" (page 61).
lotes on Port I/O Timings:	
 Port input timings 	
Port input timings are	the same as with the actual MCUs.
• Port output timings	
	re different from those of the actual MCUs for the following ports that are configured w
port emulation circuit	
- P00P03	
- P10P13	
- D0D5 With the actual MCI	Us shanges essue at the hosinning of the T2 state of an output instruction. With the
	Us, changes occur at the beginning of the T3 state of an output instruction. With the ur at the beginning of the T2 state of the next output instruction. Figure 4.1 shows the point of the term of term o
output timing for this	
	ccluding the indicated above are the same as with the actual MCUs.
Instruction	Port output instruction Next instruction
Cycle	$\leftarrow T1 \rightarrow \leftarrow T2 \rightarrow \leftarrow T3 \rightarrow \leftarrow T1 \rightarrow \leftarrow T2 \rightarrow \leftarrow T3 \rightarrow $
XIX	
Port output of actual MCU	X
Dest subsut of	
Port output of	/\
this product	

with an evaluation MCU.

	IMPO	RTANT	
Note on Operation in Power Dowr			
· · · ·		-	MCUs. Although the actual MCU enters
1	1 0 / 1	6	n of the EPOF and POF instructions, this
· · · ·	· · ·	• • • •	executing the POF instruction. The same
			has no effect on this product.
• Table 4.2 shows the open			in program.
Table 4.2 Operation in pow			1
Program example	Actual MCU	M34559T2-CPE	-
1-1	Yes	Yes	-
1-2	-	Yes	4
1-3	-	-	
Yes: power down state			
-: No power down state			
Program example 1-1 (POF	F and EPOF instruction	<u>s executed)</u>	
RC			
INY			
EPOF			
POF			
:			
Program example 1-2 (Only	y POF instruction exec	<u>uted)</u>	
RC			
INY			
POF			
:			
Program example 1-3 (Only	y EPOF instruction exe	ecuted)	
RC			
INY			
EPOF			

IMPORTANT

Note on Register Operation:

• Tables 4.3 lists the registers that can be operated from the M3T-PD45M. The "Yes" in the table means that the register can be operated; the "No" means that the register can not be operated.

Table 4.3 Registers that can be operated when debugging 4559Group MCUs

Yes Yes Yes Yes Yes Yes Yes Yes	Yes Yes Yes Yes Yes Yes Yes Yes	W4 L1 L2 L3 C1 C2 C3 PU0	Yes Yes No No No No Yes	Yes Yes Yes Yes Yes Yes
Yes Yes Yes Yes Yes Yes	Yes Yes Yes Yes Yes	L2 L3 C1 C2 C3	No No No No	Yes Yes Yes Yes Yes
Yes Yes Yes Yes Yes	Yes Yes Yes Yes	L3 C1 C2 C3	No No No No	Yes Yes Yes Yes
Yes Yes Yes Yes	Yes Yes Yes	C1 C2 C3	No No No	Yes Yes Yes
Yes Yes Yes	Yes Yes	C2 C3	No No	Yes Yes
Yes Yes	Yes	C3	No	Yes
Yes			-	
	Yes	PU0	Yes	
				Yes
Yes	Yes	PU1	Yes	Yes
Yes	No	PU2	Yes	Yes
Yes	Yes	PU3	Yes	Yes
Yes	Yes	FR0	No	Yes
Yes	Yes	FR1	No	Yes
Yes	Yes	FR2	No	Yes
No	Yes	FR3	No	Yes
No	Yes	К0	Yes	Yes
Yes	Yes	K1	Yes	Yes
Yes	Yes	K2	Yes	Yes
Yes	Yes	К3	Yes	Yes
	Yes Yes Yes No No Yes Yes Yes	YesYesYesYesYesYesYesYesYesYesNoYesYesYesYesYesYesYesYesYesYesYes	YesYesPU3YesYesFR0YesYesFR1YesYesFR2NoYesFR3NoYesK0YesYesK1YesYesK2YesYesK3	YesYesPU3YesYesYesPU3YesYesYesFR0NoYesYesFR1NoYesYesFR2NoNoYesFR3NoNoYesK0YesYesYesK1YesYesYesK2YesYesYesK3Yes

Note on Final Evaluation:

• Be sure to evaluate your system with an evaluation MCU.

4.3 Connection Diagram

Figure 4.2 shows a part of the connection diagram of the M34559T2-CPE. This connection diagram mainly shows the interface section. The circuits not connected to the user system such as the emulator's control system are omitted. The signals not shown in Figure 4.2 connect the evaluation MCU and the user system directly. Tables 4.4, 4.5, 4.6, 4.7, 4.8 and 4.9 show IC electric characteristics of this product for reference purposes.

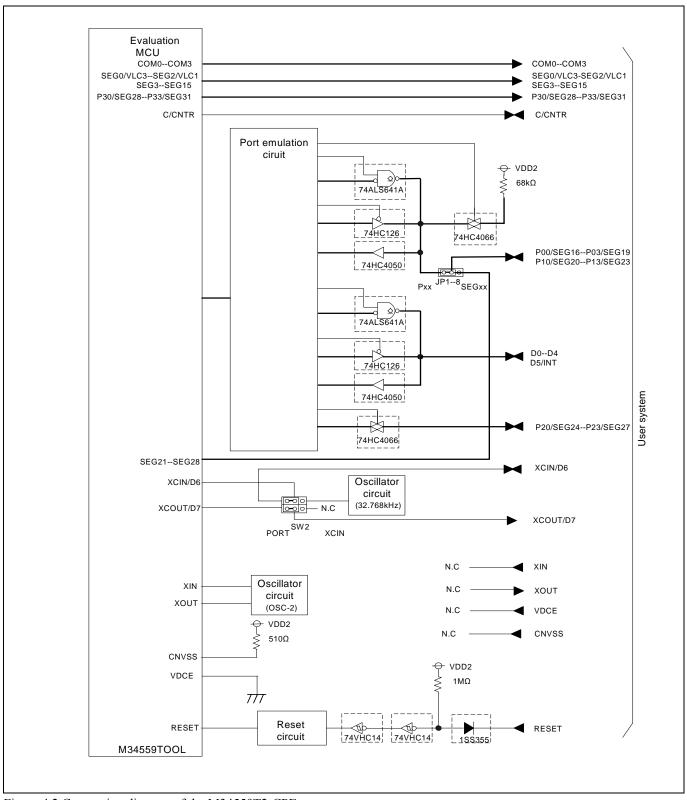


Figure 4.2 Connection diagram of the M34559T2-CPE

RENESAS

Table 4.4 Electrical characteristics of the 74HC4050

Signal	Item	Condition	Standar	Unit	
Signai	Itelli	Condition	Min.	Max.	Onit
VIH	"H" level threshold voltage	Vcc=2.0V	1.50	-	
		Vcc=4.5V	3.15	-	
		Vcc=6.0V	4.20	-	V
	"L" level threshold voltage	Vcc=2.0V	-	0.50	v
VIL		Vcc=4.5V	-	1.35	
		Vcc=6.0V	-	1.80	

Table 4.5 Electrical characteristics of the 74ALS641A

Signal	Itom	Condition	Standard values			Unit
Signai	Item	Condition	Min.	Standard	Max.	Unit
VOL	"L" output voltage	Vcc=4.5V, IoL=24mA	-	0.35	0.5	V
Iol	"L" output current		-	-	24	mA

Table 4.6 Electrical characteristics of the 74VHC126

Signal	Item	Condition	Standard values			Unit
Signal Item		Condition	Min.	Standard	Max.	Ullit
V7 (4112)	"I" autout voltage	Vcc=3.0V, IoH=-4mA	2.58	-	-	
Voh	"H" output voltage	Vcc=4.5V, IoH=-8mA	3.94	-	-	V
Vol "L" output	(⁴ I ²² automatical la sa	Vcc=3.0V, IoL=4mA	-	-	0.36	v
	"L" output voltage	Vcc=4.5V, IoL=8mA	-	-	0.36	

Table 4.7 Electrical characteristics of the 74HC4066

Symbol	Itom	Condition	St	Unit			
Symbol	Item	Condition	Min.	Standard	Max.	Unit	
Ron	ON resistor	Vcc=4.5V	-	96	170	0	
ΔR on	ON resistor difference	Vcc=4.5V	-	10	-	Ω	
IOFF	Leak current (Off)	Vcc=12.0V	-	-	±100		
Iız	Leak current (On, output: open)	Vcc=12.0V	-	-	±100	nA	


Table 4.8 Electrical characteristics of the 74VHC14


Signal	Item	Condition	Standard	Unit	
Signai	item	Condition	Min.	Max.	Unit
		Vcc=3.0V	-	2.20	
V_p	"H" level threshold voltage	Vcc=4.5V	-	3.15	
		Vcc=5.5V	-	3.85	
	"L" level threshold voltage	Vcc=3.0V	0.90	-	V
VN		Vcc=4.5V	1.35	-	
		Vcc=5.5V	1.65	-	
VH	Hysteresis voltage	Vcc=3.0V	0.30	1.20	
		Vcc=4.5V	0.40	1.40	
		Vcc=5.5V	0.50	1.60	

M34559T2-CPE User's Manual

4.4 External Dimensions

 4.4.1 External Dimensions of the Compact Emulator Figure 4.3 shows external dimensions of the M34559T2-CPE.

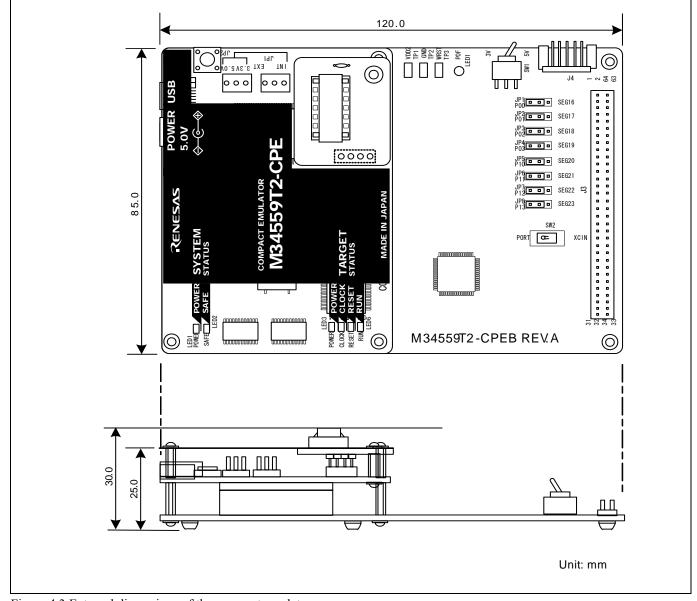



4.4.2 External Dimensions of the M34552T-CPEA

Figures 4.4 and 4.5 show external dimensions of the M34559T-PTCA and M34559T2- PTCB.

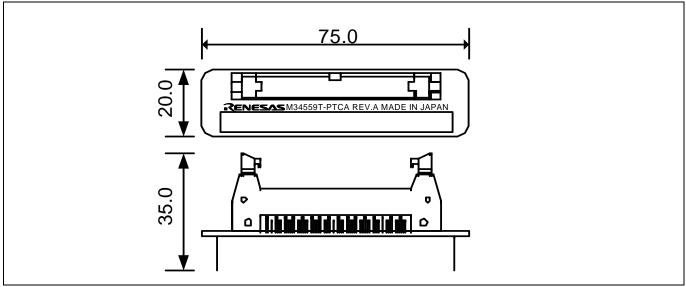


Figure 4.4 External dimensions of the M34559T-PTCA

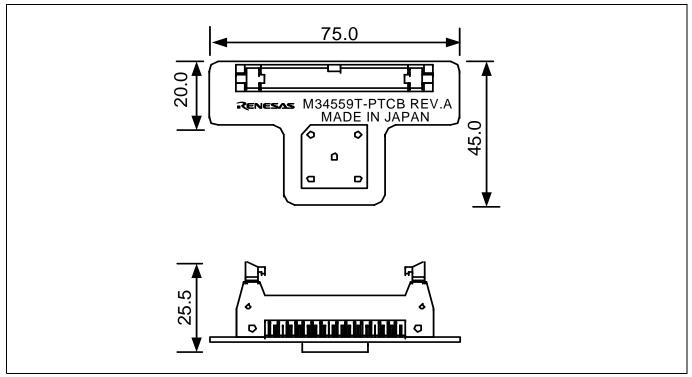


Figure 4.5 External dimensions of the c M34559T2-PTCB

4.5 Notes on Using This Product

Notes on using this product are listed below. When debugging the MCU using this product, be careful about the following precautions.

IMPORTANT

Notes on the Self-check:

- If the self-check does not result normally (excluding target status errors), the emulator may be damaged. Then contact your local distributor.
- Run the self-check with the user system not connected.

Note on Quitting the Emulator Debugger:

• To restart the emulator debugger, always shut power to the emulator module off once and then on again.

Notes on the User System (Power Supply, Order of Powering On):

- This emulator cannot supply the power to the user system. Therefore design your system so that the user system is powered separately.
- The voltage of the user system should be as follows.
 - 3.0V ± 5 % or 5.0V ± 5 %
- Do not change the voltage of the user system after turning on the power.
- Before powering on your emulator system, check that the host machine, the emulator, the converter board and user system are all connected correctly. Next, turn on the power to each equipment following the procedure below.
 - (1) Turn ON/OFF the user system and the emulator as simultaneously as possible.
 - (2) When the emulator debugger starts up, check the target status LEDs on the emulator to see if this product is ready to operate.

Is the power supplied? Check that target status LED (POWER) is ON.*1

Is the clock supplied? Check that target status LED (CLOCK) is ON.

*1 When the user system is not connected the target status LED (POWER) does not light.

IMPORTANT
Note on the Power Down State:
• Although this emulator allows you to execute a program using POF and POF2 instructions, execution of such programs is subject to the following limitations:
• The POF and POF2 instructions cannot be stepped and over-stepped. Therefore, do not attempt to step and step- over the POF and POF2 instructions.
• No events (hardware breaks and trace points) can be set in execution cycles of the POF and POF2 instructions.
 The events set in execution cycles of the POF and POF2 instructions, if any, have no effect. During power down state, no commands of the emulator debugger M3T-PD45M except for RESET can be
executed. Exit power down state by applying key-on wakeup input or reset input before executing the commands.
Note on the MCU Status While the Program is Idle:
• The MCU status while the program is idle show below.
DI insertion mode: DI insertion mode is executed while the user program has stopped.
Clock stop mode: Clock stops while the user program has stopped. *In the clock stop mode, the timer and other internal peripheral functions are stopped. However, if the internal
RAM reference/setting, Register reference/setting, step execution, etc. are performed, a clock is supplied.
 Note on a Break Operation When Skipping Instructions In cases when the next instruction is skipped by a skip instruction, if a break operation (hardware, software or forcible break) in the skipped instruction is attempted, no break occurs. If a skip and a break occur at the same time, the cause of the break is cleared and the program continues running until the next cause of break occurs. Example: If a break operation is attempted when executing an instruction at address 0002h, the intended break is canceled and the program continues running. [ADDR] [CODE] 0000 RC 0001 SZC 0002 TABP 1 : Skipped instruction 0003 TAM 0004 BL 0004 : The program continues to execute instruction without breaking.
 Note on a Break Operation in a Train of Successive Instructions: The program does not break in a train of successive instructions. If a break operation (hardware, software or forcible break) is attempted in a train of successive instructions, the intended break occurs in an instruction at which the successive instructions ended. An example is shown below. Example: If a break operation is attempted while executing the instructions at addresses 00000003h, the break occurs at address 0004h. [ADDR] [CODE] 0000 LA 0 0001 LA 1 0002 LA 2 0003 LA 3 0004 NOP < A break occurs at this address.

5. Troubleshooting

This chapter describes how to troubleshoot when this product does not work properly.

5.1 Flowchart to Remedy the Troubles

Figure 5.1 shows the flowchart to remedy the troubles from when power to the emulator is activated until the emulator debugger starts up. Check this while the user system is disconnected. For the latest FAQs visit the Renesas Tools Homepage.

http://www.renesas.com/en/tools

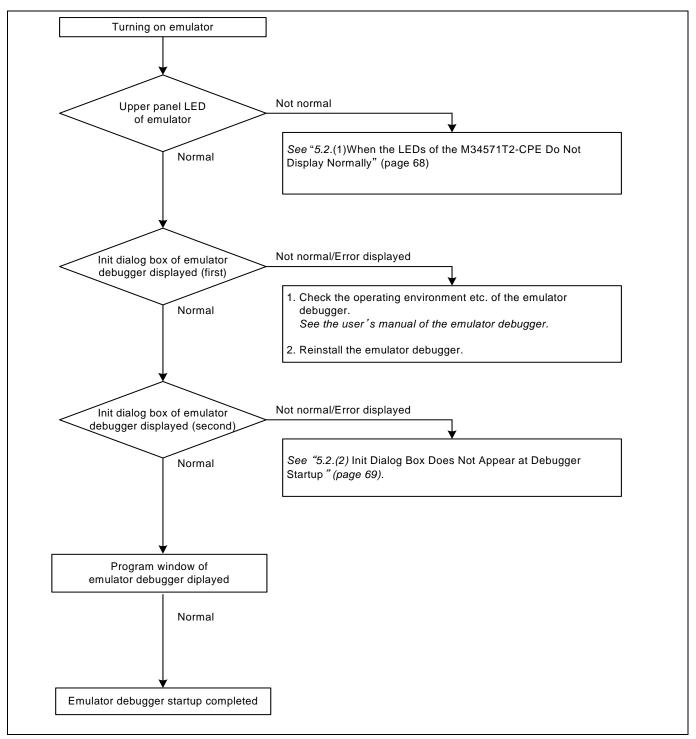


Figure 5.1 Flowchart to remedy the troubles



5.2 When the Emulator Debugger Does Not Start Up Properly

(1) When the LEDs of the M34559T2-CPE Do Not Display Normally

Table 5.1 Errors LEDs show and their checkpoints 1

Error	Connection to the user system	Checkpoint
System Status POWER LED does not light up.	-	Check that the power cable is connected. See "2.6 Connecting the Power Supply for the Emulator" (page 30).

Table 5.2 Errors LEDs show and their checkpoints 2

Target Status LED display			splay		
- Einking OFF		Connection to the user system	Problem & Remedy		
POWER	CLOCK	RESET	RUN		
				Connected	Check that power (Vcc) is properly supplied to the user system and that the user system is properly grounded.
				Disconnected	The emulator system is working properly. Target Status POWER LED does not light up when the user system is disconnected
				-	The emulator system is not working properly. - Check that power is supplied to the emulator.
				-	- The emulator may be damaged. Contact your local distributor.
				-	
				-	 A clock is not supplied to the emulator. Check that the oscillator circuit board (OSC-2) is attached. Check that the oscillator on the oscillator circuit board (OSC-2) or the oscillation module is oscillating properly. Refer to "2.3.2 Selecting Clock Supply" (page 25)
				-	 The MCU cannot be controlled. Check that the MCU is properly attached. Check that the oscillation frequency of the oscillator circuit board (OSC-2) is within the specified range.
	Ot	hers		-	The emulator system is not working properly. - The emulator may be damaged. Contact your local distributor.

(2) Init Dialog Box Does Not Appear at Debugger Startup

able 5.3 Checkpoints of errors at debugger startup						
Error	Checkpoint					
Communication error occurred.	- Check the target status LED display. If the LED is blinking, the emulator did not					
Data was not sent to the target.	start up normally.					
	See "2.8.4 LED Display When the Emulator Starts Up Normally" (page 34).					
	- Check that the USB cable is connected properly.					
	See "2.7 Connecting the Host Machine " (page 32).					
	- USB device driver has been installed before the emulator debugger start up?					

	See "2.2.2 Installing the USB Device Driver" (page 22)
Not compact emulator.	Check that an emulator other than the compact emulator (such as PC4701, PC7501) is
	not connected.

(3) Program Window of the Debugger Does Not Appear

Table 5.4 Checkpoints of errors at debugger startup (2/2)

Error	Checkpoint
The PD45M version and the	The firmware already installed in the PD45M is older in version than that installed
version of firmware installed in the	inside the emulator.
target do not correspond to each	- Download the latest firmware from the Web and install it securely.
other.	



5.3 How to Request for Support

After checking the items in "5 Troubleshooting", fill in the text file which is downloaded from the following URL, then send the information to your local distributor.

)

http://tool-support.renesas.com/eng/toolnews/registration/support.txt

For prompt response, please specify the following information:

- (1) Operating environment
 - Operating voltage: [V]
 - Operating frequency:
 - User system:

[MHz] Connected/Disconnected

- (2) Product information
 - Target MCU:
 - Emulator:
- (3) Condition
 - The emulator debugger starts up/does not start up
 - The error is detected/not detected in the self-check
 - Frequency of errors: always/frequency (
- (4) Problem



6. Maintenance and Guarantee

This chapter describes how to maintenance, repair provisions and how to request for repair.

6.1 User Registration

When you purchase our product, be sure register as a user. For user registration, refer to "User registration" (page 11) of this user's manual.

6.2 Maintenance

- (1) If dust or dirt collects on any equipment of your emulation system, wipe it off with a dry soft cloth. Do not use thinner or other solvents because these chemicals can cause the equipment's surface coating to separate.
- (2) When you do not use this product for a long period, for safety purposes, disconnect the power cable from the power supply.

6.3 Guarantee

If your product becomes faulty within one year after its purchase while being used under good conditions by observing "IMPORTANT" and "Precautions for Safety" described in this user's manual, we will repair or replace your faulty product free of charge. Note, however, that if your product's fault is raised by any one of the following causes, we will repair it or replace it with new one with extra-charge:

- Misuse, abuse, or use under extraordinary conditions
- Unauthorized repair, remodeling, maintenance, and so on
- Inadequate user's system or misuse of it
- Fires, earthquakes, and other unexpected disasters

In the above cases, contact your local distributor. If your product is being leased, consult the leasing company or the owner.



6.4 Repair Provisions

(1) Repair with extra-charge

The products elapsed more than one year after purchase can be repaired with extra-charge.

(2) Replacement with extra-charge

If your product's fault falls in any of the following categories, the fault will be corrected by replacing the entire product instead of repair, or you will be advised to purchase new one, depending on the severity of the fault.

- Faulty or broken mechanical portions
- Flaw, separation, or rust in coated or plated portions
- Flaw or cracks in plastic portions
- Faults or breakage caused by improper use or unauthorized repair or modification
- Heavily damaged electric circuits due to overvoltage, overcurrent or shorting of power supply
- Cracks in the printed circuit board or burnt-down patterns
- Wide range of faults that makes replacement less expensive than repair
- Unlocatable or unidentified faults

(3) Expiration of the repair period

When a period of one year elapses after the model was dropped from production, repairing products of the model may become impossible.

(4) Transportation fees at sending your product for repair

Please send your product to us for repair at your expense.

6.5 How to Make Request for Repair

Fill in the Repair Request Sheet included with this product, then send it along with this product for repair to your local distributor. Make sure that information in the Repair Request Sheet is written in as much detail as possible to facilitate repair.

Note on Transporting the Product:

• When sending your product for repair, use the packing box and cushion material supplied with this product when delivered to you and specify handling caution for it to be handled as precision equipment. If packing of your product is not complete, it may be damaged during transportation. When you pack your product in a bag, make sure to use conductive polyvinyl supplied with this product (usually a blue bag). When you use other bags, they may cause a trouble on your product because of static electricity.

Compact Emulator for 4559 Group M34559T2-CPE User's Manual Publication Date: Apr. 25, 2006 Rev.1.00 Sales Strategic Planning Div. Published by: Renesas Technology Corp.

Renesas Solutions Corp.

Edited by:

© 2006. Renesas Technology Corp. and Renesas Solutions Corp., All rights reserved. Printed in Japan.

Microcomputer Tool Development Department

M34559T2-CPE User's Manual



Renesas Electronics Corporation 1753, Shimonumabe, Nakahara-ku, Kawasaki-shi, Kanagawa 211-8668 Japan