

Thank you for purchasing the 5V/Universal version of the Tsi382A evaluation board.


To assist with your testing of the board's features and functions, we have included a copy of the *Tsi382A Evaluation Board User Manual*. For more Tsi382A support resources, please see the Support section of the Tundra website.

If you have any technical questions about the Tsi382A evaluation board, please submit a Technical Support Request at [www.tundra.com/support/technical-support-request](http://www.tundra.com/support/technical-support-request).

## Important Instructions

1. This evaluation board is configured for 5V or Universal PCI plug-in cards only.


The plug-in cards can only be connected with their faceplate oriented the same way as the evaluation board faceplate (see the Correct diagram below). Since the evaluation board connectors are keyed for 3.3V cards, a keying adaptor is required when using a 5V keyed card.

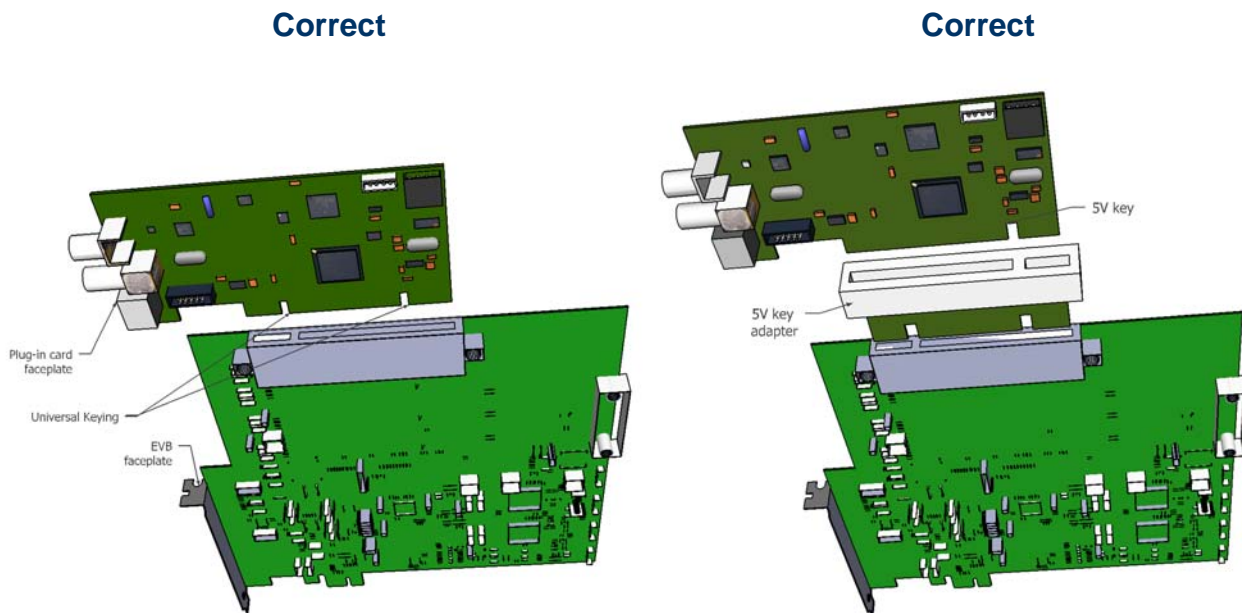

- Do not use a 3.3V keyed card on the evaluation board. This board has been modified for 5V operation (see the following diagram).

If you need to use the evaluation board for 3.3V keyed plug-in cards, please submit a Technical Support Request at [www.tundra.com/support/technical-support-request](http://www.tundra.com/support/technical-support-request).

**Incorrect**

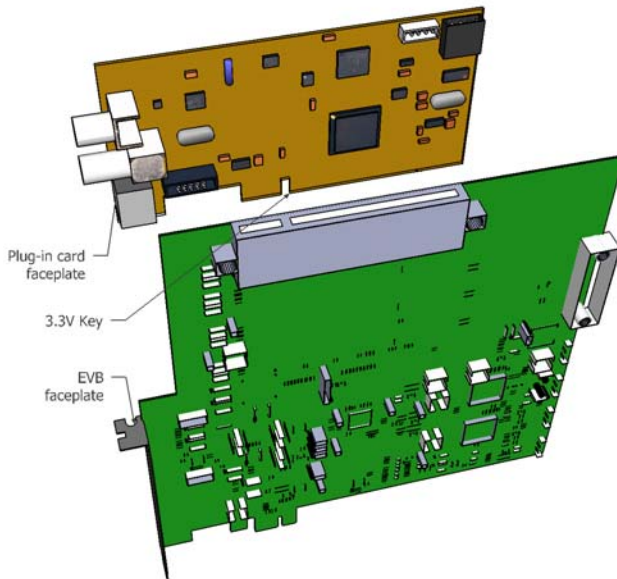

**Incorrect**

