Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: http://www.renesas.com

April 1st, 2010 Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (http://www.renesas.com)

Send any inquiries to http://www.renesas.com/inquiry.

Notice


- 1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
- Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
- 4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
- 5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
- 6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
- 7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anticrime systems; safety equipment; and medical equipment not specifically designed for life support.
 - "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
- 8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majorityowned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.



M3T-FLX-DMY613

Converter Board for Connecting M16C/60 Series 80-pin 0.65mm pitch QFP

User's Manual

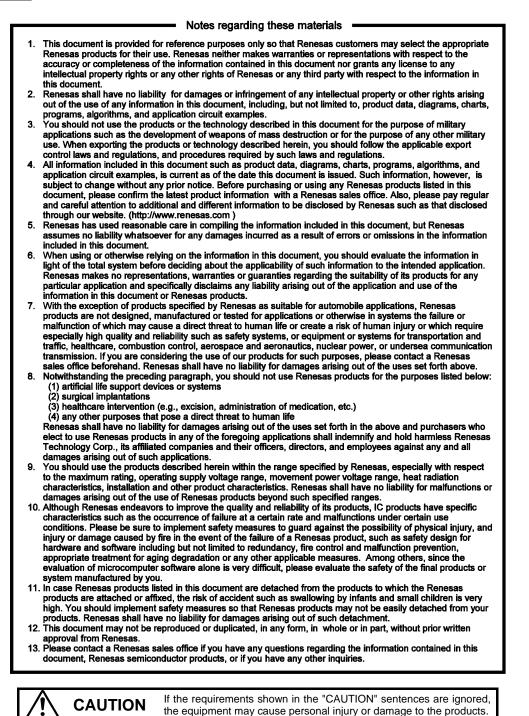

Renesas Tools Homepage http://www.renesas.com/tools

Rev.2.00 Aug. 01, 2007 REJ10J0343-0200

1. Description

The M3T-FLX-DMY613 is used to convert the emulation pod for M16C/60 Series MCUs to the pin assignments of 80-pin 0.65mm pitch QFP (PRQP0080JA-A) to connect the FLX100 and M3T-DUMMY80S.

2. Package Components (see Figure 1)

(1) M3T-FLX-DMY613 converter board

(2) M3T-FLX-DMY613 User's Manual (this manual)

3. Specifications

Table 1 Specifications

Item	Description			
Applicable MCU	M16C/60 Series			
Package	PRQP0080JA-A (formerly: 80P6S-A) (80-pin 0.65mm pitch QFP)			
Insertion/removal iterations of connector	20 times guaranteed			

4. Application (see Figure 2)

Mount the DUMMY80S to the socket on the target. On top of it, mount the socket frame and M3T-FLX-DMY613 in that order. Then connect the emulation pod to the connector provided at the top of the M3T-FLX-DMY613.

5. Connection Procedure (see Figure 2)

- (1) Mount the socket on the target.
- (2) Mount the M3T-DUMMY80S on the socket.
- (3) Attach the socket frame to the socket.
- (4) Connect the emulation pod for M16C/60 Series MCUs and the M3T-FLX-DMY613.
- (5) Connect the DUMMY80S and the M3T-FLX-DMY613.

6. External Dimensions of M3T-FLX-DMY613

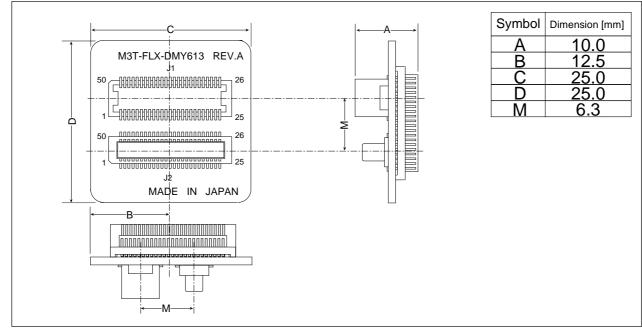


Figure 3 External dimensions of M3T-FLX-DMY613

 


Figure 1 Package components of M3T-FLX-DMY613

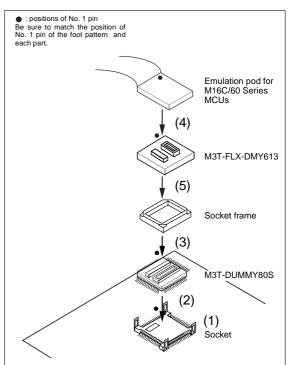


Figure 2 Usage of M3T-FLX-DMY613

7. Precautions

IMPORTANT

Notes for This Product:

- We cannot accept any request for repair.
- For inquiries about the product or the contents of this manual, contact your local distributor.

Renesas Tools Homepage http://www.renesas.com/tools

8. Correspondence of Connectors J1, J2, J3 and J4

Table 2 lists the correspondence of connectors J1, J2, J3 and J4.

Table 2. Correspondence of connectors 31, 32, 33 and 34									
J1, J2 connector pin No.	J3, J4 connector pin No.	J1, J2 connector pin No.	J3, J4 connector pin No.	J1, J2 connector pin No.	J3, J4 connector pin No.	J1, J2 connector pin No.	J3, J4 connector pin No.		
J1-1	NC	J1-26	J3-22	J2-1	J4-2	J2-26	J4-22		
J1-2	NC	J1-27	J3-23	J2-2	J4-4	J2-27	J4-23		
J1-3	NC	J1-28	J3-24	J2-3	NC	J2-28	J4-24		
J1-4	J3-40	J1-29	J3-25	J2-4	J4-5	J2-29	J4-25		
J1-5	J3-1	J1-30	J3-26	J2-5	J4-6	J2-30	J4-26		
J1-6	J3-2	J1-31	J3-27	J2-6	J4-6	J2-31	J4-27		
J1-7	J3-3	J1-32	J3-28	J2-7	J4-7	J2-32	J4-28		
J1-8	J3-4	J1-33	J3-29	J2-8	J4-8	J2-33	J4-29		
J1-9	J3-5	J1-34	J3-30	J2-9	J4-9	J2-34	J4-30		
J1-10	J3-6	J1-35	J4-13	J2-10	J4-10	J2-35	J3-11		
J1-11	J3-7	J1-36	J3-31	J2-11	J4-11	J2-36	J3-12		
J1-12	J3-8	J1-37	NC	J2-12	J4-12	J2-37	J3-13		
J1-13	J3-9	J1-38	<u>J3-32</u>	J2-13	J4-13	J2-38	J3-10		
J1-14	J3-14	J1-39	<u>J3-33</u>	J2-14	J4-14	J2-39	J4-31		
J1-15	J3-15	J1-40	J3-34	J2-15	J4-15	J2-40	J4-32		
J1-16	J3-16	J1-41	<u>J3-35</u>	J2-16	J4-16	J2-41	J4-33		
J1-17	J3-17	J1-42	J3-36	J2-17	J4-17	J2-42	J4-34		
J1-18	<u>J3-18</u>	J1-43	<u>J3-37</u>	J2-18	J4-18	J2-43	J4-35		
J1-19	<u>J3-19</u>	J1-44	<u>J3-38</u>	J2-19	J4-19	J2-44	J4-36		
J1-20	NC	J1-45	J3-39	J2-20	J4-20	J2-45	J4-37		
J1-21	NC	J1-46	NC	J2-21	J4-21	J2-46	J4-38		
J1-22	NC	J1-47	NC	J2-22	NC	J2-47	J4-39		
J1-23	NC	J1-48	NC	J2-23	NC	J2-48	J4-40		
J1-24	J3-20	J1-49	NC	J2-24	NC	J2-49	J4-3		
J1-25	J3-21	J1-50	NC	J2-25	NC	J2-50	J4-1		

Table 2 Correspondence of connectors J1, J2, J3 and J4

(NC: No connection)

Note:

Some part numbers in this user's manual can be referred to as the following.

In this manual Actual part number

FLX-DMY613 -> M3T-FLX-DMY613 DUMMY80S -> M3T-DUMMY80S