

Renesas Starter Kit for RL78/G13 Usage Note

Errors have been found in the Renesas Starter Kit for RL78/G13 Software Help Manual included in this product as below. Please replace the applicable page of the attached manual with the following corrections to refer to the manual.

■ Applicable document (1)

Renesas Starter Kit Software Help Manual (CubeSuite+) (R20UT0746EG0100)

■ Applicable page and Corrections (1)

Page	Item	Wrong	Correct
17	5.7.1 Description	SCLA0 [JA1, pin 26] <---> Device SDA CON_5V [JA1, pin 25] <---> Device Vcc 0v [JA1, pin 25] <---> Device Vss	SCLA0 [JA1, pin 26] <---> Device SCL CON_5V [JA1, pin 1] <---> Device Vcc 0v [JA1, pin 2] <---> Device Vss
18, 19	5.8.2 IIC Slave Commands	SCLA0 [JA1, pin 26] <---> Device SDA CON_5V [JA1, pin 25] <---> Device Vcc 0v [JA1, pin 25] <---> Device Vss	SCLA0 [JA1, pin 26] <---> Device SCL CON_5V [JA1, pin 1] <---> Device Vcc 0v [JA1, pin 2] <---> Device Vss

■ Applicable document (2)

Renesas Starter Kit Software Help Manual (IAR Embedded Workbench) (R20UT0747EG0100)

■ Applicable page and Corrections (2)

Page	Item	Wrong	Correct
17	5.7.1 Description	SCLA0 [JA1, pin 26] <---> Device SDA CON_5V [JA1, pin 25] <---> Device Vcc 0v [JA1, pin 25] <---> Device Vss	SCLA0 [JA1, pin 26] <---> Device SCL CON_5V [JA1, pin 1] <---> Device Vcc 0v [JA1, pin 2] <---> Device Vss
18, 19	5.8.2 IIC Slave Commands	SCLA0 [JA1, pin 26] <---> Device SDA CON_5V [JA1, pin 25] <---> Device Vcc 0v [JA1, pin 25] <---> Device Vss	SCLA0 [JA1, pin 26] <---> Device SCL CON_5V [JA1, pin 1] <---> Device Vcc 0v [JA1, pin 2] <---> Device Vss