

To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: “Standard”, “High Quality”, and “Specific”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as “Specific” without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as “Specific” or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is “Standard” unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - “Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - “High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
 - “Specific”: Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

Precautions on Using the Tiny/SLP E7 Emulator

Please note the followings when using the Tiny/SLP E7 emulator.

1 Setup Tool

- Disconnect the USB cable only when an instruction is displayed on the screen. Incorrect operation will damage the emulator product.
- Activating the setup tool starts 'Plug and Play' of the USB driver for the setup tool. The driver is provided in the directory \Drivers\USB\® operating system in use> of the CD. Follow the procedure appeared on the screen to select the driver.
- Steps (5) and (6) of the procedure in section 3.8, Setting up the E7 Emulator, in the Debugger Part of the Tiny/SLP E7 Emulator User's Manual are listed reversely. Note that the dialog box mentioned in (6) is displayed first and then that in (5), in order.
- HEW cannot be activated when the switch on the emulator is shifted to 0. Shift the switch to 1 and disconnect the USB cable before activation.

2 How to Start up the Emulator

The number of emulator name(s) displayed in the [New Project - Step 7] dialog box is two when [H8S,H8/300] has been selected and one when [M16C] has been selected as the CPU type in the [New Project Workspace] dialog box opened for creation of a new project.

Select [Tiny/SLP E7 SYSTEM 300H] for the H8/300H Tiny or H8/300H SLP series, [Tiny/SLP E7 SYSTEM 300L] for the H8/300L SLP series, or [R8C E7 SYSTEM] for the R8C/Tiny series.

3 Tutorial

The folder in which the tutorial program is to be stored depends on the device in use.

When emulating an H8/300H Tiny or H8/300H SLP-series device:

<Windows drive>\Workspace\E7\H8\Tutorial

When emulating an H8/36049F device:

< Windows drive>\Workspace\E7\H8\TutorialADV

When emulating an H8/300L SLP-series device:

< Windows drive>\Workspace\E7\H8\TutorialSLP

When emulating an R8C/Tiny-series device:

< Windows drive>\Workspace\E7\E7R8C\TutorialR8C

Address values mentioned in the tutorial section of the Tiny/SLP E7 Emulator User's Manual are those in cases where an H8/300H Tiny-series MCU is being emulated. Note that the address values will be different if you are emulating an MCU of another series. In such cases, replace the values so that they will correspond to the tutorial program.

4 Note on Use of the H8/36902F and H8/36912F

The H8/36902F and H8/36912F have an on-chip oscillator. If the flash memory area is rewritten during debugging, the on-chip oscillator will be used even if an external clock is in use. To use these devices, select 8 MHz as the frequency value when the emulator is being connected.

5 Debugging while the R8C/Tiny is in Use

- (a) If stepping is executed on a "pushc FLG" instruction, the IPL (interrupt priority level) of FLG restored by "popc FLG" will be 0.
- (b) If stepping is executed on an "LDC src,FLG" instruction, the I flag may not be cleared.
- (c) If stepping is executed on an "STC FLG,dest" instruction, the content of bit 6 of the FLG register will be cleared and replaced with the content of bit 1. This value will be saved.

Do not perform the following operations on the instructions mentioned above:

- Setting breakpoints (hardware or software breakpoints)
- Step-in, step-over, and step-out execution

6 Note on Go to cursor Function

While the R8C/Tiny is in use, the [Go to cursor] function is realized by event breaks. All event breakpoints being set are thus invalid if [Go to cursor] is executed. Note, however, that all PC breakpoints remain valid.

7 Note on Use of the H8/36077F

The H8/36077F have an on-chip oscillator. If the flash memory area is rewritten during debugging, the on-chip oscillator will be used even if an external clock is in use. To use these devices, select 10 MHz as the frequency value when the emulator is being connected.