

e² studio 2020-07 (R20200710-0958)

Release Note

R20UT4817EG0100 Rev.1.00 July. 6th, 2020

Introduction

This document outlines the device support, new features added in 2020-07, fixed issues and open issues in e² studio 2020-07.

Contents

| 1. Product Information | |
|---|----|
| 1.1 Supported Operating Systems | |
| 1.1.1 64-bit product version | |
| 1.2 Supported Toolchains | |
| 2. Device Support | 4 |
| 2.1 Project Generator Support | 4 |
| 2.2 Code Generator Support | |
| 2.3 Smart Configurator Support | 14 |
| 3. Smart Manual Support | 16 |
| 4. What is new in 2020-07? | 17 |
| 5. Useful workarounds and information for 2020-07 | 22 |
| 6. Open Issues in 2020-07 | 33 |
| 7. Appendix | 34 |
| 7.1 Website and Support | 34 |
| 7.2 Web Access and Privacy Policy | 34 |

1. Product Information

1.1 Supported Operating Systems

These operating systems are officially supported by e² studio:

- Windows 8.1 64-bit
- Windows 10 64-bit

e² studio 2020-07 now runs on Java 11 & does not support older Java versions.

1.1.1 64-bit product version

Please note that 2020-04 and 2020-07 are the 64-bit product build versions of the tool.

We would like to state that the workspaces and projects from 7.x versions of e^2 studio are fully compatible with 2020-07.

When opening a workspace from 7.x you will be shown a warning for and this is standard Eclipse behavior. This is shown because some metadata in the workspace can change between versions so a workspace will not always work with older versions of the tool.

- Projects are forward & backward compatible,
- Workspaces work when upgrading but it is not guaranteed to 100% work if you return the workspace to 7.8.

The switch to 64-bit has unfortunately meant that some functions have now been deprecated from the tooling due to this move for the base platform. The removed functionality is listed below:

- HEW Project Convertor
- Renesas RTOS views
- Mylyn integration
- Subversion integration

If you need this functionality then please remain on e² studio 7.8.

In addition, this installer no longer supports RZ/G and Synergy families of devices. Both families are available in the e² studio 7.8 installer. Synergy will be supported by the Synergy e² studio platform installer into the future which is the best way to install this family and ensures e² studio and SSP software compatibility.

The RZ/G family is available in the 7.8 installer and the Linux beta version. Linux tools are now only available in the Linux host beta version of e^2 studio.



1.2 Supported Toolchains

The following toolchains are supported in e² studio 2020-07.

| | | Renesas | GNU Arm Embedded (*2) | Renesas GCC/ GNURZ/ARM (*3) | IAR (*4) | Green Hills (*5) |
|--------|-------------|-------------|--------------------------|--------------------------------|----------|---------------------|
| | RL78 | Yes (CC-RL) | No | Yes | Yes | No |
| Family | RX | Yes (CC-RX) | No | Yes | Yes | No |
| | RH850 | No | No | No | Yes | Yes |
| Device | RZ/ARM | No | No (*1) | Yes | Yes | No |
| | Synergy/ARM | No | Yes | No | Yes | No |
| | RA/ARM | No | Yes | No | Yes | No |
| | RE/ARM | No | Yes | No | Yes | No |

Note:

^{*2:} The GCC toolchains for RZ Family and Renesas Synergy™ are distributed via
Arm Developer at https://developer.arm.com/open-source/gnu-toolchain/gnu-rm
or Launchpad.net at: https://launchpad.net/gcc-arm-embedded. They are also available using the "Additional components" page in the e² studio installer. Supported ARM GCC versions vary from device family to device family. Please see the following table for more information:

| Device Family | GCC distribution and version |
|---------------|------------------------------|
| RZ/A1, A2 | 6.3.1 (2017 q2) |
| RZ/G1, G2 | Linaro 7.3.1 |
| Synergy | SSP 1.6.x: 7.2.1 |
| | SSP 1.7.x: 8.2.1 |
| RA | FSP 1.1.0: 9.3.1 |

^{*3:} Legacy GNUARM toolchains are available from https://gcc-renesas.com/. In addition, the latest RX and RL78 Renesas GCC toolchains are available from this website.

^{*1:} Project converter is available to convert from GNUARM RZ/none to GNU ARM Embedded toolchain.

^{*4:} The IAR toolchain plugins are available via the "Help"->" IAR Embedded Workbench plugin manager" menu in e² studio. These Eclipse plugins are provided by IAR and are not supported by Renesas.

^{*5:} The Green Hills toolchain plugins are available within the e² studio product. These plugins are provided by Green Hills and are not supported by Renesas.

2. Device Support

2.1 Project Generator Support

Note: The Renesas SH device family is no longer supported in e^2 studio.

| Family | Group | Devices |
|--------|-------------|---|
| EC-1 | EC-1 | R9A06G043 |
| | RA2A1 | R7FA2A1AB2CBT, R7FA2A1AB3CFJ, R7FA2A1AB3CFM, |
| | - KAZA I | R7FA2A1AB3CNE, R7FA2A1AB3CNF |
| | 5444 | R7FA4M1AB2CLJ, R7FA4M1AB3CFL, R7FA4M1AB3CFM, |
| | RA4M1 | R7FA4M1AB3CFP, R7FA4M1AB3CNB, R7FA4M1AB3CNE, R7FA4M1AB3CNF |
| | | R7FA6M1AD2CLJ, R7FA6M1AD3CFM, R7FA6M1AD3CFP, |
| | RA6M1 | R7FA6M1AD3CNB |
| RA | RA6M2 | R7FA6M2AD2CLK, R7FA6M2AD3CFB, R7FA6M2AD3CFP, |
| | TVAOIVIZ | R7FA6M2AF2CLK, R7FA6M2AF3CFB, R7FA6M2AF3CFP |
| | | R7FA6M3AF2CBG, R7FA6M3AF2CLK, R7FA6M3AF3CFB, |
| | RA6M3 | R7FA6M3AF3CFC, R7FA6M3AF3CFP, R7FA6M3AH2CBG, R7FA6M3AH2CLK, R7FA6M3AH3CFB, R7FA6M3AH3CFC, |
| | | R7FA6M3AH3CFP |
| | RA4W1 | R7FA4W1AD2CNG |
| | RE01 1500KB | R7F0E014D2CFB, R7F0E014D2CFP, R7F0E015D2CFB, |
| | | R7F0E015D2CFP, R7F0E016D2DBN, R7F0E017D2DBN |
| RE | | R7F0E01082CFM, R7F0E01082CFP, R7F0E01082DBH, R7F0E01082DBR, R7F0E01082DNG, R7F0E01182CFM, |
| | RE01_256KB | R7F0E01182CFP, R7F0E01182DBH, R7F0E01182DBR, |
| | | R7F0E01182DNG |
| | C1H | R7F701260, R7F701270,(Debug Support Only) |
| | C1M | R7F701263, R7F701271,(Debug Support Only) |
| | D1L1 | R7F701401, R7F701421,(Debug Support Only) |
| | D1L2 | R7F701402, R7F701422,(Debug Support Only) |
| | D1M1 | R7F701404, R7F701405,(Debug Support Only) |
| | D1M1-V2 | R7F701442, R7F701462,(Debug Support Only) |
| | D1M2 | R7F701408, R7F701410, R7F701428, R7F701430,(Debug Support Only) |
| | E1L | R7F701201, R7F701205,(Debug Support Only) |
| | E1M-S | R7F701202, R7F701204,(Debug Support Only) |
| | E1M-S2 | R7F701215, R7F701216,(Debug Support Only) |
| | - | R7F701Z05, R7F701Z06, R7F701Z07,(Debug Support Only) |
| RH850 | F1H | R7F701501, R7F701502, R7F701503, R7F701506, R7F701507, |
| | 1 111 | R7F701508, R7F701511, R7F701512, R7F701513,(Debug Support Only) |
| | - | R7F701521, R7F701522, R7F701524, R7F701525,(Debug Support Only) |
| | | R7F701542, R7F701543, R7F701546, R7F701547, R7F701557, |
| | | R7F701560, R7F701561, R7F701562, R7F701563, R7F701566, |
| | F1K | R7F701567, R7F701577, R7F701580, R7F701581, R7F701582, R7F701583, R7F701586, R7F701587, R7F701597, R7F701602, |
| | | R7F701603, R7F701600, R7F701611, R7F701612, R7F701613, |
| | | R7F701620, R7F701621, R7F701622, R7F701623, (Debug Support Only) |
| | | R7F701708, R7F701709, R7F701710, R7F701711, R7F701714, |
| | F1KH | R7F701715,(Debug Support Only) |
| | | R7F701644, R7F701645, R7F701646, R7F701647, R7F701648, |
| | F1KM | R7F701649, R7F701650, R7F701651, R7F701652, R7F701653, |
| | | R7F701684, R7F701685, R7F701686, R7F701687, R7F701688, |

| | | R7F701689, R7F701690, R7F701691, R7F701692, R7F701693, R7F701694, R7F701695,(Debug Support Only) |
|------|-------|--|
| | F1L | R7F701002xAFP, R7F701003xAFP, R7F701006xAFP, R7F701007xAFP, R7F701008xAFP, R7F701009xAFP, R7F701010xAFP, R7F701011xAFP, R7F701012xAFP, R7F701013xAFP, R7F701014xAFP, R7F701015xAFP, R7F701016xAFP, R7F701017xAFP, R7F701018xAFP, R7F701020xAFP, R7F701021xAFP, R7F701022xAFP, R7F701023xAFP, R7F701024xAFP, R7F701025xAFP, R7F701026xAFP, R7F701027xAFP, R7F701028xAFP, R7F701029xAFP, R7F701030xAFP, R7F701032xAFP, R7F701028xAFP, R7F701029xAFP, R7F701030xAFP, R7F701032xAFP, |
| | | R7F701033xAFP, R7F701034xAFP, R7F701040, R7F701041, R7F701042, R7F701043, R7F701044, R7F701045, R7F701046, R7F701047, R7F701048, R7F701049, R7F701050, R7F701051, R7F701052, R7F701053, R7F701054, R7F701055, R7F701056, R7F701057,(Debug Support Only) |
| | F1M | R7F701544, R7F701545, R7F701548, R7F701549, R7F701552, R7F701553, R7F701564, R7F701565, R7F701568, R7F701569, R7F701572, R7F701573, (Debug Support Only) |
| _ | P1H-C | R7F701370AEEBG, R7F701371EABG, R7F701372EABG, R7F701396EABG,(Debug Support Only) |
| | P1L-C | R7F701388, R7F701389, R7F701390, R7F701391,(Debug Support Only) |
| • | P1M | R7F701304, R7F701305, R7F701310, R7F701311, R7F701312, R7F701313, R7F701314, R7F701315, R7F701318, R7F701319, R7F701320, R7F701321, R7F701322, R7F701323, (Debug Support Only) |
| | P1M-C | R7F701373xABG, R7F701374xAFP, R7F701397xABG,(Debug Support Only) |
| _ | P1M-E | R7F701375, R7F701376, R7F701377, R7F701378, R7F701379, R7F701380, R7F701381, R7F701382, R7F701383, R7F701384, R7F701385, R7F701386,(Debug Support Only) |
| | - | R7F701060xAFP, R7F701062xAFP, R7F701064xAFP, R7F701065xAFP, R7F701067xAFP, R7F701069xAFP, R7F701071xAFP, (Debug Support Only) |
| | D1A | R5F10CGB, R5F10CGC, R5F10CGD, R5F10CLD, R5F10CMD, R5F10CME, R5F10DGC, R5F10DGD, R5F10DGE, R5F10DLD, R5F10DLE, R5F10DMD, R5F10DME, R5F10DMF, R5F10DMG, R5F10DMJ, R5F10DPE, R5F10DPF, R5F10DPG, R5F10DPJ, R5F10DPK, R5F10DPL, R5F10DSJ, R5F10DSK, R5F10DSL, R5F10TPJ |
| | F12 | R5F10968, R5F1096A, R5F1096B, R5F1096C, R5F1096D, R5F1096E, R5F109AA, R5F109AB, R5F109AC, R5F109AD, R5F109AE, R5F109BA, R5F109BB, R5F109BC, R5F109BD, R5F109BE, R5F109GA, R5F109GB, R5F109GC, R5F109GD, R5F109GE, R5F109LA, R5F109LB, R5F109LC, R5F109LD, R5F109LE |
| RL78 | F13 | R5F10A6A, R5F10A6C, R5F10A6D, R5F10A6E, R5F10AAA, R5F10AAC, R5F10AAD, R5F10AAE, R5F10ABA, R5F10ABC, R5F10ABD, R5F10ABE, R5F10AGA, R5F10AGC, R5F10AGD, R5F10AGE, R5F10AGF, R5F10AGG, R5F10ALC, R5F10ALD, R5F10ALE, R5F10ALF, R5F10ALG, R5F10AME, R5F10AMF, R5F10AMG, R5F10BAC, R5F10BAD, R5F10BAE, R5F10BAF, R5F10BAG, R5F10BBC, R5F10BBD, R5F10BBE, R5F10BBF, R5F10BBG, R5F10BGC, R5F10BGD, R5F10BGE, R5F10BGF, R5F10BLC, R5F10BLD, R5F10BLE, R5F10BLF, R5F10BLG, R5F10BMF, R5F10BMG |
| | F14 | R5F10PAD, R5F10PAE, R5F10PBD, R5F10PBE, R5F10PGD, R5F10PGE, R5F10PGF, R5F10PGG, R5F10PGH, R5F10PGJ, R5F10PLE, R5F10PLF, R5F10PLG, R5F10PLH, R5F10PLJ, R5F10PME, R5F10PMF, R5F10PMG, R5F10PMH, R5F10PMJ, R5F10PPE, R5F10PPF, R5F10PPG, R5F10PPH, R5F10PPJ |

| R5F113GK, R5F113GL, R5F113LK, R5F113LL, R5F113MK, R5F113ML, R5F113PG, R5F113PH, R5F113PJ, R5F113PK, R5F113PL, R5F113TG, R5F113TH, R5F113TJ, R5F113TK, R5F113TL |
|--|
| R5F114GC, R5F114GD, R5F114GE, R5F114GF, R5F114GG |
| R5F11KLE, R5F11KLF, R5F11KLG, R5F11LLE, R5F11LLF, R5F11LLG |
| R5F10Y14, R5F10Y16, R5F10Y17, R5F10Y44, R5F10Y46, R5F10Y47 |
| R5F1051A, R5F1054A, R5F1056A, R5F1057A, R5F1058A |
| R5F10266, R5F10267, R5F10268, R5F10269, R5F1026A, R5F10277, |
| R5F10278, R5F10279, R5F1027A, R5F102A7, R5F102A8, R5F102A9, R5F102AA, R5F10366, R5F10367, R5F10368, R5F10369, R5F1036A, R5F10377, R5F10378, R5F10379, R5F1037A, R5F103A7, R5F103A8, R5F103A9, R5F103AA |
| R5F103A9, R5F103A9A R5F1006A, R5F1006C, R5F1006D, R5F1006E, R5F1007A, R5F1007C, R5F1007D, R5F1007C, R5F1007D, R5F1007C, R5F100A9A, R5F100AC, R5F100A9A, R5F100A9A, R5F100A9A, R5F100A9A, R5F100A9A, R5F100A9A, R5F100B0A, R5F100B0A, R5F100B0A, R5F100B0A, R5F100B0A, R5F100C0A, R5 |
| R5F101SJ, R5F101SK, R5F101SL R5F140FK, R5F140FL, R5F140GK, R5F140GL, R5F140LK, R5F140LL, R5F140PK, R5F140PL |
| R5F104AA, R5F104AC, R5F104AD, R5F104AE, R5F104AF, R5F104AG, R5F104BA, R5F104BC, R5F104BD, R5F104BE, R5F104BF, R5F104BG, R5F104CA, R5F104CC, R5F104CD, R5F104CE, R5F104CF, R5F104CG, R5F104EA, R5F104EC, R5F104ED, R5F104EE, R5F104EF, R5F104EG, R5F104EH, R5F104FA, R5F104FC, R5F104FD, R5F104FE, R5F104FF, R5F104FG, R5F104FH, R5F104FJ, R5F104GA, R5F104GC, R5F104GD, R5F104GE, R5F104GF, R5F104GF, R5F104GF, R5F104GH, R5F104GJ, R5F104GL, R5F104JC, R5F104JD, R5F104JE, R5F104JF, R5F104JG, R5F104JH, R5F104JJ, R5F104LC, R5F104LD, R5F104LE, R5F104LF, R5F104LG, R5F104LH, R5F104LJ, R5F104LK, R5F104ML, R5F104MF, R5F104MG, R5F104MH, R5F104MJ, R5F104MK, R5F104ML, R5F104PF, R5F104PG, R5F104PH, R5F104PJ, R5F104PK, R5F104PL |
| |

| | | R5F10E8A, R5F10E8C, R5F10E8D, R5F10E8E, R5F10EBA, R5F10EBC, |
|----|-------|---|
| | G1A | R5F10EBD, R5F10EBE, R5F10EGA, R5F10EGC, R5F10EGD, R5F10EGE, R5F10ELC, R5F10ELD, R5F10ELE |
| | G1C | R5F10JBC, R5F10JGC, R5F10KBC, R5F10KGC |
| | G1D | R5F11AGG, R5F11AGH, R5F11AGJ |
| | G1E | R5F10FLC, R5F10FLD, R5F10FLE, R5F10FMC, R5F10FMD, R5F10FME |
| | G1F | R5F11B7C, R5F11B7E, R5F11BBC, R5F11BBE, R5F11BCC, R5F11BCE, R5F11BGC, R5F11BGE, R5F11BLC |
| | G1G | R5F11EA8, R5F11EAA, R5F11EB8, R5F11EBA, R5F11EF8, R5F11EFA |
| | G1H | R5F11FLJ, R5F11FLK, R5F11FLL |
| | G1K | R5F11VBG, R5F11VLG |
| | G1M | R5F11W67, R5F11W68 |
| | G1N | R5F11Y67, R5F11Y68 |
| | G1P | R5F11Z7A, R5F11ZBA |
| | H1D | R5F11NGF, R5F11NGG, R5F11NLF, R5F11NLG, R5F11NME, R5F11NMF, R5F11NMG, R5F11PLF, R5F11PLG, R5F11RMG |
| | I1A | R5F1076C, R5F107AC, R5F107AE, R5F107DE |
| | I1B | R5F10MME, R5F10MMG, R5F10MPE, R5F10MPG |
| | I1C | R5F10NLE, R5F10NLG, R5F10NME, R5F10NMG, R5F10NMJ, R5F10NPG, R5F10NPJ |
| | I1C-2 | R5F11TLE, R5F11TLG |
| | I1D | R5F11768, R5F1176A, R5F11778, R5F1177A, R5F117A8, R5F117AA, R5F117AC, R5F117BA, R5F117BC, R5F117GA, R5F117GC |
| | I1E | R5F11CBC, R5F11CCC |
| | L12 | R5F10RB8, R5F10RBA, R5F10RBC, R5F10RF8, R5F10RFA, R5F10RFC, R5F10RG8, R5F10RGA, R5F10RGC, R5F10RJ8, R5F10RJA, R5F10RJC, R5F10RLA, R5F10RLC |
| | L13 | R5F10WLA, R5F10WLC, R5F10WLD, R5F10WLE, R5F10WLF, R5F10WLG, R5F10WMA, R5F10WMC, R5F10WMD, R5F10WME, R5F10WMF, R5F10WMG |
| | L1A | R5F11MMD, R5F11MME, R5F11MMF, R5F11MPE, R5F11MPF, R5F11MPG |
| | L1C | R5F110ME, R5F110MF, R5F110MG, R5F110MH, R5F110MJ, R5F110NE, R5F110NF, R5F110NG, R5F110NH, R5F110NJ, R5F110PE, R5F110PF, R5F110PG, R5F110PH, R5F110PJ, R5F111ME, R5F111MF, R5F111MG, R5F111MH, R5F111MJ, R5F111NE, R5F111NF, R5F111NG, R5F111NH, R5F111NJ, R5F111PE, R5F111PF, R5F111PG, R5F111PH, R5F111PJ |
| | 110 | R5F51101, R5F51103, R5F51104, R5F51105, R5F5110H, R5F5110J |
| | 111 | R5F51111, R5F51113, R5F51114, R5F51115, R5F51116, R5F51117, R5F51118, R5F5111J |
| | 113 | R5F51135, R5F51136, R5F51137, R5F51138 |
| | 130 | R5F51303, R5F51305, R5F51305B, R5F51306, R5F51306B, R5F51307, R5F51308 |
| RX | 13T | R5F513T3, R5F513T5 |
| | 210 | R5F52103, R5F52104, R5F52105, R5F52106, R5F52107, R5F52108, R5F5210A, R5F5210B |
| | 21A | R5F521A6, R5F521A7, R5F521A8 |
| | 220 | R5F52201, R5F52203, R5F52205, R5F52206 |
| | 230 | R5F52305, R5F52306 |
| | 231 | R5F52315, R5F52316, R5F52317, R5F52318 |
| | | ,, |

| | 23E-A | R5F523E5A, R5F523E6A |
|----------|-------|--|
| | 23T | R5F523T3, R5F523T5 |
| _ | 23W | R5F523W7, R5F523W8 |
| | 24T | R5F524T8, R5F524TA, R5F524TB, R5F524TC, R5F524TE |
| | 24U | R5F524UB, R5F524UC, R5F524UE |
| | 610 | R5F56104, R5F56106, R5F56107, R5F56108 |
| | 621 | R5F56216, R5F56217, R5F56218 |
| | 62G | R5F562G7, R5F562GA |
| | 62N | R5F562N7, R5F562N8 |
| | 62T | R5F562T6, R5F562T7, R5F562TA |
| | 630 | R5F56307, R5F56308, R5F5630A, R5F5630B, R5F5630D, R5F5630E |
| | 631 | R5F56316, R5F56317, R5F56318, R5F5631A, R5F5631B, R5F5631D, R5F5631E, R5F5631F, R5F5631G, R5F5631J, R5F5631K, R5F5631M, R5F5631MF, R5F5631N, R5F5631P, R5F5631PF, R5F5631W, R5F5631Y, R5S56310 |
| | 634 | R5F5634B, R5F5634B_5V, R5F5634D, R5F5634D_5V, R5F5634E, R5F5634E_5V |
| _ | 63N | R5F563NA, R5F563NB, R5F563ND, R5F563NE, R5F563NF, R5F563NK, R5F563NW, R5F563NY |
| _ | 63T | R5F563T4, R5F563T5, R5F563T6, R5F563TB, R5F563TB_5V, R5F563TC, R5F563TC_5V, R5F563TE, R5F563TE_5V |
| _ | 64M | R5F564MF, R5F564MG, R5F564MJ, R5F564ML |
| | 651 | R5F56514, R5F56517, R5F56519, R5F5651C, R5F5651C_DUAL, R5F5651E, R5F5651E_DUAL R5F56519DMB, R5F5651EDMB, R5F5651EDMB_DUAL,(Debug Support Only) |
| - | 65N | R5F565N4, R5F565N7, R5F565N9, R5F565NC, R5F565NC_DUAL, R5F565NE, R5F565NE_DUAL R5F565N9DMB, R5F565NEDMB, R5F565NEDMB_DUAL,(Debug Support Only) |
| _ | 66N | R5F566ND, R5F566ND_DUAL, R5F566NN, R5F566NN_DUAL |
| _ | 66T | R5F566TA, R5F566TE, R5F566TF, R5F566TK |
| <u>-</u> | 71M | R5F571MF, R5F571MG, R5F571MJ, R5F571ML |
| _ | 72M | R5F572MD, R5F572MD_DUAL, R5F572MN, R5F572MN_DUAL |
| _ | 72N | R5F572ND, R5F572ND_DUAL, R5F572NN, R5F572NN_DUAL |
| _ | 72T | R5F572TF, R5F572TK |
| | - | R0E5571MLDMBXX,(Debug Support Only) |
| | A1 | R7S721000, R7S721000_DualSPI, R7S721001, R7S721001_DualSPI, R7S721010, R7S721010_DualSPI, R7S721011, R7S721011_DualSPI, R7S721020, R7S721020_DualSPI, R7S721021, R7S721021_DualSPI, R7S721030, R7S721030_DualSPI, R7S721031, R7S721031_DualSPI, R7S721034, R7S721034_DualSPI |
| RZ - | A2 | R7S921040, R7S921041, R7S921042, R7S921043, R7S921045, R7S921046, R7S921047, R7S921048, R7S921051, R7S921052, R7S921053, R7S921056, R7S921057, R7S921058 |
| - | G1E | R8A77450, R8A77450_Core1,(Debug Support Only) |
| | G1M | R8A77430, R8A77430_Core1,(Debug Support Only) |
| | | |

| | R7S910001, R7S910002, R7S910006, R7S910007, R7S910011, | |
|-----|--|-------|
| | R7S910013, R7S910015, R7S910015_M3, R7S910016, R7S910016 | 3_M3, |
| | R7S910017, R7S910017_M3, R7S910018, R7S910018_M3, R7S91 | 0025, |
| _ | R7S910026, R7S910027, R7S910028, R7S910035, R7S910036, | |
| Т | R7S910101, R7S910102, R7S910106, R7S910107, R7S910111, | |
| | R7S910113, R7S910115, R7S910115 M3, R7S910116, R7S910116 | 3 M3, |
| | R7S910117, R7S910117_M3, R7S910118, R7S910118_M3, R7S91 | 0125, |
| | R7S910126, R7S910127, R7S910128, R7S910135, R7S910136 | |
| | R7S910020, R7S910021, R7S910022, R7S910023, R7S910120, | |
| T1- | R7S910121, R7S910122, R7S910123 | |

2.2 Code Generator Support

| Family | Group | Devices |
|--------|-------|--|
| | D1A | R5F10CGB, R5F10CGC, R5F10CGD, R5F10CLD, R5F10CMD, R5F10CME, R5F10DGC, R5F10DGD, R5F10DGE, R5F10DLD, R5F10DLE, R5F10DMD, R5F10DME, R5F10DMF, R5F10DMG, R5F10DMJ, R5F10DPE, R5F10DPF, R5F10DPG, R5F10DPJ, R5F10TPJ |
| | F12 | R5F10968, R5F1096A, R5F1096B, R5F1096C, R5F1096D, R5F1096E, R5F109AA, R5F109AB, R5F109AC, R5F109AD, R5F109AE, R5F109BA, R5F109BB, R5F109BC, R5F109BD, R5F109BE, R5F109GA, R5F109GB, R5F109GC, R5F109GD, R5F109GE, R5F109LA, R5F109LB, R5F109LC, R5F109LD, R5F109LE |
| | F13 | R5F10A6A, R5F10A6C, R5F10A6D, R5F10A6E, R5F10AAA, R5F10AAC, R5F10AAD, R5F10AAE, R5F10ABA, R5F10ABC, R5F10ABD, R5F10ABE, R5F10AGA, R5F10AGC, R5F10AGD, R5F10AGE, R5F10AGF, R5F10AGG, R5F10ALC, R5F10ALC, R5F10ALC, R5F10ALC, R5F10BAC, R5F10BAD, R5F10BAE, R5F10BAF, R5F10BAG, R5F10BBC, R5F10BBD, R5F10BBE, R5F10BBF, R5F10BBG, R5F10BGC, R5F10BGD, R5F10BGG, R5F10BGG, R5F10BMG, R5F10BLC, R5F10BLD, R5F10BLE, R5F10BLF, R5F10BLG, R5F10BME, R5F10BMF, R5F10BMG |
| | F14 | R5F10PAD, R5F10PAE, R5F10PBD, R5F10PBE, R5F10PGD, R5F10PGE, R5F10PGF, R5F10PGG, R5F10PGH, R5F10PGJ, R5F10PLE, R5F10PLF, R5F10PLG, R5F10PLH, R5F10PLJ, R5F10PME, R5F10PMF, R5F10PMG, R5F10PMH, R5F10PMJ, R5F10PPE, R5F10PPF, R5F10PPG, R5F10PPH, R5F10PPJ |
| | F15 | R5F113GK, R5F113GL, R5F113LK, R5F113LL, R5F113MK, R5F113ML, R5F113PG, R5F113PH, R5F113PJ, R5F113PK, R5F113PL, R5F113TG, R5F113TH, R5F113TJ, R5F113TK, R5F113TL |
| | F1E | R5F11KLE, R5F11KLF, R5F11KLG, R5F11LLE, R5F11LLF, R5F11LLG |
| | G10 | R5F10Y14, R5F10Y16, R5F10Y17, R5F10Y44, R5F10Y46, R5F10Y47 |
| | G11 | R5F1051A, R5F1054A, R5F1056A, R5F1057A, R5F1058A |
| RL78 | G12 | R5F10266, R5F10267, R5F10268, R5F10269, R5F1026A, R5F10277, R5F10278, R5F10279, R5F1027A, R5F102A7, R5F102A8, R5F102A9, R5F102AA, R5F10366, R5F10367, R5F10368, R5F10369, R5F1036A, R5F10377, R5F10378, R5F10379, R5F1037A, R5F103A7, R5F103A8, R5F103A9, R5F103AA |

R5F1006A, R5F1006C, R5F1006D, R5F1006E, R5F1007A, R5F1007C, R5F1007D, R5F1007E, R5F1008A, R5F1008C, R5F1008D, R5F1008E, R5F100AA, R5F100AC, R5F100AD, R5F100AE, R5F100AF, R5F100AG, R5F100BA, R5F100BC, R5F100BD, R5F100BE, R5F100BF, R5F100BG, R5F100CA, R5F100CC, R5F100CD, R5F100CE, R5F100CF, R5F100CG, R5F100EA, R5F100EC, R5F100ED, R5F100EE, R5F100EF, R5F100EG, R5F100EH, R5F100FA, R5F100FC, R5F100FD, R5F100FE, R5F100FF, R5F100FG, R5F100FH, R5F100FJ, R5F100FK, R5F100FL, R5F100GA, R5F100GC, R5F100GD, R5F100GE, R5F100GF, R5F100GG, R5F100GH, R5F100GJ, R5F100GK, R5F100GL, R5F100JC, R5F100JD, R5F100JE, R5F100JF, R5F100JG, R5F100JH, R5F100JJ, R5F100JK, R5F100JL, R5F100LC, R5F100LD, R5F100LE, R5F100LF, R5F100LG, R5F100LH, R5F100LJ, R5F100LK, R5F100LL, R5F100MF, R5F100MG, R5F100MH, R5F100MJ, R5F100MK, R5F100ML, R5F100PF, R5F100PG, R5F100PH, R5F100PJ, R5F100PK, R5F100PL, R5F100SH, R5F100SJ, R5F100SK, R5F100SL, R5F1016A, R5F1016C, R5F1016D, R5F1016E, R5F1017A, R5F1017C, R5F1017D, R5F1017E. R5F1018A. R5F1018C. R5F1018D. R5F1018E. R5F101AA. R5F101AC. R5F101AD, R5F101AE, R5F101AF, R5F101AG, R5F101BA, R5F101BC, R5F101BD, R5F101BE, R5F101BF, R5F101BG, R5F101CA, R5F101CC, R5F101CD, R5F101CE, R5F101CF, R5F101CG, R5F101EA, R5F101EC, R5F101ED, R5F101EE, R5F101EF, R5F101EG, R5F101EH, R5F101FA, R5F101FC, R5F101FD, R5F101FE, R5F101FF, R5F101FG, R5F101FH, R5F101FJ, R5F101FK, R5F101FL, R5F101GA, R5F101GC, R5F101GD, R5F101GE, R5F101GF, R5F101GG, R5F101GH, R5F101GJ, R5F101GK, R5F101GL, R5F101JC, R5F101JD, R5F101JE, R5F101JF, R5F101JG, R5F101JH, R5F101JJ, R5F101JK, R5F101JL, R5F101LC, R5F101LD, R5F101LE, R5F101LF, R5F101LG, R5F101LH, R5F101LJ, R5F101LK, R5F101LL, R5F101MF, R5F101MG, R5F101MH, R5F101MJ, R5F101MK, R5F101ML, R5F101PF, R5F101PG, R5F101PH, R5F101PJ, R5F101PK, R5F101PL, R5F101SH, R5F101SJ, R5F101SK, R5F101SL

G13

G13A

R5F140FK, R5F140FL, R5F140GK, R5F140GL, R5F140LK, R5F140PK, R5F140PL

R5F104AA, R5F104AC, R5F104AD, R5F104AE, R5F104AF, R5F104AG, R5F104BA, R5F104BC, R5F104ABD, R5F104BE, R5F104BF, R5F104BG, R5F104CA, R5F104CC, R5F104CD, R5F104CE, R5F104CF, R5F104CG, R5F104EA, R5F104EC, R5F104ED, R5F104EE, R5F104EF, R5F104EG, R5F104EH, R5F104FA, R5F104FC, R5F104FD, R5F104FE, R5F104FF, R5F104FG, R5F104FH, R5F104FJ, R5F104GA, R5F104GC, R5F104GD, R5F104GE, R5F104GF, R5F104GG, R5F104GH, R5F104JG, R5F104JD, R5F104JE, R5F104JF, R5F104JG, R5F104JH, R5F104JJ, R5F104LC, R5F104LD, R5F104LE, R5F104LF, R5F104LG, R5F104LH, R5F104LJ, R5F104LK, R5F104LL, R5F104MF, R5F104MG, R5F104MH, R5F104MJ, R5F104MK, R5F104ML, R5F104MF, R5F104PH, R5F104PJ, R5F104PK, R5F104MI

| \sim 4 4 | |
|------------|----------|
| G14 | R5F104PL |
| | |

R5F10E8A, R5F10E8C, R5F10E8D, R5F10E8E, R5F10EBA, R5F10EBC, R5F10EBD, R5F10EBE, R5F10EGA, R5F10EGC, R5F10EGD, R5F10EGE, R5F10ELC, R5F10ELD,

G1A R5F10ELE

- G1C R5F10JBC, R5F10JGC, R5F10KBC, R5F10KGC
- G1D R5F11AGG, R5F11AGH, R5F11AGJ
- G1E R5F10FLC, R5F10FLD, R5F10FLE, R5F10FMC, R5F10FMD, R5F10FME

| | | R5F11B7C, R5F11B7E, R5F11BBC, R5F11BBE, R5F11BCC, R5F11BCE, R5F11BGC, |
|----|-------------------|--|
| | G1F | R5F11BGE, R5F11BLC, R5F11BLE |
| | G1G | R5F11EA8, R5F11EAA, R5F11EB8, R5F11EBA, R5F11EF8, R5F11EFA |
| | G1H | R5F11FLJ, R5F11FLK, R5F11FLL |
| | | R5F11NGF, R5F11NGG, R5F11NLF, R5F11NLG, R5F11NME, R5F11NMF, |
| | H1D | R5F11NMG, R5F11PLF, R5F11PLG, R5F11RMG |
| | I1A | R5F1076C, R5F107AC, R5F107AE, R5F107DE |
| | I1B | R5F10MME, R5F10MMG, R5F10MPE, R5F10MPG |
| | | |
| | I1C | R5F10NLE, R5F10NLG, R5F10NME, R5F10NMG, R5F10NMJ, R5F10NPJ |
| | I1C-2 | R5F11TLE, R5F11TLG |
| | I1D | R5F11768, R5F1176A, R5F11778, R5F1177A, R5F117A8, R5F117AA, R5F117AC, R5F117BA, R5F117BC, R5F117GA, R5F117GC |
| | I1E | R5F11CBC, R5F11CCC |
| | | |
| | | R5F10RB8, R5F10RBA, R5F10RBC, R5F10RF8, R5F10RFA, R5F10RFC, R5F10RG8, |
| | L12 | R5F10RGA, R5F10RGC, R5F10RJ8, R5F10RJA, R5F10RJC, R5F10RLA, R5F10RLC |
| | | |
| | | R5F10WLA, R5F10WLC, R5F10WLD, R5F10WLE, R5F10WLF, R5F10WLG, |
| | L13 | R5F10WMA, R5F10WMC, R5F10WMD, R5F10WME, R5F10WMF, R5F10WMG |
| | L1A | R5F11MMD, R5F11MME, R5F11MMF, R5F11MPE, R5F11MPF, R5F11MPG |
| | | |
| | | R5F110ME, R5F110MF, R5F110MG, R5F110MH, R5F110MJ, R5F110PE, R5F110PF, |
| | | R5F110PG, R5F110PH, R5F110PJ, R5F111ME, R5F111MF, R5F111MG, R5F111MH, |
| | L1C | R5F111MJ, R5F111PE, R5F111PF, R5F111PG, R5F111PH, R5F111PJ |
| | 110 | R5F51101, R5F51103, R5F51104, R5F51105, R5F5110H, R5F5110J |
| | | R5F51111, R5F51113, R5F51114, R5F51115, R5F51116, R5F51117, R5F51118, |
| | 111 | R5F5111J |
| | 113 | R5F51135, R5F51136, R5F51137, R5F51138 |
| | 130 | R5F51303, R5F51305 |
| | 230 | R5F52305, R5F52306 |
| | 231 | R5F52315, R5F52316, R5F52317, R5F52318 |
| | | |
| | 23T | R5F523T3, R5F523T5 |
| | 23T 24T | R5F524T8, R5F524TA, R5F524TB, R5F524TC, R5F524TE |
| | | · |
| | 24T | R5F524T8, R5F524TA, R5F524TB, R5F524TC, R5F524TE |
| | 24T 24U | R5F524T8, R5F524TA, R5F524TB, R5F524TC, R5F524TE R5F524UB, R5F524UC, R5F524UE |
| RX | 24T 24U 64M | R5F524T8, R5F524TA, R5F524TB, R5F524TC, R5F524TE R5F524UB, R5F524UC, R5F524UE R5F564MF, R5F564MG, R5F564MJ, R5F564ML |

R7S910001, R7S910002, R7S910006, R7S910007, R7S910011, R7S910013, R7S910015, R7S910016, R7S910017, R7S910018, R7S910025, R7S910026, R7S910027, R7S910028, R7S910035, R7S910036, R7S910101, R7S910102, R7S910106, R7S910107, R7S910111, R7S910113, R7S910115, R7S910116, R7S910117, R7S910118, R7S910125, R7S910126, R7S910127, R7S910128, RZ T1 R7S910135, R7S910136

2.3 Smart Configurator Support

| Family | Group | Devices |
|--------|-------|--|
| | 110 | R5F51101, R5F51103, R5F51104, R5F51105, R5F5110H, R5F5110J |
| | 111 | R5F51111, R5F51113, R5F51114, R5F51115, R5F51116, R5F51117, R5F51118, R5F5111J |
| | 113 | R5F51135, R5F51136, R5F51137, R5F51138 |
| | | |
| | 130 | R5F51303, R5F51305, R5F51305B, R5F51306, R5F51306B, R5F51307, R5F51308 |
| | 13T | R5F513T3, R5F513T5 |
| | 230 | R5F52305, R5F52306 |
| | 231 | R5F52315, R5F52316, R5F52317, R5F52318 |
| | 23E-A | R5F523E5A, R5F523E6A |
| | 23T | R5F523T3, R5F523T5 |
| | 23W | R5F523W7, R5F523W8 |
| | 24T | R5F524T8, R5F524TA, R5F524TB, R5F524TC, R5F524TE |
| | 24U | R5F524UB, R5F524UC, R5F524UE |
| | 64M | R5F564MF, R5F564MG, R5F564MJ, R5F564ML |
| | 651 | R5F56514, R5F56517, R5F56519, R5F5651C, R5F5651C_DUAL, R5F5651E, R5F5651E_DUAL |
| | 65N | R5F565N4, R5F565N7, R5F565N9, R5F565NC, R5F565NC_DUAL, R5F565NE, R5F565NE_DUAL |
| | 66N | R5F566ND, R5F566ND_DUAL, R5F566NN, R5F566NN_DUAL |
| | 66T | R5F566TA, R5F566TE, R5F566TF, R5F566TK |
| | 71M | R5F571MF, R5F571MG, R5F571MJ, R5F571ML |
| | 72M | R5F572MD, R5F572MD_DUAL, R5F572MN, R5F572MN_DUAL |
| | 72N | R5F572ND, R5F572ND_DUAL, R5F572NN, R5F572NN_DUAL |
| RX | 72T | R5F572TF, R5F572TK |
| RZ | A2 | R7S921040, R7S921041, R7S921042, R7S921043, R7S921045, R7S921046, R7S921047, R7S921048, R7S921051, R7S921052, R7S921053, R7S921056, R7S921057, R7S921058 |
| | RA2A1 | R7FA2A1AB2CBT, R7FA2A1AB3CFJ, R7FA2A1AB3CFM, R7FA2A1AB3CNE, R7FA2A1AB3CNF |
| RA | RA4M1 | R7FA4M1AB2CLJ, R7FA4M1AB3CFL, R7FA4M1AB3CFM, R7FA4M1AB3CFP, R7FA4M1AB3CNB, R7FA4M1AB3CNE, R7FA4M1AB3CNF |
| | RA6M1 | R7FA6M1AD2CLJ, R7FA6M1AD3CFM, R7FA6M1AD3CFP, R7FA6M1AD3CNB |

| | RA6M2 | R7FA6M2AD2CLK, R7FA6M2AD3CFB, R7FA6M2AD3CFP, R7FA6M2AF2CLK, R7FA6M2AF3CFB, R7FA6M2AF3CFP |
|---|-------|--|
| | RA6M3 | R7FA6M3AF2CBG, R7FA6M3AF2CLK, R7FA6M3AF3CFB, R7FA6M3AF3CFC, R7FA6M3AF3CFP, R7FA6M3AH2CBG, R7FA6M3AH2CLK, R7FA6M3AH3CFB, R7FA6M3AH3CFC, R7FA6M3AH3CFP |
| • | RA4W1 | R7FA4W1AD2CNG |

3. Smart Manual Support

Smart manual support is delivered independently of e² studio releases when available. The following devices are available as of July 2020:


- RX110
- RX111
- RX113
- RX130
- RX210
- RX220
- RX230
- RX231
- RX23E-A
- RX24U
- RX24T
- RX62G
- RX62T
- RX631
- RX63N
- RX63T
- RX651
- RX64M
- RX65N
- RX66T
- RX71M
- RX72M
- RX72T

- RL78/G10
- RL78/G11
- RL78/G12
- RL78/G13
- RL78/G14
- RL78/G1F
- RL78/L12
- RL78/L13
- RZ/A1H
- RZ/A1L
- RZ/A2M
- RZ/T1

What is new in 2020-07?


| Component | Device | Description |
|-------------|--------|---|
| | | 2020-07 is based on the updated Eclipse Platform 2020-03 & CDT 9.11 which includes new features & performance improvements. |
| Application | All | Various changes have been made which can be viewed in the link below: |
| | | https://wiki.eclipse.org/CDT/User/NewIn911 |

The Renesas Preferences have moved from "C/C++" -> "Renesas" to "Renesas" in the root of the preferences dialog. This makes it easier to find.

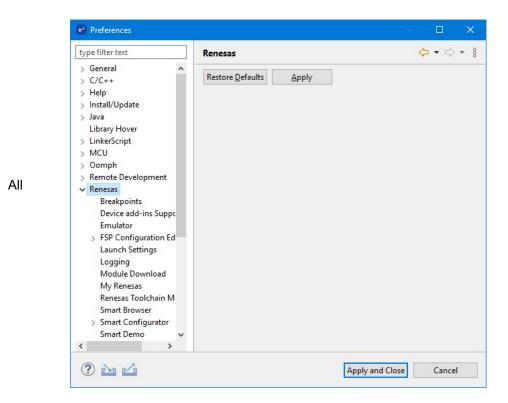

The Smart Browser News and Hint notification pop-up will be closed automatically after being displayed for 15 seconds. **Smart Browser** ΑII The pop-up can be disabled by unchecking all news polling listed in the following dialog:

Application

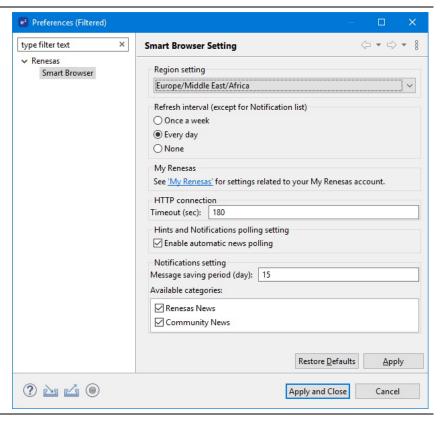

RH850 supports software trace, which is an extension of the E2 emulator.


Devices of the RH850 family support debugging instructions (DBCP, DBTAG, DBPUSH) for the output of software trace data.

```
📆 main.c 🛭
                  ⊖ void main(void)
                                                                    Insert debugging
                         __DI();
InitializePort();
                                                                    instruction in the
                         __EI();
                                                                    program
  33
34
35
36
37
38
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
                         while(1)
                              for( wait=0; wait<0x00080990;
                                                                   wai(++
                              // for DBCP. this fu
                                                                              nd Timestamp
                                _dbcp();
                                        = 0x000000A5;
                              PPCMD8
                              PODC8
                                       = 0x00000000
                                        = ~0x00000000;
                              PODC8
                                        = 0x00000000;
                              PODC8
                                _dbcp();
                              // for DBTAG. this function
                                                                      rn Category, Data, RealData
                                  dbtag is 10bit data.
| Data( Higher 7bit)
                                                                   egory( Lower 3bit) |
                              // 0x13 = 0b0000010011
                                                                tegory = 3 (Lower 3bit)
                                             000001
                                                                   = 2(Higher 7bit)
                                                             RealData = 19(0x13) ( 10bit)
                                                    10011
                                 dbtag(0x13);
                                                         nction return RegisterID, RegisterData
                              // for DBPUSH, this
                                 return Common Reg
                                                        ster from 0 to 3. (r0,r1,r2,r3)
                              // RegisterID = 0
// RegisterID = 1
                                                       RegisterData = r0
RegisterData = r1
                                 RegisterID =
                                                      RegisterData = r2
                                 RegisterID
                                                      RegisterData = r3
                                dbpush(0,3);
```

RH850 Software RH


> This function helps the user to embed debugging instructions in the program to be executed as checkpoints or for the purpose of the output of specific information or register values and output of the history execution to the emulator side as trace data.

The type of software trace can be selected on Acquisition dialog.

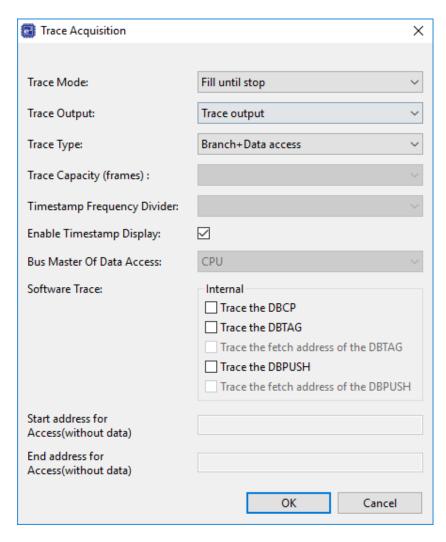

Use "get sfttrc" monitor command on Debugger Console view to get software trace and output to Console view.

To output the software trace result to an external file, enter the file path in command. Enter "True" or "False" to append data to file or not.

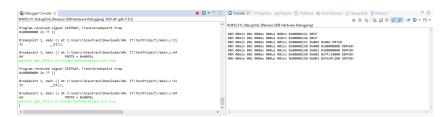


FreeRTOS Configurator

RX, RZ

The FreeRTOS Configurator has been improved.

It is now possible to create FreeRTOS (with IoT libraries) projects with GCC for RX.


The RTOS package location is also added to preferences and you can change it.

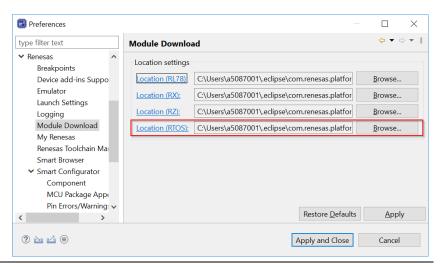

Numerous improvements have been made to the RX Smart Configurator and these are listed below:

1. AFE driver component is supported in the RX23E-A device, it mainly includes two functionalities as below:

AFE driver setting configuration
AFE multiplexed pin connection display

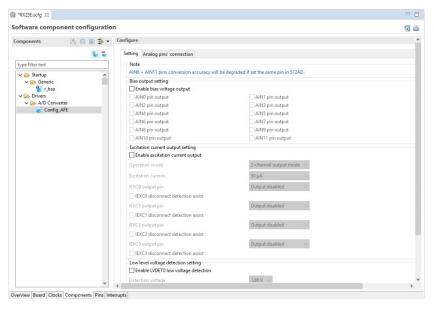

Smart Configurator RX

- 2. 'Creation Date' attribute value in the code generation driver file can be turned off by Smart configurator preference setting.
- 3. CMOS output/N-Channel open drain, High drive settings are open for configuration in PORT driver component even pins are not used as GPIO.
- 4. Power pins of all RX devices in the 'Pin' page become read-only.

- 5. Improved the "Overview" page so that components that not available in the current project is displayed with a gray icon.
- 6. Improved the pin CSV report to lay out pin function information by peripherals in separate columns.
- 7. Fixed the pin conflict checking so that mutually exclusive pins (e.g. RXD/SMISO) do not show a warning when configured with "r_sci_rx" but show a warning if both pins are used concurrently.
- 8. Improved the device change migration report to include Pin, Interrupt information.


5. Useful workarounds and information for 2020-07

Please visit the Renesas FAQ for e² studio for the latest up to date information:

Online FAQ link.

| ID | Component | Workaround or information |
|----|---------------------------------|--|
| | Application | When using the check for updates feature within e ² studio and updating from 7.0.x to 7.1.x the initial restart after the update fails. An error message is displayed. Subsequent launches of e ² studio work without issue. |
| | | This is caused by the update to Java. |
| | SH support | The Renesas SH device family is no longer supported in e ² studio. |
| | | If you need to use the SH device support, please use e^2 studio 5.4 or earlier. |
| | Importing old projects into 6.x | All projects being migrated into the latest e ² studio from e ² studio 5.4 and earlier versions will need to be migrated to the new builder plugins. The new builder plugins have different user interface pages and different option IDs. |


Upon opening an older workspace, the following dialog would be displayed:

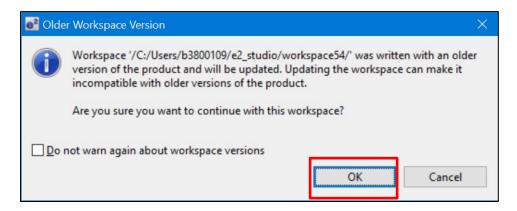


Clicking OK will update the workspace to the newer e² studio.

Importing an existing project to the workspace or opening a workspace with old projects will automatically start the legacy project upgrade procedure.


If for some reason this process does not start it is also possible to launch the "Upgrade Legacy of e2 studio Projects..." from the project context menu.

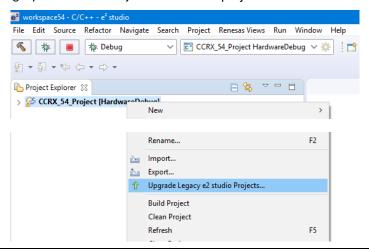

The automatic system pops up a message bubble in the bottom left of the e² studio application window.

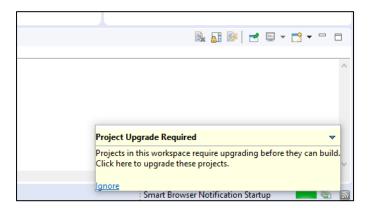

After selecting the menu item or clicking the bubble the following dialog will be shown:

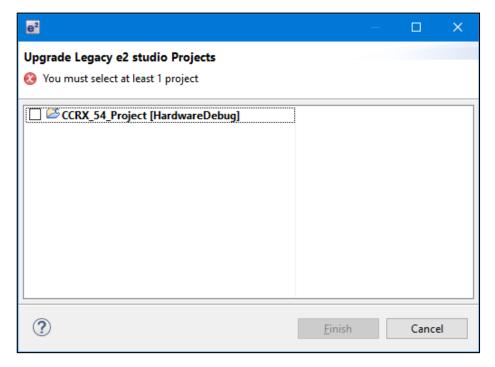


To upgrade the project, click the corresponding check box and then click Finish. Note, this will update the project to the latest build plugins and options. Before doing this, you should ensure your project is backed up as this operation is not reversible.

It is possible to upgrade multiple projects in a single operation.

For the GCC toolchains for RX, RL and GNUARM-NONE have been made to the build options which mean we cannot guarantee the same binary output after upgrade. Please consider this before upgrading.

Another consideration for migration is that debug configurations when opened in 6.0 will also need to be migrated. The following message will be displayed.

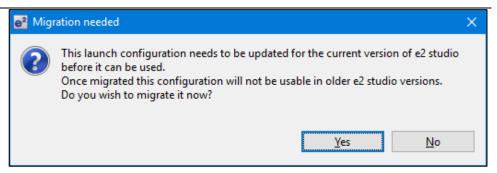


Please ensure that your projects are backed up or in revision control before migration allowing you to return to older versions if required.

Toolchain Management

Before e² studio 6.0 the toolchain management facility automatically upgraded or downgraded the imported project to the latest tools installed on the host machine.

This no longer happens in the latest e² studio. Instead the toolchain remains the same and user operation is the only way to change the toolchain version.

This operation is now available within the build settings on the toolchain tab. An example of CCRX is shown below:

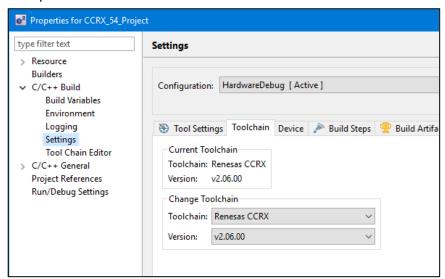

If the particular toolchain version does not exist and build is performed, then an error message is displayed, and the build will fail.

RZ Toolchain


The now legacy KPIT GNU ARM-NONE toolchain is still supported within the e² studio product but now using the gnuarmeclipse plugins.

In addition RZ within e² studio now supports the GNU ARM Launchpad toolchain. Available from https://launchpad.net/gcc-arm-embedded.

One drawback of this toolchain is that it does not have a standard library builder provided in the same manner as the legacy KPIT ARM-NONE toolchain. To use this feature for ARM Launchpad and gain access to the more efficient optlib libraries a further download is required.

This can be downloaded within the e² studio installer or directly from here: https://gcc-renesas.com/rz/rz-download-toolchains/

Once integrated it is possible to integrate the library generator from the toolchain tab of the build settings page.

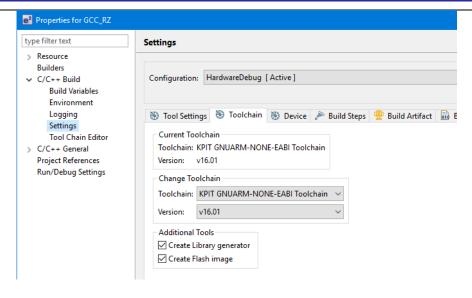

See "Create Library generator" option. Once checked the library generator (libgen) is added to the available tool settings.

QE compatibility

If QE for TCP/IP V1.0.0 is used, please update it to V1.0.1. Other QE series can be used with e² studio 6.0.

What is QE?

https://www.renesas.com/qe

Details of QE for TCP/IP

https://www.renesas.com/ge-tcpip

5954 Application

If you experience the error message "org.eclipse.swt.SWTError: No more handles" this can be caused by certain multi-monitor software and the Eclipse framework.

If this error occurs there are 2 workarounds:

- 1. Use a single monitor display.
- 2. Uninstall the multiple monitor software from your graphics chipset vendor and revert to the standard Windows multi-monitor feature.

6981 RL78 Debugging

When debugging IAR C source file with an OCD emulator (E1), the Monitor program area (0x00002-0x00003) is used.

Therefore, this area must be excluded from usable address space. Please add '-HFF' in the linker option.

- 1. Open Property.
- 2. Select [C/C++ build]-[Settings] at left side.
- Select 'IAR RL78 Xlink linker' at right side, add '-HFF' at the textbox 'command'.


Not doing this will cause problems with connection and download when using interrupts.


NA Application

If you are experiencing slow building of projects within e² studio there are some possibilities to improve.

The system environment will attempt to find the make.exe tool via the system environment. If you ensure the directory, make resides in is at the start of the path variable it will find it more quickly. Especially important if there are network drives in the path.


| | | In the project properties, C/C++ Build tab, behavior tab you can switch on parallel build. This will take advantage of the multi-cores on your host machine if it has them. |
|------|-------------|---|
| NA | RZ GCC | In 3.0 the KPIT GCC RZ toolchain was supported at version 14.01. This version is no longer supported within e² studio. |
| | | KPIT modified the name of their ARM toolchain to be ARM-none-eabi to follow standard ARM naming convention like other GCC toolchain vendors. |
| | | The ARM-none toolchain is available at versions 14.01, 14.02 and 16.01 from the www.gcc-renesas.com website. The binaries in the 14.01 version are identical to those used in the 14.01 RZ toolchain. |
| | | Once the toolchain is installed your projects will be imported and ported to ensure there is as little disruption as possible due to this change. |
| NA | KPIT GCC | The KPIT toolchains are now no longer supported by the www.kpitgnutools.com website. Support is now available from the www.gcc-renesas.com website. |
| | | In addition, there are two new releases for the GNU toolchains for RX and RL78. These are now named Renesas GCC for RX and Renesas GCC for RL78. |
| | | Both integrate into e² studio and can be selected from the project wizard. |
| 1922 | Application | Symptoms: Project fails to build in first instance after archive project import (not from HEW) |
| | | Conditions: If an archived project is imported, it may fail to build the first time, due to a residual .d file. |
| | | Workaround: Clean and Build a second time. |
| 2762 | CODAN | When using assembly code within a C source file, CODAN errors can be observed in the editor. Even though the project builds successfully, or even after rebuild index. |
| | | Indexer buffer can be insufficient to process whole project. Please try giving larger values for the following configurations. |
| | | Open preferences dialog through "Window"->" Preferences" menu. In "C/C++" -> "Indexer" tree, you will indexer configuration as shown below: |

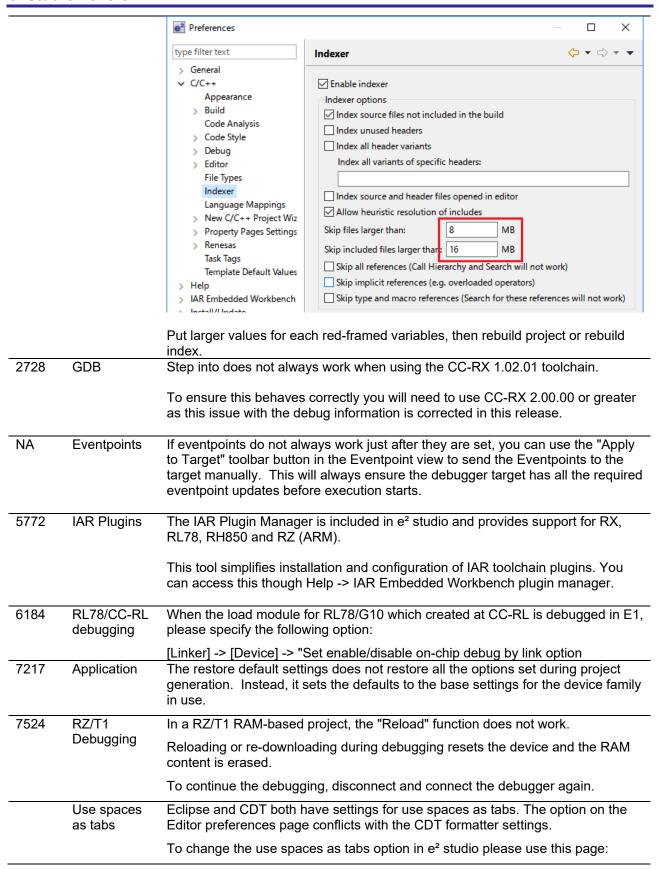

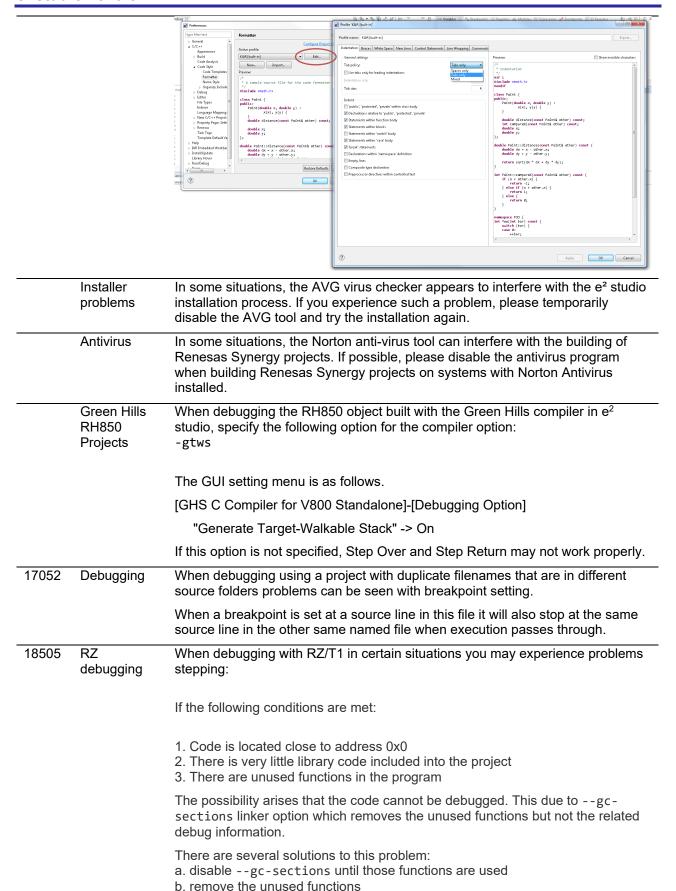


| | 10 2020-07 | Nelcase Note |
|-------|------------------------------------|--|
| | RZ GCC Build | In the latest e ² studio, the RZ import functionality has been improved. However, there are still possibilities of older projects causing problems when imported into e ² studio. |
| | | In older versions of the RZ build plugins the FPU option was not being handled correctly. When setting the "Soft" Floating point ABI the command line was still receiving <code>-mfpu=vfpv3</code> incorrectly. This can now cause problems with older start-up code in older RZ projects. |
| | | After import if you see an error relating to this please add <code>-mfpu=vfpv3</code> to the "Other Assembler Flags" page of the Assembler tool. |
| | | In addition, when migrating some RZ/A1 projects you may experience import problems unless you build the project in 5.4 first. |
| | RZ DS-5 Project Import | When a DS-5 project is imported into e ² studio the environment variables for Path and TCInstall are copied from the DS-5 environment. |
| | Шрок | This is not correct. The way to correct this problem is to delete both paths and replace them with correct values to your toolchain. If you are unsure how to correct this, please create a new project and copy the values from this to the converted project. |
| | RX & RL78 GCC Project Import | When importing a KPIT RL78/RX Library C/C++ project from e ² studio 5.4 or before the build artifact settings are not correct. |
| | · | The output prefix should be set to "lib" but is in fact empty. |
| | RZ/G debug | In the case of debugging Linux application for RZ/G, the following error messages are shown in GDB server console when pushing [Step in] button or [Step Over] button. These messages can be ignored because the Step debugging should work properly even with these messages. |
| | | Examples of error messages: PassthroughTargetCommunication::sendResponse error 42 46 PassthroughTargetCommunication::sendResponse error 10 15 PassthroughTargetCommunication::sendResponse error 42 46 |
| 21863 | RX & RL Debugging | In previous releases there were some problems with stepping in some situations when using the CCRX and CCRL toolchains. |
| | | A fix has been made to the debug object converter. To see this improvement please clean and rebuild the project. The debug information will then be updated, and the stepping will be more correct and reliable. |
| | Code Generator | When using multiple installations of e^2 studio on your machine you may find that subsequent installations do not work correctly with the code generator. |
| | registration | The effect is that the code generator cannot be created or added to projects. Existing projects can be used by the code generator views appear empty. |
| | | If this is the case, then the code generator must be manually registered. To do this execute the following tool: |
| | | <pre>e.g. C:\Renesas\e2_studip\eclipse\plugins\com.renesas.cg_2.11.0.v20180 601-1047\CodeGenerator\Tools\register COM.bat</pre> |

| 25278 | Synergy debugging | When loading Symbols from multiple .elf files compiled using the IAR toolchain, the user will need to add ".text" before place in FLASH_region command inside the .icf Script. |
|-------|-------------------------|---|
| | | e.g. |
| | | ".text": |
| | | <pre>place in FLASH_region { block LOCK_LOOKUP,</pre> |
| | | ro section .rodata, block QSPI_NON_RETENTIVE_INIT_BLOCK, block RAM_INIT_CODE, block USB DEV DESC BLK }; |
| 25273 | RZ Device | When changing the device from a RZ/A1 and attempting to swap to a RZ/T1 the |
| | Migration | device migration is not successful. |
| | | The source code is not migrated successfully, and the build fails. |
| | | This is due to the different start-up code structure between these devices. |
| | | In this case please create a new project and copy the required source to the newly created project. |
| 25195 | RZ/A2M Smart | When creating a project of RZ / A2M, the following Warning is displayed in the Problems view for the src / renesas / configuration folder. |
| | Configurator | "Invalid project path: Include path not found" |
| | | [Workaround] |
| | | Delete the specification of this folder with the compile option include path setting. |
| 24883 | R2/A2M | RZ / A2M project generated by e^2 studio does not support GCC ARM 7.x or later. Please use GCC ARM 6.3. |
| 27913 | GDB server RL78 | When debugging with an EZ cube, real-time refresh significantly slows down debugging features and it makes $\rm e^2$ studio look like suspended. |
| 12123 | Linker Script Editor | The Linker Script Editor may report errors when using some Wild Identifiers such as 1file.o and *filename.o |
| | | Although these are valid file names and valid identifiers according to the Linker Script syntax, they need to be quoted when using the Linker Script Editor. |
| | | (e.g. "1file.o" and "*filename.o"). |
| | RZ/G Linux Platform | When using RZ/G Linux Platform Tools, gnu.io.rxtx plug-ins should be installed same as Nebula plug-ins. |
| | Tools | Please follow the below steps to install gnu.io.rxtx plug-ins. |
| | | Start the e^2 studio and select [Help] -> [Install New Software] from the menu bar to open the [Install] dialog box. |
| | | Click on the [Add] button, enter "GNU RXTX Plugin Update Site" as a name and " http://rxtx.qbang.org/eclipse/ " as a location, and click on the [OK] button. |
| | | |

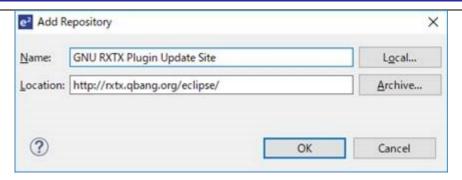

Select [RXTX 2.1-7r4] -> [RXTX End-User Runtime] from the list, click on the [Next] button, confirm the license, and install the plug-ins.

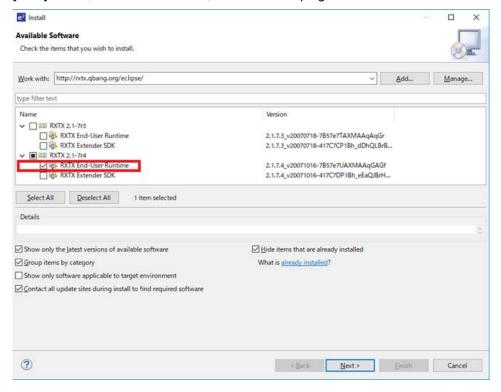

MyRenesas 32564 Due to differences in the login data between 7.8 and the 2020-04 e² studio (or later) version the FreeRTOS download feature does not work in 7.7/8 if the user has logged into MyRenesas or changed their login data details using 2020-04. If you previously used 7.7/8 prior to using 2020-04 and have not changed your login details, then both versions will work correctly. If you need to use MyRenesas in older versions of e² studio after logging in using 2020-04 then you will need to close all e² studio instances and delete the file "%USERPROFILE%\.eclipse\org.eclipse.equinox.security\secure_storage". Be aware that doing this will remove stored passwords for any Eclipse-based application. 32543 ΩE When updating e² studio versions using an installer any installed QE tools are removed and then must be reinstalled. To preserve QE tools during an update use the "Check for Updates" function in the "Help" menu to perform an in-place online update. 30689 J-link It is now possible to configure J-Link to select a remote IP name or address. However currently the user interface does not support this feature.

It can be supported by adding extra commands in the debug configuration.


Under the Jlink section in the Debug Connection settings you can select USB or

| | IP. If IP is selected, then you will need to specify an IP address/name and optionally a port number. |
|-------|---|
| | GDB Server expects the command line parameter (examples): -uSelect= IP=192.168.56.1:8080 -uSelect= IP=localhost:0 -uSelect= IP=jlink.segger.com |
| RH850 | When viewing flash memory in the Memory View, it can be confusing as the values for this memory type can be random for unwritten blank flash memory regions. |
| | This can then result in many false positives for memory changes, resulting in more memory changes than expected. (red text) |
| | To fix this the debugger supports detection and filling of blank addresses areas with a user specified hex byte value. |
| | There is currently no user interface support for this feature. So, you need to add the following command parameters to the additional commands section of the debug configuration. The GDB command line option is: -uBlankFlaskFill=BB with the blank fill value being 0xBB. Specifying this value enables the feature, by default it is off. |
| RE | Program does not step correctly for RE (SOTB) when library generator enabled. |
| | Selecting an ARM GCC toolchain that has libgen installed when creating a new project, will cause the program to go to the default handler when stepping, after returning from function on SOTB board. There are 2 workarounds for this: |
| | 1. Use a toolchain that does not have libgen installed 2. Choose the options: Project-built, Optimized for Library Generator when creating the project and change the selected options to Pre-built, Newlib after the project was created, by going to Settings->Library Generator. |
| | |

6. Open Issues in 2020-07

Open issues in the e² studio 2020-07 product will be kept up to date <u>here</u>:

Please visit to see the latest open issue list.

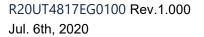



7. Appendix

7.1 Website and Support

Renesas Electronics Website

http://www.renesas.com/

Inquiries

http://www.renesas.com/contact/

7.2 Web Access and Privacy Policy

Collection of User Information Applications included in this package may access the Renesas Web site. In such cases, the following information is collected and recorded to Renesas server as a log.

- Date and time of access
- · Access to URLs and files
- The unique certificate number linked to your account for MyRenesas (only when you log in to MyRenesas)
- The unique identification number linked to cookies for the Web browser (for cookies, refer to the privacy policy page stated below).

Logs are managed based on our privacy policy.

Refer to our privacy policy on the following Web page.

Privacy Policy:

https://www.renesas.com/privacy.html

All trademarks and registered trademarks are the property of their respective owners.

"FreeRTOSTM is the trademark of Amazon Web Services, Inc.

AWSTM, Amazon Web ServicesTM is the trademark of Amazon Web Services, Inc."

GITHUB® is the trademark registered in the United States by GitHub, Inc.

Notice

- 1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information
- 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application
- 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
- 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document. Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

- 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified
- 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
- 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or
- 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
- 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics

(Rev.4.0-1 November 2017)



SALES OFFICES

Renesas Electronics Corporation

http://www.renesas.com

Refer to "http://www.renesas.com/" for the latest and detailed information

Renesas Electronics America Inc.

| Murphy Ranch Road, Milpitas, CA 95035, U.S.A. +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics Canada Limited 9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3 Tel: +1-905-237-2004

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-651-700, Fax: +44-1628-651-804

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, German Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949 Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd. 17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea Tel: +82-2-558-3737, Fax: +82-2-558-5338