

RX66T Group

Renesas Starter Kit Sample Code (CS+ for CC-RX)

R01AN4590EJ0100 Rev.1.00

Nov 20, 2018

APPLICATION NOTE

Introduction

Renesas Starter Kits (RSK) are supplied as complete development systems for the selected microcontroller. The kit includes an evaluation board, portable On-Chip Debugger, and a set of peripheral sample code.

Target Device

RX66T Group

Development Environment

IDE: CS+ V8.00.00 Compiler: CC-RX v3.00.00 Hardware: Renesas Starter Kit for RX66T

Contents <contents header>

1.	Installation	2
2.	Opening the sample projects	2
3.	Opening the Sample Code and Source Files	3
4.	Source Code Functionality	3



1. Installation


The CS+ IDE should already be installed on the user's personal computer (PC). It is assumed that the following software and versions are installed:

- Renesas CS+ Version V8.00.00
- CC-RX Tool Chain Version v3.00.00

Create a new folder, for example 'C:\Renesas\Workspace\RSK\RSKRX66T'. Copy the application note zip package 'an-r01an4590ej0100-rx66t-rsk.zip' downloaded from the website to this folder and extract it here.

2. Opening the sample projects

Open CS+ from the Windows Start button by selecting 'All Programs > Renesas Electronics CS+ > CS+ for CC(RL78,RX,RH850)'.

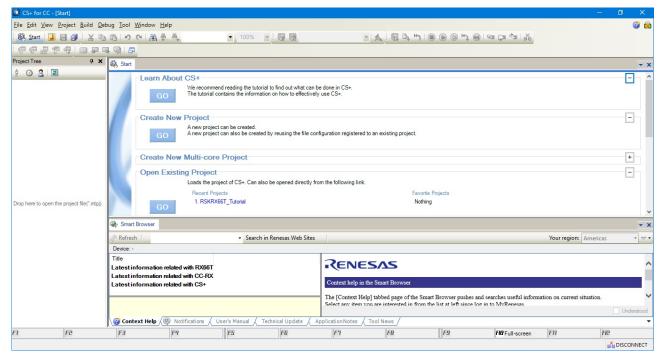

To open the project select 'Project > Open Project...' from the menu bar.

OS+ for CC - [Start]						
File Edit View	Project Build Debug Tool Window Help					
🕄 🕅 Start 🛛 🛃	Create New Project					
60009	🔀 Open Project					
Project Tree	Favorite Projects					



Select Tutorial project as an example.

 $Navigate \ to \ `C:\Renesas\Workspace\RSK\RSKRX66T\Tutorial' \ folder \ and \ select \ the \ file \ `RSKRX66T_Tutorial.mtpj'. Click < Open >.$

Corganize New folder RSK RSK RSKRX66T Application Application Async_Serial Low_Power_Mode System_Bootloader System_Bootloader System_Input_Capture Timer_PWM Tutorial Verticial Verticial Name Date modified Type Size Size Verticial Name Date modified Size Verticial Name Date modified Verticial <th>🙆 Open Project</th> <th></th> <th></th> <th></th> <th></th> <th>×</th>	🙆 Open Project					×
RSK Name Date modified Type Size RSKRX66T doc 11/22/2018 6:09 PM File folder Application src 11/22/2018 6:09 PM File folder Async_Serial src 11/22/2018 2:20 PM MTPJ File 456 KB Low_Power_Mode System_Bootloader System_Input_Capture Timer_PWM Tutorial	← → → ↑ 📙 « Local Disk (C:) → Renesas	> Workspace > RSK > RSKRX66T > Tutorial	>	・ Ö Search Tutor	ial	٩
RSK Name Date modified Type Size RSKRX66T doc 11/22/2018 6:09 PM File folder Application src 11/22/2018 6:09 PM File folder Async_Serial System_Bootloader 10/29/2018 2:20 PM MTPJ File System_Bootloader System_Input_Capture Timer_PWM Value	Organize 🔻 New folder				·== • •	?
Application Async_Serial Cov_Power_Mode System_Bootloader System_Input_Capture Timer_PWM Tuttorial	RSK ^		Date modified	Туре	Size	
Async_Serial Async_Serial Cow_Power_Mode System_Bootloader System_Bootloader_Application System_Input_Capture Timer_PWM Tutorial	RSKRX66T	doc	11/22/2018 6:09 PM	File folder		
Low_Power_Mode System_Bootloader System_Bootloader_Application System_Input_Capture Timer_PWM	Application	src .	11/22/2018 6:09 PM	File folder		
System_Bootloader System_Bootloader_Application System_Input_Capture Timer_PWM	Async_Serial	RSKRX66T_Tutorial.mtpj	10/29/2018 2:20 PM	MTPJ File	456 KB	
System_Bootloader_Application System_Input_Capture Timer_PWM	Low_Power_Mode					
System_Input_Capture Timer_PWM	System_Bootloader					
Timer_PWM	System_Bootloader_Application					
	System_Input_Capture					
🔁 Tutorial 🗸	📙 Timer_PWM					
	Tutorial					
File name: Tutorial.mtpj Project File (*.mtpj) Open Cancel	File <u>n</u> ame: Tutorial.mtpj					~

3. Opening the Sample Code and Source Files

Once the Tutorial project is open, the source code and all dependent files can be opened in the editor by expanding the folders in the 'Project Tree' and double clicking the files listed. Files are grouped according to type. A number of separate projects are provided. Each project contains sample code for a specific peripheral.

RSKRX66T_Tutorial - CS+ for CC - [Project Tree]									o x
<u>File Edit View Project Build Debug Tool Windo</u>	ow <u>H</u> elp								🤤 🍘 🖨
🚳 Start 🔒 🗃 🗿 🐰 🐚 🛍 りゃい		▼ 100%	- 😽 🙀 Debug	•	🔬 🗔 🗗 I (• • • • • • •	21 ÇI CI K		
i 💎 🖓 🖉 🤻 i 🗆 🗭 🗣 🔍 i 🎜 i 🖉									
Project Tree P × P × P × <	mainc 1 □ 2 * DISCLAIME 3 * This soft 4 * No other 5 * applicable 6 * This soft 7 * OR STATU 8 * NON-INFRI 10 * INM, NEIT 11 TIS AFFIL 12 * Renesas r 13 * Of this s 14 * Colowing 15 http://www 16 * 17 * Copyright Name 20 * File Name 21 * Uversion 22 Device(s) 23 * Tool-Chai 24 # WW Plat	ER tware is supp uses are aut uses are aut uses are aut tware is prov TORY, INCLUDI INGEMENT. AI THER RENESAS , SPECIAL, IN INGEMENT. AI CLATES HAVE B reserves the software. By g link: www.renesas.co t (C) 2016, 2 t (C) 2016,	horized. This 2 uding copyright VIDED "AS 13" AN NG BUT NOT LIMI LECTRONICS COR CICIENTAL OR CON EEN ADVISED OF USIGHT, Without using this soft m/disclaimer 1017 Renesas Ele 	Intere is owne : laws. ID RENESAS MAKES TED TO WARRAFIS ISORATION NOR AN SEQUENTIAL DAMP THE POSSIBILITY notice, to make ware, you agree	d by Renesas El NO WARRANTIESE ES OF MERCHANTA Y DISCLAIMED.TC Y OF ITS AFFILI GES FOR ANY REF OF SUCH DAMAGE changes to thi to the additic	ACTIONICS COTPO ACCARDING THIS S ABILITY, FITNESS) THE MAXIMUM EX AITED COMPANIES AND RELATED TO S. as software and nal terms and c	ration and is p OFTWARE, WHETHU FOR A PARTICUL TENT PERMITTED SHALL BE LIABLU THIS SOFTWARE, to discontinue	Renesas products. protected under all ER EXFRESS, IMPLIED LAR FURROSE AND NOT FROHIBITED BY EVEN IF RENESAS OR the availability d by accessing the	
	Output Smart Browse	er 🔠 Error List							
F1 F2 F3	FH	FS	FR	E7	FR	F9		ETI EK	

4. Source Code Functionality

Each project is specifically written to run on the appropriate RSK. However, this source code can be useful as an example of peripheral initialization even without the RSK.

Each project includes a description.txt file that describes the functionality of that sample. There will also be a C source file that includes "main" in the name, for example "main.c". This source file includes the C function main().



Website and Support

Renesas Electronics Website <u>http://www.renesas.com/</u>

Inquiries

http://www.renesas.com/contact/

All trademarks and registered trademarks are the property of their respective owners.



Revision History

		Descript	ion	
Rev.	Date	Page	Summary	
1.00	Nov 20. 2018	-	First edition issued	

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

— The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

 The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.

In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed.

In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

The reserved addresses are provided for the possible future expansion of functions. Do not
access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

- When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.
- 5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

 The characteristics of Microprocessing unit or Microcontroller unit products in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.