

To our customers,

---

## Old Company Name in Catalogs and Other Documents

---

On April 1<sup>st</sup>, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1<sup>st</sup>, 2010  
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

## Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: “Standard”, “High Quality”, and “Specific”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as “Specific” without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as “Specific” or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is “Standard” unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
  - “Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
  - “High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
  - “Specific”: Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

# 38K0/38K2 Group SRA74

Coding Rule a74

Renesas USB Single-Chip Microcomputers

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

**Keep safety first in your circuit designs!**

\* RENESAS TECHNOLOGY CORPORATION puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of non-flammable material or (iii) prevention against any malfunction or mishap.

**Notes regarding these materials**

- \* These materials are intended as a reference to assist our customers in the selection of the RENESAS semiconductor product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to RENESAS TECHNOLOGY CORPORATION or a third party.
- \* RENESAS TECHNOLOGY CORPORATION assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
- \* All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by RENESAS TECHNOLOGY CORPORATION without notice due to product improvements or other reasons. It is therefore recommended that customers contact RENESAS TECHNOLOGY CORPORATION or an authorized RENESAS Semiconductor product distributor for the latest product information before purchasing a product listed herein. The information described here may contain technical inaccuracies or typographical errors. RENESAS TECHNOLOGY CORPORATION assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information published by RENESAS TECHNOLOGY CORPORATION by various means, including the RENESAS Semiconductor home page (<http://www.renesas.com/eng/>).
- \* When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. RENESAS TECHNOLOGY CORPORATION assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
- \* RENESAS TECHNOLOGY CORPORATION semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact RENESAS TECHNOLOGY CORPORATION or an authorized RENESAS Semiconductor product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical aerospace, nuclear, or undersea repeater use.
- \* The prior written approval of RENESAS TECHNOLOGY CORPORATION is necessary to reprint or reproduce in whole or in part these materials.
- \* If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
- \* Please contact RENESAS TECHNOLOGY CORPORATION or an authorized RENESAS Semiconductor product distributor for further details on these materials or the products contained therein.

Revision History	38K0/38K2 Group SRA74 Coding Rule a74
------------------	---------------------------------------

Rev.No.	Date	Contents
0.0	2001/11/26	Draft issued
1.0	2003/01/31	First edition issued

- **RENESAS** MCU Technical Information
  - ◆ <http://www.renesas.com/en/usb>

- Table of contents -

- 1.1 Introduction ----- 1
- 1.2 File Names-----2
- 1.3 Include Files for 38K0/38K2 Development-----3
- 1.4 Labels -----5
  - 1.4.1 ROM Label-----5
  - 1.4.2 SFR/RAM Labels-----6
- 1.5 Symbols -----7
- 1.6 Miscellaneous Rules-----8
- 1.7 Important Notes-----8

## 1.1 Introduction

This document provides instructions for the coding rule of the structured language commands used in the Relocatable Macro-Assembler SRA74 Version 4.00 used with the RENESAS Microcomputer 38K0/38K2 Group USB Sample Firmware.

## 1.2 File Names

As shown in Table 1.2, file names in the 38K0/38K2 Group Sample F/W are comprised of “prefix + Function Name + file ID”.

Table 1.2 File Name Rule

	Prefix	Function Name	File ID
Source File	p_	A string of words, each starting with an upper-case letter.	Under-bar + contents described in 3 lower-case letters
Include File	h_		

### (1) Prefix

The file name is headed by a prefix that indicates the type of the file. Program files are indicated with a **lower-case “p” followed by an under bar**, include files are indicated with a **lower-case “h” followed by an under bar**.

### (2) Function Name

The function name is defined by a string of words, each of which the first letter is upper-case, and all other letters are lower-case.

Example: “ChargeIndication” would represent the function name for the charge indication.

### (3) File ID

At the end of the file name is the file ID, indicating the file in which the module routine (program routine) is stored. The ID is preceded by an **under-bar and consists of three lower-case letters**.

Example: the file ID for the charge function would be “\_cha”.

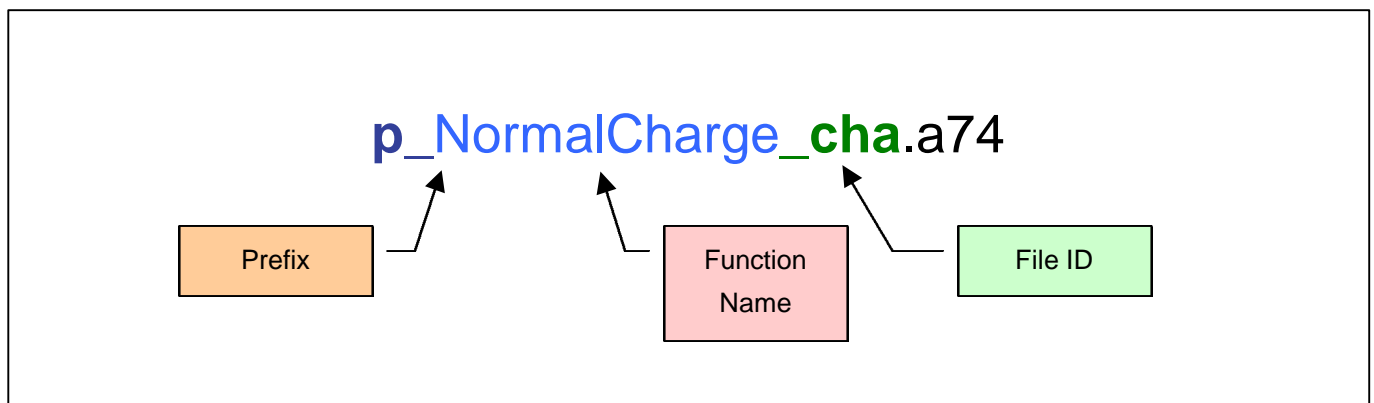


Figure 1.2 Denomination Example of File Name



## 1.3 Include Files for 38K0/38K2 Development

Table 1.3 lists definition examples of include files used for 38K0/38K2 Group developments.

Table 1.3 Definition Examples of Include Files for 38K0/38K2 Group Developments

File Name	Include Destination File	Description
h_Section.inc	Main only	Assigns sections of address space and specifies the start address.
h_INT_vec.inc	Main only	Gets the interrupt start address externally and stores address in interrupt vector area (FFDCH – FFFFH).
h_Assem_con.inc	All	Configure assembly condition of F/W. The configuration can be changed by rewriting this file.
h_Const_def.inc	All	Sets constant definition for F/W.
h_SFR_sym.inc	All	Defines SFR symbol names in area 0000H-003FH(synonymous definition).
h_RAM_pub.inc	All	Labels (area reservation and variable name definitions), defines symbols, and makes public declarations for RAM variables.
h_ROM_dat.inc	Main only	Defines the ROM data.

### (1) h\_Section.inc

This file sections off address space in the RAM and program areas and defines the section names. Because the address space is assigned only once during the assemble, this file should only be included in the main file (multiple include files will cause duplicate definitions during the link).

### (2) h\_INT\_vec.inc

This file stores the start address of the interrupt that jumps to the interrupt vector area (ROM). Assign an external reference to the start address of the interrupt process (subroutine label) and store the address in word units (pseudo instruction (“.WORD”). Because the address is stored only once during the assemble, this file should only be included in the main file (multiple include files will cause duplicate definitions during the link).

### (3) h\_Assem\_con.inc

This file sets the assembly condition to be modified by the firmware. Set the applicable function to “1” and all other functions to “0” for the assemble. Because the assembler pseudo instruction for this file is “=(EQU)” (a simple macro replacement instruction for compile), this file must be included in all applicable program files.

### (4) h\_Const\_def.inc

This file is for setting the constants used by this firmware. Part of this file interlocks with “h\_ROM\_dat.inc”. Therefore, rewriting this file will cause the ROM data to be modified as well. In addition, as part of this file is used for the assembly condition, you must be careful when erasing or changing definition names. Because the assembler pseudo instruction for this file is “=(EQU)” (a simple macro replacement instruction for the compile), this file must be included in all applicable program files.

**(5) h\_SFR\_sym.inc**

This file defines symbols for the SFR area. This file uses assembler pseudo instructions that start with “=(EQU)” (instruction that performs a macro-conversion during the compile). Therefore, the file must be included in all applicable program files.

**(6) h\_RAM\_pub.inc**

This file defines the labels for the RAM variables (block reservation and variable name definition) and global declarations. Include this file in all requesting program files. Make sure “synonymous absolute attribute section overlap enable – A” is enabled (active) in the linker options (if the overlap is disabled, definitions will be duplicated during the link).

**(7) h\_ROM\_dat.inc**

This file defines the ROM data and issues the global declaration. When using ROM data, set the program file address (ROM data start address) to an external reference. ROM data is only stored once during the assemble, so only include this file in the main file (multiple include files will cause duplicate definitions during the link).

## 1.4 Labels

A label identifies an address space. Labels with the same name reference the same address during a link. The RAM variable is also one type of label. This firmware is configured to reference the label address of the RAM variable.

The label address is not assigned at the assemble stage, but assigned for the first time during the link (relocatable = re-assignable). The same address will be assigned to files with the same global label name. A different address will be assigned to each address space indicated by a local label.

### 1.4.1 ROM Label

As shown in Figure 1.4.1, this coding rule specifies two types of ROM labels: ROM label which stores the program (code) and the ROM label that stores the data.

#### (1) Prefix

The prefix defines the contents of the ROM area (relocatable) address. The prefix for a program address (global label) is an upper-class "P" followed by the under bar. The prefix for a special area address is upper-class "SP" followed by the under bar. The jump destination address (local label) does not include a prefix.

#### (2) Function Name

The function name in the ROM address is as follows:

Program address (global label) – each word in the name starts with an upper-case letter and is followed by lower-case letters.

Jump address (local label) – all upper-case letters

#### (3) File ID

The file ID is added at the end of the address and indicates the file in which the module routine (program file) is stored. The jump destination address does not include a file ID

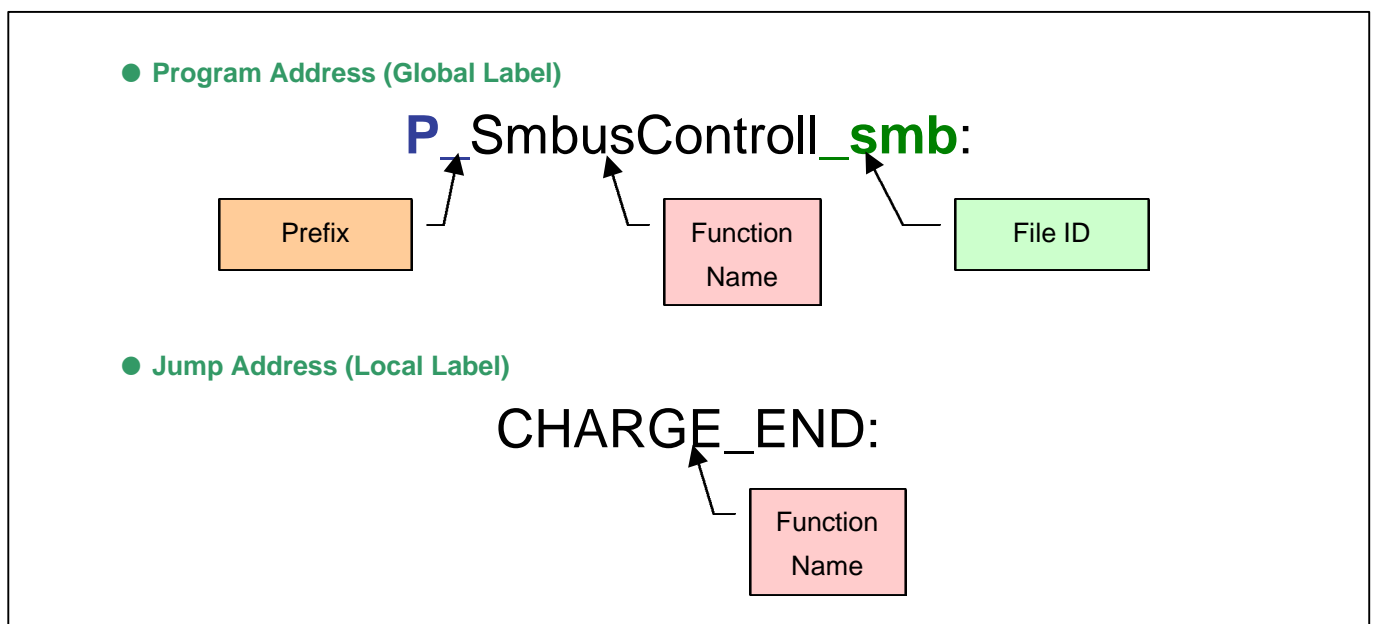


Figure 4.1 Denomination Example for ROM Label

## 1.4.2 SFR/RAM Labels

As shown in Figure 1.4.2, this coding rule specifies two types of variables: SFR label and the RAM data label.

### (1) Prefix

The prefix for an SFR area (variable) is an upper-class “S” followed by the under bar. The prefix for 0 page is an upper-class “Z” followed by the under bar. All other pages are defined with an upper-class “O” and the under bar. However, industry standard variables, such as those defined in the USB specification, use the name of the variable as is.

### (2) Function Name

The function name for SFR areas is written according to the manual. All other areas, other than industry standard areas, are written in all upper-case letters.

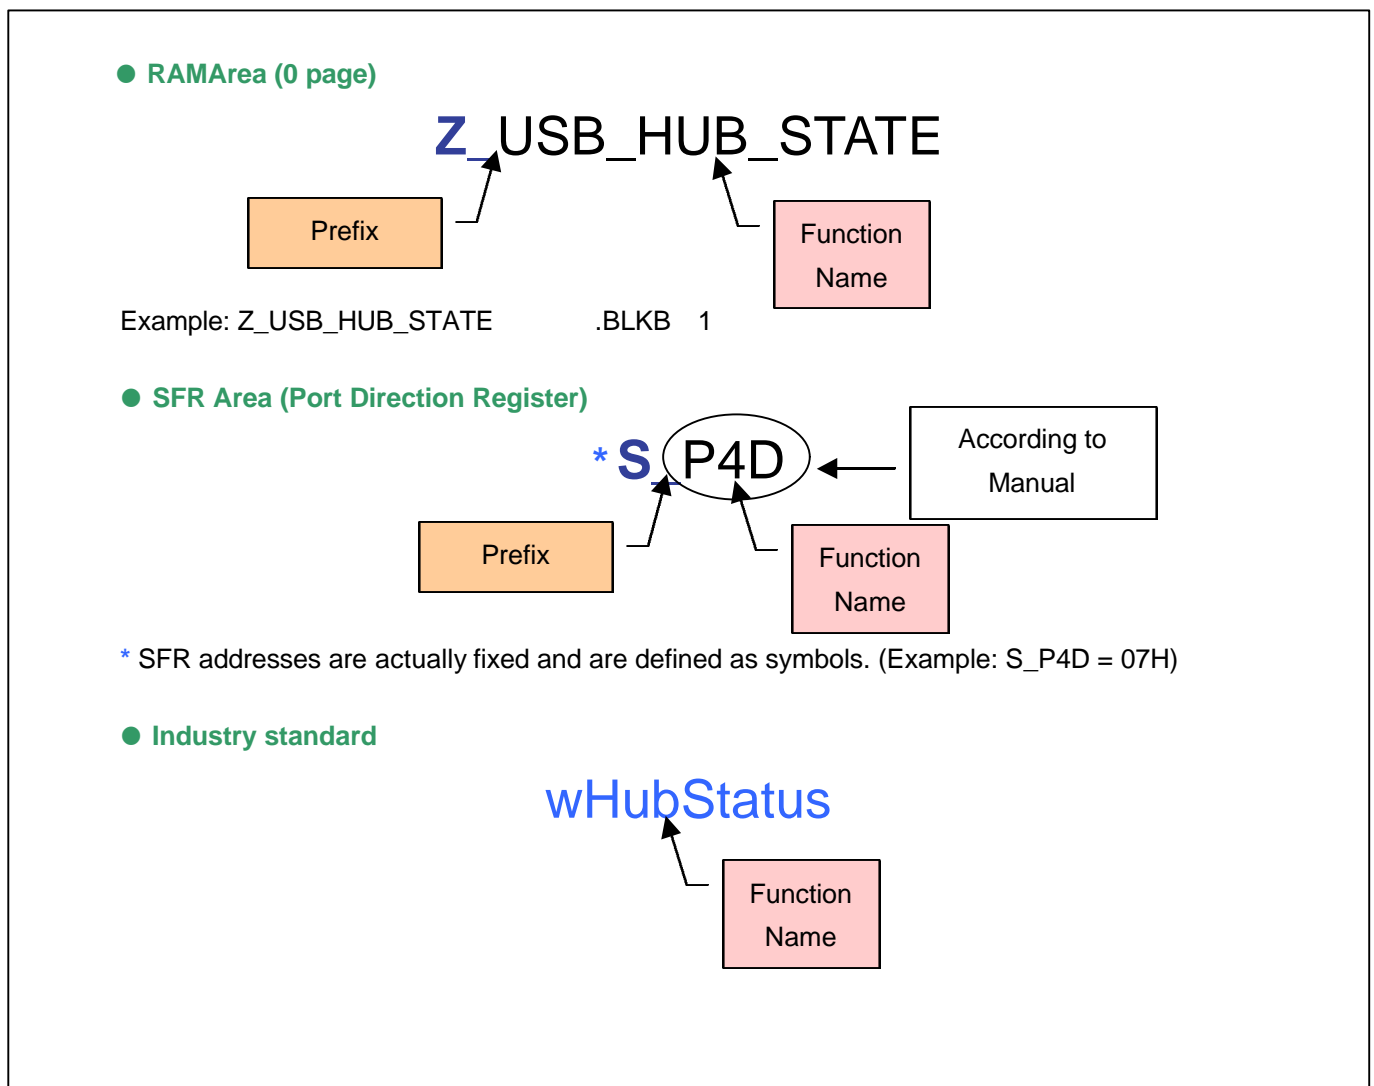


Figure 1.4.2 Denomination Example of SFR/RAM Label

## 1.5 Symbols

Symbols accommodate the occurrence of synonymous definitions. Symbols on the left side of “.EQU” are replaced with symbols (including numerical values) on the right during the SRA74 assemble.

### (1) Prefix

The prefix for the symbol defines the contents of the address. The prefix for a fixed symbol is an upper-case “N” followed by the under bar. The prefix for a bit symbol is a lower-class letter, as shown in Table 1.5. However, word symbols, such as READ and WORD, do not have prefixes.

Table 1.5 Bit Prefix

Bit Prefix: area display	
<b>s</b>	SFR area
<b>z</b>	0 page area

### (2) Function Name

The function name for a bit symbol is indicated in all upper-case letters, while the name for a fixed symbol can be indicated in either upper or lower-case letters.

### (3) Alternative SFR Value

The alternative value for the SFR is conveniently defined by an upper-class “N”, the under bar, and the SFR symbol

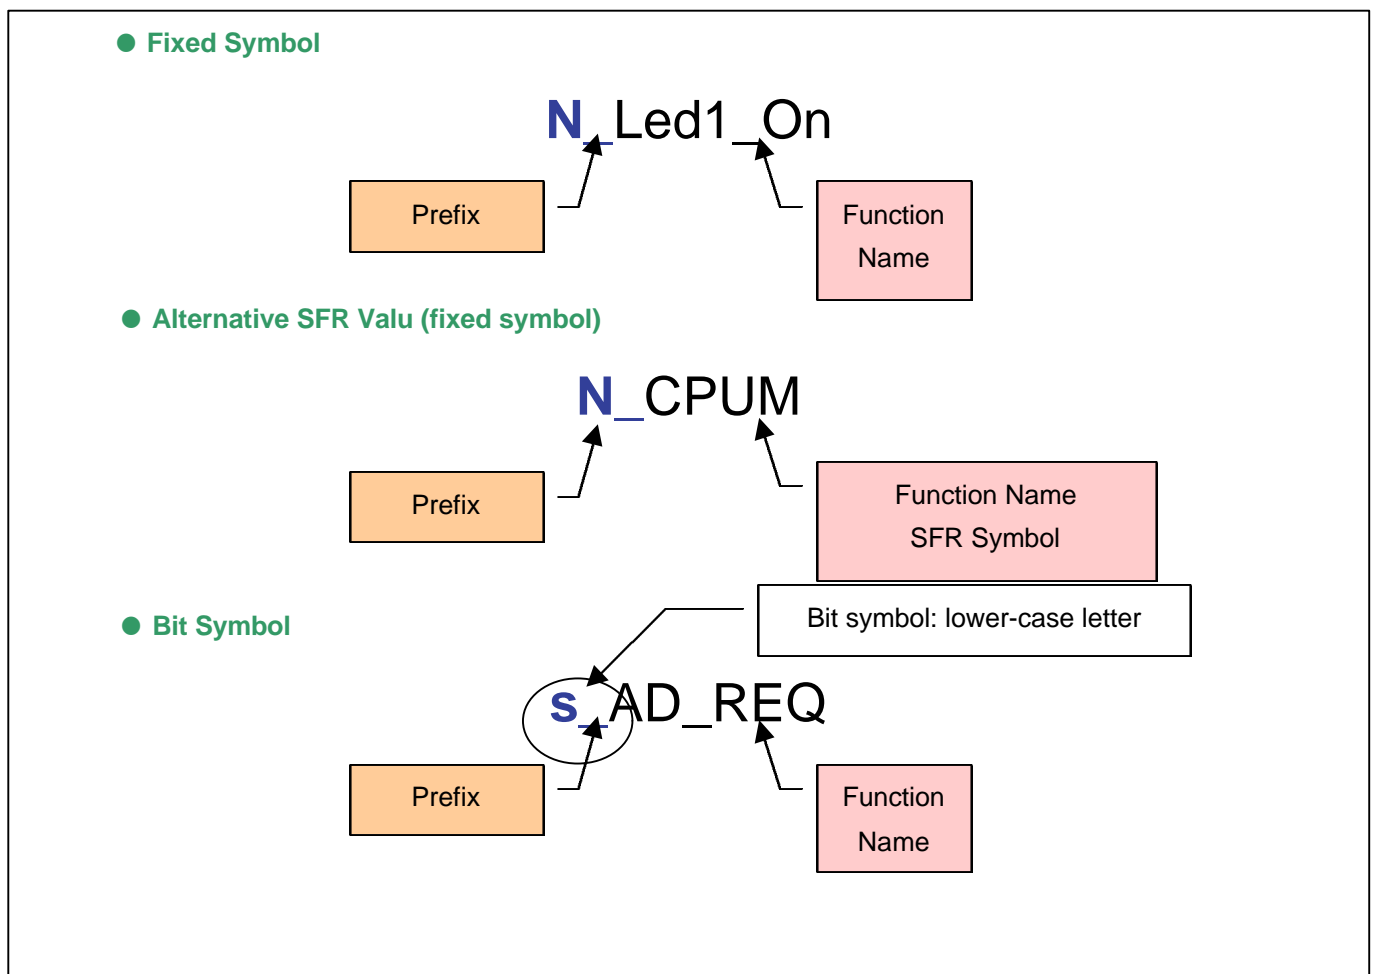


Figure 1.5 Denomination Example of Symbols

## 1.6 Miscellaneous Rules

- [1] The mnemonic for assembler is indicated in all upper-case letters (LDA, STA).
- [2] Structured language commands are described in all lower-case letters (if [ ]...endif).
- [3] Pseudo instructions are indicated in all upper-case letters (INCLUDE .IF... .END). Pseudo instructions are for assembler and linker and do not affect the firmware.

## 1.7 Important Notes

The SRA74 structured language command cannot describe “else if”. Therefore, “else” and “if” must be described on separate lines.

Examples:			
	[ Unacceptable ]	[ Acceptable (1) ]	[ Acceptable (2) ]
	<pre> if A == 0   Process 1 x → else if X == 1   Process 2 else   Process 3 endif </pre>	<pre> if A == 0   Process 1 else   if X == 1     Process 2   else     Process 3   endif endif </pre>	<pre> if A == 0   Process 1   JMP END endif if X == 1   Process 2   JMP END endif Process 3 END: </pre>

Figure 1.7 SRA74 Examples of Description Restrictions

For more details concerning file description rules, refer to the USB Sample Firmware.



---

RENESAS USB Single-Chip Microcomputer  
38K0/38K2 Group SRA  
Coding Rule a74 VER.1.0  
RENESAS TECHNOLOGY CORPORATION.  
RENESAS SOLUTIONS CORPORATION.

---

No unauthorized copy, please.  
Any contents (including charts) are not allowed for reprinting without contact to RTC.  
Copyright(C) 2003 RENESAS TECHNOLOGY CORPORATION and  
RENESAS SOLUTIONS CORPORATION.