

# ISL81601-US011REFZ

## User's Manual: Reference Board

### Solar Battery Charger with MPPT

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

## For Your Safety

Do not fail to read this manual before using the board

- Follow the indications in this manual when using the board
- Keep this manual near the board so you can refer to it whenever necessary.
- Transfer or sale of the board to third parties is prohibited without written approval.
- The purchaser or importer of the board is responsible for ensuring compliance with local regulations. In addition, the customer is responsible for ensuring that the board is handled correctly and safely, in accordance with the laws of the customer's country (region).
- The manual for the board, and specification (the documents) are the tool that was developed for the function and performance evaluation of Renesas Electronics semiconductor device (Renesas Electronics device) mounted on the board, and not guarantee the same quality, function and performance.
- By purchasing the board or downloading the documents from Renesas Electronics website, the support services provided from Renesas Electronics is not guaranteed.
- All information contained in this manual represents information on products at the time of publication of this manual. Please note that the product data, specification, sales offices, contents of website, address, etc., are subject to change by Renesas Electronics Corporation without notice due to product improvements or other reasons. Please confirm the latest information on Renesas Electronics website.

■ Danger Items

 <b>Warning</b>	
	<p>Always insert plugs, connectors, and cables securely, and confirm that they are fully inserted.</p> <ul style="list-style-type: none"> <li>• Incomplete connections could cause fire, burns, electric shock, or injury.</li> </ul>
 	<p>Use the power supply apparatus specified in the manual.</p> <ul style="list-style-type: none"> <li>• Failure to do so could cause fire, burns, electric shock, injury, or malfunction.</li> </ul>
	<p>Disconnect the power supply and unplug all cables when the system will not be used for a period of time or when moving the system.</p> <ul style="list-style-type: none"> <li>• Failure to do so could cause fire, burns, electric shock, or malfunction.</li> <li>• This will protect the system against damage due to lightning.</li> </ul>
	<p>Use a mechanism (switch, outlet, etc.) located within reach to turn off (disconnect) the power supply.</p> <ul style="list-style-type: none"> <li>• In case of emergency, it may be necessary to cut off the power supply quickly.</li> </ul>
	<p>Turn off the power supply immediately if you notice abnormal odor, smoke, abnormal sound, or overheating.</p> <ul style="list-style-type: none"> <li>• Continuing to use the system in an abnormal condition could cause fire, burns, or electric shock.</li> </ul>
	<p><b>Do not integrate the product or any part of it into other equipment.</b>  <b>Do not insert or remove cables or connectors when the product is powered on.</b></p> <ul style="list-style-type: none"> <li>• The product has no safety case.</li> <li>• Failure to observe the above could cause fire, electric shock, burns, or malfunction.</li> <li>• The product may not perform as expected if used for other than its intended purpose.</li> </ul>

■ Caution Items

 <b>Caution</b>	
	<p>Before modifying any part of this product, carefully check the manual.</p> <ul style="list-style-type: none"> <li>• Incorrect modification or retrofitting may cause heat generation and device failures.</li> </ul>
	<p>Follow the procedure specified in the manual when powering the system on or off.</p> <ul style="list-style-type: none"> <li>• Failure to do so could cause overheating or malfunction.</li> </ul>
	<p>Use the cable that is less than 3m in length to be connected to the product.</p> <ul style="list-style-type: none"> <li>• Failure to do so could cause device failures or malfunction by external noise.</li> </ul>
	<p>Caution – Static Electricity</p> <ul style="list-style-type: none"> <li>• Use the antistatic band. Failure to do so could cause malfunction or unstable motion.</li> </ul>

ISL81601-US011REFZ

Solar Battery Charger with Maximum Power Point Tracking (MPPT) Reference Board

The Renesas ISL81601-US011REFZ solar battery charger board with MPPT uses energy from a solar panel (user provided) to charge a standard 12V lead acid battery. The MPPT software maximizes the power drawn from the solar panel, and the RL78/G14 microcontroller (MCU) controls the output voltage to follow a safe charging profile for the lead acid battery.

The ISL81601-US011REFZ reference boards are designed to provide a quick and easy method for creating a solar battery charger using the ISL81601 buck-boost controller, RL78/G14 MCU, ISL80410 linear regulator, and ISL28413 quad op-amp.

**Key Features**

- Up to 40V<sub>IN</sub> and 60V<sub>OUT</sub>
- Capable of 10A+ output
- Programmable output to match battery requirements up to 60V
  - Currently optimized for 12V, 8Ah lead acid battery
  - Automatically goes to float mode to maintain battery after a full charge
- Maximum power point tracking in software optimizes the power from the solar panel
- Integrated protection features include overcurrent, overtemperature, over/undervoltage, and reverse polarity protection

**Board Specifications**

- V<sub>IN</sub>: 8V to 40V
- V<sub>OUT</sub>: Bulk Charge = 14.5V @ up to 7A, Float Mode = 13.6V @ <= 0.7A

**Ordering Information**

Part Number	Description
ISL81601-US011REFZ	Solar Battery Charger with MPPT

**Related Literature**

For a full list of related documents, visit our website:

- [US011 Solar Battery Charger Winning Combination](#)
- [ISL81601](#) device page
- [RL78/G14](#) device page
- [ISL80410](#) device page
- [ISL28413](#) device page
- [ISL28022](#) device page

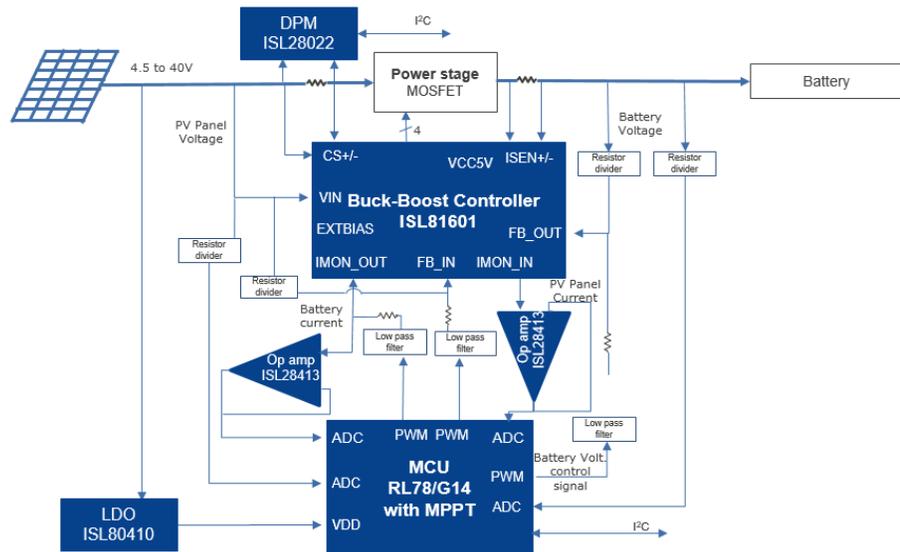


Figure 1. ISL81601-REFZ Block Diagram

# 1. Functional Description

The ISL81601\_US011REFZ utilizes the ISL81601 buck-boost controller to convert the voltage from an external solar panel into the appropriate voltage to charge a 12V lead acid battery. RL78/G14 MCU gathers telemetry data and uses it to manage the controller and follow the battery charging algorithm. The MCU is powered by the ISL80410 linear low dropout regulator (LDO), and the ISL28413 quad op-amp buffers and amplifies signals between the buck-boost controller and the MCU. The ISL28022 digital power monitor is an optional addition for systems that require higher precision current measurements.

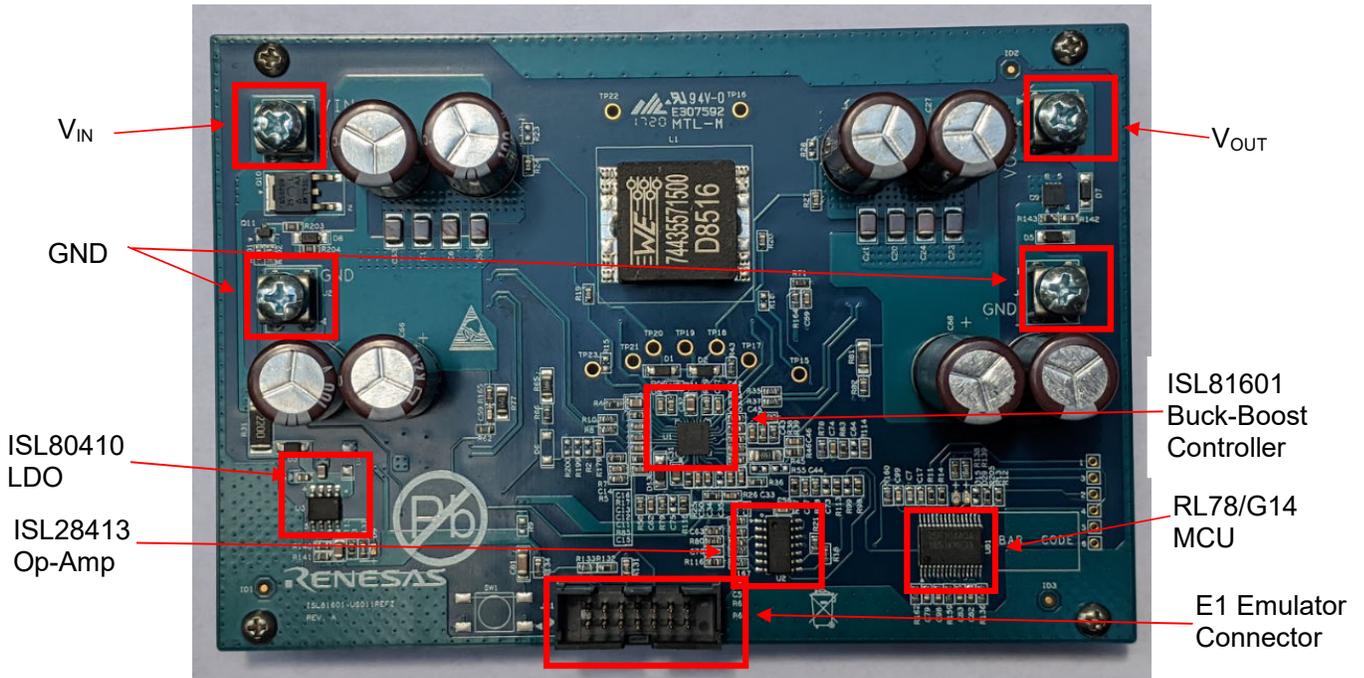


Figure 3. Board Devices and Connections

## 1.1 Operating Range

The ISL81601-US011REFZ board will operate with an input voltage between 8V to 40V. This voltage range is set to accommodate most standard solar panels. The 8V and 40V limits are set for undervoltage lockout protection and maximum voltage on the linear regulator.

## 1.2 Quick Start Guide

Using the board:


- 1) Start by connecting the wires from the solar panel to the screw down terminals on the input of the board. The J1 connector is  $V_{IN}$  and J2 is GND. The D9 red LED will light up indicating the MCU is receiving power.

Figure 3. Input Connections




- 2) The RL78/G14 turns on the D29 green LED to show it is active and initializes the board. Once all systems are nominal, the D15 yellow LED begins to blink.

Figure 4. LED Active Status Indication

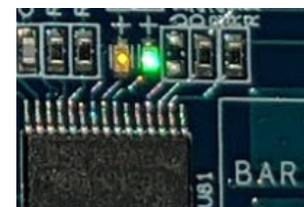

3) Connect the battery to the output of the board via the J4 ( $V_{OUT}$ ) and J5 (GND) screw down terminals. The output voltage is monitored by the MCU and the controller is enabled when the voltage is above 8V. Once operational, the output voltage and current are measured to determine the appropriate charging stage and battery charging proceeds accordingly.

NOTE: please ensure the battery is a standard 12V lead acid battery in good operating condition.

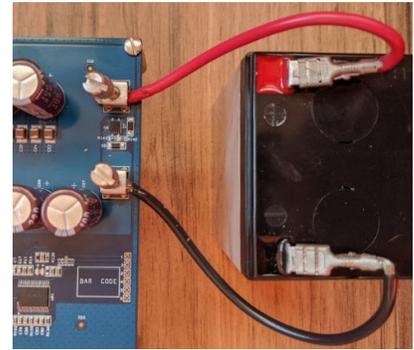

**Figure 5. Battery Connections**

4) Battery charging goes through three different stages depending on the battery power level.

a) In the bulk stage, the output of the ISL81601 is set to 14.5V and the battery pulls this voltage lower as it charges with a fixed 7A max current. The yellow LED is constantly on. In this stage, MPPT is running to maximize the power from the solar panel. Once the battery stops pulling  $V_{OUT}$  down, the current starts to decrease and the system enters the absorption stage. MPPT is turned off for this stage. The third stage activates when the output current drops below 700mA, and is the float stage. MPPT remains off and the output voltage is decreased to 13.6V. The battery is fully charged once it hits float stage and can remain on the charger in float stage indefinitely or be removed from the system as desired. The yellow LED once again blinks slowly to indicate the system is in float mode.

Note: if the solar panel is incapable of delivering 0.7A due to weather conditions, the system will measure the voltage on  $V_{out}$  to determine if it should enter float stage or stay in bulk mode. If the battery voltage stays near 13.6V ( $V_{out}$  for float stage) while pulling less than 0.7A, it is assumed the battery is fully charged.

CAUTION: Do not interrupt the MCU during operation (i.e. reset or stop using E1 emulator) as this can lead to board damage.

## 2. Default Configuration Settings

The ISL81601-US011REFZ is set to charge a 12V, 8Ah lead acid battery.

Table 1 shows the default configurations in software.

**Table 1. Default Configurations**

Spec.	Value	Comments
Input Overvoltage	42V	Output disabled if exceeded
Input Undervoltage	7.5V	Output disabled is lower than this value
Over Temperature	100 C	Output disabled if exceeded
Output Overvoltage	15V	Output disabled if exceeded
Output Undervoltage	7.5V	Output disabled is lower than this value
Bulk Stage Voltage	14.5V	$V_{OUT}$
Bulk Stage Current	7A	Maximum current limit, set to constant current
Absorption Stage Voltage	14.5V	$V_{OUT}$
Float Stage Voltage	13.5V	$V_{OUT}$
Float Stage Current	0.7A	Threshold to enter float state

### 3. Revision History

Rev.	Date	Description
0.00	TDB	Initial release

# Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc. Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

## Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.