

AI Navigator v2.0.1

Release Note

Introduction

This document describes the contents of AI Navigator v2.0.1, such as changes from the previous version, restrictions and so on. Please read it before using this tool.

Contents

1.	About AI Navigator.....	2
1.1	Summary	2
1.2	Supported Features.....	3
1.3	Target Plugin	3
1.4	Supported Environment.....	4
1.5	Supported MCU, MPU.....	4
1.6	AI Navigator Quick Start Guide	4
2.	Changes	5
2.1	AI Navigator Plugin.....	5
2.2	AI Model Conversion Tool Plugin	6
2.3	AI TLT Plugin.....	7
3.	Notes / Restrictions.....	8
3.1	Notes	8
3.1.1	[AI Model Conversion Tool Plugin] Setup the environment	8
3.1.2	[AI Model Conversion Tool Plugin] [DRP-AI TVM] Open and Close AI Model Conversion Tool GUI..	8
3.1.3	[AI Model Conversion Tool Plugin] [DRP-AI TVM] Sample code generation.....	8
3.1.4	[AI Model Conversion Tool Plugin] Model file name and workspace path	8
3.1.5	[AI Model Conversion Tool Plugin] Environment variables CONVERSION_TOOL_E2STUDIO_PLUGIN_PYTHON_VENV_LOC	9
3.1.6	[AI TLT Plugin] Installation time of RZ/V AI TLT	9
3.1.7	[AI TLT Plugin] AI applications RZ/V AI TLT supports	9
3.1.8	[AI TLT Plugin] Launching e ² studio from the terminal.....	9
3.2	Functional Restrictions	10
3.2.1	[AI Model Conversion Tool Plugin] [DRP-AI TVM] Sample code generation with multiple inputs model.....	10
3.2.2	[AI Model Conversion Tool Plugin] [DRP-AI TVM] Output Directory for Preprocessed Objects.....	11
3.3	e ² studio workarounds and information related to plugins	12
3.3.1	[e ² studio 2025-07] Help page may be blank	12
	Revision History	13

1. About AI Navigator

1.1 Summary

AI Navigator is a set of plugins for e² studio which is an integrated development environment (IDE) for Renesas devices.

AI Navigator makes it possible to integrate and operate the various functions required for AI embedded system development. This helps the development period shorter.

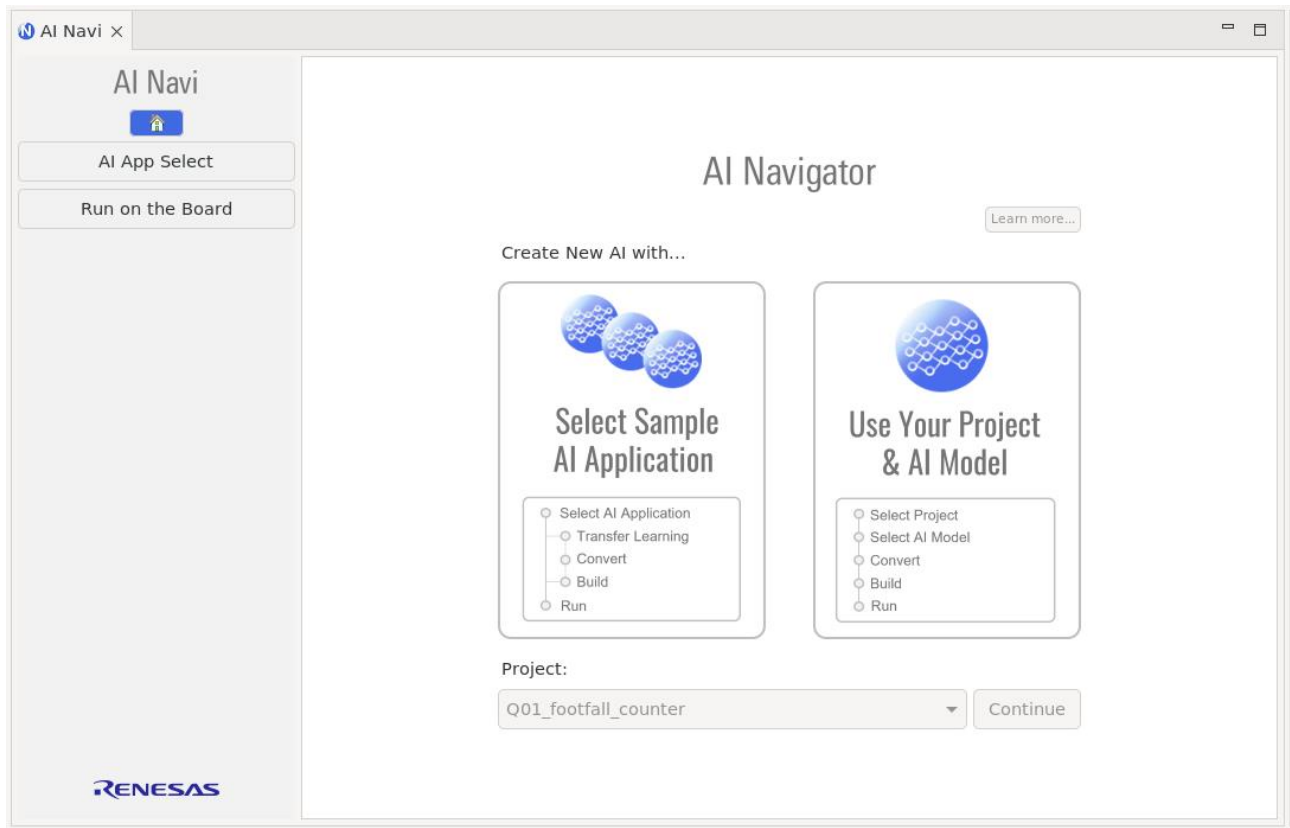


Figure 1-1 AI Navigator Home

1.2 Supported Features

This version supports the following new features.

- Supported e² studio 2025-07
Addressed the issues described in the following Tool News issued on 20th July.
[\[Notes\] e² studio 2025-07 not compatible with Reality AI Utilities, AI Navigator, QE for Capacitive Touch, QE for AFE and other QE products](#)

AI Navigator provides the following features:

- Sample AI application
Select the AI application from Renesas AI Application Zoo and download the corresponding e² studio projects. This makes it easy to start AI development.
- AI model conversion
Convert AI models into an executable format suitable for the device's AI accelerator.
 - RZ/V: Convert an AI model into executable code for DRP-AI using TVM.
 - RA8P1: Convert an AI model into executable code for Arm® Ethos™-U55 using RUHMI.
- Transfer learning*
This feature allows the users to customize AI models in Renesas AI applications with their own datasets.
*Note: Available on RZ/V (Linux environment) only in this version.
- User project*
Develop an AI application with a user project that includes any AI model on e² studio.
*Note: Available on RA8P1 (Windows environment) only in this version.

1.3 Target Plugin

- Renesas AI Navigator plugin v2.0.1
- AI Model Conversion Tool plugin v2.0.0 *Plugin for AI Model Conversion Tool
- AI Transfer Learning Tool plugin v2.0.0 *Plugin for Transfer Learning Tool, Linux only in this version.

Note: From here on, each of the above plugin names is described as follows.

- AI Navigator Plugin
- AI Model Conversion Tool Plugin
- AI TLT Plugin

1.4 Supported Environment

- RZ/V
 - Ubuntu 20.04 LTS
 - Renesas e² studio 2025-01 Linux Host

*Download it from the link below.
<https://www.renesas.com/document/uid/e-studio-2025-01-installer-linux>
- RA8P1
 - Windows 10 / Windows 11
 - Renesas e² studio 2025-07 or later
 - RA Flexible Software Package (FSP) v6.0.0 or later

<https://www.renesas.com/software-tool/flexible-software-package-fsp>
<https://github.com/renesas/fsp>

1.5 Supported MCU, MPU

RZ family

RZ/V Series RZ/V2H, RZ/V2N, and RZ/V2L group

RA family

RA8 Series RA8P1 group

1.6 AI Navigator Quick Start Guide

Please read the AI Navigator Quick Start Guide to learn how to install and use AI Navigator.

- RZ/V: https://renesas-rz.github.io/rzv_ai_sdk/latest/ainavi_quick_start_guide
- RA8P1: Read Chap.4 in “[Renesas RUHMI AI Compiler Quick Start Guide](#)”.

2. Changes

This chapter explains the changes of each plugin from the previous version.

2.1 AI Navigator Plugin

Table 2-1 Changes (AI Navigator Plugin)

Items	Change details	
	Previous version (v2.0.0)	This version (v2.0.1)
Plugin version	AI Navigator Plugin v2.0.0	AI Navigator Plugin v2.0.1
Support for e ² studio 2025-07	-	Implemented support for the new versions of Eclipse and CDT in e ² studio 2025-07.

2.2 AI Model Conversion Tool Plugin

There are changes from AI Navigator v2.0.0.

Table 2-2 Changes (AI Model Conversion Tool Plugin)

Items	Change details	
	Previous version (v1.3.0)	This version (v2.0.0)
Plugin version	AI Model Conversion Tool plugin v1.3.0	AI Model Conversion Tool plugin v2.0.0
Support for RUHMI AI Compiler	-	Added support for the following AI Compiler: - RUHMI AI Compiler (for RA8P1) Accordingly, some parts of the design on Conversion Tool view have been changed.
Halt function during AI model conversion	AI model conversion cannot be forcibly stopped.	AI model conversion cannot be forcibly stopped.
AI Model Conversion Tool Help page	-	Updated for v2.0.0.

2.3 AI TLT Plugin

There are no changes from AI Navigator v2.0.0.

Table 2-3 Changes (AI TLT Plugin)

Items	Change details	
	Previous version (v1.3.0)	This version (v2.0.0)
Plugin name & version	AI Transfer Learning Tool Plugin v1.3.0	AI Transfer Learning Tool Plugin v2.0.0
Removed a note	3.1.2 [AI TLT Plugin] Interruption during RZ/V AI TLT installation If the [Cancel] button is clicked while installing RZ/V AI TLT via the [Start Settings...] button on AI Navigator, the installation will be interrupted, but the progress up to that point will be retained. Please click [Start Settings...] again to complete the installation.	Removed the note on the left. When the installation of RZ/V AI TLT is interrupted by [Cancel] button, any files that have already been installed and RZ/V AI TLT Docker image will be automatically cleaned up.
Removed a note	3.1.3 [AI TLT Plugin] Individual installation If RZ/V AI TLT was installed independently without the e² studio environment, it may not start properly via [Start Settings...] on AI Navigator. Please reinstall RZ/V AI TLT via [Start Settings...] on AI Navigator with the e² studio.	Removed the note on the left. If RZ/V AI TLT is already installed on the machine and an installation is attempted again, the RZ/V AI TLT plugin will display a message confirming reinstallation. To proceed with reinstallation and integrate with the e² studio, click [Yes].
Removed a note	3.1.4 [AI TLT Plugin] End of transition learning tools through dialogue If you click the cancel button in the modal dialog while the RZ/V AI TLT is being started by clicking [Cancel], the RZ/V AI TLT will also be terminated. In addition, the function for automatically inputting the ONNX model obtained as a result of transfer learning by the RZ/V AI TLT into the AI Model Conversion Tool Plugin may not work.	Removed the note on the left. If the [Cancel] button is clicked on the modal dialog while RZ/V AI TLT is running, a warning dialog will appear indicating that unexpected behavior may occur due to forced termination. Click [Yes] to proceed.

3. Notes / Restrictions

This section describes the notes and restrictions for each plugin in this release.

3.1 Notes

The following notes have been added or updated in this version.

- 3.1.4 [AI Model Conversion Tool Plugin] Model file name and workspace path
- 3.1.5 [AI Model Conversion Tool Plugin] Environment variables
CONVERSION_TOOL_E2STUDIO_PLUGIN_PYTHON_VENV_LOC

3.1.1 [AI Model Conversion Tool Plugin] Setup the environment

If you click [Start Settings...] without specifying the directory path of the downloaded RZ/V AI SDK zip file, the warning window indicates that the directory path has not been specified appears. Click [Start Settings...] again after specifying the directory path.

Also, setting up the environment for AI Model Conversion Tool Plugin may take some time depending on network conditions.

3.1.2 [AI Model Conversion Tool Plugin] [DRP-AI TVM] Open and Close AI Model Conversion Tool GUI

Open the AI Model Conversion Tool GUI only when converting AI models with it.

If you keep this GUI open during another process, the correct directory/file path may not be set in this GUI. (For example, RZ/V AI SDK directly downloaded path and the trained AI model file path from RZ/V AI TLT.)

3.1.3 [AI Model Conversion Tool Plugin] [DRP-AI TVM] Sample code generation

In the sample code generation function for RZ/V, the input model must be in image format. Other format input models, such as multi-layer perception (1D and other models), are not supported.

3.1.4 [AI Model Conversion Tool Plugin] Model file name and workspace path

If the model file name or workspace path contains spaces, errors may occur during quantization or conversion. Please replace spaces with underscores (" _ ") or other suitable characters.

(e.g.1) Model file name

- Convertible: input model.onnx
- Unconvertible: input_model.onnx

(e.g. 2) Workspace path

- Convertible: C:\Work space
- Unconvertible: C:\Work_space

3.1.5 [AI Model Conversion Tool Plugin] Environment variables CONVERSION_TOOL_E2STUDIO_PLUGIN_PYTHON_VENV_LOC

If the following error occurs, please try one of the following tips.

```
[ERROR] Failed to find the environment variable:  
"CONVERSION_TOOL_E2STUDIO_PLUGIN_PYTHON_VENV_LOC"  
[ERROR] Set the Python virtual environment path as environment variable:  
"CONVERSION_TOOL_E2STUDIO_PLUGIN_PYTHON_VENV_LOC"  
[ERROR] If it is already set, restart e2studio to reload the environment variables.
```

- Check the environment variables
Please confirm that "CONVERSION_TOOL_E2STUDIO_PLUGIN_PYTHON_VENV_LOC" is defined in User Environment Variables in Windows.
When using PowerShell, run the following command to check.

```
PS > $env:CONVERSION_TOOL_E2STUDIO_PLUGIN_PYTHON_VENV_LOC  
C:\Users\<User name>\venv // The environment variables will be displayed.
```

- Restart e² studio
To ensure the environment variables are applied, please restart e² studio. If e² studio is launched from a console, restart the console as well.

3.1.6 [AI TLT Plugin] Installation time of RZ/V AI TLT

Installation of the RZ/V AI Transfer Learning Tool (hereafter referred to as RZ/V AI TLT) may take some time depending on network conditions.

3.1.7 [AI TLT Plugin] AI applications RZ/V AI TLT supports

Please refer to the following web page for the AI applications supported by the RZ/V AI TLT.

(URL) https://renesas-rz.github.io/rzv_ai_sdk/5.20/howto_retrain.html

When you click [Transfer Learning...] in these application projects, the error message "No executable transfer learning plug-ins were found" is displayed. RZ/V AI TLT may support these applications in the future.

3.1.8 [AI TLT Plugin] Launching e² studio from the terminal

When starting the e² studio from the terminal, you may need to enter your root password to start RZ/V AI TLT after clicking [Transfer Learning...] in the AI Navigator.

3.2 Functional Restrictions

No new or updated functional restrictions in this release.

3.2.1 [AI Model Conversion Tool Plugin] [DRP-AI TVM] Sample code generation with multiple inputs model

The sample code generation with multiple inputs may fail in the following case:

- The output directory in view 1 differs from that in view 2.

(e.g.)

- Output directory in view 1:
test1
- Output directory in view 2:
input 1: **test2**/Preprocess_input1
input 2: **test2**/Preprocess_input2

Workaround:

Specify the same directory in the preprocess setting of view 2.

(e.g.)

- Output directory in view 1:
test1
- Output directory in view 2:
input 1: **test1**/Preprocess_input1
input 2: **test1**/Preprocess_input2

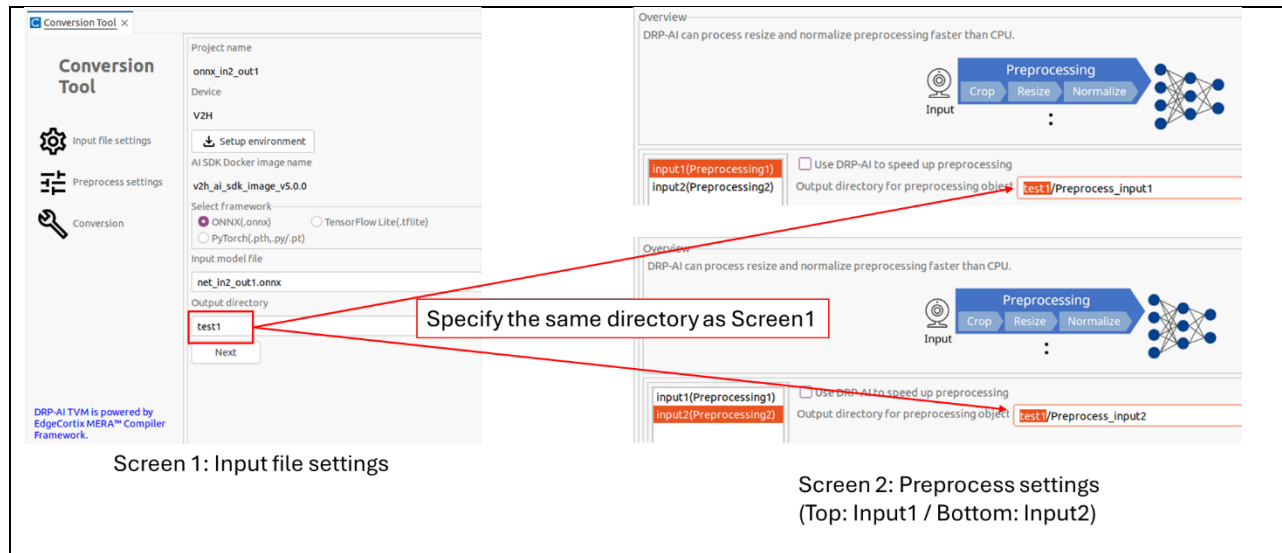


Figure 3-1 Workaround for 3.2.1

3.2.2 [AI Model Conversion Tool Plugin] [DRP-AI TVM] Output Directory for Preprocessed Objects

Specifying a non-existent folder in view 2 may cause the preprocessed object to be output to an unexpected location.

(e.g.)

1. In view2 (preprocess setting view), set the output directory to “test1/preprocess”. At this point, “test1/preprocess” directory does not exist.
2. Proceed to view 3.
3. The preprocess object is output to “test1/”, instead of “test1/preprocess”.

Workaround:

Specify the existing directory in the preprocess setting of view 2.

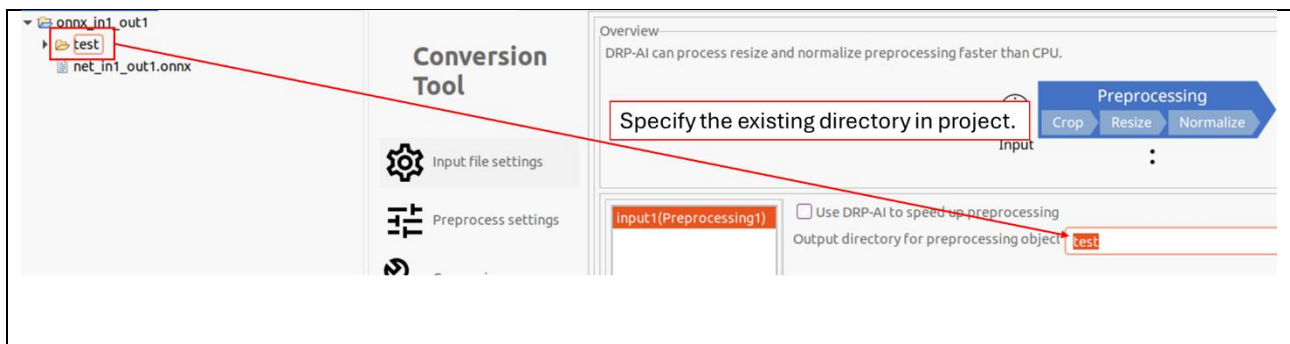


Figure 3-2 Workaround for 3.2.2

3.3 e² studio workarounds and information related to plugins

This section describes the e² studio workarounds related to the released plugins.

Regarding all the e² studio workarounds and information, please refer to the release note for each version of e² studio.

- <https://www.renesas.com/en/software-tool/e-studio>

3.3.1 [e² studio 2025-07] Help page may be blank

When clicking [Learn more...] button on AI Navigator Home page, AI Navigator help page may be blank as below.

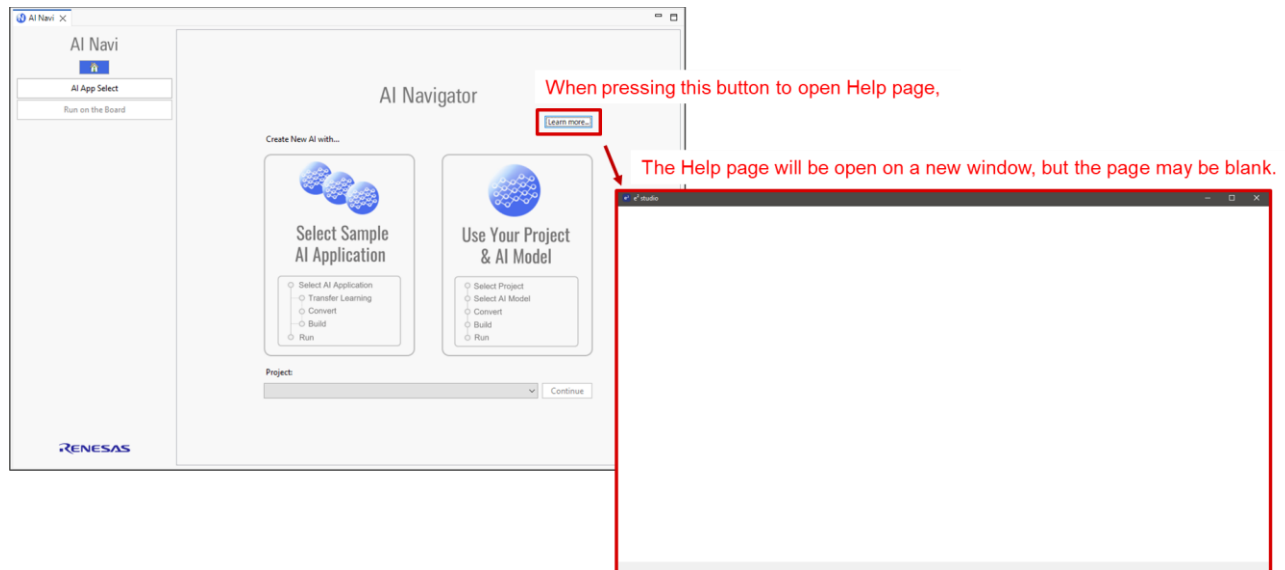


Figure 3-3 Example of the behavior when clicking the [Learn more...] button

If closing & reopening the view does not fix the issue, then the line "chromium.integration.eclipse.disable=true" should be added to the end of "configuration/config.ini" in the install directory of e² studio.

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Jul 31, 2025	-	Issued for AI Navigator v2.0.1.

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity.

Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.