

# Smart Configurator for RH850 V1.6.0

## Release Note

### Introduction

Thank you for using the Smart Configurator for RH850.

This document describes the restrictions and points for caution. Read this document before using the product.

### Contents

|                                                                                                   |    |
|---------------------------------------------------------------------------------------------------|----|
| 1. Introduction.....                                                                              | 3  |
| 1.1 System requirements.....                                                                      | 3  |
| 1.1.1 PC.....                                                                                     | 3  |
| 1.1.2 Development Environments .....                                                              | 3  |
| 2. Support List .....                                                                             | 4  |
| 2.1 Support Devices List.....                                                                     | 4  |
| 2.2 Support Components List.....                                                                  | 5  |
| 2.3 New support .....                                                                             | 8  |
| 2.3.1 Smart Configurator icon is added into About dialog .....                                    | 8  |
| 3. Changes .....                                                                                  | 9  |
| 3.1 Correction of issues/limitations.....                                                         | 9  |
| 3.1.1 Fixed T&H path self-diagnosis function of A/D Converter enabled/disabled failed issue ..... | 9  |
| 3.1.2 Fixed redundant macros and wrong comments issue in A/D Converter header file .....          | 9  |
| 3.2 Specification changes .....                                                                   | 10 |
| 3.2.1 Improved Physical channel selection function of A/D Converter .....                         | 11 |
| 3.2.2 Improved message of local RAM access for DMA Controller .....                               | 11 |
| 3.2.3 Improved PLL0/PLL1 clock selection .....                                                    | 12 |
| 3.2.4 Improved generated code of DMA suspended/resumed function.....                              | 12 |
| 3.2.5 Improved MSPI Master/MSPI Slave UI .....                                                    | 13 |
| 3.2.6 Improved Interrupt tool to display interrupt resource sharing same interrupt channel .....  | 14 |
| 3.2.7 Improved Data format setting of A/D converter .....                                         | 14 |
| 3.2.8 Improved generated code of A/D Converter Synchronization Start function .....               | 14 |
| 3.2.9 Improved generated code of A/D converter voltage monitoring voltage divider function.....   | 15 |
| 3.2.10 Improved generated code of getting A/D conversion result .....                             | 15 |
| 4. List of RENESAS TOOL NEWS AND TECHNICAL UPDATE .....                                           | 16 |
| 5. Points for Limitation .....                                                                    | 18 |
| 5.1 List of Limitation.....                                                                       | 18 |
| 5.2 Details of Limitation .....                                                                   | 18 |
| 5.2.1 Note on using RIIC .....                                                                    | 18 |

---

|       |                                                                |    |
|-------|----------------------------------------------------------------|----|
| 5.2.2 | Note on using Physical channel of A/D Converter .....          | 19 |
| 5.2.3 | Note on using Common operation setting of A/D Converter .....  | 19 |
| 6.    | Points for Caution .....                                       | 20 |
| 6.1   | List of Caution.....                                           | 20 |
| 6.2   | Details of Caution .....                                       | 21 |
| 6.2.1 | About the I/O define header file.....                          | 21 |
| 6.2.2 | About loading the project on CS+ .....                         | 21 |
| 6.2.3 | About the sample project.....                                  | 21 |
| 6.2.4 | About the decimal point.....                                   | 21 |
| 6.2.5 | Note on pins sharing functions.....                            | 21 |
| 6.2.6 | Note on Interrupt Controller resource name.....                | 22 |
| 6.2.7 | Note on DMA/DTS trigger generator setting of MSPI Master ..... | 22 |
| 6.2.8 | Note on CPU Operating mode of DTS Controller .....             | 23 |
|       | Revision History .....                                         | 24 |

## 1. Introduction

Smart Configurator is a utility for combining software to meet your needs. It supports the following three functions related to the embedding of Renesas drivers in your systems: importing middleware, generating driver code, and setting pins.

### 1.1 System requirements

The operating environment is as follows.

#### 1.1.1 PC

- IBM PC/AT compatibles (Windows® 11 64-bit version, Windows® 10 64-bit versions, Windows® 8.1 64-bit versions)
- Processor: 1 GHz or higher (must support hyper-threading, multi-core CPUs)
- Memory capacity: 4 GB or more recommended.
- Hard disk capacity: 500 MB or more spare capacity
- Display: 1024 x 768 or higher resolution, 65,536 or more colors

#### 1.1.2 Development Environments

- Renesas electronics Compiler for RH850 [CC-RH] V2.03.00 or later
- GHS Multi V7.1.6 or later
- IAR Embedded Workbench for RH850 V2.21.1 or later

## 2. Support List

### 2.1 Support Devices List

Below is a list of devices supported by the Smart Configurator for RH850 V1.6.0.

**Table 2-1 Support Devices**

| <b>Group<br/>(HW Manual number)</b>         | <b>PIN</b> | <b>Device name<br/>(Device file version)</b> |
|---------------------------------------------|------------|----------------------------------------------|
| RH850/F1KM-S1<br>Group<br>(R01UH0684EJ0100) | 48pin      | R7F701693, R7F701694, R7F701695              |
|                                             | 64pin      | R7F701690, R7F701691, R7F701692              |
|                                             | 80pin      | R7F701687, R7F701688, R7F701689              |
|                                             | 100pin     | R7F701684, R7F701685, R7F701686              |
| RH850/F1KM-S4<br>Group<br>(R01UH0684EJ0100) | 100pin     | R7F701644, R7F701645                         |
|                                             | 144pin     | R7F701646, R7F701647                         |
|                                             | 176pin     | R7F701648, R7F701649                         |
|                                             | 232pin     | R7F701650, R7F701651                         |
| RH850/U2A16 Group<br>(R01UH0864EJ0061)      | 292pin     | R7F702300(V1.10)                             |
|                                             | 516pin     | R7F702300(V1.10)                             |
| RH850/U2A8 Group<br>(R01UH0864EJ0061)       | 292pin     | R7F702301(V1.00)                             |
| RH850/F1KH-D8<br>Group<br>(R01UH0684EJ0111) | 176pin     | R7F701708, R7F701709 (V1.20)                 |
|                                             | 233pin     | R7F701710, R7F701711 (V1.20)                 |
|                                             | 324pin     | R7F701714, R7F701715 (V1.20)                 |
| RH850/C1M-A2<br>Group<br>(R01UH0607EJ0120)  | 252pin     | R7F701275(V1.10)                             |

## 2.2 Support Components List

Below is a list of Components supported by the Smart Configurator for RH850 V1.6.0.

**Table 2-2 Support Components**

✓: Support, -: Non-support

| No | Components                        | Mode                    | RH850<br>F1KM | RH850<br>U2A | RH850<br>F1KH | RH850<br>C1M | Remarks |
|----|-----------------------------------|-------------------------|---------------|--------------|---------------|--------------|---------|
| 1  | A/D Converter                     | -                       | ✓             | ✓            | -             | ✓            |         |
| 2  | CSI Master                        | Master Transmit         | ✓             | -            | ✓             | ✓            |         |
|    |                                   | Master Receive          | ✓             | -            | ✓             | ✓            |         |
|    |                                   | Master Transmit/Receive | ✓             | -            | ✓             | ✓            |         |
| 3  | CSI Slave                         | Slave Transmit          | ✓             | -            | ✓             | ✓            |         |
|    |                                   | Slave Receive           | ✓             | -            | ✓             | ✓            |         |
|    |                                   | Slave Transmit/Receive  | ✓             | -            | ✓             | ✓            |         |
| 4  | Data CRC                          | -                       | ✓             | ✓            | -             | ✓            |         |
| 5  | DMA Controller                    | -                       | ✓             | ✓            | -             | ✓            |         |
| 6  | DTS Controller                    | -                       | -             | ✓            | -             | ✓            |         |
| 7  | Error Control Module              | -                       | -             | ✓            | -             | ✓            |         |
| 8  | ATOM Signal Output Mode Compare   | -                       | -             | ✓            | -             | -            |         |
| 9  | ATOM Signal Output Mode Immediate | -                       | -             | ✓            | -             | -            |         |
| 10 | ATOM Signal Output Mode PWM       | -                       | -             | ✓            | -             | -            |         |
| 11 | ATOM Signal Output Mode Serial    | -                       | -             | ✓            | -             | -            |         |
| 12 | Dead Time Module                  | -                       | -             | ✓            | -             | -            |         |
| 13 | GTM Clock                         | -                       | -             | ✓            | -             | -            |         |
| 14 | TIM Bit Compression Mode          | -                       | -             | ✓            | -             | -            |         |
| 15 | TIM Gated Periodic Sampling Mode  | -                       | -             | ✓            | -             | -            |         |
| 16 | TIM Input Event Mode              | -                       | -             | ✓            | -             | -            |         |
| 17 | TIM Input Prescaler Mode          | -                       | -             | ✓            | -             | -            |         |
| 18 | TIM Pulse Integration Mode        | -                       | -             | ✓            | -             | -            |         |
| 19 | TIM PWM Measurement Mode          | -                       | -             | ✓            | -             | -            |         |

Table 2-3 Support Components

✓: Support, -: Non-support

| No | Components                  | Mode                                     | RH850<br>F1KM | RH850<br>U2A | RH850<br>F1KH | RH850<br>C1M | Remarks                     |
|----|-----------------------------|------------------------------------------|---------------|--------------|---------------|--------------|-----------------------------|
| 20 | TIM Serial Shift Mode       | -                                        | -             | ✓            | -             | -            |                             |
| 21 | Time Base Unit              | -                                        | -             | ✓            | -             | -            |                             |
| 22 | Interrupt Controller        | -                                        | ✓             | ✓            | -             | ✓            | Only table reference method |
| 23 | Key Return                  | -                                        | ✓             | -            | -             | -            |                             |
| 24 | MSPI Master                 | Transmit                                 | -             | ✓            | -             | -            | No support LVDS mode        |
|    |                             | Receive                                  | -             | ✓            | -             | -            |                             |
|    |                             | Transmit/Receive                         | -             | ✓            | -             | -            |                             |
| 25 | MSPI Slave                  | Transmit                                 | -             | ✓            | -             | -            |                             |
|    |                             | Receive                                  | -             | ✓            | -             | -            |                             |
|    |                             | Transmit/Receive                         | -             | ✓            | -             | -            |                             |
| 26 | OS Timer                    | -                                        | ✓             | ✓            | -             | ✓            |                             |
| 27 | Ports                       | -                                        | ✓             | ✓            | ✓             | ✓            |                             |
| 28 | Real-Time Clock             | -                                        | ✓             | ✓            | -             | -            |                             |
| 29 | RIIC                        | Master                                   | ✓             | ✓            | ✓             | ✓            |                             |
|    |                             | Slave                                    | ✓             | ✓            | ✓             | ✓            |                             |
| 30 | SCI3 Asynchronous Mode      | Transmission                             | -             | ✓            | -             | ✓            |                             |
|    |                             | Reception                                | -             | ✓            | -             | ✓            |                             |
|    |                             | Transmission / Reception                 | -             | ✓            | -             | ✓            |                             |
|    |                             | Multi-processor Transmission             | -             | ✓            | -             | ✓            |                             |
|    |                             | Multi-processor Reception                | -             | ✓            | -             | ✓            |                             |
|    |                             | Multi-processor Transmission / Reception | -             | ✓            | -             | ✓            |                             |
| 31 | SCI3 Clock Synchronous Mode | Transmission                             | -             | ✓            | -             | ✓            |                             |
|    |                             | Reception                                | -             | ✓            | -             | ✓            |                             |
|    |                             | Transmission / Reception                 | -             | ✓            | -             | ✓            |                             |
| 32 | Stand-by Controller         | -                                        | ✓             | ✓            | -             | -            | Only Stop and DeepStop mode |
| 33 | Clock Divider               | -                                        | ✓             | ✓            | ✓             | ✓            |                             |
| 34 | Delay Count                 | -                                        | ✓             | ✓            | ✓             | ✓            |                             |

Table 2-4 Support Components


✓: Support, -: Non-support

| No | Components                                               | Mode                     | RH850<br>F1KM | RH850<br>U2A | RH850F1<br>KH | RH850<br>C1M | Remarks |
|----|----------------------------------------------------------|--------------------------|---------------|--------------|---------------|--------------|---------|
| 35 | External Event Count                                     | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 36 | Input Interval Timer                                     | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 37 | Input Period Count Detection                             | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 38 | Input Position Detection                                 | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 39 | Input Pulse Interval Judgment                            | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 40 | Input Pulse Interval Measurement                         | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 41 | Input Signal Width Judgement                             | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 42 | Input Signal Width Measurement                           | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 43 | Interval Timer                                           | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 44 | One-Pulse Output                                         | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 45 | One-Shot Pulse output                                    | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 46 | Overflow Interrupt Output (Input Period Count Detection) | -                        | ✓             | ✓            | ✓             | -            |         |
| 47 | Overflow Interrupt Output (Width Measurement)            | -                        | ✓             | ✓            | ✓             | -            |         |
|    | PWM Output                                               | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 49 | Triangle PWM Output                                      | -                        | ✓             | ✓            | ✓             | ✓            |         |
| 50 | Triangle PWM Output with Dead Time                       | -                        | -             | ✓            | ✓             | ✓            |         |
| 51 | UART Interface                                           | Transmission             | ✓             | ✓            | ✓             | ✓            |         |
|    |                                                          | Reception                | ✓             | ✓            | ✓             | ✓            |         |
|    |                                                          | Transmission / Reception | ✓             | ✓            | ✓             | ✓            |         |
| 52 | Window Watchdog Timer                                    | -                        | ✓             | ✓            | -             | ✓            |         |

## 2.3 New support

### 2.3.1 Smart Configurator icon is added into About dialog

From Smart Configurator for RH850 V1.6.0, Smart Configurator icon is added into the About dialog. User can learn more about Smart Configurator by clicking the icon, such as license information.

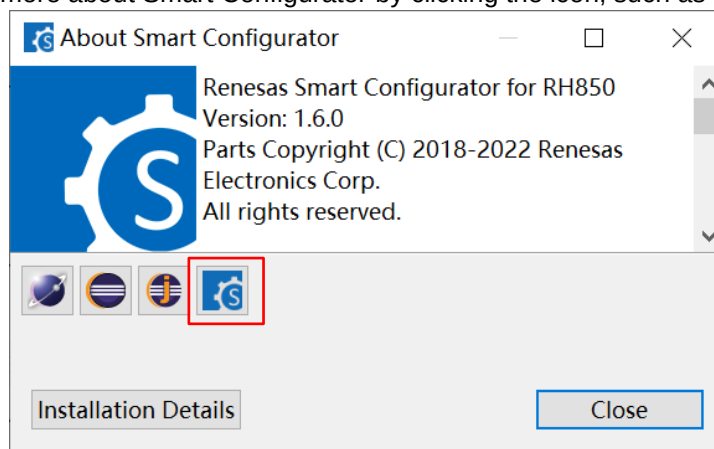

**Figure 2-1. Smart configurator icon is added into About dialog**



### 3. Changes

This chapter describes changes to the Smart Configurator for RH850 V1.6.0.

#### 3.1 Correction of issues/limitations

**Table 3-1 List of Correction of issues/limitations**

✓ : Applicable, -: Not Applicable

| No | Description                                                                           | RH850<br>F1KM | RH850<br>U2A | RH850<br>F1KH | RH850<br>C1M | Remarks |
|----|---------------------------------------------------------------------------------------|---------------|--------------|---------------|--------------|---------|
| 1  | Fixed T&H path self-diagnosis function of A/D Converter enabled/disabled failed issue | -             | ✓            | -             | -            |         |
| 2  | Fixed redundant macros and wrong comments issue in A/D Converter header file          | -             | ✓            | -             | -            |         |

##### 3.1.1 Fixed T&H path self-diagnosis function of A/D Converter enabled/disabled failed issue

When using T&H path self-diagnosis function of A/D Converter, the function can't be enabled/disabled correctly even if the T&H path self-diagnosis function is already selected/unselected on GUI. The actual generated code is the opposite of the GUI setting. Please refer to the document number R20TS0806 of RENESAS TOOL NEWS. This issue has been fixed from Smart Configurator for RH850 V1.6.0.

##### 3.1.2 Fixed redundant macros and wrong comments issue in A/D Converter header file

When using A/D Converter, there are mistakes in header file(r\_cg\_ad.h). Please refer to the document number R20TS0806 of RENESAS TOOL NEWS. This issue has been fixed from Smart Configurator for RH850 V1.6.0.

### 3.2 Specification changes

Table 3-2 List of Specification changes

✓ : Applicable, -: Not Applicable

| No | Description                                                                          | RH850F1<br>KM | RH850U2<br>A | RH850F1<br>KH | RH850C1<br>M | Remarks |
|----|--------------------------------------------------------------------------------------|---------------|--------------|---------------|--------------|---------|
| 1  | Improved Physical channel selection function of A/D Converter                        | ✓             | -            | -             | -            |         |
| 2  | Improved message of local RAM access for DMA Controller                              | ✓             | ✓            | -             | -            |         |
| 3  | Improved PLL0/PLL1 clock selection                                                   | -             | -            | -             | ✓            |         |
| 4  | Improved generated code of DMA suspended/resumed function                            | ✓             | -            | -             | -            |         |
| 5  | Improved MSPI Master/MSPI Slave UI                                                   | -             | ✓            | -             | -            |         |
| 6  | Improved Interrupt tool to display interrupt resource sharing same interrupt channel | ✓             | ✓            | ✓             | ✓            |         |
| 7  | Improved Data format setting of A/D converter                                        | -             | ✓            | -             | -            |         |
| 8  | Improved generated code of A/D Converter Synchronization Start function              | -             | ✓            | -             | -            |         |
| 9  | Improved generated code of A/D converter voltage monitoring voltage divider function | -             | ✓            | -             | -            |         |
| 10 | Improved generated code of getting A/D conversion result                             | ✓             | ✓            | -             | -            |         |

### 3.2.1 Improved Physical channel selection function of A/D Converter

From Smart Configurator for RH850 V1.6.0, when using A/D Converter component, regardless of 10-bit mode or 12-bit mode, all Physical Channels (ADCA01x, ADCA01xS) can be selected.

Setting Scan group 1

Common operation setting

12/10 bit select mode 12-bit mode

Sampling control setting

Sampling time 18 cycles

Scan group selecting

☒ Use scan group 1

Start pointer of virtual channel 0

End pointer of virtual channel 0

☐ Use scan group 2

Start pointer of virtual channel 0

End pointer of virtual channel 0

☐ Use scan group 3

Start pointer of virtual channel 0

End pointer of virtual channel 0

Virtual channel setting

Virtual channel 00

Physical channel select ADCA018, ADCA019, ADCA0110, ADCA0111, ADCA0112, ADCA0113, ADCA0114, ADCA0115, ADCA010S, ADCA011S, ADCA012S, ADCA013S, ADCA014S, ADCA015S, ADCA010

Upper limit/lower limit table select Not checked

Figure 3-1. All physical channels are supported in 10-bit/12-bit mode

### 3.2.2 Improved message of local RAM access for DMA Controller

From Smart Configurator for RH850 V1.6.0, when set Source address and Destination address to access local RAM, prompt message displayed on UI to tell user to set PEG register first.

Transfer setting

When accessing local RAM, please set the PEG registers first.

Source address 0x00000000

Read transfer data size 1-byte

Destination address 0x00000000

Write transfer data size 1-byte

Transfer size 0

Address mode Fixed

Figure 3-2. PEG register setting message

### 3.2.3 Improved PLL0/PLL1 clock selection

From Smart Configurator for RH850 V1.6.0, user can select PLL1 as the source of Divider 0A on Clock UI, but user must add code to switch to PLL0 manually according to prompt message “Need to be added codes to switch to PLL0 by user”.

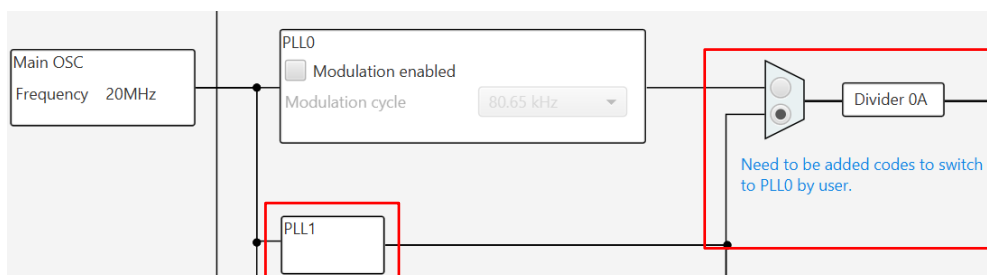


Figure 3-3. PLL1 selected as the source of Divider 0A

### 3.2.4 Improved generated code of DMA suspended/resumed function

From Smart Configurator for RH850 V1.6.0, APIs to support DMA transfer for all channels suspended/resumed function of DMA Controller are added:

Source file: `r_cg_dma_common.c`

API added: `void R_PDMA0_Suspend (void)`  
`void R_PDMA0_Resume (void)`

### 3.2.5 Improved MSPI Master/MSPI Slave UI

From Smart Configurator for RH850 V1.6.0, MSPI Master and MSPI Slave UI are improved for more easier understanding and use.

- 1) "Error: xxx%" is added for user to understand current error value (Only for MSPI Master).

| Baudrate setting |                                                                         |
|------------------|-------------------------------------------------------------------------|
| Baudrate         | <input type="text" value="1000"/> (kbps) (Actual value:1000, Error: 0%) |

Figure 3-4. UI setting for Baudrate

- 2) DMA/DTS trigger generator setting is improved easier to understand and use.

| DMA/DTS trigger generator setting                   |                                         |
|-----------------------------------------------------|-----------------------------------------|
| <input checked="" type="radio"/> DMA trigger signal | Trigger1(DMAMSPI0)/Trigger2(DMAMSPI1) ▼ |
| <input type="radio"/> DTS trigger signal            | Trigger1(DTSMSPi0)/Trigger2(DTSMSPi1) ▼ |
| Trigger1                                            | None ▼                                  |
| Trigger2                                            | None ▼                                  |

Figure 3-5. DMA/DTS trigger generator setting

- 3) Display fixed value of "Setup time/Hold time/Idle time/Inter-data time" (only for MSPI Slave).

| Communication setting   |                                 |                 |                                |
|-------------------------|---------------------------------|-----------------|--------------------------------|
| Setup time              | Fixed as 1 MSPInCLK             | Hold time       | Fixed as 1 MSPInCLK            |
| Idle time               | Fixed as 1 MSPInCLK             | Inter-data time | None                           |
| Frame length            | <input type="text" value="32"/> | Frame count     | <input type="text" value="1"/> |
| Communication direction | MSB ▼                           |                 |                                |

Figure 3-6. Setup time/Hold time/Idle time/Inter-data time setting

### 3.2.6 Improved Interrupt tool to display interrupt resource sharing same interrupt channel

From Smart Configurator for RH850 V1.6.0, Interrupt tool supports displaying all interrupt resource which share same interrupt channel as following figure shows:

| Vector N | Exception Sou | Interrupt        | Interrupt request source              | Periph | Priority | Stat | OS manage... |
|----------|---------------|------------------|---------------------------------------|--------|----------|------|--------------|
| 8        | 1008H         | INTTAUD0I0/I...  | Interrupt for CH0 of TAUD0            | TAUD0  | Lowest   |      |              |
| 9        | 1009H         | INTTAUD0I2/I...  | Interrupt for CH2 of TAUD0            | TAUD0  | Lowest   |      |              |
| 10       | 100AH         | INTTAUD0I4/I...  | Interrupt for CH4 of TAUD0            | TAUD0  | Lowest   |      |              |
| 11       | 100BH         | INTTAUD0I6/I...  | Interrupt for CH6 of TAUD0            | TAUD0  | Lowest   |      |              |
| 12       | 100CH         | INTTAUD0I8/I...  | Interrupt for CH8 of TAUD0            | TAUD0  | Lowest   |      |              |
| 13       | 100DH         | INTTAUD0I10/I... | Interrupt for CH10 of TAUD0           | TAUD0  | Lowest   |      |              |
| 14       | 100EH         | INTTAUD0I12/I... | Interrupt for CH12 of TAUD0           | TAUD0  | Lowest   |      |              |
| 15       | 100FH         | INTTAUD0I14/I... | Interrupt for CH14 of TAUD0           | TAUD0  | Lowest   |      |              |
| 16       | 1010H         | INTTAPA0IPEK...  | Interrupt for CH16 of TAUD0           | TAUD0  | Lowest   |      |              |
| 17       | 1011H         | INTTAPA0IVLY...  | Interrupt for CH17 of TAUD0           | TAUD0  | Lowest   |      |              |
| 18       | 1012H         | INTADCA0I0       | ADCA0 SG1 end interrupt               | ADCA0  | Lowest   |      |              |
| 19       | 1013H         | INTADCA0I1       | ADCA0 SG2 end interrupt               | ADCA0  | Lowest   |      |              |
| 20       | 1014H         | INTADCA0I2/I...  | Interrupt for CH20 of TAUD0           | TAUD0  | Lowest   |      |              |
| 21       | 1015H         | INTDCUTDI        | Dedicated interrupt for on-chip de... | Port   | Lowest   |      |              |

Figure 3-7. Interrupt tool supports all interrupt resource display

### 3.2.7 Improved Data format setting of A/D converter

From Smart Configurator for RH850 V1.6.0, when using A/D Converter component, invalid 10-bit data format is removed, and only 12-bit data format is supported for Data format.

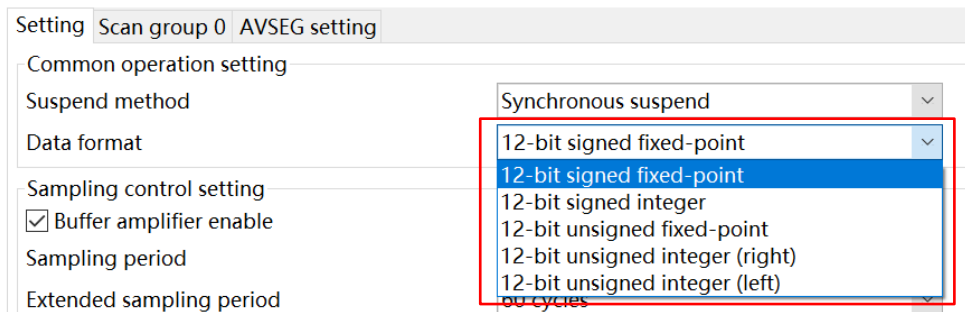


Figure 3-8. Only 12-bit data format supported

### 3.2.8 Improved generated code of A/D Converter Synchronization Start function

From Smart Configurator for RH850 V1.6.0, APIs for Synchronization Start function of A/D Converter are improved:

Source file: <Configuration-name>.c

API removed: void R\_<Configuration-name>\_SyncStart (void)  
void R\_<Configuration-name>\_SyncTimerStart (void)

Source file: r\_cg\_adc\_common.c

API added: void R\_ADC\_SyncStart (void)  
void R\_ADC\_TimerSyncStart (void)

### 3.2.9 Improved generated code of A/D converter voltage monitoring voltage divider function

From Smart Configurator for RH850 V1.6.0, "Voltage divider control" setting is removed from A/D Converter UI and following APIs are added. So that user can enable/disable voltage divider function after A/D converter has been started.

Source file: <Configuration-name>.c

API added: void R\_<Configuration-name>\_VoltageDivider\_Start (void)  
void R\_<Configuration-name>\_VoltageDivider\_Stop (void)

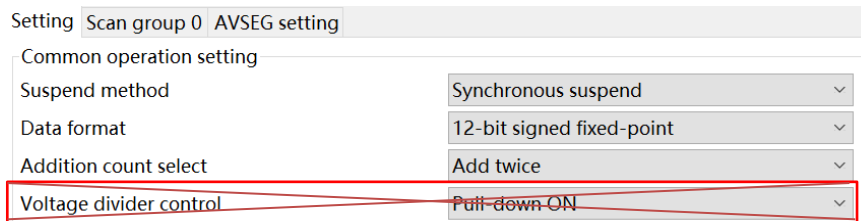


Figure 3-9. Remove Voltage divider control from UI

### 3.2.10 Improved generated code of getting A/D conversion result

From Smart Configurator for RH850 V1.6.0, APIs of getting A/D conversion result are improved:

- 1) Add new parameter "buffer\_size" to ensure the allocated buffer is enough for saving the converted data:

Source file: <Configuration-name>.c

API updated: void R\_<Configuration-name>\_ScanGroupx\_GetResult (uint16\_t \* const buffer, uint8\_t buffer\_size)

- 2) Remove the getting floating point result API because RH850U2A does not support IFC function:

Source file: <Configuration-name>.c

API removed: void R\_<Configuration-name>\_ScanGroupx\_GetFloatingPointDataResult (uint32\_t \* const buffer)

#### 4. List of RENESAS TOOL NEWS AND TECHNICAL UPDATE

Below is a list of notifications delivered by RENESAS TOOL NEWS and TECHNICAL UPDATE.

| Issue date    | Document No. | Description                                                                                                                                                                                                                                                                                                                                     | Applicable MCUs | Fixed version |
|---------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|---------------|
| Mar.16, 2019  | R20TS0407    | 1. Build error occurs when setting not to generate clocks<br>2. RAM size display error<br><a href="https://www.renesas.com/document/tnn/notes-rh850-smart-configurator">https://www.renesas.com/document/tnn/notes-rh850-smart-configurator</a>                                                                                                 | RH850F1KM       | V1.2.0        |
| Jun. 01, 2016 | R20TS0431    | When using PLL0 Clock<br><a href="https://www.renesas.com/document/tnn/notes-rh850-smart-configurator-0">https://www.renesas.com/document/tnn/notes-rh850-smart-configurator-0</a>                                                                                                                                                              | RH850F1KM       | V1.2.0        |
| Jul.01, 2019  | R20TS0441    | 1. When using PWM output and triangle PWM output slave setting<br>2. Port input buffer setting error<br>3. Port drive strength control setting error<br>4. Port register setting error<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850</a> | RH850F1KM       | V1.2.0        |
| Aug.01, 2019  | R20TS0463    | 1. When using the input pulse interval measurement function<br>2. When using the Clocked Serial Interface in Master mode<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-0">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-0</a>                                                           | RH850F1KM       | V1.2.0        |
| Oct.16, 2019  | R20TS0500    | 1. When using data CRC<br>2. When using one-pulse outputs<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-1">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-1</a>                                                                                                                          | RH850F1KM       | V1.2.0        |
| Apr.16, 2020  | R20TS0569    | When using CSI master and CSI slave<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-2">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-2</a>                                                                                                                                                | RH850F1KM       | V1.3.0        |
| May.16, 2020  | R20TS0576    | When using CSI master and CSI slave<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-3">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-3</a>                                                                                                                                                | RH850F1KM       | V1.3.0        |
| Feb. 16, 2021 | R20TS0668    | When using CSI master<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-4">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-4</a>                                                                                                                                                              | RH850F1KM       | V1.4.0        |



| Issue date    | Document No. | Description                                                                                                                                                                                                                                                                                                                                                                                   | Applicable MCUs        | Fixed version |
|---------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|---------------|
| Apr. 05, 2021 | R20TS0679    | 1. When using CSI Master and CSI Slave with CSIG<br>2. When using CSI Master with CSIH<br>3. When using Data CRC<br>4. When using One-Pulse Output and One-Shot Pulse Output<br>5. When using PWM Output and Triangle PWM Output<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-5">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-5</a> | RH850F1KM<br>RH850U2A  | V1.4.0        |
| Jun.16, 2021  | R20TS0717    | 1. When using A/D converter with ADCJ2<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-6">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-6</a>                                                                                                                                                                                           | RH850U2A               | V1.5.0        |
| Jul. 01, 2021 | R20TS0723    | 1. Notes on using One-Shot Pulse Output, PWM Output, Triangle PWM Output, Triangle PWM Output with Dead Time functions with TAUD1, TAUD2<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-7">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-7</a>                                                                                         | RH850U2A               | V1.5.0        |
| Sep. 16, 2021 | R20TS0744    | 1. Notes on selecting PLL0 clock CPLL0OUT as source of CPU Subsystem clock<br>2. Notes on using CSIH Master receive and Master transmit/receive operation mode<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-8">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-8</a>                                                                   | RH850F1KM<br>RH850F1KH | V1.5.0        |
| Feb. 01, 2022 | R20TS0806    | 1. Notes on using T&H path self-diagnosis function of A/D Converter<br>2. Notes on redundant macros and wrong comments in A/D Converter header file<br><a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-9">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-9</a>                                                                              | RH850U2A               | V1.6.0        |

## 5. Points for Limitation

This section describes points for limitation regarding the Smart Configurator for RH850 V1.6.0.

### 5.1 List of Limitation

Table 5-1 List of Limitation

✓ : Applicable, -: Not Applicable

| No | Description                                             | RH850F1<br>KM | RH850U2<br>A | RH850F1<br>KH | RH850C1<br>M | Remarks |
|----|---------------------------------------------------------|---------------|--------------|---------------|--------------|---------|
| 1  | Note on using RIIC                                      | ✓             | ✓            | ✓             | ✓            |         |
| 2  | Note on using Physical channel of A/D Converter         | -             | ✓            | -             | -            |         |
| 3  | Note on using Common operation setting of A/D Converter | -             | ✓            | -             | -            |         |

### 5.2 Details of Limitation

#### 5.2.1 Note on using RIIC

When using RIIC master or RIIC Slave to send or receive data, error interrupt priority must be higher than any other interrupt priority.

Interrupt setting

|                                                                                                                                                                                                            |         |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Transmit data empty interrupt (TI)                                                                                                                                                                         | Lowest  |
| Transmit end interrupt (TEI)                                                                                                                                                                               | Lowest  |
| Receive data full interrupt (RI)                                                                                                                                                                           | Lowest  |
| <input type="checkbox"/> Enable timeout interrupt (TMOI)<br><input type="checkbox"/> Enable arbitration-lost interrupt (ALI)<br><input checked="" type="checkbox"/> Enable NACK reception interrupt (NAKI) |         |
| Priority                                                                                                                                                                                                   | Level 8 |

Figure 5-1. RIIC interrupt priority setting

### 5.2.2 Note on using Physical channel of A/D Converter

When selecting ADCJnI0S~ADCJnI9S as Physical channel in Smart Configurator for RH850 V1.6.0, after reloading the project in Smart Configurator for RH850 V1.6.0, Physical channel will be changed to “ADCJnI0” which is default setting.

This limitation will be fixed in Smart Configurator for RH850V1.7.0.

| Virtual channel setting                 |             |
|-----------------------------------------|-------------|
| Virtual channel 00                      |             |
| Conversion type setting                 | Normal ADC  |
| Physical channel select                 | ADCJ0I6S    |
| Upper limit/lower limit table selection | Not checked |
| Wait time table selection               | Not checked |
| Self-diagnostic voltage level           | AVREFH x 0  |

Figure 5-2. Physical channel setting before reloading

| Virtual channel setting                 |             |
|-----------------------------------------|-------------|
| Virtual channel 00                      |             |
| Conversion type setting                 | Normal ADC  |
| Physical channel select                 | ADCJ0I0     |
| Upper limit/lower limit table selection | Not checked |
| Wait time table selection               | Not checked |
| Self-diagnostic voltage level           | AVREFH x 0  |

Figure 5-3. Physical channel setting after reloading

### 5.2.3 Note on using Common operation setting of A/D Converter

“Addition count select” in “Common operation setting” of A/D Converter is not supported in Smart Configurator for RH850 V1.6.0, it should be supported.

This limitation will be fixed in Smart Configurator for RH850V1.7.0.

| Basic setting            |                            |
|--------------------------|----------------------------|
| Setting                  | Scan group 0 AVSEG setting |
| Common operation setting |                            |
| Suspend method           | Synchronous suspend        |
| Data format              | 12-bit signed fixed-point  |
| Addition count select    | Add twice                  |

Figure 5-4. Addition count select is not supported in Smart Configurator for RH850 V1.6.0

## 6. Points for Caution

This section describes points for caution regarding the Smart Configurator for RH850 V1.6.0.

### 6.1 List of Caution

**Table 6-1 List of Caution**

✓ : Applicable, -: Not Applicable

| No | Description                                              | RH850F1<br>KM | RH850U2<br>A | RH850F1<br>KH | RH850C1M | Remarks |
|----|----------------------------------------------------------|---------------|--------------|---------------|----------|---------|
| 1  | About the I/O define header file                         | ✓             | ✓            | ✓             | ✓        |         |
| 2  | About loading the project on CS+                         | ✓             | ✓            | ✓             | ✓        |         |
| 3  | About the sample projects                                | ✓             | ✓            | ✓             | ✓        |         |
| 4  | About the decimal point                                  | ✓             | ✓            | ✓             | ✓        |         |
| 5  | Note on pins sharing functions.                          | ✓             | ✓            | ✓             | ✓        |         |
| 6  | Note on Interrupt Controller resource name               | ✓             | -            | -             | -        |         |
| 7  | Note on DMA/DTS trigger generator setting of MSPI Master | -             | ✓            | -             | -        |         |
| 8  | Note on CPU Operating mode of DTS Controller             | -             | ✓            | -             | -        |         |

## 6.2 Details of Caution

### 6.2.1 About the I/O define header file

Please use Renesas iodef.h for the header file that defines the register. Because RH850 Smart Configurator outputs code conforming to the definition in Renesas iodef.h, a build error occurs when using the register definition file provided by other environments

### 6.2.2 About loading the project on CS+

When launching RH850 Smart Configurator from CS+, please set 'RH850 Build tool CC-RH plugin' and 'RH850 Build tool GHS CCRH850 plugin' to enable. If these plugins are disable, the error occurs when CS+ project that includes the setting of RH850 Smart Configurator is loaded.

### 6.2.3 About the sample project

The RH850 Smart Configurator does not output the processing after resetting the microcontroller (including the startup routine).

Therefore, we provide sample projects that include sample startup routines and other necessary processing so that user applications can be built immediately after peripheral modules are set up using the RH850 Smart Configurator.

Please refer to the user guide for sample projects under installation path.

Default installation path:

C:\Program Files (x86)\Renesas Electronics\SmartConfigurator\RH850\

### 6.2.4 About the decimal point

For error-free operation of the RH850 Smart Configurator, use a period (".") as the decimal point and a comma (",") as the digit grouping separator. Which of "." (period), ",", " " (comma) or " " (space) is used as the decimal point or digit grouping separator differs depending on the language setting of the Windows OS that is used. For example, if you use a comma (",") as the decimal point, the RH850 Smart Configurator may not work correctly. This will occur when you are using Windows OS with language set to other than Japanese or English. If you are using the RH850 Smart Configurator on Windows OS with language set to other than Japanese or English, change the language setting to Japanese or English.

### 6.2.5 Note on pins sharing functions

When function shared pin selects a shared pin, shared pin displays an error.  
But the shared pin can be selected correctly and work correctly.

Example) For RH850/U2A RSENT0

Assign RSENT0RX and RSENT0SPCO to the T24 pin

When assigned: T24 pin displays an error

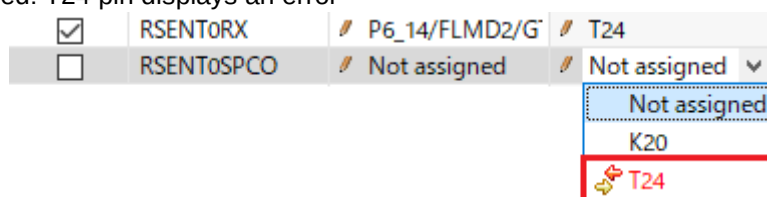


Figure 6-1. pins sharing function sample when assigned

After assignment

|                                     |            |               |     |
|-------------------------------------|------------|---------------|-----|
| <input checked="" type="checkbox"/> | RSENT0RX   | P6_14/FLMD2/G | T24 |
| <input checked="" type="checkbox"/> | RSENT0SPCO | P6_14/FLMD2/G | T24 |

Figure 6-2. pins sharing function sample after assigned

### 6.2.6 Note on Interrupt Controller resource name

In RH850 Smart Configurator V1.2.0, the resource name of the interrupt controller has been changed to "INTC". The resource name of the interrupt controller of the previous version is automatically changed from "ICU" to "INTC".

Therefore, the following file name and macro name are changed.

**Table 6-2 File name change**

| Before change | After change |
|---------------|--------------|
| r_cg_icu.h    | r_cg_intc.h  |

**Table 6-3 Macro name change**

| File name         | Before change    | After change      |
|-------------------|------------------|-------------------|
| r_smc_interrupt.h | ICU_xxx_PRIORITY | INTC_xxx_PRIORITY |

### 6.2.7 Note on DMA/DTS trigger generator setting of MSPI Master

If alternative trigger is selected in Smart Configurator for RH850 V1.5.0, when reloading the project file (.scfg file) into Smart Configurator for RH850 V1.6.0, the alternative trigger signal "Use alternative trigger" can't be reloaded and the default trigger signal

"Trigger1(DTSMSPi12)/Trigger2(DTSMSPi13)" will be used.

There isn't this cautions when reloading project between Smart Configurator for RH850 V1.5.0 and before, or between Smart Configurator for RH850 V1.6.0 and later.

**Figure 6-3. "Use alternative trigger" checked in Smart Configurator for RH850 V1.5.0**

**Figure 6-4. "Trigger1(DTSMSPi12)/Trigger2(DTSMSPi13)" selected after reloading in Smart Configurator for RH850 V1.6.0**

### 6.2.8 Note on CPU Operating mode of DTS Controller

If CPU operating mode selects “User mode” in Smart Configurator for RH850 V1.5.0, after reloading the project in Smart Configurator for RH850 V1.6.0, CPU operating mode will be changed to “Supervisor mode” which is default setting.

There isn't this cautions when reloading project between Smart Configurator for RH850 V1.5.0 and before, or between Smart Configurator for RH850 V1.6.0 and later.

|                                    |           |
|------------------------------------|-----------|
| Register access protection setting |           |
| CPU operating mode                 | User mode |
| System protection                  | 0         |

Figure 6-5. CPU operating mode in Smart Configurator for RH850 V1.5.0

|                                    |                 |
|------------------------------------|-----------------|
| Register access protection setting |                 |
| CPU operating modes                | Supervisor mode |
| System protection                  | 0               |

Figure 6-6. CPU operating mode after reloading in Smart Configurator for RH850 V1.6.0

**Revision History**

| Rev. | Date       | Description |                                                                                                                                                                                                                                       |
|------|------------|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      |            | Page        | Summary                                                                                                                                                                                                                               |
| 1.00 | July.20.19 | -           | Create new                                                                                                                                                                                                                            |
| 1.20 | Jan.16.20  | -           | Update to Rev.1.2.0                                                                                                                                                                                                                   |
| 1.30 | Jan.20.21  | All         | Update to Rev.1.3.0:<br>1. update format<br>2. update all changes<br>3. Page 3, GHS Multi V7.6.1 is changed to GHS Multi V7.1.6                                                                                                       |
| 1.40 | May.20.21  | All         | Update to Rev 1.4.0:<br>1. Support RH850F1KH-D8<br>2. Add new feature support<br>3. Update changes including issues and improvements.                                                                                                 |
| 1.41 | Jun.20.21  | 4           | Update "Table 2-1 Support Devices" and add RH850/F1KH-D8, RH850/U2A16 and RH850/U2A8 device file version.                                                                                                                             |
| 1.50 | Sep.16.21  | All         | Update to Rev 1.5.0:<br>1. Support RH850C1M-A2<br>2. Add new feature support<br>3. Update changes including issues and improvements.<br>4. Update limitation<br>5. Update cautions for 6.2.3                                          |
| 1.60 | Jul.20.22  | All         | Update to Smart Configurator for RH850 V1.6.0:<br>1. Support new components for RH850C1M-A2<br>2. Update changes including issues and improvements.<br>3. Update List of RENESAS TOOL NEWS AND TECHNICAL UPDATE<br>4. Update cautions |



# General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

## 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

## 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

## 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

## 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

## 5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

## 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

## 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

## 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENASAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENASAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENASAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENASAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENASAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan

[www.renesas.com](http://www.renesas.com)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:

[www.renesas.com/contact/](http://www.renesas.com/contact/).