

# Application Note

## SLG46824/6 MTP Arduino Programming Example

AN-CM-255

### Abstract

*In this application note, we use the Arduino MTP Programmer sketch to program an SLG46824/6. Through analyzing the code, a firmware designer can create a modified version that is compatible with their unique microcontroller.*

*This application note comes complete with design files which can be found in the References section.*

---

---

---

 SLG46824/6 MTP Arduino Programming Example
 

---

## Contents

<b>Abstract</b> .....	<b>1</b>
<b>Contents</b> .....	<b>2</b>
<b>Figures</b> .....	<b>2</b>
<b>1 Terms and Definitions</b> .....	<b>3</b>
<b>2 References</b> .....	<b>3</b>
<b>3 Introduction</b> .....	<b>4</b>
<b>4 Arduino-GreenPAK Connections</b> .....	<b>5</b>
<b>5 Exporting GreenPAK NVM Data from a GreenPAK Design File</b> .....	<b>6</b>
<b>6 Use the Arduino Sketch</b> .....	<b>10</b>
<b>7 Programming Tips and Best Practices</b> .....	<b>10</b>
7.1 Executing Precise 16-Byte NVM Page Writes or change to Deviations from the valid command structure?: .....	10
7.2 Transferring NVM Data into the Matrix Configuration Registers.....	10
7.3 Resetting the I <sup>2</sup> C Address after an NVM Erase: .....	11
<b>8 Errata Discussion</b> .....	<b>11</b>
<b>9 Conclusion</b> .....	<b>11</b>
<b>Revision History</b> .....	<b>12</b>

## Figures

Figure 1. Arduino Connections .....	5
Figure 2. Simple GreenPAK Design in a SLG46826.....	6
Figure 3. Export NVM .....	7
Figure 4. Save as .hex File.....	7
Figure 5. Viewing the NVM Data in Notepad++ .....	7
Figure 6. Arduino Sketch .....	8
Figure 7. Set EEPROM Data.....	8
Figure 8. EEPROM Data Editor.....	9
Figure 9. Matrix Registers, NVM, and EEPROM Protection Settings .....	9
Figure 10. Arduino Serial Monitor.....	10
Figure 11: ACK Behavior Modification to the Arduino Programmer.....	11

## Tables

Table 1: Arduino Uno / GreenPAK Connections .....	5
---	---

---

## SLG46824/6 MTP Arduino Programming Example

---

### 1 Terms and Definitions

EEPROM	Electrically erasable programmable read-only memory
I <sup>2</sup> C	Inter-integrated circuit
MTP	Multiple-time programmable
NVM	Non-volatile memory
OTP	One-time programmable

### 2 References

For related documents and software, please visit:

<https://www.dialog-semiconductor.com/configurable-mixed-signal>.

Download our free **GreenPAK** Designer software [1] to open the .gp files [2] and view the proposed circuit design. Use the **GreenPAK** development tools [3] to freeze the design into your own customized IC in a matter of minutes. Dialog Semiconductor provides a complete library of application notes [4] featuring design examples as well as explanations of features and blocks within the Dialog IC.

- [1] [GreenPAK Designer Software](#), Software Download and User Guide, Dialog Semiconductor
- [2] [AN-CM-255 SLG46824/6 MTP Arduino Programming Example.gp](#), GreenPAK Design File, Dialog Semiconductor
- [3] [GreenPAK Development Tools](#), GreenPAK Development Tools Webpage, Dialog Semiconductor
- [4] [GreenPAK Application Notes](#), GreenPAK Application Notes Webpage, Dialog Semiconductor
- [5] [In-System Programming Guide](#), GreenPAK User Guides and Manuals, Dialog Semiconductor

---

## SLG46824/6 MTP Arduino Programming Example

---

### 3 Introduction

In this application note, we show how to use the SLG46824/6 Arduino programming sketch to program a Dialog SLG46824/6 [GreenPAK™](#) Multiple-Time Programmable (MTP) device.

Most [GreenPAK](#) devices are One-Time Programmable (OTP), meaning that once their Non-Volatile Memory bank (NVM) is written, it cannot be overwritten. [GreenPAKs](#) with the MTP feature, like the SLG46824 and SLG46826, have a different type of NVM memory bank that can be programmed more than once.

We've written an [Arduino sketch](#) that allows the user to program an MTP [GreenPAK](#) with a few simple serial monitor commands. In this application note we use an SLG46826 as our [GreenPAK](#) with MTP.

We provide sample code for the Arduino Uno using an open-source platform based on C/C++. Designers should extrapolate the techniques used in the Arduino code for their specific platform.

For specific information regarding I<sup>2</sup>C signal specifications, I<sup>2</sup>C addressing, and memory spaces, please reference the [GreenPAK In-System Programming Guide](#) provided on the [SLG46826 product page](#). This application note provides a simple implementation of this programming guide.

SLG46824/6 MTP Arduino Programming Example

### 4 Arduino-GreenPAK Connections

To program the NVM of our SLG46826 GreenPAK with our Arduino sketch, we'll first need to connect four Arduino Uno pins to our GreenPAK. You can connect these pins directly to the GreenPAK Socket Adapter or to a breakout board with the GreenPAK soldered down.

Table 1: Arduino Uno / GreenPAK Connections

GreenPAK	Arduino
VDD (Pin 1)	Digital Pin 2
GND (Pin 11)	GND
SCL (Pin 8)	A5
SDA (Pin 9)	A4

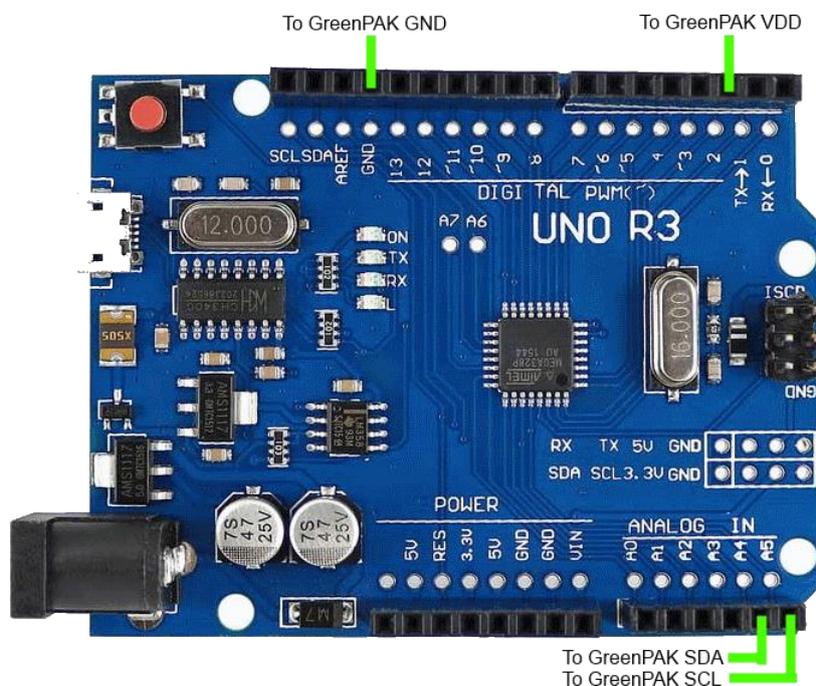



Figure 1. Arduino Connections

Please note that external I<sup>2</sup>C pull up resistors are not shown in Figure 1. Please connect a 4.7 kΩ pull up resistor from both SCL and SDA to the Arduino's 3.3 V output.

## SLG46824/6 MTP Arduino Programming Example

## 5 Exporting GreenPAK NVM Data from a GreenPAK Design File

We'll put together a very simple [GreenPAK](#) design to illustrate how to export the NVM data. The design below is a simple level shifter where the blue pins on the left are tied to VDD (3.3v), while the yellow pins on the right are tied to VDD2 (1.8v).

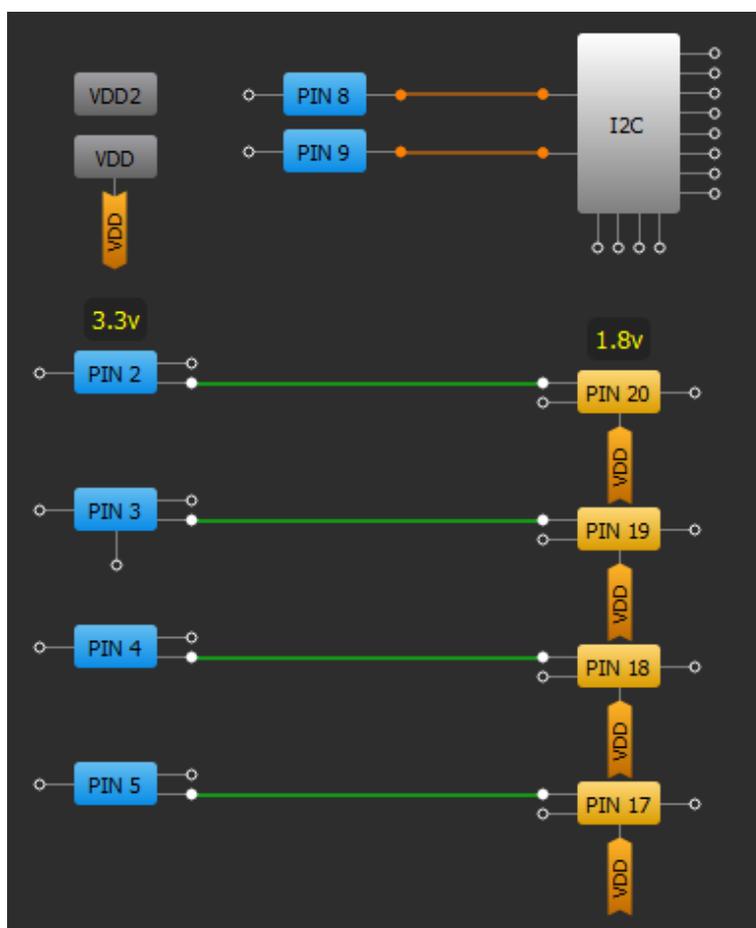

**Figure 2. Simple GreenPAK Design in a SLG46826**

To export the information from this design, you need to select File → Export → Export NVM, as shown in [Figure 3](#).



SLG46824/6 MTP Arduino Programming Example

```

SLG46826_Programmer | Arduino 1.8.5
File Edit Sketch Tools Help

SLG46826_Programmer $
#include <Wire.h>
#include <stdlib.h>
#include <string.h>

#define NVM_CONFIG 0x02
#define EEPROM_CONFIG 0x03
#define VDD 2

int count = 0;
uint8_t slave_address = 0x00;
bool device_present[16] = {false};

uint8_t data_array[16][16] = {};

// Store nvData in PROGRAM to save on RAM
const char nvString0[] PROGMEM = "010E00000000E3F030000000000000";
const char nvString1[] PROGMEM = "000000000000000000000000000000";
const char nvString2[] PROGMEM = "000000000000000000000000000000";
const char nvString3[] PROGMEM = "000000000000000000000000000000";
const char nvString4[] PROGMEM = "000000000000000000000000000000";
const char nvString5[] PROGMEM = "000000000000000000000000000000";
const char nvString6[] PROGMEM = "00303000003030300000E3303003030";
const char nvString7[] PROGMEM = "3030303000000000000000000000";
const char nvString8[] PROGMEM = "0000020000142230003C0000000000";
const char nvString9[] PROGMEM = "080000000000000000000000000000";
const char nvString10[] PROGMEM = "000000000000000000000000000000";
const char nvString11[] PROGMEM = "00000201000002000100000020100000";
const char nvString12[] PROGMEM = "000100000200010000000101000000";
const char nvString13[] PROGMEM = "000000000000000000000000000000";
const char nvString14[] PROGMEM = "000000000000000000000000000000";
const char nvString15[] PROGMEM = "0000000000000000000000000000A5";

Done Saving.
18 - 31 Arduino/Genuino Uno on COM1
    
```

Figure 6. Arduino Sketch

To set the EEPROM data for your GreenPAK design, select the EEPROM block from the components panel, open its properties panel, and click "Set Data."

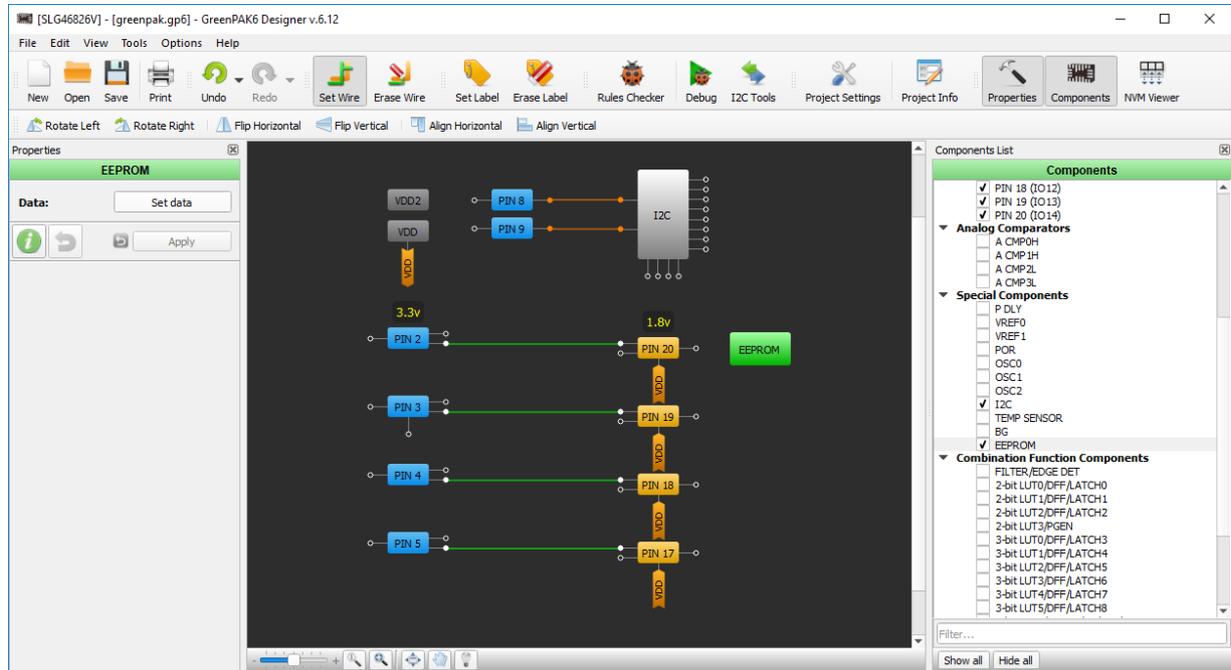


Figure 7. Set EEPROM Data

## SLG46824/6 MTP Arduino Programming Example

Now you can edit each byte in the EEPROM individually with our GUI interface.

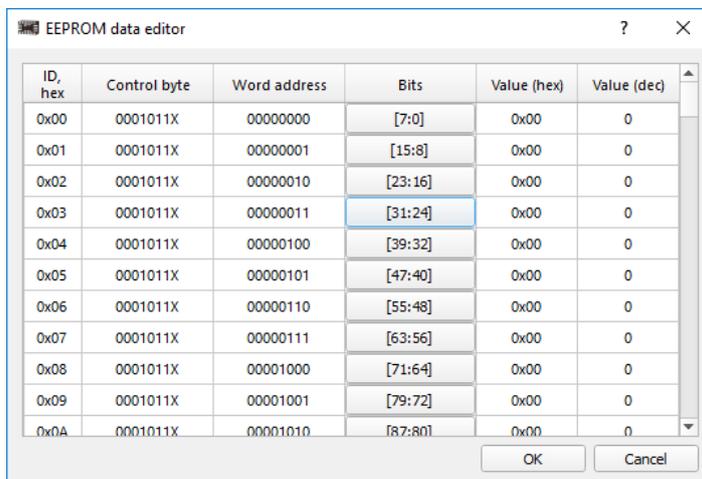


Figure 8. EEPROM Data Editor

Once your EEPROM data is set, you can export it to a HEX file using the same method described previously for exporting the NVM data. Insert these 256 bytes of EEPROM data into the `epromString[]` section of the Arduino sketch.

For each custom design, it is important to check the protection settings within the “Security” tab of the project settings. This tab configures the protection bits for the matrix configuration registers, the NVM, and the EEPROM. Under certain configurations, uploading the NVM sequence can lock the SLG46824/6 to its current configuration and remove the MTP functionality of the chip.

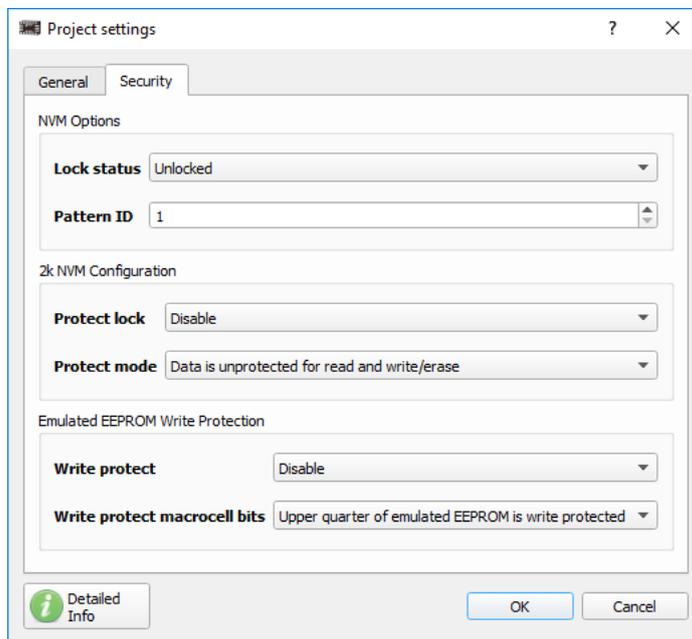


Figure 9. Matrix Registers, NVM, and EEPROM Protection Settings

## SLG46824/6 MTP Arduino Programming Example

### 6 Use the Arduino Sketch

Upload the sketch to your Arduino and open the serial monitor with a 115200 baud rate. Now you can use the sketch's MENU prompts to perform several commands:

- Read - reads either the device's NVM data or EEPROM data using the specified slave address
- Erase - erases either the device's NVM data or EEPROM data using the specified slave address
- Write - Erases and then writes either the device's NVM data or EEPROM data using the specified slave address. This command writes the data that is saved in the `nvmString[]` or `eepromString[]` arrays.
- Ping - returns a list of device slave addresses that are connected to the I<sup>2</sup>C bus

The results of these commands will be printed to the serial monitor console.

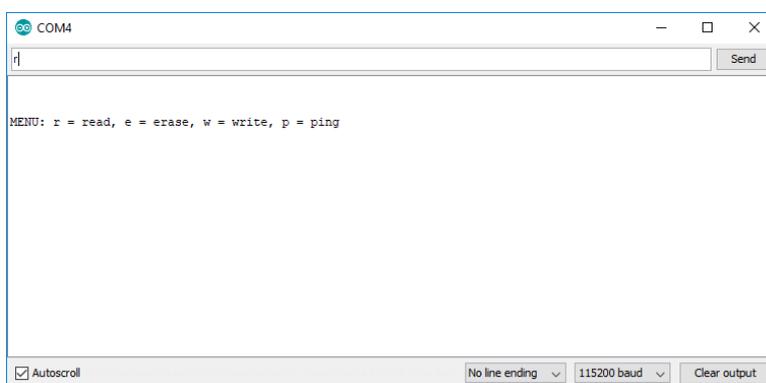


Figure 10. Arduino Serial Monitor

### 7 Programming Tips and Best Practices

Over the course of supporting the SLG46824/6, we've documented a few programming tips to help avoid common pitfalls associated with erasing and writing to the NVM address space. The following subsections outline this topic in more detail.

#### 7.1 Executing Precise 16-Byte NVM Page Writes:

When writing data to the SLG46824/6's NVM, there are three techniques to avoid:

- Page writes with less than 16 bytes
- Page writes with more than 16 bytes
- Page writes that don't begin at the first register within a page (IE: 0x10, 0x20, etc.)

If any of the above techniques are used, the MTP interface will disregard the I<sup>2</sup>C write to avoid loading the NVM with incorrect information. We recommend performing an I<sup>2</sup>C read of the NVM address space after writing to verify correct data transfer.

#### 7.2 Transferring NVM Data into the Matrix Configuration Registers

When the NVM is written, the matrix configuration registers are not automatically reloaded with the newly written NVM data. The transfer must be initiated manually by cycling the PAK VDD or by generating a soft reset using I<sup>2</sup>C. By setting register <1601> in address 0xC8, the device re-enables the Power-On Reset (POR) sequence and reloads the register data from the NVM into the registers.

## SLG46824/6 MTP Arduino Programming Example

### 7.3 Resetting the I<sup>2</sup>C Address after an NVM Erase:

When the NVM is erased, the NVM address containing the I<sup>2</sup>C slave address will be set to 0000. After the erase, the chip will maintain its current slave address within the configuration registers until the device is reset as described above. Once the chip has been reset, the I<sup>2</sup>C slave address must be set in address 0xCA within the configuration registers each time the **GreenPAK** is power-cycled or reset. This must be done until the new I<sup>2</sup>C slave address page has been written in the NVM.

## 8 Errata Discussion

When writing to the “Page Erase Byte” (Address: 0xE3), the SLG46824/6 produces a non-I2C compliant ACK after the “Data” portion of the I2C command. This behavior might be interpreted as a NACK depending on the implementation of the I2C master.

To accommodate for this behavior, we modified the Arduino programmer by commenting out the code shown in Figure 11. This section of code checks for an I2C ACK at the end of every I2C command in the eraseChip() function. This function is used to erase the NVM and EEPROM pages. Since this section of code is located in a For loop, the “return -1;” line causes the MCU to prematurely exit the function.

```
// if (Wire.endTransmission() == 0) {  
//   Serial.print(F("ack "));  
// }  
// else {  
//   Serial.print(F("nack "));  
//   return -1;  
// }  
  
Wire.endTransmission();
```

**Figure 11: ACK Behavior Modification to the Arduino Programmer**

Despite the presence of a NACK, the NVM and EEPROM erase functions will execute properly. For a detailed explanation of this behavior, please reference “Issue 2: Non-I2C Compliant ACK Behavior for the NVM and EEPROM Page Erase Byte” in the SLG46824/6 errata document (Revision XC) on [Dialog’s website](#).

## 9 Conclusion

In this application note we describe the process of using the provided Arduino programmer to upload custom NVM and EEPROM strings to a **GreenPAK** IC. The code in the Arduino Sketch is thoroughly commented, but if you have any questions regarding the sketch, please contact one of our Field Application Engineers or post your question on our [forum](#). For more in-depth information regarding MTP programming registers and procedures, please reference Dialog’s [In-System Programming Guide](#) (provided in the Resources section at the link).

---

SLG46824/6 MTP Arduino Programming Example

### Revision History

Revision	Date	Description
1.1	25-Feb-2019	Modified Arduino script to accommodate for SLG46824/6 (XC Revision) errata. Discussion added in Section 8 of this AN.
1.0	05-Sep-2018	Initial Version

## SLG46824/6 MTP Arduino Programming Example

### Status Definitions

Status	Definition
DRAFT	The content of this document is under review and subject to formal approval, which may result in modifications or additions.
APPROVED or unmarked	The content of this document has been approved for publication.

### Disclaimer

Information in this document is believed to be accurate and reliable. However, Dialog Semiconductor does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information. Dialog Semiconductor furthermore takes no responsibility whatsoever for the content in this document if provided by any information source outside of Dialog Semiconductor.

Dialog Semiconductor reserves the right to change without notice the information published in this document, including without limitation the specification and the design of the related semiconductor products, software and applications.

Applications, software, and semiconductor products described in this document are for illustrative purposes only. Dialog Semiconductor makes no representation or warranty that such applications, software and semiconductor products will be suitable for the specified use without further testing or modification. Unless otherwise agreed in writing, such testing or modification is the sole responsibility of the customer and Dialog Semiconductor excludes all liability in this respect.

Customer notes that nothing in this document may be construed as a license for customer to use the Dialog Semiconductor products, software and applications referred to in this document. Such license must be separately sought by customer with Dialog Semiconductor.

All use of Dialog Semiconductor products, software and applications referred to in this document are subject to Dialog Semiconductor's [Standard Terms and Conditions of Sale](#), available on the company website ([www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)) unless otherwise stated.

Dialog and the Dialog logo are trademarks of Dialog Semiconductor plc or its subsidiaries. All other product or service names are the property of their respective owners.

© 2019 Dialog Semiconductor. All rights reserved.

## Contacting Dialog Semiconductor

### United Kingdom (Headquarters)

*Dialog Semiconductor (UK) LTD*  
Phone: +44 1793 757700

### Germany

*Dialog Semiconductor GmbH*  
Phone: +49 7021 805-0

### The Netherlands

*Dialog Semiconductor B.V.*  
Phone: +31 73 640 8822

### Email:

[enquiry@diasemi.com](mailto:enquiry@diasemi.com)

### North America

*Dialog Semiconductor Inc.*  
Phone: +1 408 845 8500

### Japan

*Dialog Semiconductor K. K.*  
Phone: +81 3 5769 5100

### Taiwan

*Dialog Semiconductor Taiwan*  
Phone: +886 281 786 222

### Web site:

[www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)

### Hong Kong

*Dialog Semiconductor Hong Kong*  
Phone: +852 2607 4271

### Korea

*Dialog Semiconductor Korea*  
Phone: +82 2 3469 8200

### China (Shenzhen)

*Dialog Semiconductor China*  
Phone: +86 755 2981 3669

### China (Shanghai)

*Dialog Semiconductor China*  
Phone: +86 21 5424 9058

## IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers skilled in the art designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only for development of an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising out of your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Rev.1.0 Mar 2020)

### Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

### Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/)

### Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.