

AN-1178 Practical Use of GreenPAK™ Pulse Counter: Frequency Counter, Thermometer, Voltmeter

This application note is created to show some of the capabilities of digital and analog macrocells within the [SLG46533V GreenPAK IC](#).

Part 1 describes how to build a frequency counter capable to measure frequency from 1 Hz to tens of MHz. Easy to scale and output up to eight 7-segment displays.

Part 2 describes how to turn a frequency counter into a thermometer using an external NTC resistor.

It is also possible to measure a DC voltage. Such a voltmeter is described in Part 3.

Part 1. Frequency Counter

The GreenPAK frequency counter works by using a counter which accumulates the number of pulses occurring within a specific period of time, 1 second for example. After this preset period, known as "Gate Time", the value in the counter is transferred to a display and the counter is reset to zero. It is easy to build such a counter using internal blocks of the SLG46533V, see figure 1. It consists of four DFFs connected in series in order to get a binary code (inverted) of counted pulses on their four outputs - see Table 1.

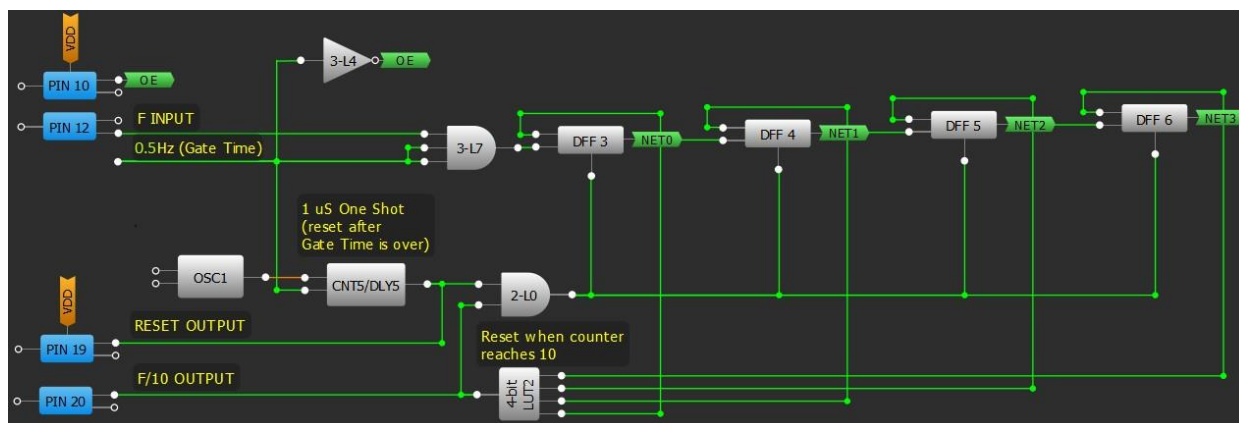


Figure 1. Frequency counter 0...9 Hz, Part of GreenPAK Designer Project

Count	NET3	NET2	NET1	NET0	Binary Code
0	1	1	1	1	0000
1	1	1	1	0	0001
2	1	1	0	1	0010
3	1	1	0	0	0011
4	1	0	1	1	0100
5	1	0	1	0	0101
6	1	0	0	1	0110
7	1	0	0	0	0111
8	0	1	1	1	1000
9	0	1	1	0	1001
10 (Reset)	0	1	0	1	1010

Table 1. Pulse Counter Truth Table

This pulse counter is capable of counting from 0 to 15, but only 0 to 9 is needed, so the 4-Bit LUT is used to reset count to 0 when the counter reaches 10 - see Figure 2 for LUT settings. The reset signal appears once in ten pulses and can be used as an input signal of F/10 for the next (decade) counter and so on.

4-bit LUT2				
IN3	IN2	IN1	IN0	OUT
0	0	0	0	1
0	0	0	1	1
0	0	1	0	1
0	0	1	1	1
0	1	0	0	1
0	1	0	1	0
0	1	1	0	1
0	1	1	1	1
1	0	0	0	1
1	0	0	1	1
1	0	1	0	1
1	0	1	1	1
1	1	0	0	1
1	1	0	1	1
1	1	1	0	1
1	1	1	1	1

Figure 2. Reset LUT settings

To use this scheme as an accurate frequency counter, an accurate gate time is needed. For this purpose, a crystal oscillator is used. Its frequency is divided down to 0.5 Hz. For timing diagram refer to Figure 3.

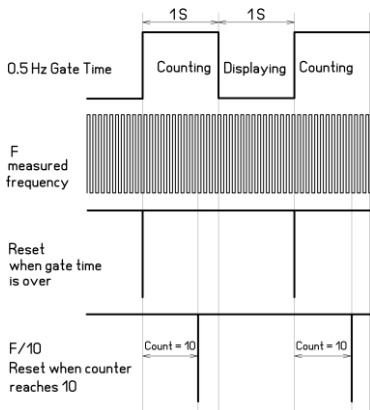


Figure 3. Timing Diagram

In order to display the counted value “The binary to 7 segment” decoder is needed, which is easy to build using LUTs within the GreenPAK. See Figure 4 below. This decoder is used for common cathode 7 segment display.

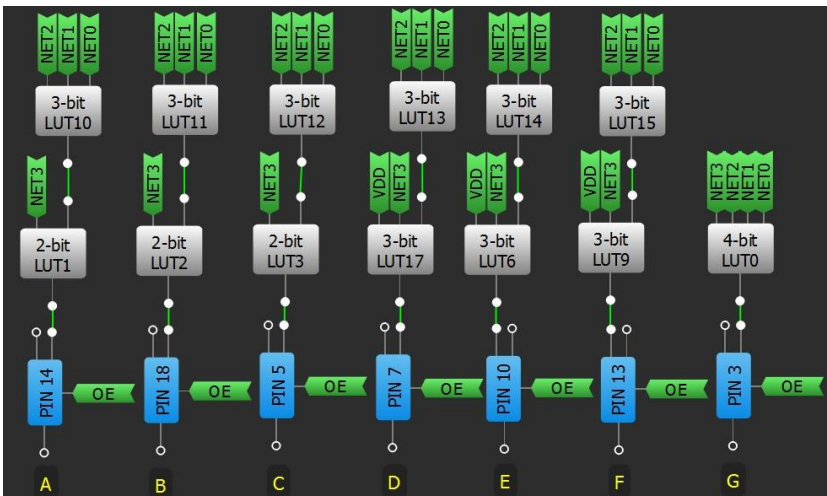


Figure 4. Binary to 7 Segment Decoder, Part of GreenPAK Designer Project

The LUTs must be configured according to Pulse Counter Truth Table so the display indicates the number of counted pulses. See Figures 5 and 6 for example of configuration of the LUTs for segments A and B respectively.

Type: LUT

IN3	IN2	IN1	IN0	OUT
0	0	0	0	1
0	0	0	1	0
0	0	1	0	1
0	0	1	1	1
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Figure 5. Segment A 2-bit LUT and 3-bit LUT configuration

Type: LUT

IN3	IN2	IN1	IN0	OUT
0	0	0	0	1
0	0	0	1	1
0	0	1	0	1
0	0	1	1	0
0	1	0	0	1
0	1	0	1	1
0	1	1	0	0
0	1	1	1	1
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Type: LUT

IN3	IN2	IN1	IN0	OUT
0	0	0	0	0
0	0	0	1	0
0	0	1	0	1
0	0	1	1	1
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Figure 6. Segment B 2-bit LUT and 3-bit LUT configuration

Type: LUT

IN3	IN2	IN1	IN0	OUT
0	0	0	0	1
0	0	0	1	1
0	0	1	0	0
0	0	1	1	1
0	1	0	0	0
0	1	0	1	1
0	1	1	0	1
0	1	1	1	1
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Since there are only three 4-bit LUTs, for segments A, B, C, D, E and F, two LUTs are combined in order to create a 4-bit LUT logical equivalent.

All inputs are configured as Digital input with Schmitt trigger and outputs as Digital output 2x push pull. See Figure 7 for full GreenPAK Designer project of the first stage of the frequency counter.

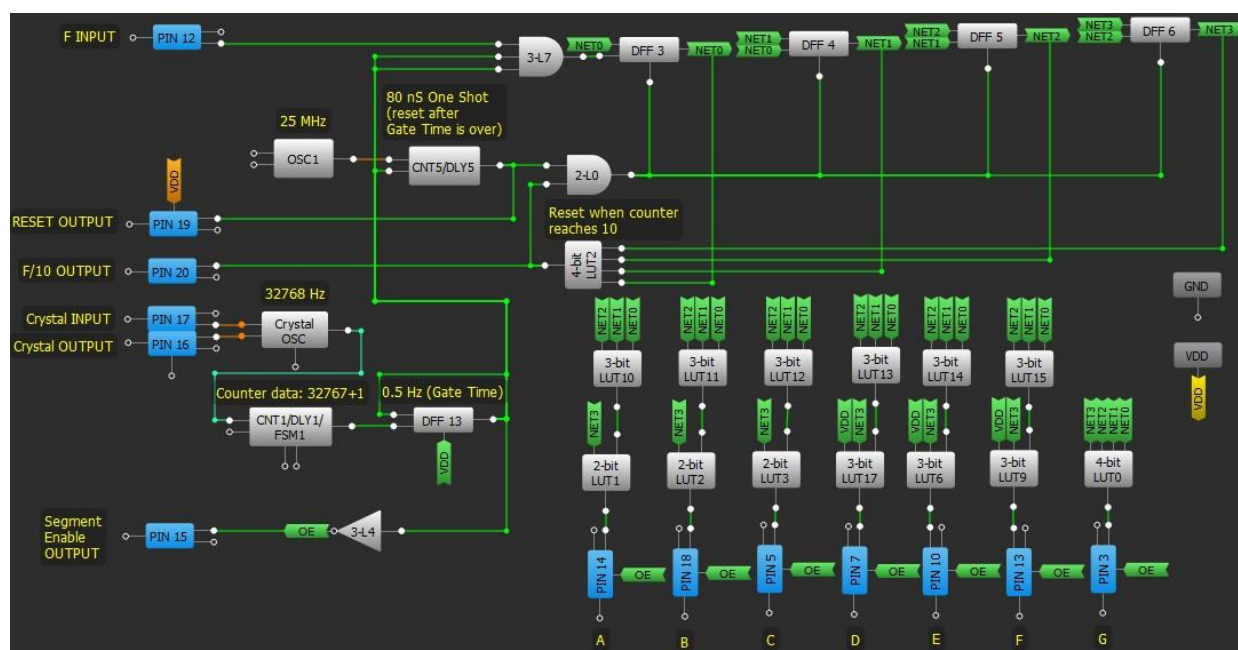


Figure 7. Frequency Counter First Stage, GreenPAK Designer Project

To ensure stability and high counting accuracy, the Crystal Oscillator is used. It's frequency of 32768 Hz is divided by 32768 using CNT/DLY in counter mode. The counter provides short pulses with a frequency of 1 Hz which go to DFF to be divided by 2, there for creating a 0.5 Hz Gate Time, see Figure 7 and 9. The accuracy depends only on the crystal itself and cannot be higher than 1 LSB.

The next (and all following) stages of the freq. counter are much simpler and require fewer macrocells, see Figure 8.

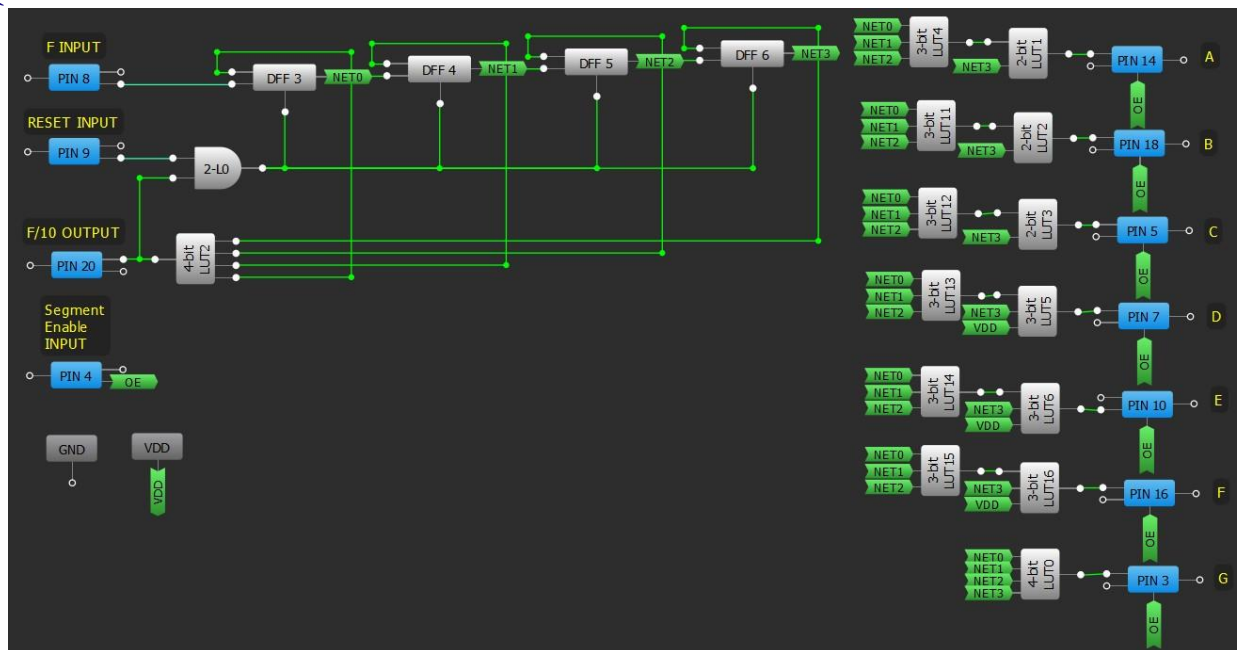


Figure 8. Frequency Counter Second and All Following Stages, GreenPAK Designer Project

This schematic allows to connect in series up to 8 stages allowing to measure frequency up to tens of Mega Hertz. See full device schematic diagram in Figure 9.

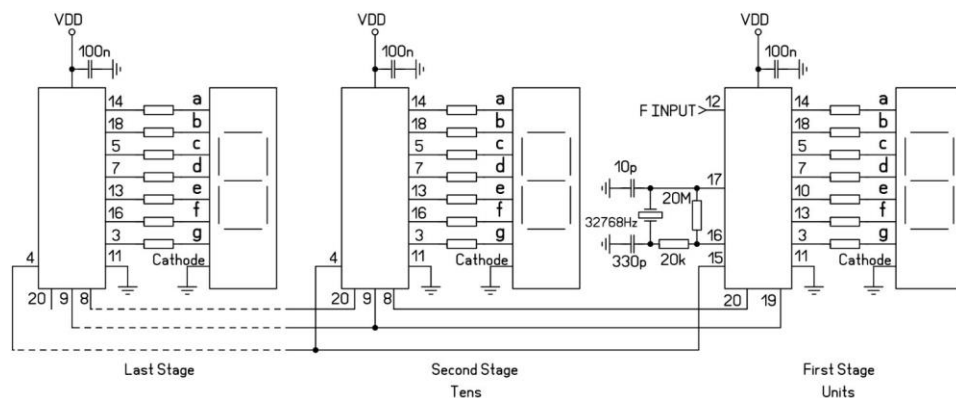


Figure 9. Frequency Counter Full Schematic Diagram

Part 2. Thermometer

It is easy to turn a frequency counter into the thermometer using a temperature dependent oscillator. The easiest way is to use a Schmitt inverter as RC oscillator with NTC resistor. See schematic diagram in Figure 10.

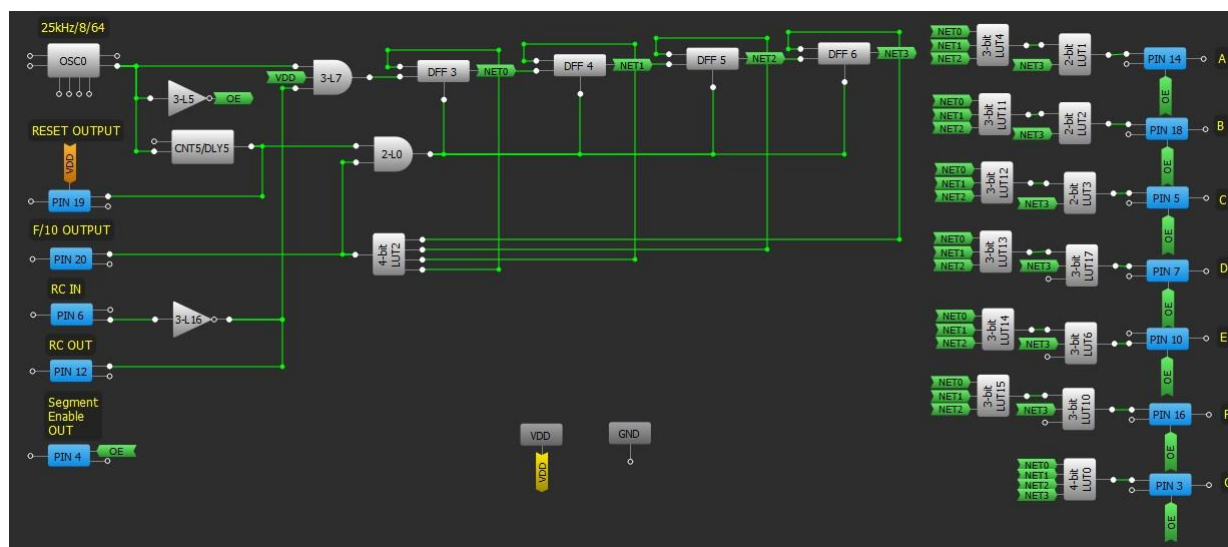


Figure 10. Thermometer Schematic Diagram, GreenPAK Designer Project

This device does not require any external oscillators. An internal RC OSC ($25k/8/64=48.8Hz$) is used as a Gate Time generator. All other parts of the project are the same as in freq. counter, see Figures 4 to 6 and 8. For full schematic diagram refer to Figure 11.

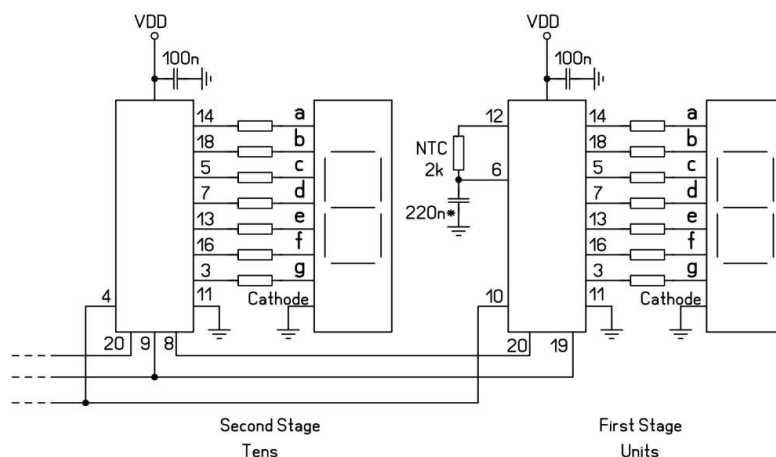


Figure 11. Full Thermometer Schematic Diagram

This thermometer is able to measure and indicate temperature in a range of 0°C to 99°C. However, it is easy to add one more stage and increase the resolution up to 0.1°C. This requires to increase ten times the frequency of the measuring oscillator by using a capacitor with ten times less capacitance (22nF). Also, it should be noted that the device needs a calibration before use. Using a precision thermometer, adjust readings by selecting a frequency setting capacitor. Despite using an internal oscillator, the accuracy of the 3-digit thermometer is better than 0.5°C, which is more than enough to measure room temperature.

Part 3. Voltmeter

It is also possible to modify the frequency counter into a voltmeter. Unlike previous devices the voltmeter uses two fixed frequencies with a difference of 1024. Both clocks are formed from the internal 25 kHz oscillator. The first high frequency clock 50 kHz is formed by One Shot CNT/DLY with settings as follows:

Mode: One shot

Counter data: 249

Edge select: Both

Output polarity: Non-inverted

Clock: OSC1 CLK

(OSC1 must be set to Force Power On)

The second low frequency clock is formed by dividing 25 kHz by 512 using two dividers: OUT0 second divider by 64 and Pipe Delay set to divide by 8 (OUT0 PD num: 4 and OUT1 PD num: 4).

The low frequency clock is used to form a PWM signal, which will be used as a Gate Time to count pulses of the high frequency clock, see Figure 13.

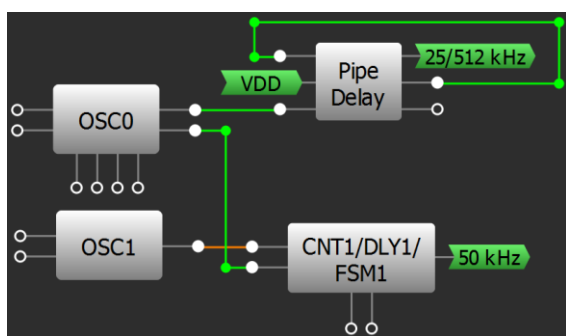


Figure 12. Voltmeter's Clock Schematic Diagram, part of GreenPAK Designer Project

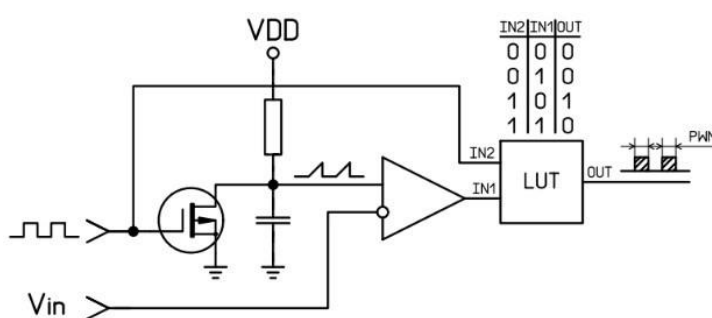


Figure 13. PWM

RESET OUTPUT

F/10 OUTPUT

Sawtooth IN

V_{in}

2x NMOS OD

Sawtooth OUT

Cathode OUT

80 μ s One Shot (reset after Gate Time is over)

3-4:7

DFF 3

DFF 4

DFF 5

DFF 6

2-1:0

4-bit LUT2

OSC0

OSC1

25kHz/64

25kHz

Pipe Delay

25kHz/4

50 kHz

CNT1/DLY1/FSM1

Display 1 digit 1/3 of display period

CNT2/DLY2

Used as inverter

FILTER0

OE

NET0

NET1

NET2

NET3

NET4

NET5

NET6

NET7

NET8

NET9

NET10

NET11

NET12

NET13

NET14

NET15

NET16

NET17

NET18

NET19

NET20

NET21

NET22

NET23

NET24

NET25

NET26

NET27

NET28

NET29

NET30

NET31

NET32

NET33

NET34

NET35

NET36

NET37

NET38

NET39

NET40

NET41

NET42

NET43

NET44

NET45

NET46

NET47

NET48

NET49

NET50

NET51

NET52

NET53

NET54

NET55

NET56

NET57

NET58

NET59

NET60

NET61

NET62

NET63

NET64

NET65

NET66

NET67

NET68

NET69

NET70

NET71

NET72

NET73

NET74

NET75

NET76

NET77

NET78

NET79

NET80

NET81

NET82

NET83

NET84

NET85

NET86

NET87

NET88

NET89

NET90

NET91

NET92

NET93

NET94

NET95

NET96

NET97

NET98

NET99

NET100

NET101

NET102

NET103

NET104

NET105

NET106

NET107

NET108

NET109

NET110

NET111

NET112

NET113

NET114

NET115

NET116

NET117

NET118

NET119

NET120

NET121

NET122

NET123

NET124

NET125

NET126

NET127

NET128

NET129

NET130

NET131

NET132

NET133

NET134

NET135

NET136

NET137

NET138

NET139

NET140

NET141

NET142

NET143

NET144

NET145

NET146

NET147

NET148

NET149

NET150

NET151

NET152

NET153

NET154

NET155

NET156

NET157

NET158

NET159

NET160

NET161

NET162

NET163

NET164

NET165

NET166

NET167

NET168

NET169

NET170

NET171

NET172

NET173

NET174

NET175

NET176

NET177

NET178

NET179

NET180

NET181

NET182

NET183

NET184

NET185

NET186

NET187

NET188

NET189

NET190

NET191

NET192

NET193

NET194

NET195

NET196

NET197

NET198

NET199

NET200

NET201

NET202

NET203

NET204

NET205

NET206

NET207

NET208

NET209

NET210

NET211

NET212

NET213

NET214

NET215

NET216

NET217

NET218

NET219

NET220

NET221

NET222

NET223

NET224

NET225

NET226

NET227

NET228

NET229

NET230

NET231

NET232

NET233

NET234

NET235

NET236

NET237

NET238

NET239

NET240

NET241

NET242

NET243

NET244

NET245

NET246

NET247

NET248

NET249

NET250

NET251

NET252

NET253

NET254

NET255

NET256

NET257

NET258

NET259

NET260

NET261

NET262

NET263

NET264

NET265

NET266

NET267

NET268

NET269

NET270

NET271

NET272

NET273

NET274

NET275

NET276

NET277

NET278

NET279

NET280

NET281

NET282

NET283

NET284

NET285

NET286

NET287

NET288

NET289

NET290

NET291

NET292

NET293

NET294

NET295

NET296

NET297

NET298

NET299

NET300

NET301

NET302

NET303

NET304

NET305

NET306

NET307

NET308

NET309

NET310

NET311

NET312

NET313

NET314

NET315

NET316

NET317

NET318

NET319

NET320

NET321

NET322

NET323

NET324

NET325

NET326

NET327

NET328

NET329

NET330

NET331

NET332

NET333

NET334

NET335

NET336

NET337

NET338

NET339

NET340

NET341

NET342

NET343

NET344

NET345

NET346

NET347

NET348

NET349

NET350

NET351

NET352

NET353

NET354

NET355

NET356

NET357

NET358

NET359

NET360

NET361

NET362

NET363

NET364

NET365

NET366

NET367

NET368

NET369

NET370

NET371

NET372

NET373

NET374

NET375

NET376

NET

[illegible]

© 2022 Renesas Electronics Corporation

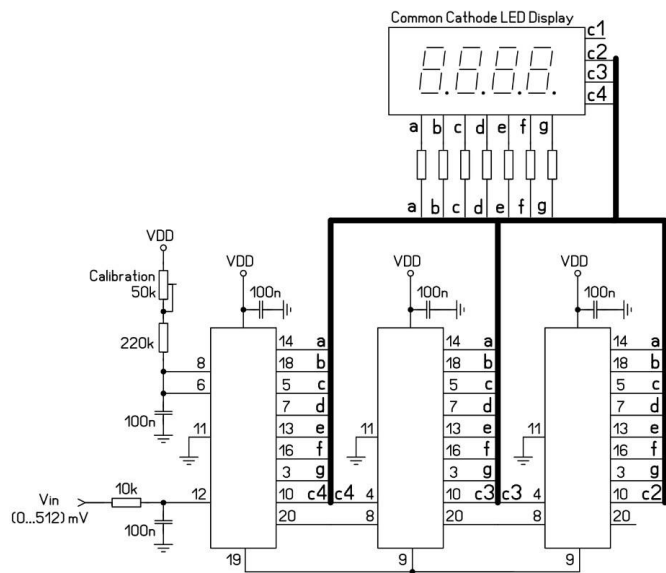


Figure 17. Voltmeter Full Schematic Diagram

This device uses three digits of the 4-digit Common Cathode 7-segment LED Display. Unlike previous projects this display cannot display all digits at once, they must be switched on alternately. For this purpose, the display period (10 mS) is divided in three parts for each digit. Each stage of the device has a One Shot counter that generates a 3.24 mS pulse to display its digit, refer to Figures 15 and 16. Each next One Shot counter is triggered by the previous one, see Figures 18 and 19 for settings.

3-bit LUT5/8-bit CNT2/DLY2	
Type:	CNT/DLY
Mode:	One shot
Counter data:	80 (Range: 1 - 255)
Pulse width (typical):	3.24 ms Formula
Edge select:	Falling
Output polarity:	Inverted (nOUT)
Q mode:	None
Stop and restart:	None
Connections	
Clock:	OSC0 CLK
Clock source:	RC OSC Freq.
Clock frequency:	25 kHz

Figure 18. First Stage One Shot Settings

3-bit LUT8/8-bit CNT5/DLY5	
Type:	CNT/DLY
Mode:	One shot
Counter data:	80 (Range: 1 - 255)
Pulse width (typical):	3.24 ms Formula
Edge select:	Rising
Output polarity:	Inverted (nOUT)
Q mode:	None
Stop and restart:	None
Connections	
Clock:	OSC0 CLK
Clock source:	RC OSC Freq.
Clock frequency:	25 kHz

Figure 19. Second and Third Stage One Shot Settings

This Voltmeter is designed to measure voltage in a range of 0 to 512 mV. Since this project is just a demonstration of GreenPAK's capabilities, some improvements can be made. This device uses the Ramp Waveform as a voltage reference (see Figure 13), therefore the accuracy depends on VDD and external components (resistors and the capacitor). To improve accuracy, a stabilized current source must be used instead of resistors, Its current and the capacitance of the capacitor must be selected so the amplitude of the Ramp Waveform corresponds to max number of pulses that can be counted, in this case 512 (see Figure 14). Also, it is recommended to use a film capacitor due to higher temperature stability. The fluctuation of the internal oscillator has no influence on the accuracy of the voltmeter because both frequencies are taken from the same oscillator. This voltmeter can be used in low precision applications such as power supplies. In this case a voltage divider on the input is needed, 1:10 to measure voltage up to 5.12 V or 1:100 to measure up to 51.2 V. Also, the decimal point must be indicated, which is easy to implement with unused macrocells.

Conclusion

This pulse counter can be used to measure any frequency dependent parameter such as capacitance, resistance, inductance, distance (using Ultrasonic Ranging Module HC-SR04) etc., see Figure 20.

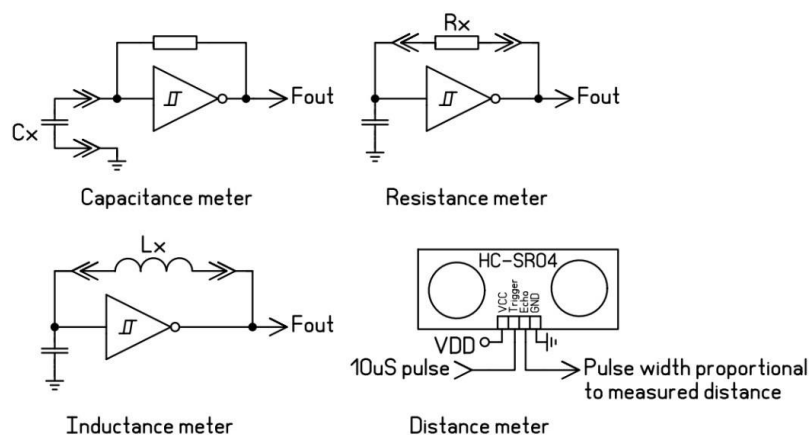


Figure 20. Suggested Projects Using GreenPAK Pulse Counter

The multistage structure makes all projects very flexible and easy to scale.

IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES ("RENESAS") PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit www.renesas.com/contact-us/.

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.