


RZ/T2N Evaluation Board Kit Quick Start Guide

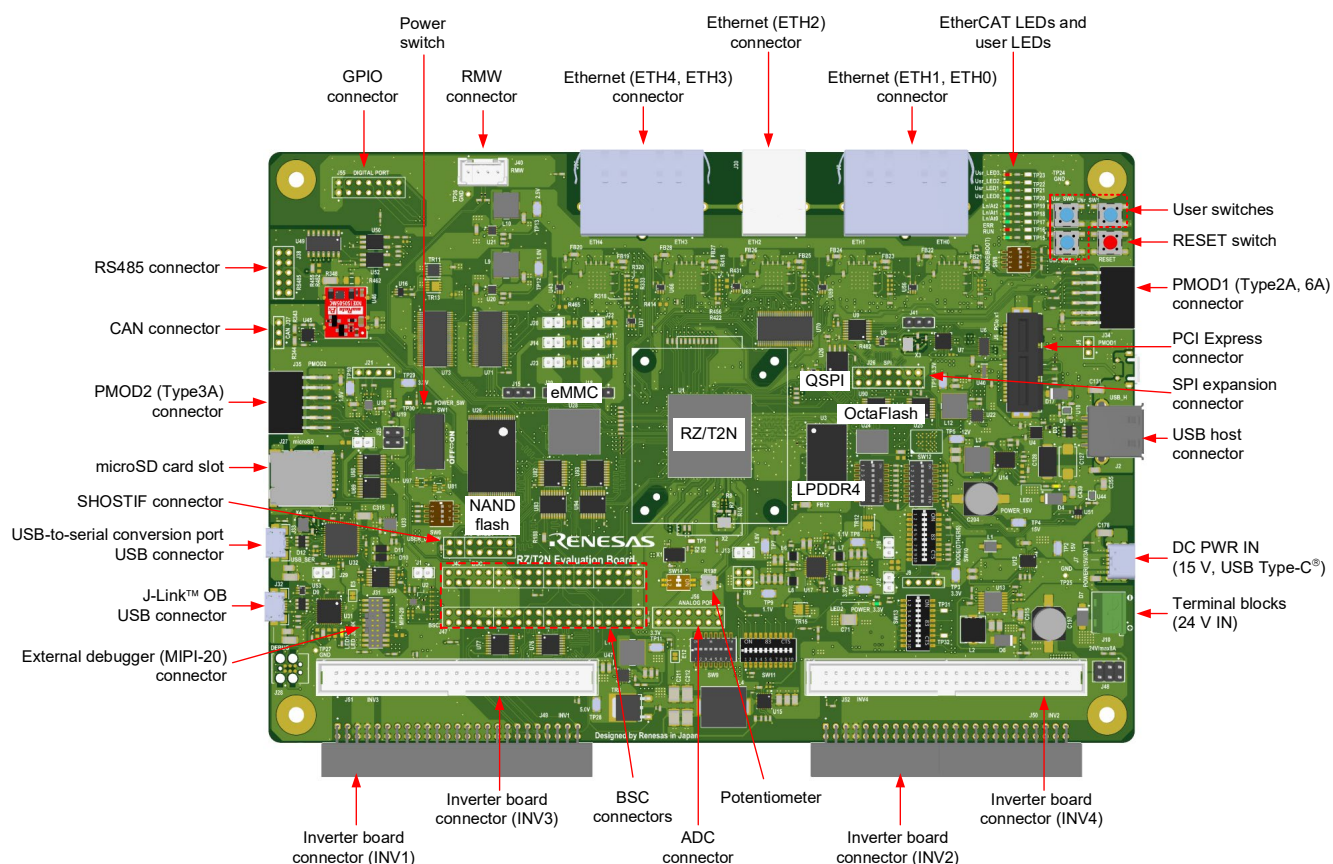


1. Startup Procedure

Supply power to the evaluation board. The sample code is written to the evaluation board at the time of shipment. When the settings of switches are in their default states and power is supplied, a program that makes Usrc_LED2 blink is executed.

1. Connect power to the evaluation board.

This board has a USB Type-C® connector (J7) and terminal block (J10). You can supply power to the evaluation board from any one of them.

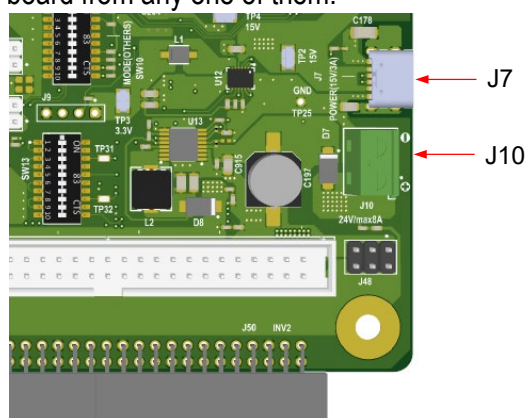


Connector	Specifications and Supply Voltage
J7	USB PD type-C® (15V/3A DC)*1
J10	5.08-mm-pitch 2-pin terminal block, 24V/4A DC input*2

*1: A USB Type-C® cable (USB C to USB C) is included with the product. Prepare an USB AC adapter to supply the USB voltage.


*2: For supplying power, be sure to use a source that is capable of the stable supply of 24V/4A.

2. Slide the power switch to the ON side to start the supply of power.

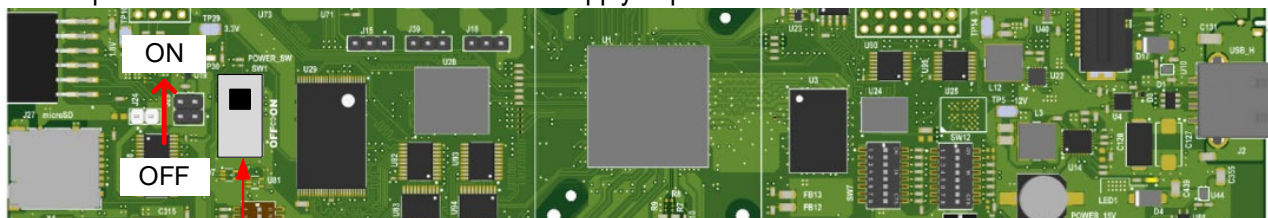

POWER switch

3. After power is supplied, Usr_LED2 will blink.

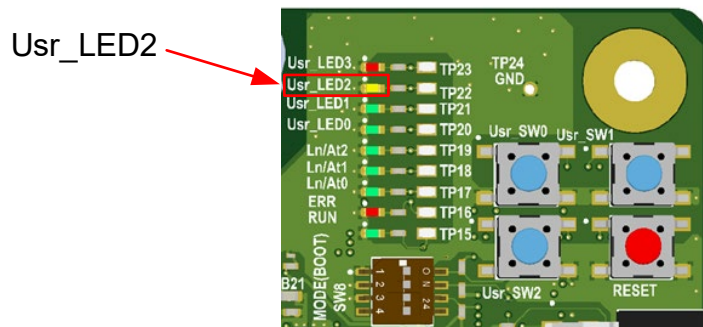

2. Next Step

The manual and schematic of this product are available on the following website. The development environment, sample code, and application notes are also available for download.

renesas.com/rzt2n-evk



3. Support

Technical Contact Details:

<https://www.renesas.com/support/contact.html>

General information on Renesas RZ microprocessors can be found on the Renesas website at:

<https://www.renesas.com/en/products/microcontrollers-microprocessors/rz-mpus>

© 2026 Renesas Electronics Europe GmbH. All rights reserved.

© 2026 Renesas Electronics Corporation. All rights reserved.

Website: <https://www.renesas.com>