

To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: “Standard”, “High Quality”, and “Specific”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as “Specific” without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as “Specific” or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is “Standard” unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - “Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - “High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
 - “Specific”: Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.



User's Manual

IE-780078-NS-EM1

Emulation Board

Target Devices

μ PD780078 Subseries

μ PD780078Y Subseries

Document No. U16226EJ3V0UM00 (3rd edition)

Date Published January 2005 N CP(K)

© NEC Electronics Corporation 2002

Printed in Japan

[MEMO]

PC/AT is a trademark of International Business Machines Corporation.

- **The information in this document is current as of June, 2004. The information is subject to change without notice. For actual design-in, refer to the latest publications of NEC Electronics data sheets or data books, etc., for the most up-to-date specifications of NEC Electronics products. Not all products and/or types are available in every country. Please check with an NEC Electronics sales representative for availability and additional information.**

- No part of this document may be copied or reproduced in any form or by any means without the prior written consent of NEC Electronics. NEC Electronics assumes no responsibility for any errors that may appear in this document.

- NEC Electronics does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of NEC Electronics products listed in this document or any other liability arising from the use of such products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Electronics or others.

- Descriptions of circuits, software and other related information in this document are provided for illustrative purposes in semiconductor product operation and application examples. The incorporation of these circuits, software and information in the design of a customer's equipment shall be done under the full responsibility of the customer. NEC Electronics assumes no responsibility for any losses incurred by customers or third parties arising from the use of these circuits, software and information.

- While NEC Electronics endeavors to enhance the quality, reliability and safety of NEC Electronics products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated entirely. To minimize risks of damage to property or injury (including death) to persons arising from defects in NEC Electronics products, customers must incorporate sufficient safety measures in their design, such as redundancy, fire-containment and anti-failure features.

- NEC Electronics products are classified into the following three quality grades: "Standard", "Special" and "Specific".

The "Specific" quality grade applies only to NEC Electronics products developed based on a customer-designated "quality assurance program" for a specific application. The recommended applications of an NEC Electronics product depend on its quality grade, as indicated below. Customers must check the quality grade of each NEC Electronics product before using it in a particular application.

"Standard": Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots.

"Special": Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support).

"Specific": Aircraft, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems and medical equipment for life support, etc.

The quality grade of NEC Electronics products is "Standard" unless otherwise expressly specified in NEC Electronics data sheets or data books, etc. If customers wish to use NEC Electronics products in applications not intended by NEC Electronics, they must contact an NEC Electronics sales representative in advance to determine NEC Electronics' willingness to support a given application.

(Note)

(1) "NEC Electronics" as used in this statement means NEC Electronics Corporation and also includes its majority-owned subsidiaries.

(2) "NEC Electronics products" means any product developed or manufactured by or for NEC Electronics (as defined above).

M8E 02.11-1

Regional Information

Some information contained in this document may vary from country to country. Before using any NEC Electronics product in your application, please contact the NEC Electronics office in your country to obtain a list of authorized representatives and distributors. They will verify:

- Device availability
- Ordering information
- Product release schedule
- Availability of related technical literature
- Development environment specifications (for example, specifications for third-party tools and components, host computers, power plugs, AC supply voltages, and so forth)
- Network requirements

In addition, trademarks, registered trademarks, export restrictions, and other legal issues may also vary from country to country.

[GLOBAL SUPPORT]

<http://www.necel.com/en/support/support.html>

NEC Electronics America, Inc. (U.S.)
Santa Clara, California
Tel: 408-588-6000
800-366-9782

NEC Electronics (Europe) GmbH
Duesseldorf, Germany
Tel: 0211-65030

NEC Electronics Hong Kong Ltd.
Hong Kong
Tel: 2886-9318

- **Sucursal en España**
Madrid, Spain
Tel: 091-504 27 87

NEC Electronics Hong Kong Ltd.
Seoul Branch
Seoul, Korea
Tel: 02-558-3737

- **Succursale Française**
Vélizy-Villacoublay, France
Tel: 01-30-67 58 00

NEC Electronics Shanghai Ltd.
Shanghai, P.R. China
Tel: 021-5888-5400

- **Filiale Italiana**
Milano, Italy
Tel: 02-66 75 41

NEC Electronics Taiwan Ltd.
Taipei, Taiwan
Tel: 02-2719-2377

- **Branch The Netherlands**
Eindhoven, The Netherlands
Tel: 040-244 58 45

NEC Electronics Singapore Pte. Ltd.
Novena Square, Singapore
Tel: 6253-8311

- **Tyskland Filial**
Taeby, Sweden
Tel: 08-63 80 820

- **United Kingdom Branch**
Milton Keynes, UK
Tel: 01908-691-133

J04.1

General Precautions for Handling This Product

1. Circumstances not covered by product guarantee

- If the product was disassembled, altered, or repaired by the customer
- If it was dropped, broken, or given another strong shock
- Use at overvoltage, use outside guaranteed temperature range, storing outside guaranteed temperature range
- If power was turned on while connection to the power supply, PC interface cable, or target system was in an unsatisfactory state
- If the cable of the power supply, the PC interface cable, the emulation probe, or the like was bent or pulled excessively
- If a power supply other than the product described in the system configuration was used
- If the product got wet
- If this product is connected to the target system when there is a potential difference between the GND of this product and GND of the target system.
- If the connectors or cables are plugged/unplugged while this product is in the power-on state.
- If excessive load is applied to the connectors or sockets.

2. Safety precautions

- If used for a long time, the product may become hot (50°C to 60°C). Be careful of low temperature burns and other dangers due to the product becoming hot.
- Be careful of electrical shock. There is a danger of electrical shock if the product is used as described above in **1 Circumstances not covered by product guarantee**.

INTRODUCTION

Product Overview

The IE-780078-NS-EM1 is designed to be used with the IE-78K0-NS or IE-78K0-NS-A to debug the following target devices that belong to the 78K/0 Series of 8-bit single-chip microcontrollers.

- μ PD780078 Subseries: μ PD780076, 780078, 78F0078
- μ PD780078Y Subseries: μ PD780076Y, 780078Y, 78F0078Y

Target Readers

This manual is intended for engineers who will use the IE-780078-NS-EM1 with the IE-78K0-NS or IE-78K0-NS-A to perform system debugging.

Engineers who use this manual are expected to be thoroughly familiar with the target device's functions and use methods and to be knowledgeable about debugging.

Organization

When using the IE-780078-NS-EM1, refer to not only this manual (supplied with the IE-780078-NS-EM1) but also the manual that is supplied with the IE-78K0-NS or IE-78K0-NS-A.

The IE-78K0-NS used in combination with the IE-78K0-NS-PA is functionally equivalent to the IE-78K0-NS-A. Therefore, as necessary, read IE-78K0-NS + IE-78K0-NS-PA for IE-78K0-NS-A in this document.

IE-78K0-NS or IE-78K0-NS-A User's Manual

- Basic specifications
- System configuration
- External interface functions

IE-780078-NS-EM1 User's Manual

- General
- Part names
- Installation
- Differences between target devices and target interface circuits

Purpose

This manual's purpose is to explain various debugging functions that can be performed when using the IE-780078-NS-EM1.

Terminology

The meanings of certain terms used in this manual are listed below.

Term	Meaning
Emulation device	This is a general term that refers to the device in the emulator that is used to emulate the target device. It includes the emulation CPU.
Emulation CPU	This is the CPU block in the emulator that is used to execute user-generated programs.
Target device	This is the device that is the target for emulation.
Target system	This includes the target program and the hardware provided by the user. When defined narrowly, it includes only the hardware.
IE system	This refers to the combination of the in-circuit emulator (IE-78K0-NS or IE-78K0-NS-A) and the emulation board (IE-780078-NS-EM1).

Conventions

Data significance: Higher digits on the left and lower digits on the right

Note: Footnote for item marked with **Note** in the text

Caution: Information requiring particular attention

Remark: Supplementary information

How to Read This Manual

It is assumed that the readers of this manual have general knowledge in the fields of electrical engineering, logic circuits, and microcontrollers.

To understand the overall functions and usages of the IE-780078-NS-EM1

→ Read this manual according to the **CONTENTS**.

The mark ★ shows major revised points.

Related Documents

The related documents (user's manuals) indicated in this publication may include preliminary versions. However, preliminary versions are not marked as such.

Document Name	Document No.
IE-78K0-NS In-Circuit Emulator	U13731E
IE-78K0-NS-A In-Circuit Emulator	U14889E
IE-780078-NS-EM1 Emulation Board	This manual
ID78K0-NS Ver. 2.52 Integrated Debugger Operation	U16488E
μPD780078, 780078Y Subseries	U14260E

Caution The documents listed above are subject to change without notice. Be sure to use the latest documents when designing.

CONTENTS

CHAPTER 1 GENERAL	9
1.1 System Configuration	10
1.2 Hardware Configuration	12
1.3 Basic Specifications	13
CHAPTER 2 PART NAMES	14
2.1 Parts of Main Unit.....	15
CHAPTER 3 INSTALLATION	16
3.1 Connection	17
3.2 Clock Settings	18
3.2.1 Overview of clock settings.....	18
3.2.2 Main system clock settings.....	21
3.2.3 Subsystem clock settings	26
3.3 Mask Option Setting.....	31
3.3.1 Pull-up resistor	31
3.4 External Trigger.....	32
3.5 Jumper Settings on IE-78K0-NS.....	33
3.6 Jumper Settings on IE-78K0-NS-A.....	33
★ 3.7 Low-Voltage Emulation Setting	34
CHAPTER 4 DIFFERENCES BETWEEN TARGET DEVICES AND TARGET INTERFACE CIRCUITS	35
CHAPTER 5 CAUTIONS ON USE	38
APPENDIX A EMULATION PROBE PIN ASSIGNMENT TABLE	39
APPENDIX B NOTES ON DESIGNING TARGET SYSTEM	40
APPENDIX C REVISION HISTORY	45

CHAPTER 1 GENERAL

The IE-780078-NS-EM1 is a development tool for efficient debugging of hardware or software when using one of the following target devices that belong to the 78K/0 Series of 8-bit single-chip microcontrollers.

This chapter describes the IE-780078-NS-EM1's system configuration and basic specifications.


- Target devices
 - μ PD780078 Subseries
 - μ PD780078Y Subseries

1.1 System Configuration

Figure 1-1 illustrates the IE-780078-NS-EM1's system configuration.

★

Figure 1-1. System Configuration

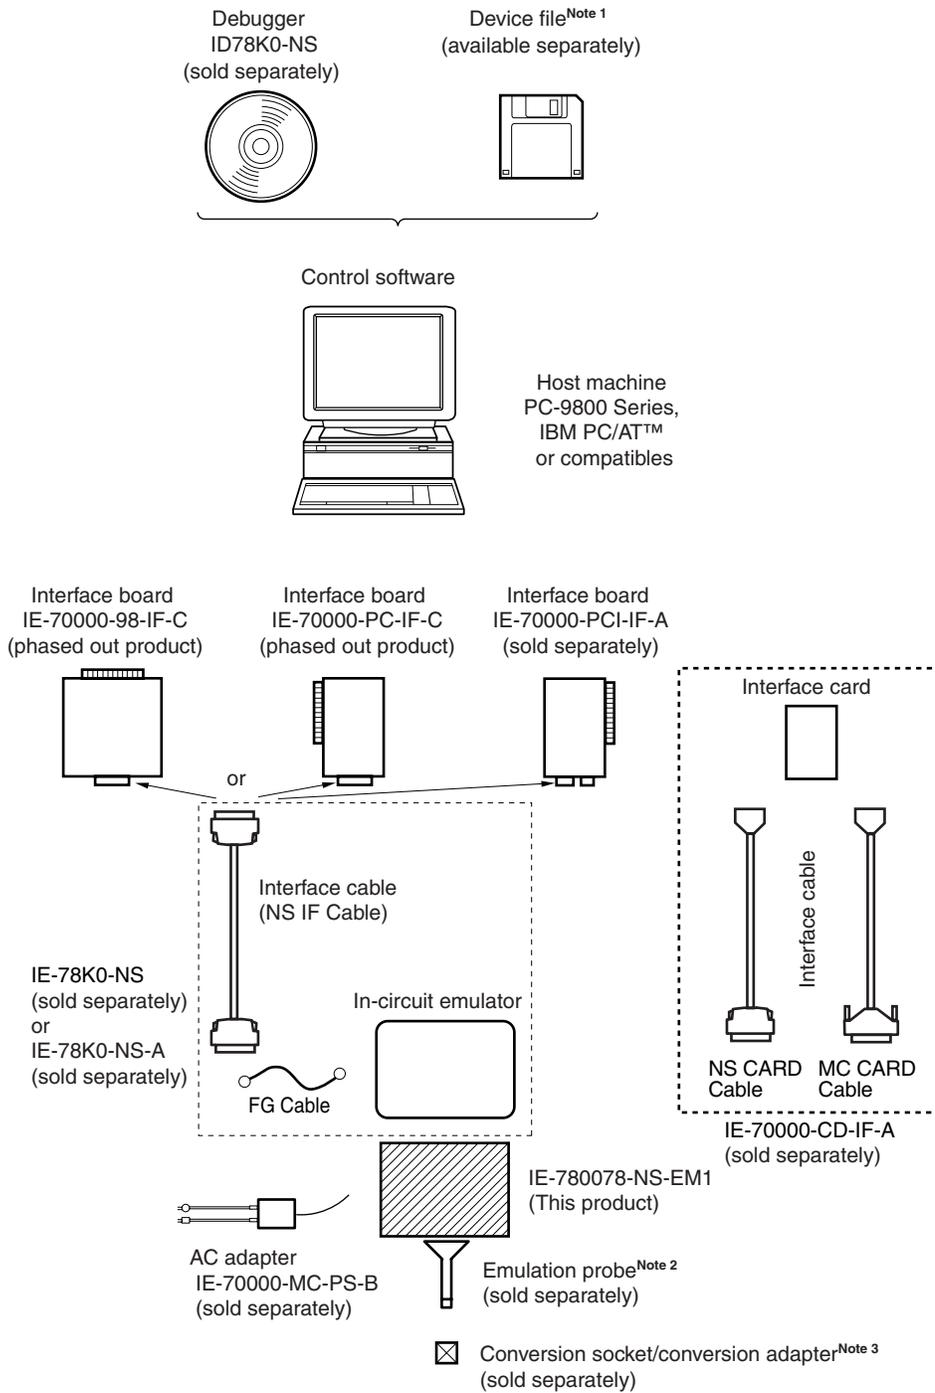

Notes 1. The device file is as follows, in accordance with the subseries.

μ SxxxxDF780078: μ PD780078, 780078Y Subseries

Obtain device files from the NEC Electronics website.

(http://www.necel.com/micro/index_e.html)

2. The emulation probes NP-64GC, NP-64GC-TQ, NP-H64GC-TQ, NP-64GK, and NP-H64GK-TQ are products of Naito Densai Machida Mfg. Co., Ltd.

For further information, contact Naito Densai Machida Mfg. Co., Ltd. (TEL: +81-45-475-4191)

3. The conversion adapters TGC-064SAP and TGK-064SBW are products of TOKYO ELETECH CORPORATION.

For further information, contact Daimaru Kogyo Co., Ltd.

Tokyo Electronics Department (TEL: +81-3-3820-7112)

Osaka Electronics Department (TEL: +81-6-6244-6672)

Table 1-1 shows the correspondence between the emulation probes and conversion sockets/conversion adapters that are sold separately.

Table 1-1. Correspondence Between Emulation Probes and Conversion Socket/Conversion Adapters


Package	Emulation Probe	Conversion Socket/Conversion Adapter
64-pin plastic QFP	NP-64GC (probe length: 200 mm)	EV-9200GC-64
	NP-64GC-TQ (probe length: 200 mm) NP-H64GC-TQ (probe length: 400 mm)	TGC-064SAP
64-pin plastic TQFP	NP-64GK (probe length: 200 mm) NP-H64GK-TQ (probe length: 400 mm)	TGK-064SBW

1.2 Hardware Configuration

Figure 1-2 shows the IE-780078-NS-EM1's position in the basic hardware configuration.

★

Figure 1-2. Basic Hardware Configuration

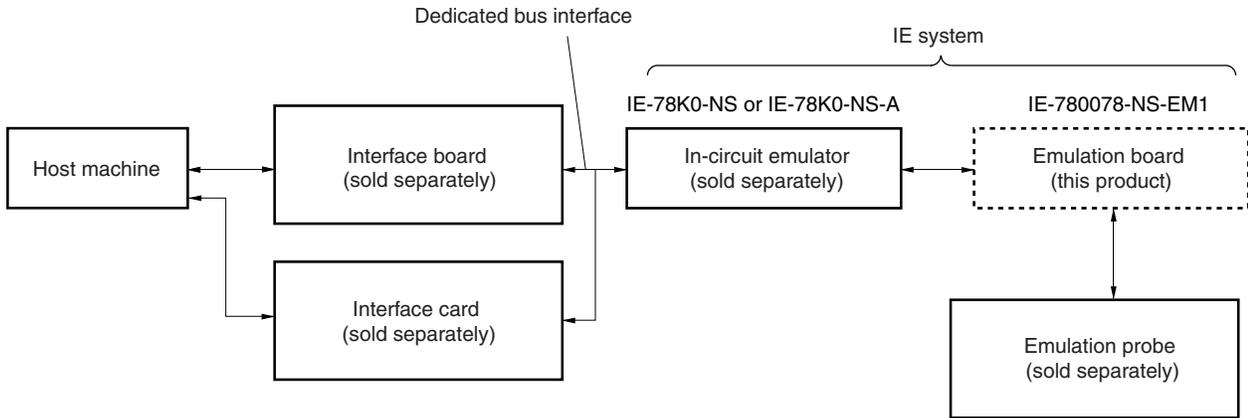

1.3 Basic Specifications

The IE-780078-NS-EM1's basic specifications are listed in Table 1-2.

Table 1-2. Basic Specifications

Parameter	Description
Target device	μ PD780078, 780078Y Subseries
System clock	12.0 MHz
Main system clock supply	External: Input via an emulation probe from the target system Internal: Mounted on the emulation board (8.38 MHz) or mounted on the board by the user
Subsystem clock supply	External: Input via an emulation probe from the target system Internal: Mounted on the emulation board (32.768 kHz) or mounted on the board by the user
Low voltage support	V _{DD} = 1.8 to 5.5 V (same as the target device)

★

CHAPTER 2 PART NAMES

This chapter introduces the parts of the IE-780078-NS-EM1 main unit.


The packing box contains the emulation board (IE-780078-NS-EM1), packing list, user's manual, and guarantee card.

If there are any missing or damaged items, please contact an NEC Electronics sales representative.

Fill out and return the guarantee card that comes with the main unit.

2.1 Parts of Main Unit

Figure 2-1. IE-780078-NS-EM1 Part Names

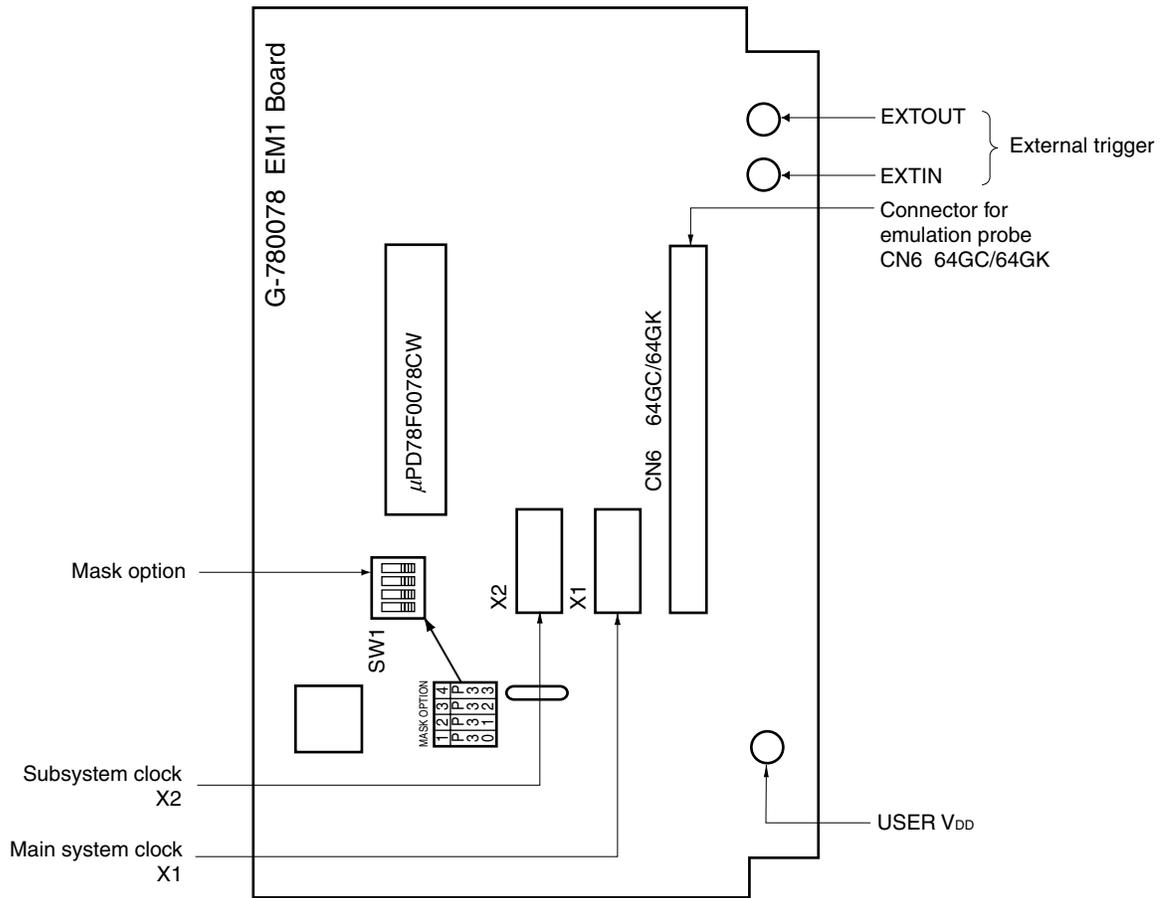

CHAPTER 3 INSTALLATION

This chapter describes methods for connecting the IE-780078-NS-EM1 to the IE-78K0-NS or IE-78K0-NS-A, emulation probe, etc. Mode setting methods are also described.

Caution Connecting or removing components to or from the target system, or making switch or other setting changes must be carried out after the power supply to both the IE system and the target system has been switched OFF.

3.1 Connection

(1) Connection with IE-78K0-NS or IE-78K0-NS-A main unit

See the **IE-78K0-NS User's Manual (U13731E)** for a description of how to connect the IE-780078-NS-EM1 to the IE-78K0-NS.

See the **IE-78K0-NS-A User's Manual (U14889E)** for a description of how to connect the IE-780078-NS-EM1 to the IE-78K0-NS-A.

(2) Connection with emulation probe


See the **IE-78K0-NS User's Manual (U13731E)** or **IE-78K0-NS-A User's Manual (U14889E)** for a description of how to connect an emulation probe to the IE-780078-NS-EM1.

Connect the emulation probe (NP-64GC, NP-64GC-TQ, NP-H64GC-TQ, NP-64GK, and NP-H64GK-TQ) to CN6.

Caution Incorrect connection may damage the IE system.

Be sure to read the emulation probe's user's manual for a detailed description of the connection method.

Figure 3-1. Connection of Emulation Probe

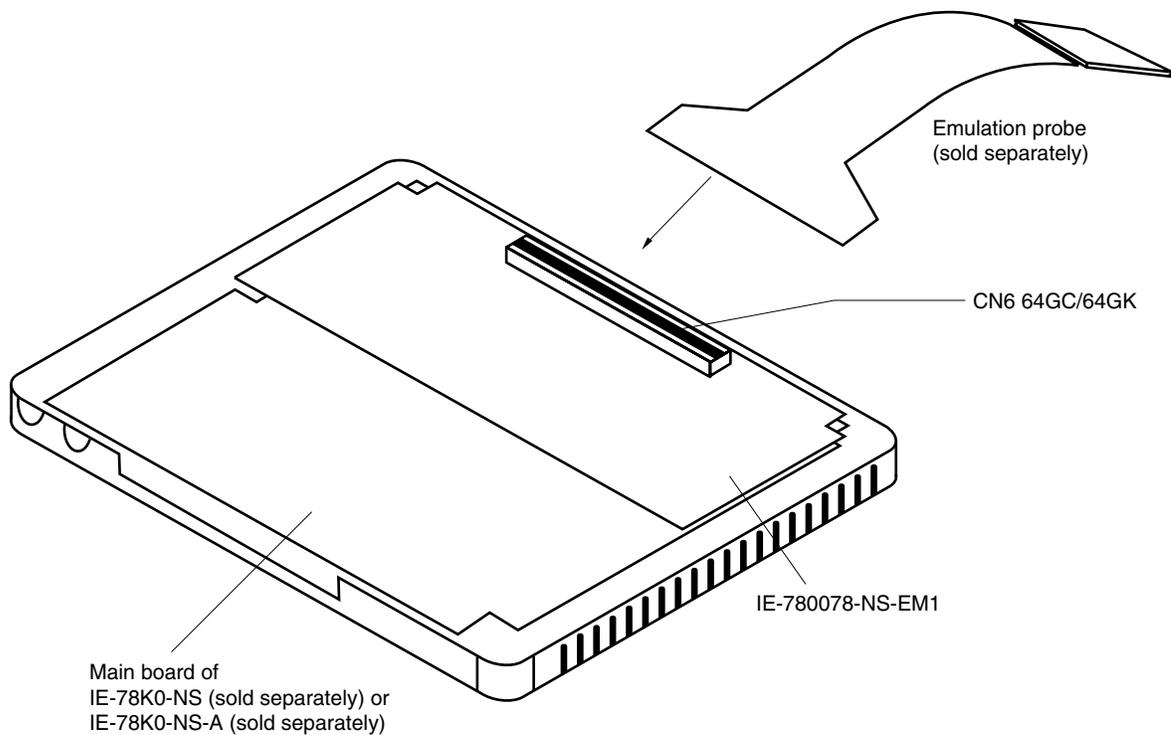

3.2 Clock Settings

3.2.1 Overview of clock settings

The main system and subsystem clocks to be used during debugging can be selected from (1) to (3) below.

- (1) **Clock that is already mounted on emulation board**
- (2) **Clock that is mounted by user**
- (3) **External clock**


If the target system includes an internal clock, select either **(1) Clock that is already mounted on emulation board** or **(2) Clock that is mounted by user**. For an internal clock, a resonator is connected to the target device and the target device's internal oscillation circuit is used. An example of the external circuit is shown in part (a) of Figure 3-2. During emulation, the resonator that is mounted on the target system is not used. Instead, the clock that is mounted on the emulation board connected to the IE-78K0-NS or IE-78K0-NS-A is used.

If the target system includes an external clock, select **(3) External clock**.

For an external clock, a clock signal is supplied from outside the target device and the target device's internal oscillation circuit is not used. An example of the external circuit is shown in part (b) of Figure 3-2.

Caution The IE system will be hung-up if the main system clock is not supplied normally. Moreover, be sure to input a rectangular wave as the clock from the target. The IE system does not operate if the crystal resonator is connected to X1 (main system clock) and XT1 (subsystem clock).


Figure 3-2. External Circuits Used as System Clock Oscillation Circuit

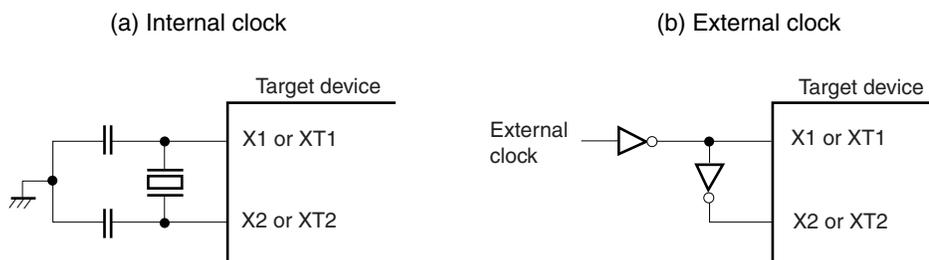

(1) Clock that is already mounted on emulation board**(a) For main system clock**

A crystal oscillator (X1) is already mounted on the emulation board. Its frequency is 8.38 MHz.

Figure 3-3. When Using Clock That Is Already Mounted on Emulation Board (Main System Clock)

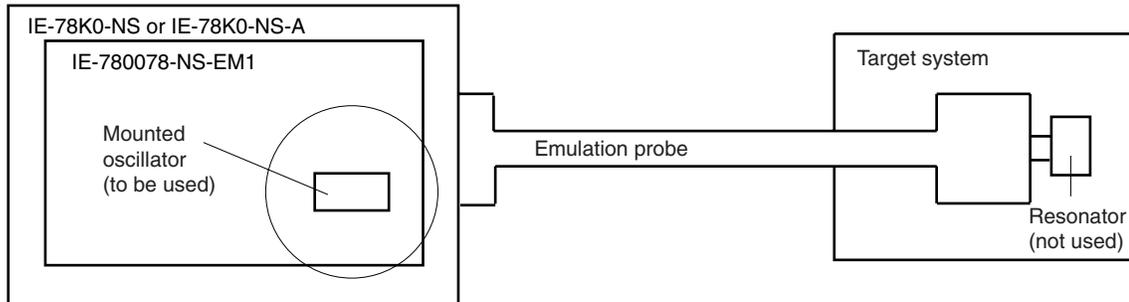


Remark The clock that is supplied by the IE-780078-NS-EM1's oscillator (encircled in the figure) is used.

(b) For subsystem clock

A crystal resonator (XT1) is already mounted on the emulation board. Its frequency is 32.768 kHz.

Figure 3-4. When Using Clock That Is Already Mounted on Emulation Board (Subsystem Clock)

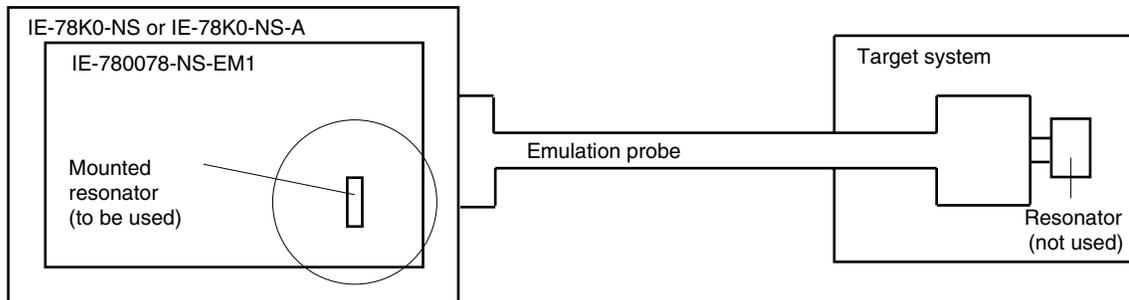

Remark The clock that is supplied by the IE-780078-NS-EM1's resonator (encircled in the figure) is used.


(2) Clock that is mounted by user

The user is able to mount any clock supported by the set specifications on the IE-780078-NS-EM1.

(a) For main system clock

Remove the crystal oscillator (X1) that is already mounted on the emulation board, and mount either the parts board on which the resonator to be used is mounted or an oscillator. This method is useful when using a different frequency from that of the pre-mounted clock.

Figure 3-5. When Using User-Mounted Clock (Main System Clock)

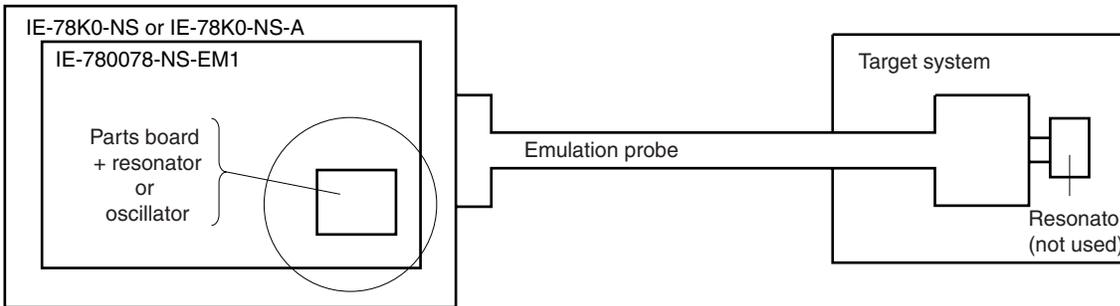


Remark The clock that is supplied by the IE-780078-NS-EM1's resonator or oscillator (encircled in the figure) is used.

(b) For subsystem clock

Mount the resonator to be used on the parts board (X2) that is already mounted on the emulation board. Alternatively, remove the parts board and mount an oscillator.

Figure 3-6. When Using User-Mounted Clock (Subsystem Clock)

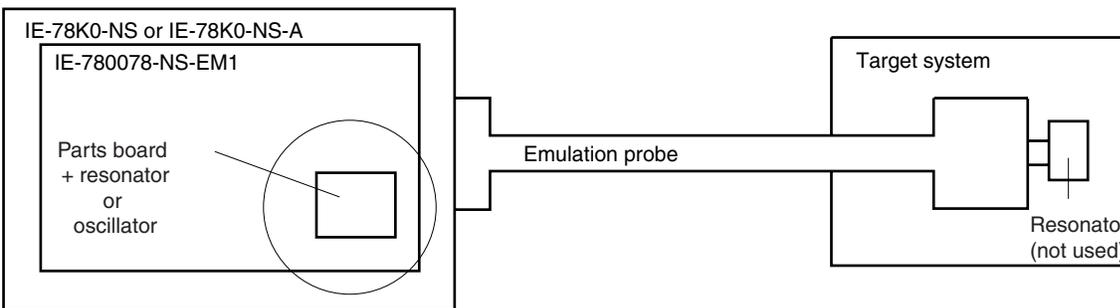


Remark The clock that is supplied by the IE-780078-NS-EM1's resonator or oscillator (encircled in the figure) is used.

(3) External clock

An external clock connected to the target system can be used via an emulation probe.

Figure 3-7. When Using External Clock

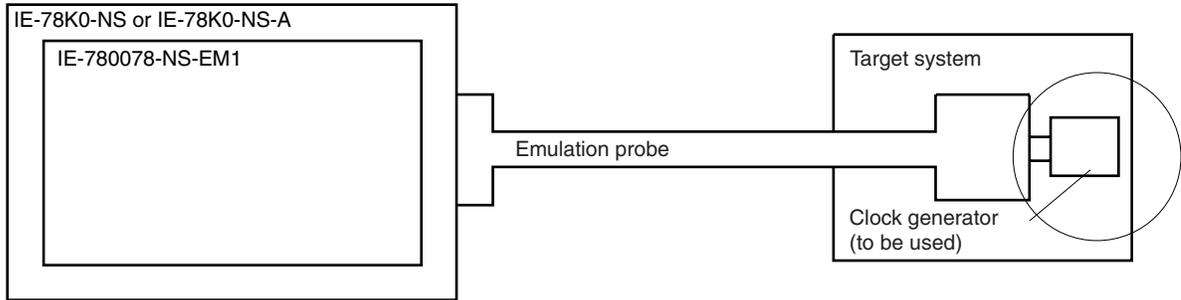

Remark The clock supplied by the target system’s clock generator (encircled in the figure) is used.

3.2.2 Main system clock settings

Table 3-1. Main System Clock Settings

Frequency of Main System Clock		IE-780078-NS-EM1	
		X1 Socket	CPU Clock Source Selection (ID78K0-NS)
When using clock that is already mounted on emulation board	8.38 MHz	Oscillator used	Internal
When using clock mounted by user	Other than 8.38 MHz	Oscillation circuit assembled by user	
When using external clock		Oscillator (not used)	External

Caution When using an external clock, open the configuration dialog box when starting the integrated debugger (ID78K0-NS) and select “External” in the area (Clock) for selecting the CPU’s clock source (this selects the user’s clock).

Remark When the IE-780078-NS-EM1 is shipped, the settings for “when using clock that is already mounted on emulation board” are preset.

(1) When using clock that is already mounted on emulation board

When the IE-780078-NS-EM1 is shipped, an 8.38 MHz crystal oscillator is already mounted in the IE-780078-NS-EM1’s X1 socket. When using the factory-set mode settings, there is no need to make any other hardware settings.

When starting the integrated debugger (ID78K0-NS), open the configuration dialog box and select “Internal” in the area (Clock) for selecting the CPU’s clock source (this selects the emulator’s internal clock).

(2) When using clock mounted by user

Perform the settings described under either (a) or (b), depending on the type of clock to be used.

When starting the integrated debugger (ID78K0-NS), open the configuration dialog box and select “Internal” in the area (Clock) for selecting the CPU’s clock source (this selects the emulator’s internal clock).

(a) When using a ceramic resonator or crystal resonator


- Items to be prepared
 - Parts board
 - Ceramic resonator or crystal resonator
 - Resistor Rx
- Capacitor CA
- Capacitor CB
- Solder kit

<Steps>

<1> Solder the target ceramic resonator or crystal resonator and resistor Rx, capacitor CA, and capacitor CB (all with suitable oscillation frequency) as shown below.

Figure 3-8. Connections on Parts Board (When Using Main System Clock or User-Mounted Clock)


Parts board (X1)

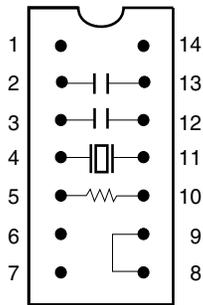

(Top view)

Pin No.	Connection
2-13	Capacitor CA
3-12	Capacitor CB
4-11	Ceramic resonator or crystal resonator
5-10	Resistor Rx
8-9	Shorted


Circuit diagram

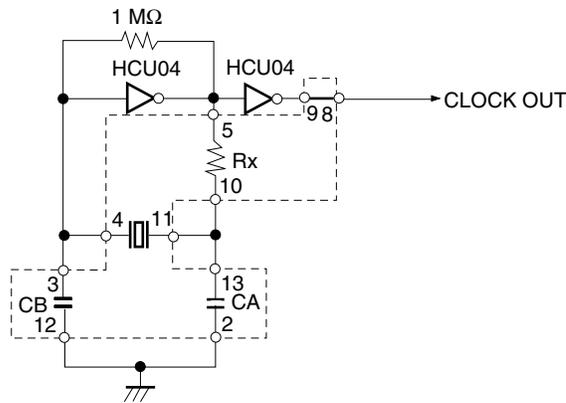

Remark The sections enclosed in broken lines indicate parts that are attached to the parts board.

- <2> Prepare the IE-780078-NS-EM1.
- <3> Remove the crystal oscillator that is mounted in the IE-780078-NS-EM1's X1 socket.
- <4> Connect the parts board (from <1> above) to the X1 socket from which the crystal oscillator was removed. Check the pin 1 mark to make sure the board is mounted in the correct direction.
- <5> Make sure that the parts board is wired as shown in Figure 3-8 above.
- <6> Connect the IE-780078-NS-EM1 to the IE-78K0-NS or IE-78K0-NS-A.

The above steps configure the following circuit and enable supply of the clock from the mounted resonator to the emulation device.

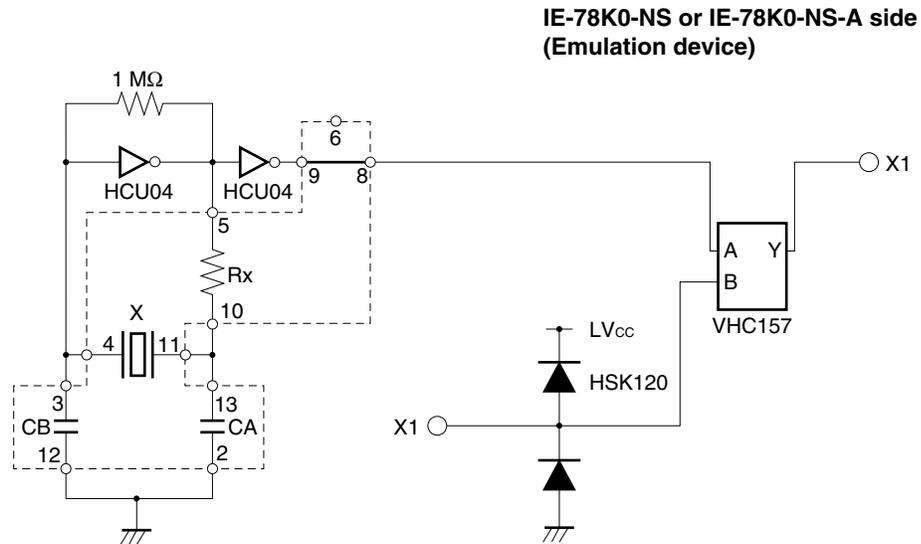


Remark The sections enclosed in broken lines indicate parts that are attached to the parts board.

(b) When using a crystal oscillator

- Items to be prepared
 - ★ ● Crystal oscillator (pins are as shown in Figure 3-9, V_{cc}: +5 V, CLOCK OUT: CMOS level)


Figure 3-9. Crystal Oscillator (When Using Main System Clock or User-Mounted Clock)

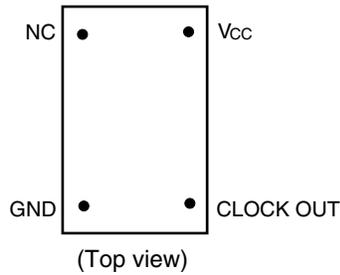

<Steps>


- <1> Prepare the IE-780078-NS-EM1.
- <2> Remove the crystal oscillator that is mounted in the IE-780078-NS-EM1's X1 socket.
- <3> Mount the crystal oscillator prepared by the user in the X1 socket from which the crystal oscillator was removed in <2> above. Insert the crystal oscillator pin into the socket aligning the pins as shown in the figure below.

Figure 3-10. Pin Alignment of Crystal Oscillator and Socket

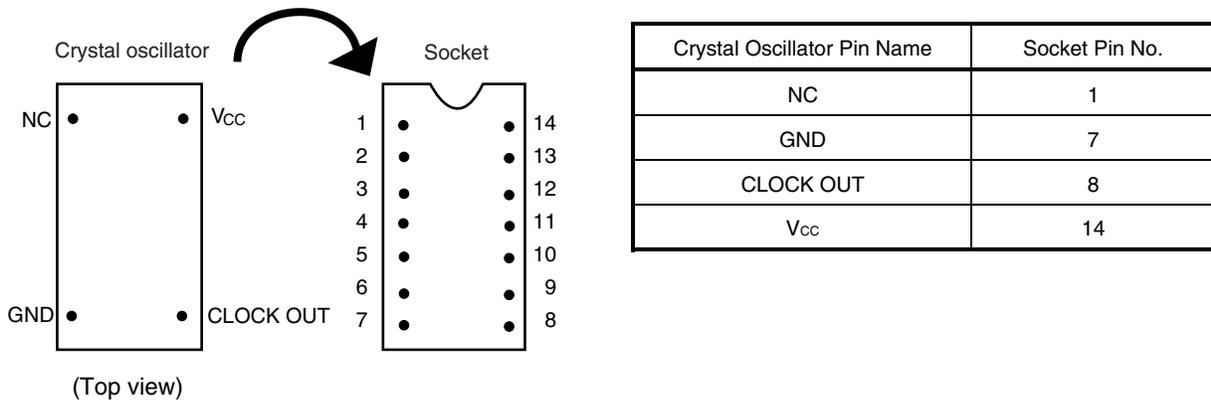

- <4> Connect the IE-780078-NS-EM1 to the IE-78K0-NS or IE-78K0-NS-A.

The above steps configure the following circuit and enable supply of the clock from the mounted resonator to the emulation device.

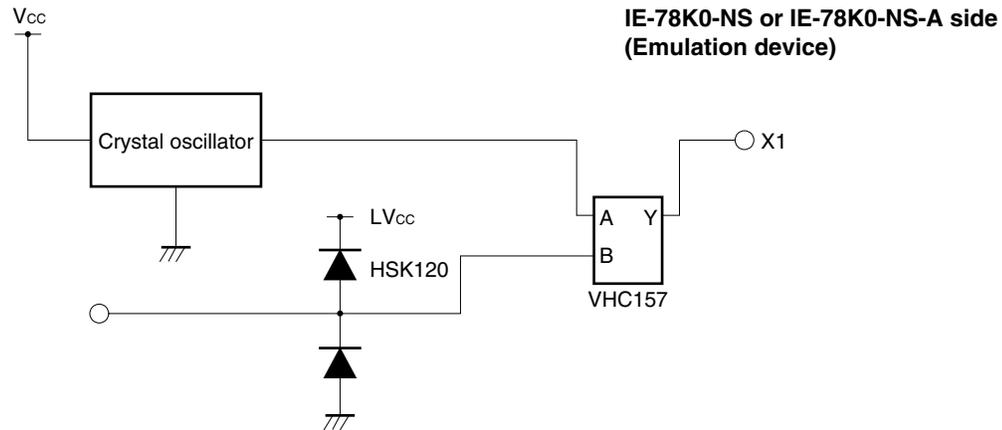

(3) When using external clock

No hardware settings are required for this situation.

When starting the integrated debugger (ID78K0-NS), open the configuration dialog box and select "External" in the area (Clock) for selecting the CPU's clock source (this selects the user's clock).

3.2.3 Subsystem clock settings

Table 3-2. Subsystem Clock Settings

Frequency of Subsystem Clock to Be Used		IE-780078-NS-EM1	IE-78K0-NS or IE-78K0-NS-A
		X2 Socket	JP8
When using clock (XT1) that is already mounted on emulation board	32.768 kHz	6 and 8 shorted	1 and 2 shorted
When using clock mounted by user	Other than 32.768 kHz	Oscillation circuit assembled by user	
When using external clock			Not used

Caution Jumper JP8, which is used to select the board's clock or an external clock, should be set only after turning off the power of the IE-78K0-NS or IE-78K0-NS-A.

Remark When the IE-780078-NS-EM1 is shipped, the settings for "when using clock that is already mounted on emulation board" are preset.

(1) When using clock that is already mounted on emulation board

When the IE-780078-NS-EM1 is shipped, a 32.768 kHz crystal resonator (XT1) and the parts board (X2) on which pins 6 and 8 are shorted are already mounted on the IE-780078-NS-EM1. Short the 1 to 2 side of the jumper (JP8) on the IE-78K0-NS or IE-78K0-NS-A. There is no need to make any other settings via the integrated debugger (ID78K0-NS).

(2) When using the clock mounted by user

The settings described under either (a) or (b) are required, depending on the type of clock to be used. Short 1 and 2 of the jumper (JP8) on the IE-78K0-NS or IE-78K0-NS-A.

For the jumper position, refer to the **IE-78K0-NS User's Manual (U13731E)** when using the IE-78K0-NS, and refer to the **IE-78K0-NS-A User's Manual (U14889E)** when using the IE-78K0-NS-A.

There is no need to make any other settings via the integrated debugger (ID78K0-NS).

(a) When using a ceramic resonator or crystal resonator

- Items to be prepared
 - Parts board
 - Ceramic resonator or crystal resonator
 - Resistor Rx
 - Capacitor CA
 - Capacitor CB
 - Solder kit


<Steps>

<1> Prepare the IE-780078-NS-EM1.

<2> Solder the ceramic resonator or crystal resonator, resistor Rx, capacitor CA, and capacitor CB (all with suitable oscillation frequency) onto the parts board (X2) (as shown below).

Figure 3-11. Connections on Parts Board (When Using Subsystem Clock or User-Mounted Clock)


Parts board (X2)

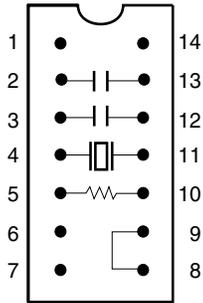

(Top view)

Pin No.	Connection
2-13	Capacitor CA
3-12	Capacitor CB
4-11	Ceramic resonator or crystal resonator
5-10	Resistor Rx
8-9	Shorted


Circuit diagram

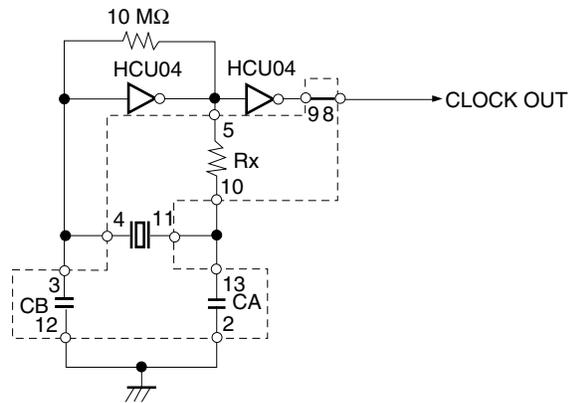

Remark The sections enclosed in broken lines indicate parts that are attached to the parts board.

- <3> Make sure that the parts board (X2) is wired as shown in Figure 3-11.
- <4> Remove the parts board that is mounted in the IE-780078-NS-EM1's X2 socket.
- <5> Connect the parts board from <2> above to the socket from which the parts board (from <4> above) was removed. Check the pin 1 mark to make sure the board is mounted in the correct direction.
- <6> Connect the IE-780078-NS-EM1 to the IE-78K0-NS or IE-78K0-NS-A.

The above steps configure the following circuit and enable supply of the clock from the mounted resonator to the emulation device.

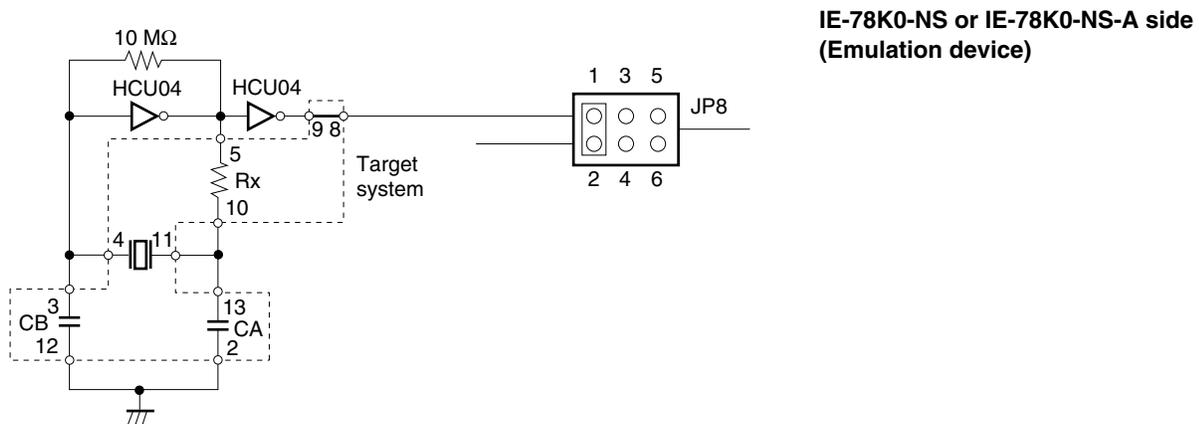


- Remarks**
1. The sections enclosed in broken lines indicate parts that are attached to the parts board.
 2. There is JP8 on the IE-78K0-NS or IE-78K0-NS-A.

(b) When using a crystal oscillator

- ★ ● Items to be prepared
 - Crystal oscillator (pins are shown in Figure 3-12, V_{CC}: +5 V, CLOCK OUT: CMOS level)


Figure 3-12. Crystal Oscillator (When Using Subsystem Clock or User-Mounted Clock)

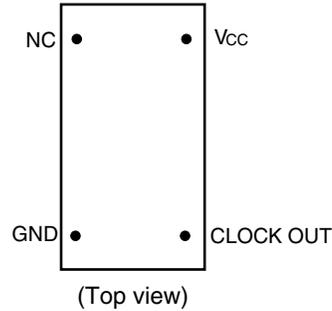

<Steps>

- <1> Prepare the IE-780078-NS-EM1.
- <2> Remove the parts board that is mounted in the IE-780078-NS-EM1's X2 socket.
- <3> Mount the crystal oscillator prepared by the user in the X2 socket from which the parts board was removed in <2> above. Insert the crystal oscillator pin into the socket aligning the pins as shown in the figure below.


Figure 3-13. Pin Alignment of Crystal Oscillator and Socket

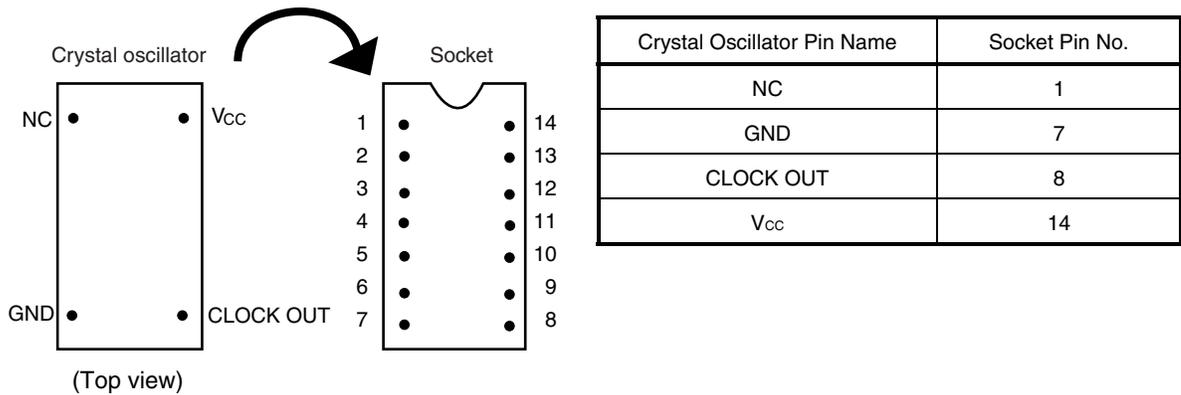

- <4> Connect the IE-780078-NS-EM1 to the IE-78K0-NS or IE-78K0-NS-A.

The above steps configure the following circuit and enable supply of the clock from the mounted oscillator to the emulation device.

**IE-78K0-NS or IE-78K0-NS-A side
(Emulation device)**

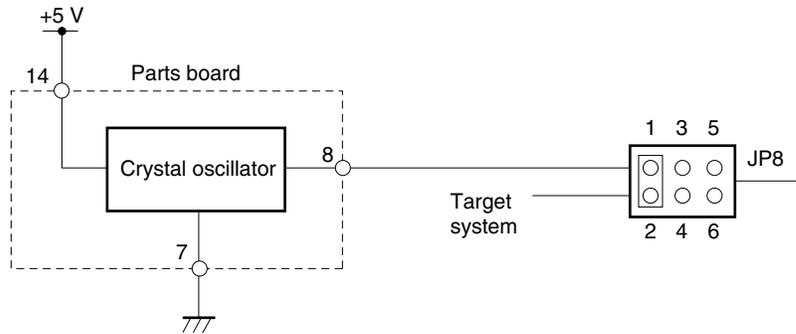

- Remarks**
1. The sections enclosed in broken lines indicate the parts that are attached to the parts board.
 2. There is JP8 on the IE-78K0-NS or IE-78K0-NS-A.

(3) When using an external clock

Short 3 and 4 of the jumper (JP8) on the IE-78K0-NS or IE-78K0-NS-A. There is no need to make any settings via the integrated debugger (ID78K0-NS).

3.3 Mask Option Setting


3.3.1 Pull-up resistor

By setting the DIP switch (SW1) in the IE-780078-NS-EM1, a 30 kΩ pull-up resistor can be connected to P30 to P33 as specified by the mask option.

For ports that do not exist in the IE-780078-NS-EM1, set the DIP switch to OFF.

The pull-up resistor is pulled up by the V_{DD} pin of the target socket.

Figure 3-14. Pull-up Resistor

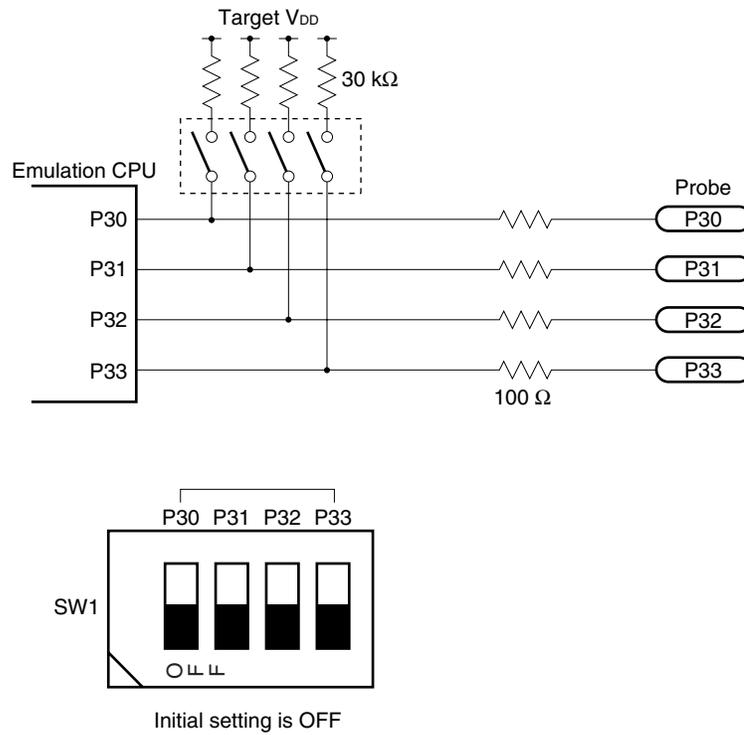


3.4 External Trigger

Connect the external trigger to the IE-780078-NS-EM1's check pins EXTOUT and EXTIN as shown below.

See the **ID78K0-NS Ver. 2.52 Integrated Debugger Operation User's Manual (U16488E)** for descriptions of related use methods, and see the **IE-78K0-NS User's Manual (U13731E)** or **IE-78K0-NS-A User's Manual (U14889E)** for pin characteristics.

Figure 3-15. External Trigger Input Position

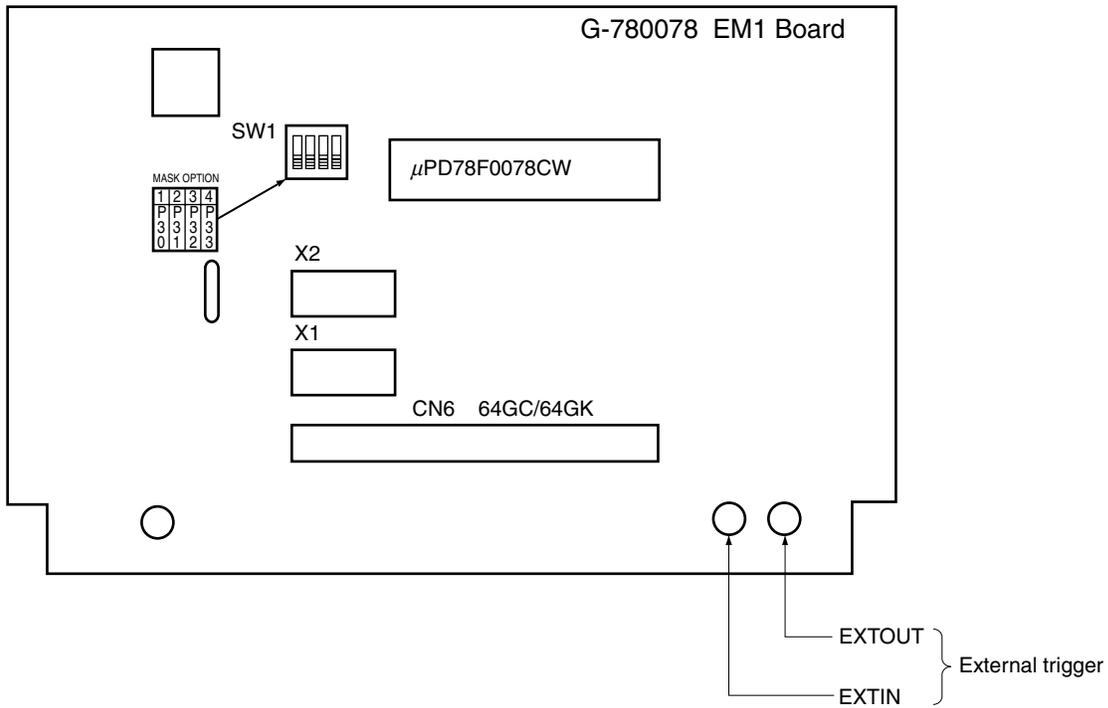

3.5 Jumper Settings on IE-78K0-NS

When using the IE-780078-NS-EM1 in combination with the IE-78K0-NS, set the jumpers on the IE-78K0-NS as shown below.

For details of these jumper positions, refer to the **IE-78K0-NS User's Manual (U13731E)**.

Caution Incorrect jumper settings may damage the devices.

Table 3-3. Jumper Settings on IE-78K0-NS

	JP2	JP3	JP4	JP6	JP7	JP8
Setting	2 and 3 shorted	1 and 2 shorted	1 and 2 shorted	3 and 4 shorted	1 and 2 shorted	1 and 2 shorted

3.6 Jumper Settings on IE-78K0-NS-A

When using the IE-780078-NS-EM1 in combination with the IE-78K0-NS-A, set the jumpers on the IE-78K0-NS-A as shown below.

For details of these jumper positions, refer to the **IE-78K0-NS-A User's Manual (U14889E)**.

Caution Incorrect jumper settings may damage the devices.

Table 3-4. Jumper Settings on IE-78K0-NS-A G-780009 Board

	JP2	JP3	JP4	JP6	JP7	JP8
Setting	2 and 3 shorted	1 and 2 shorted	1 and 2 shorted	3 and 4 shorted	1 and 2 shorted	1 and 2 shorted

Table 3-5. Jumper Settings on IE-78K0-NS-A G-78K0H Option Board

	JP2
Setting	2 and 3 shorted

★ 3.7 Low-Voltage Emulation Setting


When the target system is operating on low voltage, supply the same voltage as the target system to the TP1 terminal pin on the main board (G-780009 board) of the IE-78K0-NS or IE-78K0-NS-A (this is also necessary when target system is operating on 5 V).

Set the supply voltage of the target system to between 1.8 to 5.5 V.

Table 3-6. Supply Voltage and Maximum Current Consumption

Supply Voltage to TP1	Maximum Current Consumption of TP1
1.8 to 5.5 V	300 mA

Figure 3-16. Main Board (G-780009 Board) of IE-78K0-NS or IE-78K0-NS-A

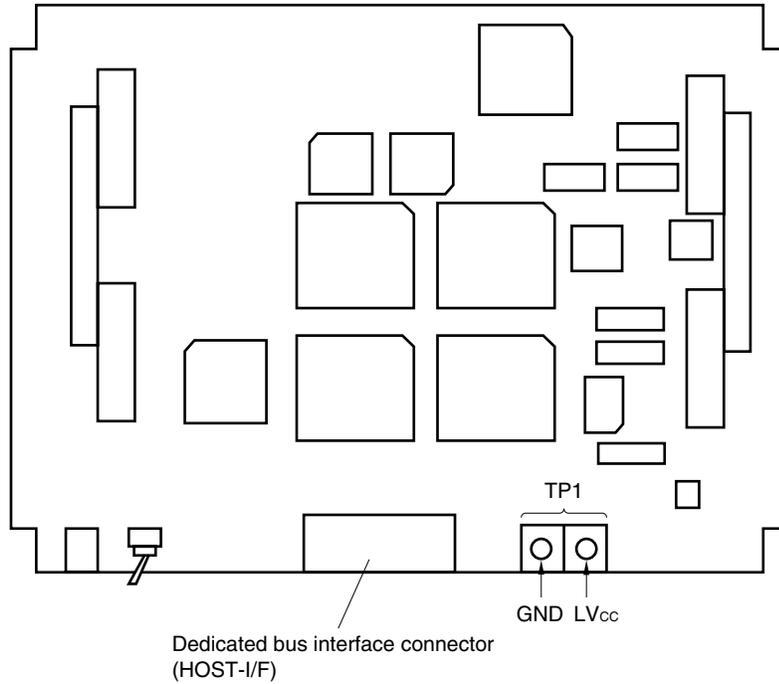

CHAPTER 4 DIFFERENCES BETWEEN TARGET DEVICES AND TARGET INTERFACE CIRCUITS

This chapter describes differences between the target device's signal lines and the signal lines of the IE-780078-NS-EM1's target interface circuit.

Although the target device is a CMOS circuit, the IE-780078-NS-EM1's target interface circuit consists of emulation circuits such as an emulation CPU, TTL, and CMOS-IC.

When the IE system is connected with the target system for debugging, the IE system performs emulation so as to operate as the actual target device would operate in the target system.

However, some minor differences exist since the operations are performed via the IE system's emulation.

- (1) Signals input or output from the emulation CPU and μ PD780009
- (2) Signals input or output from the emulation CPU and μ PD78F0078
- (3) Other signals

The IE-780078-NS-EM1's circuit is used as follows for signals listed in (1) to (3) above.

(1) Signals input or output from the emulation CPU and μ PD780009

See **Figure 4-1 Equivalent Circuit of Emulation Circuit (1)**.

- P47 to P40
- P57 to P50
- P67 to P64

(2) Signals input or output from the emulation CPU and μ PD78F0078

See **Figure 4-2 Equivalent Circuit of Emulation Circuit (2)**.

- P03 to P00
- P25 to P20
- P36 to P30
- P75 to P70
- P17 to P10
- AV_{REF} , AV_{SS}
- P80

(3) Other signals

See **Figure 4-3 Equivalent Circuit of Emulation Circuit (3)**.

- V_{DD0} , V_{DD1} , V_{SS0} , V_{SS1} , X1, X2, XT1, XT2, \overline{RESET} , IC

Figure 4-1. Equivalent Circuit of Emulation Circuit (1)

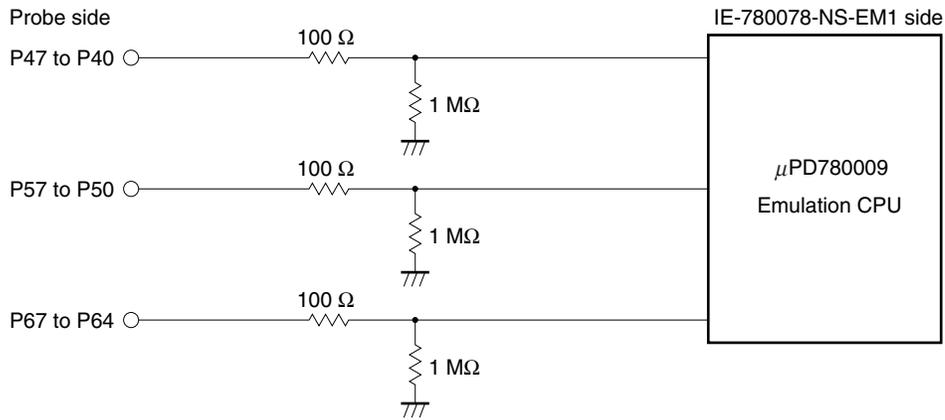


Figure 4-2. Equivalent Circuit of Emulation Circuit (2)


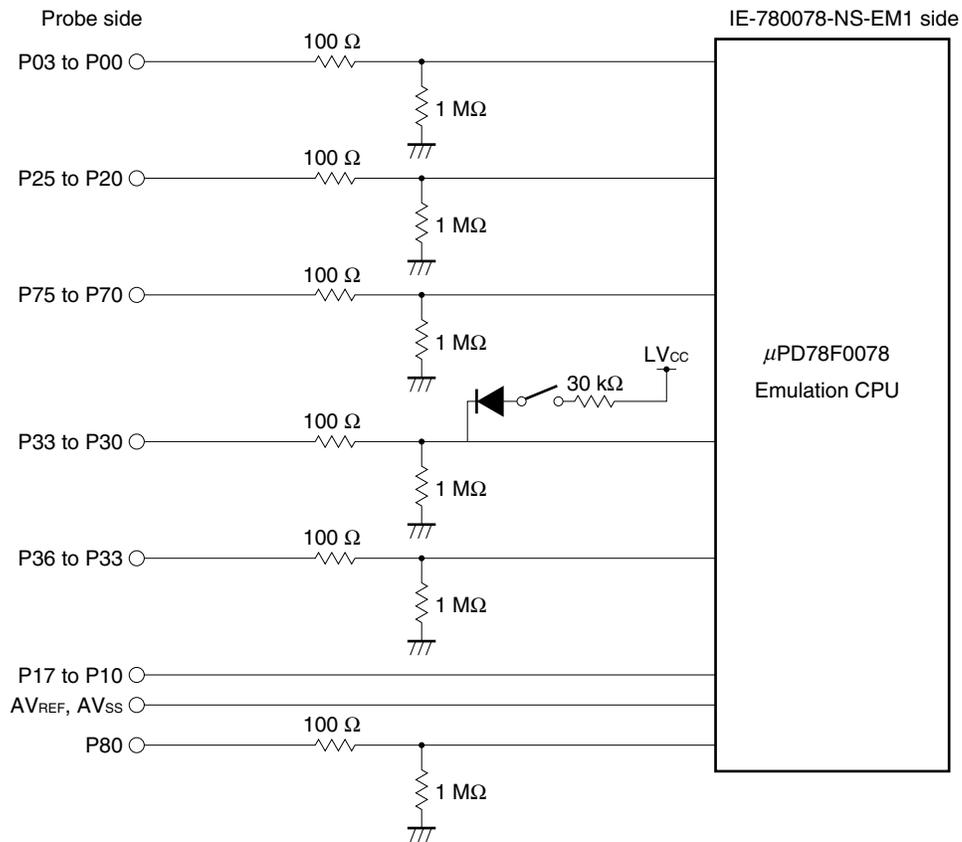


Figure 4-3. Equivalent Circuit of Emulation Circuit (3)

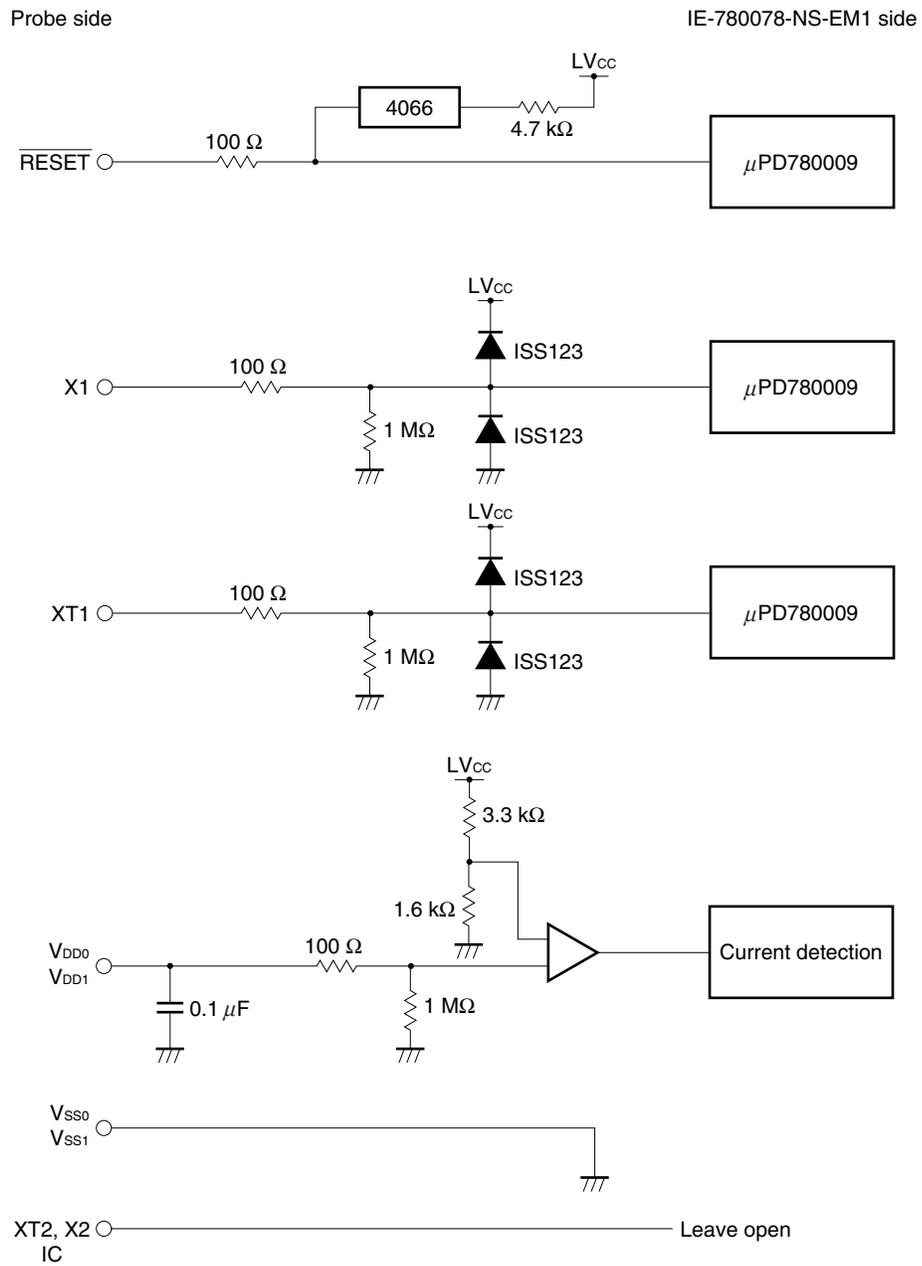

CHAPTER 5 CAUTIONS ON USE

Observe the following when using the IE-780078-NS-EM1.

- (1) In the external diffusion mode, the read data in address xx24H of the external memory becomes undefined.
Measures: Use IE-78K0-NS control code L or later, or IE-78K0-NS-A control code E or later. When using products with control codes earlier than the above, set the PM4 register to 00H (port 4 set to output mode).
- (2) The value of the interrupt request flag register IF1L (FFE2H) after reset is 04H.
Measures: After reset, set the IF1L register to 00H.

APPENDIX A EMULATION PROBE PIN ASSIGNMENT TABLE

Table A-1. NP-64GC, NP-64GC-TQ, NP-H64GC-TQ, NP-64GK, NP-64GK-TQ Pin Assignments

Emulation Probe	CN6 Pin No.	Emulation Probe	CN6 Pin No.
1	108	33	14
2	107	34	13
3	104	35	18
4	103	36	17
5	100	37	22
6	99	38	21
7	94	39	28
8	93	40	27
9	30	41	92
10	29	42	91
11	24	43	98
12	23	44	97
13	20	45	102
14	19	46	101
15	16	47	106
16	15	48	105
17	43	49	77
18	44	50	78
19	47	51	73
20	48	52	74
21	51	53	69
22	52	54	70
23	57	55	63
24	58	56	64
25	59	57	61
26	60	58	62
27	55	59	65
28	56	60	66
29	49	61	71
30	50	62	72
31	45	63	75
32	46	64	76

- Remarks**
1. The NP-64GC, NP-64GC-TQ, NP-H64GC-TQ, NP-64GK, and NP-H64GK-TQ are products of Naito Densai Machida Mfg. Co., Ltd.
 2. The numbers in the “Emulation Probe” column indicate the corresponding pin number on the emulation probe tip.

APPENDIX B NOTES ON DESIGNING TARGET SYSTEM


The following shows the conditions when connecting the emulation probe and conversion adapter. Consider the shape of the components to be mounted on the target system and follow the configurations below when designing the system.

Among the products described in this appendix, NP-64GC-TQ, NP-H64GC-TQ, NP-64GK, and NP-H64GK-TQ are products of Naito Densai Machida Mfg. Co., Ltd. and TGC-064SAP and TGK-064SBW are products of TOKYO ELETECH CORPORATION.

Table B-1. Distance Between IE System and Conversion Adapter

Emulation Probe	Conversion Adapter	Distance Between IE System and Conversion Adapter
NP-64GC-TQ	TGC-064SAP	170 mm
NP-H64GC-TQ		370 mm
NP-64GK	TGK-064SBW	170 mm
NP-H64GK-TQ		370 mm

Figure B-1. Distance Between In-Circuit Emulator and Conversion Adapter (64GC)

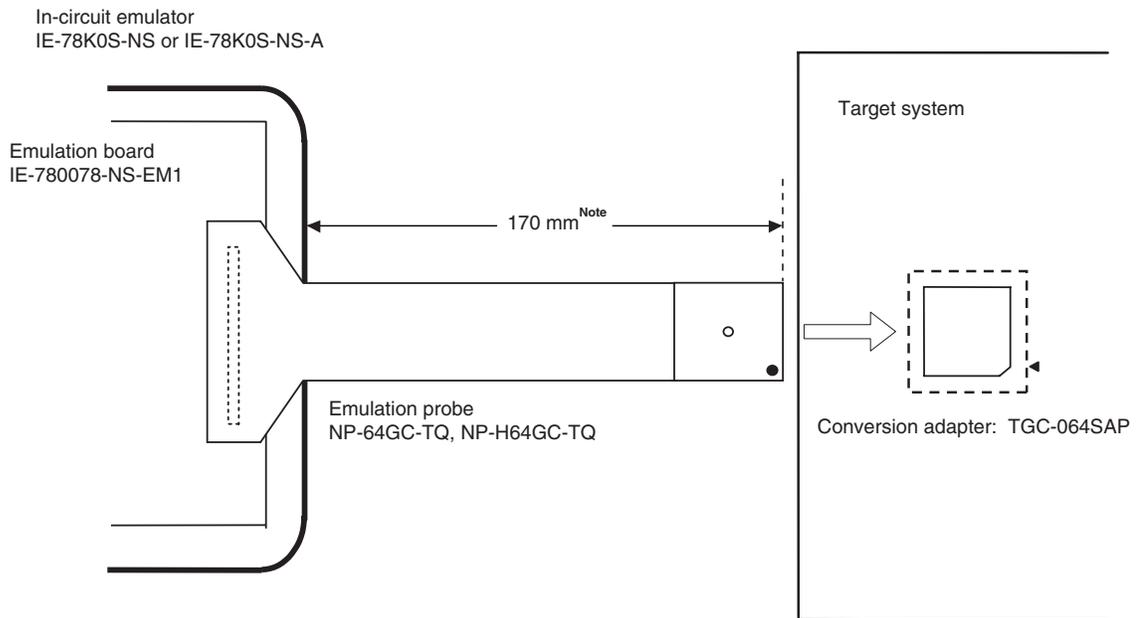

Note The above distance shows when the NP-64GC-TQ is used. When the NP-H64GC-TQ is used, the distance is 370 mm.

Figure B-2. Connection Conditions of Target System (NP-64GC-TQ)

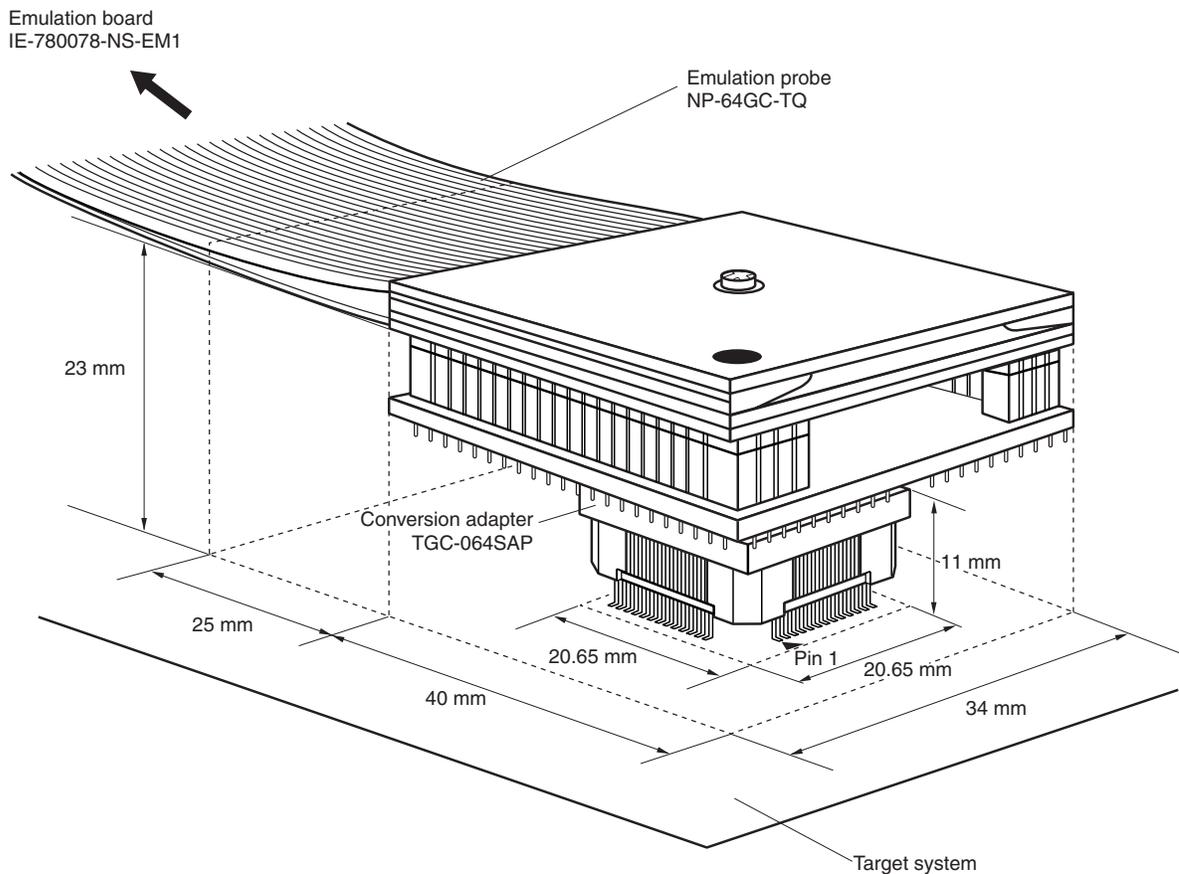


Figure B-3. Connection Conditions of Target System (NP-H64GC-TQ)


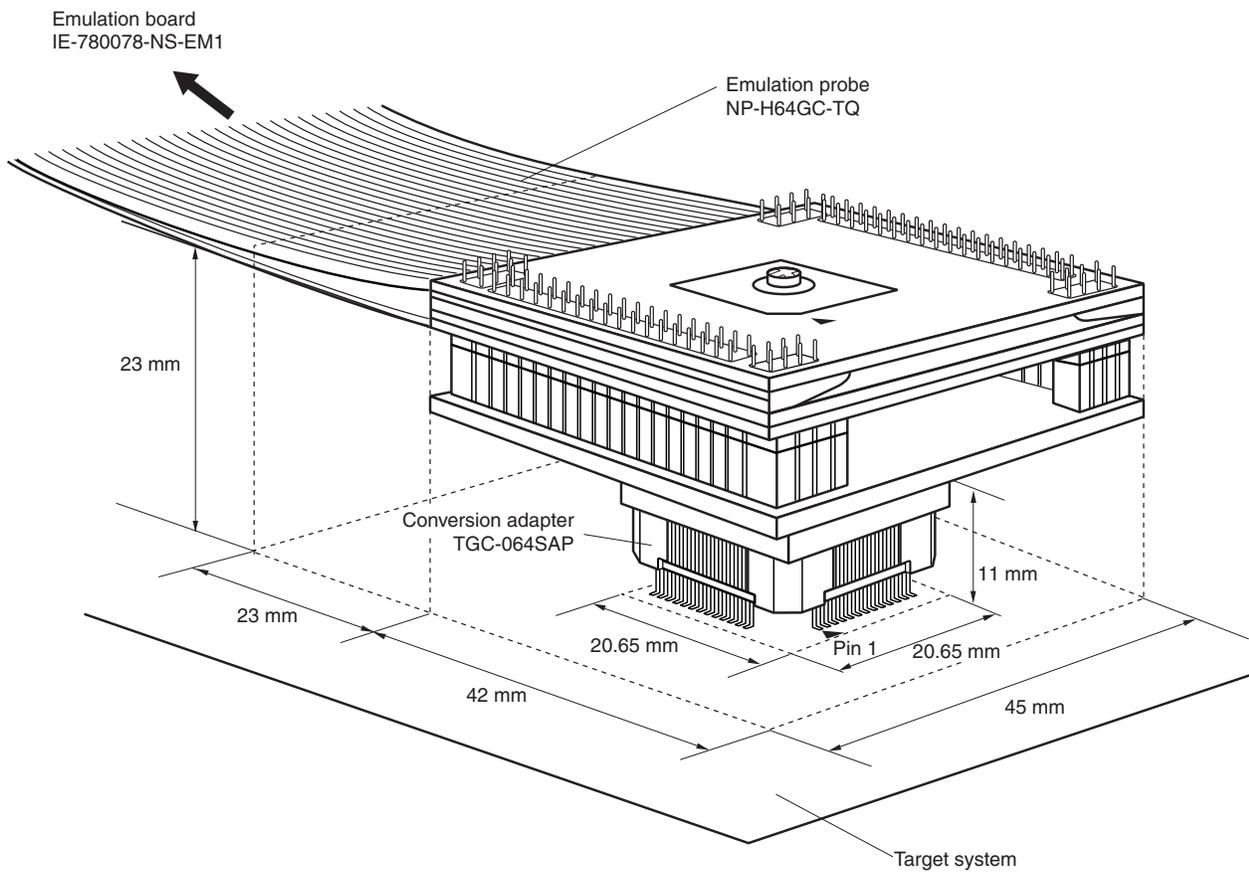


Figure B-4. Distance Between In-Circuit Emulator and Conversion Adapter (64GK)

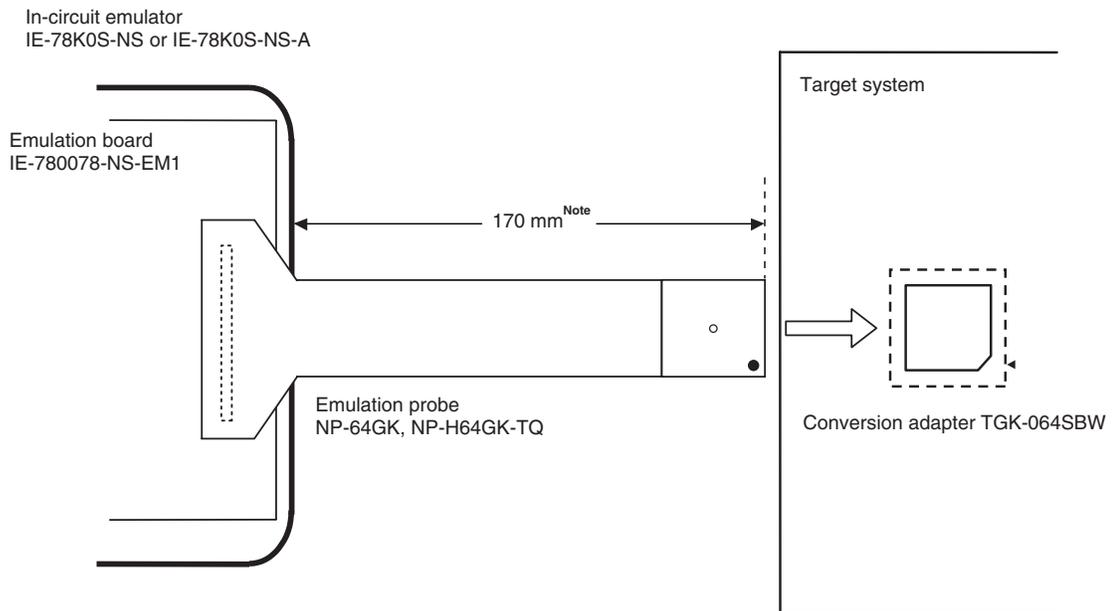

Note The above distance shows when the NP-64GK is used. When the NP-H64GC-TQ is used, the distance is 370 mm.

Figure B-5. Connection Conditions of Target System (NP-64GK)


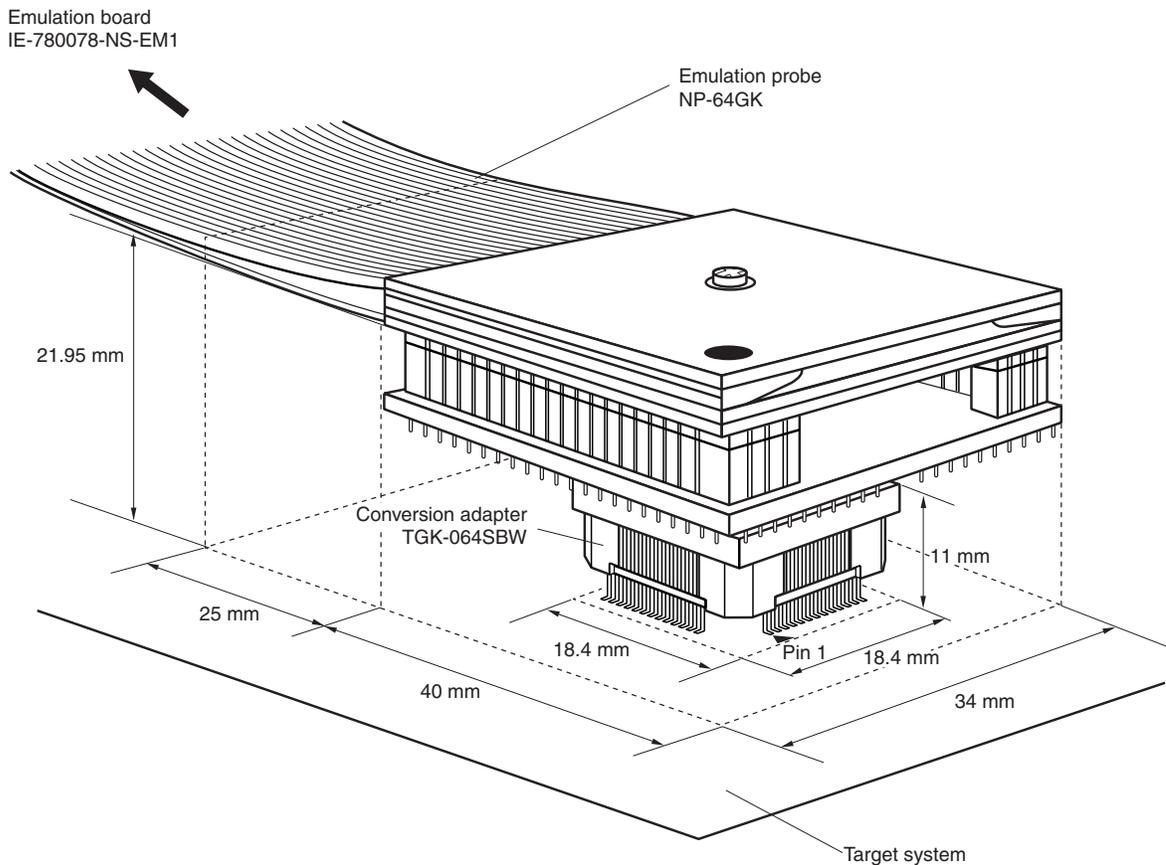


Figure B-6. Connection Conditions of Target System (NP-H64GK-TQ)

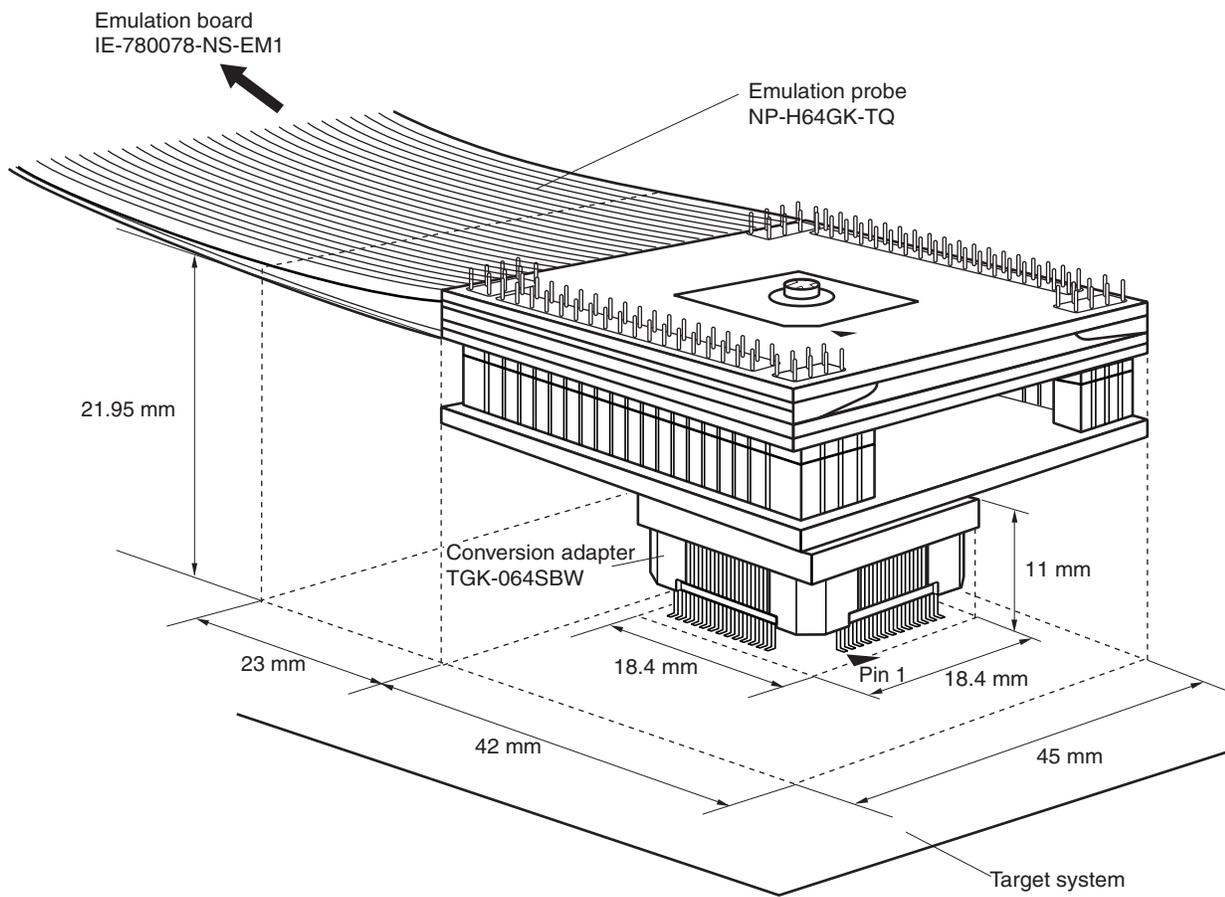

APPENDIX C REVISION HISTORY

The following table shows the revision history up to this edition. The “Applied to:” column indicates the chapters of each edition in which the revision was applied.

Edition	Major Revision from Previous Edition	Applied to:
2nd edition	Modification of dimensions of adapter in Figures B-2, B-3, B-5, and B-6	APPENDIX B NOTES ON DESIGNING TARGET SYSTEM
3rd edition	Modification of Figures 1-1 System Configuration	CHAPTER 1 GENERAL
	Modification of Figure 1-2 Basic Hardware Configuration	
	Deletion of Figure 1-3 Basic Hardware Configuration (Using IE-78K0-NS-A)	
	Modification of Table 1-2 Basic Specifications	
	3.2.2 Main system clock settings Addition of description on crystal oscillator	CHAPTER 3 INSTALLATION
	3.2.3 Subsystem clock settings Addition of description on crystal oscillator	
	Addition of 3.7 Low-Voltage Emulation Setting	