

## Contents

1. Introduction.....	2
1.1 System Requirements .....	2
2. Getting Started .....	2
3. Input Parameters .....	3
4. Examples of Usage .....	5
4.1 Usage as a Standalone VI.....	5
4.2 Usage as a SubVI.....	7
5. Error Codes .....	7
6. Revision History.....	8

## List of Figures

Figure 1. Example Content of Spatial Angle and Analog Output Values in CSV Files .....	2
Figure 2. VI Front Panel.....	3
Figure 3. Example of Usage as a Standalone VI.....	5
Figure 4. Example of Writing Coefficients into the “MEMORY EDIT” Tab .....	6
Figure 5. ZMID520x_dll_64.vi Connector Pane.....	7

## List of Tables

Table 1. User Entries.....	4
Table 2. Possible Error Codes in the “Result Code” Display Field .....	7

## 1. Introduction

This document describes how to setup and use the Calibration Dynamic Link Library (DLL) in combination with a virtual instrument (VI) in National Instruments™ LabVIEW to perform calibration and linearization on the ZMID520x Inductive Position Sensor IC. After the VI has been run, it will produce the new coefficients to write into the memory of the ZMID520x.


### 1.1 System Requirements

- Microsoft Windows® 7 SP1 x64, Microsoft Windows® 8 x64, Microsoft Windows® 10 x64
- National Instruments™ LabVIEW 2016 x64 or higher

## 2. Getting Started

1. Navigate to the web page for the applicable product:
  - ZMID5201: [www.IDT.com/zmid5201](http://www.IDT.com/zmid5201)
  - ZMID5202: [www.IDT.com/zmid5202](http://www.IDT.com/zmid5202)
  - ZMID5203: [www.IDT.com/zmid5203](http://www.IDT.com/zmid5203)
2. Under “Software and Tools,” download the zip files for the DLL and the VI graphical programming language file. Extract the contents of the folder after downloading has completed.
3. A CSV file containing spatial angle points, analog output points, Pulse Width Modulation (PWM) output points, or Single Edge Nibble Transmission (SENT) output points is required as an input to run the VI. Figure 1 shows a list of example values demonstrating the format that must be used. If the values have decimal points, a period must be used as the decimal separator (not a comma).

**Figure 1. Example Content of Spatial Angle and Analog Output Values in CSV Files**

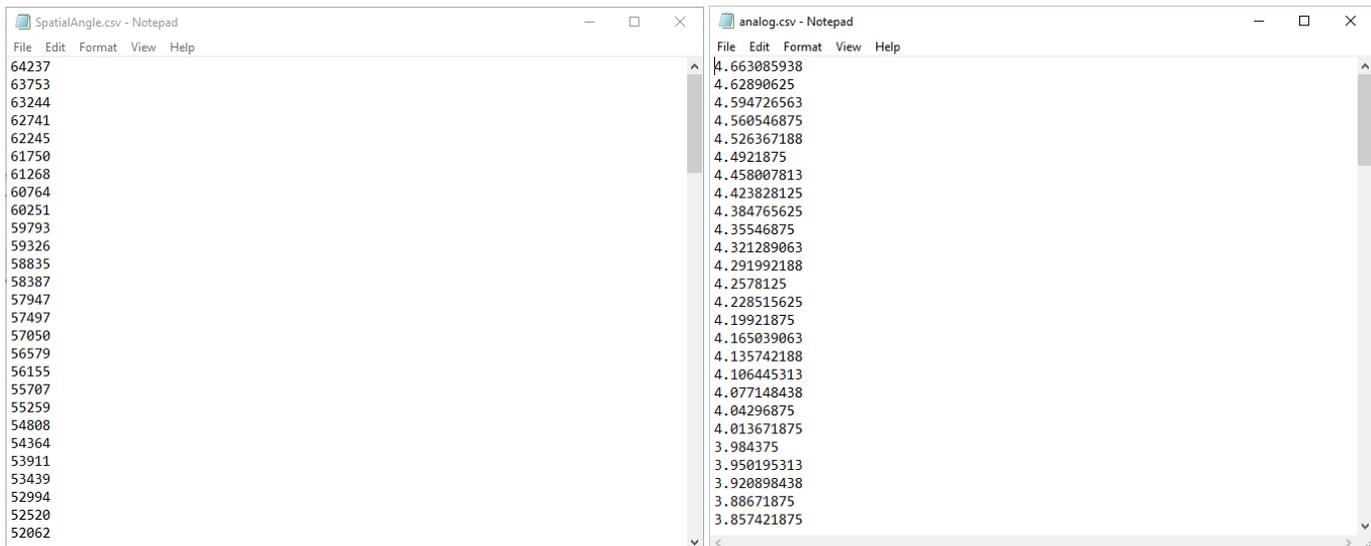

### 3. Input Parameters

Open "ZMID520x\_dll\_64.vi" (Figure 2). Table 1 shows the eleven input parameters. After all input fields are filled in, run the VI. The calculated coefficients will be available, if the "Result Code" is equal to "0", otherwise there is an error and the coefficients are not valid.

**Figure 2. VI Front Panel**

The screenshot shows the front panel of the ZMID520x DLL Path VI. It is divided into several sections:

- Top Section:** Contains two file path input fields: "ZMID520x DLL Path" and "CSV Path", each with a folder selection icon. To the right is a "DLL Version" input field with the value "0".
- Input Parameters Section:**
  - ZMID Type:** A dropdown menu set to "ZMID5201".
  - Output Data Type:** A dropdown menu set to "Spatial Angle".
  - Position Slope:** A dropdown menu set to "Negative".
  - Reverse Slope:** A dropdown menu set to "No".
  - Out Min:** A numeric input field with the value "5".
  - Out Max:** A numeric input field with the value "95".
  - Out Min/Max in Percent:** A slider control currently positioned at approximately 25%.
  - Out Mode:** A dropdown menu set to "Linear".
  - VDD:** A numeric input field with the value "5".
- Output Parameters Section:**
  - Offset:** A numeric input field with the value "0".
  - Offset Register (Hex):** A numeric input field with the value "0".
  - Slope:** A numeric input field with the value "0".
  - Slope Register (Hex):** A numeric input field with the value "0".
  - Correction:** A vertical stack of eight numeric input fields, all containing "0".
  - Correction Register (Hex):** A vertical stack of eight numeric input fields, all containing "0".
  - Clamp Low:** A numeric input field with the value "0".
  - Clamp High:** A numeric input field with the value "0".
  - Clamp Register (Hex):** A numeric input field with the value "0".
- Bottom Section:**
  - error in (no error):** A sub-panel with "status" (green checkmark), "code" (0), and "source" (empty dropdown).
  - error out:** A sub-panel with "status" (green checkmark), "code" (0), and "source" (empty dropdown).
  - Result Code:** A numeric input field with the value "0".
  - Result Message:** An empty text input field.

**Table 1. User Entries**

Input Parameter	Description
ZMID520x DLL Path	Full path of the location of the DLL
CSV Path	Full path of the location of the CSV
ZMID Type	1 = ZMID5201 (analog output), 2 = ZMID5202 (PWM), 3 = ZMID5203 (SENT)
Output Data Type	The type of the data contained in the CSV file: 0 = Spatial Angle, 1 = Analog, 2 = PWM, 3 = SENT
Position Slope	The slope of the list of points: 0 = positive, 1 = negative
Reverse Slope	This option can reverse the slope: 0 = keep the slope as is, 1 = invert the slope
Out Min	Lower clamping value: 5 = no clamping <sup>[a]</sup>
Out Max	Higher clamping value: 95 = no clamping <sup>[a]</sup>
Out Min/Max in Percent	Choose whether “Out Min” and “Out Max” are going to be filled in as percent of the output or as raw values by clicking this toggle button.
Out Mode	Output mode of the chip: 0 = Linear output mode, 1 = Modulo360 output mode
VDD	The power supply of the ZMID520x <sup>[b]</sup>

[a] ZMID5203 does not have clamping for the values.

[b] The power supply of the ZMID520x is needed only if using analog points as the “Output Data Type.”

Write the generated coefficients into the respective registers in the chip. One way to do this is with the ZMID520x EVK Application Software which is a graphical user interface (GUI) found on the ZMID520x product web page (see section 2).

## 4. Examples of Usage

### 4.1 Usage as a Standalone VI

The following lines are an example of how to fill in the parameters using a ZMID5201 (analog output) and spatial angle points. In this example, the output mode is set to linear, the slope is negative and not inverted, and clamping is set to 5% to 95%. For the ZMID5201, refer to the *ZMID5201 Manual for Calibration and Linearization Using the Analog Output* for more details regarding the parameter definitions.

**Figure 3. Example of Usage as a Standalone VI**

ZMID520x DLL Path: C:\ZMID520X\_OneStepCalibration\_64.dll  
 DLL Version: 1.3  
 CSV Path: C:\SpatialAngle.csv

#### Input Parameters

ZMID Type: ZMID5201  
 Output Data Type: Spatial Angle  
 Position Slope: Negative  
 Reverse Slope: No  
 Out Min: 5  
 Out Max: 95  
 Out Min/Max in Percent:   
 Out Mode: Linear  
 VDD: 5

#### Output Parameters

Offset: 33.8928  
 Offset Register (Hex): 233F  
 Slope: 1.12861  
 Slope Register (Hex): 483  

Correction	Correction Register (Hex)
1	1
-5	85
-2	82
-1	81
5	5
5	5
4	4
-1	81
0	0

Clamp Low: 5  
 Clamp High: 95  
 Clamp Register (Hex): 0

error in (no error): status  code 0 source

error out: status  code 0 source

Result Code: 0  
 Result Message: SUCCESS

After the coefficients are calculated, they appear on “Output Parameters” section. The fields must be written to the ZMID5201 memory at the following addresses for these example values.

Address 0x00: 233F (“Offset Register” field)

Address 0x01: 0483 (“Slope Register” field)

Address 0x02: 0000 (“Clamp Register” field)

Address 0x03: 8501 (first two “Correction Register” fields)

Address 0x04: 8182 (next two “Correction Register” fields)

Address 0x05: 0505 (next two “Correction Register” fields)

Address 0x06: 8104 (next two “Correction Register” fields)

Address 0x07: 0000 (last “Correction Register” field as lower byte with upper byte filled with 00<sub>HEX</sub>)

In the GUI, the new coefficients can be written into the ZMID5201 EEPROM by entering them in the “MEMORY EDIT” tab and then clicking “Write EEPROM” button.

**Figure 4. Example of Writing Coefficients into the “MEMORY EDIT” Tab**

The screenshot shows the ZMID5201 application interface. The 'MEMORY EDIT' tab is active, displaying two tables of registers. The top table is for EEPROM and the bottom table is for SWR. Values in red in the EEPROM table indicate they are not yet written to memory.

EEPROM	0	1	2	3	4	5	6	7
0h	233F	0483	0000	8501	8182	0505	8104	0000
8h	1000	1100	0802	B103	0838	0055	BFFF	0000
10h	0000	00C2						

SWR	0	1	2	3	4	5	6	7
0h	17A6	0400	0000	0000	0000	0000	0000	0000
8h	1000	1100	0802	B103	0838	0055	BFFF	
10h		00C2		0380	0E7B	0B1A	4AB7	1E11
18h	A55B	46C3	46C3	0001				


Register values in red are different than actual values in chip memory. You need to write them to chip memory in order to take effect.

## 4.2 Usage as a SubVI

The VI can be used as sub-block in other VIs. The connector pane is shown in Figure 5. If an error occurs, as displayed in the “error in” input section, the code of the VI is not executed and the error is transported to the “error out” output.

Note: The clamping parameters do not apply to the ZMID5203.

**Figure 5. ZMID520x\_dll\_64.vi Connector Pane**

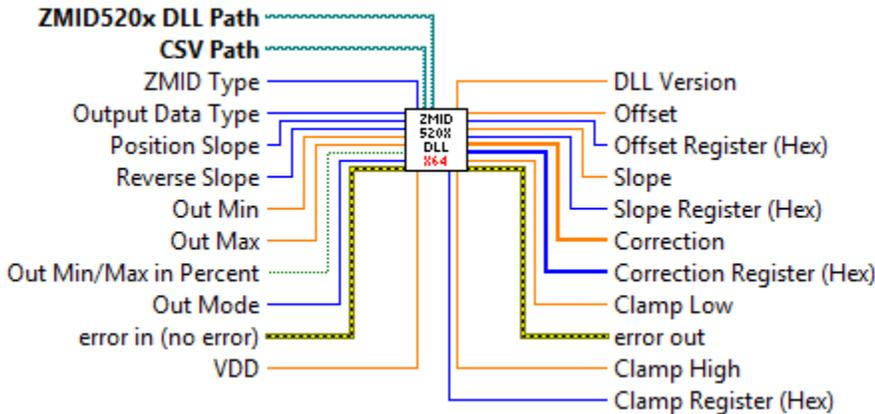

## 5. Error Codes

If the run is successful, “0” will be displayed in the “Result Code” field and “SUCCESS” will appear in the “Result Message” field. If instead there has been an error, a negative error code will be displayed in “Result Code” and the corresponding error name will be displayed in “Result Message” field. Table 2 defines the DLL error codes and names.

**Table 2. Possible Error Codes in the “Result Code” Display Field**

Error Code	Error Name	Description
Error code -1	ERR_INVALID_INPUT	One or more of the inputs are invalid.
Error code -2	ERR_SLOPE	The calculated slope is out of range.
Error code -3	ERR_OFFSET	The calculated offset is out of range.
Error code -4	ERR_CORR	One or more of the calculated correction values are out of range.
Error code -5	ERR_POS0	One or more of the calculated Pos0 values are out of range.
Error code -6	ERR_POS1	One or more of the calculated Pos1 values are out of range.

## 6. Revision History

Revision Date	Description of Change
July 23, 2018	Initial release

## IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01)

### Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

### Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

### Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit [www.renesas.com/contact-us/](http://www.renesas.com/contact-us/).