

## Introduction

There is an industry-wide trend towards using the smallest package possible for a given pin count. This is driven primarily by the handheld products market where the trend towards thinner, lighter, and low electrical parasitic packages is extremely important. The Wafer Level Chip Scale Package (WLCSP) offers the smallest footprint per pin count at a given pitch. Intersil's WLCSP allows direct connections between silicon IC and printed circuit board (PCB) through solder balls by directly connecting solder balls on the silicon die to corresponding metal pads on the PCB. [Figure 1](#) displays a picture of an Intersil WLCSP part.

Some salient features and advantages of Intersil's WLCSP are as follows:

- Saves board real-estate by providing smallest footprint per I/O
- Ball pitch of 0.5mm or 0.4mm allows assembly with standard SMT equipment
- No underfill is required ([See "Frequently Asked Questions" on page 5.](#))
- Completely lead-free and RoHS compliant
- MSL1 moisture sensitivity at +260 °C per JEDEC J-STD-020
- Better electrical parasitics due to elimination of wires and leads
- Shipped in tape and reel per EIA 481-1



FIGURE 1. INTERSIL WLCSP

The purpose of this technical brief is to outline the basic guidelines to use the Intersil WLCSP package to ensure consistent PCB assembly necessary to achieve high yield and reliability.

[Figure 2](#) shows a cross section of Intersil's WLCSP. [Figure 3](#) shows Intersil WLCSP mounted on PCB.

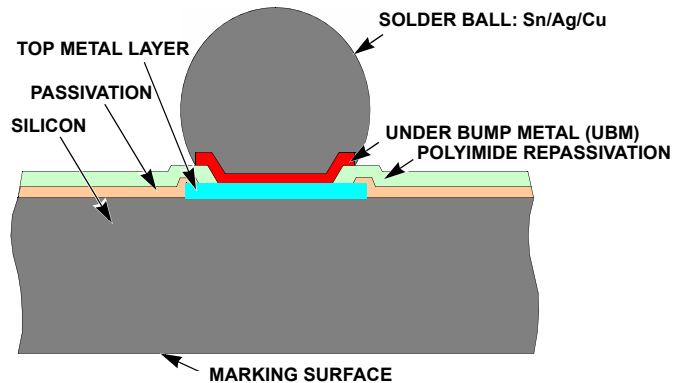


FIGURE 2. CROSS SECTION OF INTERSIL'S WLCSP (BALL ON PAD VERSION)

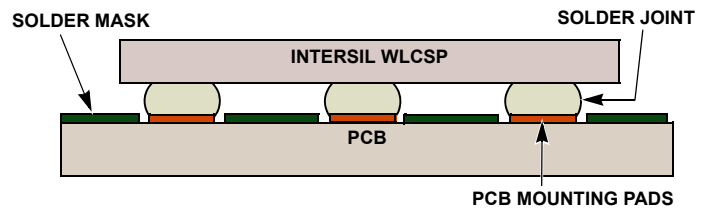


FIGURE 3. INTERSIL'S WLCSP MOUNTED ON PCB

## Intersil's WLCSP Package Data

[Table 1](#) lists Intersil's WLCSP bump count options.

TABLE 1. PACKAGE OFFERINGS

BUMP COUNT	ARRAY TYPE
4	2x2
6	2x3
8	3x3
9	3x3
10	3x4
16	4x4
20	4x5
25	5x5
30	5x6
36	6x6
42	6x7
49	7x7
56	7x8
64	8x8
72	8x9

TABLE 1. PACKAGE OFFERINGS (Continued)

BUMP COUNT	ARRAY TYPE
81	9x9
90	9x10
100	10x10
110	10x11
121	11x11

### Key Considerations for WLCSP Application on PCB

- PCB mounting pads need to be controlled in terms of shapes and sizes, since they control the final dimensions of the solder joint between board and package.
- Solder paste deposit used to attach the Intersil WLCSP devices to the board which subsequently becomes part of the solder joint, must be defined and controlled.
- Solder reflow process that forms the final solder joint should comply with standard JEDEC reflow profiles and solder paste manufacturing recommendations.
- Small size of the devices and solder balls require automatic pick-and-place equipment and handling.
- Subsequent paragraphs provide more details on these items.
- WLCSP products (like other surface mount products) should not be subjected to wave solder on the PCB side that has the part mounted to it.

## Printed Circuit Board (PCB) Design Parameters

### Key Considerations

- [Table 2](#) lists recommended PCB mounting pad and solder paste printing stencil parameters.
- Non-Solder Mask Defined (NSMD) or Metal Pad Defined pad construction is preferred over Solder Mask Defined (SMD) construction.
- Symmetric placement of exit traces recommended (in case of NSMD) to avoid component rotation during reflow due to surface tension of molten solder.
- Via-in-pad structures may be used for higher bump count devices when escape routing is not adequate between pads.
- For dog-bone type via connections, vias connected to the PCB mounting pads using traces should have a minimum length of 10 mils (0.254mm) for the connecting trace and should not exceed 2/3 of the pad diameter for the via diameter. (See [Figure 4.](#))

TABLE 2. PCB MOUNTING PAD AND STENCIL PARAMETERS

DESCRIPTION	0.4mm AND 0.5mm PITCH
Mounting Pad Shape	Round
Mounting Pad Material	Copper
Pad Finish	OSP or Ni-Au (Au <0.5micron to avoid solder joint embrittlement)
Nominal PCB Pad Diameter	280µm for 0.5mm pitch and 240µm for 0.4mm pitch (+0/-25µm)
Pad thickness	<1 oz. (30µm)
Clearance between Mounting Pad and Solder Mask (in NSMD)	1 mil optimum ( <a href="#">Figure 6</a> ) (25µm)
Stencil Fabrication	Laser cut stainless steel followed by electropolish; chemical etch method not recommended
Stencil Thickness	0.100mm to 0.125mm
Stencil Apertures	5° tapered, trapezoidal square 0.25mmx0.25mm (±0.025mm)

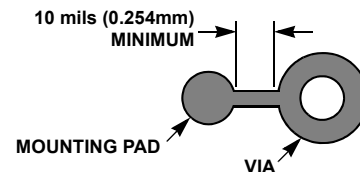


FIGURE 4. MOUNTING PAD TO VIA

Intersil WLCSP mounting pads that are directly connected to a ground plane or power plane are to be connected with a maximum of two traces of 10 mils (0.254mm) minimum length. The two traces should be at least 90° apart. (See [Figure 5.](#))

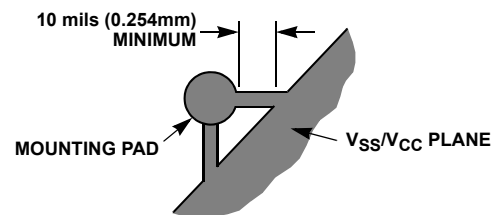


FIGURE 5. MOUNTING PAD TO V<sub>SS</sub>/V<sub>CC</sub> PLANE

### PCB Solder Mask Opening

The PCB solder mask opening shall be larger than the PCB mounting pad (NSMD) by 1 mil (0.0254mm) per side as shown in [Figure 6.](#)

OPTIMUM 1 mil (0.025mm) CLEARANCE BETWEEN  
MOUNTING PAD AND SOLDER MASK

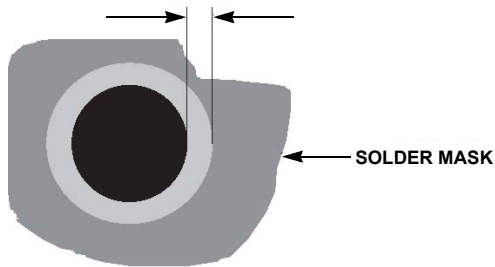


FIGURE 6. SOLDER MASK TO MOUNTING PAD CLEARANCE FOR NSMD PAD

### Artwork Critical Dimension Check

During the data conversion from design software to PCB fabrication artwork the critical dimensions may be changed by rounding-off errors in the software. The critical dimensions need to be verified on the artwork before PCB manufacturing.

1. Mounting pad to mounting pad pitch
2. Mounting pad diameter
3. Solder mask opening
4. Alignment of solder mask opening with mounting pad

## Intersil WLCSP Mounting Guideline

### Typical Assembly Procedures

The assembly procedure for Intersil WLCSP packages is compatible with industry standard surface mount procedures, as exemplified in IPC-CM-770 and IPC-A-610 class 2 standards. Modern practice usually includes a controlled environment with a temperature of  $+22^{\circ}\text{C} \pm 3^{\circ}\text{C}$  and a relative humidity of 50%  $\pm 10\%$ . ESD protection should be used in all process steps.

## Typical Assembly Flow for Surface Mount of Intersil WLCSP

Figure 7 outlines important considerations for using Intersil WLCSP packages within the typical process flow.

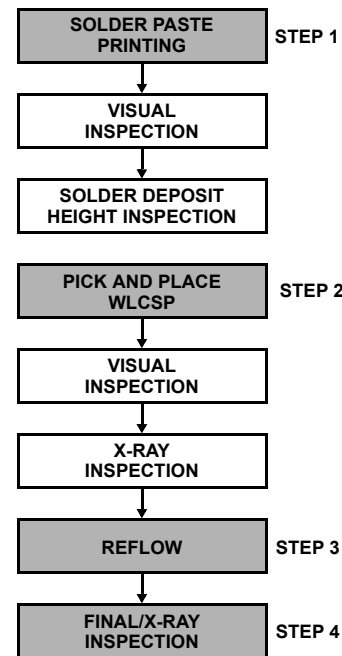


FIGURE 7. ASSEMBLY PROCESS FLOW

### Step 1: Stencil for Solder Paste Printing

Solder paste printing is performed using a stencil using a standard stencil printer. The squeegee speed and pressure should be adjusted per solder paste manufacturer's recommendation. The PCB should be supported during the printing process to prevent bending of the PCB.

Use of type 3 (25 micron to 45 micron particle size range) or finer solder paste is recommended.

The solder paste height should be measured as needed to confirm stencil thickness and tolerance of  $\pm 0.5$  mil ( $\pm 0.012\text{mm}$ ) per Figures 8A and 8B.

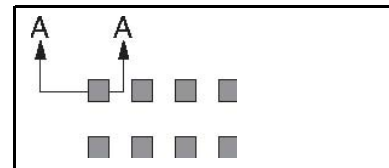


FIGURE 8A. SOLDER PASTER PATTERN - TOP VIEW

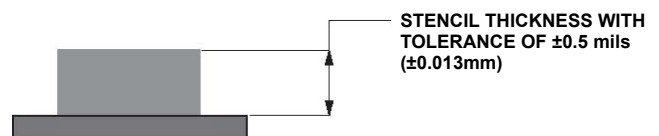


FIGURE 8B. CROSS-SECTION (AA FROM Figure 8A) OF SOLDER PASTE DEPOSIT

The PCB should be transferred to the pick-and-place machine within the time limit specified by the solder paste manufacturer after solder paste printing.

### Step 2: Pick-and-Place

- Place the Intersil WLCSP on PCB according to the parts list and the assembly drawing using a pick and place machine with optical alignment.
- Verify Intersil WLCSP alignment using package orientation pin 1 marker.
- It is not recommended to use chipshooters without adequate adjustments to minimize vibrations and placer errors.
- Ensure minimal force is used for pick-and-place of the Intersil WLCSP to avoid physical damage. Z-height control method is preferred over force control.
- Maximum Z axis force on the WLCSP should be 10N.
- It is recommended that bumps be dipped into solder paste on PCB to greater than 20% of paste block height.
- Side view of Intersil WLCSP placement on PCB is shown in [Figure 9](#).

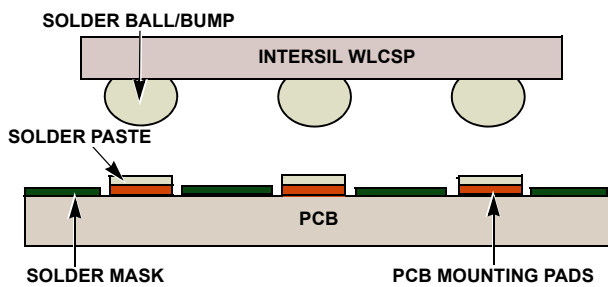


FIGURE 9. INTERSIL WLCSP PLACEMENT ON MOUNTING PAD WITH SOLDER PASTE - SIDE VIEW

### Step 3: Reflow and Cleaning

Intersil WLCSP's are compatible with industry standard reflow and cleaning processes and are qualified per J-STD-020. Actual board assembly profiles should be developed based on specific process needs and board designs and should not exceed the parameters provided in the aforementioned standard.

### Step 4: Final/X-Ray Inspection

Verify assembly quality using available inspection techniques such as transmission X-ray inspection. The side view of the final configuration is shown in [Figure 10](#). There should be no shorts, no solder bridging between solder bumps and no loose solder balls under or around the WLCSP device.

NOTE: Intersil WLCSP parts do not require underfill, and are qualified without the use of it. Use of underfill in application, if desired by the end-user, should involve careful selection of the material so as to avoid problems caused by a mismatched material choice.

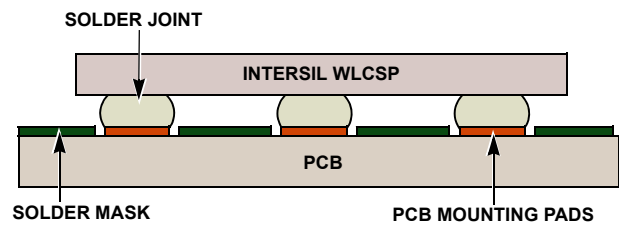


FIGURE 10. INTERSIL WLCSP MOUNTED TO A PCB BOARD

### Board-Level Reliability Data

Intersil WLCSP tests and passing criteria are shown in [Table 3](#).

TABLE 3. BOARD LEVEL RELIABILITY DATA FOR INTERSIL'S WLCSP

RELIABILITY TEST	RESULT
HAST	Passed +130 °C/85% RH for 96 hrs
TC	Passed 500 cycles of -40 °C to +125 °C
THB	Passed +85 °C/85% RH for 1000 hrs
HTOL	Passed 1000 hrs at +125 °C
HTS	Passed 1000 hrs at +150 °C

## Thermal Characteristics

Intersil WLCSP thermal impedance data is listed in [Table 4](#).

**TABLE 4. THERMAL IMPEDANCE DATA IN NATURAL CONVECTION  
(STILL AIR) PER JESD 51-7 AND JESD 51-9**

BUMP COUNT	DIE SIZE X (mm)	DIE SIZE Y (mm)	PITCH (mm)	JEDEC PCB TYPE	T <sub>JA</sub> (°C/W)	Ψ <sub>I-JB</sub> (°C/W)
8	3	3	0.5	2S2P + vias	74.2	33.4
16	1.65	1.65	0.4	2S2P + vias	59.6	-
36	5	5	0.5	2S2P + vias	39.9	15.2

## Rework

Rework procedures are identical to BGA.

Rework profile should duplicate original reflow profile used in assembly.

Rework system should include localized convection heating, bottom side heating and a pick-and-place device. System should also provide thermal profile capability.

## Frequently Asked Questions

**Question:** Does WLCSP package require use of underfill upon board mount?

**Answer:** No. Intersil WLCSP packages are qualified to be used without any underfill. However, customers may use it based on their preference while taking precaution to ensure properties of the underfill, for example T<sub>g</sub> and CTE, do not negatively impact reliability of the WLCSP.

**Question:** Will the WLCSP package get damaged during board mount?

**Answer:** WLCSP is basically silicon die with solder bumps which can be damaged if mishandled or subjected to excessive mechanical force. Board mounting performed per Intersil's SMT guideline will ensure such issues do not occur. Manually removing and reattaching a WLCSP will pose very high risk of damaging the package

**Question:** Is there a marking or traceability information on the WLCSP package?

**Answer:** Yes. The unbumped side of the package is laser marked with pin 1 identification, product code and manufacturing batch traceability information.

**Question:** Does the WLCSP package have backside coating?

**Answer:** Backside coating is offered selectively for certain products or package size. Contact [intersil.com/support](http://intersil.com/support) for more details.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.  
Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.  
(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.  
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



### SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

**Renesas Electronics America Inc.**  
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.  
Tel: +1-408-432-8888, Fax: +1-408-434-5351

**Renesas Electronics Canada Limited**  
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

**Renesas Electronics Europe Limited**  
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.  
Tel: +44-1628-651-700, Fax: +44-1628-651-804

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852-2886-9022

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

**Renesas Electronics India Pvt. Ltd.**  
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

**Renesas Electronics Korea Co., Ltd.**  
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5338