Quick Start Guide

RA6T3 Group

MCK-RA6T3 Quick Start Guide

Renesas RA Family
RA6 Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (http://www.renesas.com).

Renesas Electronics
www.renesas.com

Rev.1.10 March 1, 2026

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)
   A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.
2. Processing at power-on
   The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.
3. Input of signal during power-off state
   Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.
4. Handling of unused pins
   Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.
5. Clock signals
   After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.
6. Voltage application waveform at input pin
   Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).
7. Prohibition of access to reserved addresses
   Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.
8. Differences between products
   Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: “Standard” and “High Quality”. The intended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below.
   "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
   "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

   Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, Evaluation Kit Manual or Evaluation Board Manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION (“Vulnerability Issues”). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, Evaluation Kit Manuals, Evaluation Board Manuals, application notes, “General Notes for Handling and Using Semiconductor Devices” in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.

© 2026 Renesas Electronics Corporation. All rights reserved.

For Your Safety
Be sure to read the precautions and instructions in this manual before using this product.

Meaning of Notations

In this manual, items related to the safe use of the product are indicated as described below.
The degree of injury to persons or damage to property that could result if the designated content in this manual is not followed is indicated as follows.

⚠ Danger	Indicates content that, if not followed, could result in death or serious injury to the user, and which is highly urgent.
⚠ Warning	Indicates content that, if not followed, could result in death or serious injury to the user.
⚠ Caution	Indicates content that, if not followed, could result in injury to persons or physical damage.

Warnings Regarding Use of the Product

■ Danger Items

⚠ Danger	
  	• The product should be used only by persons (users) having a thorough knowledge of electrical and mechanical components and systems, a full knowledge of the risks associated with handling them, and training in inverter motor control and handling motors, or equivalent skills. Users should be limited to persons who have carefully read the Caution Items contained in this manual. • The product contains high-temperature components that could be dangerous. Do not touch the product or cables while power is being supplied. • Carefully check to make sure that there are no pieces of conductive materials or dust adhering to the board, connectors, and cables. • Do not touch the motor while power is being supplied. • Ensure that the motor is insulated and placed in a stable location before supplying power.

■ Warning Items

Warning	
	Always insert plugs, connectors, and cables securely, and confirm that they are fully inserted. Incomplete connections could cause fire, burns, electric shock, or injury.
	Use the power supply apparatus specified in the manual. Failure to do so could cause fire, burns, electric shock, injury, or malfunction.
	Disconnect the power supply and unplug all cables when the system will not be used for a period of time or when moving the system. Failure to do so could cause fire, burns, electric shock, or malfunction. This will protect the system against damage due to lightning.
	Use a mechanism (switch, outlet, etc.) located within reach to turn off (disconnect) the power supply. In case of emergency, it may be necessary to cut off the power supply quickly.
	In this product, the ground of the main power supply circuit is connected to the ground of the CPU board. When the user evaluates the product, be aware that the product and the measuring instruments may be damaged depending on the connection method of the measuring instruments.
	Turn off the power supply immediately if you notice abnormal odor, smoke, abnormal sound, or overheating. Continuing to use the system in an abnormal condition could cause fire, burns, or electric shock.
	Do Not Disassemble, Modify, or Repair! Doing so could cause fire, burns, electric shock, injury, or malfunction.
	Do not use the product for any purpose other than initial evaluation of motor control in a testing room or lab. Do not integrate the product or any part of it into other equipment. Do not insert or remove cables or connectors when the product is powered on. The product has no safety case. The user must cover the product for safety protection. Failure to observe the above could cause fire, electric shock, burns, or malfunction. The product may not perform as expected if used for other than its intended purpose.

■ Caution Items

Caution	
	Caution – Hot! The motor gets hot. Touching it could cause high-temperature burns.
	Follow the procedure specified in the manual when powering the system on or off. Failure to do so could cause overheating or malfunction.
	Caution – Static Electricity Use the antistatic band. Failure to do so could cause malfunction or unstable motion.

Renesas RA Family

MCK-RA6T3 Quick Start Guide

Contents

1. Introduction 5
1.1 Presupposition and precautions of this document 3
2. Product Contents 4
3. Software/tools prerequisites 4
4. Bring-up Decision Flow 5
5. Initial Operation Check Firmware Overview 6
5.1 Initial operation check firmware flow 6
6. Execute the Initial Operation Check Firmware 7
6.1 Connect the board and supply power 7
6.1.1 Jumper pin setting 7
6.1.2 Connect the motor and the board 10
6.1.3 Supply Power 11
6.2 Execute the initial operation check firmware 12
7. How to Write Sample Project into the CPU Board 13
(1) Connect CPU board to PC 13
(2) Launch e^2 studio and import sample project 14
(3) Configure Toolchain 14
(4) Build project 15
(5) Write the project into CPU board 16
(6) Disconnect CPU board from PC 16
8. Hardware Setup for Motor Control Development Support Tool 17
9. Others 18
10. Website and Support 18
Revision History 19

List of figures

Figure 2-1 Product contents 6
Figure 4-1 Bring-up Decision Flow 5
Figure 5-1 Initial operation check firmware flow 6
Figure 6-1 Jumper pin setting of Inverter Board 7
Figure 6-2 Jumper pin setting of CPU Board (Version 1) 8
Figure 6-3 Jumper pin setting of CPU Board (Version 2) 9
Figure 6-4 Hardware configuration 10
Figure 6-5 Power Supply 11
Figure 6-6 Operating State 12
Figure 7-1 Connecting to PC 13
Figure 7-2 Import project 14
Figure 7-3 Toolchain configuration 14
Figure 7-4 Build project 15
Figure 7-5 Flash programming 16
Figure 7-6 Disconnect CPU board 16
Figure 8-1 Hardware Configuration 17

1. Introduction

This Quick Start Guide (QSG) describes the followings.

- Overview of the initial operation check firmware which has already been programmed into the CPU Board.
- Steps to execute the initial operation check firmware.
- Instructions for using sample projects which supports the Motor Control Development Support Tool (Renesas Motor Workbench).

There are two versions of the MCK-RA6T3 (Version 1 and Version 2), each with a different circuit diagram and terminal configuration. The model names for each are as follows:

Version 1 Model : RTK0EMA330C00000BJ
Version 2 Model : RTK0EMA330C00001BJ

1.1 Presupposition and precautions of this document


1. Experience of using tools: This document assumes that the user has used terminal emulation program of Integrated Development Environment (IDE) such as e^2 studio before.
2. Knowledge about the development subject: This document assumes that the user has a basic knowledge to modify the sample project regarding MCU and embedded system.
3. Before using this product, wear an antistatic wrist strap. If you touch this product with static charge on your body, a device failure may occur or operation may become unstable
4. All screen shots provided in this document is for reference. Actual screen displays may differ depending on the software and development tool version which you use.
5. The onboard debugger circuit on this product does not have electric isolation. *1 For evaluations of motor drive operation, please use the communication board (MC-COM) to connect to the PC and use the Renesas Motor Workbench development support tool. Because the communication board is equipped with an isolator, isolation between the PC and this product is ensured. Furthermore, Renesas Motor Workbench allows variables to be read and written without stopping the MCU, enabling safe evaluation and debugging of motor drive operation. *2
6. Detailed information on the MCK-RA6T3 is described in the MCK-RA6T3 Evaluation Kit Manual, which is available on the website (renesas.com/mck-ra6t3). Be sure to read it before use.

*1 When using the onboard debugger or an external emulator, this product and the PC share a common GND. In that case, supplying external power to the inverter board or driving the motor may damage the board or the PC.
*2 If the MCU is stopped by the debugger while the motor is running, the MOSFETs on the inverter board may remain ON (conducting state), which may result in damage to the motor or the inverter board.


2. Product Contents

This kit consists of the following parts.

1. Inverter Board (RTK0EM0000B12020BJ) x1
2. CPU Board (Version 1 : RTK0EMA330C00000BJ)
   (Version 2 : RTK0EMA330C00001BJ) x1
3. Brushless DC Motor (R42BLD30L3) x1
4. USB Cable x1
5. Screw x8
6. Standoff x8

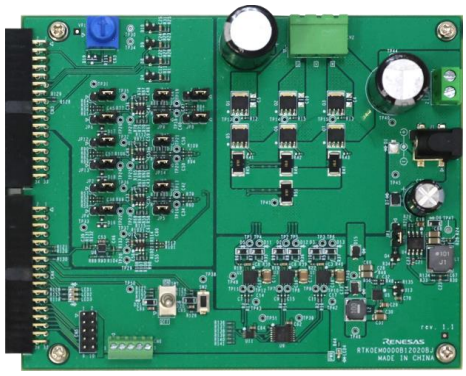

(1) Inverter board

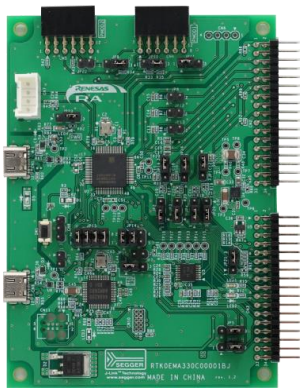

(2) CPU board



(3) Brushless DC motor



(4) USB cable



(5) Screw
(6) Standoff

Figure 2-1 Product contents

3. Software/tools prerequisites

Table 3-1 lists the software and tools required for development using this product.

The initial operation check firmware described in section 5 can be executed without installing any software.

e² studio is required only when building and programming a sample project into the CPU board.

Renesas Motor Workbench is required only when using the motor control development support functions described in section 8.

Table 3-1 software / tool

Category	software/tool	Version
IDE	e² studio	2025-10 or later
Development support tool	Renesas Motor Workbench	v3.2.0 or later

4. Bring-up Decision Flow

This section helps first-time users select the appropriate bring-up path based on their evaluation purpose.

If you would like to confirm the hardware operation immediately after unboxing, use the factory-programmed firmware described in section 5.

If you would like to modify the motor control software, write a sample project to the CPU board as described in section 7.

If you would like to tune parameters or monitor motor variables using a GUI, use Renesas Motor Workbench as described in section 8.

Figure 4-1 shows the recommended bring-up decision flow.

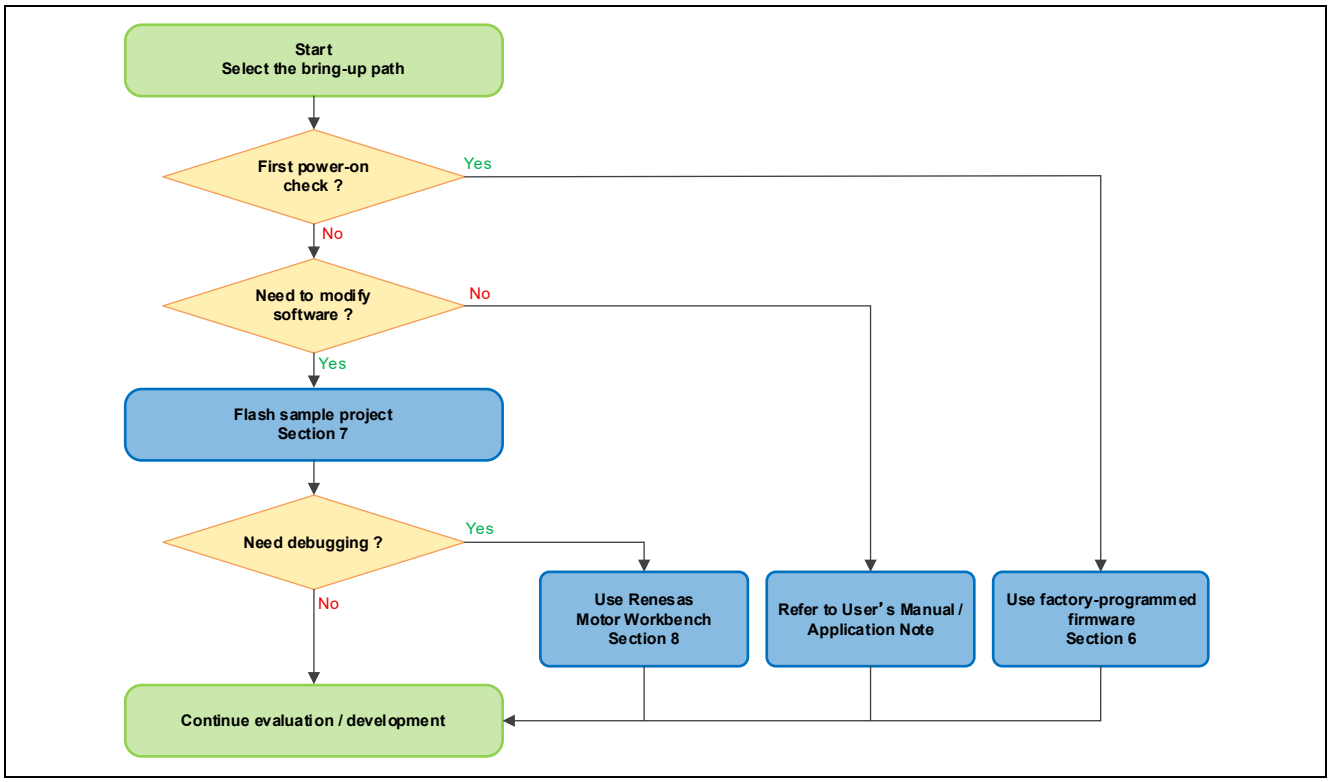


Figure 4-1 Bring-up Decision Flow

5. Initial Operation Check Firmware Overview

The firmware pre-programmed on the CPU board at the time of shipment is an initial operation verification program (not publicly available). This firmware is intended for use with the included brushless DC motor, “R42BLD30L3 (manufactured by Moons')” (hereinafter referred to as the motor), and allows control of start/stop operation, rotational speed, and rotational direction using the switches and variable resistor (VR1) on the board.

After rewriting the program on the CPU board, equivalent evaluation can be performed by using the sample project available on the website. When using the sample project, change the operation method to “Board UI.” Thereafter, motor control can be performed in the same manner as with the initial operation verification program. For the procedure to change to “Board UI,” refer to the application note accompanying the sample project.

5.1 Initial operation check firmware flow

Figure 5-1 shows the flow for the initial operation check firmware operation using the switch and variable resistor(VR1) on the board.

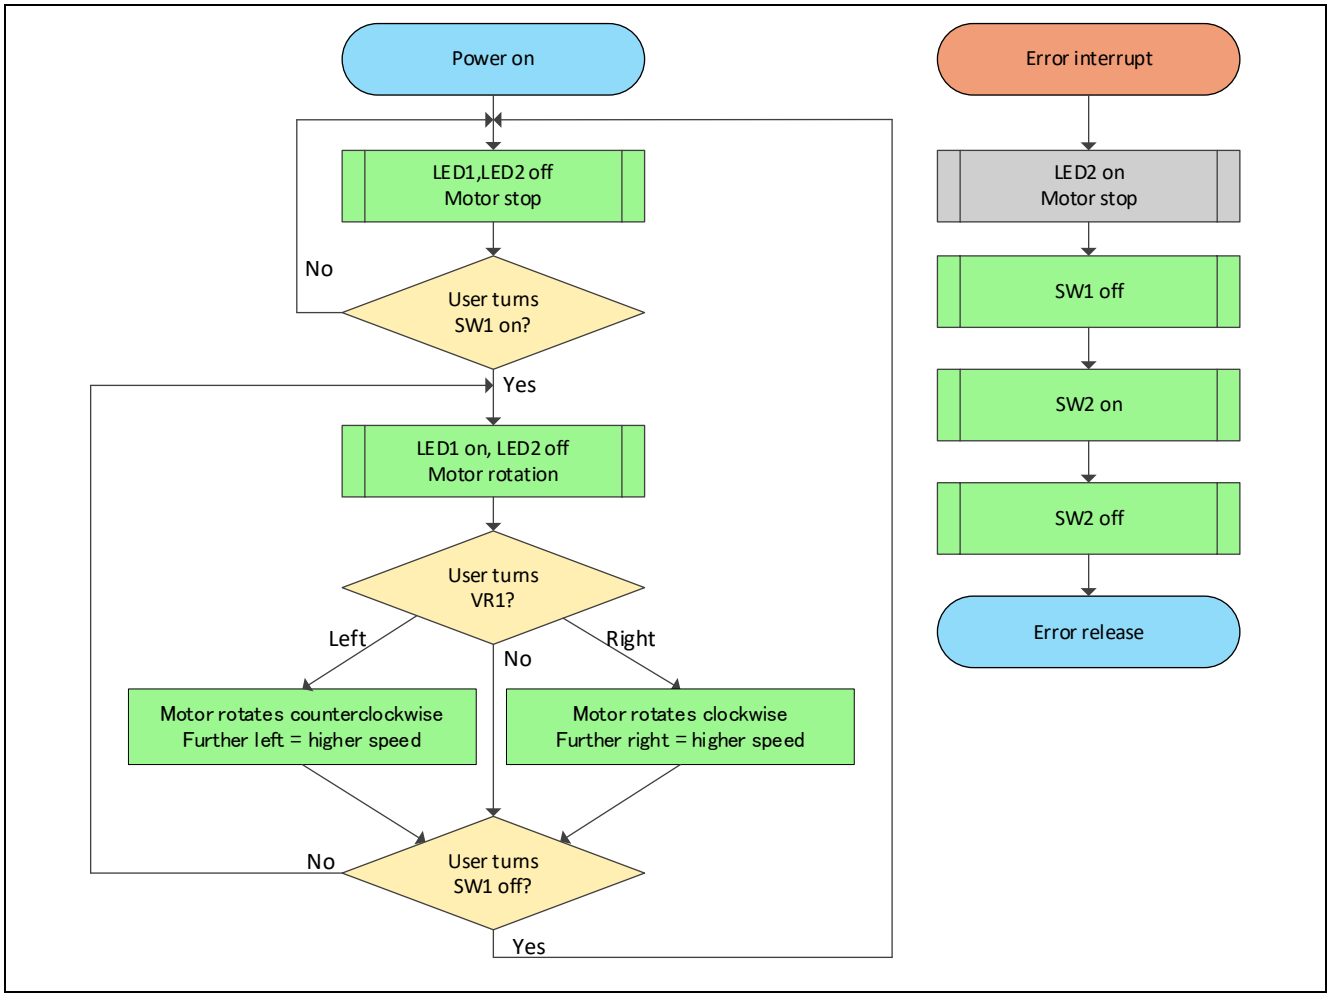


Figure 5-1 Initial operation check firmware flow

6. Execute the Initial Operation Check Firmware

This chapter describes the requirements and steps to turn on MCK-RA6T3 and execute the initial operation check firmware using the switch and the variable resistor(VR1) on the board.

6.1 Connect the board and supply power

6.1.1 Jumper pin setting

(1) Inverter Board

Check that the short jumpers are set as following. (Factory default setting)

JP1 : 2-3pin

JP8, JP11 : 1-2pin

JP2, JP3, JP4, JP6, JP12, JP13 : 2-3pin

JP5, JP7, JP9, JP10, JP14, JP15 : 1-2pin

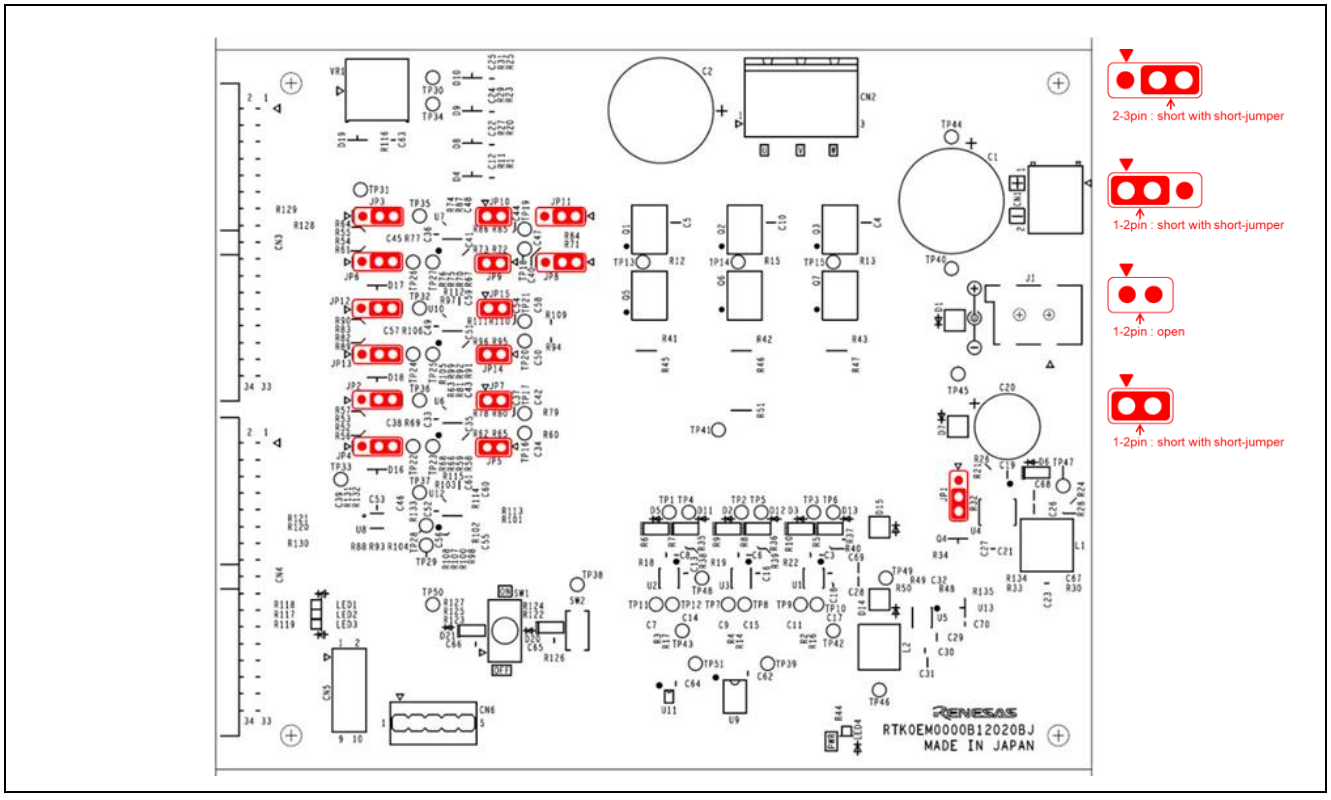


Figure 6-1 Jumper pin setting of Inverter Board

(2) CPU Board Version 1(RTK0EMA330C00000BJ)

Check that the short jumpers are set as following. (Factory default setting)

JP9, JP10 : 1-2pin

JP11 : 2-3pin

JP1, JP2, JP3, JP4 : 1-2pin

JP14 : 1-2pin, 3-4pin

JP15 : 1-2pin, 3-4pin, 5-6pin, 7-8pin

JP7 : 1-2pin

JP5, JP6 : 2-3pin

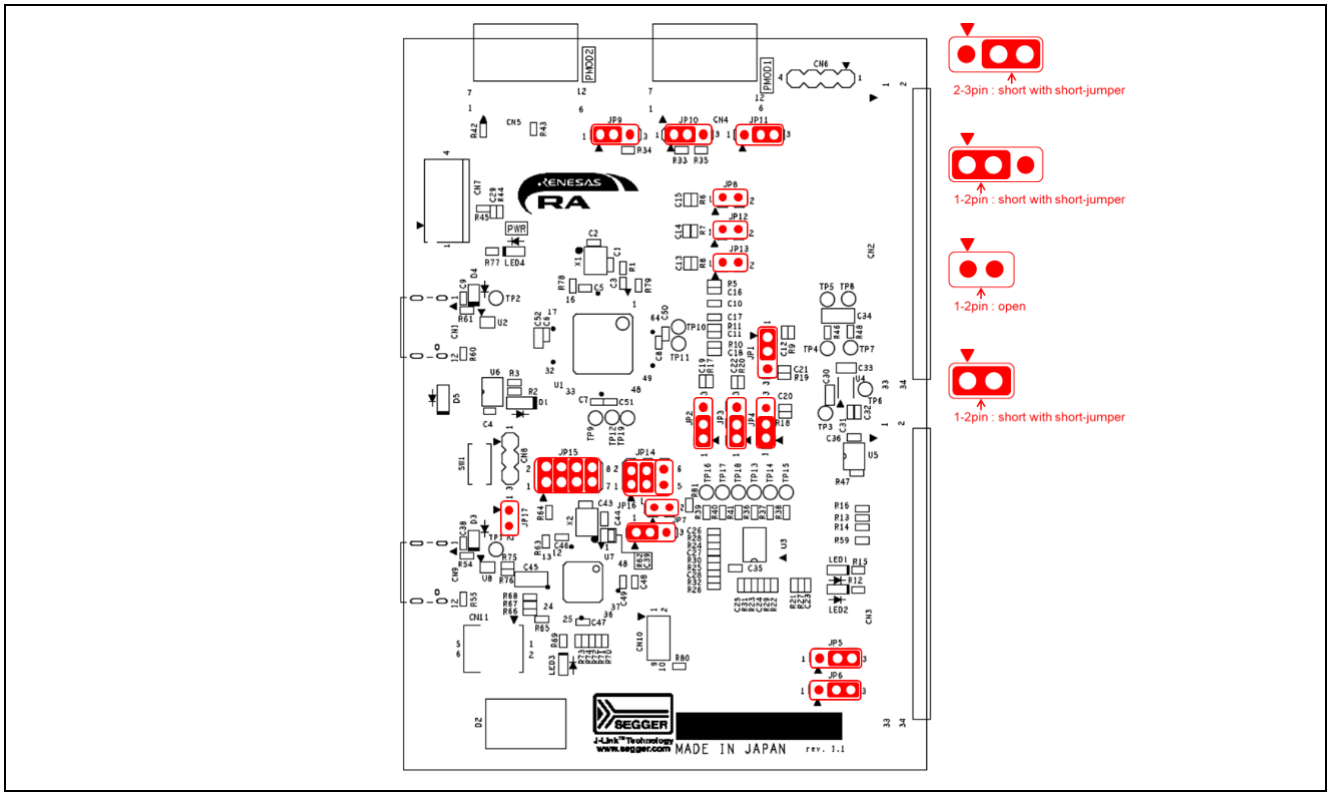


Figure 6-2 Jumper pin setting of CPU Board (Version 1)

(3) CPU Board Version 2(RTK0EMA330C00001BJ)

Check that the short jumpers are set as following. (Factory default setting)

JP9, JP10 : 2-3pin

JP11 : 1-2pin

JP23 : 2-3pin

JP18, JP19 : 2-3pin

JP1, JP2, JP3, JP4 : 1-2pin

JP20 : 2-3pin

JP14 : 1-2pin, 3-4pin

JP15 : 1-2pin, 3-4pin, 5-6pin, 7-8pin

JP7 : 1-2pin

JP21 : 2-3pin

JP5, JP6 : 2-3pin

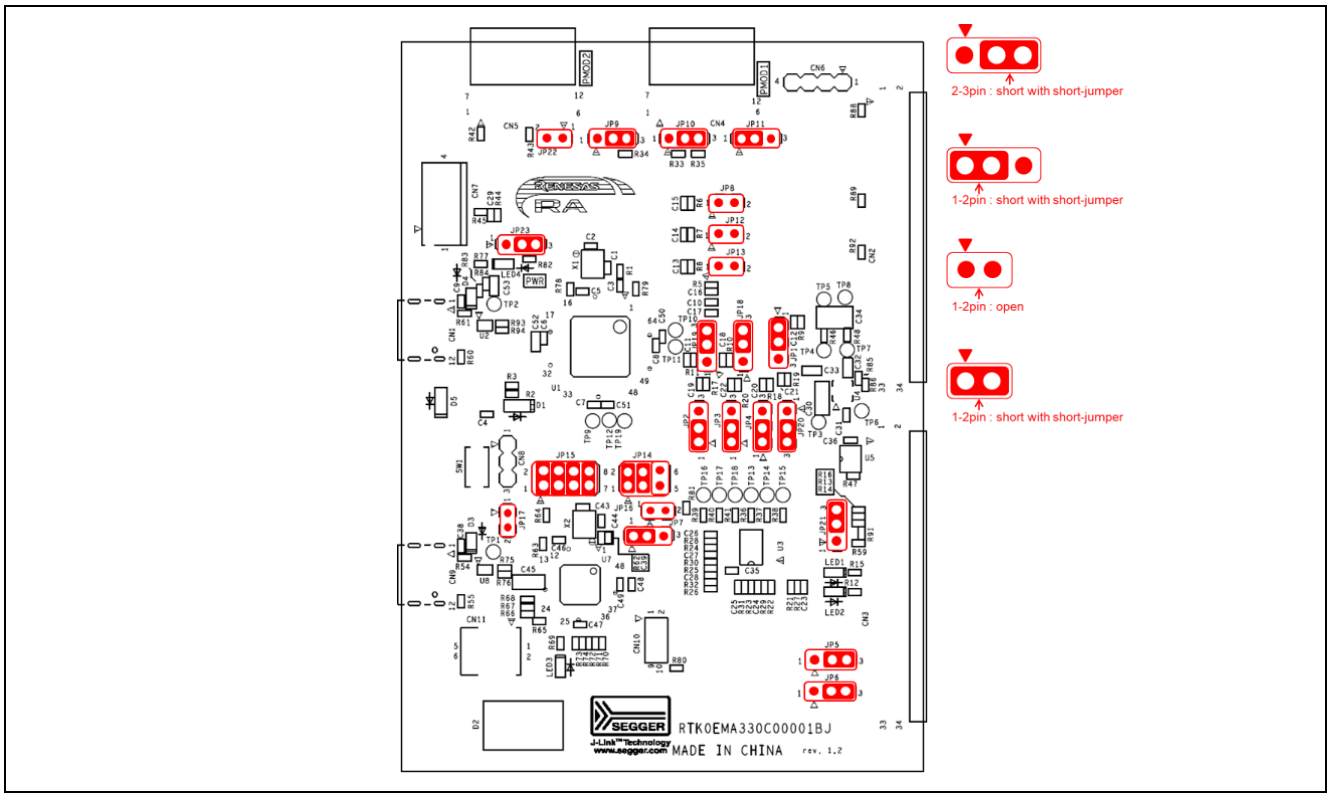


Figure 6-3 Jumper pin setting of CPU Board (Version 2)

6.1.2 Connect the motor and the board

Connect the supplied inverter board, CPU board and motor following Figure 6-4. Also, turn off SW1 on the inverter board and set VR1 to around the center. The motor is equipped with a Hall sensor signal cable, but since the Hall sensor signal is not used for initial operation check firmware, it does not need to be connected.

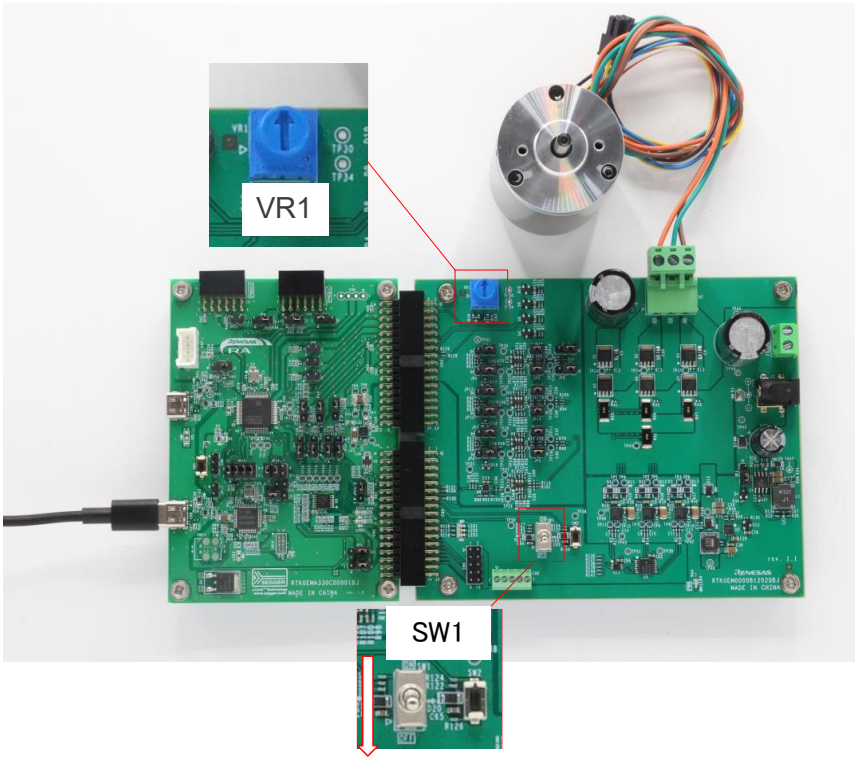


Figure 6-4 Hardware configuration

6.1.3 Supply Power

There are two ways to supply power: from the terminals on the inverter board (CN1 or J1) or from the USB connector on the CPU board (CN9). In the initial operation check, power is supplied from the USB connector on the CPU board. For the USB power supply, please use a USB adapter capable of outputting 1A or more.

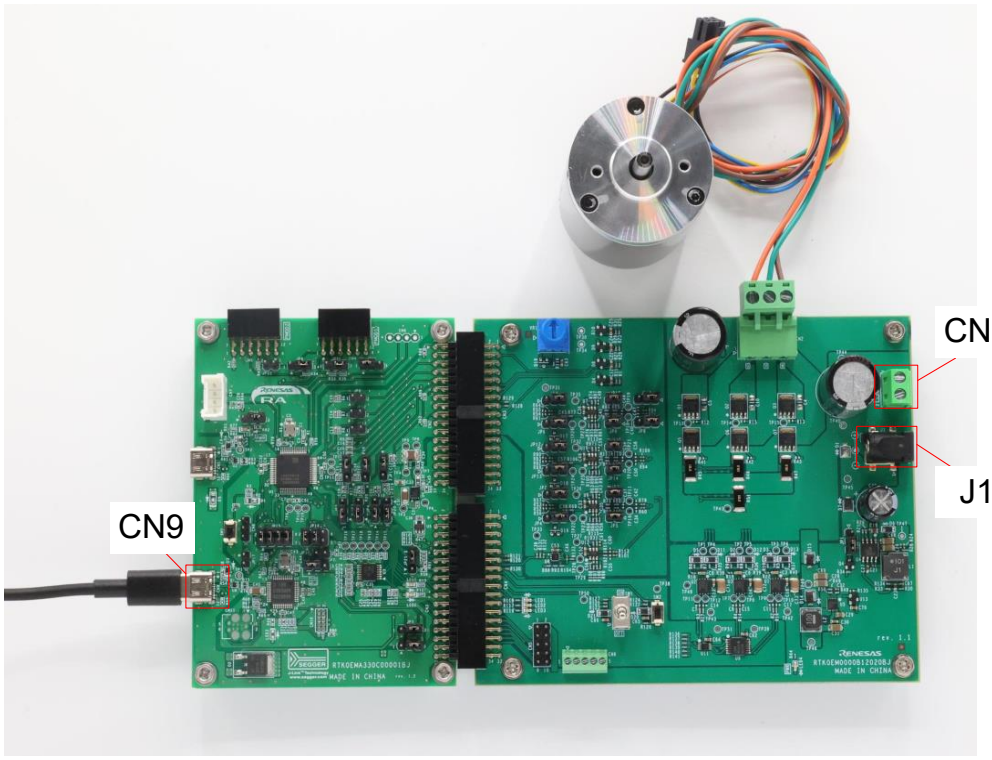


Figure 6-5 Power Supply

The required power supply configuration depends on the intended use of the product. Table 6-1 shows the recommended power supply method for each evaluation purpose.

For first-time users, Renesas recommends starting with the initial operation check using USB power supplied to the CPU board.

Table 6-1 Power Supply Matrix

Evaluation Purpose	Power Source	Recommended Configuration
Initial operation check	USB (CN9 on CPU board)	CPU board + Inverter board + Motor
CPU board evaluation	USB (CN9 on CPU board)	CPU board
Evaluation with Renesas Motor Workbench	DC 12 V to 48 V (J1 or CN1 on inverter board)	CPU board + Inverter board + Communication board + Motor

6.2 Execute the initial operation check firmware

Follow the below steps to execute the initial operation check firmware.

1. After turning on power supply or executing reset, LED1 and LED2 on the inverter board are both off and the motor stopped.
2. If the switch (SW1) on the inverter board is turned on, the motor starts to rotate. When it is turned off, the motor stops. If the motor rotates normally, LED1 on the inverter board is ON. However, if LED2 on the inverter board is ON, error is occurring.
3. In order to change the direction of rotation of the motor, use the variable resistor (VR1) on the inverter board.
   - Turn the variable resistor (VR1) right : the motor rotates clockwise
   - Turn the variable resistor (VR1) left : The motor rotates counterclockwise
4. If error occurs, LED2 on the inverter board is ON, and the motor rotation stops. To recover from the error state, turn off the switch (SW1) on the inverter board and push the push switch (SW2) once.
5. In order to quit the operation, make sure that the motor has stopped rotating and disconnect the USB cable from the USB connector (CN9) on the CPU board.

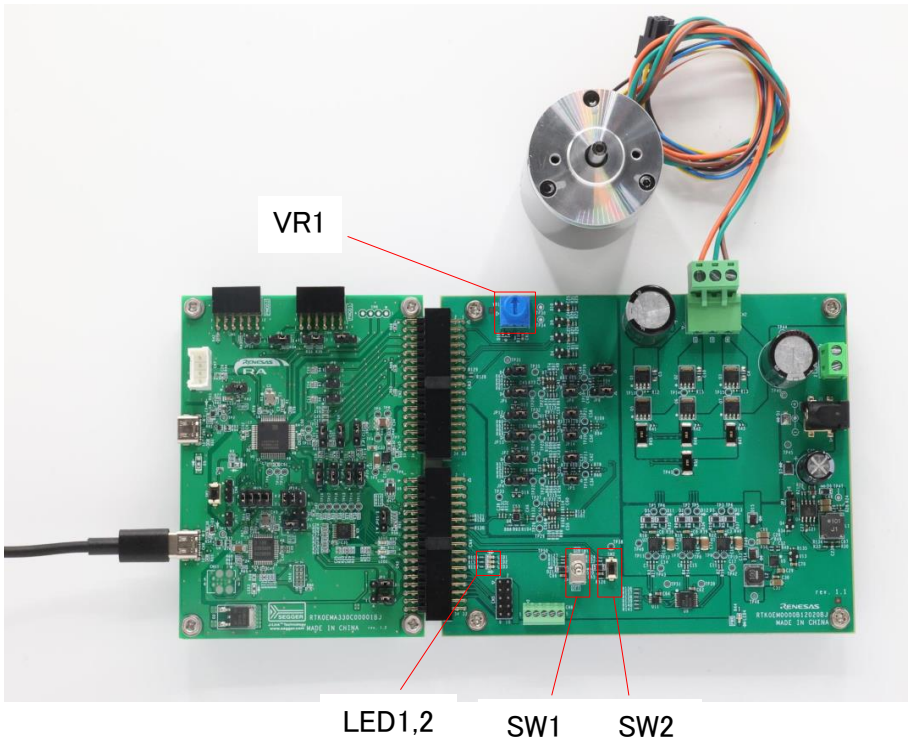


Figure 6-6 Operating State

7. How to Write Sample Project into the CPU Board

In this product, sample projects can be written using the on-board debugger circuit (J-Link OB) on the CPU board. This section describes how to write sample code using the integrated development environment (IDE) e² studio.

For required software, supported versions, and toolchain information, refer to the application note included with the sample code.

Detailed information is available on the website (renesas.com/mck-ra6t3).

(1) Connect CPU board to PC

Connect the CPU board to the PC using the USB cable included in this product.



Figure 7-1 Connecting to PC

(2) Launch e² studio and import sample project

Import the sample project (for e² studio) into e² studio.

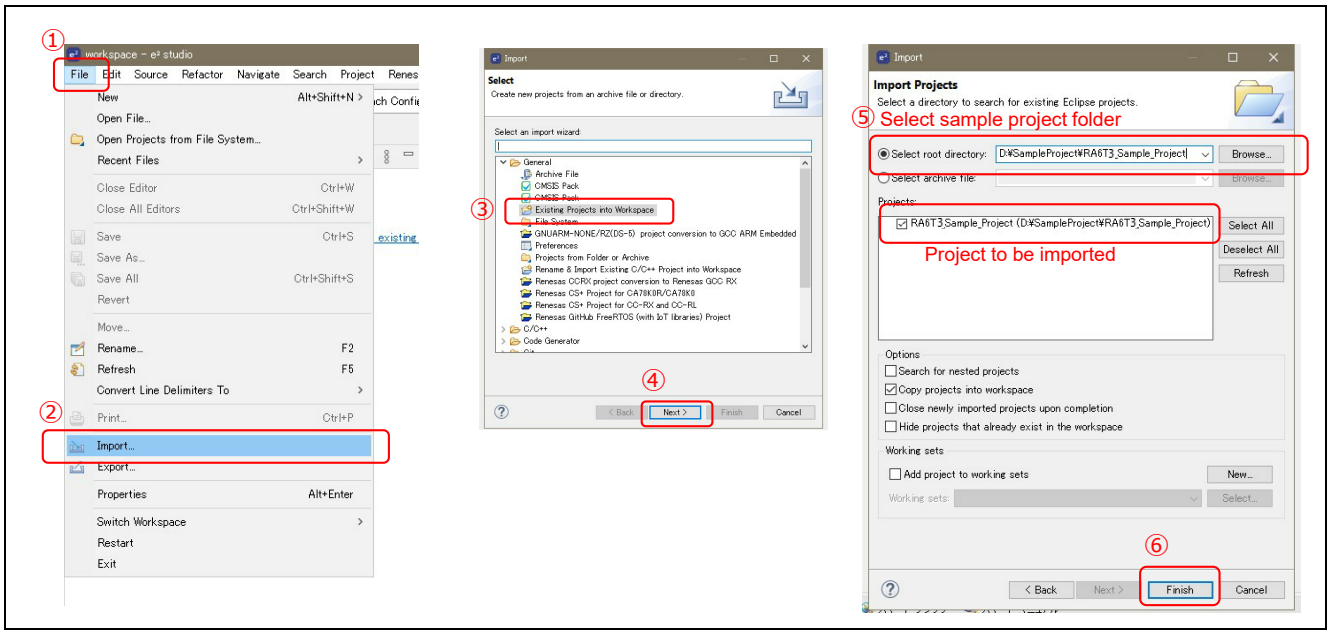


Figure 7-2 Import project

(3) Configure Toolchain

Click the property of the project and configure the toolchain for your environment. The toolchains and versions you can select depend on the installed toolchain in your e² studio.

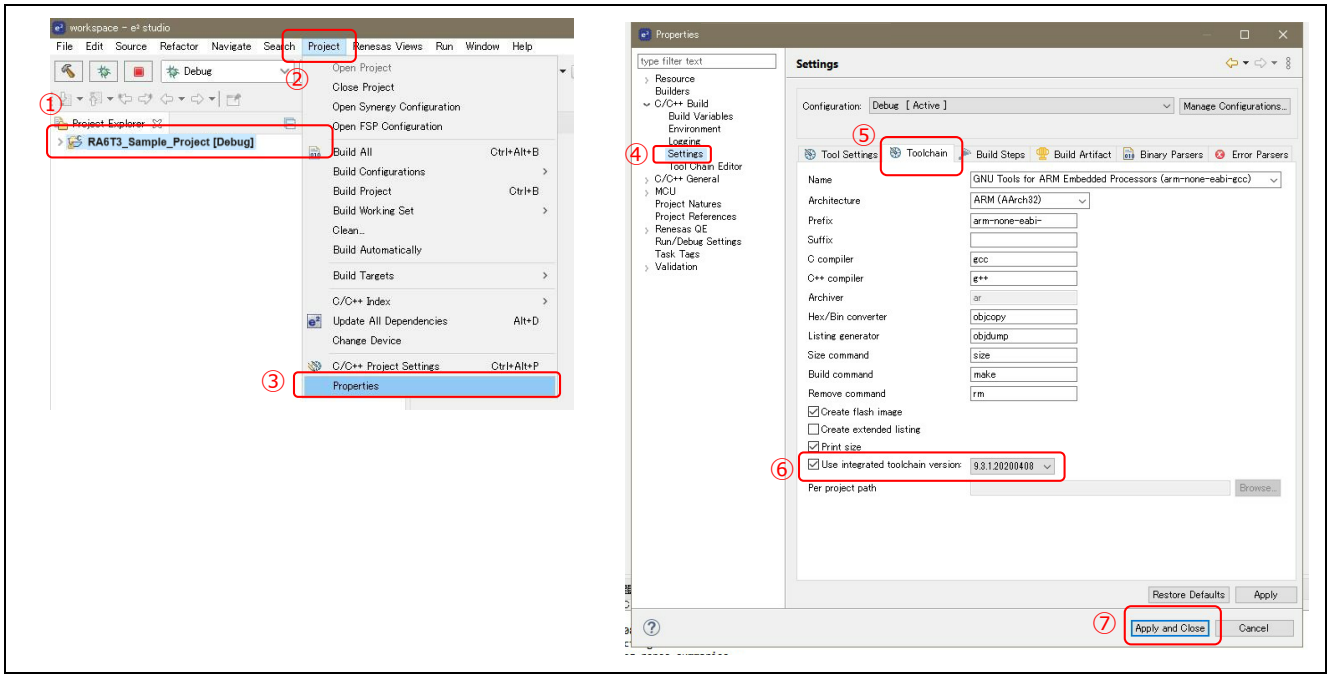


Figure 7-3 Toolchain configuration

(4) Build project

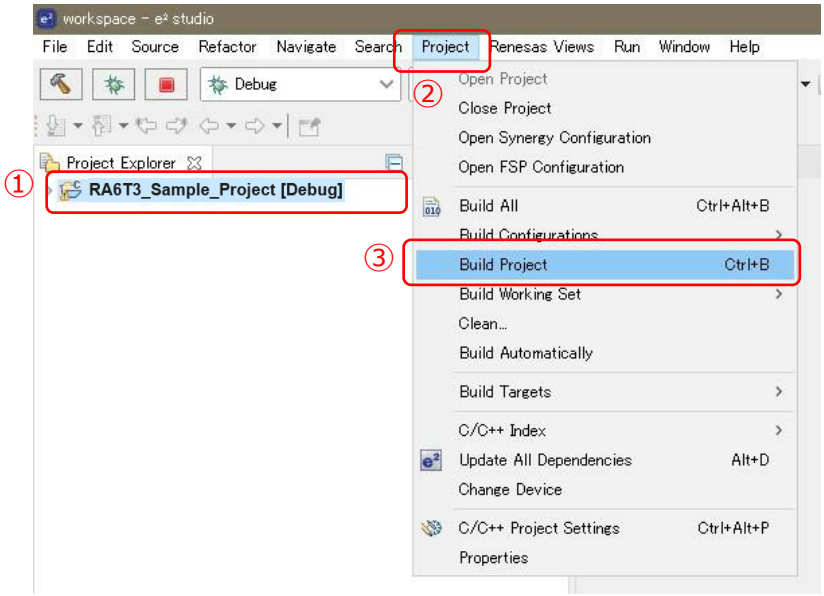


Figure 7-4 Build project

(5) Write the project into CPU board

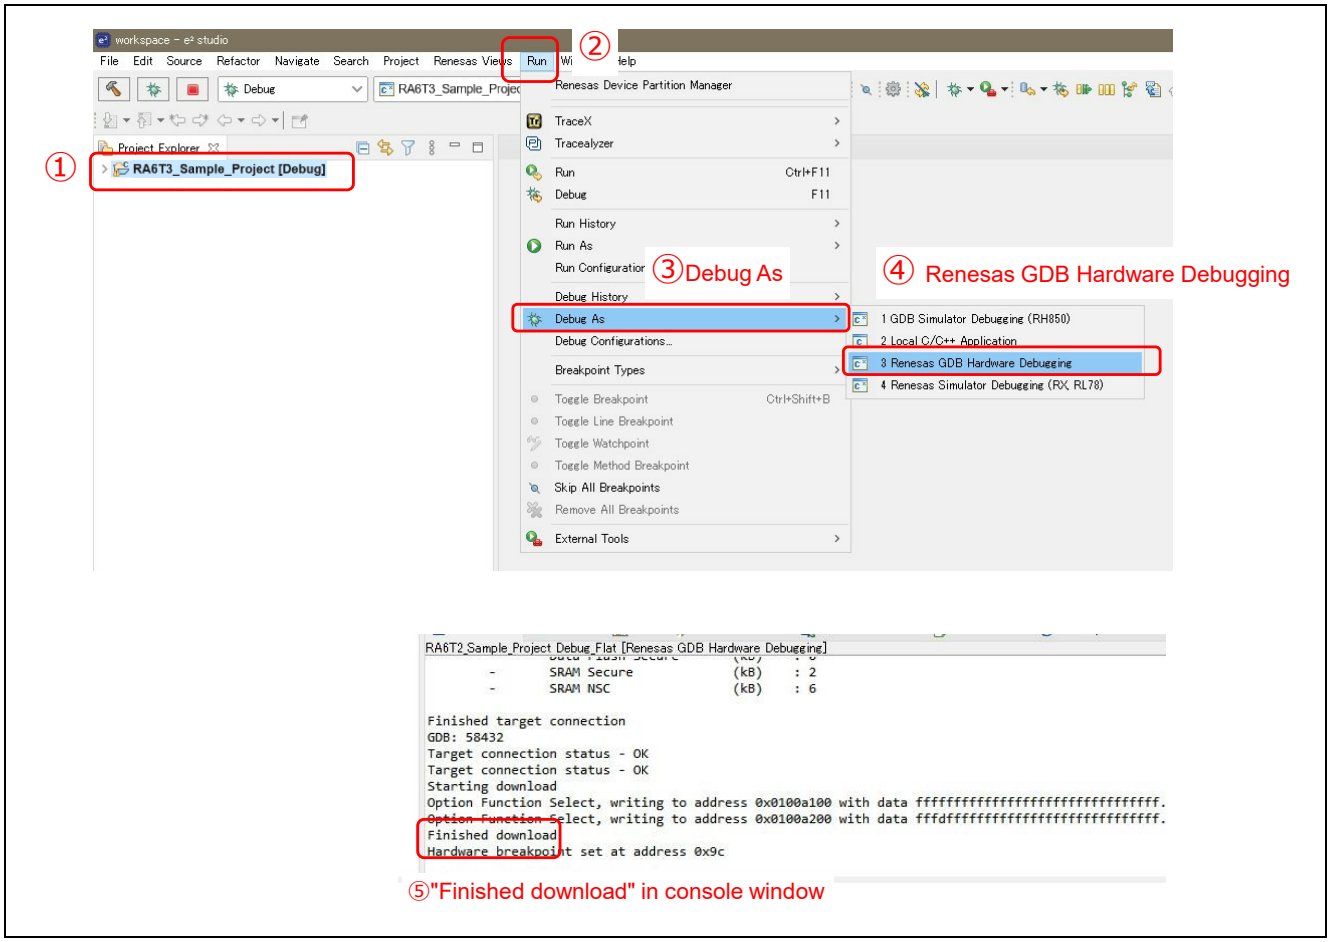


Figure 7-5 Flash programming

(6) Disconnect CPU board from PC

Click disconnect and detach USB cable from the CPU board.

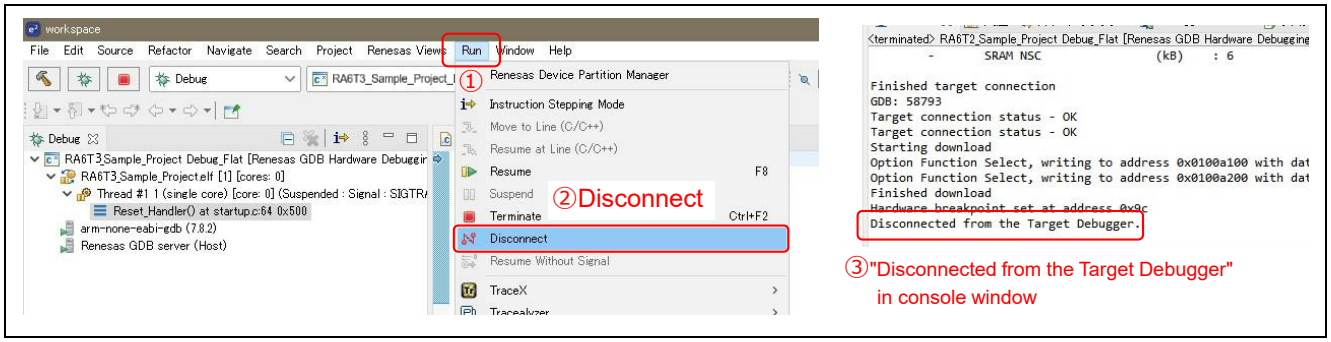


Figure 7-6 Disconnect CPU board

8. Hardware Setup for Motor Control Development Support Tool

Note:

The factory-programmed firmware described in sections 5 and 6 does not support Renesas Motor Workbench.

To use Renesas Motor Workbench, download and program an RMW-compatible sample project and use the associated configuration files provided with that sample project.

For detailed operation procedures, refer to the corresponding Application Note and the Renesas Motor Workbench User's Manual. They are available on the website (renesas.com/mck-ra6t3).

By downloading and writing a sample project that is compatible with the Renesas Motor Workbench, a motor control development support tool, to the CPU board, you can control motor using Renesas Motor Workbench. This chapter explains how to setup the hardware. For details on how to actually control the motor using Renesas Motor Workbench, please refer to the application note attached to the downloaded sample project and the manual of Renesas Motor Workbench.

Connect this product to your PC as shown below.

(1) Connect the inverter board and CPU board

Connect CN3,CN4 on the inverter board and CN2,CN3 on the CPU board. Connect CN2 on the inverter board with the Motor's cable.

(2) Connect the USB cable

Connect the USB Type-C connector CN9 on the CPU board to your PC through the USB isolator.

(3) Supply power

Supply DC12~48V to J1 or CN1 on the inverter board. In this section, power is supplied to J1 using an AC adapter. Note the polarity of the power supply. J1 is center positive.

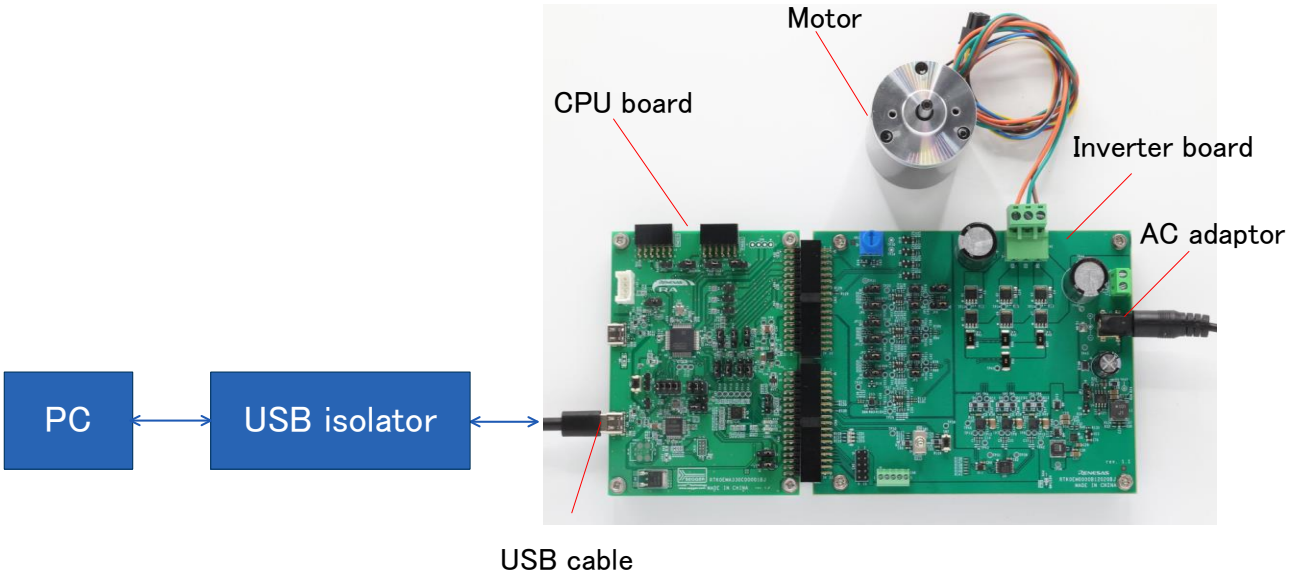


Figure 8-1 Hardware Configuration

9. Others

1. As for more details about this product, refer to the Evaluation Kit Manual, design information and application
   notes which are available in its web page.
2. Renesas provides some sample projects to conduct demonstration for RA MCU's various functions.
   These sample projects can be used as good reference materials to start application development. The sample projects for this kit are available on the website (renesas.com/mck-ra6t3).
   All sample projects provide project file. In order to enable to write them into this product, after these files are downloaded, the project needs to be built using corresponding toolchain.

10. Website and Support

In order to learn, download tools and documents, apply technical support for RA family MCU and its kit, visit the below Web site.

• RA Product Information renesas.com/ra

• RA Product Support Forum renesas.com/ra/forum

• Renesas Support renesas.com/support

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	May 23, 2023	-	First edition
1.10	March 1, 2026	-	Support MCK-RA6T3 Version 2

MCK-RA6T3 Quick Start Guide

Publication Date: March 1, 2026

Published by: Renesas Electronics Corporation

MCK-RA6T3 Quick Start Guide

Renesas Electronics Corporation

R12QS0061EJ0110