
RENESAS Code PRQP0064JB-A

Note

<u>HQFP</u> <u>Mount Pad Dimensions</u>

Unit: mm

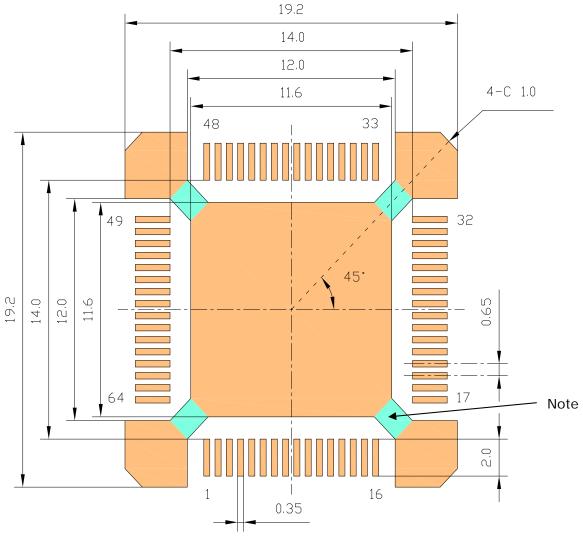

To ensure the amount of solder for pad area corresponding to the corner of heat spreader, we recommend set the area of solder resist or a silkscreen on PCB as preventing of solder outflow at reflow.