

## Introduction

This application note will demystify some important jitter units used in quantifying clock jitter for high-speed applications. While the voltage and current parameters of a clock device are well understood, the units of timing jitter can lead to confusion. This is because there is no universally accepted definition of jitter for all applications.

Jitter can have units in the time and frequency domains; sometimes peak-to-peak values are stated, while other times RMS jitter is given. When datasheets for competing timing products use different units, it can prove challenging to do side-by-side performance comparisons.

This note will focus on the most common jitter units used today and describe the relationships between them. Much of the math and equations have been simplified. This note will focus on the reader's ability to:


- Compare the jitter performance of various timing products even when different units are used (e.g. RMS jitter versus peak-to-peak jitter).
- Relate the datasheet jitter parameters for a clock generator or transceiver to the application jitter specification (e.g. PCIe Gen3, Gigabit Ethernet etc).
- Appreciate the relationship between jitter and phase noise.

## What is Jitter and Phase Noise?

Phase noise and jitter are different ways of quantifying the same phenomenon: signal timing error. In the time domain, common jitter measurements are *period jitter*, *cycle-to-cycle jitter* and *accumulated jitter*. Among these types of jitter, **period jitter** (see [Figure 1](#) below) is generally given in datasheets.

In the frequency domain, oscillator quality is characterized by **phase noise** measurements which examine the spectrum of side-band noise frequencies in a clock signal. To keep things simple, assume that the ideal clock is a perfect sine wave with a frequency  $F_C$ . Such a pure clock will have all its power concentrated at  $F_C$  (see [Figure 2](#)). The effect of phase noise is to spread the power into sidebands causing slight variations in frequency. So that instead of the oscillator always producing a pure clock signal at  $F_C$ , it is sometimes a bit faster:  $F_C + \Delta f$ , or sometimes a bit slower:  $F_C - \Delta f$  (see [Figure 3](#)). These small changes in clock speed translate into jitter in the time domain.


Various random and deterministic noise sources in an electrical system cause jitter. For an excellent explanation of the types and components of jitter, please refer to the white paper [IDT\\_Jitter-Timing\\_WHP\\_20080901](#). This guide will focus on explaining those unusual jitter and phase noise units seen in high performance timing specifications.

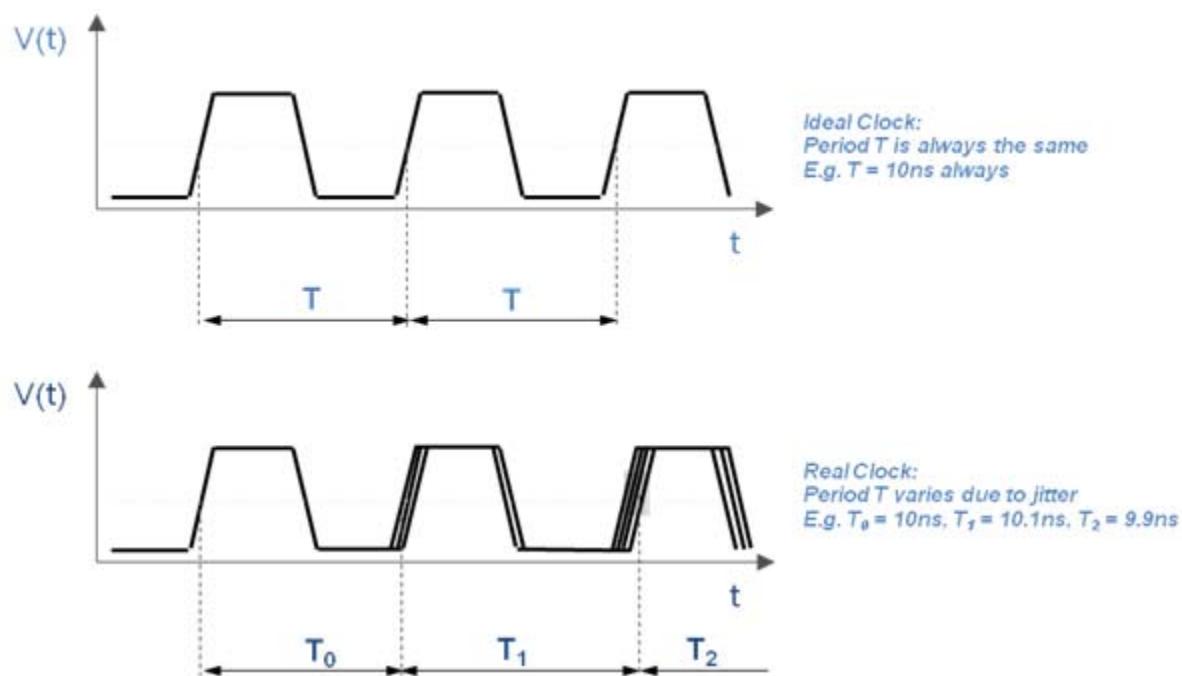**Figure 1. Jitter in the Time Domain****Figure 2. Jitter in the Frequency Domain – Phase Noise**

Spectrum of Perfect Clock

$$V(t) = A \sin(2\pi f_c t)$$

Power concentrated in single infinitely thin line at  $f_c$  on graph

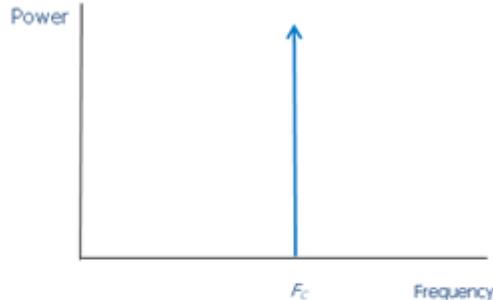


Real-World Clock

$$V(t) = [A + a(t)] \sin[2\pi f_c t + \Delta\phi(t)]$$


$a(t)$  is random variation of signal amplitude  
 $\Delta\phi(t)$  is random variations of signal phase,  
 usually called *phase noise*. In oscillators  $\Delta\phi(t)$   
 is the dominant contributor to jitter.

Phase noise broadens the signal spectrum

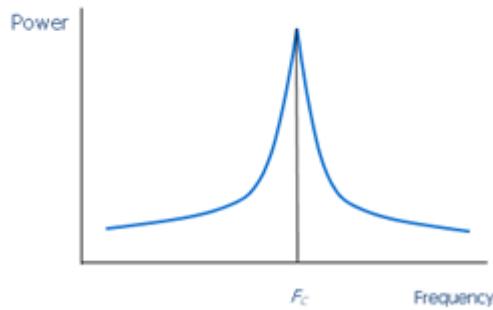

**Figure 3. Vector Representation of Phase Noise**


Phasor Diagram of Perfect Oscillator

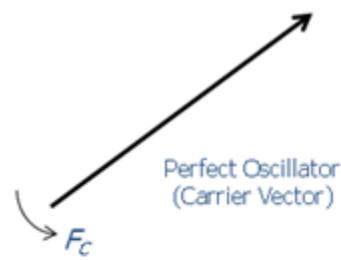Carrier vector rotates at a constant frequency  $F_c$ Phasor Diagram showing phase noise  $\Delta\phi$  caused by a noise vector  $V_N$ 

The solid black line is the original carrier vector in its ideal position.

The dotted red lines show how the rotating noise vector can displace the carrier vector from its ideal position causing phase noise.

Resultant signal (Carrier + Noise) has a modulated frequency.

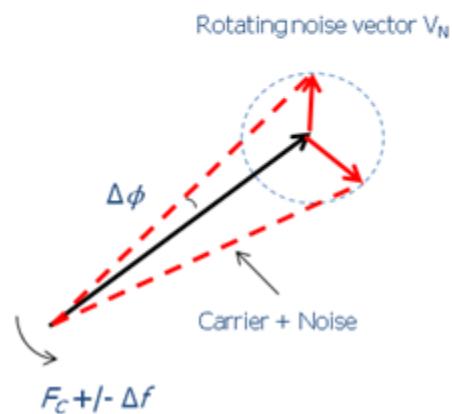


## Quantifying Jitter in the Time Domain

Total jitter (TJ) equals the sum of deterministic jitter (DJ) plus random jitter (RJ). Common sources of deterministic jitter are cross-talk and simultaneous outputs switching. The peak-to-peak value of DJ is finite and can be minimized by careful design (e.g. good PCB routing). The effect of DJ is to add an offset to the value of RJ.



Random jitter (usually due to thermal noise and other uncorrelated noise sources) is unpredictable and typically follows a Gaussian or Normal distribution (see [Figure 4](#)). It is highly process dependent. Unlike DJ, the peak-to-peak value of RJ is unbounded; the more samples measured, the wider the variation of  $RJ_{pk-pk}$  observed (see [Figure 5](#)).

**Figure 4. Gaussian Distribution Reveals Random Nature of Period Jitter**

The real world clock signal  
Signal period varies:  $T_0, T_1, T_2, \dots$   
Momentary clock frequency changes.  
Jitter = Deviation of the clock signal  
transitions from the reference  $T_0$   
Random jitter has Gaussian distribution

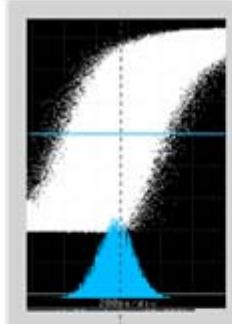

Oscilloscope  
screen shot of  
sampled clock  
waveform

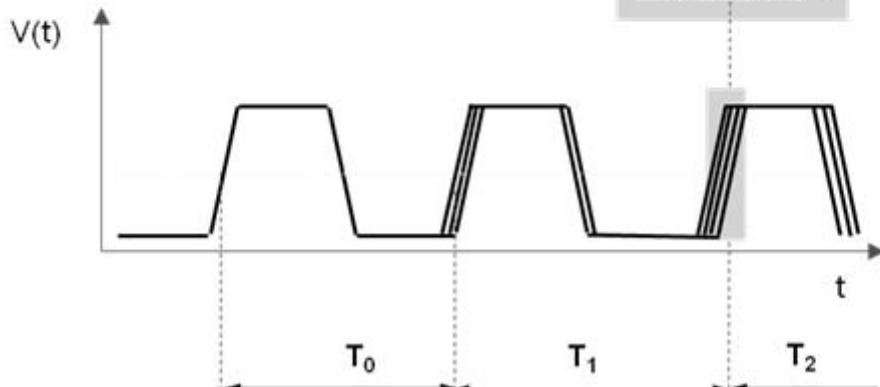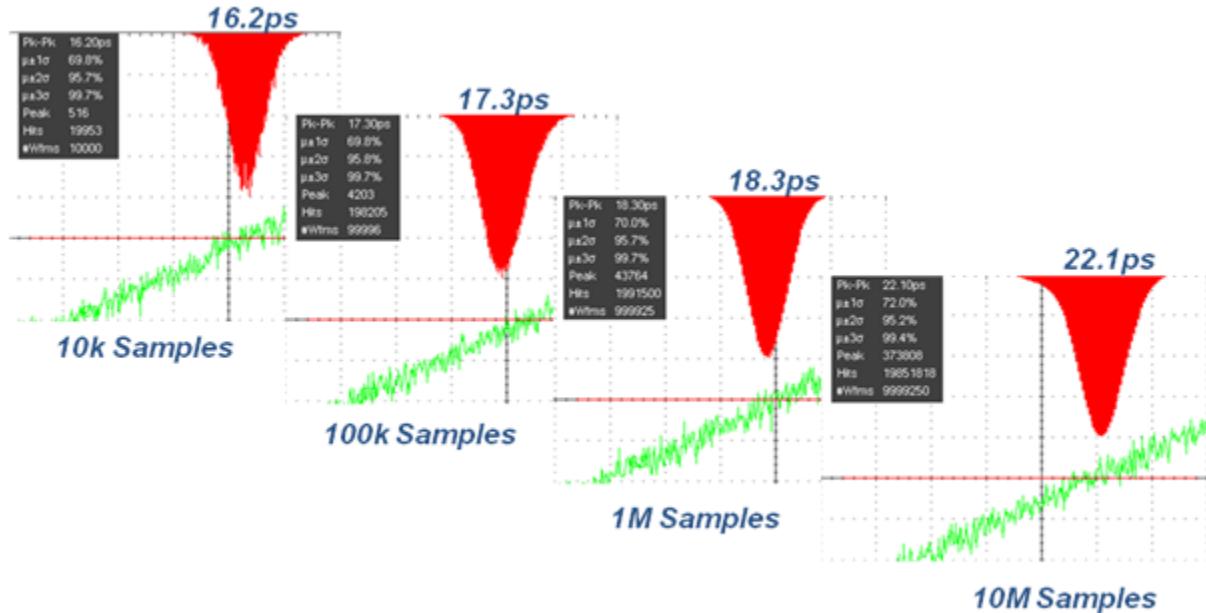**Figure 5. Random Jitter is Unbounded. The Peak-to-Peak Value of Jitter Depends on the Number of Samples.****Oscilloscope shots of clock signal with increasing number of samples**


The more you sample, the wider period variation you will see. In this example,  
at 10k samples Jitter<sub>pk-pk</sub> = 16.2ps. At 10M samples Jitter<sub>pk-pk</sub> = 22.1ps.

## Two Ways of Quantifying Random Jitter: RMS and Peak-to-Peak

Period jitter is the short term variation in clock period compared to the average (mean) clock period. If the average or reference period is  $T_0$  (see [Figure 1](#) above), then we take samples of period jitter as  $T_1 - T_0$ ,  $T_2 - T_0$ ,  $T_3 - T_0$ , ... and so on until we reach 10,000 samples (JEDEC standard JESD65B).

Plotting these jitter samples as a histogram may well result in a Normal distribution (see [Figure 6](#)).

**Figure 6. Gaussian (Normal) Distribution**

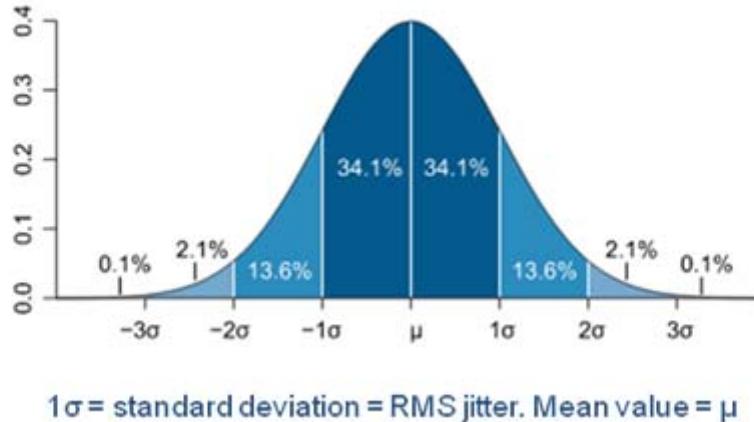

Ideally the mean value  $\mu$  of jitter is zero. Values to the left of  $\mu$  represent clock periods smaller than the reference period, and values to the right are larger than the reference clock period.

One standard deviation  $1\sigma$  each side from  $\mu$  (dark blue) accounts for about 68% of the jitter samples. While  $\pm 2\sigma$  from  $\mu$  (medium and dark blue) account for about 95%, and  $\pm 3\sigma$  (light, medium, and dark blue) account for about 99.7%.

The Normal distribution yields two common jitter specifications:

- **Root Mean Squared** jitter ( $RJ_{RMS}$ ) or the value of one standard deviation  $\sigma$ . Since this value hardly changes as the number of samples increases, it is considered a more meaningful measurement. However it is only valid in pure Gaussian distributions (no deterministic jitter).
- **Peak-to-peak** jitter or the distance from the smallest to the largest measurement on the normal curve. In most circuits this value increases with the number of samples taken (see [Figure 5](#)). To arrive at a meaningful value of peak-to-peak jitter, the bit error ratio (BER) also needs to be specified.

### How RMS Jitter Relates to Peak-to-Peak Jitter and BER

In [Figure 6](#), we can see that inside a peak-to-peak range of  $6\sigma$  ( $\pm 3\sigma$  from the mean) or  $6 \times RJ_{RMS}$ , about 99.7% of jitter samples are accounted for. To account for 100% of the jitter samples is impossible - the tails of the Gaussian distribution stretch to infinity. What decides that the peak-to-peak jitter is  $6 \times RJ_{RMS}$ , or  $7 \times RJ_{RMS}$ , or  $12 \times RJ_{RMS}$ ?

A useful way to accomplish this is based on the bit error ratio (BER) required by the system. It is assumed that any samples that fall outside the peak-to-peak range will cause bit errors. Therefore, if a BER target of  $10^{-12}$  is demanded, it is necessary to select a range that will contain the jitter for all except 0.0000000001% of the time.

To convert from RMS jitter to peak-to-peak jitter using this method, simply multiply  $RJ_{RMS}$  by the value  $N$  corresponding to the appropriate BER in [Table 1](#) below:

**Table 1: BER and RMS Multiplier N**

BER	N
$10^{-3}$	6.18
$10^{-4}$	7.438
$10^{-5}$	8.53
$10^{-6}$	9.507
$10^{-7}$	10.399
$10^{-8}$	11.224
$10^{-9}$	11.996
$10^{-10}$	12.723
$10^{-11}$	13.412
$10^{-12}$	14.069
$10^{-13}$	14.698
$10^{-14}$	15.301
$10^{-15}$	15.883
$10^{-16}$	16.444

For example  $RJ_{RMS} = 4\text{ps}$ , and the system BER requirement is  $1 \times 10^{-12}$ , the corresponding peak-to-peak jitter (rounded up) is:

$$RJ_{pk-pk} = 4 \times 14.069 = 56.4\text{ps}$$

This figure gives us an idea of the allowable jitter budget. Roughly speaking, if the various random jitter sources in a communication link add up to less than 56.4ps, then the bit errors should be less than  $1 \times 10^{-12}$ .

## Predicted versus Measured Peak-to-Peak Jitter


Peak-to-peak jitter is often described in two ways:

- It can be calculated as shown previously using the RMS multiplier. This is predicted peak-to-peak jitter based on a defined BER (usually  $1 \times 10^{-12}$ ).
- It can be measured using test equipment. In this case the minimum period sampled is subtracted from the maximum period measured. As we have seen before this will depend on how many samples are taken.

The predicted and measured values will not be the same. The measured value will give a feel for the jitter in the system, but is somewhat meaningless in relation to BER. For example, the peak-to-peak jitter measured from 10,000 samples will not tell you the peak-to-peak jitter needed for  $BER = 1 \times 10^{-12}$ . You would need at least 1,000,000,000,000 samples to accomplish that! Therefore  $RJ_{pk-pk}$  is usually calculated from  $RJ_{RMS}$  at a defined BER.

## Quantifying Jitter in the Frequency Domain: Phase Noise

As mentioned in the introduction, phase noise describes jitter in the frequency domain. Later we will see that, from the phase noise information, we can extract the RMS Phase Jitter value which is often given in datasheets as a measure of quality and spectral purity.

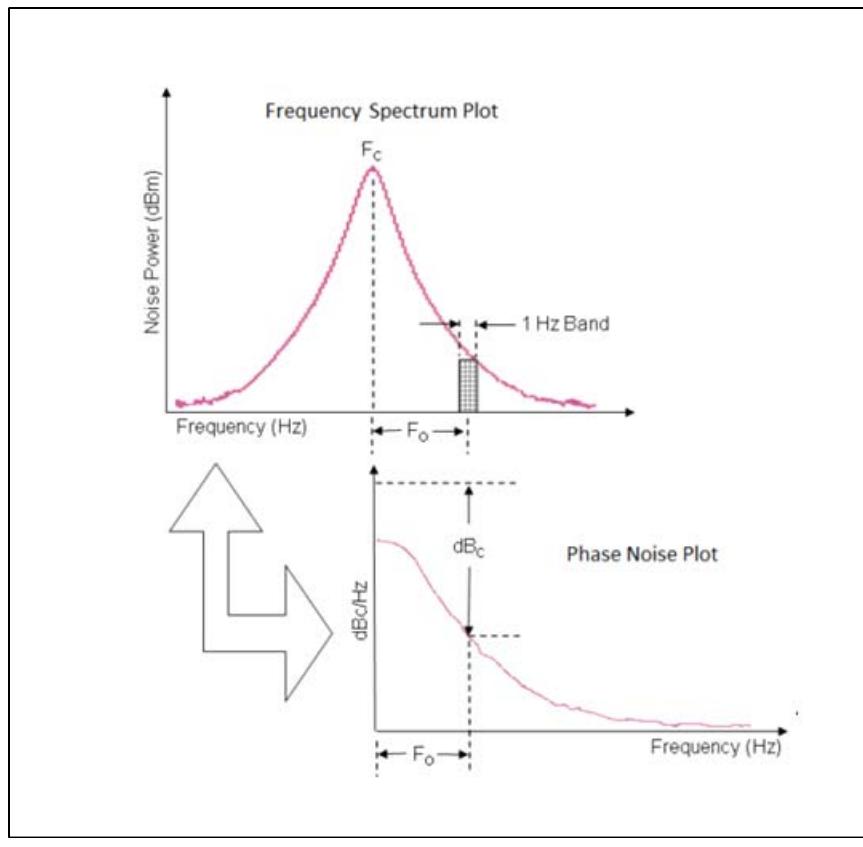Figure 7. Constructing a Phase Noise Plot (from IDT white paper *RMS Phase Jitter*)

The frequency spectrum plot in Figure 7 is of a real sinusoidal clock with nominal frequency  $F_C$  (also called the **carrier** frequency) plus sideband offset noise frequencies  $F_O$ . That means, sometimes the clock will have a slightly larger frequency  $F_C + F_O$  and sometimes it will have a slightly lower frequency  $F_C - F_O$ . The small changes in frequency appear as phase shifts in the clock waveform, hence the name phase noise.

The noise power in a 1Hz band at an offset frequency  $F_O$  compared to the power of the carrier frequency  $F_C$  is called the **dBc Phase Noise** ( $\text{dBc}$  = power in dB relative to *carrier*).

$$\text{dBc Phase Noise} = \frac{\text{Power level of a 1Hz band at offset } F_O}{\text{Power level of carrier frequency } F_C}$$

The actual units of Phase Noise are  $\text{dBc/Hz}$  because the power is normalized to a 1Hz bandwidth.


## Constructing a Phase Noise Plot

Referring to [Figure 7](#) above, by sweeping a 1Hz band from the center of the Frequency Spectrum Plot to the right hand end of the frequency axis, the dBc power level can be calculated at each offset  $F_O$ . The resulting values are then plotted on a Phase Noise plot as shown in [Figure 7](#). [Table 2](#) below highlights the main differences between the Frequency Spectrum and Phase Noise plots. [Figure 8](#) shows a typical oscillator phase noise plot.

**Table 2: Differences between Frequency Spectrum and Phase Noise Plots**

Frequency Spectrum Plot	Phase Noise Plot
Power levels are in absolute units dB	Noise power levels are relative to carrier, calculated in 1Hz bandwidths. Units are dBc/Hz.
Frequency axis shows all the frequencies in the signal	Frequency axis only shows the offset (sideband) frequencies. For example, if $F_{CARRIER} = 25\text{MHz}$ , then when the frequency is $25.01\text{MHz}$ : $F_{OFFSET} = 0.01\text{MHz} = 10\text{kHz}$
Carrier frequency is the nominal clock frequency	Offset frequency is the modulation rate of the clock ( <i>because the clock is frequency modulated by the noise</i> ).
	Single side – only one side of the spectrum is plotted. The assumption is that the noise profile is symmetrical.

**Figure 8. Phase Noise Plot of a 311MHz Oscillator (from Thomas Fischer TI). Offset (modulation) Frequencies are shown on a Logarithmic Scale.**

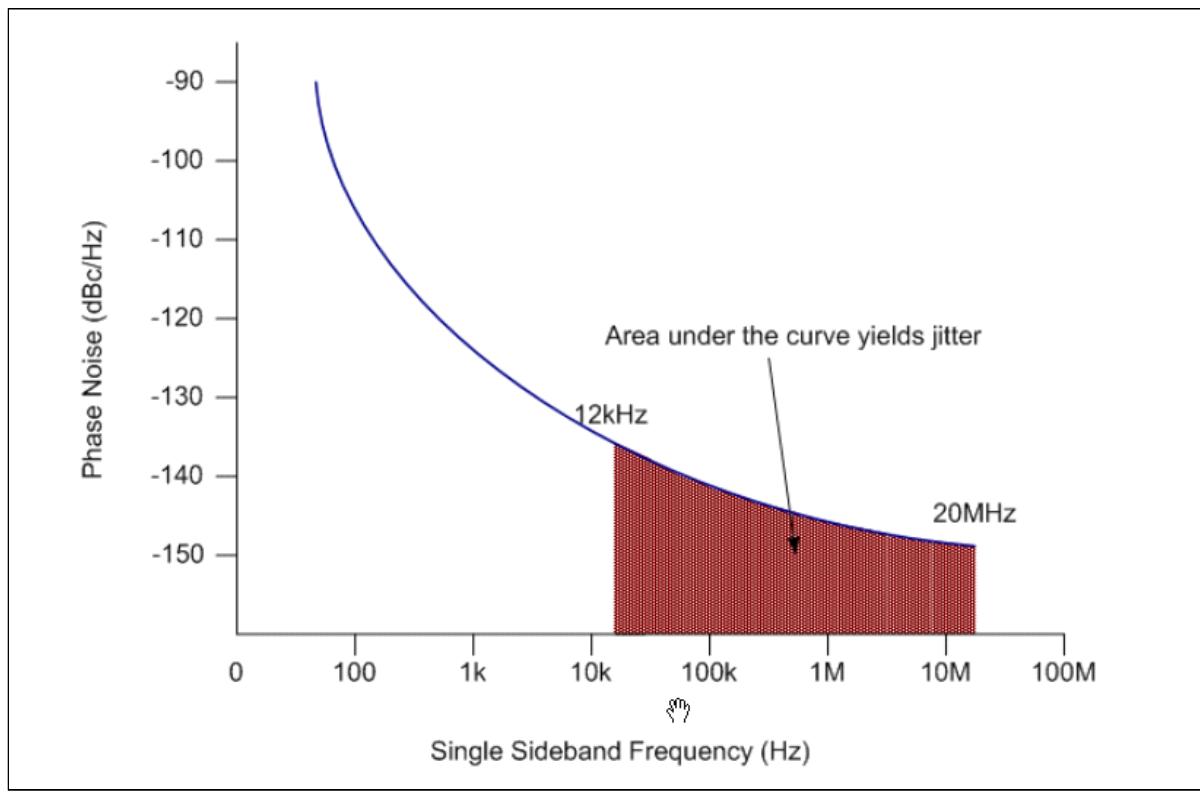

## RMS Phase Jitter

When looking at oscillator phase noise plots, certain sideband frequency ranges are of interest. In telecommunications, the noise power in the range 12kHz to 20MHz is very important for timing performance. Referring to [Figure 8](#) above:

$$\text{Noise Power (dBc)} = \text{Area under curve from 12kHz to 20MHz} = -63\text{dBc}$$

From the noise power  $N$  we can calculate the RMS phase jitter value in radians using the following formula:

$$\text{RMS Phase Jitter (radians)} = 2 \times \sqrt{10^{N/10}}$$

$$\text{RMS Phase Jitter} = 2 \times \sqrt{10^{-63/10}} = 0.001416 \text{ radians}$$

The jitter value in radians can be converted to RMS jitter in time units of seconds:

$$\text{RMS Jitter (secs)} = \frac{\text{Jitter (radians)}}{2 \times \pi \times f}$$

In this example, the oscillator frequency  $f = 311\text{MHz}$ . So we get:

$$\text{RMS Jitter} = \frac{0.001416}{2 \times \pi \times 311\text{MHz}} = 0.72 \text{ pico seconds RMS}$$

When jitter is derived from phase noise plots, the sideband frequency interval over which it is calculated must always be specified.

## Summary

This note has described the following:

- How RMS jitter (time domain) is quantified based on standard deviation of a Gaussian distribution.
- How peak-to-peak jitter (time domain) can be predicted from the RMS jitter using multipliers related to BER requirements.
- How RMS phase jitter in frequency domain is calculated using phase noise plots.

The following appendix gives examples of how to check jitter specifications and system requirements.

## Appendix: Checking Jitter Specifications and System Requirements

**Example 1:** Based on the FPGA specifications below, is it possible to use the clock output from the StratixV to clock a Broadcom 1GE Phy?

Phy clock input specified at 1.5ps RMS max.

Altera FPGA	PLL Type	Input Frequency	PLL BW	Output Frequency Range	Jitter
StratixV E, GX, GS, GT	Fractional or Integer VCO 600-1300/1600MHz (speed grade dependent)	Min 5 MHz Max 650 MHz to 800 MHz (speed grade dependent)	From 300KHz to 4MHz	Max from 553 MHz to 800 MHz (speed grade dependent)	Max from Dedicated Clock Output: 175ps to 250ps max pk-pk jitter Max from GPIO: 600ps max pk-pk jitter

The BER requirement for 1GE (gigabit Ethernet) is  $1 \times 10^{-12}$ . From [Table 1](#) previously (*BER and RMS Multiplier N*), pk-pk jitter is approximately equal to  $14 \times$  RMS jitter. Therefore we have:

$$\text{StratixV jitter (min)} = 175/14 = 12.5\text{ps RMS}$$

$$\text{StratixV jitter (max)} = 250/14 = 17.9\text{ps RMS}$$

As can be seen this is much larger than can be tolerated by the Broadcom Phy, and another clock source will be required.

**Example 2:** Can the StratixV clocks be used to provide timing for PCIe Gen2 systems?

### PCIe Gen2 Clock Requirements

Transmitter REFCLOCK Phase Noise (622MHz)	100Hz	—	—	-70	—	—	-70	—	—	-70	dBc/Hz
	1kHz	—	—	-90	—	—	-90	—	—	-90	dBc/Hz
	10kHz	—	—	-100	—	—	-100	—	—	-100	dBc/Hz
	100kHz	—	—	-110	—	—	-110	—	—	-110	dBc/Hz
	$\geq 1\text{MHz}$	—	—	-120	—	—	-120	—	—	-120	dBc/Hz
Transmitter REFCLOCK Phase Jitter (100MHz)	10kHz to 1.5MHz (PCIe)	—	—	3	—	—	3	—	—	3	ps (rms)

- PCIe Gen2 100MHz reference clock is **3ps** RMS jitter max from 10KHz to 1.5MHz.
- The 622.08MHz TX reference clock is **1.44ps** RMS jitter max from 100Hz to 1MHz.

From the previous example, best case, the internal PLLs of the StratixV generate a clock with max RMS jitter of **12.5ps**.

As the reference clocks of the StratixV transceivers require 1.44ps or 3ps in the above examples, the internal StratixV PLLs are not able to clock them.

### Sources

[Figure 4](#) and [Figure 5](#) are from an internal IDT training presentation ***Jitter - Theory and Measurements*** by Alberto Uribeita

[Figure 7](#) is from an IDT white paper ***RMS Phase Jitter*** by Alberto Uribeita

[Figure 8](#) is from the paper titled ***Phase Noise and Jitter Characterization in Oscillator Applications*** by Thomas Fischer at Texas Instruments



## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
  - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
  - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Disclaimer Rev.5.0-1)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

## Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.