

# SW Example: DA1468x Example Setup

These instructions assume you already have a workspace setup. If you need to do so, please download UM-B-047 User Manual.

Note: Make sure the workspace path is the root of your SDK extraction

1. **Download** the example from the support portal

## Software Applications & Examples

[SW Example: Channel Map Reporter](#)

[SW Example: DA1468x BLE customer service](#)


[SW Example: Generating PWM pulses via TIMER0](#)

[SW Example: Software update from USB mass storage](#)


[SW Example: SW RTC Implementation](#)

[SW Example: UART DMA circular buffer](#)

2. **Extract** the example archive

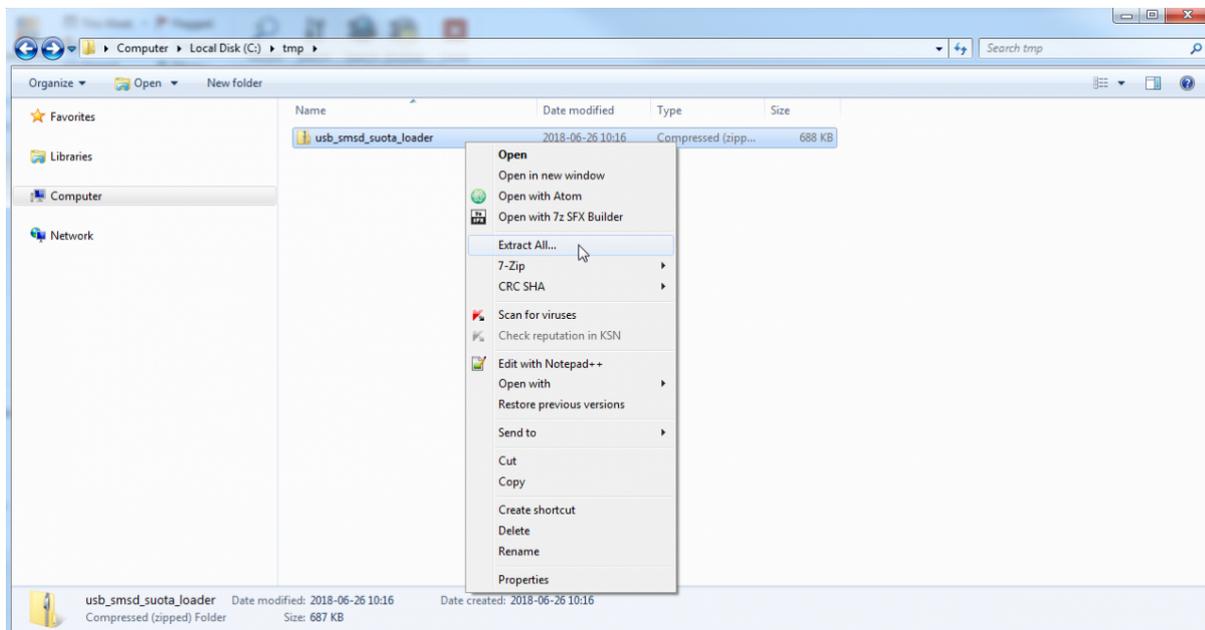

3. **Import** the example in your workspace

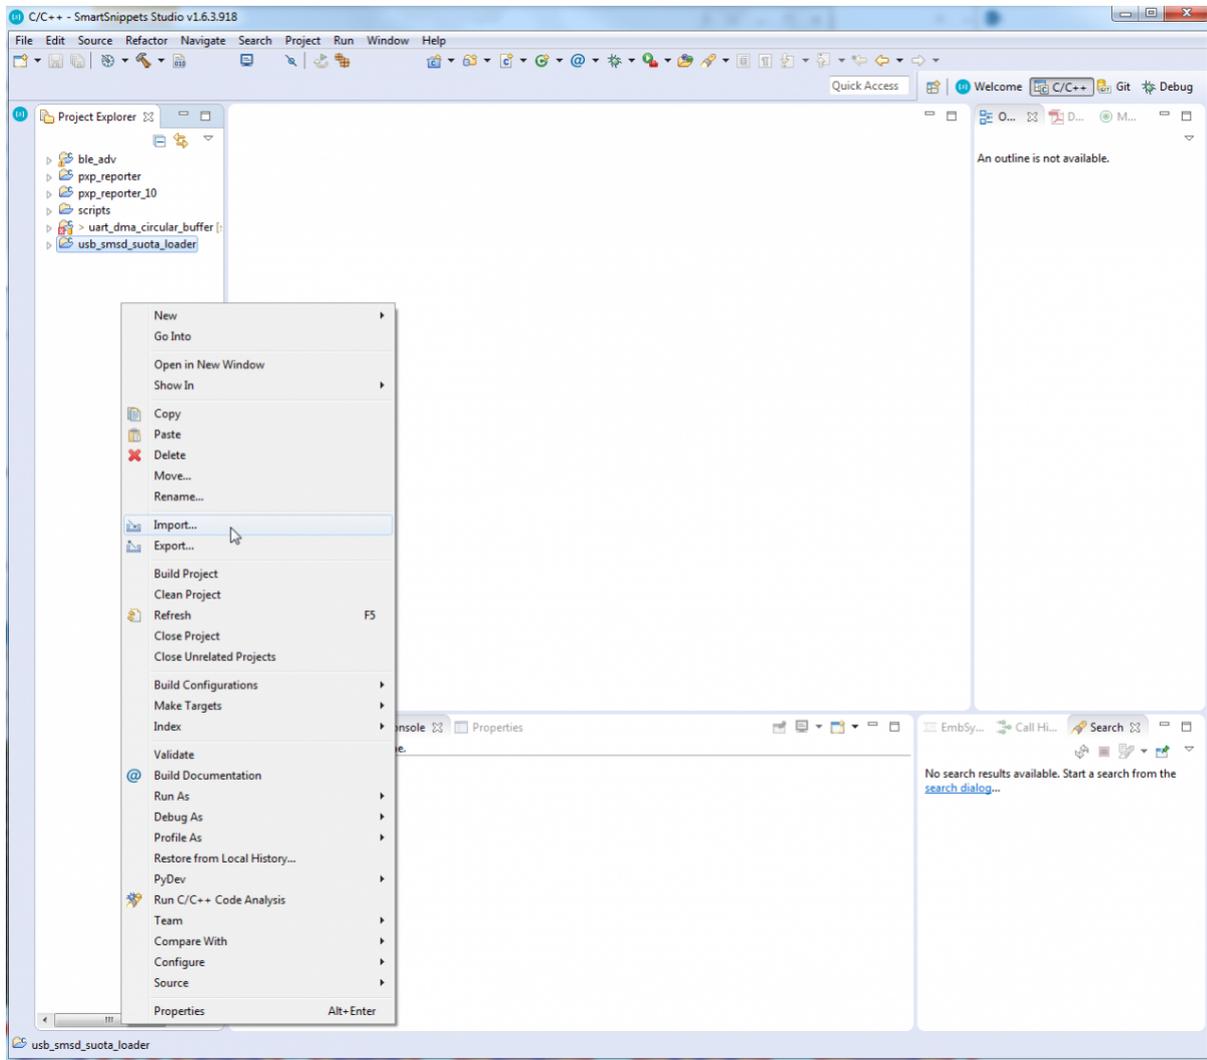

#### 4. Compile the example

