

Vdet0 vs Topr (LVD0)


Prepared on Oct. 20, 2006

R5F21258SNFP(Topr=-20 to 85degrees C)

R5F21258SDFP(Topr=-40 to 85degrees C)

VCA27 = VCA26 = 0 VCA25 = 1

— Vdet0

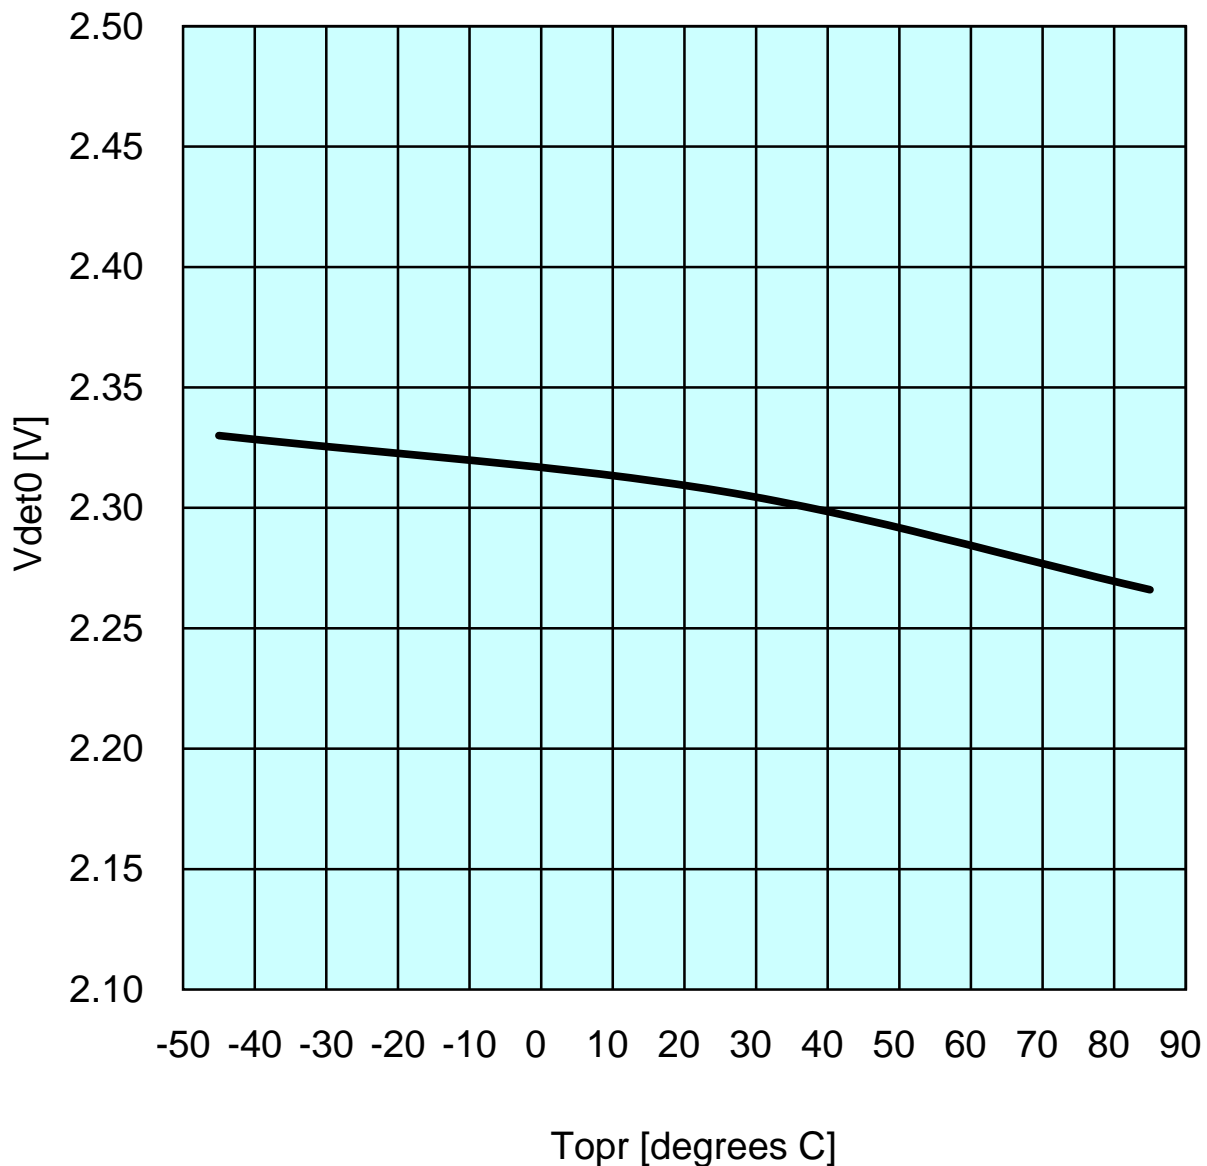

The mentioned value is only for your reference. The value is for the arbitrary samples and does not guarantee the product's characteristics.