To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: http://www.renesas.com

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (http://www.renesas.com)

Send any inquiries to http://www.renesas.com/inquiry.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: “Standard”, “High Quality”, and “Specific”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as “Specific” without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as “Specific” or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is “Standard” unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.

   “Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.

   “High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.

   “Specific”: Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

78K0R/Kx3 Microcontroller
Sample Program
Operation Manual
(External Event Counter (Timer Array Unit), ASM Source)

This software is for reference only and NEC Electronics does not guarantee its operation.
Thoroughly evaluate this software on your set prior to use.

ZUD-CC-07-0073-E
January, 2008

1st Product Solution Group, Multipurpose Microcomputer Systems Division,
Microcomputer Operations Unit
NEC Electronics Corporation

CONTENTS

1. OVERVIEW

This manual explains the sample program functions of the external event counter for the 78K0R/Kx3.

In this sample program, the rising edge of P17 is detected by using timer channel 2. The main clock whose frequency is $1/2^5$ is used as the count clock. The valid number of times of counting the edge is 10, and INTTM02 is output at the 10th count. When INTTM02 is output, output pin P16 performs a toggle output.

This sample program uses the rising edge of P17 as an external event and toggles the output of P16 when INTTM02 is output.

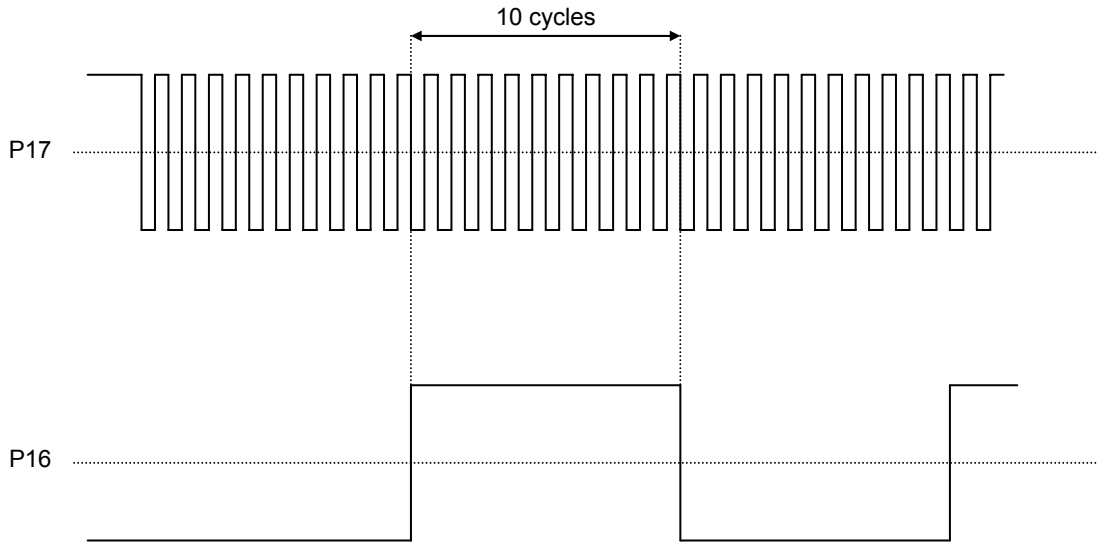

2. RESOURCES USED

Resource	Description	Remark
Main clock specification	Internal high-speed oscillator used (8 MHz (TYP.))	Supplied to CPU and peripheral hardware
	High-speed system clock used (20 MHz)	Oscillated by initial processing
Subclock	XT1 (32.768 kHz)	Oscillated by initial processing
Related hardware	Peripheral enable register 0 (PER0)	Controls the input clock of the timer array unit.
	Timer clock select register 0 (TPS0)	Operation clock: CK01 ($1/2^5$), 0.25 MHz (4.0 μs)
	Timer mode register 02 (TMR02)	Operation clock: CK01, 8 MHz (0.125 μs)
	Timer data register 02 (TDR02)	Valid edge detection counts: 10 counts
	Timer output mode register 0 (TOM0)	Channel 2 toggle operation mode
	Timer output level register 0 (TOL0)	Channel 2 positive logic output (active high)
	Timer output register 0 (TO0)	Channel 2 timer output value is “0”.
	Timer channel start register 0 (TS0)	
	Timer channel stop register 0 (TTO)	
	Port mode register (PM1)	
	Port register (P1)	
I/O	Input: P17 Output: P16	
Interrupt	Timer interrupt	
Others	Not used	

3. SOFTWARE CONFIGURATION

Files

File Name	Processing Outline
K0R_vct.asm	Vector processing
K0R_init.asm	Initialization processing
K0R_main.asm	Main processing
K0R_sfr_set.asm	External event counter

4. FUNCTION EXPLANATIONS

[File name]

K0R_main.asm

Function

Function Name	Processing Outline	Argument	Return Value
MMA_STRT	Main routine	None	None

Function explanations

Function name	MMA_STRT
Processing	Main routine
Argument	–
Return value	–
Description	Sets P16 to the output mode. Executes initialization processing and then starts external event counter measurement. P16's status is reversed when the interrupt request flag of timer channel 02 is set to ON. Then the interrupt request flag is cleared.
Remark	–.

[File name]

K0R_sfr_set.asm

Functions

Function Name	Processing Outline	Argument	Return Value
STM_EINI	Initializes external event counter.	None	None
STM_ESTT	Starts external event counter operation.	None	None
STM_ESTP	Stops external event counter operation.	None	None

Function explanations

Function name	STM_EINI
Processing	Initializes external event counter.
Argument	–
Return value	–
Description	Initializes the timer array unit. • Supplies a timer array unit input clock. • Sets the clock frequency to 4 μs. Initializes timer channel 2. • Operation mode: Operation clock CK01, selection of the valid edge of the TI02 pin input, rising edge detection, event counter mode • Output mode: Toggle operation mode • Sets the valid edge detection count to 10.
Remark	This function is called after reset.

Function name	STM_ESTT
Processing	Starts external event counter operation.
Argument	–
Return value	–
Description	Starts timer channel 2 operation.
Remark	–

Function name	STM_ESTP
Processing	Stops external event counter operation.
Argument	–
Return value	–
Description	Stops timer channel 2 operation.
Remark	–

5. FLOWCHARTS

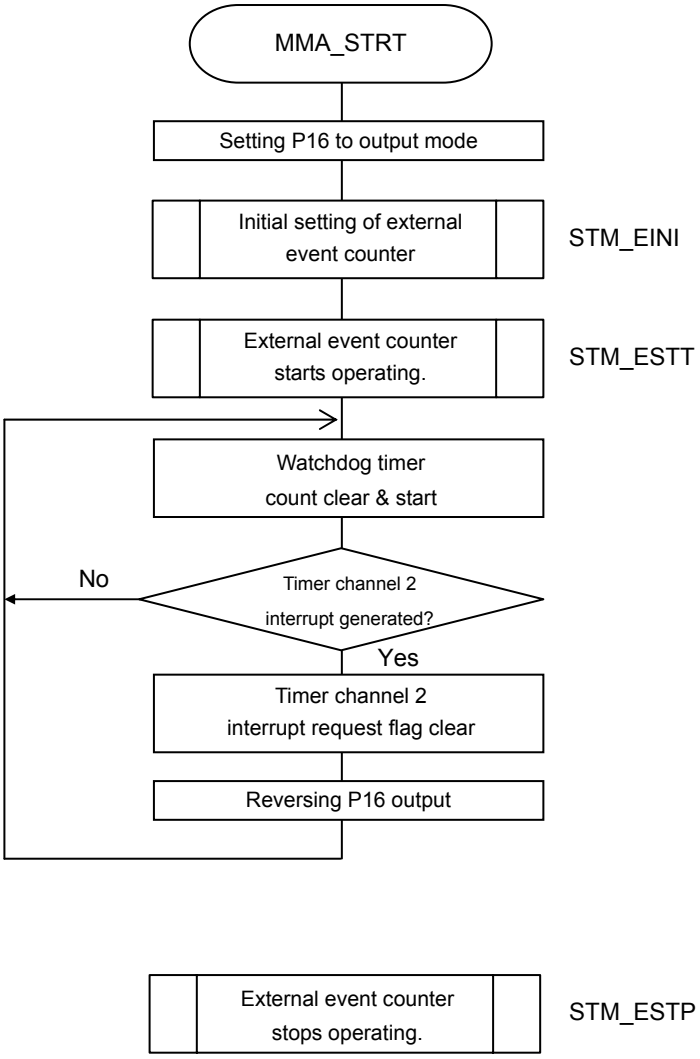

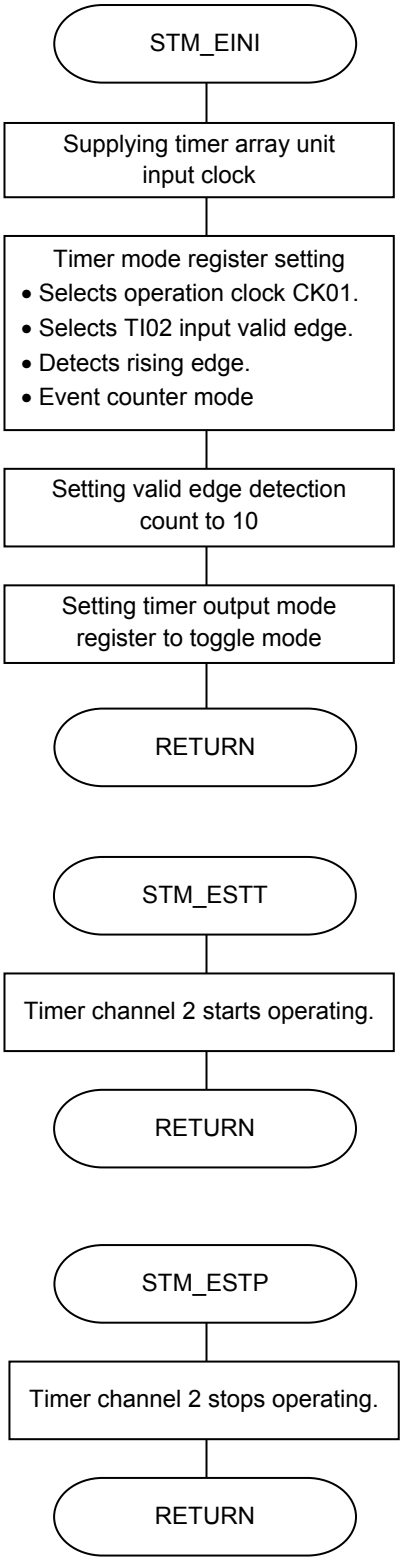
STM_EINI
Supplying timer array unit input clock
Timer mode register setting
• Selects operation clock CK01.
• Selects TI02 input valid edge.
• Detects rising edge.
• Event counter mode
Setting valid edge detection count to 10
Setting timer output mode register to toggle mode
RETURN
STM_ESTT
Timer channel 2 starts operating.
RETURN
STM_ESTP
Timer channel 2 stops operating.
RETURN