

M16C/65 Group A/D Converter Using Repeat Mode

R01AN0126EJ0100 Rev.1.00 Mar 15, 2011

#### 1. Abstract

This document describes the setting procedure to use the A/D converter in repeat mode.

### 2. Introduction

The application example described in this document applies to the following microcomputer (MCU):

• MCU: M16C/65 Group

This application note can be used with other M16C Family MCUs which have the same special function registers (SFRs) as the above group. Check the manual for any modifications to functions. Careful evaluation is recommended before using the sample code described in this application note.

## 3. Operation in Repeat Mode

This section describes operation when using the A/D converter in repeat mode with a software trigger.

- (1) When the ADST bit in the ADCON0 register is set to 1 (A/D conversion start), A/D conversion starts.
- (2) After completing A/D conversion, the value in the successive conversion register (conversion result) is transferred to the ADi register (i = 0 to 7). The IR bit in the ADIC register does not become 1 (interrupt requested).
- (3) A/D conversion continues until the ADST bit in the ADCON0 register is set to 0 by a program. The conversion result is transferred to the ADi register every time A/D conversion is completed.

Figure 3.1 shows Operation Timing in Repeat Mode.

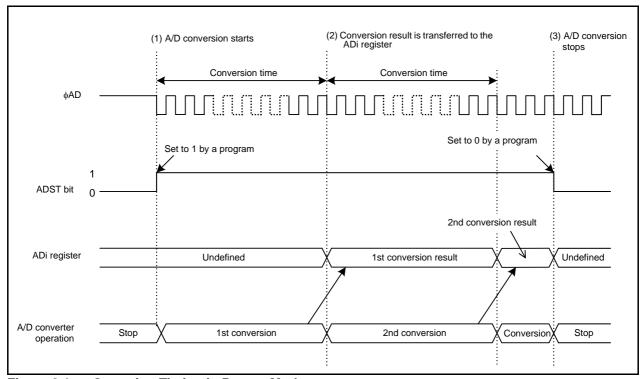


Figure 3.1 Operation Timing in Repeat Mode

## 4. A/D Conversion Time

This section describes how to calculate A/D conversion time.

### 4.1 A/D Conversion Cycle

Table 4.1 shows Cycles of A/D Conversion Item. A/D conversion time is described below.

Start processing time depends on which  $\phi AD$  is selected.

A/D conversion starts after the start processing time elapses by setting the ADST bit in the ADCON0 register to 1 (A/D conversion start). When reading the ADST bit before starting A/D conversion, 0 (A/D conversion stop) is read. In repeat mode, inter-execution processing time is inserted between A/D conversions.

#### • Repeat mode:


Start processing time + (A/D conversion execution time + inter-execution processing time + A/D conversion execution time + inter-execution processing time + ...)

Table 4.1 Cycles of A/D Conversion Item

A/D Conversion Item		Number of Cycles
	φAD = fAD	1 to 2 cycles of fAD
	φAD = fAD divided by 2	2 to 3 cycles of fAD
Start processing time	φAD = fAD divided by 3	3 to 4 cycles of fAD
Start processing time	φAD = fAD divided by 4	3 to 4 cycles of fAD
	φAD = fAD divided by 6	4 to 5 cycles of fAD
	φAD = fAD divided by 12	7 to 8 cycles of fAD
A/D conversion execution	Open-circuit detection disabled	40 cycles of φAD
time	Open-circuit detection enabled	42 cycles of φAD
Inter-execution processing time		1 cycle of φAD
End processing time		2 to 3 cycles of fAD

## 4.2 Repeat Mode, Repeat Sweep Mode 0, and Repeat Sweep Mode 1

In repeat mode, repeat sweep mode 0, and repeat sweep mode 1, when reading the ADi register during the period when the ADi register value is rewritten (i = 0 to 7), an undefined value may be read. Read the ADi register several times to determine whether the read value is valid. The period for reading an undefined value is one cycle of fAD.

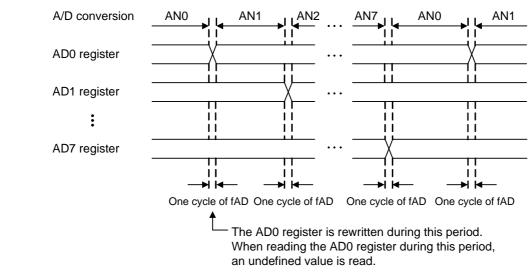

The above diagram assumes the following:

- Bits MD1 to MD0 in the ADCON0 register are 11b, and the MD2 bit in the ADCON1 register is 0 (repeat sweep mode 0).
- Bits ADGSEL1 to ADGSEL0 in the ADCON2 register are 00b (groups AN0 to AN7 selected).
- Bits SCAN1 to SCAN0 in the ADCON1 register are 11b (AN0 to AN7 (8 pins) selected).

Figure 4.1 Period When the ADi Register Value is Rewritten

### 4.3 A/D Operation Clock Frequencies

Table 4.2 lists the A/D Operation Clock Frequencies.

#### Table 4.2 A/D Operation Clock Frequencies (1)

 $V_{CC1} = AV_{CC} = 3.0$  to  $5.5 \text{ V} \ge V_{CC2} \ge V_{REF}$ ,  $V_{SS} = AV_{SS} = 0$  V at  $T_{opr} = -20^{\circ}\text{C}$  to  $85^{\circ}\text{C}/-40^{\circ}\text{C}$  to  $85^{\circ}\text{C}$  unless otherwise specified.

Symbol	Symbol Parameter		Measuring Condition	Standard			Unit
Gymbol			Weasumg condition		Тур.	Max.	Offic
	A/D operating clock frequency  AND 0 to ANY input, ANEX0 to ANEX1 input  ANO_0 to ANO_7 input, ANO_0 to	ANEXO to ANEX1	$4.0 \text{ V} \le \text{V}_{\text{CC1}} \le 5.5 \text{ V}$	2		25	MHz
			$3.2 \text{ V} \le \text{V}_{\text{CC1}} \le 4.0 \text{ V}$	2		16	MHz
φAD			$3.0 \text{ V} \le \text{V}_{\text{CC1}} \le 3.2 \text{ V}$	2		10	MHz
ΨΛΟ		input, AN2_0 to	$4.0 \text{ V} \le \text{V}_{CC2} \le 5.5 \text{ V}$	2		25	MHz
			$3.2 \text{ V} \le \text{V}_{CC2} \le 4.0 \text{ V}$	2		16	MHz
		$3.0 \text{ V} \le \text{V}_{\text{CC2}} \le 3.2 \text{ V}$	2		10	MHz	

Note:

1. Use when  $AV_{CC} = V_{CC1}$ .

## 5. Settings

Figure 5.1 shows the Setting Procedure When Using Repeat Mode. Refer to the User's Manual: Hardware for details on registers.

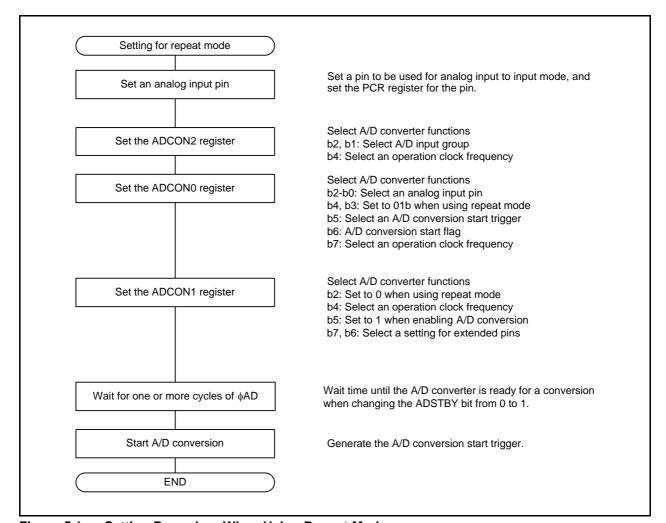


Figure 5.1 Setting Procedure When Using Repeat Mode

# 6. Sample Code

A sample code can be downloaded from the Renesas Electronics website. To download, click "Application Notes" in the left-hand side menu of the M16C Family page.

### 6.1 Sample Code Operation

In repeat mode, functions listed in Table 6.1 can be selected. The settings used in the sample code are marked with "\sqrt{n}" in the table. The sample code operation is as follows; set the CPU clock as the main clock with no division by executing functions for CPU initialization, transition from 125 kHz on-chip oscillator mode to high-speed mode, then execute the function for A/D conversion in repeat mode. Refer to 6.2 Function Tables for details on functions.

Table 6.1 Sample Code Settings

Functions	Settings		
	✓	f1	
		f1 divided by 2	
		f1 divided by 3	
		f1 divided by 4	
		f1 divided by 6	
Operating clock		f1 divided by 12	
		fOCO40M divided by 2	
		fOCO40M divided by 3	
		fOCO40M divided by 4	
		fOCO40M divided by 6	
		fOCO40M divided by 12	
A/D conversion start conditions	✓	Software trigger	
A/D conversion start conditions		Trigger by ADTRG	
	✓	1 pin from AN0 to AN7	
Analog input pins		1 pin from ANO_0 to ANO_7	
		1 pin from AN2_0 to AN2_7	
	✓	Not used	
Extended analog pins		ANEX0 pin	
		ANEX1 pin	
A/D open-circuit detection assist function	✓	Not used	

# 6.2 Function Tables

## **Function Tables for This Document**

Declaration	void ad_repeat(void)
Outline	A/D conversion in repeat mode
Argument	None
Variable	None
Returned value	None
Function	Set the A/D converter to repeat mode and set the functions as marked in Table 6.1. Set an analog input pin to AN0, and set P10 to input mode. Generate a software trigger and start A/D conversion of the input voltage at the AN0 pin.

Declaration	unsigned short read_ad_register(unsigned char ch)		
Outline	Read A/D register		
Argument	unsigned char ch Select the A/D register to be read		
Variable	None		
Returned value	unsigned short read_ad_data	Value read from the A/D register	
Function	the read values. When the values match	wing may occur: ding the ADi register four times.	

Declaration	void read_invalid_data(void)		
Outline	None		
Argument	None		
Variable	None		
Returned value	None		
Function	This function is only for loop processing. Add a program as required.		

## Other Function Tables

Declaration	void mcu_init(void)	
Outline	CPU initialization	
Argument	None	
Variable	None	
Returned value	None	
Function	Set to single-chip mode. Switch the CPU clock from 125 kHz on-chip oscillator mode divided-by-8 to 125 kHz on-chip oscillator mode divided-by-1.	

Declaration	void highspeed_from_foco125k(void)		
Outline	Transition from 125 kHz on-chip oscillator mode to high-speed mode		
Argument	None		
Variable	None		
Returned value	None		
Function	Switch the CPU clock from 125 kHz on-chip oscillator mode (fOCO-S divided by 1) to high-speed mode.		

### 7. Reference Documents

M16C/65 Group User's Manual: Hardware Rev.1.10

The latest version can be downloaded from the Renesas Electronics website.

Technical Update/Technical News

The latest information can be downloaded from the Renesas Electronics website.

M16C Series/R8C Family C Compiler Package V.5.45 C Compiler User's Manual Rev.3.00 The latest version can be downloaded from the Renesas Electronics website.

# **Website and Support**

Renesas Electronics website http://www.renesas.com/

Inquiries

http://www.renesas.com/inquiry

Revision History	M16C/65 Group Using Repeat Mode
	1

Rev. Date			Description
itev.	Date	Page	Summary
1.00	2011.03.15	_	First edition issued

All trademarks and registered trademarks are the property of their respective owners.

### General Precautions in the Handling of MPU/MCU Products

The following usage notes are applicable to all MPU/MCU products from Renesas. For detailed usage notes on the products covered by this manual, refer to the relevant sections of the manual. If the descriptions under General Precautions in the Handling of MPU/MCU Products and in the body of the manual differ from each other, the description in the body of the manual takes precedence.

#### 1. Handling of Unused Pins

Handle unused pins in accord with the directions given under Handling of Unused Pins in the manual.

The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

#### 2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.

In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed.

In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

#### 3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

 The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

#### 4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

— When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

#### 5. Differences between Products

Before changing from one product to another, i.e. to one with a different part number, confirm that the change will not lead to problems.

— The characteristics of MPU/MCU in the same group but having different part numbers may differ because of the differences in internal memory capacity and layout pattern. When changing to products of different part numbers, implement a system-evaluation test for each of the products.

#### Notice

- 1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
- 2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or
- 3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
- 4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the
- 5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
- 6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein
- 7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the sas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
  - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools personal electronic equipment; and industrial robots
  - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
  - "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
- 8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult please evaluate the safety of the final products or system manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics



#### SALES OFFICES

#### Renesas Electronics Corporation

http://www.renesas.com

Refer to "http://www.renesas.com/" for the latest and detailed information

Renesas Electronics America Inc. 2880 Scott Boulevard Santa Clara, CA 95050-2554, U.S.A. Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited 1101 Nicholson Road, Newmarket, Ontario L3Y 9C3, Canada Tel: +1-905-898-5441, Fax: +1-905-898-3220

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-565-100, Fax: +44-1628-585-900 Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany Tel: +49-211-65030, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.
7th Floor, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100083, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.
Unit 204, 205, AZIA Center, No. 1233 Lujiazui Ring Rd., Pudong District, Shanghai 200120, China
Tel: +86-21-5877-1818, Fax: +86-21-6887-7589 / -7898

Renesas Electronics Hong Kong Limited
Unit 1601-1613, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2868-9318, Fax: +852 2886-9022/9044

Renesas Electronics Taiwan Co., Ltd.
7F, No. 363 Fu Shing North Road Taipei, Taiwa
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd. 1 harbourFront Avenue, #06-10, keppel Bay Tower, Singapore 098632 Tel: +65-6213-0200, Fax: +65-6278-8001

Renesas Electronics Malaysia Sdn.Bhd.
Unit 906, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics Korea Co., Ltd.
11F., Samik Lavied or Bidg., 720-2 Yeoksam-Dong, Kangnam-Ku, Seoul 135-080, Korea Tel: +82-2-558-3737, Fax: +82-2-558-5141

© 2011 Renesas Electronics Corporation. All rights reserved.