

To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
 - "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

DESCRIPTION

The 7643 group is the 8-bit microcomputer based on the 7600 series core (740 family core compatible) technology.

The 7643 group is designed for PC peripheral devices, including the USB, DMAC, Serial I/O, UART, Timer and so on.

FEATURES

<Microcomputer mode>

- Basic machine-language instructions 71
- Minimum instruction execution time 83 ns
(at 24 MHz oscillation frequency)
- Memory size
 - ROM 32 Kbytes
 - RAM 1 Kbytes
- Programmable input/output ports 66
- Software pull-up resistors Built-in
- Interrupts 14 sources, 14 vectors
(external 3 including Key input, internal 10, software 1)
- USB function control unit
 - Transceiver Full-Speed USB2.0 specification
- Timers 8-bit X 3 (Timers 1, 2, 3)
- Serial Interface
 - Serial I/O 8-bit X 1
 - UART 8-bit X 1
- DMAC 2 channels
- Clock generating circuit Built-in
(connect to external ceramic resonator or quartz-crystal oscillator)
- Power source voltage
 - At 24 MHz oscillation frequency, $\phi = 12$ MHz 4.15 to 5.25 V
 - At 24 MHz oscillation frequency, $\phi = 6$ MHz 3.00 to 3.60 V
- Operating temperature range -20 to 70°C
- Packages
 - FP PRQP0080GB-A (80-pin QFP)
 - HP PLQP0080KB-A (80-pin LQFP)

<Flash memory mode>

- Power source voltage
 - At 24 MHz oscillation frequency, $\phi = 12$ MHz 4.15 to 5.25 V
 - At 24 MHz oscillation frequency, $\phi = 6$ MHz 3.00 to 3.60 V
- Program/Erase voltage
 - VCC = 4.50 V to 5.25 V, or 3.00 V to 3.60 V
 - VPP = 4.50 V to 5.25 V
- At 24 MHz oscillation frequency, $\phi = 6$ MHz (See Table 20.)
- Memory size
 - Flash ROM 32 Kbytes
 - RAM 2.5 Kbytes
- Flash memory mode 3 modes
 - Parallel I/O mode
 - Standard serial I/O mode
 - CPU rewrite mode
- Programming method Programming in unit of byte
- Erasing method
 - Batch erasing
 - Block erasing
- Program/Erase control by software command
- Command number 6 commands
- Number of times for programming/erasing 100
- ROM code protection
 - Available in parallel I/O mode and standard serial I/O mode
- Operating temperature range (at programming/erasing) Normal temperature

APPLICATION

Audio, musical instrument, printer, scanner, modem, other PC peripheral devices

Notes

1. The specifications of this product are subject to change because it is under development. Inquire the use of Renesas Technology Corporation.
2. The flash memory version cannot be used for application embedded in the MCU card.


PIN CONFIGURATION (TOP VIEW)**Package type : PRQP0080GB-A (80P6N-A)**

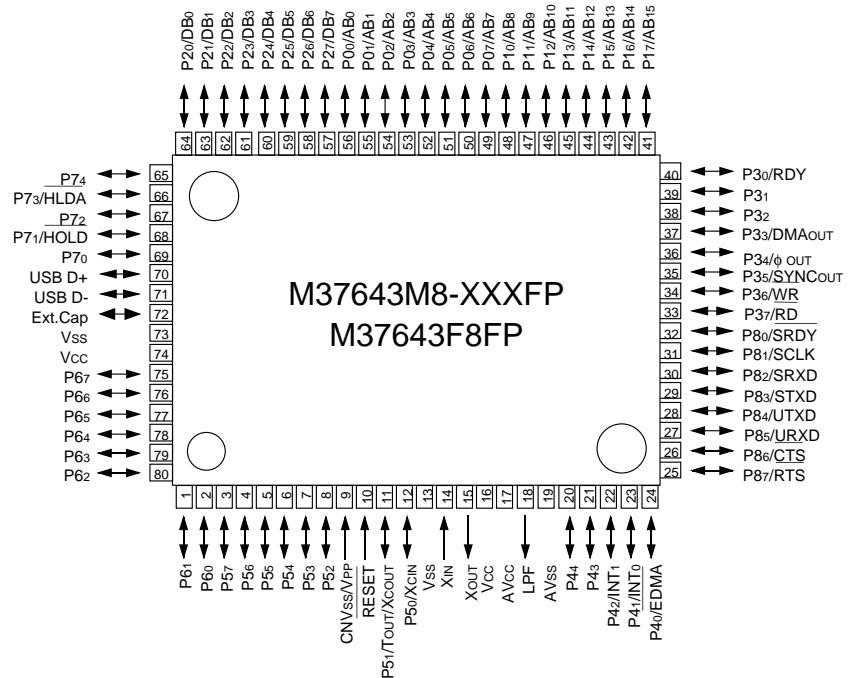Fig. 1 M37643M8-XXXFP, M37643F8FP pin configuration

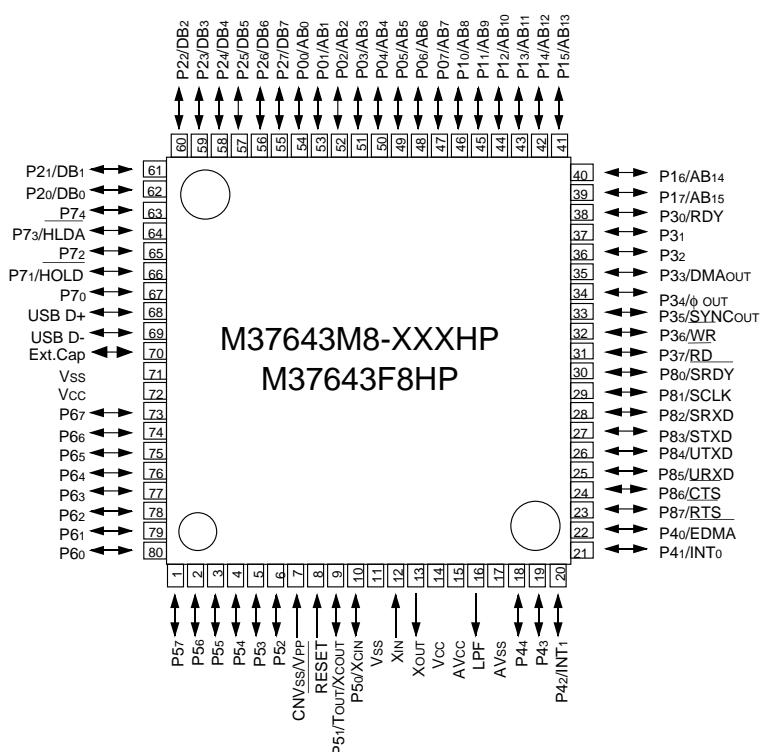
**Package type : PLQP0080KB-A (80P6Q-A)**

Fig. 2 M37643M8-XXXHP, M37643F8HP pin configuration

FUNCTIONAL BLOCK DIAGRAM (Package: PRQP0080GB-A)

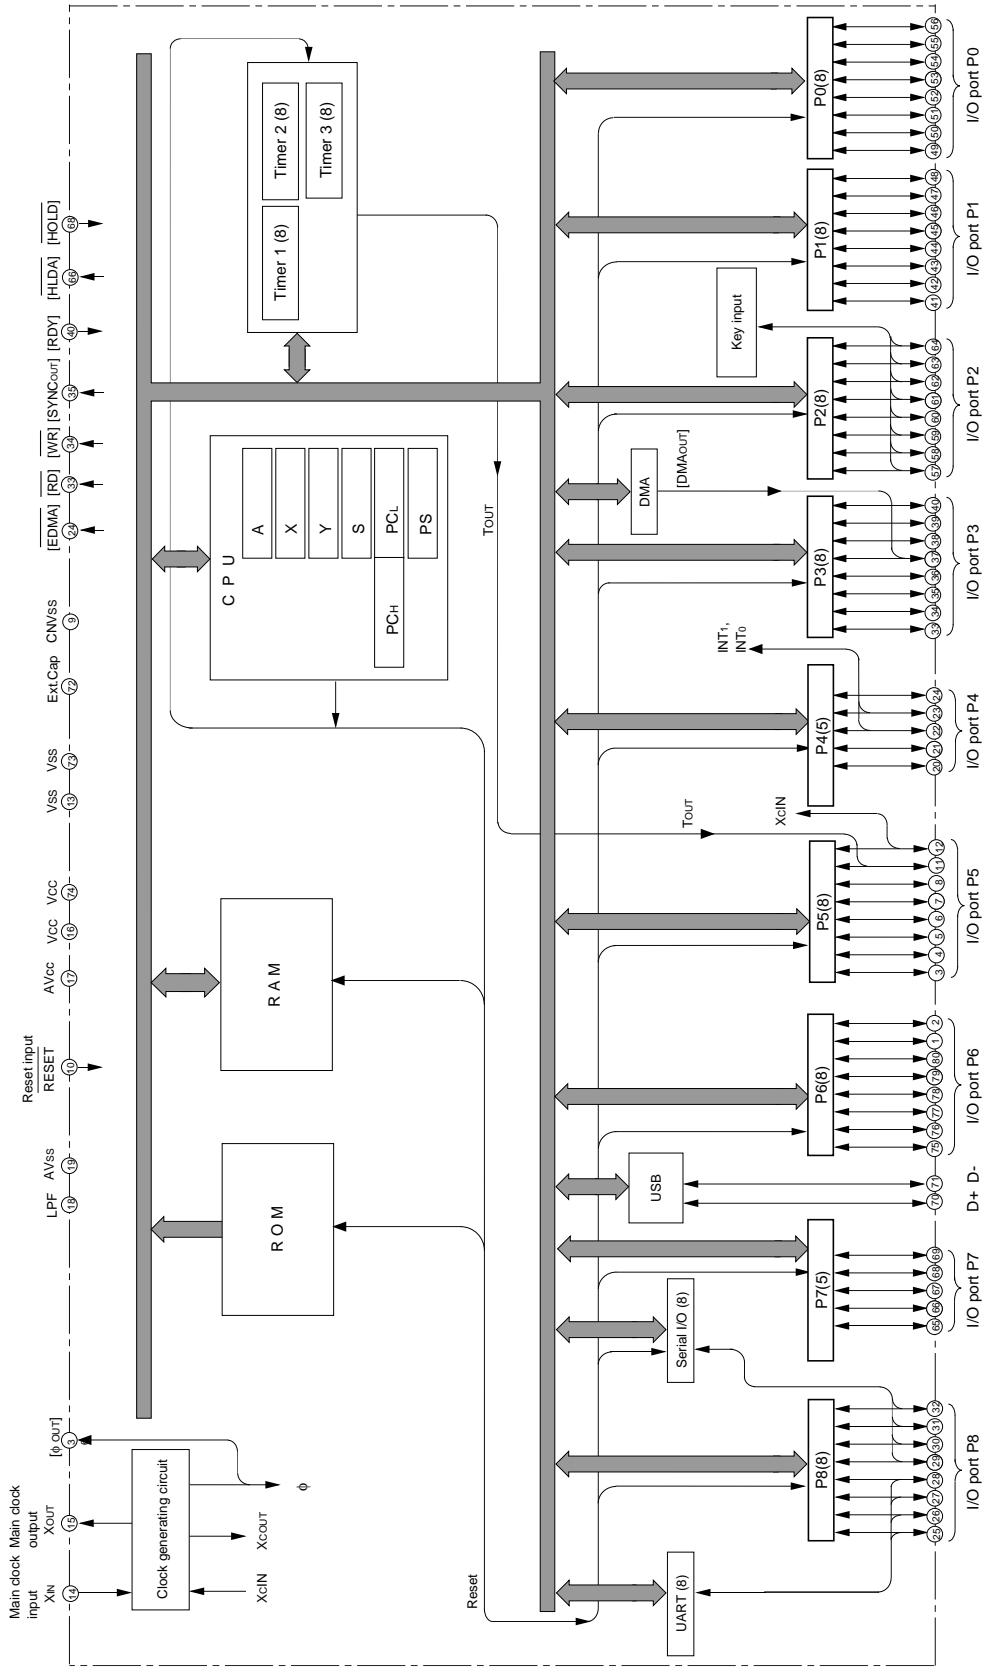


Fig. 3 Functional block diagram

PIN DESCRIPTION

Table 1 Pin description (1)

Pin	Name	Function	Function except a port function
Vcc, Vss	Power source	• Apply 4.15 V – 5.25 V for 5 V version or 3.00 V – 3.60 V for 3 V version to the Vcc pin. Apply 0 V to the Vss pin.	
CNVss/VPP	CNVss	• This controls the MCU operating mode. Connect this pin to Vss. If connecting this pin to Vcc, the internal ROM is inhibited. In the flash memory version this pin functions as a VPP power supply input pin.	
AVss/AVcc	Analog power supply	• These pins are the power supply inputs for analog circuitry.	
RESET	Reset input	• Reset input pin for active “L.”	
XIN	Clock input	• Connect a ceramic resonator or a quartz-crystal oscillator between the XIN and XOUT pins to set the oscillation frequency.	
XOUT	Clock output	• If an external clock is used, connect the clock source to the XIN pin and leave the XOUT pin open.	
LPF	LPF	• Loop filter for the frequency synthesizer.	
Ext. Cap.	3.3 V line power supply	• It is a capacitor connection pin for built-in DC-DC converter. At Vcc=5 V, use built-in DC-DC converter by permitting a USB line driver and connect a capacitor. Refer to "Notes on use" for details. Built-in DC-DC converter cannot be used at Vcc = 3.3 V. Supply 3.3V power supply to this pin from the externals.	
USB D+	USB D+	• USB D+ voltage signal port. Connect a 27 to 33 Ω (recommended) resistor in series.	
USB D-	USB D-	• USB D- voltage signal port. Connect a 27 to 33 Ω (recommended) resistor in series.	
P00/AB0–P07/AB7	I/O port P0	• 8-bit I/O port. • CMOS compatible input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output. • When connecting an external memory, these function as the address bus.	
P10/AB8–P17/AB15	I/O port P1	• 8-bit I/O port. • CMOS compatible input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output. • When connecting an external memory, these function as the address bus.	
P20/DB0–P27/DB7	I/O port P2	• 8-bit I/O port. • CMOS compatible input level or VIHL input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output. • When connecting an external memory, these function as the data bus.	• Key-on wake-up interrupt input pin
P30/RDY, P31, P32, P33/DMAOUT, P34/φ OUT, P35/SYNCOUT, P36/WR, P37/RD	I/O port P3 (See Remarks.)	• 8-bit I/O port. • CMOS compatible input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output. • When connecting an external memory, these function as the control bus.	• External memory control pin
P40/EDMA, P41/INT0, P42/INT1, P43,P44	I/O port P4	• 8-bit I/O port. • CMOS compatible input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output. • When connecting an external memory, these function as the control bus.	• External memory control pin • External interrupt pin
P50/XCIN, P51/TOUT/XCOUT, P52,P53,P54, P55,P56,P57	I/O port P5	• 8-bit I/O port. • CMOS compatible input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output.	• Sub-clock generating input pin • Timers 1, 2 pulse output pins • Sub-clock generating output pin

Table 2 Pin description (2)

Pin	Name	Function	Function except a port function
P60–P67	I/O port P6	<ul style="list-style-type: none"> • 8-bit I/O port. • CMOS compatible input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output. 	
P70, P71/HOLD, P72, P73/HLDA, P74	I/O port P7	<ul style="list-style-type: none"> • 5-bit I/O port. • CMOS compatible input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output. 	
P80/SRDY, P81/SCLK, P82/SRXD, P83/STXD, P84/UTXD, P85/URXD, P86/CTS, P87/RTS	I/O port P8	<ul style="list-style-type: none"> • 8-bit I/O port. • CMOS compatible input level. • CMOS 3-state output structure. • I/O direction register allows each pin to be individually programmed as either input or output. 	<ul style="list-style-type: none"> • Serial I/O pin • UART pin

Remarks

•DMAOUT pin

If externally detecting the timing of DMA execution, use the signal from this pin. It is "H" level during DMA transferring. This signal is valid in the memory expansion and microprocessor modes.

•SYNCOUT pin

If externally detecting the timing of OP code fetch, use the signal from this pin. This signal is valid in the memory expansion and microprocessor modes.

PART NUMBERING

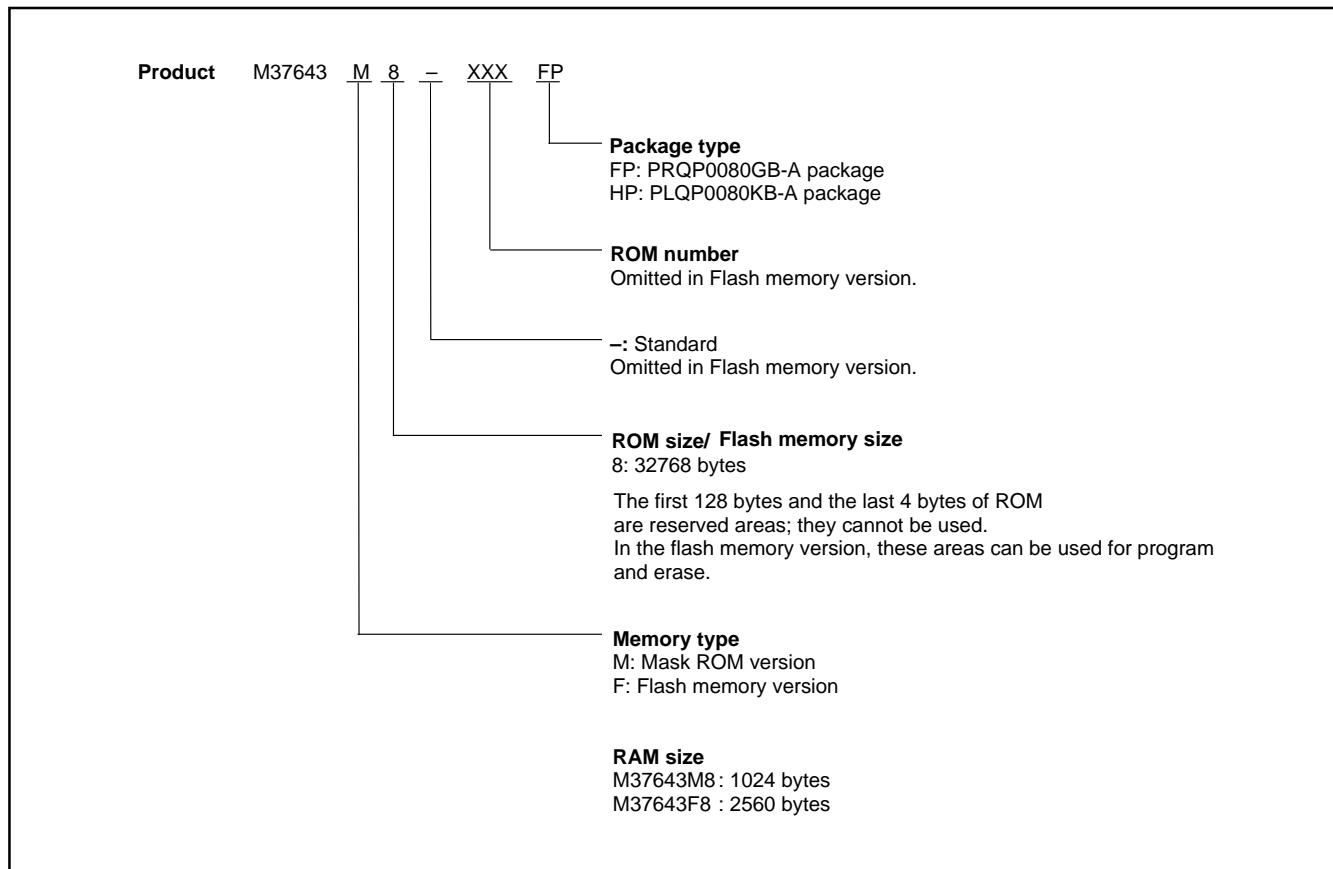


Fig. 4 Part numbering

GROUP EXPANSION

Renesas plans to expand the 7643 group as follows.

Memory Type

Supports for mask ROM and flash memory versions.

Memory Size

ROM size 32 Kbytes

RAM size 1024 to 2560 bytes

Packages

PRQP0080GB-A 0.8 mm-pitch plastic molded QFP

PLQP0080KB-A 0.5 mm-pitch plastic molded LQFP

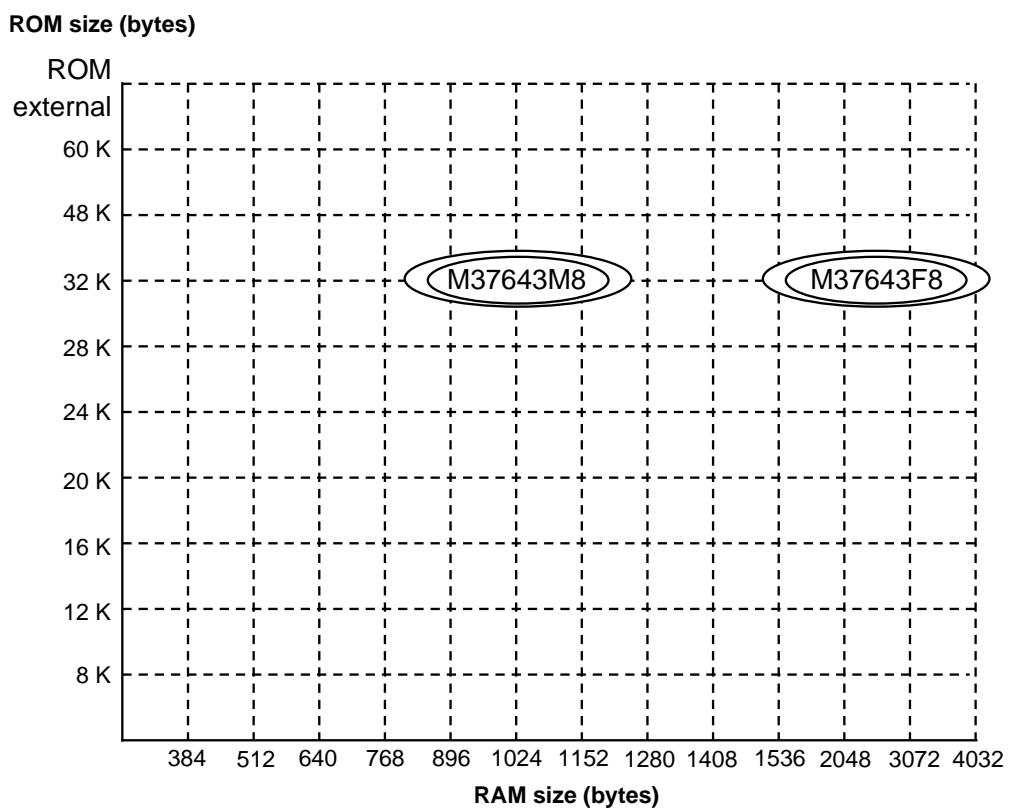
Memory Expansion Plan

Fig. 5 Memory expansion plan

Currently planning products are listed below.

Table 3 Support products

As of Aug. 2006

Part number	ROM size (bytes) ROM size for User in ()	RAM size (bytes)	Package	Remarks
M37643M8-XXXFP	32768 (32636)	1024	PRQP0080GB-A	Mask ROM version
M37643M8-XXXHP			PLQP0080KB-A	
M37643F8FP	32768	2560	PRQP0080GB-A	Flash memory version
M37643F8HP			PLQP0080KB-A	

FUNCTIONAL DESCRIPTION CENTRAL PROCESSING UNIT (CPU)

The 7643 group uses the standard 7600 series instruction set. Refer to the 7600 Series Software Manual for details on the instruction set. The 7600 series has an upward compatible instruction set, of which instruction execution cycles are shortened, for 740 series.

[Accumulator (A)]

The accumulator is an 8-bit register. Data operations such as data transfer, etc., are executed mainly through the accumulator.

[Index Register X (X)]

The index register X is an 8-bit register. In the index addressing modes, the value of the OPERAND is added to the contents of register X and specifies the real address.

[Index Register Y (Y)]

The index register Y is an 8-bit register. In partial instruction, the value of the OPERAND is added to the contents of register Y and specifies the real address.

[Stack Pointer (S)]

The stack pointer is an 8-bit register used during subroutine calls and interrupts. This register indicates start address of stored area (stack) for storing registers during subroutine calls and interrupts. The low-order 8 bits of the stack address are determined by the contents of the stack pointer. The high-order 8 bits of the stack address are determined by the stack page selection bit. If the stack page selection bit is "0", the high-order 8 bits becomes "0016". If the stack page selection bit is "1", the high-order 8 bits becomes "0116".

The operations of pushing register contents onto the stack and popping them from the stack are shown in Figure 7.

Store registers other than those described in Figure 7 with program when the user needs them during interrupts or subroutine calls.

[Program Counter (PC)]

The program counter is a 16-bit counter consisting of two 8-bit registers PCH and PCL. It is used to indicate the address of the next instruction to be executed.

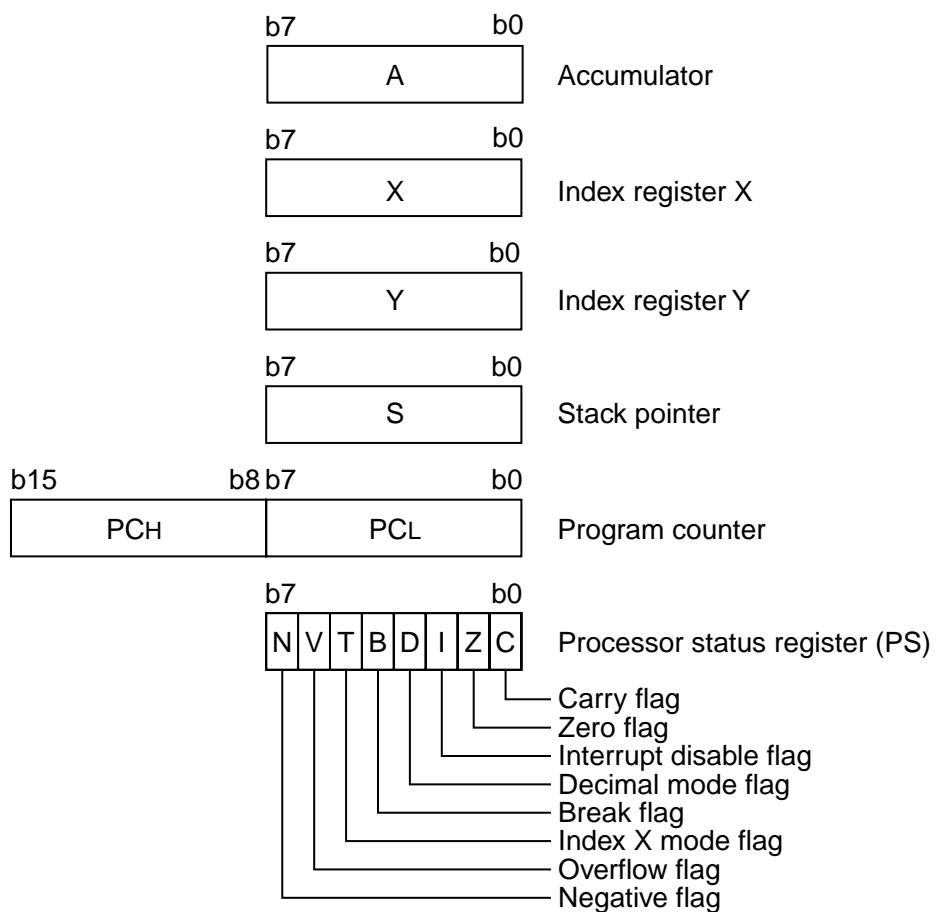


Fig. 6 7600 series CPU register structure

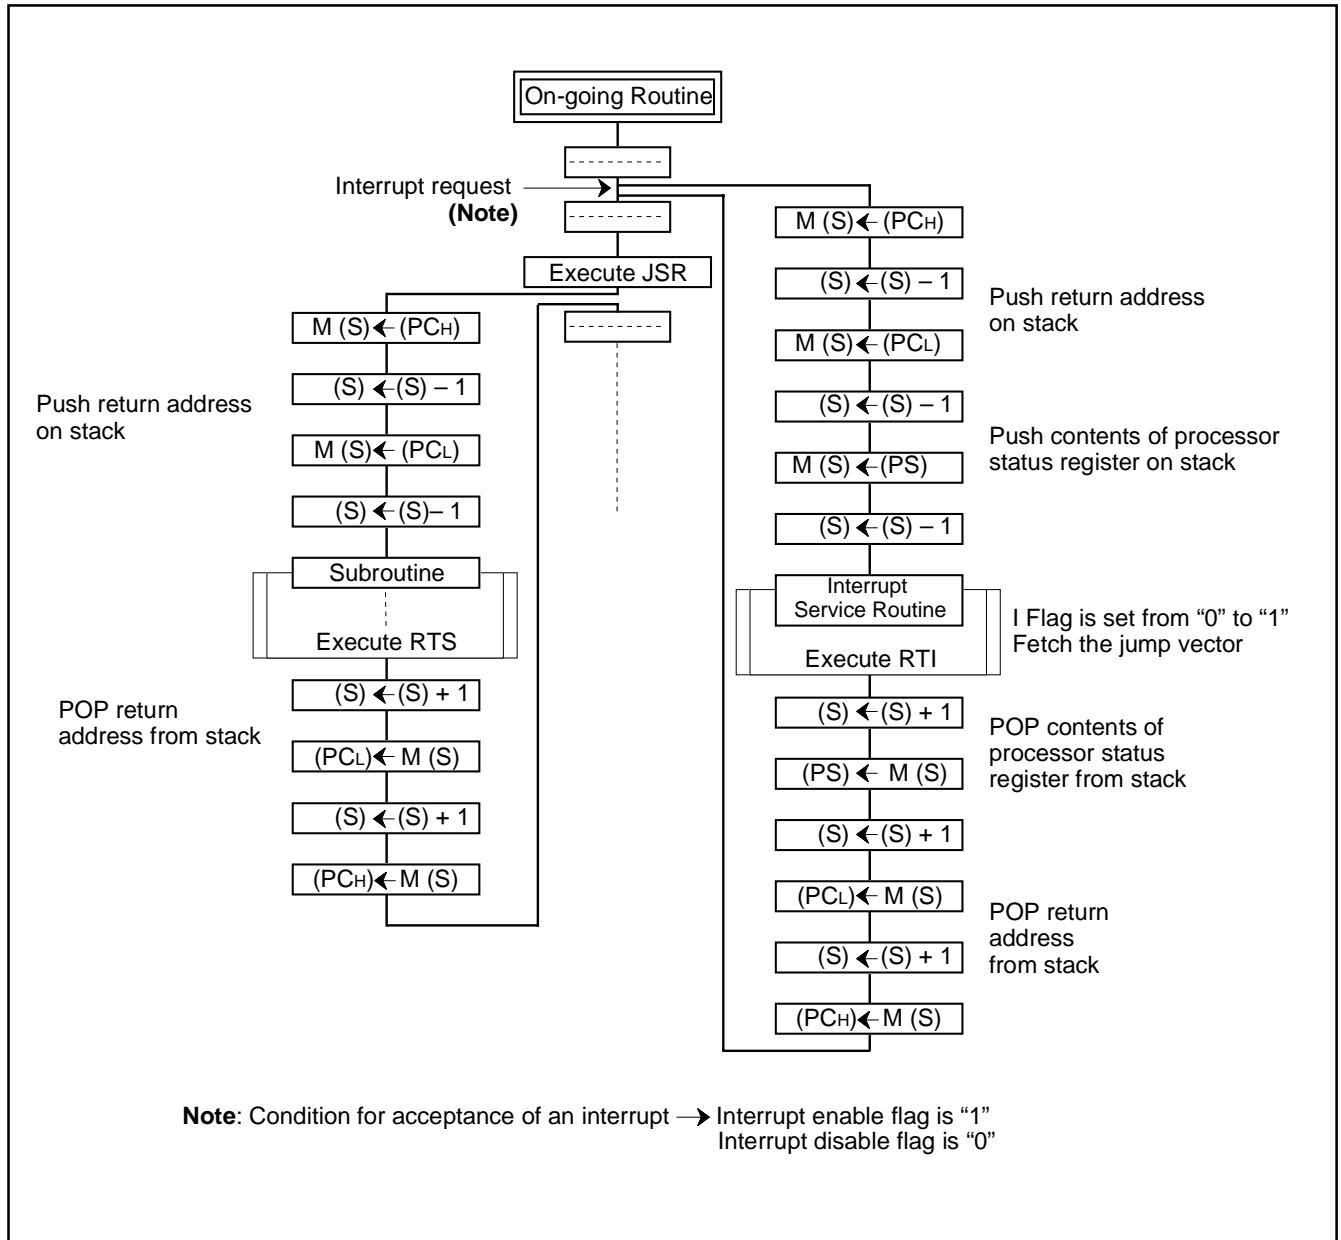


Fig. 7 Register push and pop at interrupt generation and subroutine call

Table 4 Push and pop instructions of accumulator or processor status register

Table 1-1 Push and pop instructions of accumulator or processor status register		
	Push instruction to stack	Pop instruction from stack
Accumulator	PHA	PLA
Processor status register	PHP	PLP

[Processor status register (PS)]

The processor status register is an 8-bit register consisting of 5 flags which indicate the status of the processor after an arithmetic operation and 3 flags which decide MCU operation. Branch operations can be performed by testing the Carry (C) flag, Zero (Z) flag, Overflow (V) flag, or the Negative (N) flag. In decimal mode, the Z, V, N flags are not valid.

•Bit 0: Carry flag (C)

The C flag contains a carry or borrow generated by the arithmetic logic unit (ALU) immediately after an arithmetic operation. It can also be changed by a shift or rotate instruction.

•Bit 1: Zero flag (Z)

The Z flag is set if the result of an immediate arithmetic operation or a data transfer is "0", and cleared if the result is anything other than "0".

•Bit 2: Interrupt disable flag (I)

The I flag disables all interrupts except for the interrupt generated by the BRK instruction.

Interrupts are disabled when the I flag is "1".

•Bit 3: Decimal mode flag (D)

The D flag determines whether additions and subtractions are executed in binary or decimal. Binary arithmetic is executed when this flag is "0"; decimal arithmetic is executed when it is "1". Decimal correction is automatic in decimal mode. Only the ADC and SBC instructions can execute decimal arithmetic.

•Bit 4: Break flag (B)

The B flag is used to indicate that the current interrupt was generated by the BRK instruction. The BRK flag in the processor status register is always "0". When the BRK instruction is used to generate an interrupt, the processor status register is pushed onto the stack with the break flag set to "1".

•Bit 5: Index X mode flag (T)

When the T flag is "0", arithmetic operations are performed between accumulator and memory. When the T flag is "1", direct arithmetic operations and direct data transfers are enabled between memory locations.

•Bit 6: Overflow flag (V)

The V flag is used during the addition or subtraction of one byte of signed data. It is set if the result exceeds +127 to -128. When the BIT instruction is executed, bit 6 of the memory location operated on by the BIT instruction is stored in the overflow flag.

•Bit 7: Negative flag (N)

The N flag is set if the result of an arithmetic operation or data transfer is negative. When the BIT instruction is executed, bit 7 of the memory location operated on by the BIT instruction is stored in the negative flag.

Table 5 Set and clear instructions of each bit of processor status register

	C flag	Z flag	I flag	D flag	B flag	T flag	V flag	N flag
Set instruction	SEC	–	SEI	SED	–	SET	–	–
Clear instruction	CLC	–	CLI	CLD	–	CLT	CLV	–

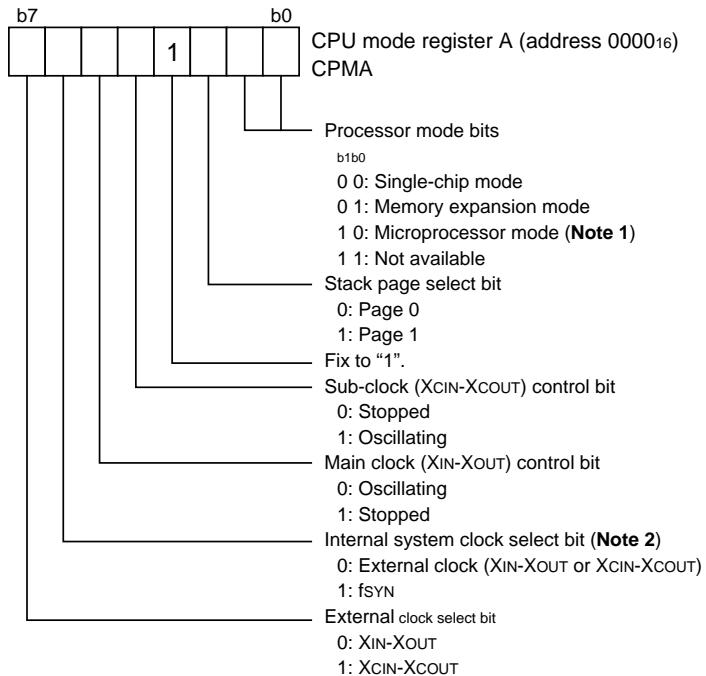
[CPU Mode Registers A, B (CPUMA, CPUMB)] 000016, 000116

The CPU mode register contains the stack page select bit and the CPU operating mode select bit and so on.

The CPU mode registers are allocated at address 000016, 000116.

■ Notes

Do not use the microprocessor mode in the flash memory version.



Notes 1: This is not available in the flash memory version.

2: When (CPMA 6, 7) = (0, 0), the internal system clock can be selected between f(XIN) or f(XIN)/2 by CCR7.

The internal clock ϕ is the internal system clock divided by 2.

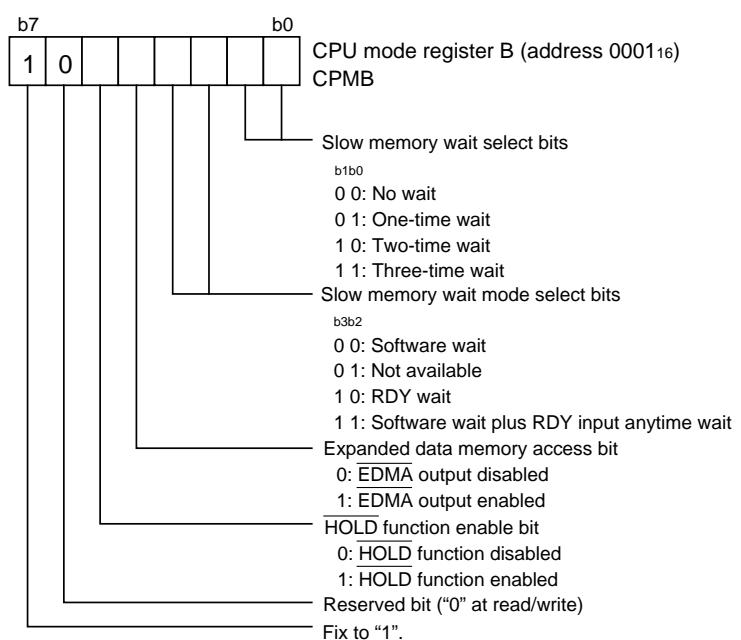


Fig. 8 Structure of CPU mode register

MEMORY**Special Function Register (SFR) Area**

The Special Function Register area in the zero page contains control registers such as I/O ports and timers.

RAM

RAM is used for data storage and for stack area of subroutine calls and interrupts.

ROM

The first 128 bytes and the last 4 bytes of ROM are reserved for device testing and the rest is user area for storing programs. In the flash memory version, program and erase can be performed in the reserved area.

Interrupt Vector Area

The interrupt vector area contains reset and interrupt vectors.

Zero Page

Access to this area with only 2 bytes is possible in the zero page addressing mode.

Special Page

Access to this area with only 2 bytes is possible in the special page addressing mode.

Refer to page 74 for the memory map of memory expansion and microprocessor modes.

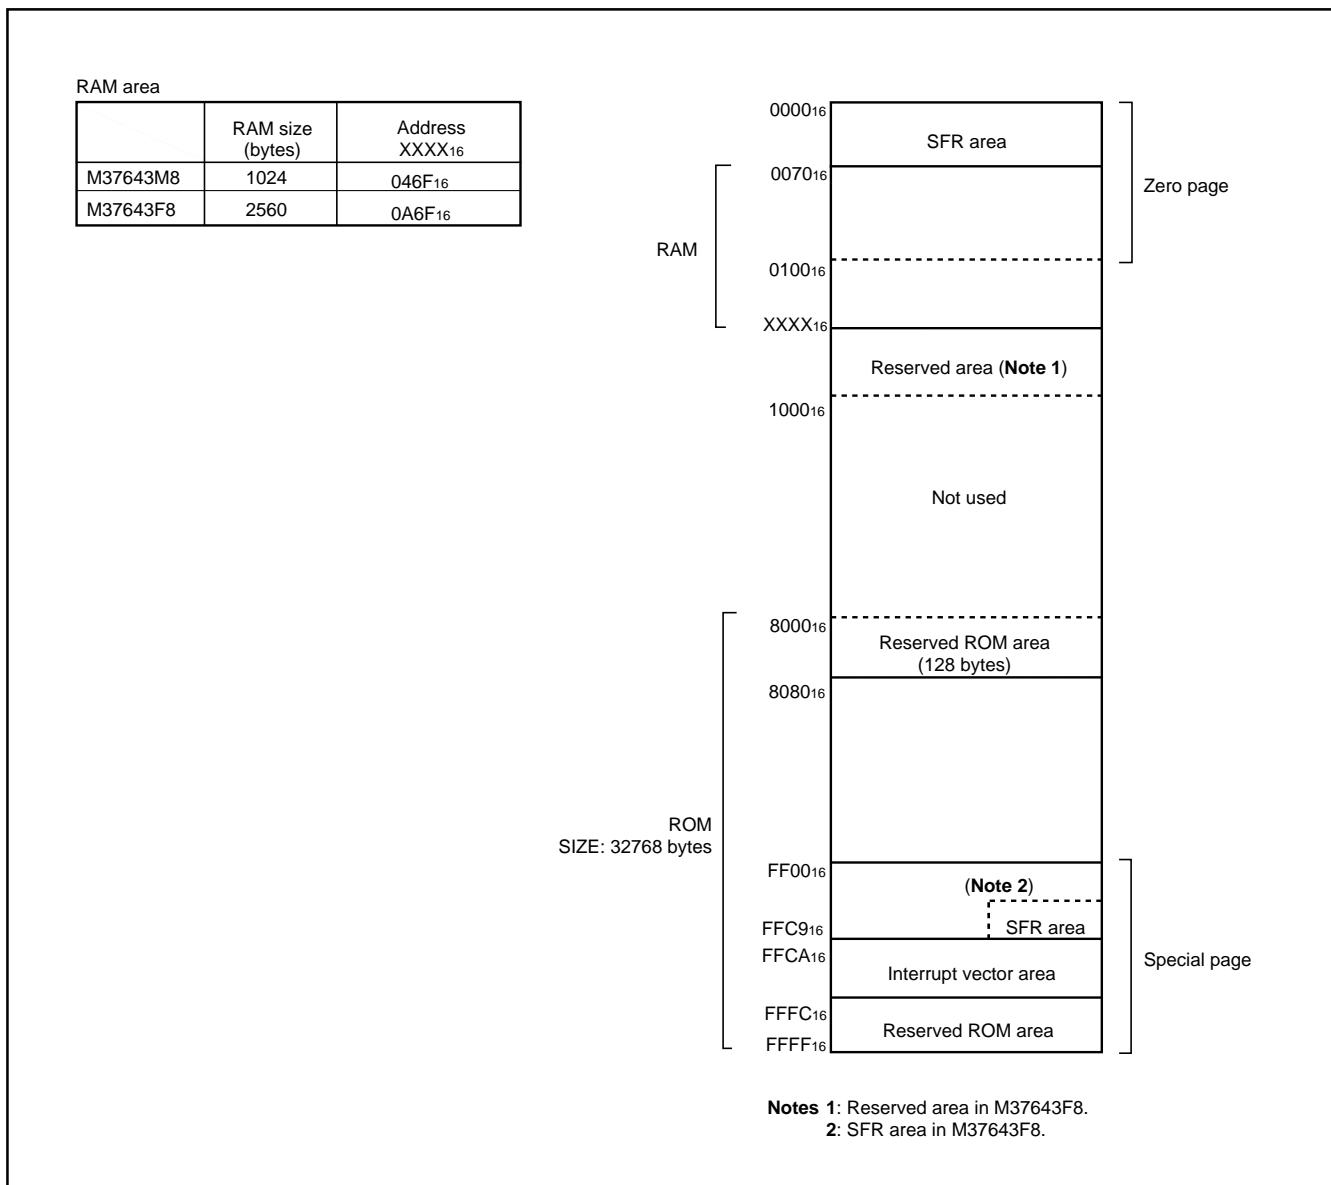


Fig. 9 Memory map diagram

0000 ₁₆	CPU mode register A (CPUA)	0038 ₁₆	Reserved (Note 1)
0001 ₁₆	CPU mode register B (CPUB)	0039 ₁₆	Reserved (Note 1)
0002 ₁₆	Interrupt request register A (IREQA)	003A ₁₆	Reserved (Note 1)
0003 ₁₆	Interrupt request register B (IREQB)	003B ₁₆	Reserved (Note 1)
0004 ₁₆	Interrupt request register C (IREQC)	003C ₁₆	Reserved (Note 1)
0005 ₁₆	Interrupt control register A (ICONA)	003D ₁₆	Reserved (Note 1)
0006 ₁₆	Interrupt control register B (ICONB)	003E ₁₆	Reserved (Note 1)
0007 ₁₆	Interrupt control register C (ICONC)	003F ₁₆	DMAC index and status register (DMAIS)
0008 ₁₆	Port P0 (P0)	0040 ₁₆	DMAC channel x mode register 1 (DMAx1)
0009 ₁₆	Port P0 direction register (P0D)	0041 ₁₆	DMAC channel x mode register 2 (DMAx2)
000A ₁₆	Port P1 (P1)	0042 ₁₆	DMAC channel x source register Low (DMAxSL)
000B ₁₆	Port P1 direction register (P1D)	0043 ₁₆	DMAC channel x source register High (DMAxSH)
000C ₁₆	Port P2 (P2)	0044 ₁₆	DMAC channel x destination register Low (DMAxDL)
000D ₁₆	Port P2 direction register (P2D)	0045 ₁₆	DMAC channel x destination register High (DMAxDH)
000E ₁₆	Port P3 (P3)	0046 ₁₆	DMAC channel x transfer count register Low (DMAxCL)
000F ₁₆	Port P3 direction register (P3D)	0047 ₁₆	DMAC channel x transfer count register High (DMAxCH)
0010 ₁₆	Port control register (PTC)	0048 ₁₆	Reserved (Note 1)
0011 ₁₆	Interrupt polarity select register (IPOL)	0049 ₁₆	Reserved (Note 1)
0012 ₁₆	Port P2 pull-up control register (PUP2)	004A ₁₆	Reserved (Note 1)
0013 ₁₆	USB control register (USBC)	004B ₁₆	Reserved (Note 1)
0014 ₁₆	Port P6 (P6)	004C ₁₆	Reserved (Note 1)
0015 ₁₆	Port P6 direction register (P6D)	004D ₁₆	Reserved (Note 1)
0016 ₁₆	Port P5 (P5)	004E ₁₆	Reserved (Note 1)
0017 ₁₆	Port P5 direction register (P5D)	004F ₁₆	Reserved (Note 1)
0018 ₁₆	Port P4 (P4)	0050 ₁₆	USB address register (USBA)
0019 ₁₆	Port P4 direction register (P4D)	0051 ₁₆	USB power management register (USBPM)
001A ₁₆	Port P7 (P7)	0052 ₁₆	USB interrupt status register 1 (USBIS1)
001B ₁₆	Port P7 direction register (P7D)	0053 ₁₆	USB interrupt status register 2 (USBIS2)
001C ₁₆	Port P8 (P8)	0054 ₁₆	USB interrupt enable register 1 (USBIE1)
001D ₁₆	Port P8 direction register (P8D)	0055 ₁₆	USB interrupt enable register 2 (USBIE2)
001E ₁₆	Reserved (Note 1)	0056 ₁₆	Reserved (Note 1)
001F ₁₆	Clock control register (CCR)	0057 ₁₆	Reserved (Note 1)
0020 ₁₆	Reserved (Note 1)	0058 ₁₆	USB endpoint index register (USBINDEX)
0021 ₁₆	Reserved (Note 1)	0059 ₁₆	USB endpoint x IN control register (IN_CSR)
0022 ₁₆	Reserved (Note 1)	005A ₁₆	USB endpoint x OUT control register (OUT_CSR)
0023 ₁₆	Reserved (Note 1)	005B ₁₆	USB endpoint x IN max. packet size register (IN_MAXP)
0024 ₁₆	Timer 1 (T1)	005C ₁₆	USB endpoint x OUT max. packet size register (OUT_MAXP)
0025 ₁₆	Timer 2 (T2)	005D ₁₆	USB endpoint x OUT write count register (WRT_CNT)
0026 ₁₆	Timer 3 (T3)	005E ₁₆	Reserved (Note 1)
0027 ₁₆	Reserved (Note 1)	005F ₁₆	USB endpoint FIFO mode register (USBFIFOMR)
0028 ₁₆	Reserved (Note 1)	0060 ₁₆	USB endpoint 0 FIFO (USB FIFO0)
0029 ₁₆	Timer 123 mode register (T123M)	0061 ₁₆	USB endpoint 1 FIFO (USB FIFO1)
002A ₁₆	Serial I/O shift register (SIOSHT)	0062 ₁₆	USB endpoint 2 FIFO (USB FIFO2)
002B ₁₆	Serial I/O control register 1 (SIOCON1)	0063 ₁₆	Reserved (Note 1)
002C ₁₆	Serial I/O control register 2 (SIOCON2)	0064 ₁₆	Reserved (Note 1)
002D ₁₆	Reserved (Note 1)	0065 ₁₆	Reserved (Note 1)
002E ₁₆	Reserved (Note 1)	0066 ₁₆	Reserved (Note 1)
002F ₁₆	Reserved (Note 1)	0067 ₁₆	Reserved (Note 1)
0030 ₁₆	UART mode register (UMOD)	0068 ₁₆	Reserved (Note 1)
0031 ₁₆	UART baud rate generator (UBRG)	0069 ₁₆	Reserved (Note 1)
0032 ₁₆	UART status register (USTS)	006A ₁₆	Flash memory control register (FMCR) (Note 2)
0033 ₁₆	UART control register (UCON)	006B ₁₆	Reserved (Note 1)
0034 ₁₆	UART transmit/receive buffer register 1 (UTRB1)	006C ₁₆	Frequency synthesizer control register (FSC)
0035 ₁₆	UART transmit/receive buffer register 2 (UTRB2)	006D ₁₆	Frequency synthesizer multiply register 1 (FSM1)
0036 ₁₆	UART RTS control register (URTSC)	006E ₁₆	Frequency synthesizer multiply register 2 (FSM2)
0037 ₁₆	Reserved (Note 1)	006F ₁₆	Frequency synthesizer divide register (FSD)
FFC9 ₁₆ ROM code protect control register (ROMCP) (Note 3)			

Notes 1: Do not write any data to this addresses, because these areas are reserved.

2: This area is reserved in the mask ROM version.

3: This area is on the ROM in the mask ROM version.

Fig. 10 Memory map of special function register (SFR)

I/O PORTS

Direction Registers

The I/O ports P0–P8 have direction registers which determine the input/output direction of each individual pin. Each bit in a direction register corresponds to one pin, each pin can be set to be input port or output port.

When “0” is written to the bit corresponding to a pin, that pin becomes an input pin. When “1” is written to that bit, that pin becomes an output pin.

If data is read from a pin set to output, the value of the port output latch is read, not the value of the pin itself. Pins set to input are floating. If a pin set to input is written to, only the port output latch is written to and the pin remains floating.

Slew Rate Control

By setting bits 0 to 5 of the port control register (address 001016) to “1”, slew rate control is enabled. VIHL or CMOS level can be used as a port P2 input level.

Pull-up Control

By setting the port P2 pull-up control register (address 001216), pull-up of each pin of port P2 can be controlled with a program.

However, the contents of port P2 pull-up control register do not affect ports programmed as the output ports but as the input ports.

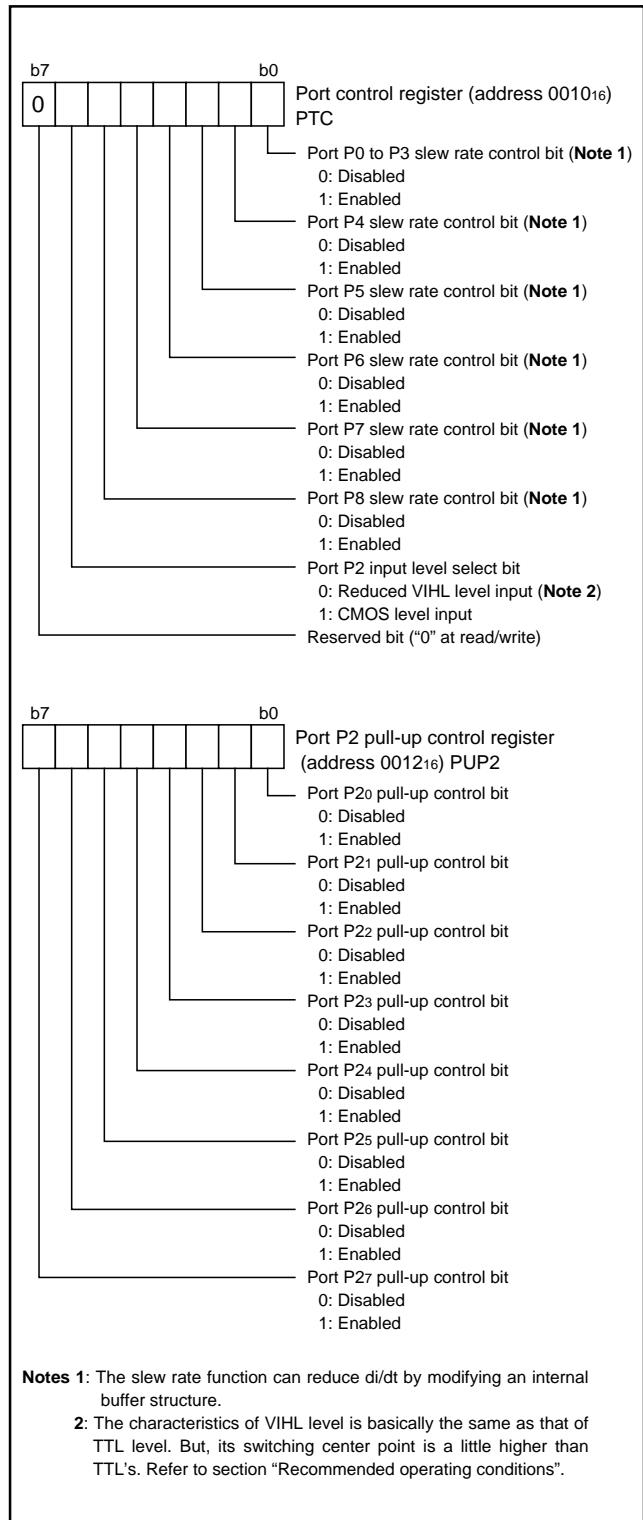


Fig. 11 Structure of port control and port P2 pull-up control registers

Table 6 List of I/O port function

Pin	Name	Input/Output	I/O format	Non-port function	Related SFRs	Ref. No.
P00/AB0– P07/AB7	Port P0	Input/Output, individual bits	CMOS input level CMOS 3-state output	Lower address output	CPU mode register A Port control register	(1)
P10/AB8– P17/AB15	Port P1			Higher address output		
P20/DB0– P27/DB7	Port P2		CMOS input level/VIHL input level CMOS 3-state output	Data bus I/O	CPU mode register A Port control register Port P2 pull-up control register	(2)
P30/RDY– P37/RD	Port P3			Control signal I/O	CPU mode register A CPU mode register B Port control register	(1) (3)
P40/EDMA, P41/INT0, P42/INT1, P43,P44	Port P4		CMOS input level CMOS 3-state output			
P50/XCIN, P51/TOUT/ XCOUT	Port P5		Control signal I/O External interrupt	CPU mode register A CPU mode register B Port control register Interrupt polarity select register	(4) (5)	
P52–P57			CMOS input level CMOS 3-state output	Timer 1, Timer 2 output pin Sub-clock generat- ing input pin	CPU mode register A Port control register Clock control register Timer 123 mode register	(6) (7)
P60–P67	Port P6					
P70,	Port P7		CMOS input level CMOS 3-state output		Port control register	(8)
P71/HOLD, P72, P73/HLDA, P74						
P80/SRDY, P81/SCLK, P82/SRXD, P83/STXD, P84/UTXD, P85/URXD, P86/CTS, P87/RTS	Port P8		CMOS input level CMOS 3-state output	Serial I/O I/O pin UART I/O pin	UART control registers Serial I/O control register 1 Serial I/O control register 2 Port control register	(15) (16) (17) (18) (19) (20) (21) (22)

Notes 1: For details of the ports functions in modes other than single-chip mode, and how to use double-function ports as function I/O ports, refer to the applicable sections.

2: Make sure that the input level at each pin is either 0 V or Vcc during execution of the STP instruction.

When an input level is at an intermediate potential, a rush current will flow from Vcc to Vss through the input-stage gate.

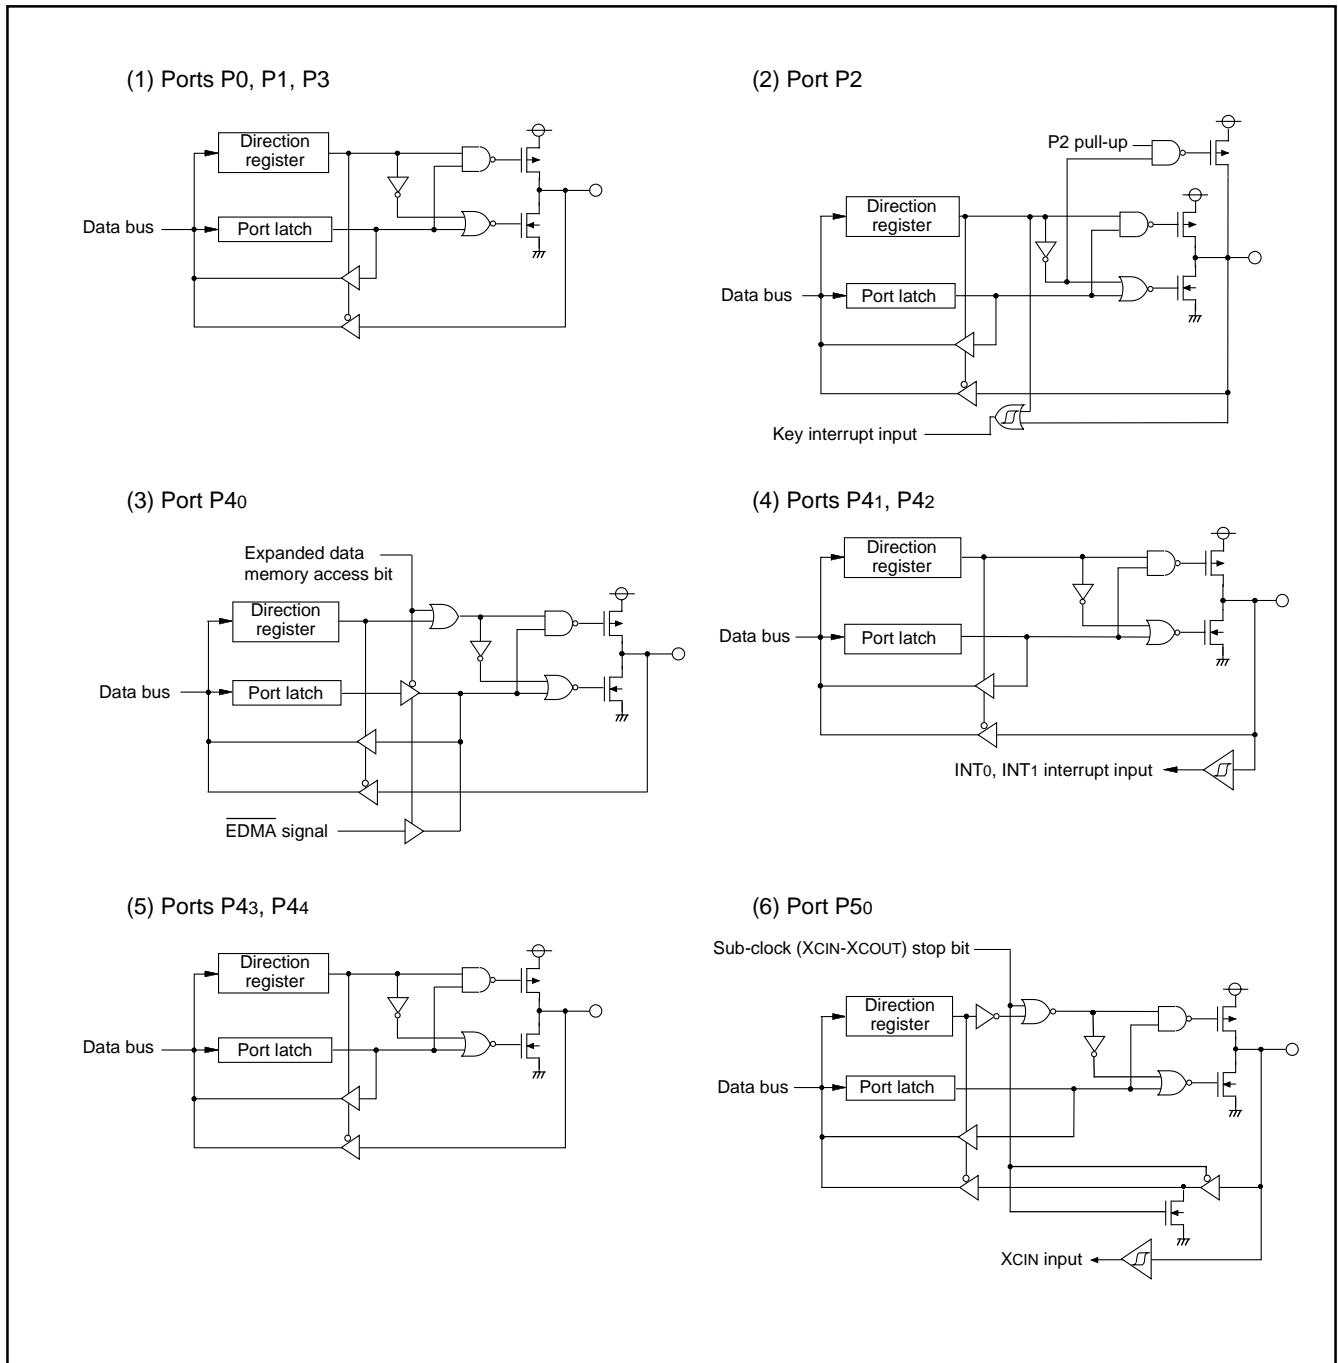


Fig. 12 Port block diagram (1)

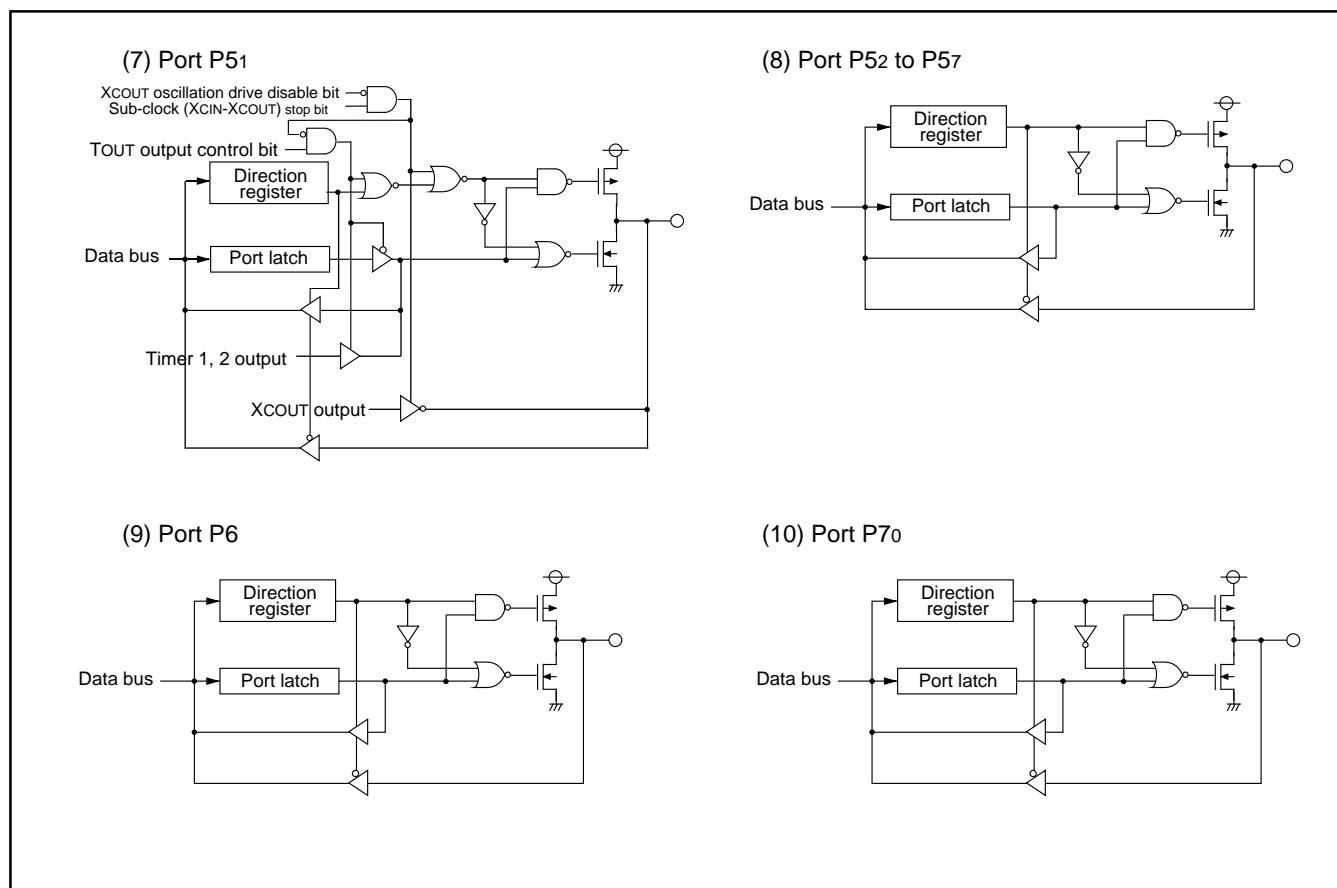


Fig. 13 Port block diagram (2)

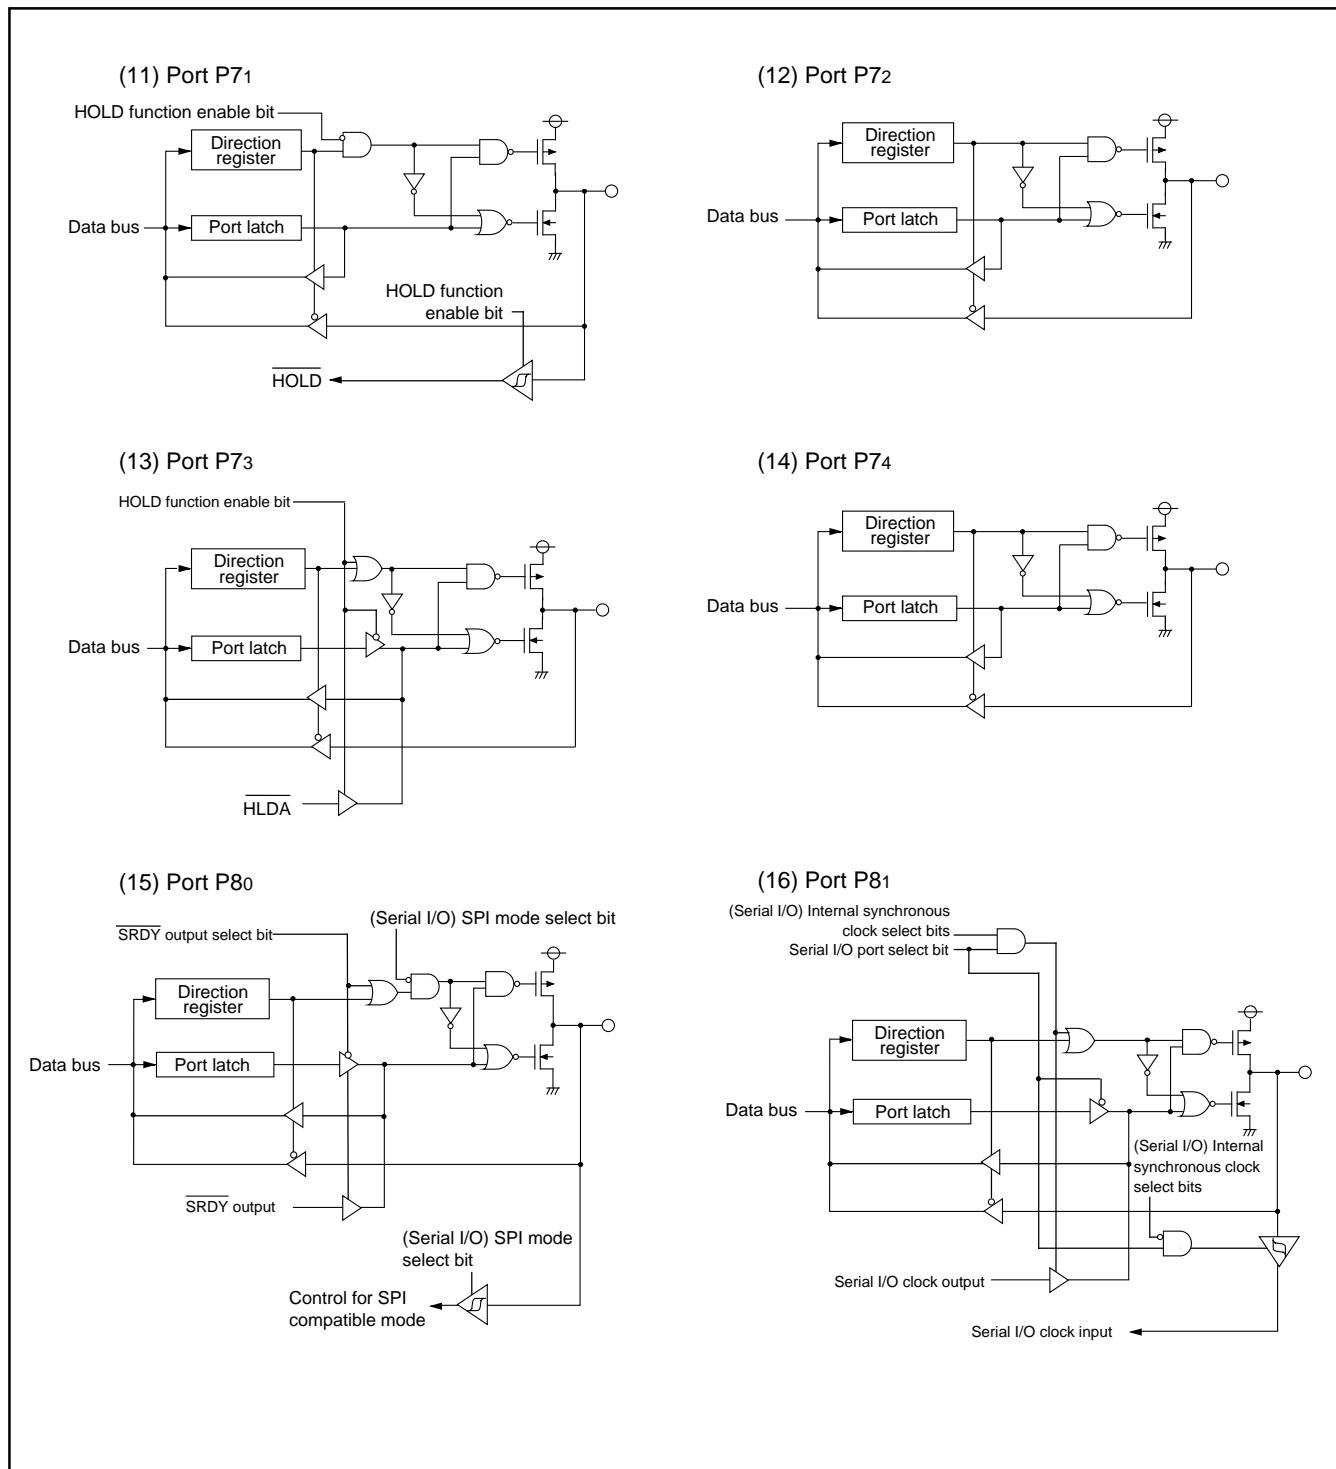


Fig. 14 Port block diagram (3)

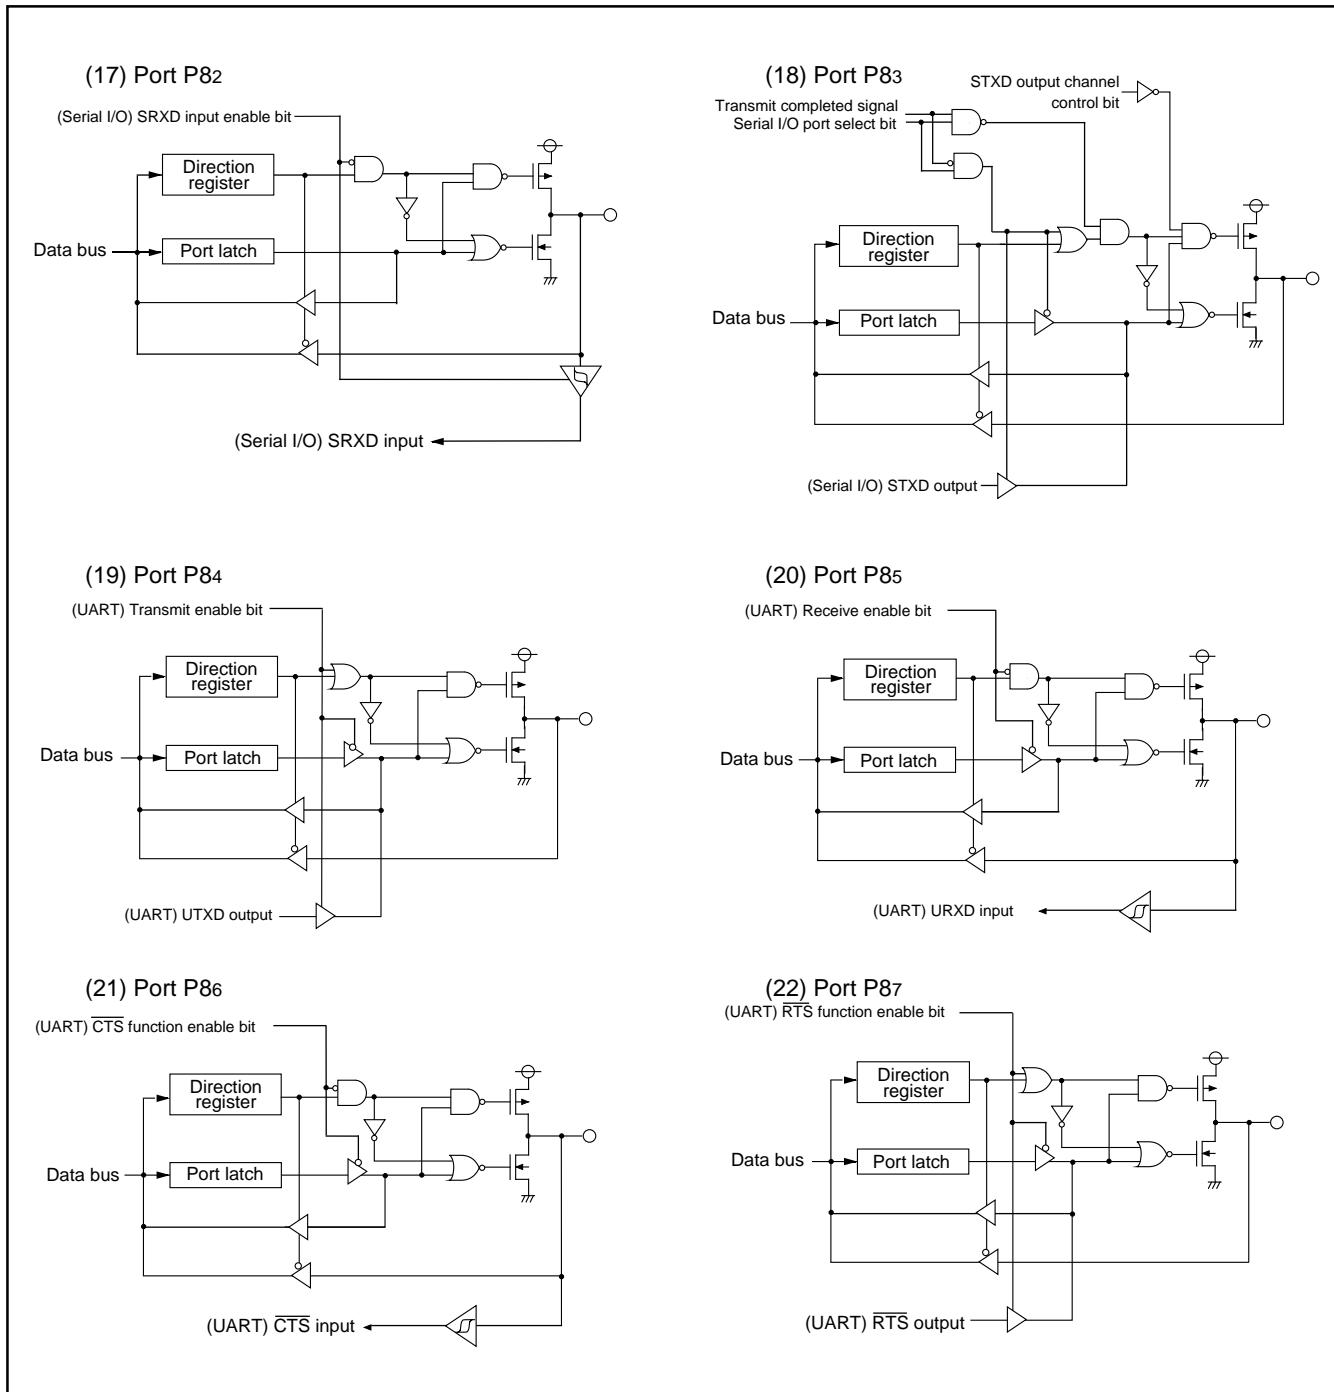


Fig. 15 Port block diagram (4)

INTERRUPTS

There are fourteen interrupt sources: three externals, ten internals, and one software.

Interrupt Control

Each interrupt except the BRK instruction interrupt has both an Interrupt Request Bit and an Interrupt Enable Bit, and is controlled by the Interrupt Disable Flag (I). An interrupt occurs if the corresponding Interrupt Request and Enable Bits are "1" and the Interrupt Disable Flag is "0".

Interrupt Enable Bits can be set or cleared by software. Interrupt Request Bits can be cleared by software, but cannot be set by software. Additionally, an active edge of INT0 and INT1 can be selected by using the interrupt polarity select register (address 001116).

The BRK instruction interrupt and reset cannot be disabled with any flag or bit. The I Flag disables all interrupts except the BRK instruction interrupt and reset. If several interrupt requests occur at the same time, the interrupt with the highest priority is accepted first.

Interrupt Operation

When an interrupt request occurs, the following operations are automatically performed:

1. The processing being executed is stopped.
2. The contents of the program counter and processor status register are automatically pushed onto the stack.
3. The Interrupt Disable Flag is set and the corresponding interrupt request bit is cleared.
4. The interrupt jump destination address is read from the vector table into the program counter.

■Notes

When setting the followings, the interrupt request bit may be set to "1".

- When setting external interrupt active edge

Related register: Interrupt polarity select register (address 001116)

When not requiring for the interrupt occurrence synchronized with these setting, take the following sequence.

- ①Set the corresponding Interrupt Enable Bit to "0" (disabled).
- ②Set the Interrupt Polarity Select Bit (Active Edge Switch Bit).
- ③Set the corresponding Interrupt Request Bit to "0" after 1 or more instructions have been executed.
- ④Set the corresponding Interrupt Enable Bit to "1" (enabled).

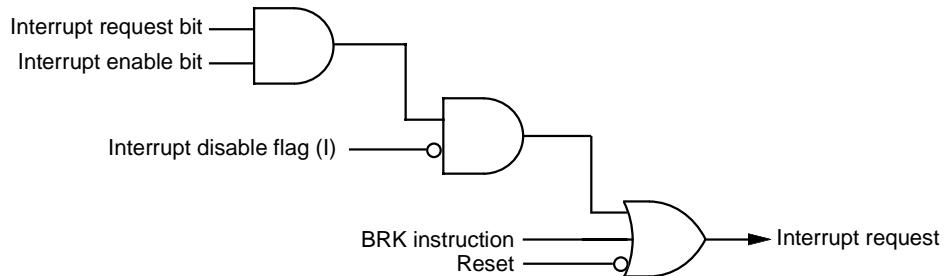


Fig. 16 Interrupt control

Table 7 Interrupt vector addresses and priority

Interrupt Source	Priority	Vector Addresses (Note 1)		Interrupt Request Generating Conditions	Remarks
		High	Low		
Reset (Note 3)	1	FFFFB16	FFFA16	At reset	Non-maskable
USB function	2	FFF916	FFF816	(Note 2)	
Reserved area	3	FFF716	FFF616	Not used	
INT0	4	FFF516	FFF416	At detection of either rising or falling edge of INT0 input	External interrupt (active edge selectable)
INT1	5	FFF316	FFF216	At detection of either rising or falling edge of INT1 input	External interrupt (active edge selectable)
DMAC0	6	FFF116	FFF016	At completion of DMAC0 transfer	
DMAC1	7	FFEF16	FFEE16	At completion of DMAC1 transfer	
UART receive buffer full	8	FFED16	FFEC16	At completion of UART reception	
UART transmit	9	FFEB16	FFEA16	At completion of UART transmission	
UART summing error	10	FFE916	FFE816	At detection of UART summing error	
Reserved area	11	FFE716	FFE616	Not used	
Reserved area	12	FFE516	FFE416	Not used	
Reserved area	13	FFE316	FFE216	Not used	
Reserved area	14	FFE116	FFE016	Not used	
Reserved area	15	FFDF16	FFDE16	Not used	
Timer 1	16	FFDD16	FFDC16	At timer 1 underflow	
Timer 2	17	FFDB16	FFDA16	At timer 2 underflow	
Timer 3	18	FFD916	FFD816	At timer 3 underflow	
Reserved area	19	FFD716	FFD616	Not used	
Reserved area	20	FFD516	FFD416	Not used	
Serial I/O	21	FFD316	FFD216	At completion of serial I/O transmission/reception	
Reserved area	22	FFD116	FFD016	Not used	
Reserved area	23	FFCF16	FFCE16	Not used	
Key input (Key-on wake-up)	24	FFCD16	FFCC16	At falling of port P2 input logical level AND	External interrupt (falling valid)
BRK instruction	25	FFCB16	FFCA16	At BRK instruction execution	Non-maskable software interrupt

Notes 1: Vector addresses contain interrupt jump destination addresses.

2: USB function interrupt occurs owing to an interrupt request of the endpoint x (x = 0 to 2) IN, endpoint x (x = 1, 2) OUT, USB reset or suspend/resume.

3: Reset functions in the same way as an interrupt with the highest priority.

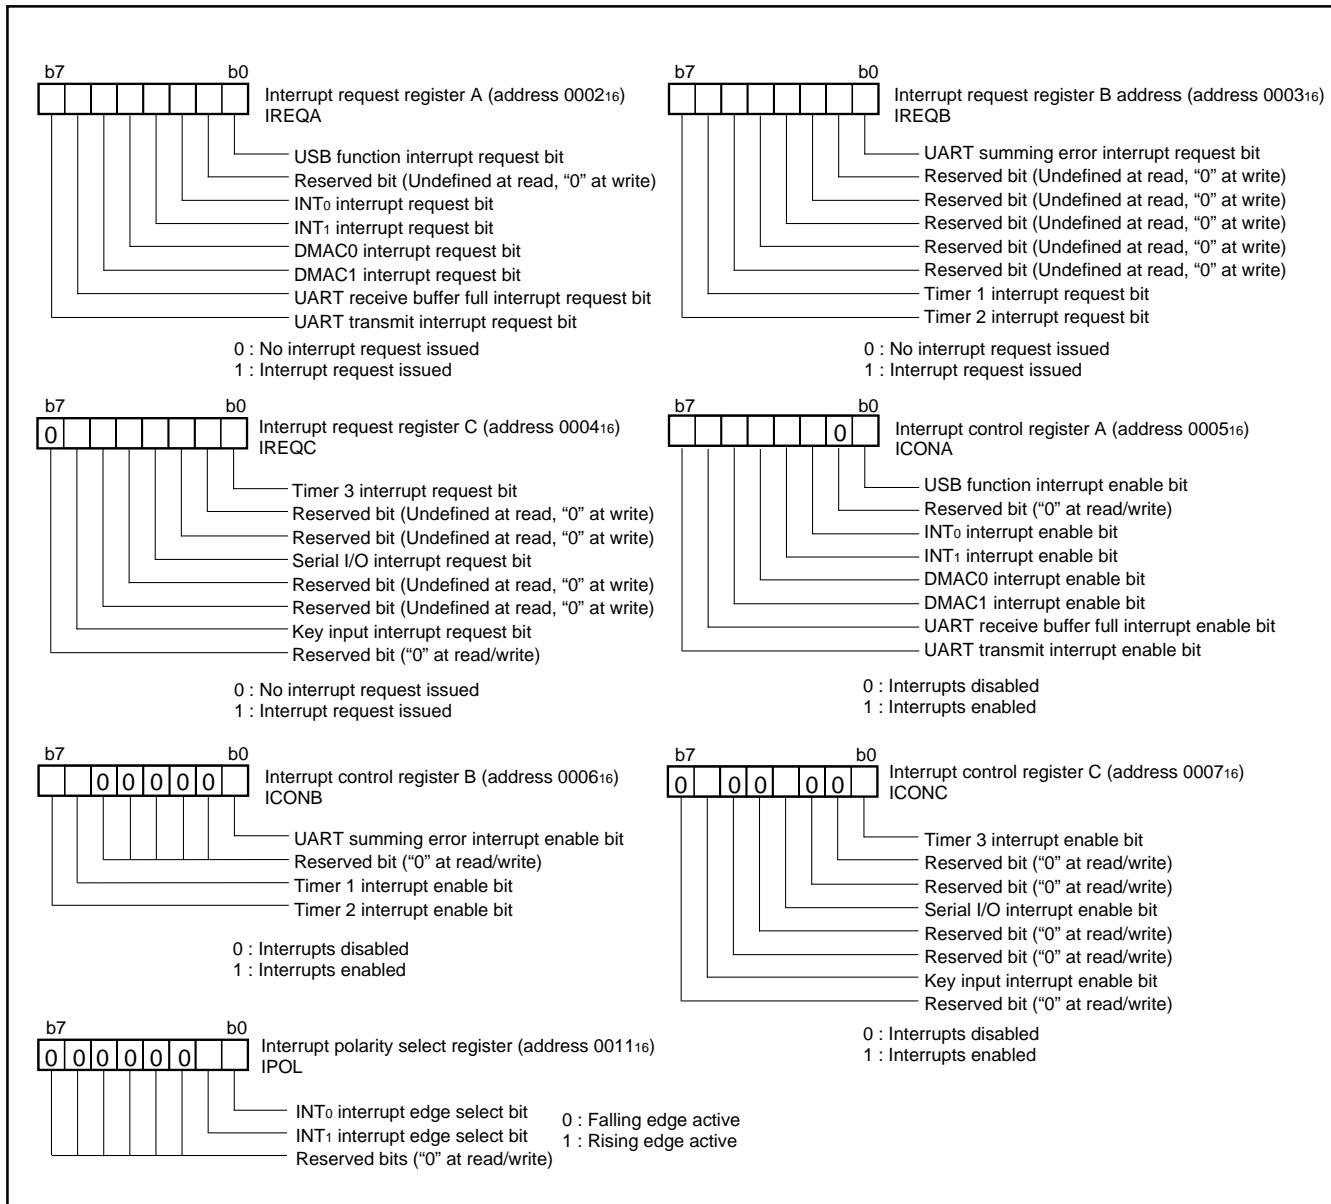


Fig. 17 Structure of interrupt-related registers

Key Input Interrupt (Key-on Wake-up)

A key input interrupt request is generated by applying "L" level to any pin of port P2 that have been set to input mode. In other words, it is generated when AND of input level goes from "1" to "0". An example

of using a key input interrupt is shown in Figure 18, where an interrupt request is generated by pressing one of the keys consisted as an active-low key matrix which inputs to ports P20-P24.

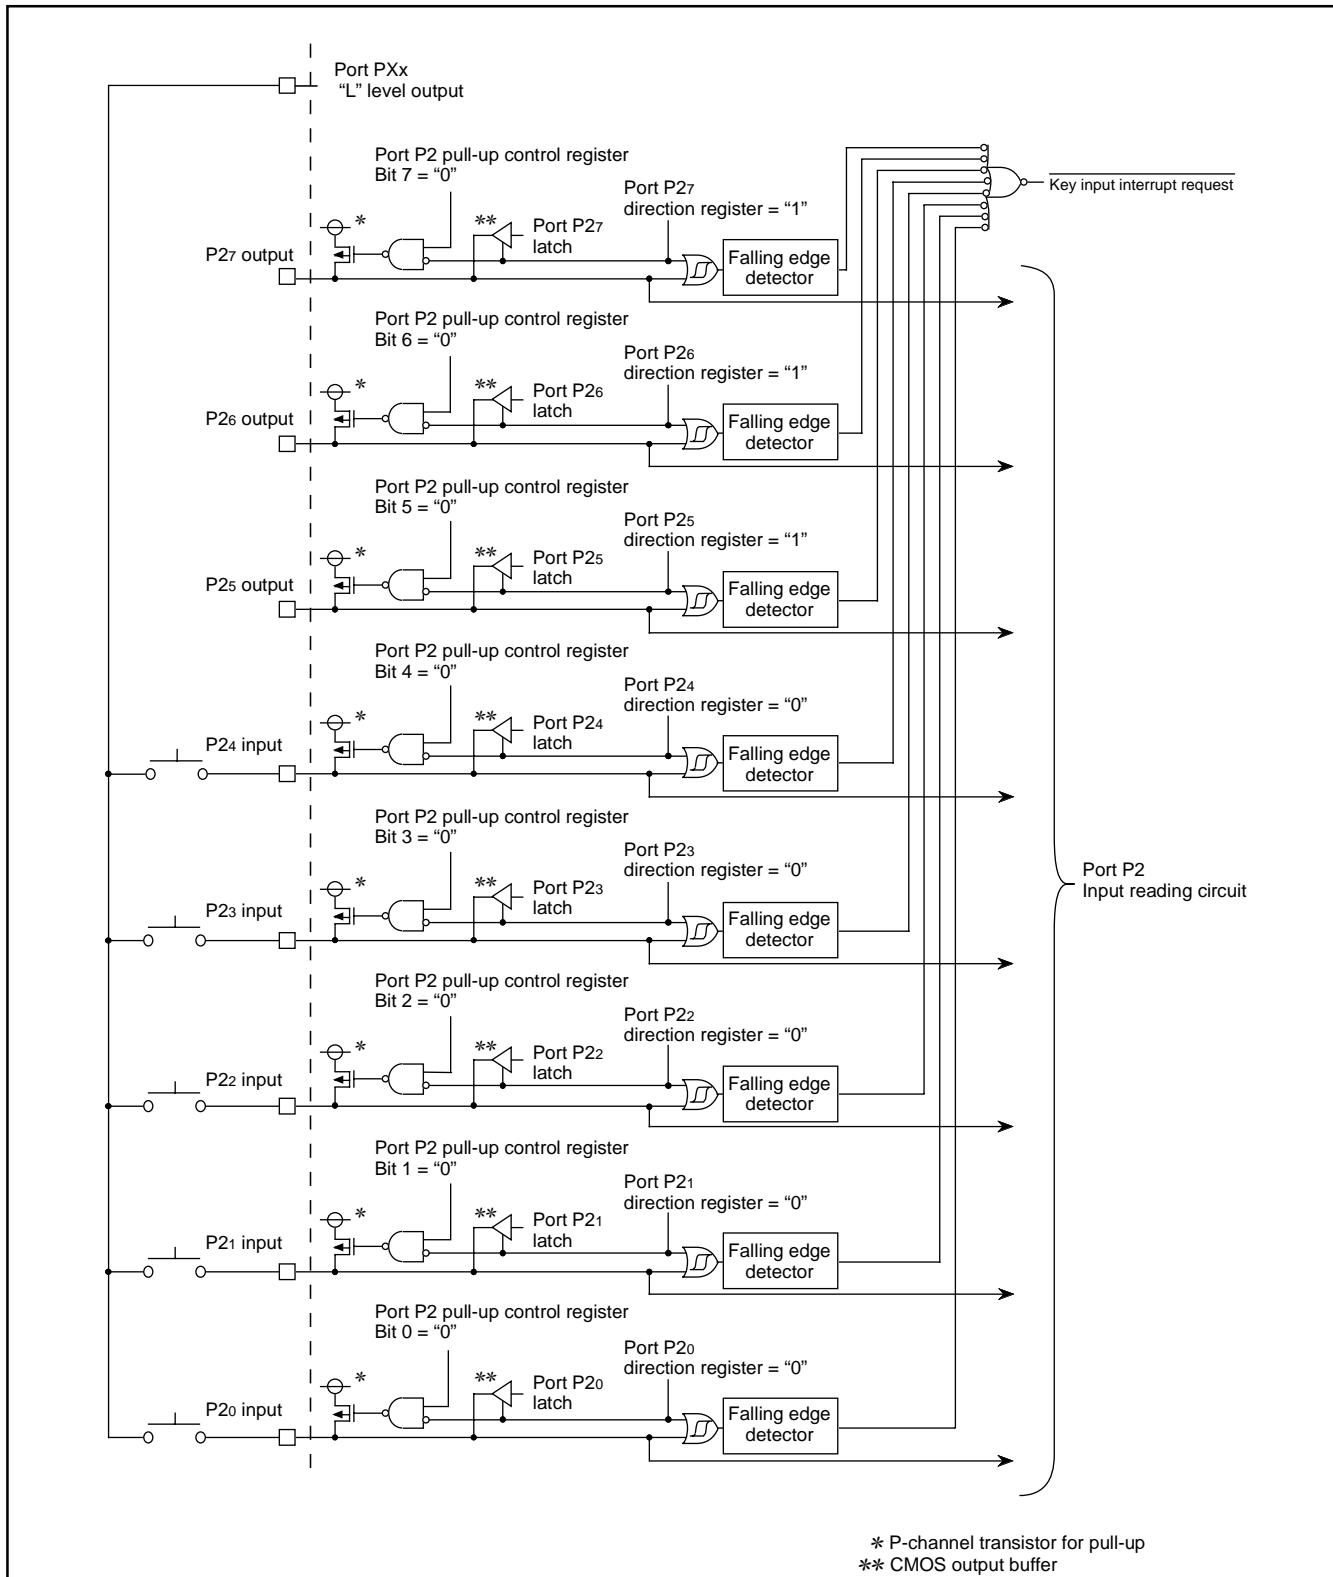


Fig. 18 Connection example when using key input interrupt and port P2 block diagram

TIMERS

The 7643 group has three 8-bit timers: timer 1, timer 2, and timer 3. All timers are down count timers. When the timer reaches "0016", an underflow occurs at the next count pulse and the corresponding timer latch is reloaded into the timer and the count is continued. When a timer underflows, the interrupt request bit corresponding to that timer is set to "1".

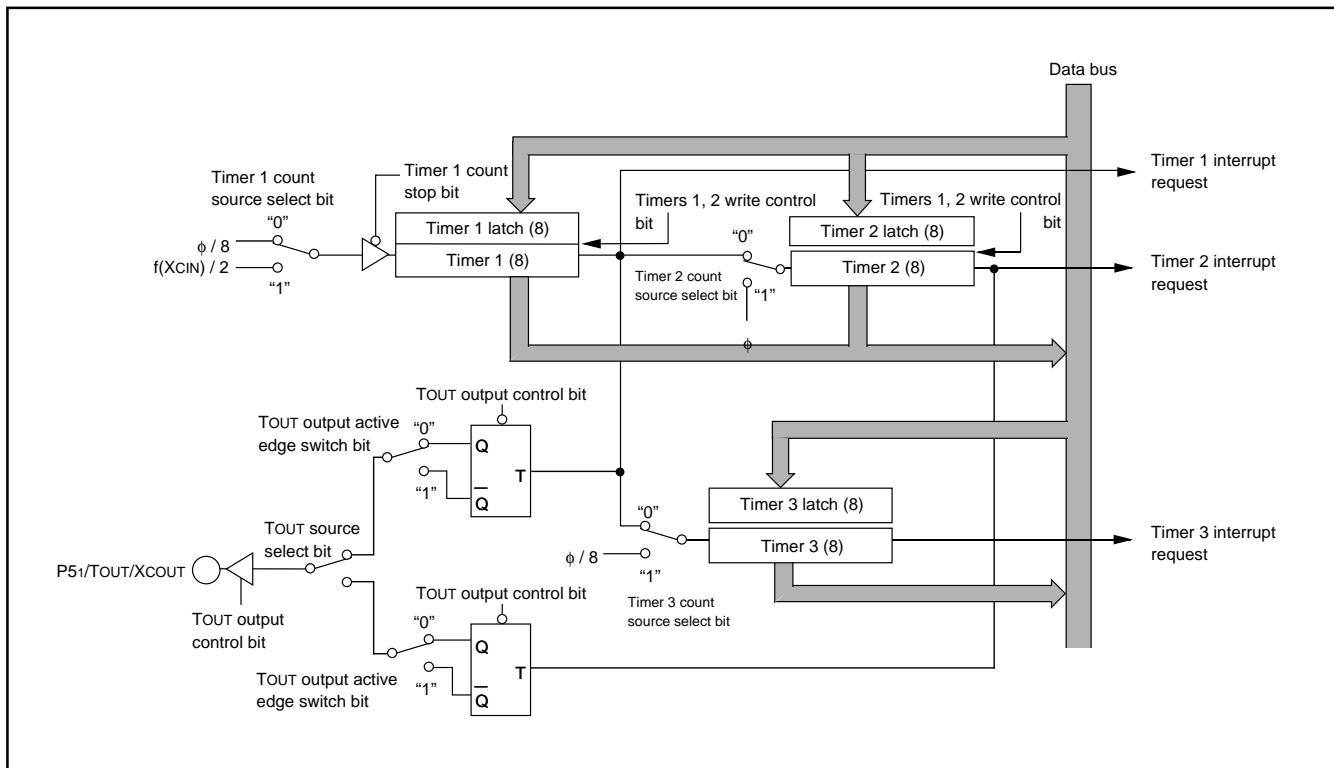


Fig. 19 Timer block diagram

Timer 1, Timer 2, Timer 3

Timer 1, timer 2, and timer 3 are 8-bit timers. The count source for each timer can be selected by timer 123 mode register.

● Timers 1, 2 Write Control

When the Timers 1, 2 Write Control Bit is “1” and the values are written in the address of timers 1 and 2, the values are loaded only in their latches. The values in the latches are loaded in timers 1 and 2 after timers 1 and 2 underflow.

When the Timers 1, 2 Write Control Bit is “0” and the values are written in the address of timers 1 and 2, the values are loaded in the timers 1 and 2 and their latches at the same time.

● Timers 1, 2 Output Control

A signal of which polarity is inverted each time the timer selected by the TOUT Factor Select Bit underflows is output from the TOUT pin. This is enabled by setting the TOUT Output Control Bit to “1”.

When the TOUT Output Active Edge Switch Bit is “0”, the TOUT pin starts pulses output beginning at “H”; when this bit is “1”, the TOUT pin starts pulses output beginning at “L”.

When using a timer in this mode, set the port P51 direction register to output mode.

■ Notes

● Timer 1 to Timer 3

Switching of the count sources of timers 1 to 3 does not affect the values of reload latches. However, that may make count operation started. Therefore, write values again in the order of timers 1, 2 and then timer 3 after their count sources have been switched.

● Timers 1, 2 Write Control

When the value is to be written in latch only, unexpected value may be set in the timer if the writing in the latch and the timer underflow are performed at the same timing.

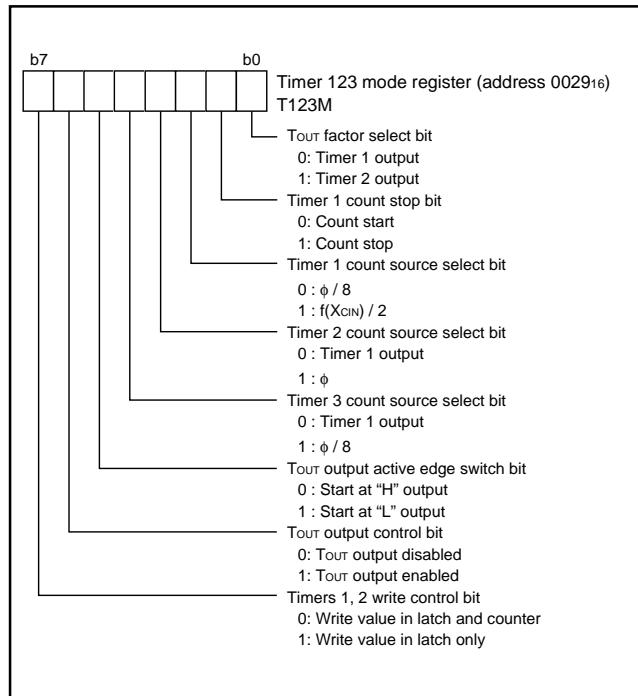


Fig. 20 Structure of timer 123 mode register

Serial Interface

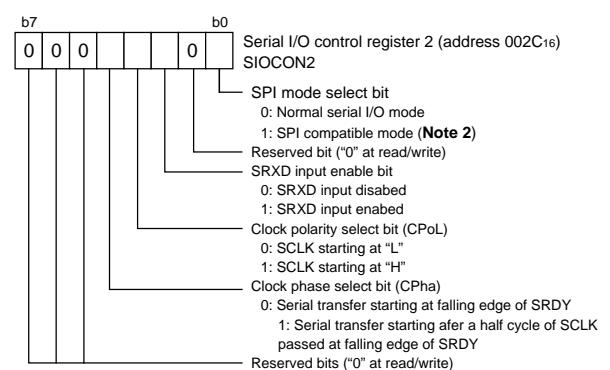
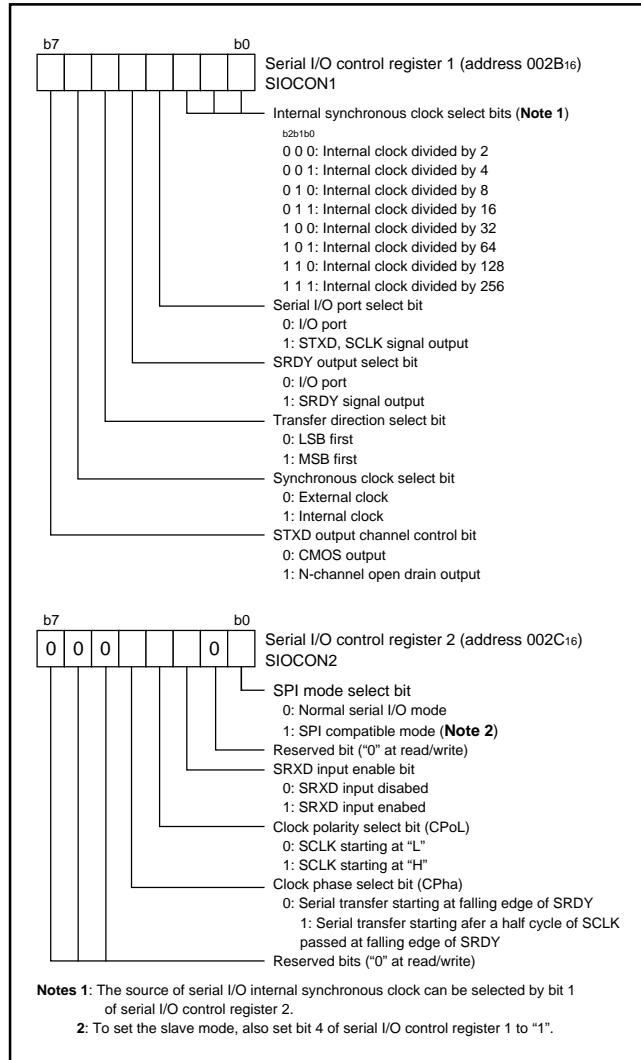
● SERIAL I/O

The serial I/O can be used only for clock synchronous serial I/O. The transmitter and the receiver must use the same clock. If the internal clock is used, transfer is started by a write signal to the serial I/O shift register.

[Serial I/O Control Register 1 (SIOCON1)] 002B16

[Serial I/O Control Register 2 (SIOCON2)] 002C16

Each of the serial I/O control registers 1 and 2 contains eight bits which control various serial I/O functions.



Notes 1: The source of serial I/O internal synchronous clock can be selected by bit 1 of serial I/O control register 2.

2: To set the slave mode, also set bit 4 of serial I/O control register 1 to "1".

Fig. 21 Structure of serial I/O control registers 1, 2

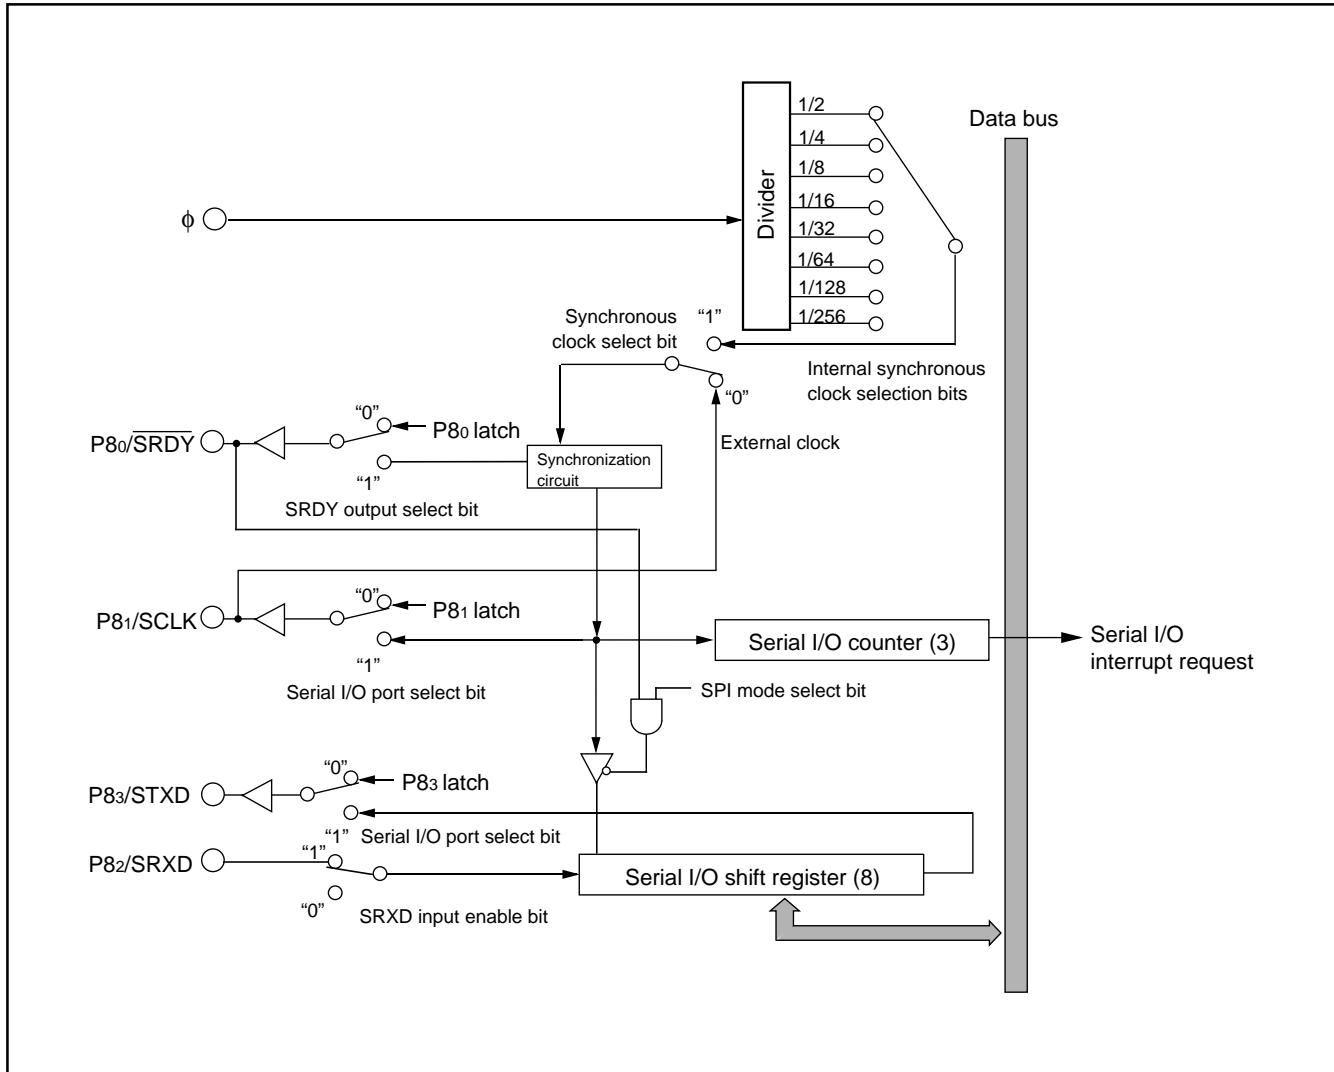


Fig. 22 Block diagram of serial I/O

Serial I/O Normal Operation

The serial I/O counter is set to "7" by writing operation to the serial I/O shift register (address 002A16). When the SRDY Output Select bit is "1", the SRDY pin goes "L" after that writing. On the negative edge of the transfer clock the SRDY pin returns "H" and the data of the first bit is transmitted from the STXD pin. The remaining data are done from the STXD pin bit by bit on each falling edge of the transfer clock.

Additionally, the data is latched from the SRXD pin on each rising edge of the transfer clock and then the contents of the serial I/O shift register are shifted by one bit.

When the internal system clock is selected as the transfer clock, the followings occur at counting eight transfer clocks:

- The serial I/O counter reaches "0"
- The transfer clock halts at "H"
- The serial I/O interrupt request bit is set to "1"
- The STXD pin goes a high-impedance state after an 8-bit transfer is completed.


When the external clock is selected as the transfer clock, the followings occur at counting eight transfer clocks:

- The serial I/O counter reaches "0"
- The serial I/O interrupt request bit is set to "1"

In this case, the transfer clock needs to be controlled by the external source because the transfer clock does not halt. Additionally, the STXD pin does not go a high-impedance state after an 8-bit transfer is completed.

Figure 23 shows serial I/O timing.

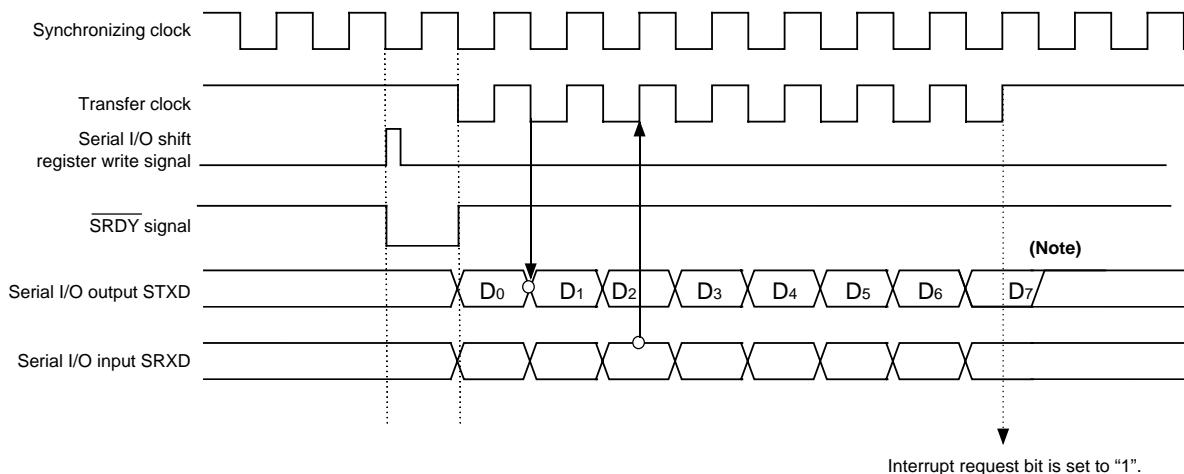●Normal mode timing (LSB first)



Note: When the internal clock is selected as the transfer clock, the STXD pin goes to a high-impedance state after transfer completion.

●SPI compatible mode timing

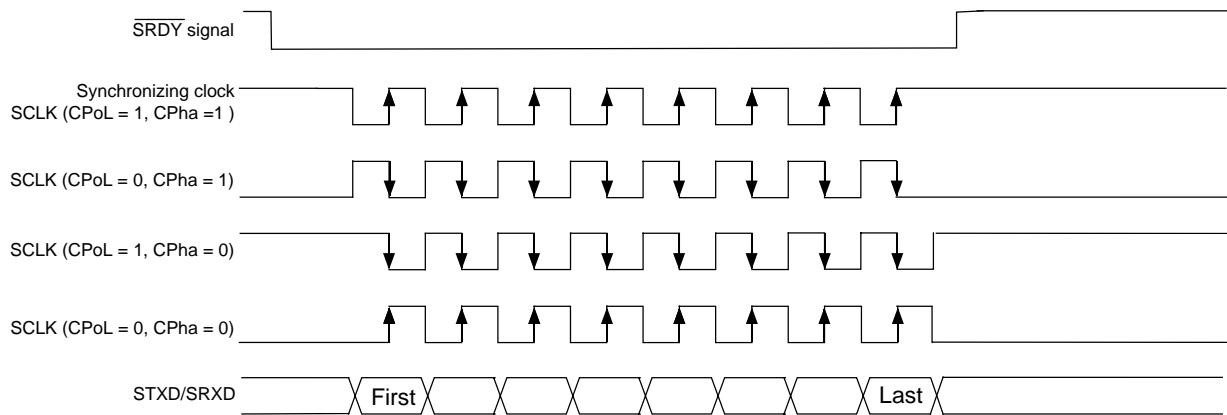


Fig. 23 Serial I/O timing

SPI Compatible Mode Operation

Setting the SPI Mode Select Bit (bit 0 of SIOCON2) puts the serial I/O in SPI compatible mode. The Synchronous Clock Select Bit (bit 6 of SIOCON1) determines whether the serial I/O is an SPI master or slave. When the external clock is selected ("0"), the serial I/O is in slave mode; When the internal clock is selected ("1"), the serial I/O is in master mode.

In SPI compatible mode the SRXD pin functions as a MISO (Master In/Slave Out) pin and the STXD pin functions as a MOSI (Master Out/Slave In) pin.

In slave mode the transmit data is output from the MISO pin and the receive data is input from the MISO pin. The SRDY pin functions as the chip-select signal input pin from an external.

In master mode the transmit data is output from the MOSI pin and the receive data is input from the MISO pin. The SRDY pin functions as the chip-select signal output pin to an external.

●Slave Mode Operation

In slave mode of SPI compatible mode 4 types of clock polarity and clock phase can be usable by bits 3 and 4 of serial I/O control register 2.

If the SRDY pin is held "H", the shift clock is inhibited, the serial I/O counter is set to "7". If the SRDY pin is held "L", then the shift clock will start.

Make sure during transfer to maintain the SRDY input at "L" and not to write data to the serial I/O counter.

Figure 23 shows the serial I/O timing.

UART

Twelve serial data transfer formats can be selected, and the transfer formats used by a transmitter and receiver must be identical.

The transmit and receive shift registers each have a buffer, but the two buffers have the same address in a memory. Since the shift register cannot be written to or read from directly, transmit data is written to the transmit buffer register, and receive data is read from the receive buffer register.

The transmit buffer register can also hold the next data to be transmitted, and the receive buffer register can hold a character while the next character is being received.

The transfer speed (baud rate) is expression as follows:

$$\text{Transfer speed (baud rate)} = f_i / \{(n + 1) \times 16\}$$

n: The contents of UART baud rate generator

f_i : Using UART clock prescaling select bits, select any one of ϕ , $\phi/8$,

$\phi/32$, $\phi/256$

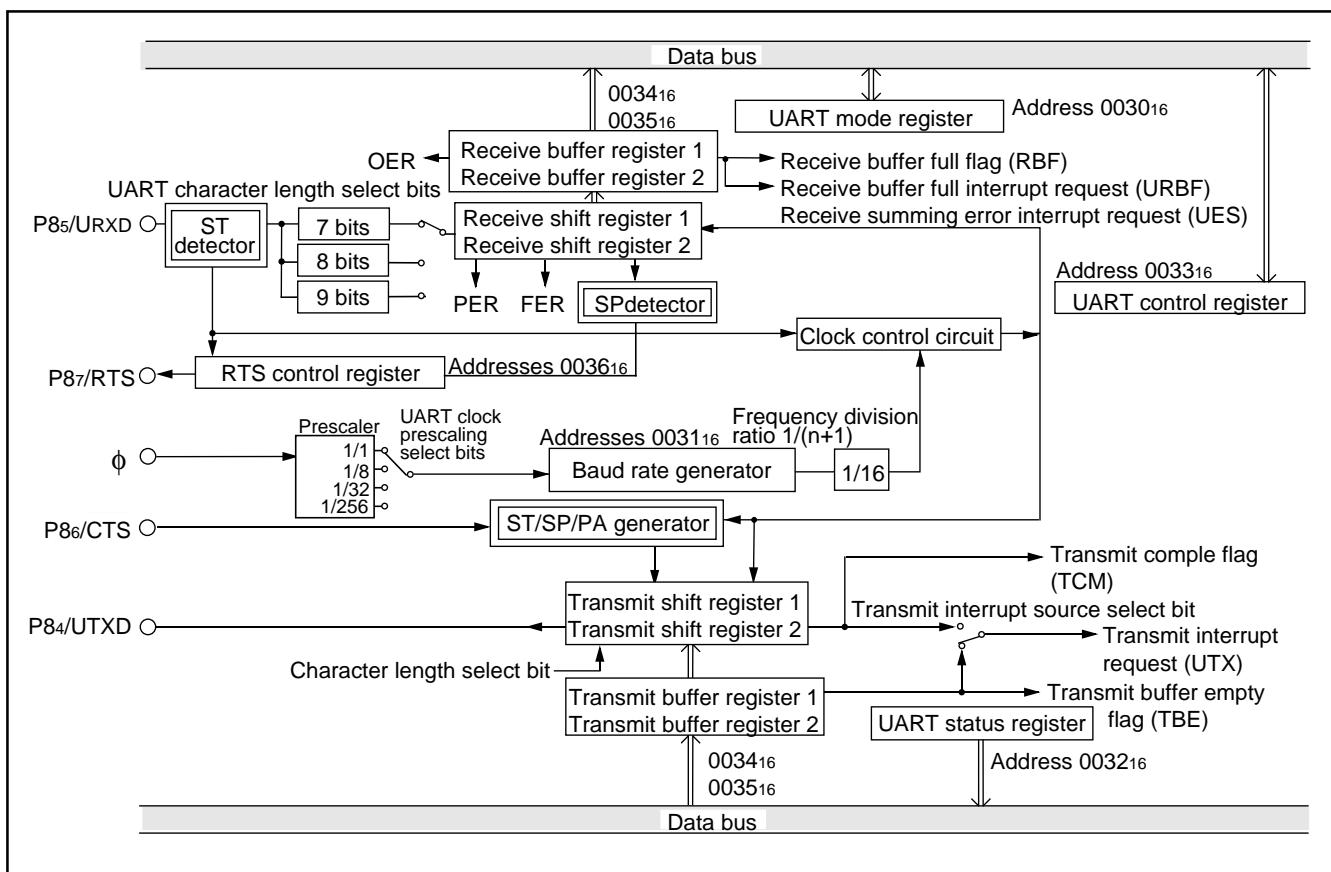


Fig. 24 UART block diagram

● UART Transmit Operation

Transmission starts when the Transmit Enable Bit is “1” and the Transmit Buffer Empty Flag is “0”. Additionally, when CTS function enabled, the CTS pin must be “L” to be started. The data in which Start Bit and Stop Bit or Parity Bit are also added is transmitted from the low-order byte sequentially. When using 9-bit character length, set the data into the UART transmit buffer register 2 (high-order byte) first before the UART transmit buffer register 1 (low-order byte).

Once the transmission starts, the Transmit Enable Bit, the Transmit Buffer Empty Flag and the CTS pin state (when this is enabled) could not be checked until the transmission in progress has ended.

Transmission requires the following setup:

- (1) Define a baud rate by setting a value n ($n = 0$ to 255) into UART baud rate generator (addresses 003116).
- (2) Set the Transmit Initialization Bit (bit 2 of UCON) to “1”. This will set the UART status register to “0316”.
- (3) Select the interrupt source with the Transmit Interrupt Source Select Bit (bit 4 of UCON).
- (4) Configure the data format and clock selection by setting the UART mode register.
- (5) Set the CTS Function Enable Bit (bit 5 of UCON) if CTS function will be used.
- (6) Set the Transmit Enable Bit (bit 0 of UCON) to “1”.

If updating a value of UART baud rate generator while the data is being transmitted, be sure to disable the transmission before updating. If the former data remains in the UART transmit buffer registers 1 and 2 at retransmission, an undefined data might be output.

● UART Receive Operation

Reception is enabled when the Receive Enable Bit is “1”. Detection of the start bit makes transfer clocks generated and the data reception starts in the LSB first.

When using 9-bit character length, read the received data from the UART receive buffer register 2 (high-order byte) first before the UART receive buffer register 1 (low-order byte).

Reception requires the following setup:

- (1) Define a baud rate by setting a value n ($n = 0$ to 255) into UART baud rate generator (addresses 003116).
- (2) Set the Receive Initialization Bit (bit 3 of UCON) to “1”.
- (3) Configure the data format and clock selection by setting the UART mode register.
- (4) Set the RTS Function Enable Bit (bit 5 of UCON) if RTS function will be used.
- (5) Set the Receive Enable Bit (bit 1 of UCON) to “1”.

● CTS (Clear-to-Send) Function

As a transmitter, the UART can be configured to recognize the Clear-to-Send (CTS) input as a handshaking signal. This is enabled by setting the CTS Function Enable Bit (bit 5 of UCON) to “1”. If CTS function is enabled, even when transmission is enabled and the UART transmit buffer register is filled with the data, the transmission never starts; but it will start when inputting “L” to the CTS pin.

Figures 25 and 26 show the UART transmit timings.

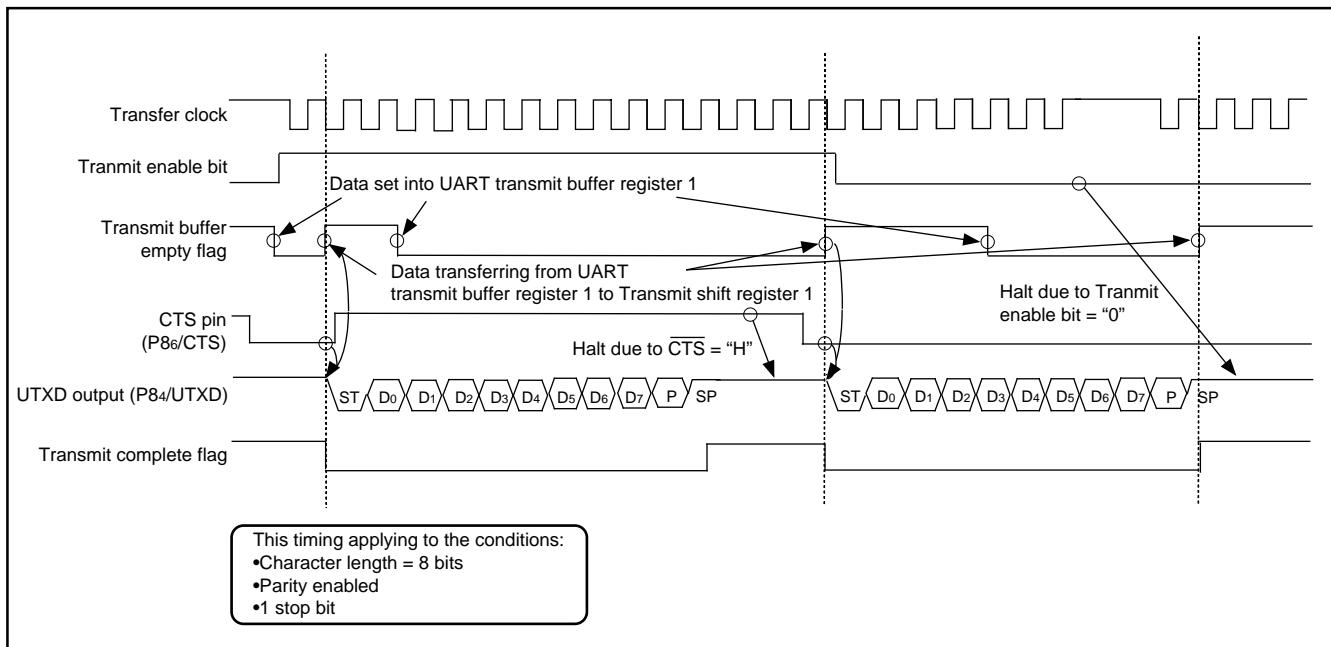


Fig. 25 UART transmit timing (CTS function enabled)

● RTS (Request-to-Send) Function

As a receiver, the UART can be configured to generate the Request-to-Send (RTS) handshaking signal. This is enabled by setting the RTS Function Enable Bit (bit 6 of UCON) to "1".

When reception is enabled, that is the Receive Enable Bit is "1", the RTS pin goes "L" to inform a transmitter that reception is possible. The RTS pin goes "H" at reception starting and does "L" at receiving of the last bit.

The delay time from the reception of the last stop bit to the assertion of RTS is selectable using the RTS Assertion Delay Count Select Bits.

When the Receive Enable Bit is set to "0" or the Receive initialization bit is set to "1", the RTS pin goes "H". Even when the Receive Enable Bit is set to "1", the RTS pin goes "H" if detecting an invalid start bit.

Figure 27 shows the UART receive timing.

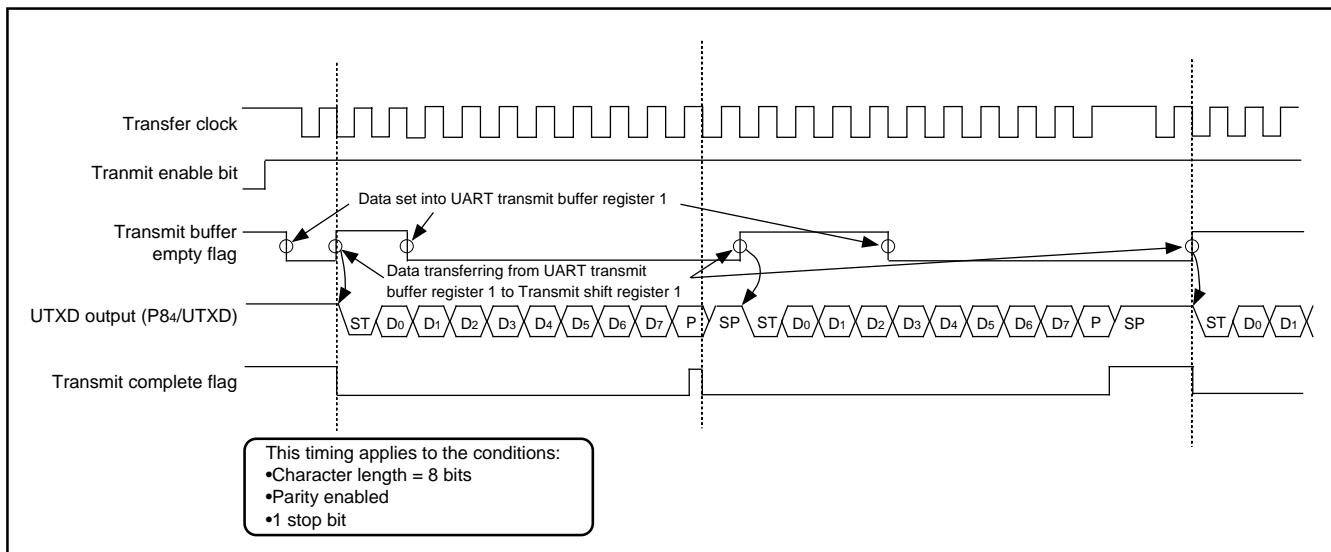


Fig. 26 UART transmit timing (CTS function disabled)

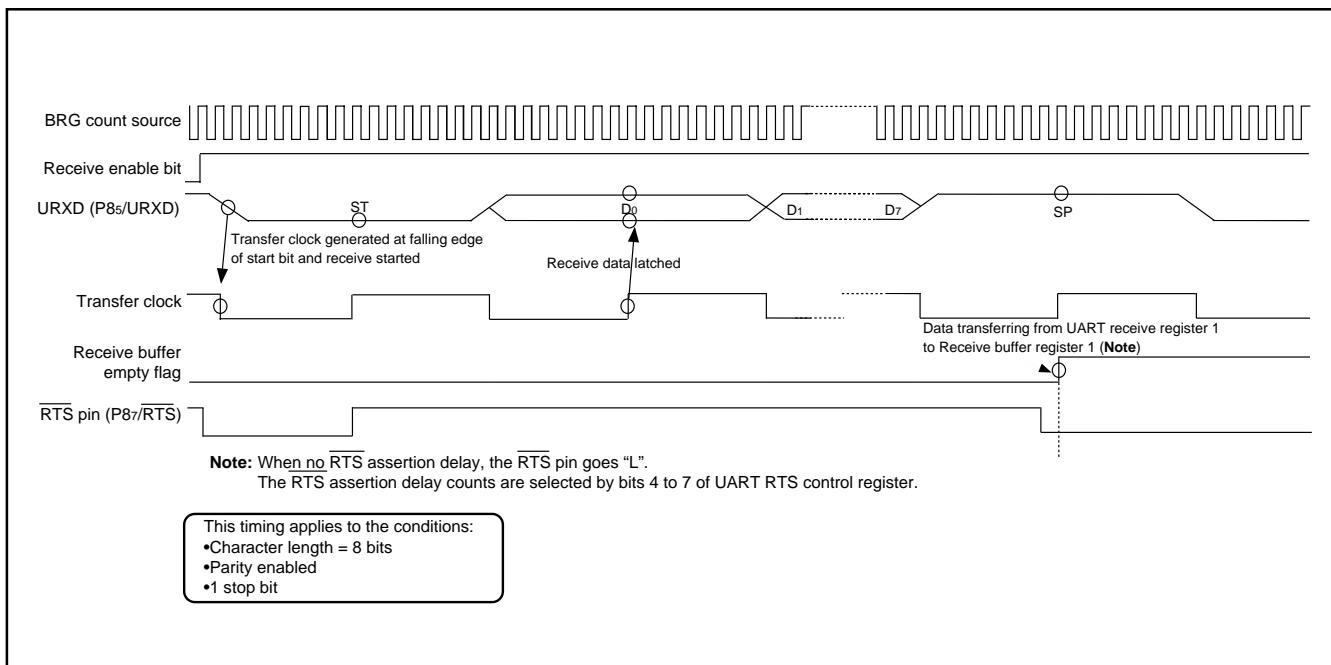


Fig. 27 UART receiving timing (RTS function enabled)

● UART Address Mode

The UART address mode is intended for use to communicate between the specified MCUs in a multi-MCU environment. The UART address mode can be used in either an 8-bit or 9-bit character length. An address is identified by the MSB of the incoming data being "1". The bit is "0" for non-address data.

When the MSB of the incoming data is "0" in the UART address mode, the Receive Buffer Full Flag is set to "1", but the Receive Buffer Full Interrupt Request Bit is not set to "1". When the MSB of the incoming data is "1", normal receive operation is performed. In the UART address mode an overrun error is not detected for reception of the 2nd and onward bytes. An occurrence of framing error or parity error sets the Summing Error Interrupt Request Bit to "1" and the data is not received independent of its MSB contents.

Usage of UART address mode is explained as follows:

- (1) Set the UART Address Mode Enable Bit to "1".
- (2) Sends the address data of a slave MCU first from a host MCU to all slave MCUs. The MSB of address data must be "1" and the remaining 7 bits specify the address.
- (3) The all slave MCUs automatically check for the received data whether its stop bit is valid or not, and whether the parity error occurs or not (when the parity enabled). If these errors occur, the Framing Error Flag or Parity Error Flag and the Summing Error Flag are set to "1". Then, the Summing Error Interrupt Request Bit is also set to "1".
- (4) When received data has no error, the all slave MCUs must judge whether the address of the received address data matches with their own addresses by a program. After the MSB being "1" is received, the UART Address Mode Enable Bit is automatically set to "0" (disabled).
- (5) The UART Address Mode Enable Bit of the slave MCUs which have be judged that the address does not match with them must be set to "1" (enabled) again by a program to disable reception of the following data.
- (6) Transmit the data of which MSB is "0" from the host MCU. The slave MCUs disabling the UART address mode receive the data, and their Receive Buffer Full Flags and the Receive Buffer Full Interrupt Request Bits are set to "1". For the other slave MCUs enabling the UART address mode, their Receive Buffer Full Flag are set to "1", but their Receive Buffer Full Interrupt Request Bits are not set to "1".
- (7) An overrun error cannot be detected after the first data has been received in UART Address Mode. Accordingly, even if the slave MCUs does not read the received data and the next data has been received, an overrun error does not occur.

Thus, a communication between a host MCU and the specified MCU can be realized.

[UART Mode Register (UMOD)] 003016

The UART mode register consists of 8 bits which set a transfer data format and an used clock.

[UART Baud Rate Generator (UBRG)] 003116

The UART baud rate generator determines the baud rate for transfer.

The baud rate generator divides the frequency of the count source by $1/(n + 1)$, where n is the value written to the baud rate generator.

The reset cannot affect the contents of baud rate generator.

[UART Status Register (USTS)] 003216

The read-only UART status register consists of seven flags (bits 0 to 6) which indicate the UART operating status and various errors.

When the UART address mode is enabled, the setting and clearing conditions of each flag differ from the following explanations. These differences are explained in section "UART Address Mode".

•Transmit complete flag (TCM)

In the case where no data is contained in the transmit buffer register, the Transmit Complete Flag (TCM) is set to "1" when the last bit in the transmit shift register is transmitted.

The TCM flag is also set to "1" at reset or initialization by setting the Transmit Initialization Bit (bit 2 of UCON). It is set to "0" when transmission starts, and it is kept during the transmission.

•Transmit buffer empty flag (TBE)

The Transmit Buffer Empty Flag (TBE) is set to "1" when the contents of the transmit buffer register are loaded into the transmit shift register. The TBE flag is also set "1" at the hardware reset or initialization by setting the Transmit Initialization Bit. It is set to "0" when a write operation is performed to the low-order byte of the transmit buffer register.

•Receive buffer full flag (RBF)

The Receive Buffer Full Flag (RBF) is set to "1" when the last stop bit of the data is received. The RBF flag is set to "0" when the low-order byte of the receive buffer register is read, at the hardware reset or initialization by setting the Transmit Initialization Bit.

●Receive Errors

If there is an error, it is detected at the same time that data is transferred from the receive shift register to the receive buffer register, and the Receive Buffer Full Flag is set to "1". The all error flags PER, FER, OER and SER are cleared to "0" when the UART status register is read, at the hardware reset or initialization by setting the Transmit Initialization Bit.

The Summing Error Flag (SER) is set to "1" when any one of the PER, FER and OER is set to "1".

The Parity Error Flag (PER) is set to "1" when the sum total of 1s of received data and the parity does not correspond with the selection with the Parity Select Bit (PMD). It is enabled only if the Parity Enable Bit (bit 5 of UMOD) is set to "1".

The Framing Error Flag (FER) is set to "1" when the number of stop bit of the received data does not correspond with the selection with the Stop Bit Length Select Bit (STB).

The Overrun Flag Flag (OER) is set to "1" if the previous data in the low-order byte of the receive buffer register 1 (addresses 003416) is not read before the current receive operation is completed. It is also set "1" if any one of error flags is "1" for the previous data and the current receive operation is completed. Be sure to read UART status register to clear the error flags before the next reception has been completed.

[UART Control Register (UCON)] 003316

The UART control register consists of eight control bits for the UART function. This register can enable the CTS, RTS and UART address mode.

If the Transmit Enable Bit (TEN) is set to "0" (disabled) while a data is being transmitted, the transmitting operation will stop after the data has been transmitted. If the Receive Enable Bit (REN) is set to "0" (disabled) while a data is being received, the receiving operation will stop after the data has been received.

When setting the Transmit Initialization Bit (TIN) to "1", the TEN bit is set to "0" and the UART status register will be set to "0316" after the data has been transmitted. To retransmit, set the TEN to "1" and set a data to the transmit buffer register again. The TIN bit will be cleared to "0" one cycle later after the TIN bit has been set to "1".

Setting the Receive Initialization Bit (RIN) to "1" sets all of the REN, RBF and the receive error flags (PER, FER, OER, SER) to "0". The RIN bit will be cleared to "0" one cycle later after the RIN bit has been set to "1".

When CTS or RTS function is disabled, pins CTS and RTS can be used as ordinary I/O ports, correspondingly.

[UART Transmit/Receive Buffer Registers 1, 2 (UTRB1/UTRB2)] 003416, 003516

The transmit buffer register and the receive buffer register are located at the same address. The transmit buffer register is write-only and the receive buffer register is read-only. If a character bit length is 7 bits, the MSB of received data is invalid. If a character bit length is 7 or 8 bits, the received contents of UTRB2 are also invalid. If a character bit length is 9 bits, the received high-order 7 bits of UTRB2 are "0".

[UART RTS Control Register (URTS)] 003616

The delay time from the reception of the last stop bit to the assertion of RTS is selectable using the RTS Assertion Delay Count Select Bits. If the stop bit is detected before RTS assertion delay time has expired, the RTS pin is kept "H". The RTS assertion delay count starts after the last data reception is completed.

Setting the RIN bit to "1" resets the URTS. After setting the RIN bit to "1", set this URTS.

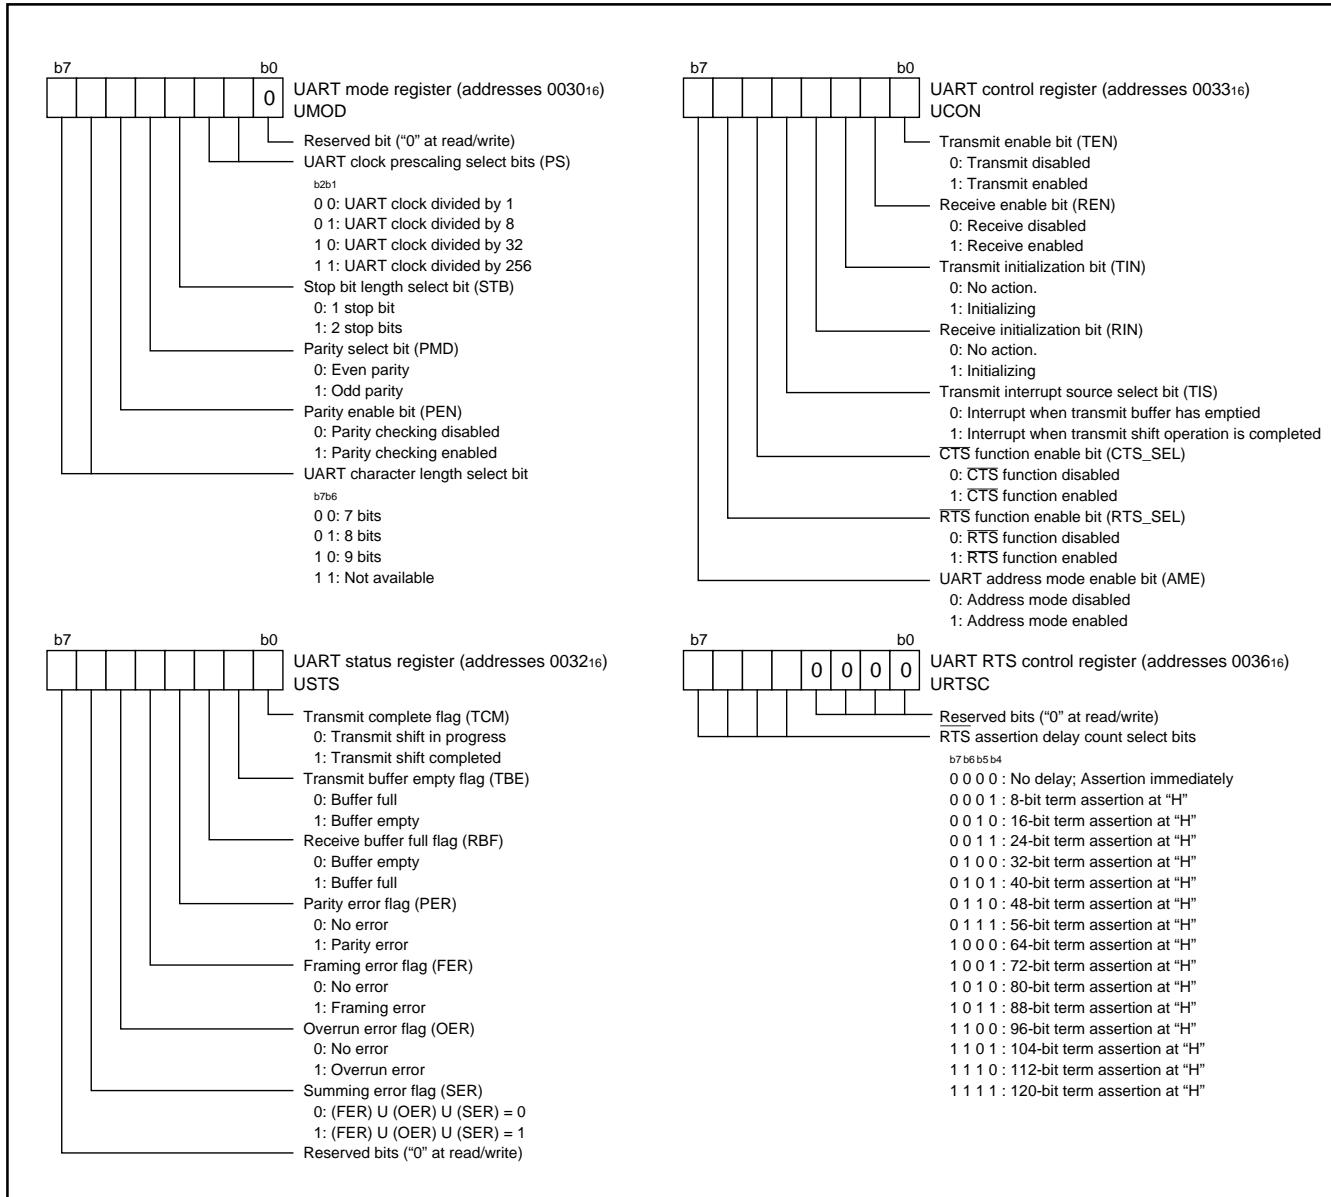


Fig. 28 Structure of UART related registers

DMAC

The 7643 group is equipped with 2 channels of DMAC (direct memory access controller) which enable high speed data transfer from a memory to a memory without use of the CPU.

The DMAC initiates the data transfer with an interrupt factor specified by the DMAC channel x ($x = 0, 1$) hardware transfer request source bit (DxHR), or with a software trigger.

The DxTMS [DMA Channel x ($x = 0, 1$) Transfer Mode Selection Bit] selects one of two transfer modes; cycle steal mode or burst transfer mode. In the cycle steal mode, the DMAC transfers one byte of data for each request. In the burst transfer mode, the DMAC transfers the number of bytes data specified by the transfer count register for each request. The count register is a 16-bit counter; the maximum number of data is 65,536 bytes per one request.

Figure 29 shows the DMA control block diagram and Figure 30 shows the structure of DMAC related registers.

[DMAC Index and Status Register] DMAIS

The DMAC Index and Status Register consists of various control bits for the DMAC and its status flags.

The DMA Channel Index Bit (DCI) selects which channel (0 or 1) will be accessed, since the mode registers, source registers, destination registers and transfer count register of both DMAC channels share the same SFR addresses, respectively.

[DMAC Channel x ($x = 0, 1$) Mode Registers 1, 2] DMAxM1, DMAxM2

The 16 bits of DMAC Channel x Mode Registers 1 and 2 control each operation of DMAC channels 0 and 1.

When the DMAC Channel x ($x = 0, 1$) Write Bit (DxDWC) is "0", data is simultaneously written into each latch and register of the Source Registers, Destination Register, and Transfer Count Registers. When this bit is "1", data is written only into their latches.

When data is read from each register, it must be read from the higher bytes first, then the lower bytes. When writing data, write to the lower bytes first, then the higher bytes.


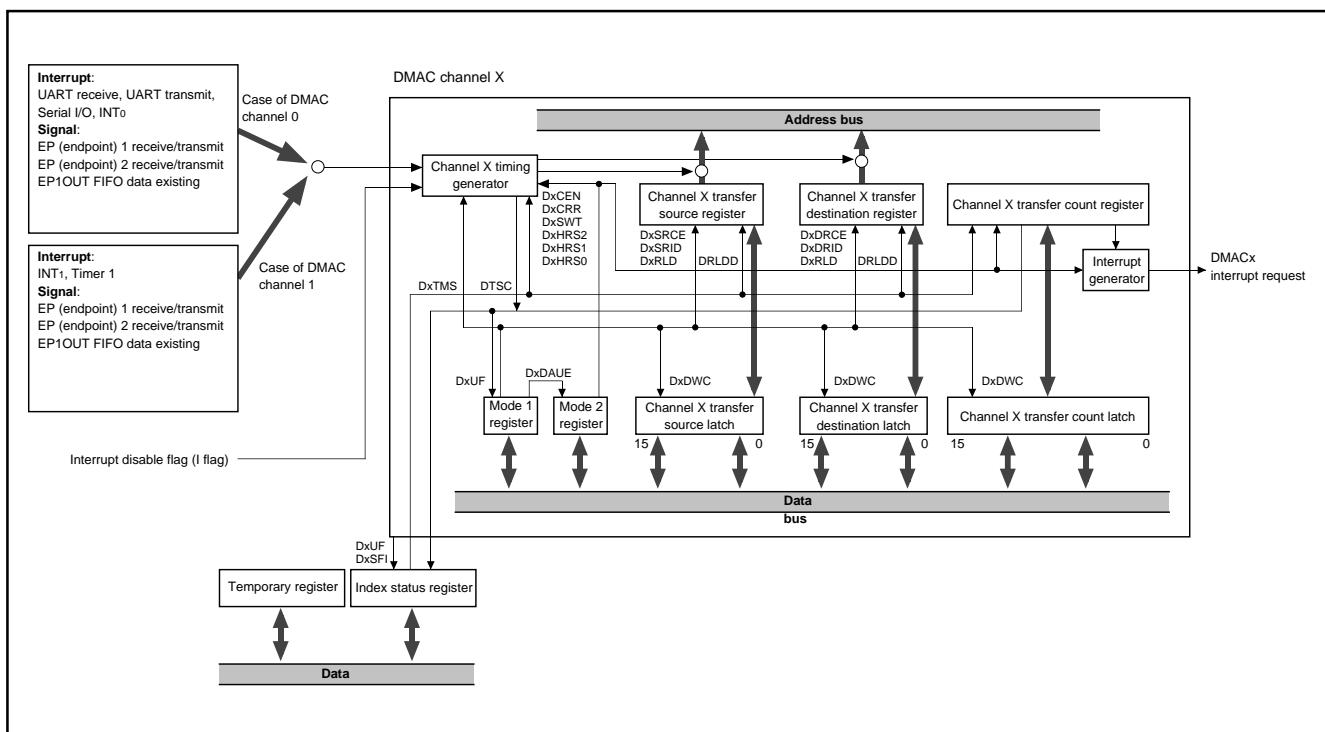


Fig. 29 DMACx ($x = 0, 1$) block diagram

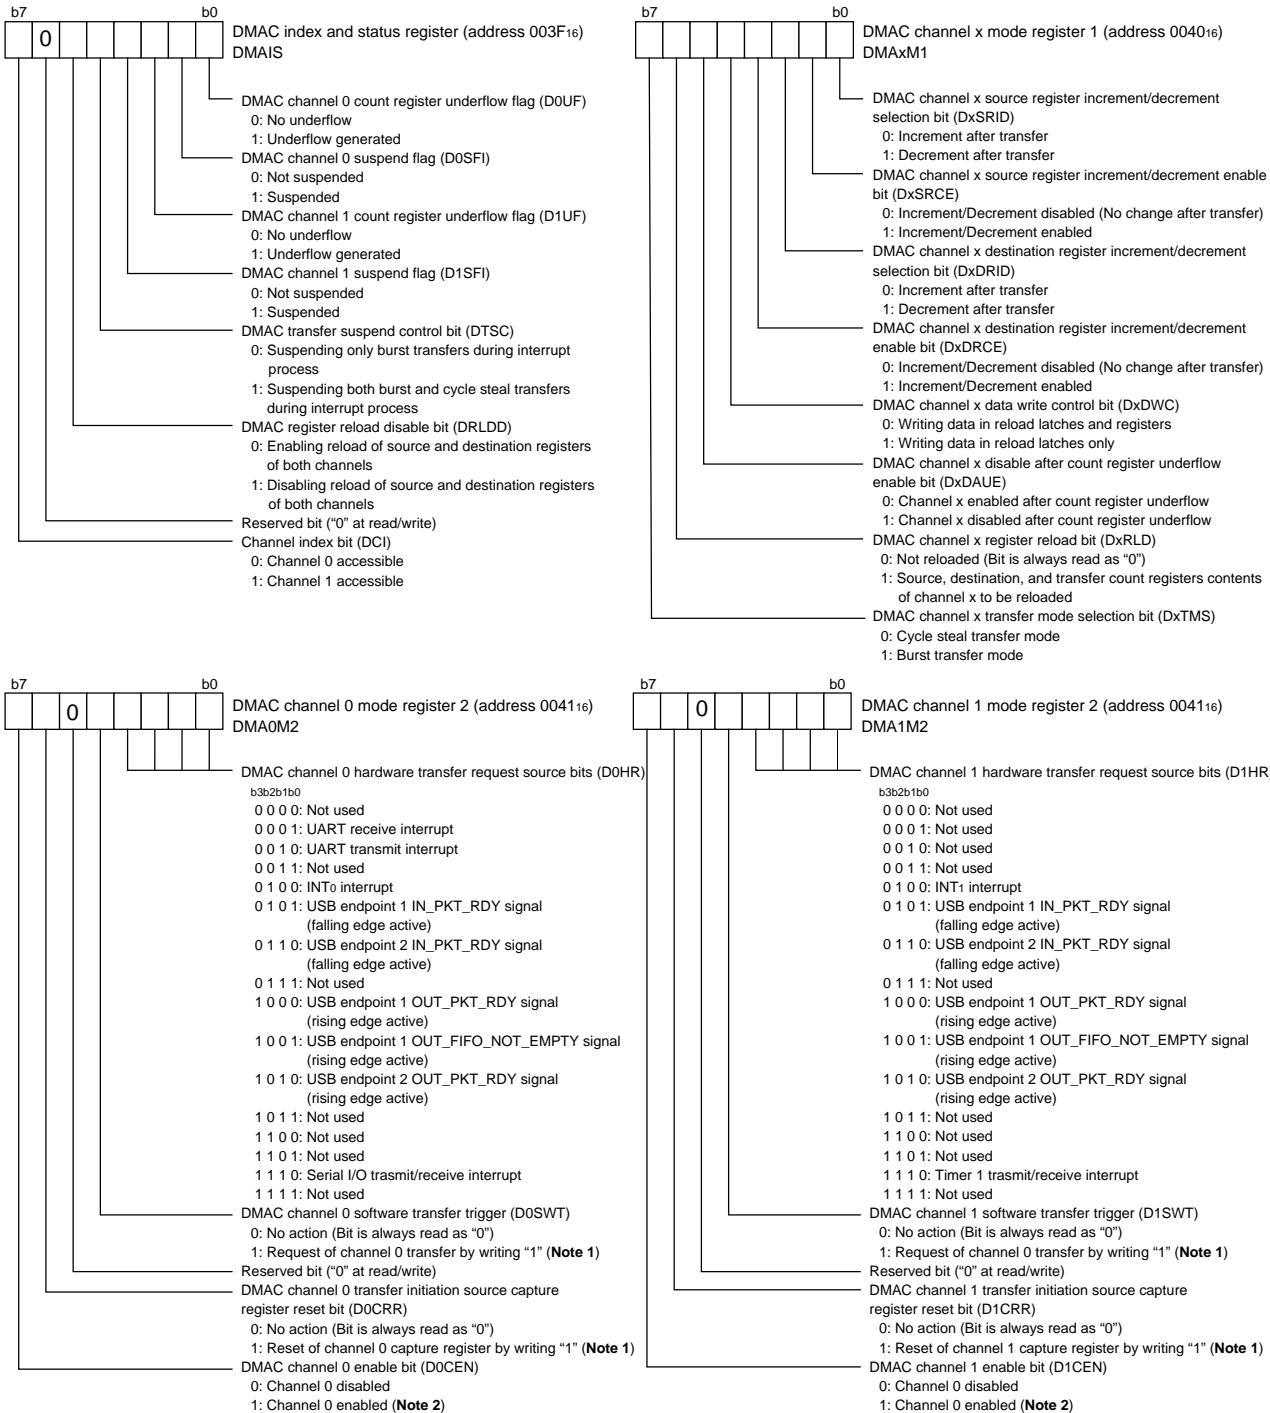

Notes 1: This bit is automatically cleared to "0" after writing "1".

2: When setting this bit to "1", simultaneously set the DMAC channel x transfer initiation source capture register reset bit (bit 6 of DMAxM2) to "1".

Fig. 30 Structure of DMACx related register

(1) Cycle Steal Transfer Mode

When the DMAC Channel x (x = 0, 1) Transfer Mode Selection Bit (DxTMS) is set to "0", the respective DMAC Channel x operates in the cycle steal transfer mode.

When a request of the specified transfer factor is generated, the selected channel transfers one byte of data from the address indicated by the Source Register into the address indicated by the Destination Register.

There are two kinds of DMA transfer triggers supported: hardware transfer factor and software trigger. Hardware transfer factors can be selected by the DMACx (x = 0, 1) Hardware Transfer Request source Bit (DxHR). To only use the Interrupt Request Bit, the interrupt can be disabled by setting its Interrupt Enable Bit of Interrupt Control Register to "0".

The DMA transfer request as a software trigger can be generated by setting the DMA Channel x (x = 0, 1) Software Transfer Trigger Bit (DxSWT) to "1".

The Source Registers and Transfer Destination Registers can be either decreased or increased by 1 after transfer completion by setting bits 0 to 3 in the DMAC Channel x (x = 0, 1) Mode Register. When the Transfer Count Register underflows, the Source Registers and Destination Registers are reloaded from their latches if the DMAC Register Reload Disable Bit (DRLDD) is "0". The Transfer Count Register value is reloaded after an underflow regardless of DRLDD setting. At the same time, the DMAC Interrupt Request Bit and the DMA Channel x (x = 0, 1) Count Register Underflow Flag are set to "1".

The DMAC Channel x Disable After Count Register Underflow Enable Bit (DxDAAE) is "1", the DMAC Channel x Enable Bit (DxCEN) goes to "0" at an under flows of Transfer Count Register.

By setting the DMAC Channel x (x = 0, 1) Register Reload Bit (DxRLD) to "1", the Source Registers, Destination Registers, and Transfer Count Registers can be updated to the values in their respective latches.

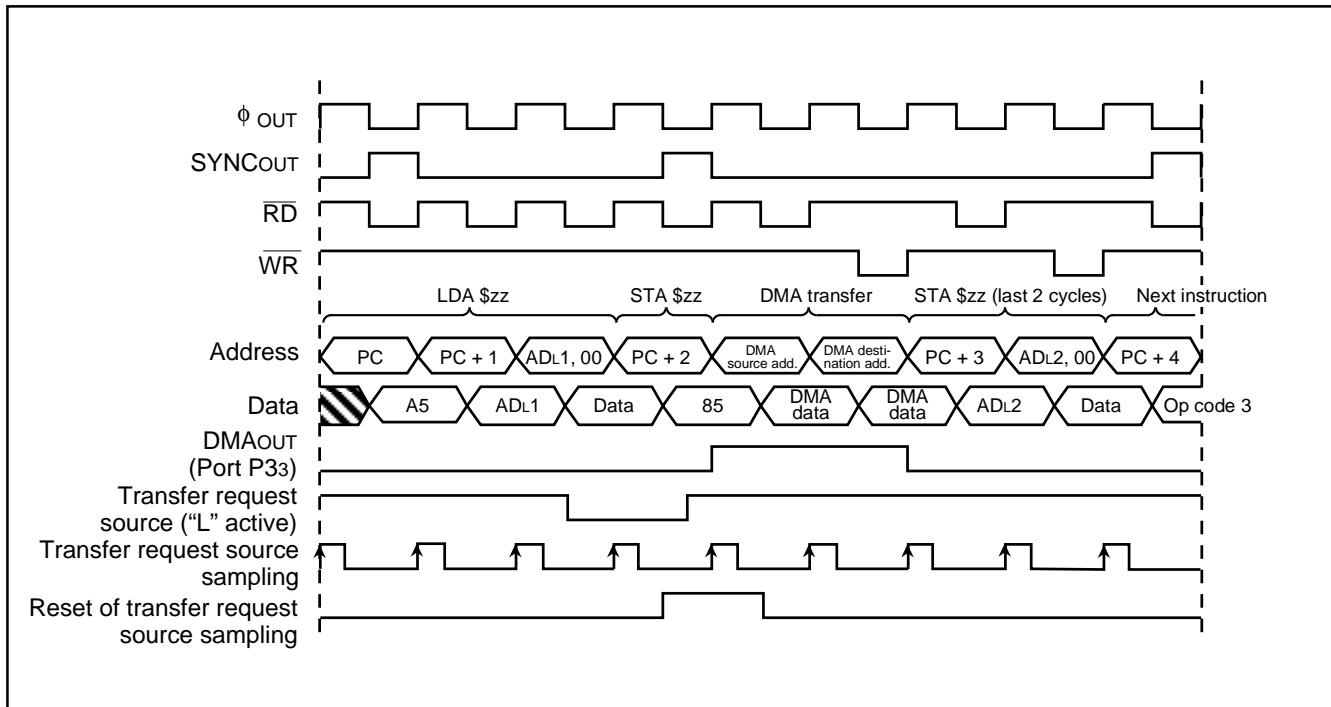


Fig. 31 Timing chart for cycle steal transfer caused by hardware-related transfer request

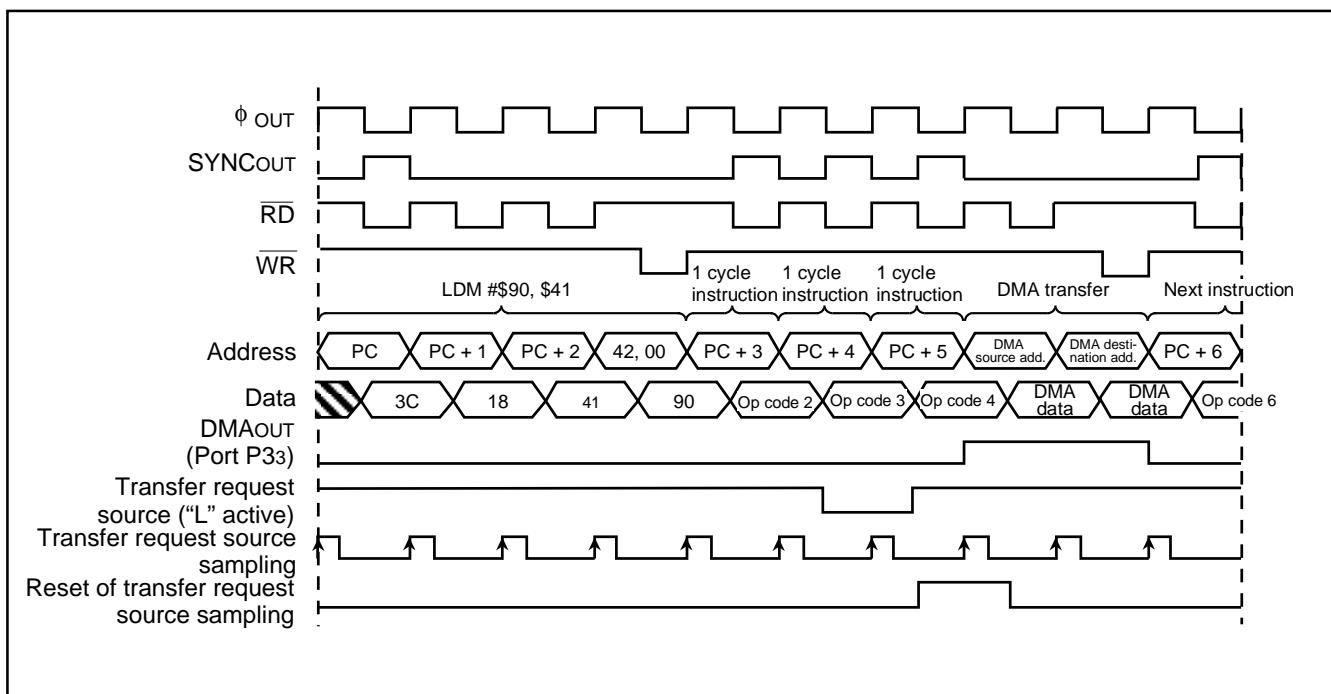


Fig. 32 Timing chart for cycle steal transfer caused by software trigger transfer request

(2) Burst Transfer Mode

When the DMAC Channel x Transfer Mode Selection Bit (DxTMS) is set to "1", the respective DMAC channel operates in the burst transfer mode.

In the burst transfer mode, the DMAC continually transfers the number of bytes of data specified by the Transfer Count Register for one transfer request. Other than this, the burst transfer mode operation is the same as the cycle steal mode operation.

Priority

The DMAC places a higher priority on Channel-0 transfer requests than on Channel-1 transfer requests.

If a Channel-0 transfer request occurs during a Channel-1 burst transfer operation, the DMAC completes the next transfer source and destination read/write operation first, and then starts the Channel-0 transfer operation. As soon as the Channel-0 transfer is completed, the DMAC resumes the Channel-1 transfer operation.

When an interrupt request occurs during any DMA operation, the transfer operation is suspended and the interrupt process routine is initiated. During the interrupt operation, the DMAC automatically sets the corresponding DMAC Channel x (x = 0, 1) Suspend Flag (DxSFI) to "1". As soon as the CPU completes the interrupt operation, the DMAC clears the flag to "0" and resumes the original operation from the point where it was suspended.

The suspended transfer due to the interrupt can also be resumed during its interrupt process routine by writing "1" to the DMAC Channel x (x = 0,1) Enable Bit (DxCEN).

The timing charts for a burst transfer caused by a hardware-related transfer request are shown in Figure 33.

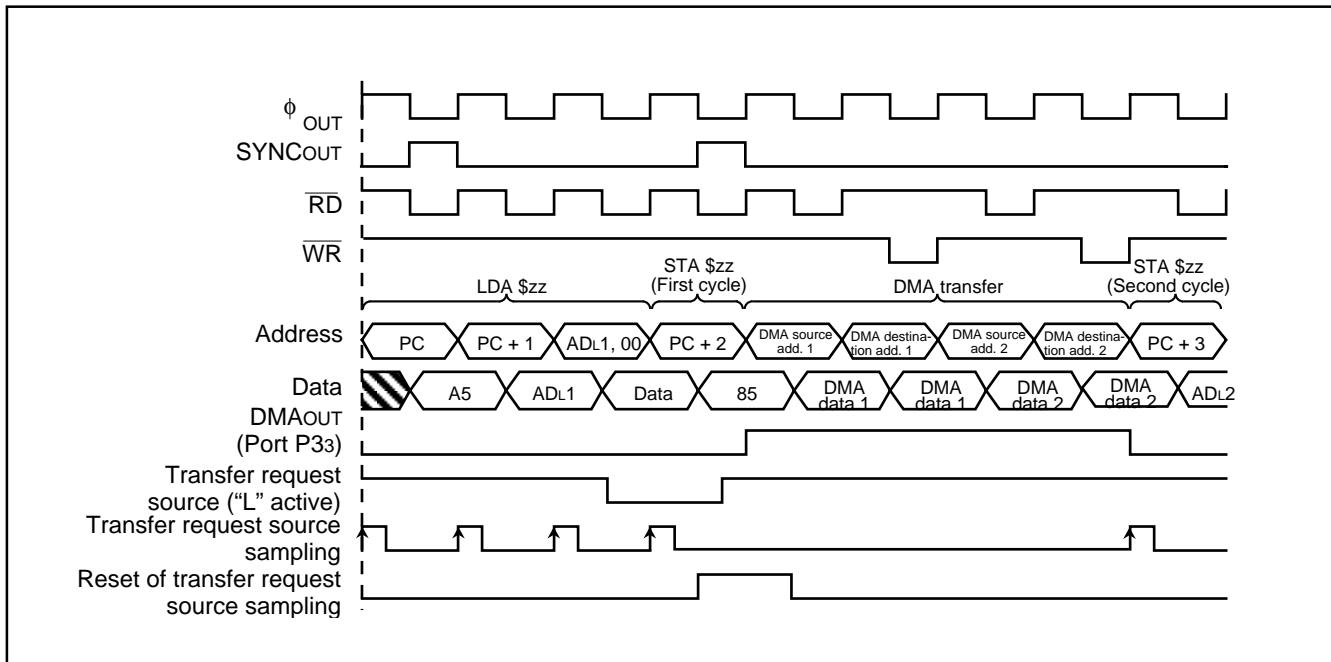


Fig. 33 Timing chart for burst transfer caused by hardware-related transfer request

USB FUNCTION

The 7643 Group MCU is equipped with a USB Function Control Unit (USB FCU). This USB FCU allows the MCU to communicate with a host PC using a minimum amount of the MCU power. This built-in USB FCU complies with Full-Speed USB2.0 specification that supports four transfer types: Control Transfer, Isochronous Transfer, Interrupt Transfer, and Bulk Transfer. However, the 7643 Group can use three of Control Transfer, Interrupt Transfer and Bulk Transfer. This built-in USB FCU performs the data transfer error detection and transfer retry operation by hardware. The default transfer mode of the USB FCU is bulk transfer mode at reset. The user must set the USB FCU for the required transfer mode by software.

The USB FCU has three endpoints (Endpoint 0 to Endpoint 2). The EPINDEX bit selects one of these five endpoints for the USB FCU to use. Each endpoint has IN (transmit) FIFO and OUT (receive) FIFO. To use the USB FCU, the USB enable bit (USBC7) must be set to "1". The USB Function Interrupt is supported for this MCU.

Figure 34 shows the USB FCU (USB Function Control Unit) block diagram. The USB FCU consists of the SIE (Serial Interface Engine) performing the USB data transfer, GFI (Generic Function Interface) performing USB protocol handling, SIU (Serial Engine Interface Unit) performing a received address and endpoint decoding, MCI (Microcontroller Interface) handling the MCU interface or performing address decoding and synchronization of control signals, and the USB transceiver.

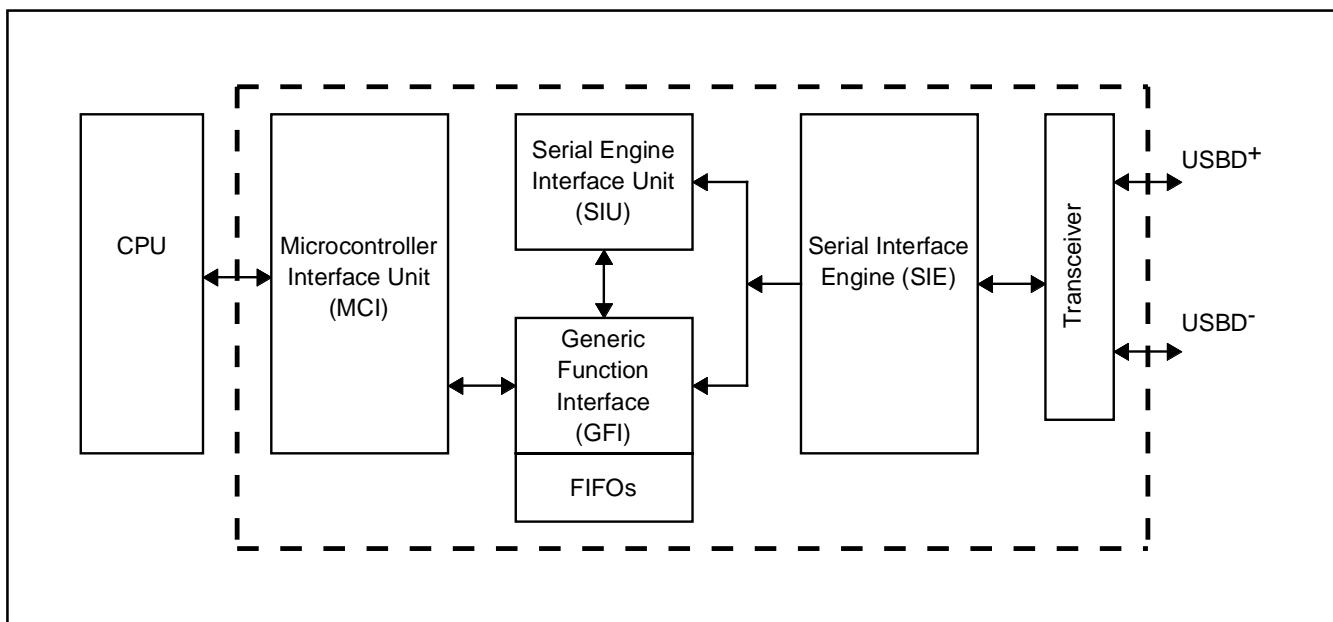


Fig. 34 USB FCU (USB Function Control Unit) block

USB Transmission

Endpoint 0 to Endpoint 2 have IN (transmit) FIFOs individually.

Each endpoint's FIFO is configured in following way:

Endpoint 0: 16-byte

Endpoint 1: 128-byte

Endpoint 2: Mode 0: 32-byte

Mode 1: 128-byte

When Endpoint 2 is used for data transmit, the IN FIFO size can be selected. Endpoint 2 have 2 modes programmable IN-FIFO. Each mode can be selected by the USB endpoint FIFO mode selection register (address 005F16).

When writing data to the USB Endpoint-x FIFO (addresses 006016 to 006216) in the SFR area, the internal write pointer for the IN FIFO is automatically increased by 1. When the AUTO_SET bit is "1" and if the stored data reaches to the max. packet value set in USB Endpoint x IN max. packet size register (address 005B16), the USB FCU sets the IN_PKT_RDY bit to "1". When the AUTO_SET bit is "0", the IN_PKT_RDY bit will not be automatically set to "1"; it must be set to "1" by software. (The AUTO_SET bit function is not applicable to Endpoint 0.)

The USB FCU transmits the data when it receives the next IN token. The IN_PKT_RDY bit automatically goes to "0" when the data transfer is complete.

●Interrupt transfer mode

Endpoints 1 to 2 can be used in interrupt transfer mode. During a regular interrupt transfer, an interrupt transaction is similar to the bulk transfer. Therefore, there is no special setting required. When IN-endpoint is used for a rate feedback interrupt transfer, INTPT bit of the IN_CSR register must be set to "1". The following steps show how to configure the IN-endpoint for the rate feedback interrupt transfer.

1. Set a value which is larger than 1/2 of the USB Endpoint-x FIFO size to the USB Endpoint x IN max. package size register.
2. Set INTPT bit to "1".
3. Flush the old data in the FIFO.
4. Store transmission data to the IN FIFO and set the IN_PKT_RDY bit to "1".
5. Repeat steps 3 and 4.

In a real application, the function-side always has transfer data when the function sends an endpoint in a rate feedback interrupt. Accordingly, the USB FCU never returns a NAK against the host IN token for the rate feedback interrupt. The USB FCU always transmits data in the FIFO in response to an IN token, regardless of IN_PKT_RDY. However, this premises that there is always an ACK response from Host PC after the 7643 Group has transmitted data to IN token.

When MAXP size \leq (a half of IN FIFO size), the IN FIFO can store two packets (called double buffer). At this time, the IN FIFO status can be checked by monitoring the IN_PKT_RDY bit and the TX_NOT_EPT flag. The TX_NOT_EPT flag is a read-only flag which shows the FIFO state. When IN_PKT_RDY = 0 and TX_NOT_EPT = 0, IN FIFO is empty. When IN_PKT_RDY = 0 and TX_NOT_EPT = 1, IN FIFO has one packet.

In double buffer mode, as long as the IN FIFO is not filled with double packets, IN_PKT_RDY will not be set to "1", even if it is set to "1" by software, but TX_NOT_EPT flag will be set to "1". In single buffer mode, if MAXP > (a half of IN FIFO), this condition never occurs.

When IN_PKT_RDY = "1" and TX_NOT_EPT = "1", IN FIFO holds two packets in double buffer mode and one packet in single packet mode. In single packet mode, when the IN_PKT_RDY bit is set to "1" by software, the TX_NOT_EPT flag is set to "1" as well. During double buffer mode, if you want to load two packets sequentially, you must set the IN_PKT_RDY bit to "1" each time a packet is loaded.

USB Reception

Endpoint 0 to Endpoint 2 have OUT (receive) FIFOs individually.

Each endpoint's FIFO is configured in following way:

Endpoint 0: 16-byte

Endpoint 1: 128-byte

Endpoint 2: Mode 0: 32-byte

Mode 1: 128-byte

When Endpoint 2 is used for data receive, the OUT FIFO size can be selected. Endpoint 2 have 2 modes programmable IN-FIFO.

Each mode can be selected by the USB endpoint FIFO mode selection register (address 005F16).

Data transmitted from the host-PC is stored in Endpoint x FIFO (006016 to 006216). Every time the data is stored in the FIFO, the internal OUT FIFO write pointer is increased by 1. When one complete data packet is stored, the OUT_PKT_RDY flag is set to "1" and the number of received data packets is stored in USB Endpoint x OUT write count register. When the AUTO_CLR bit is "1" and the received data is read out from the OUT FIFO, the OUT_PKT_RDY flag is cleared to "0". When the AUTO_CLR bit is "1", the OUT_PKT_RDY flag will not be cleared automatically by the FIFO read; it must be cleared by software. (The AUTO-CLR bit function is not applicable in Endpoint 0.)

When MAXP size \leq (a half of OUT FIFO size), the OUT_FIFO can receive 2 packets (double buffer). At this time, the OUT_FIFO status can be checked by the OUT_PKT_RDY flag. When the FIFO holds two packets and one packet is read from the FIFO, the OUT_PKT_RDY flag is not cleared even if it is set to "0". (The flag returns from "0" to "1" in one ϕ cycle after the read-out). During double buffer mode, the USB Endpoint x OUT write count register holds the number of previously received packets. This count register is updated after reading out one of packets in the OUT FIFO and clearing the OUT_PKT_RDY flag to "0".

TOGGLE Initialization

In order to initialize the data toggle sequence bit of the endpoint, in other words, resetting the next data packet to DATA0; set the TOGGLE_INT bit to "1" and then clear back to "0".

USB Interrupts

The USB FCU has USB Function Interrupt.

●USB Function Interrupt (USBF-INT)

The USBF-INT is usable for the USB data flow control and power management. The USBF-INT request occurs at data transmit/receive completion, overrun/underrun, reset, or receiving suspend/resume signal. To enable this interrupt, the USB function interrupt enable bit in the interrupt control register A (address 000516) and the respective bit in the USB interrupt enable registers 1 and 2 (addresses 0005416 and 0005516) must be set to "1". When setting bit 7 in USB interrupt enable register 2 to "1", the suspend interrupt and the resume interrupt are enabled.

Endpoint x (x = 0 to 2) IN interrupt request occurs when the USB Endpoint x IN interrupt status flag (INTST 0, 2, 4) of USB interrupt status registers 1 and 2 (addresses 005216 and 005316) is "1". The USB Endpoint x IN interrupt status flag is set to "1" when the respective endpoint IN_PKT_RDY bit is "1".

Endpoint x (x = 0 to 2) OUT interrupt request occurs when the USB endpoint x OUT interrupt status flag (INTST3, 5) in USB interrupt status registers 1 and 2 is set to "1". The USB Endpoint x OUT interrupt status flag is set to "1" when the respective endpoint OUT_PKT_RDY flag is "1".

The USB reset interrupt request occurs when the USB reset interrupt status flag (INTST13) in USB interrupt status register 2 is set to "1". This flag is set when the SEO is detected on the D+/D- line for at least 2.5 μ s. When this situation happens, all USB internal registers (addresses 005016 to 005F16), except this flag, are initialized to the default state at reset. The USB reset interrupt is always enabled.

The suspend/resume interrupt request occurs when either the USB resume signal interrupt status flag (INTST14) or the USB suspend signal interrupt status flag (INTST15) in USB interrupt status register 2 is set to "1".

The bits in both interrupt status registers 1 and 2 can be cleared by writing "1" to each bit.

Suspend/Resume Functions

If no bus activity is detected on the D+/D- line for at least 3 ms, the USB suspend signal detect flag (SUSPEND) of the USB power control register (address 005116) and the USB suspend signal interrupt status flag of USB interrupt status register 2 are set to "1" and the suspend interrupt request occurs. The following procedure must be executed after pushing the internal registers (A, X, Y) to memories during the suspend interrupt process routine.

- (1) Clear all bits of USB interrupt status register 1 (address 005216) and USB interrupt status register 2 (address 005316) to "0".

- (2) Set the USB clock enable bit to "0". (After disabling the USB clock, do not write to any of the USB internal registers (addresses 005016 to 006216), except for the USB control register (address 001316), clock control register (address 001F16), and frequency synthesizer control register (address 006C16).)
- (3) Set the frequency synthesizer enable bit to "0".
- (4) Set the USB line driver current control bit to "1". (Always keep the USB line driver current control bit set to "0" during USB function operations. When operating at Vcc = 3.3 V, this bit does not need to be set.)
- (5) Keep total drive current at 500 μ A or less.
- (6) Disable the timer 1 interrupt.
- (7) Disable the timer 2 interrupt. (Disable all the other external interrupts.)
- (8) Set the timer 1 interrupt request bit to "0".
- (9) Set the timer 2 interrupt request bit to "0".
- (10) Set the interrupt disable flag (I) to "0".
- (11) Execute the STP instruction.

At this point, the MCU will be in stop mode (suspend mode). Before executing the STP instruction, make sure to set the USB function interrupt request bit (bit 0 at address 000216) to "0" and the USB function interrupt enable bit (bit 0 at address 000516) to "1".

The USB suspend detect signal flag goes to "0" when the USB resume signal detect flag (RESUME) is set to "1". During suspend mode, if the clock operation is started up with a process (remote wake-up) other than the resume interrupt process (for example; reset or timer), make sure to clear the USB suspend detect signal flag to "0" when you set the USB remote wake-up bit to "1". When the USB FCU is in suspend mode and detects a non-idle signal on the D+/D- line, the USB resume detect flag and the USB resume signal interrupt status flag both go to "1" and a resume interrupt request occurs. At this point, pull the internal registers (A, X, Y) in this interrupt process routine. Take the following procedure in the USB resume interrupt process.

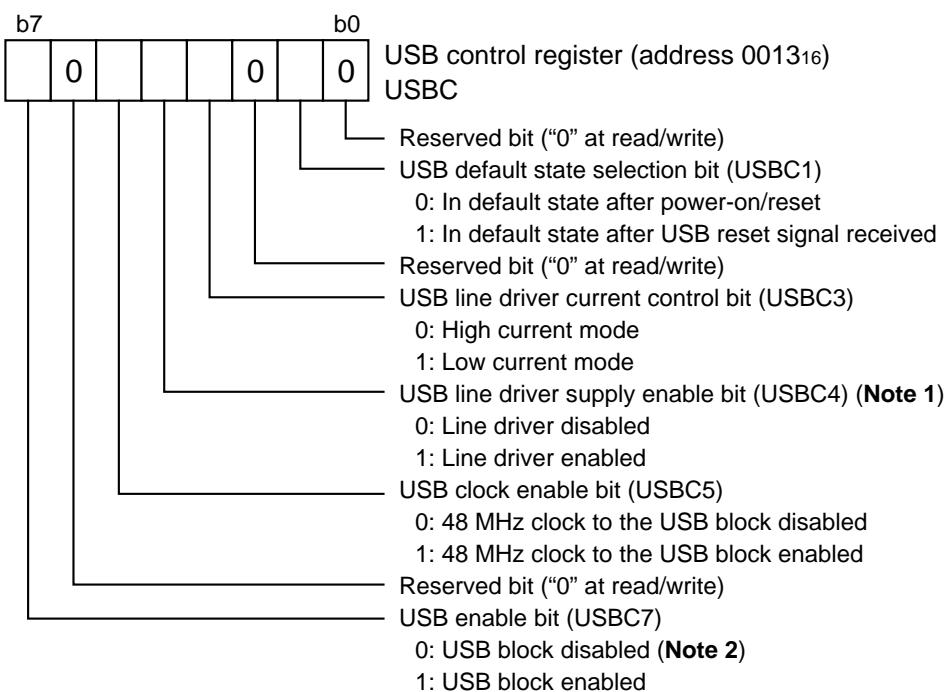
- (1) Set the USB line driver current control bit to "0". (When operating at Vcc = 3.3 V, this bit does not need to be set.)
- (2) Set the frequency synthesizer enable bit to "1" and set a 2 ms wait or more .
- (3) Check the frequency synthesizer lock status bit. If "0", it must be checked again after a 0.1 ms wait.
- (4) Set the USB clock enable bit to "1".

Set the USB resume signal interrupt status flag to "0" after the wake-up sequence process. The USB resume detect flag goes to "0" at the same time. When the clock operation is started up with a remote wake-up, set the USB remote wake-up bit to "1" after the wake-up sequence process. (keep it set to "1" for a minimum of 10 ms and maximum of 15 ms). By doing this, the MCU will send a resume signal to the host CPU and let it know that the suspend state has been released.

After that, set the USB remote wake-up bit and the USB suspend detection flag to "0", because the USB suspend detection flag is not automatically cleared to "0" with a remote wake-up.

[USB Control Register] USBC

When using the USB function, the USB enable bit must be set to "1". The USB line driver supply bit must be set to "0" (DC-DC converter is disabled) when operating at $V_{cc} = 3.3V$. In this condition, the setting of the USB line driver current control bit has no effect on USB operations.



Notes 1: When using the MCU in $V_{cc} = 3.3V$, set this bit to "0" and disable the built-in DC-DC converter

2: Setting this bit to 0" causes the contents of all USB registers to have the values at reset.

Fig. 35 Structure of USB control register

[USB Address Register] USBA

The USB address register maintains the USB function control unit address assigned by the host computer. When receiving the SET_ADDRESS, keep it in this register. The values of this register are "0" when the device is not yet configured. The values of this register are also set to "0" when the USB block is disabled (bit 7 of USB control register is set to "0"). In addition, no matter what value is written to this register, it will have no effect on the set value.

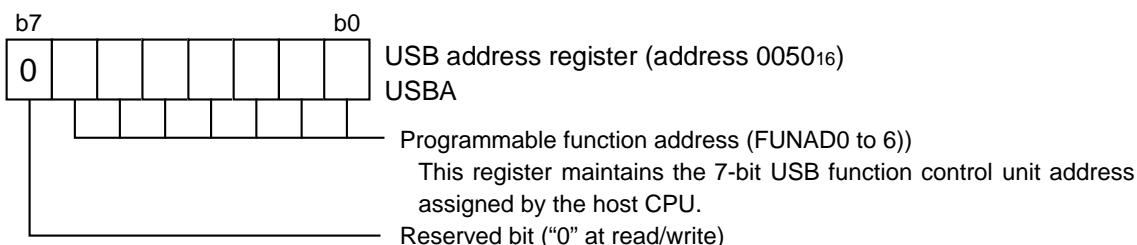


Fig. 36 Structure of USB address register

[USB Power Management Register] USBPM

The USB power management register is used for power management in the USB FCU. This register needs to be set only when using the remote wake-up to resume the MCU from suspend mode.

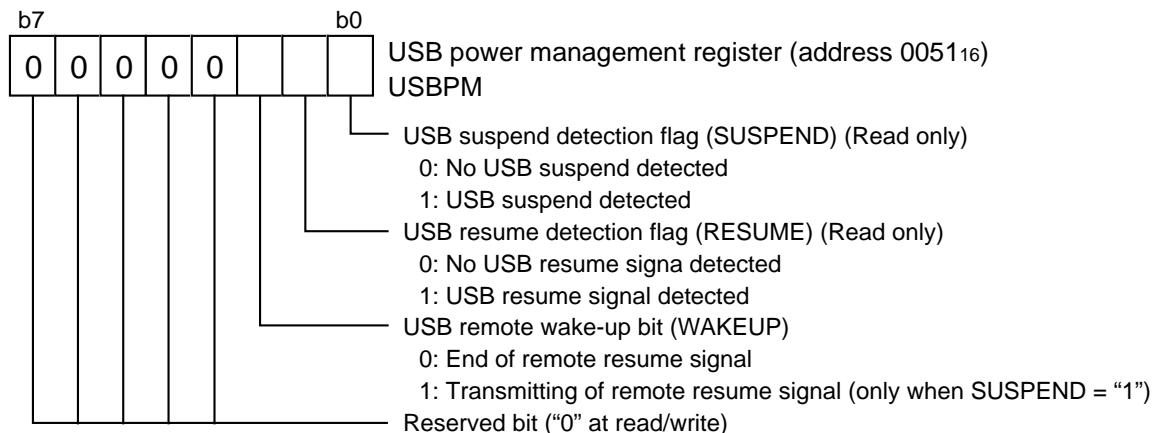


Fig. 37 Structure of USB power management register

[USB Interrupt Status Registers 1 and 2] USBIS1, USBIS2

The USB interrupt status registers are used to indicate the condition that caused a USB function interrupt to be generated. Each status flag and bit can be cleared to "0" by writing "1" to the corresponding bit. Make sure to write to/read from the USB interrupt status register 1 first and then USB interrupt status register 2.

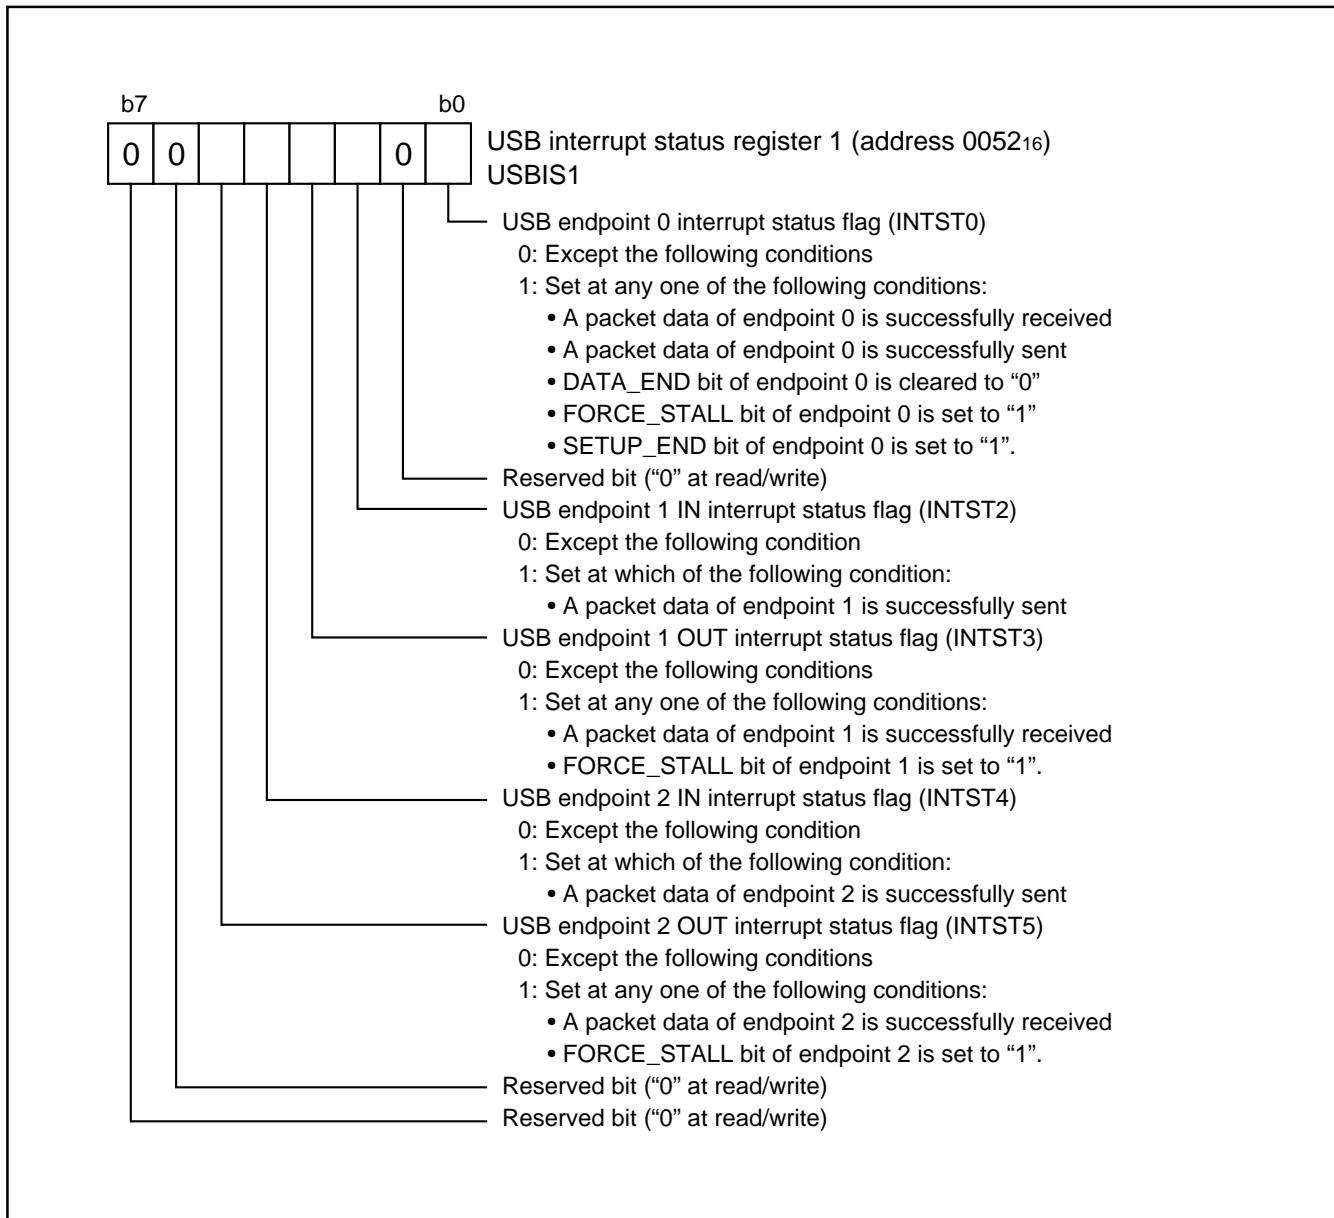


Fig. 38 Structure of USB interrupt status register 1

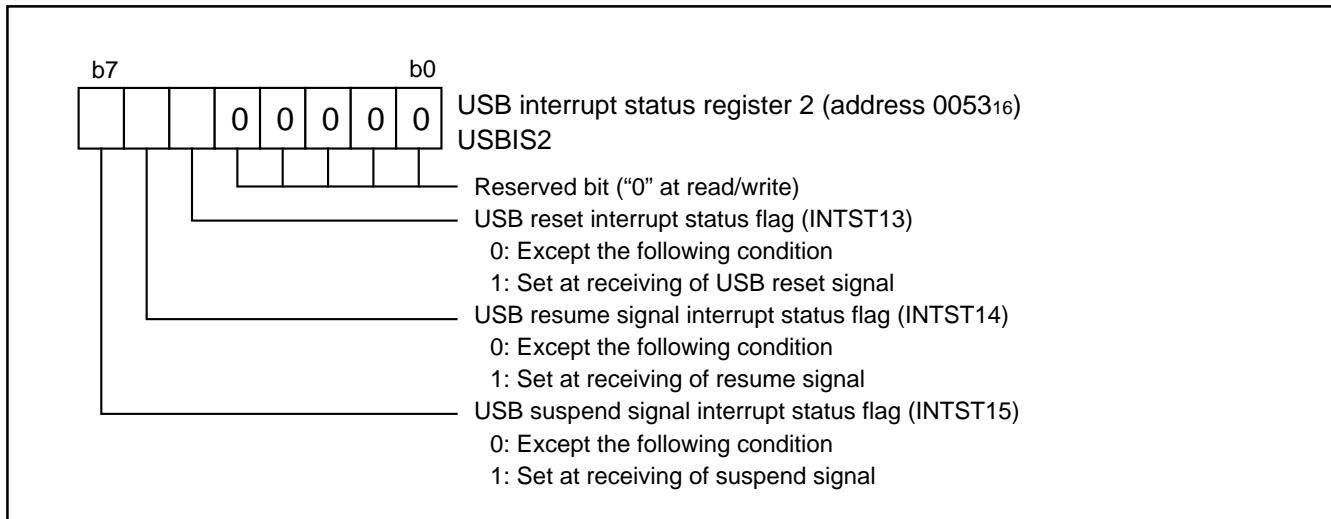


Fig. 39 Structure of USB interrupt status register 2

[USB Interrupt Enable Registers 1 and 2] USBIE1, USBIE2

The USB interrupt enable registers are used to enable the USB

function interrupt. Upon reset, all USB interrupts except the USB suspend and USB resume interrupts are enabled.

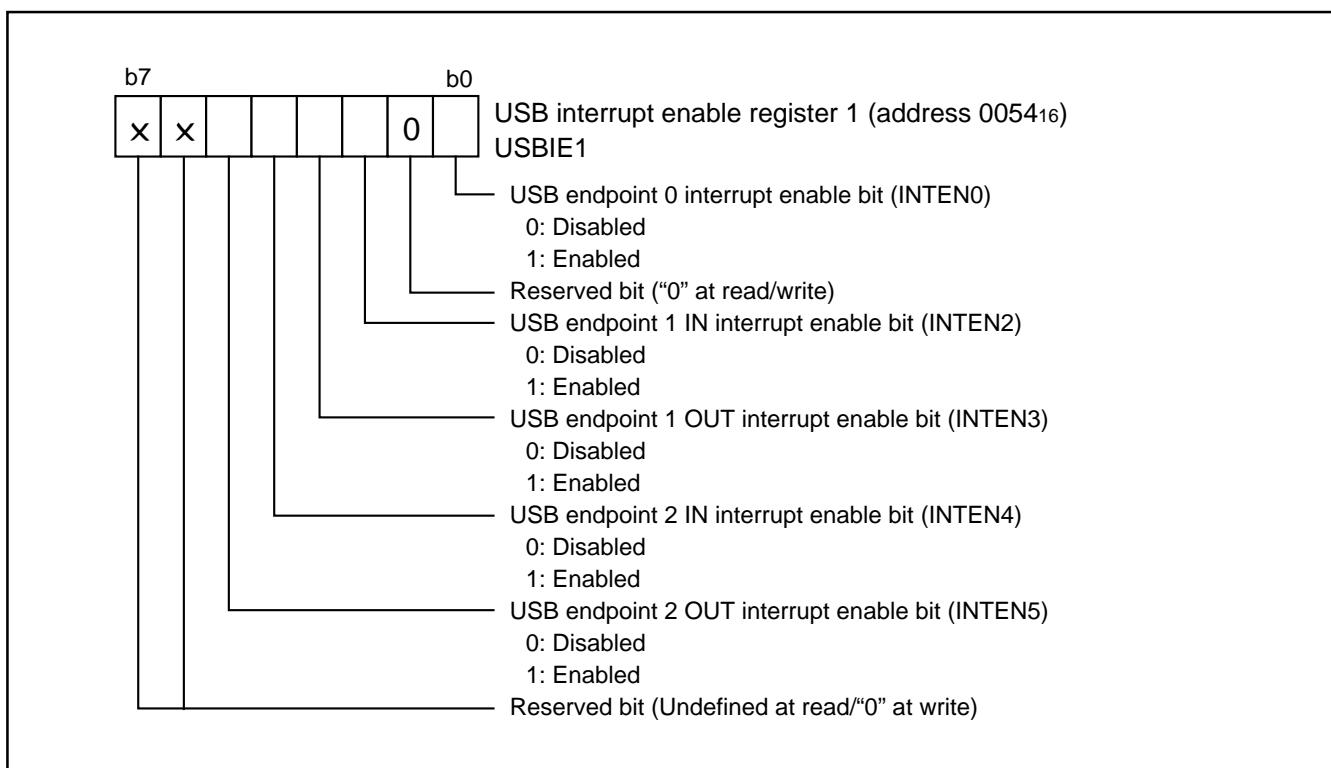


Fig. 40 Structure of USB interrupt enable register 1

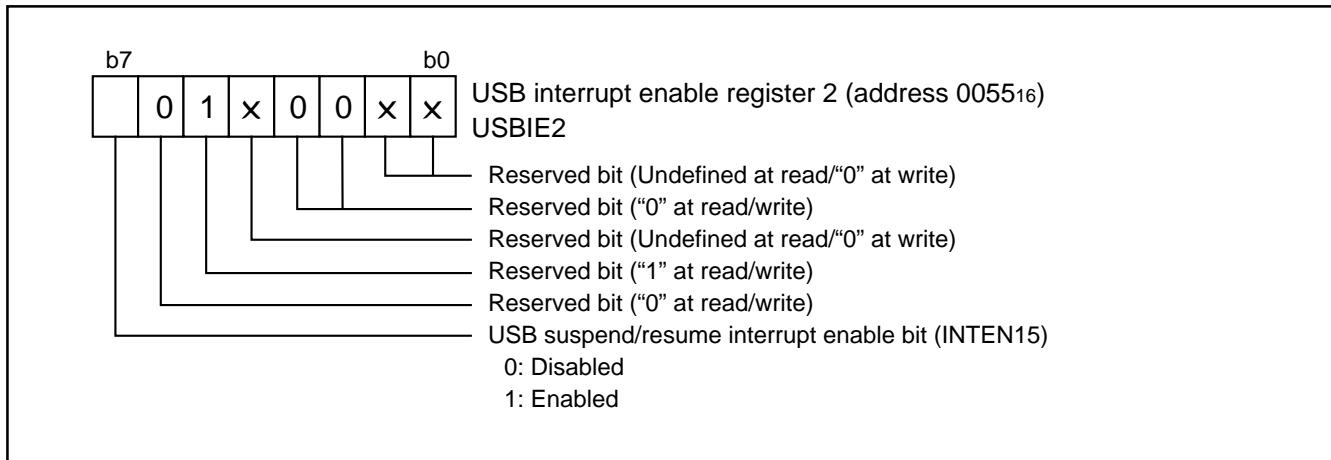


Fig. 41 Structure of USB interrupt enable register 2

[USB Endpoint Index Register] USBINDEX

This register specifies the accessible endpoint. It serves as an index to endpoint-specific USB Endpoint x IN Control Register, USB Endpoint x OUT Control Register, USB Endpoint x IN Max. Packet Size Register, USB Endpoint x OUT Max. Packet Size Register, USB Endpoint x OUT Write Count Register, and USB FIFO Mode Selection Register (x = 0 to 2).

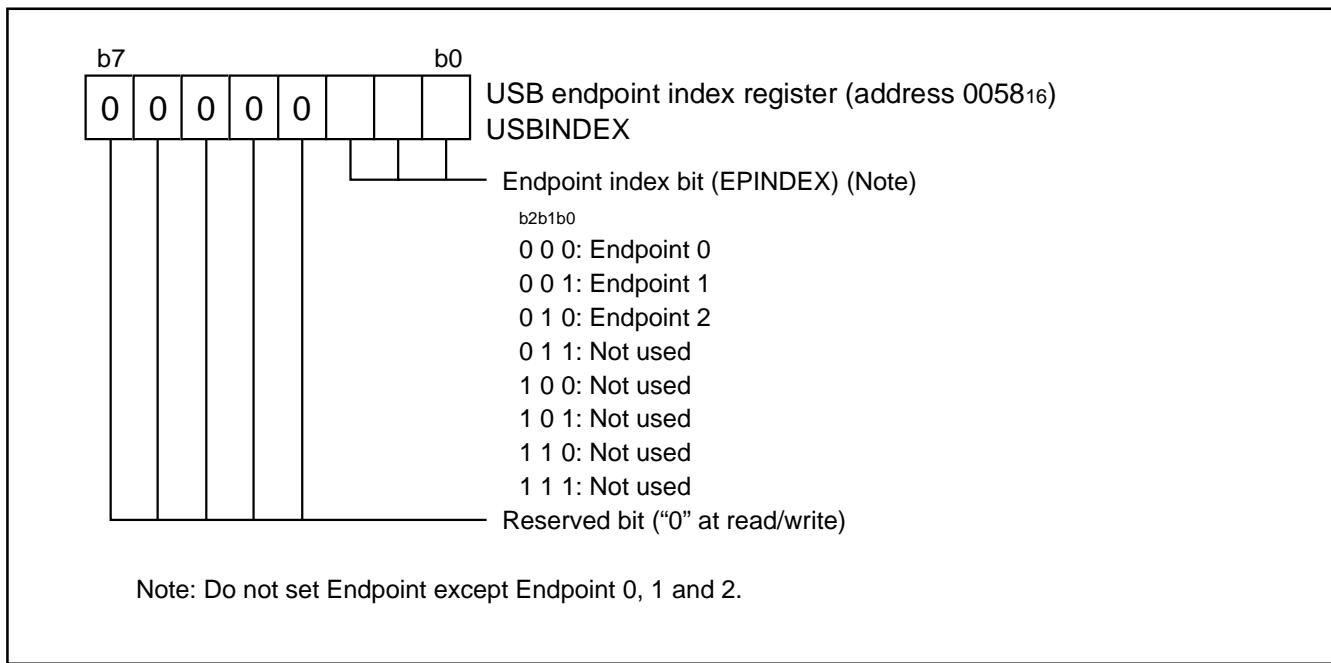


Fig. 42 Structure of USB frame number registers

[USB Endpoint 0 IN Control Register] IN_CSR

This register contains the control and status information of the endpoint 0. This USB FCU sets the OUT_PKT_RDY flag to "1" upon having received a data packet in the OUT FIFO. When reading its one data packet from the OUT FIFO, be sure to set this flag to "0".

After a SETUP token is received, the MCU is in the "decode wait state" until the OUT_PKT_RDY flag is cleared. If the OUT_PKT_RDY flag is not cleared (indicating that the host request has not been successfully decoded), the USB FCU keep returning a NAK to the host for all IN/OUT tokens.

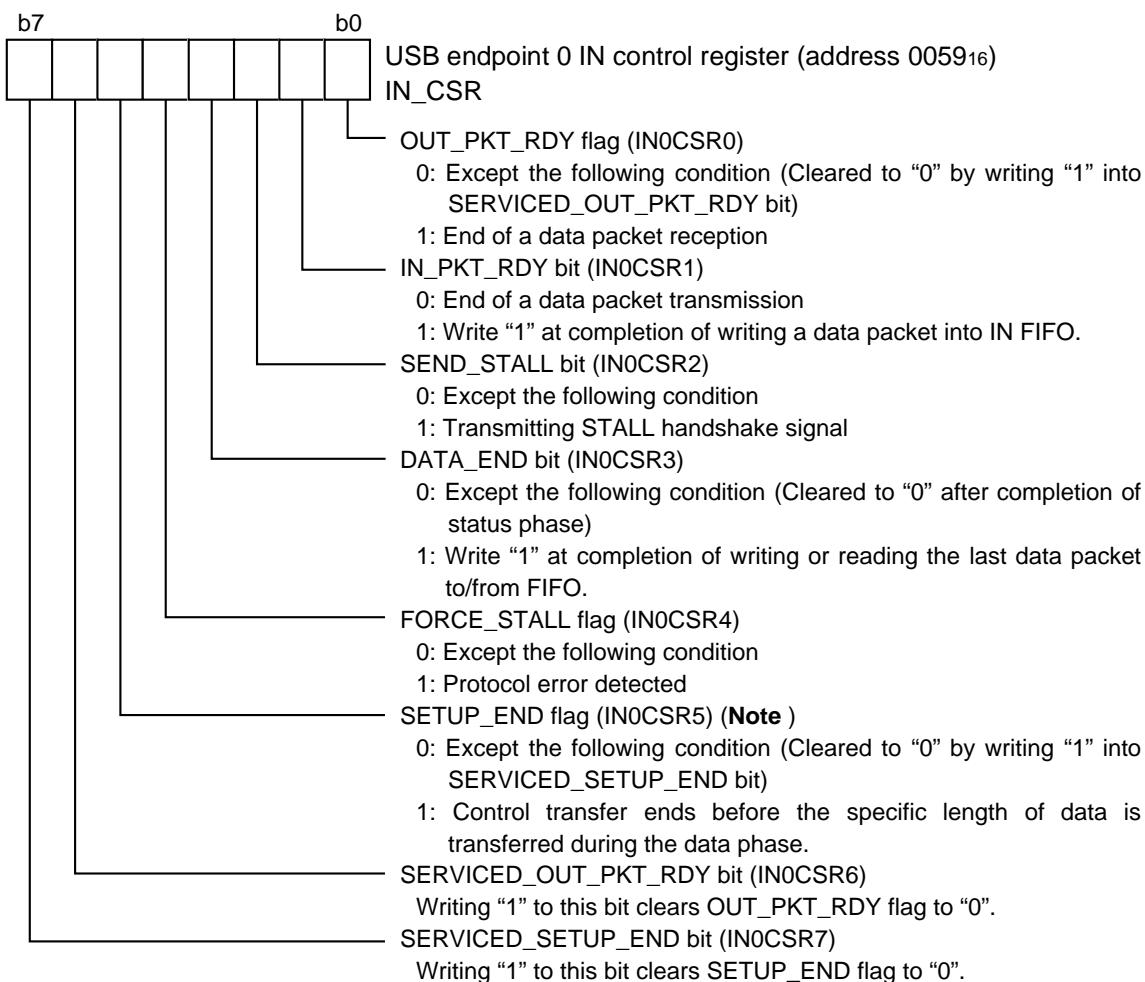
Set the IN_PKT_RDY bit to "1" after the data packet has been written to the IN FIFO. If this bit is set to "1" even though nothing has been written to the IN FIFO, a "0" length data (NULL packet) is sent to the host. The SEND_STALL bit is for sending a STALL to the host if an unsupported request is received by the USB FCU. This bit must be set to "1". When the OUT_PKT_RDY flag is set to "0" for request reception, the USB FCU transmits a STALL signal

to the Host CPU. Perform the following three processes simultaneously:

- Set SEND_STALL bit to "1"
- Set DATA_END bit to "1"
- Set OUT_PKT_RDY flag to "0" by setting SERVICED_OUT_PKT_RDY bit to "1".

Note that if "0" is written to the SEND_STALL bit before the CLEAR_FEATURE (endpoint STALL) request has been received, the next STALL will not be generated.

The DATA_END bit informs the USB FCU of the completion of the process indicated in the SETUP packet. Set this bit to "1" when the process requested in the SETUP packet is completed. (Control Read Transfer: set this bit after writing all of the requested data to the FIFO; Control Write Transfer: set this bit to "1" after reading all of the requested data from the FIFO.) When this bit is "1", the host request is ignored and a STALL is returned. After the status phase process is completed, the USB FCU automatically clears it to "0".




Note: If this bit is set to "0", stop accessing the FIFO to serve the previous setup transaction.

Fig. 43 Structure of USB endpoint 0 IN control register

[USB Endpoint x (x = 1, 2) IN Control Register] IN_CSR

This register contains the control and status information of the respective IN Endpoints 1, 2.

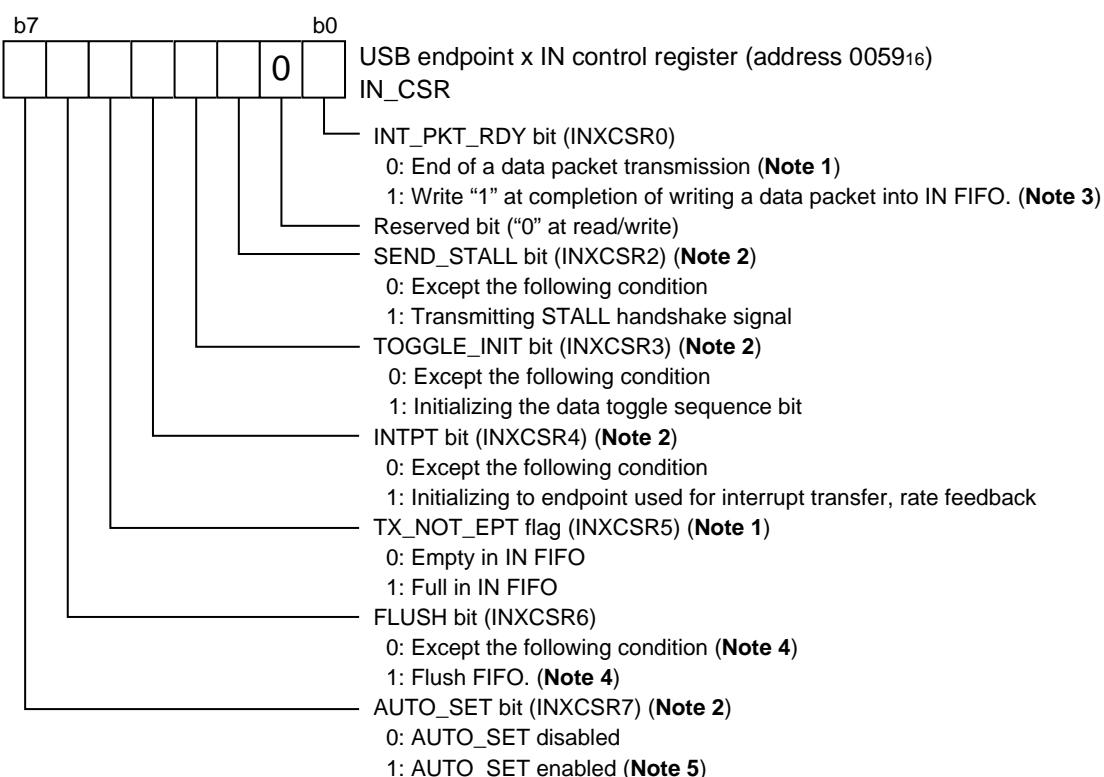Set the IN_PKT_RDY bit to "1" after the data packet has been written to the IN FIFO. This bit is cleared to "0" when the data transfer is completed. In a bulk IN transfer, this bit is cleared when an ACK signal is received from the host. If an ACK signal is not received, this bit (and the TX_NOT_EMPTY bit) remains as "1". This same data packet is sent after the next IN token is received. The FLUSH bit is for flushing the data in the IN FIFO.



Notes 1: This bit is automatically set to "1" or cleared to "0".

2: The user must program to "1" or "0".

3: When AUTO_SET bit is "0", the user must set to "1".

When AUTO_SET bit is "1", this bit is automatically set to "1".


4: This bit is automatically cleared to "0" after setting "1".

5: To use the AUTO_SET function for an IN transfer when the AUTO_SET bit is set to "1", set the FIFO to single buffer mode.

Fig. 44 Structure of USB endpoint x (x = 1, 2) IN control register

[USB Endpoint x (x = 1, 2) OUT Control Register] OUT_CSR

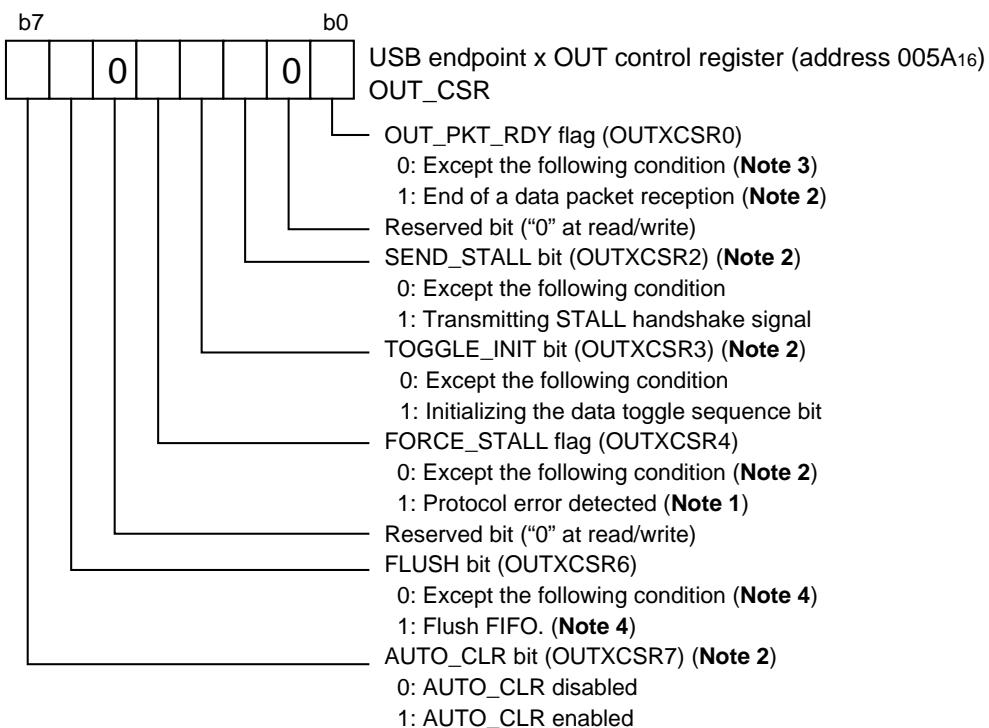This register contains the information and status of the respective OUT endpoints 1, 2. In the endpoint 0, all bits are reserved and cannot be used (they will all be read out as "0"). The USB FCU sets the OUT_PKT_RDY flag to "1" after a data packet has been received into the OUT FIFO. After reading the data packet in the OUT FIFO, clear this flag to "0". However, if there is still data in the OUT FIFO, the flag cannot be cleared even by writing "0" by software.



Notes 1: This bit is automatically set to "1" or cleared to "0".

2: The user must program to "1" or "0".

3: When AUTO_SET bit is "0", the user must set to "1".

When AUTO_SET bit is "1", this bit is automatically set to "1".

4: This bit is automatically cleared to "0" after setting "1".

Fig. 45 Structure of USB endpoint x (x = 1, 2) OUT control register

[USB Endpoint x (x = 0 to 2) IN Max. Packet Size Register]**IN_MAXP**

This register specifies the maximum packet size (MAXP) of an endpoint x IN packet. The value set for endpoint 1 is the number of transmitted bytes divided by 8, and the value set for endpoints 0 and 2 is the actual number of transmitted bytes. The CPU can change these values using the SET_DESCRIPTOR command.

The initial value for endpoints 0 and 2 is 8, and the initial value for endpoint 1 is 1.

[USB Endpoint x (x = 0 to 2) OUT Max. Packet Size Register]**OUT_MAXP**

This register specifies the maximum packet size (MAXP) of an Endpoint x OUT packet. The value set for endpoint 1 is the number of received bytes divided by 8, and the value set for endpoints 0 and 2 is the actual number of received bytes. The CPU can change these values using the SET_DESCRIPTOR command.

The initial value for endpoints 0 and 2 is 8, and the initial value for

endpoint 1 is 1. When using the endpoint 0, both USB endpoint x IN max. packet size register (IN_MAXP) and USB endpoint x OUT max. packet size register (OUT_MAXP) are set to the same value. Changing one register's value effectively changes the value of the other register as well.

■ Notes

Only flash memory version acknowledges IN/OUT token input to the endpoints 3 and 4. For its countermeasure program the following in the initial settings or other routines.

[USBINDEX] = 03h ; USBINDEX=58H

[IN_MAXP]=00h ; IN_MAXP=5BH

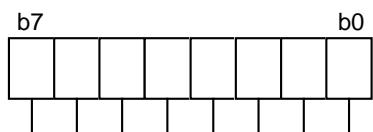
[OUT_MAXP]=00h ; OUT_MAXP=5CH

[USBINDEX]=04h ; USBINDEX=58H

[IN_MAXP]=00h ; IN_MAXP=5BH

[OUT_MAXP]=00h ; OUT_MAXP=5CH


(This program does not affect the operation of mask ROM version.)



USB endpoint x IN max. packet size register (address 005B₁₆)
IN_MAXP

The maximum packet size (MAXP) of endpoint x IN is contained.
MAXP = n for endpoints 0, 2
MAXP = n × 8 for endpoint 1
"n" is a written value into this register.

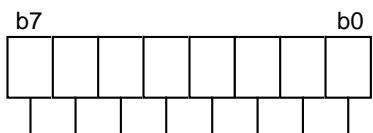Fig. 46 Structure of USB endpoint x IN max. packet size register



USB endpoint x OUT max. packet size register (address 005C₁₆)
OUT_MAXP

The maximum packet size (MAXP) of endpoint x OUT is contained.
MAXP = n for endpoints 0, 2
MAXP = n × 8 for endpoint 1
"n" is a written value into this register.

Fig. 47 Structure of USB endpoint x OUT max. packet size register

[USB endpoint x (x = 0 to 2) OUT Write Count Registers]**WRT_CNT**

This register contains the number of bytes in the endpoint x OUT FIFO. This is a read-only register. This register must be read after the USB FCU has received a packet of data from the host.

When the OUT FIFO is in double buffer mode, the CPU first reads the received number of bytes of the former data packet. The next CPU read can obtain that of the new data packet.

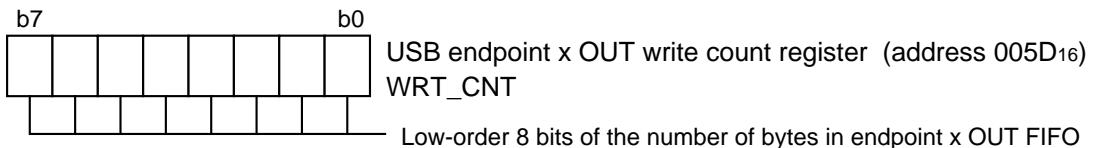


Fig. 48 Structure of USB endpoint x (x = 0 to 2) OUT write count registers

[USB Endpoint x (x = 0 to 2) FIFO Register] USBFIFOx

These registers are the USB IN (transmit) and OUT (receive) FIFO data registers. Write data to the corresponding register, and read data from the corresponding register.

When the maximum packet size is equal to or less than half the FIFO size, these registers function in double buffer mode and can hold two packets of data. When the IN_PKT_RDY bit is "0" and

the TX_NOT_EMPTY bit is "1", these bits indicate that one packet of data is stored in the IN FIFO. When the OUT FIFO is in double buffer mode, the OUT_PKT_RDY flag remains as "1" after the first packet of data is read out (it actually goes to "0" and returns to "1" after one ϕ cycle).


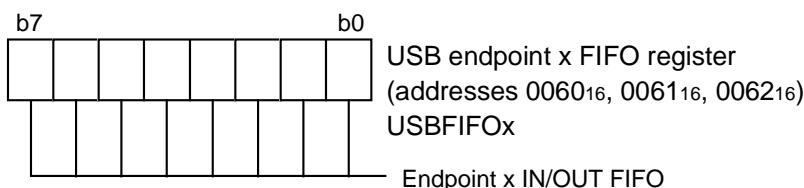


Fig. 49 Structure of USB endpoint x (x = 0 to 2) FIFO register

[USB Endpoint FIFO Mode Selection Register] USBFIFOMR

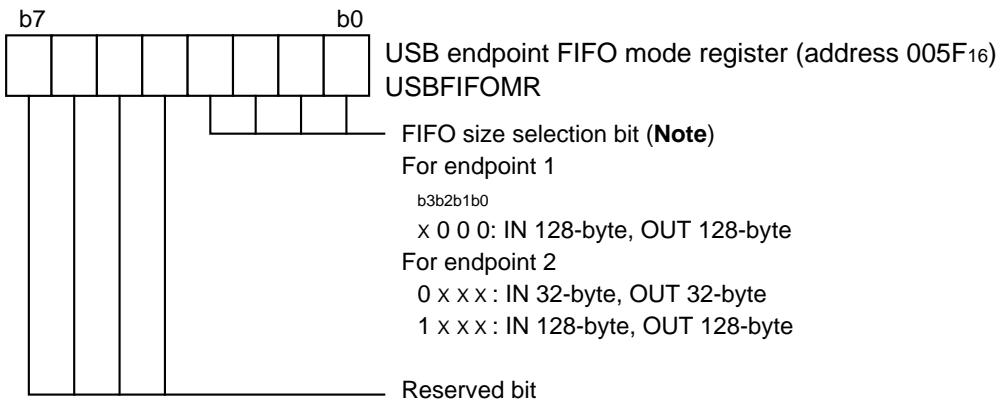This register determines IN/OUT FIFO size mode for endpoint 1 or endpoint 2.



Note: The value set into “x” is invalid.

Fig. 50 Structure of USB endpoint FIFO mode register

FREQUENCY SYNTHESIZER (PLL)

The frequency synthesizer generates the 48 MHz clock required by fUSB and fSYN, which are multiples of the external input reference f(XIN). Figure 51 shows the block diagram for the frequency synthesizer circuit.

The Frequency Synthesizer Input Bit selects either f(XIN) or f(XCIN) as an input clock fIN for the frequency synthesizer.

The Frequency Synthesizer Multiply Register 2 (FSM2: address 006E16) divides fIN to generate fPIN, where $fPIN = fIN / 2(n + 1)$, n: value set to FSM2.

When the value of Frequency Synthesizer Multiply Register 2 is set to 255, the division is not performed and fPIN will equal fIN.

fVCO is generated according to the contents of Frequency Synthesizer Multiply Register 1 (FSM1: address 006D16), where $fVCO = fPIN \times \{2(n + 1)\}$, n: value set to FSM1.

Set the value of FSM1 so that the value of fVCO is 48 MHz.

fSYN is generated according to the contents of the Frequency Synthesizer Divide Register (FSD: address 006F16), where $fSYN = fVCO / 2(m + 1)$, m: value set to FSD.

When the value of the Frequency Synthesizer Divide Register is set to 255, the division is not performed and fSYN becomes invalid.

[Frequency Synthesizer Control Register] FSC

Setting the Frequency Synthesizer Enable Bit (FSE) to "1" enables the frequency synthesizer. When the Frequency Synthesizer Lock Status Bit (LS) is "1" in the frequency synthesizer enabled, this indicates that fSYN and fVCO have correct frequencies.

■Notes

Make sure to connect a low-pulse filter to the LPF pin when using the frequency synthesizer. In addition, please refer to "Programming Notes: Frequency Synthesizer" when recovering from a Hardware Reset.


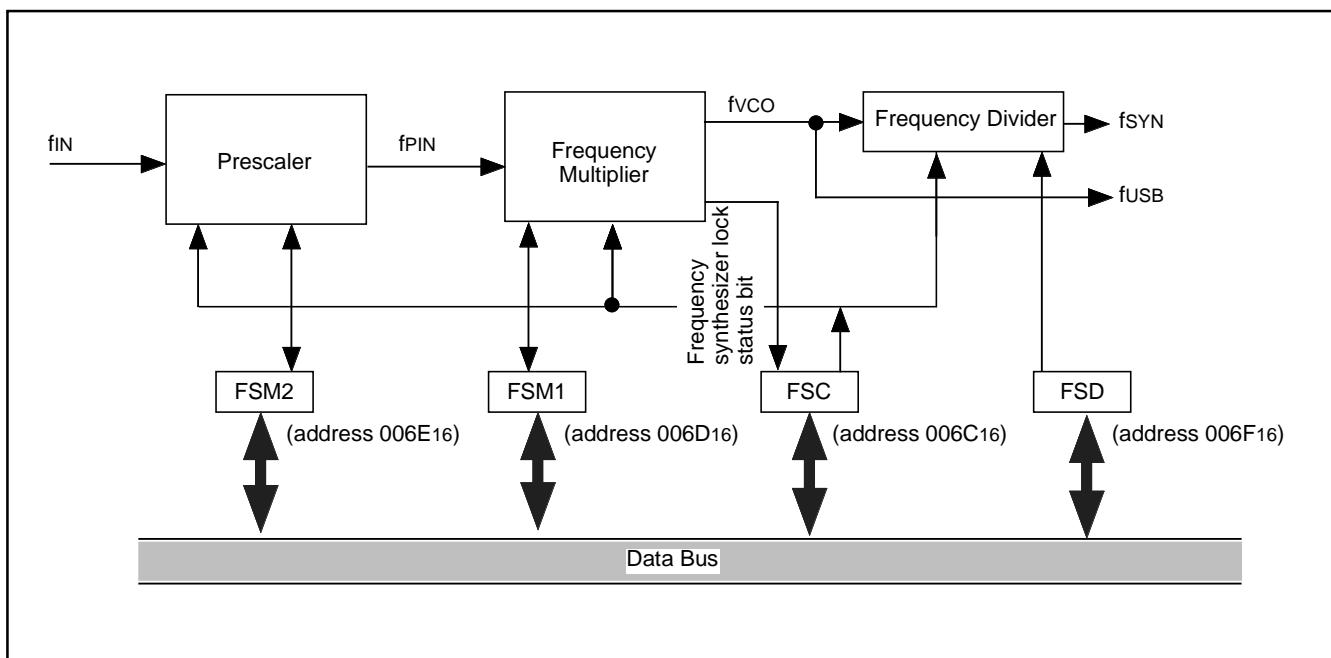


Fig. 51 Frequency synthesizer block diagram

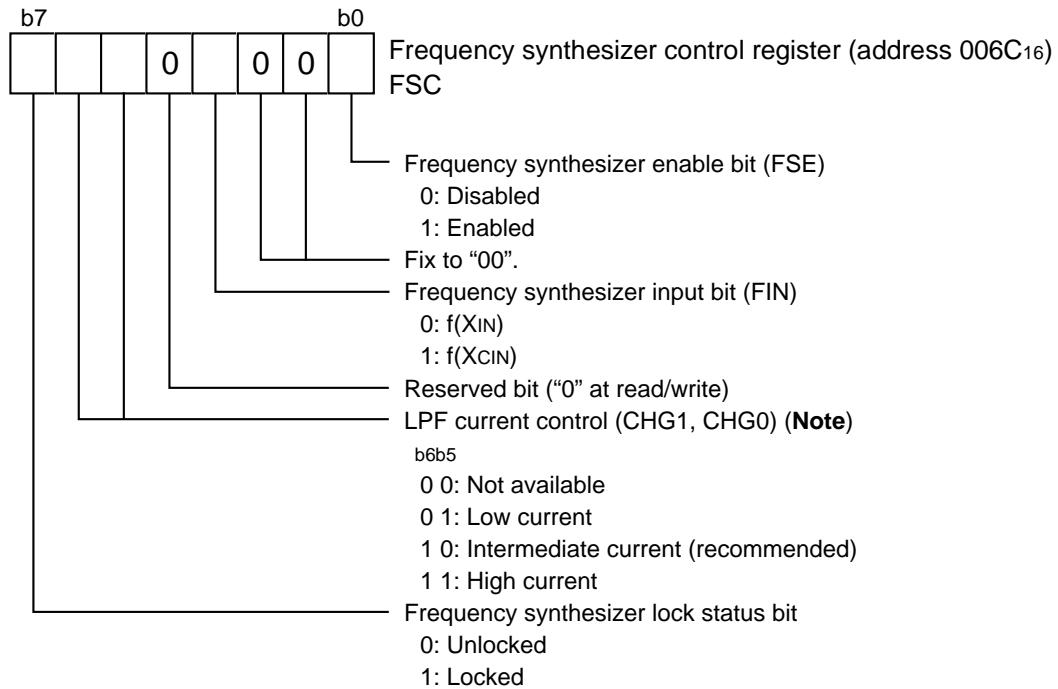

Note: Bits 6 and 5 are set to (bit 6, bit 5) = (1, 1) at reset.

When using the frequency synthesizer, we recommend to set to (bit 6, bit 5) = (1, 0) after locking the frequency synthesizer.

Fig. 52 Structure of frequency synthesizer control register

RESET CIRCUIT

To reset the microcomputer, RESET pin should be held at an "L" level for 20 cycles or more of ϕ . Then the RESET pin is returned to an "H" level, and reset is released. They must be performed when the power source voltages are between 3.00 V and 3.60 V or 4.15 V and 5.25 V.

After the reset is completed, the program starts from the address contained in address FFFA16 (high-order byte) and address FFFB16 (low-order byte).

After oscillation has restarted, the timers 1 and 2 secures waiting time for the internal clock ϕ oscillation stabilized automatically by setting the timer 1 to "FF16" and timer 2 to "0116". The internal clock ϕ retains "H" level until Timer 2's underflow and it cannot be supplied until the underflow.

The pins state during reset are follows:

- When CNVss = "H"
 - Ports P0, P1, P33 to P37 : Outputting
 - Pins other than above mentioned ports : Inputting
- When CNVss = "L"
 - All pins : Inputting.

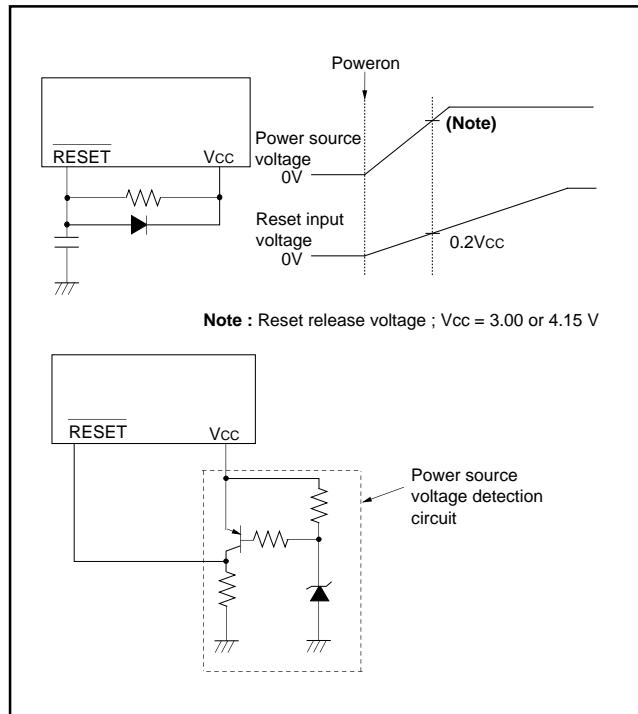


Fig. 53 Reset circuit example

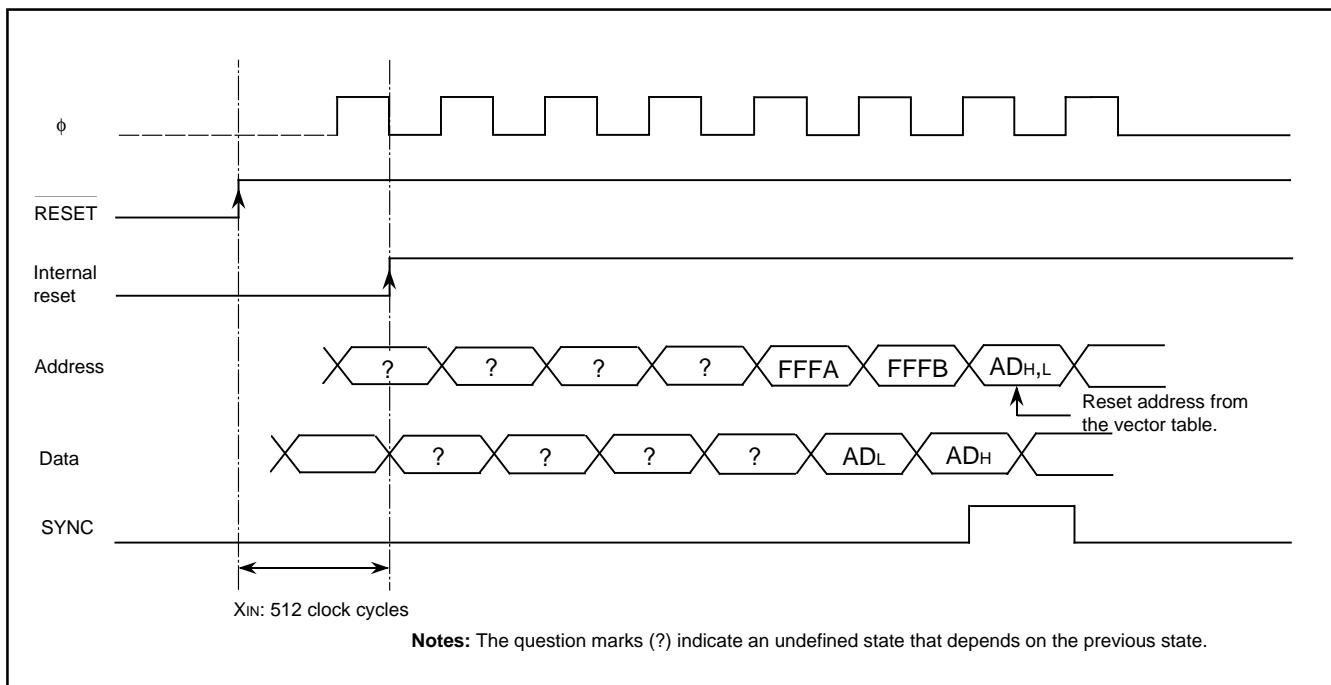


Fig. 54 Reset sequence

	Address	Register contents		Address	Register contents
(1) CPU mode register A (CPUA)	0000 ₁₆	0 0 0 0 1 1 0 0	(39) UART status register (USTS)	0032 ₁₆	0 0 0 0 0 1 1
(2) CPU mode register B (CPUB)	0001 ₁₆	1 0 0 0 0 0 1 1	(40) UART control register (UCON)	0033 ₁₆	0016
(3) Interrupt request register A (IREQA)	0002 ₁₆	0016	(41) UART RTS control register (URTSC)	0036 ₁₆	1 0 0 0 0 0 0 0
(4) Interrupt request register B (IREQB)	0003 ₁₆	0016	(42) DMAC index and status register (DMAIS)	003F ₁₆	0016
(5) Interrupt request register C (IREQC)	0004 ₁₆	0016	(43) DMAC channel x mode register 1 (DMAx1)	0040 ₁₆	0016
(6) Interrupt control register A (ICONA)	0005 ₁₆	0016	(44) DMAC channel x mode register 2 (DMAx2)	0041 ₁₆	0016
(7) Interrupt control register B (ICONB)	0006 ₁₆	0016	(45) DMAC channel x source register Low (DMAxSL)	0042 ₁₆	0016
(8) Interrupt control register C (ICONC)	0007 ₁₆	0016	(46) DMAC channel x source register High (DMAxSH)	0043 ₁₆	0016
(9) Port P0 (P0)	0008 ₁₆	0016	(47) DMAC channel x destination register Low (DMAxDL)	0044 ₁₆	0016
(10) Port P0 direction register (P0D)	0009 ₁₆	0016	(48) DMAC channel x destination register High (DMAxDH)	0045 ₁₆	0016
(11) Port P1 (P1)	000A ₁₆	0016	(49) DMAC channel x transfer count register Low (DMAxCL)	0046 ₁₆	0016
(12) Port P1 direction register (P1D)	000B ₁₆	0016	(50) DMAC channel x transfer count register High (DMAxCH)	0047 ₁₆	0016
(13) Port P2 (P2)	000C ₁₆	0016	(51) USB address register (USBA)	0050 ₁₆	0016
(14) Port P2 direction register (P2D)	000D ₁₆	0016	(52) USB power management register (USBPM)	0051 ₁₆	0016
(15) Port P3 (P3)	000E ₁₆	0016	(53) USB interrupt status register 1 (USBIS1)	0052 ₁₆	0016
(16) Port P3 direction register (P3D)	000F ₁₆	0016	(54) USB interrupt status register 2 (USBIS2)	0053 ₁₆	0016
(17) Port control register (PTC)	0010 ₁₆	0016	(55) USB interrupt enable register 1 (USBIE1)	0054 ₁₆	X X 1 1 1 1 1 1
(18) Interrupt polarity select register (IPOL)	0011 ₁₆	0016	(56) USB interrupt enable register 2 (USBIE2)	0055 ₁₆	0 0 1 X 0 0 X X
(19) Port P2 pull-up control register (PUP2)	0012 ₁₆	0016	(57) USB endpoint index register (USBINDEX)	0058 ₁₆	0016
(20) USB control register (USBC)	0013 ₁₆	0016	(58) USB endpoint x IN control register (IN_CSR)	0059 ₁₆	0016
(21) Port P6 (P6)	0014 ₁₆	0016	(59) USB endpoint x OUT control register (OUT_CSR)	005A ₁₆	0016
(22) Port P6 direction register (P6D)	0015 ₁₆	0016	(60) USB endpoint x IN max. packet size register (IN_MAXP) <small>(Note 1)</small>	005B ₁₆	0 0 0 0 1 0 0 0
(23) Port P5 (P5)	0016 ₁₆	0016	(61) USB endpoint x OUT max. packet size register (OUT_MAXP) <small>(Note 1)</small>	005C ₁₆	0 0 0 0 1 0 0 0
(24) Port P5 direction register (P5D)	0017 ₁₆	0016	(62) USB endpoint x OUT write count register (WRT_CNT)	005D ₁₆	0016
(25) Port P4 (P4)	0018 ₁₆	0016	(63) USB endpoint FIFO mode register (USBFIFOMR)	005F ₁₆	0016
(26) Port P4 direction register (P4D)	0019 ₁₆	0016	(64) Flash memory control register (FMC) <small>(Note 3)</small>	006A ₁₆	0 0 0 0 0 0 0 1
(27) Port P7 (P7)	001A ₁₆	0016	(65) Frequency synthesizer control register (FSC)	006C ₁₆	0 1 1 0 0 0 0 0
(28) Port P7 direction register (P7D)	001B ₁₆	0016	(66) Frequency synthesizer multiply register 1 (FSM1)	006D ₁₆	FF ₁₆
(29) Port P8 (P8)	001C ₁₆	0016	(67) Frequency synthesizer multiply register 2 (FSM2)	006E ₁₆	FF ₁₆
(30) Port P8 direction register (P8D)	001D ₁₆	0016	(68) Frequency synthesizer divide register (FSM2)	006F ₁₆	FF ₁₆
(31) Clock control register (CCR)	001F ₁₆	0016	(69) ROM code protect control register (ROMCP) <small>(Note 3)</small>	FFC9 ₁₆	FF ₁₆
(32) Timer 1 (T1)	0024 ₁₆	FF ₁₆	(70) Processor status register	(PS)	X X X X 1 X X
(33) Timer 2 (T2)	0025 ₁₆	0 0 0 0 0 0 1	(71) Program counter	(PC _H)	FFFFB ₁₆ contents
(34) Timer 3 (T3)	0026 ₁₆	FF ₁₆		(PC _L)	FFFA ₁₆ contents
(35) Timer 123 mode register (T123M)	0029 ₁₆	0016			
(36) Serial I/O control register 1 (SIOCON1)	002B ₁₆	0 1 0 0 0 0 0 0			
(37) Serial I/O control register 2 (SIOCON2)	002C ₁₆	0 0 0 1 1 0 0 0			
(38) UART mode register (UMOD)	0030 ₁₆	0016			

X : Not fixed

Notes 1: When using the endpoint 1, this contents are "01₁₆".

2: Since the initial values for other than above mentioned registers and RAM contents are indefinite at reset, they must be set.

3: The flash memory control register and the ROM code protect control register exists in the flash memory version only.

Fig. 55 Internal status at reset

CLOCK GENERATING CIRCUIT

The 7643 group has two built-in oscillation circuits. An oscillation circuit can be formed by connecting a resonator between XIN and XOUT (XCIN and XCOUT). Use the circuit constants in accordance with the resonator manufacturer's recommended values. No external resistor is needed between XIN and XOUT since a feed-back resistor exists on-chip. (An external feed-back resistor may be needed depending on conditions.) However, an external feed-back resistor is needed between XCIN and XCOUT.

When using an external clock, input the clocks to the XIN or XCIN pin and leave the XOUT or XCOUT pin open.

Immediately after power on, only the XIN oscillation circuit starts oscillating, and XCIN and XCOUT pins function as I/O ports.

Frequency Control

The internal system clock can be selected among f_{SYN} , $f(XIN)$, $f(XIN)/2$, and $f(XCIN)$. The internal clock ϕ is half the frequency of internal system clock.

(1) f_{SYN} clock

This is made by the frequency synthesizer. $f(XIN)$ or $f(XCIN)$ can be selected as its input clock. See also section "FREQUENCY SYNTHESIZER".

(2) $f(XIN)$ clock

The frequency of internal system clock is the frequency of XIN pin.

(3) $f(XIN)/2$ clock

The frequency of internal system clock is half the frequency of XIN pin.

(4) $f(XCIN)$ clock

The frequency of internal system clock is the frequency of XCIN pin.

■Note

If you switch the oscillation between XIN - XOUT and XCIN - XCOUT, stabilize both XIN and XCIN oscillations. The sufficient time is required for the XCIN oscillation to stabilize, especially immediately after power on and at returning from the stop mode.

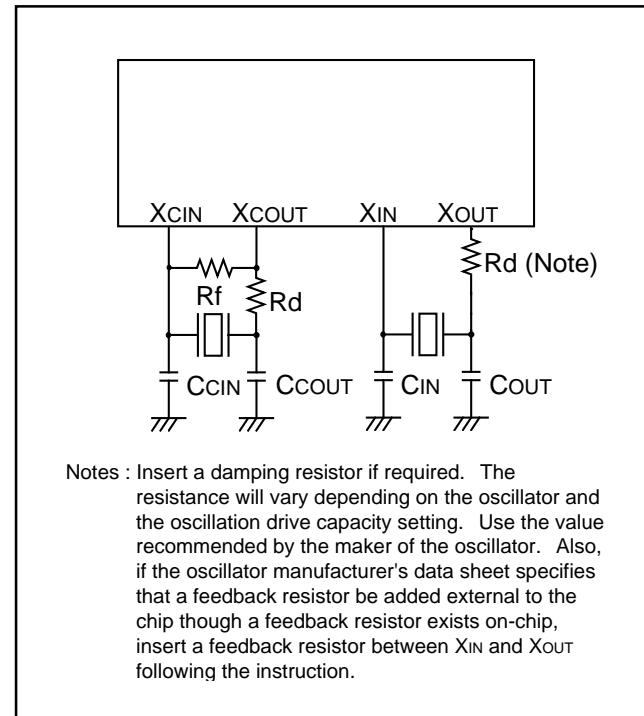


Fig. 56 Ceramic resonator or quartz-crystal oscillator external circuit

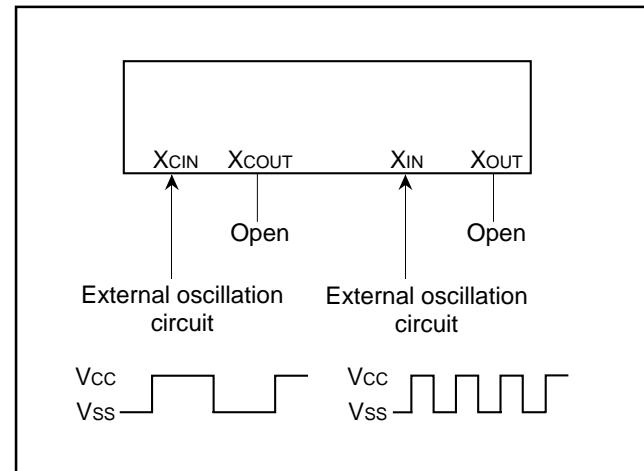


Fig. 57 External clock input circuit

(5) Low power dissipation mode

- The low power dissipation operation can be realized by stopping the main clock XIN when using f(XCIN) as the internal system clock. To stop the main clock, set the Main Clock (XIN-XOUT) Stop Bit of the CPU mode register A to "1".
- The low power dissipation operation can be realized by disabling the reversed amplifier when inputting external clocks to the XIN pin or XCIN pin. To disable the reversed amplifier, set the XCOUT Oscillation Drive Disable Bit (CCR5) or XOUT Oscillation Drive Disable Bit (CCR6) of the clock control register to "1".

Oscillation Control

(1) Stop mode

If the STP instruction is executed, the internal clock ϕ stops at "H" level, and XIN and XCIN oscillators stop. Then the timer 1 is set to "FF16" and the internal clock ϕ divided by 8 is automatically selected as its count source. Additionally, the timer 2 is set to "0116" and the timer 1's output is automatically selected as its count source.

Set the Timer 1 and Timer 2 Interrupt Enable Bits to disabled ("0") before executing the STP instruction. When using an external interrupt to release the stop mode, set the Interrupt Enable Bit to be used to enabled ("1") and the Interrupt Disable Flag (I) to "0".

Oscillator restarts at reset or when an external interrupt including USB resume interrupts is received, but the internal clock ϕ remains at "H" until the timer 2 underflows. The internal clock ϕ is supplied for the first time when the timer 2 underflows. Therefore make sure not to set the Timer 1 Interrupt Request Bit and Timer 2 Interrupt Request Bit to "1" before the STP instruction stops the oscillator.

(2) Wait mode

If the WIT instruction is executed, the internal clock ϕ stops at "H" level, but the oscillator does not stop. The internal clock ϕ restarts at reset or when an interrupt is received. Since the oscillator does not stop, normal operation can be started immediately after the internal clock ϕ is restarted.

Set the Interrupt Enable Bit to be used to release the wait mode to enabled ("1") and the Interrupt Disable Flag (I) to "0".

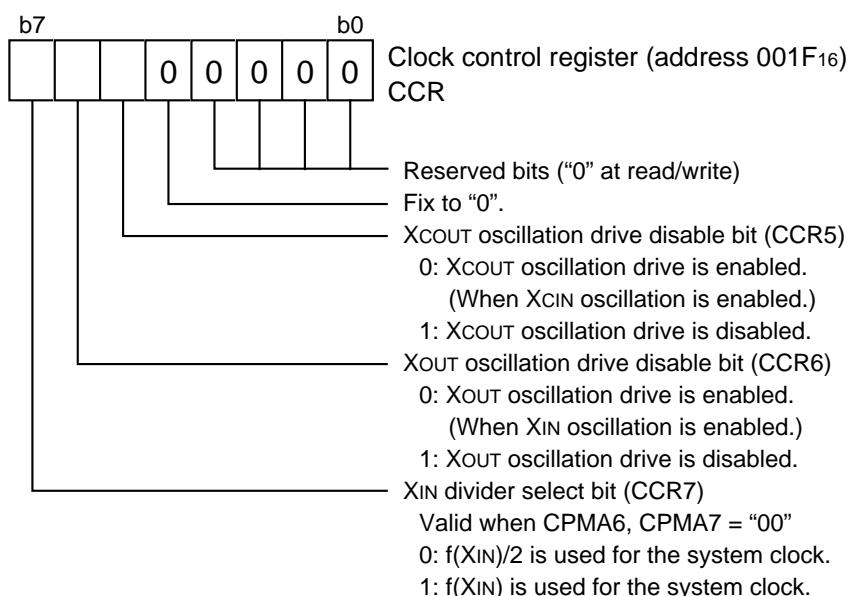


Fig. 58 Structure of clock control register

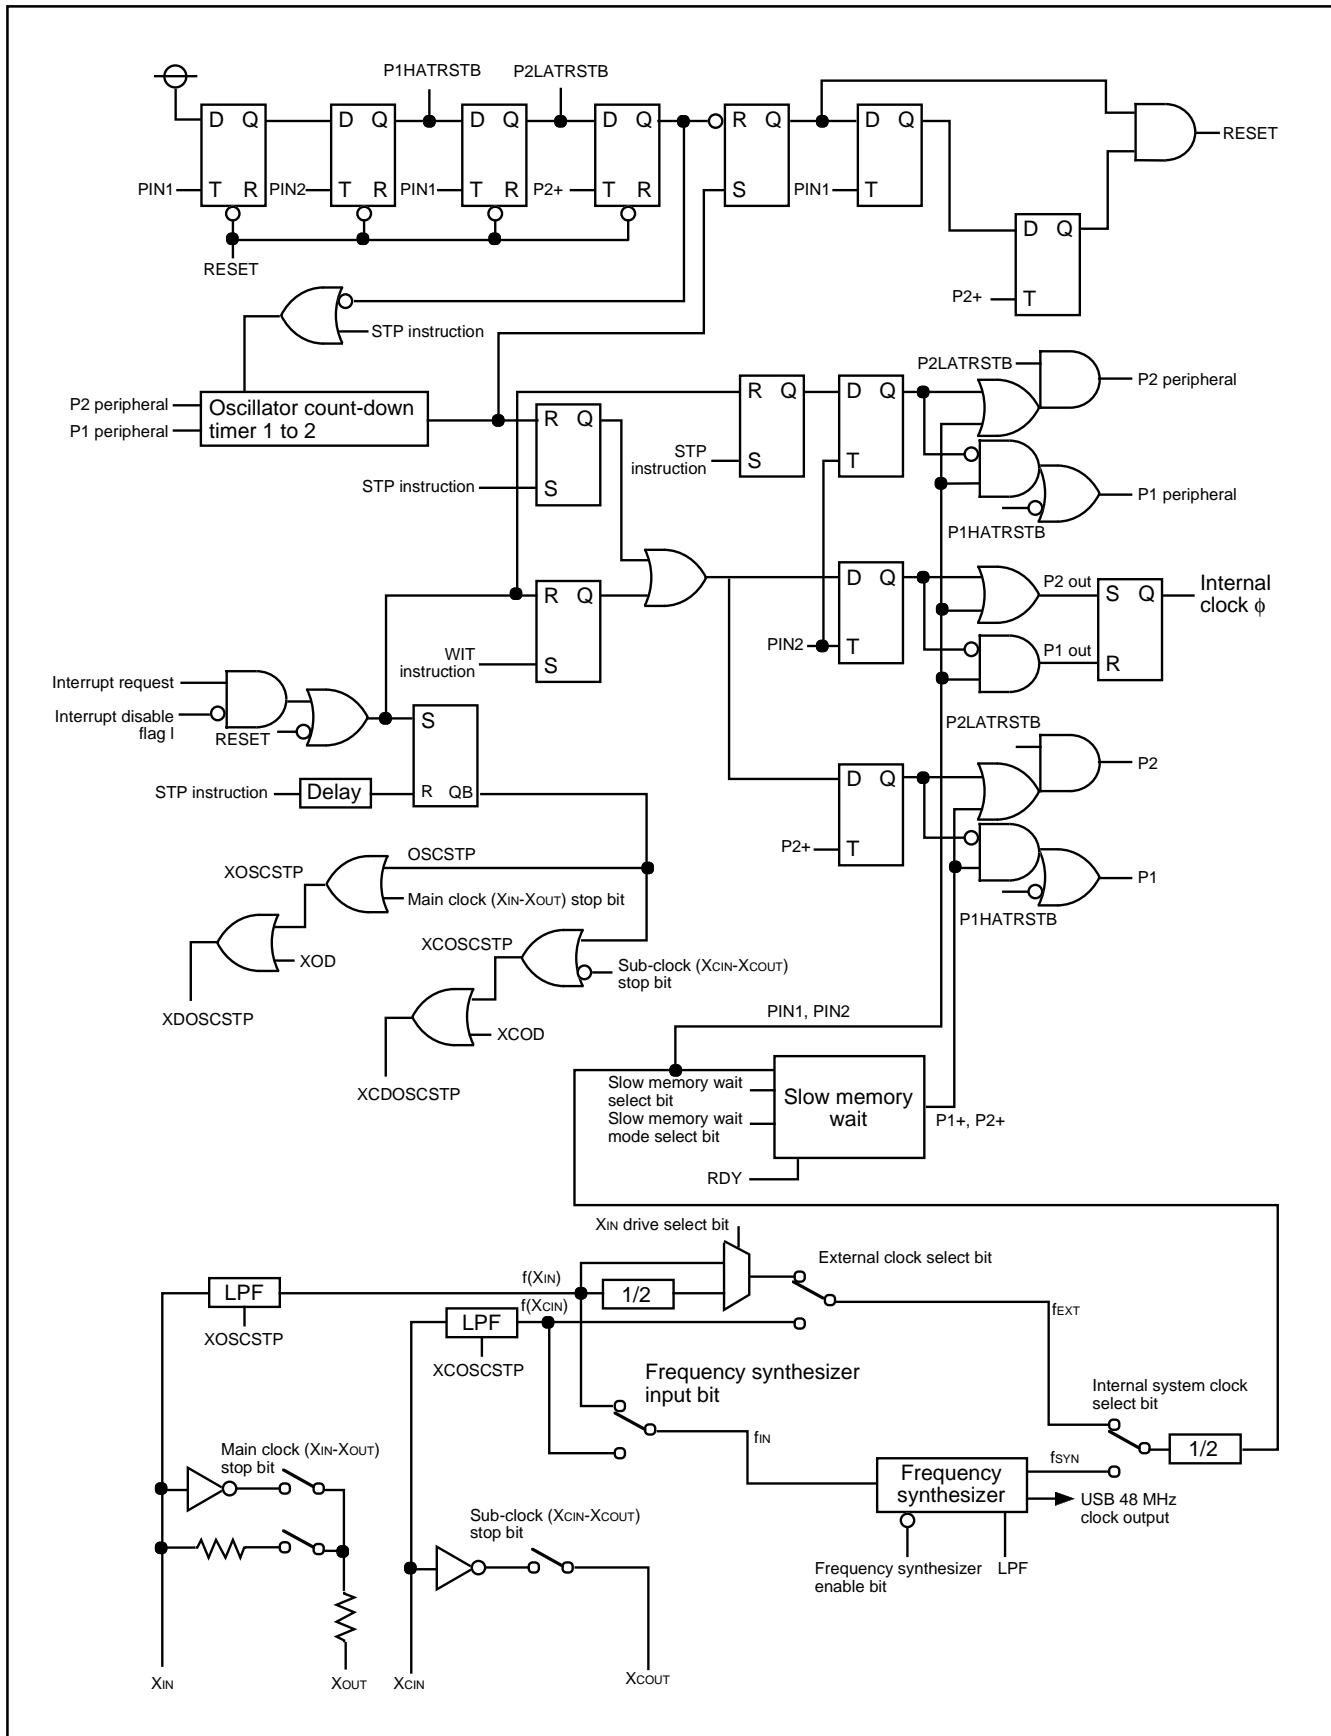


Fig. 59 Clock generating circuit block diagram



Notes 1 : Switch the mode by the allows shown between the mode blocks. (Do not switch between the modes directly without an allow.)
2 : In Stop mode, though the frequency synthesizer is not automatically disabled, the oscillator which sends clocks to the frequency synthesizer stops. Set the system clock and disable the frequency synthesizer before execution of the STP instruction.
3 : $\phi = f(XIN)/2$ can be also used by setting the XIN divider select bit (CCR7) to "1". Then this diagram also applies to that case.
4 : The frequency synthesizer's input can be selected between XIN input and Xcin input regardless of the system clock. This diagram assumes the frequency synthesizer's input to be the system clock. Enable the oscillator to be used for the frequency synthesizer's input before enabling the frequency synthesizer.
5 : Select the Xcin input as the frequency synthesizer's input by setting the frequency synthesizer input bit (FSC3) to "1" before stopping XIN oscillation.

Remarks : This diagram assumes that:
 • Stack page is page 1
 • In single-chip mode
 • (Depending on the CPU mode register A)
 • ϕ expresses the internal clock.

Fig. 60 State transitions of clock

PROCESSOR MODE

Single-chip mode, memory expansion mode, and microprocessor mode which is only in the mask ROM version can be selected by using the Processor Mode Bits of CPU mode register A (bits 0 and 1 of address 000016). In the memory expansion mode and microprocessor mode, a memory can be expanded externally via ports P0 to P3. In these modes, ports P0 to P3 lose their I/O port functions and become bus pins.

The port direction registers corresponding to those ports become external memory areas.

Table 8 Port functions in memory expansion mode and microprocessor mode

Port Name	Function
Port P0	Outputs low-order 8 bits of address.
Port P1	Outputs high-order 8 bits of address.
Port P2	Operates as I/O pins for data D7 to D0 (including instruction code).
Port P3	P30 is the RDY input pin. P31 and P32 function only as output pins P33 is the DMAOUT output pin. P34 is the φOUT output pin. P35 is the SYNCOUT output pin. P36 is the WR output pin, and P37 is the RD output pin.
Port P4	P40 is the EDMA pin.

(1) Single-chip mode

Select this mode by resetting the MCU with CNVss connected to Vss.

(2) Memory expansion mode

Select this mode by setting the Processor Mode Bits (b1, b0) to "01" in software with CNVss connected to Vss. This mode enables external memory expansion while maintaining the validity of the internal ROM.

(3) Microprocessor mode

Select this mode by resetting the MCU with CNVss connected to Vcc, or by setting the Processor Mode Bits (b1, b0) to "10" in software with CNVss connected to Vss. In the microprocessor mode, the internal ROM is no longer valid and an external memory must be used.

Do not set this mode in the flash memory version.

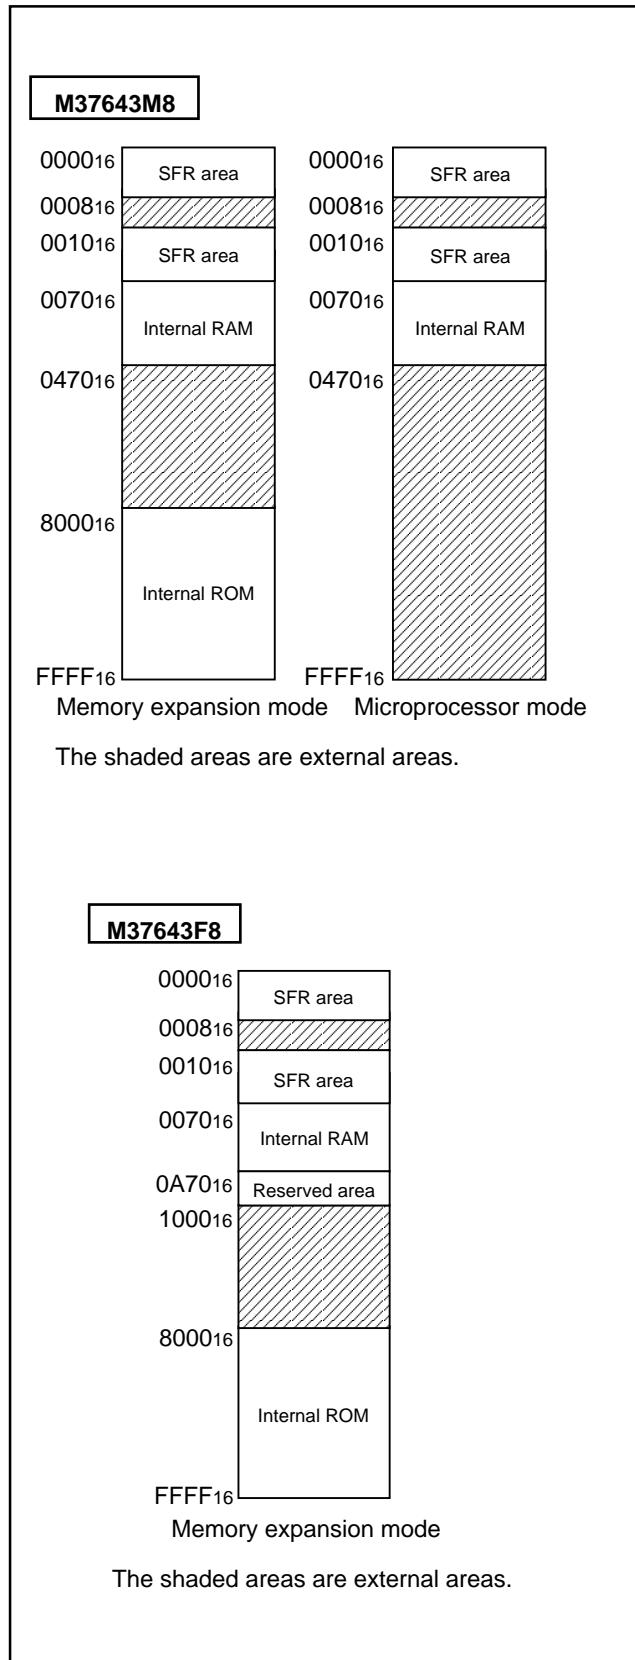


Fig. 61 Memory maps in processor modes other than single-chip mode

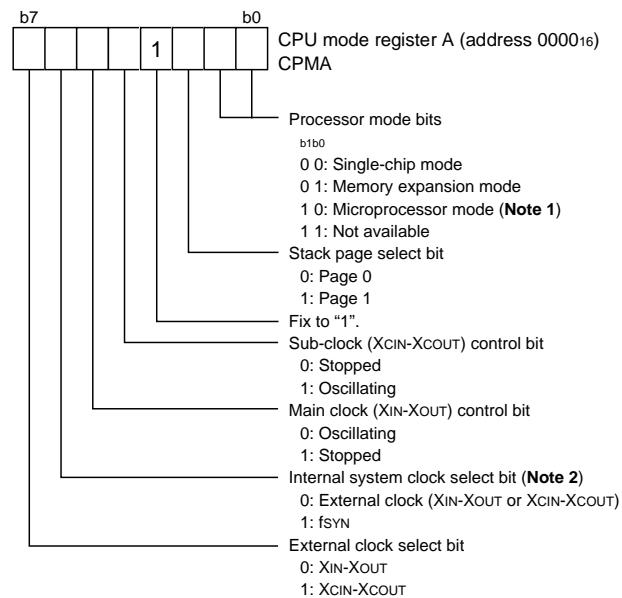


Fig. 62 Structure of CPU mode register A

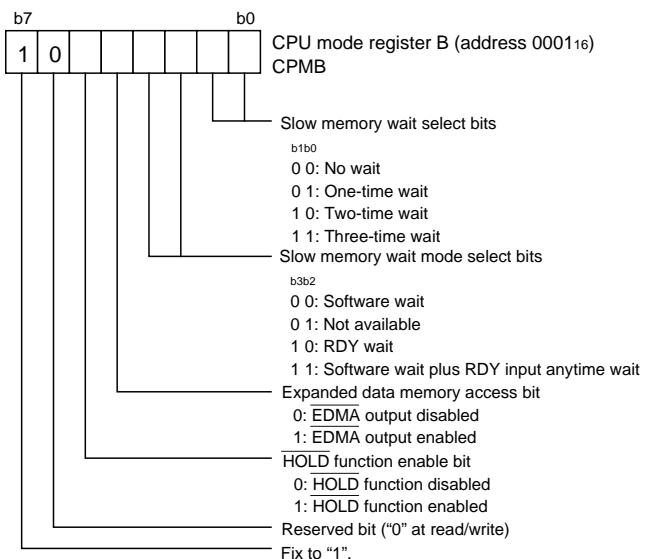


Fig. 63 Structure of CPU mode register B

Slow Memory Wait

The 7643 Group is equipped with the slow memory wait function (Software wait, RDY wait, and Extended RDY wait: software wait plus RDY input anytime wait) for easier interfacing with external devices that have long access times. The slow memory wait function can be enabled in the memory expansion mode and microprocessor mode. The appropriate wait mode is selected by setting bits 0 to 3 of CPU mode register B (address 000116). This function can extend the read cycle or write cycle only for access to an external memory. However, this wait function cannot be enabled for access to addresses 000816 to 000F16.

(1) Software wait

The software wait is selected by setting "00" to the Slow Memory Wait Mode Select Bits of CPU mode register B (address 000116). Read/write cycles ("L" width of RD pin/WR pin) can be extended by one to three ϕ cycles. The number of cycles to be extended can be selected with the Slow Memory Wait Select Bits. When the software wait function is selected, the RDY pin status becomes invalid.

(2) RDY wait

RDY Wait is selected by setting "10" to the Slow Memory Wait Mode Select Bits of CPU mode register B (address 000116). When a fixed time of "L" is input to the RDY pin at the beginning of a read/write cycle (before ϕ cycle falls), the MCU goes to the RDY state. The read/write cycle can then be extended by one to three ϕ cycles. The number of ϕ cycles to be added can be selected by the Slow Memory Wait Bits.

(3) Software wait + Extended RDY wait

Extended RDY Wait is selected by setting "11" to the Slow Memory Wait Mode Select Bits of CPU mode register B (address 000116). The read/write cycle can be extended when a fixed time of "L" is input to the RDY pin at the beginning of a read/write cycle (before ϕ cycle falls). The RDY pin state is checked continually at each fall of ϕ cycle until the RDY pin goes to "H". When "H" is input to the RDY pin, the wait is released within 1, 2, or 3 ϕ cycles (as selected with the Slow Memory Wait Bits).

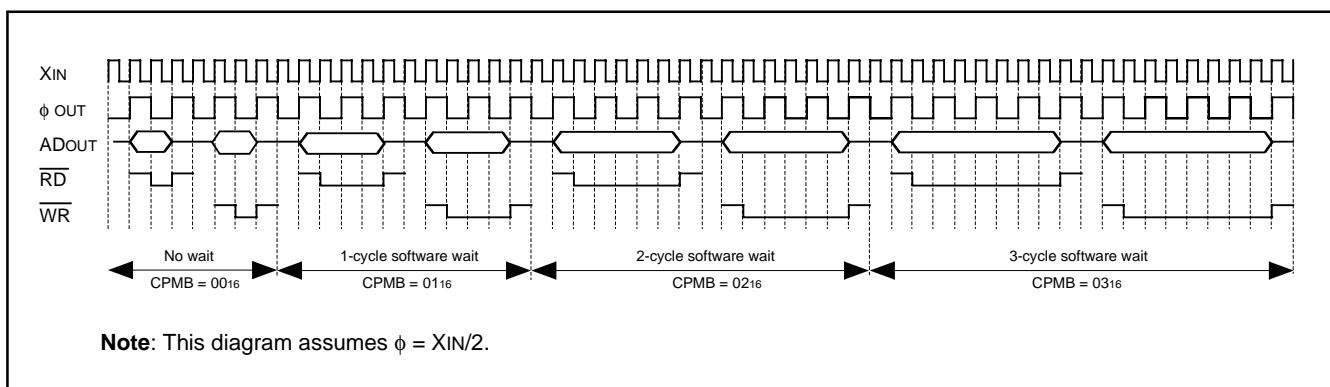


Fig. 64 Software wait timing diagram

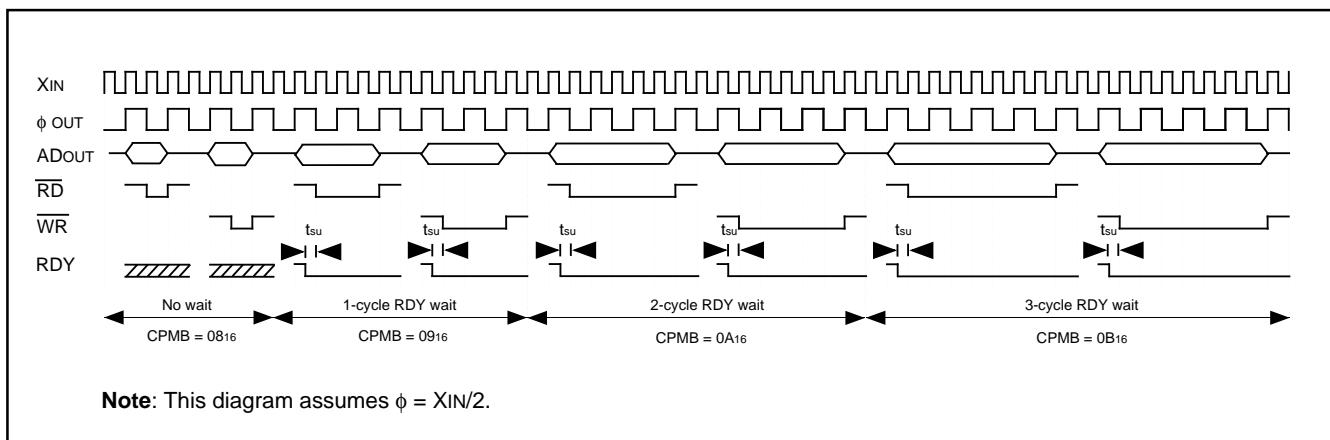


Fig. 65 RDY wait timing diagram

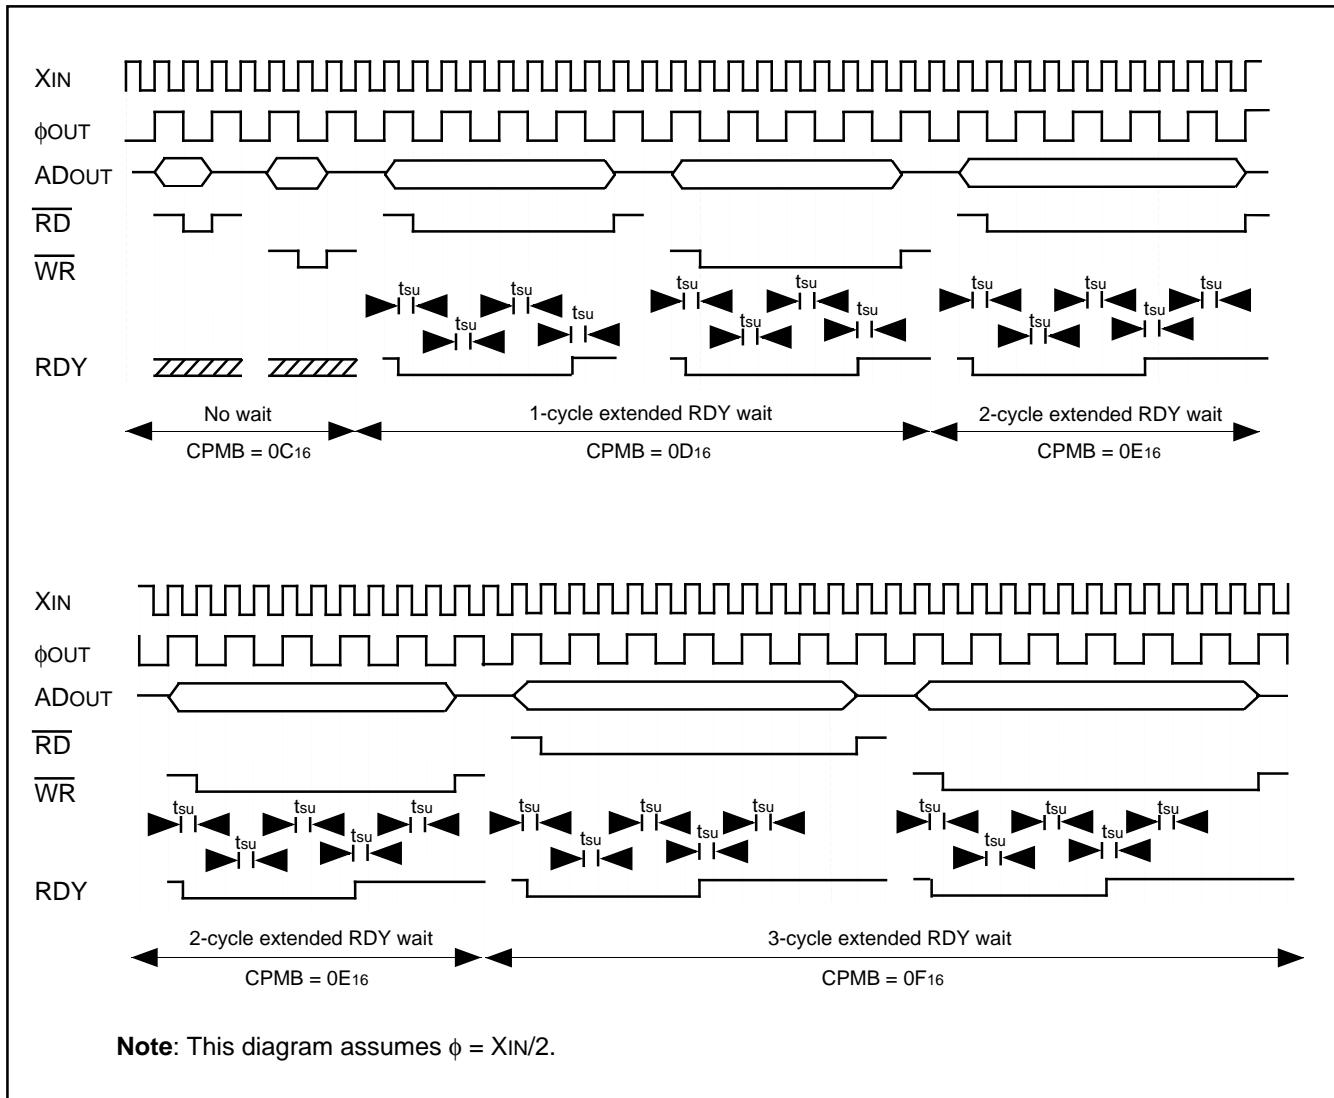


Fig. 66 Extended RDY wait (software wait plus RDY input anytime wait) timing diagram

HOLD Function

The HOLD function is used for systems that consist of external circuits that access MCU buses without use of the CPU (Central Processing Unit). The HOLD function is used to generate the timing in which the MCU will relinquish the bus from the CPU to the external circuits. To use the HOLD function, set the HOLD function Enable Bit of CPU mode register B (address 000116) to "1". This function can be used with both the HOLD pin and the HLDA pin.

The HOLD signal is a signal from an external circuit requesting the MCU to relinquish use of the bus. When "L" level is input, the MCU goes to the HOLD state and remains so while the pin is at "L". The oscillator does not stop oscillating during the HOLD state, therefore allowing the internal peripheral functions to operate during this time.

When the MCU relinquishes use of the bus, "L" level is output from the HLDA pin. The MCU makes ports P0 and P1 (address buses) and port P2 (data bus) tri-state outputs and holds port P37 (RD pin) and port P36 (WR pin) "H" level. Port P34 (ϕ OUT pin) continues to oscillate. This function is not valid when the MCU is using the IBF1 function with the HLDA pin.

Expanded Data Memory Access

In Expanded Data Memory Access Mode, the MCU can access a data area larger than 64 Kbytes with the LDA (\$zz), Y (indirect Y) instruction and the STA (\$zz), Y (indirect Y) instruction.

To use this mode, set the Expanded Data Memory Access Bit of CPU mode register B (address 000116) to "1". In this case, port P40 (EDMA pin) goes "L" level during the read/write cycle of the LDA or STA instruction.

The determination of which bank to access is done by using an I/O port to represent expanded addresses exceeding address bus AB15. For example, when accessing 4 banks, use two I/O ports to represent address buses AB16 and AB17.

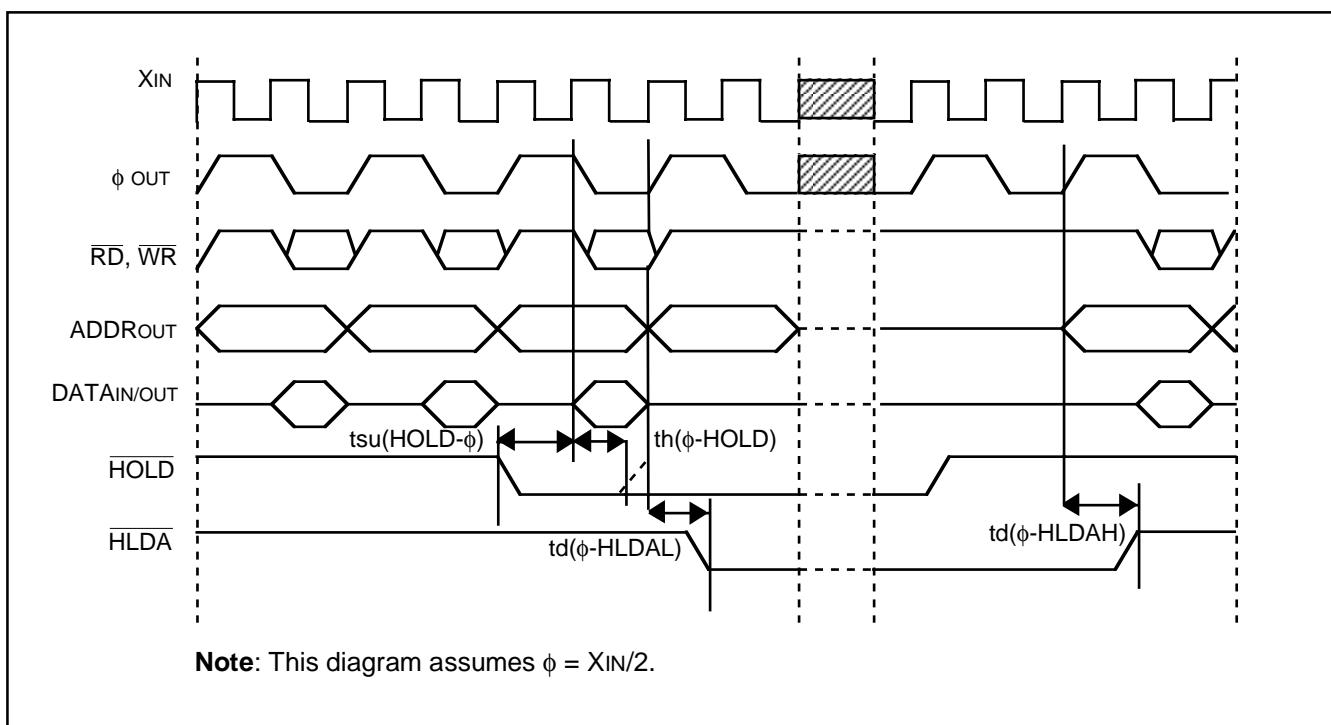


Fig. 67 Hold function timing diagram

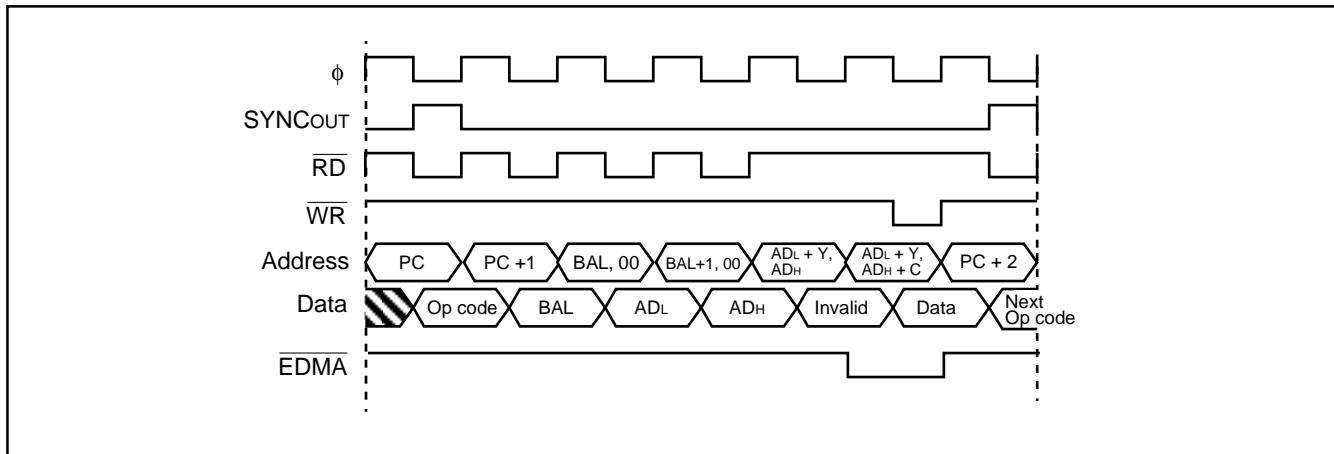


Fig. 68 STA (\$ zz), Y instruction sequence when EDMA enabled

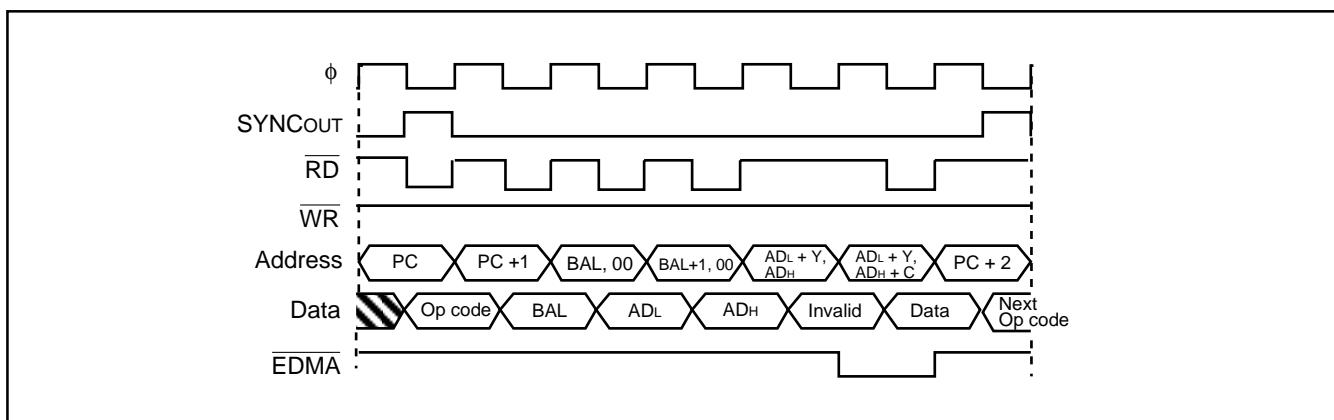


Fig. 69 LDA (\$ zz), Y instruction sequence when EDMA enabled and T flag = "0"

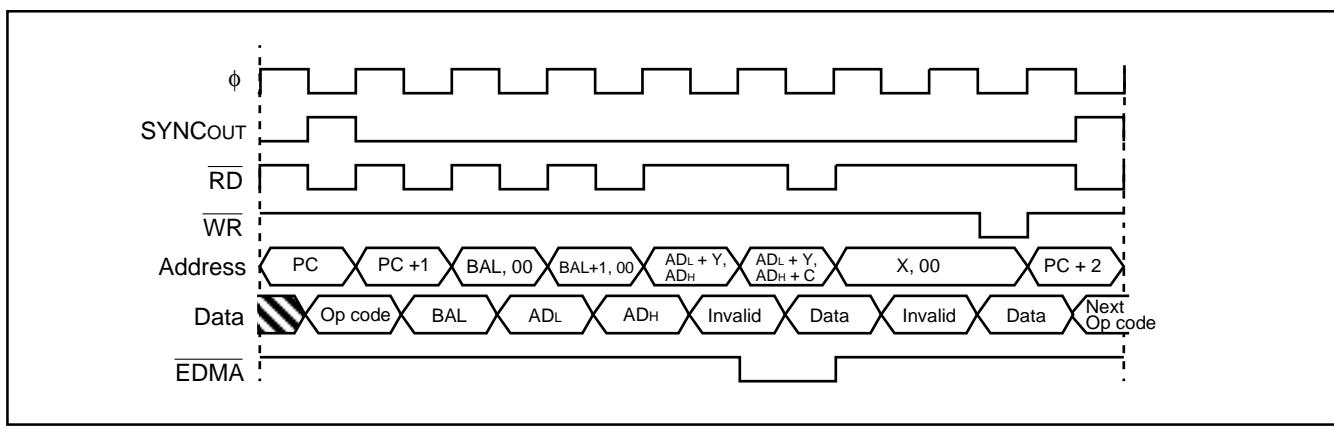


Fig. 70 LDA (\$ zz), Y instruction sequence when EDMA enabled and T flag = "1"

ELECTRICAL CHARACTERISTICS

Absolute Maximum Ratings

Table 9 Absolute maximum ratings

Symbol	Parameter		Conditions	Ratings	Unit	
Vcc	Power source voltage		All voltages are based on Vss. Output transistors are cut off.	−0.3 to 6.5	V	
AVcc	Analog power source voltage AVcc, Ext.Cap			−0.3 to Vcc+0.3	V	
VI	Input voltage	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87		−0.3 to Vcc+0.3	V	
VI	Input voltage	RESET, XIN, XCIN		−0.3 to Vcc+0.3	V	
VI	Input voltage	CNVss		−0.3 to Vcc + 0.3	V	
		Mask ROM version		−0.3 to 6.5	V	
		Flash memory version		−0.5 to 3.8	V	
VI	Input voltage	USB D+, USB D−		−0.3 to Vcc+0.3	V	
VO	Output voltage	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87, XOUT, XCOUT, LPF		−0.5 to 3.8	V	
VO	Output voltage	USB D+, USB D−, Ext. Cap		−0.3 to Vcc+0.3	V	
Pd	Power dissipation (Note)		T _a = 25°C	−0.5 to 3.8	mW	
T _{opr}	Operating temperature			750	°C	
T _{stg}	Storage temperature			−20 to 70	°C	
				−40 to 125	°C	

Note: The maximum power dissipation depends on the MCU's power dissipation and the specific heat consumption of the package.

Recommended Operating Conditions

In $V_{CC} = 5$ V

Table 10 Recommended operating conditions ($V_{CC} = 4.15$ to 5.25 V, $V_{SS} = 0$ V, $T_a = -20$ to 70°C , unless otherwise noted)

Symbol	Parameter	Limits			Unit
		Min.	Typ.	Max.	
V_{CC}	Power source voltage	4.15	5.0	5.25	V
AV_{CC}	Analog reference voltage	4.15	5.0	V_{CC}	V
V_{SS}	Power source voltage		0		V
AV_{SS}	Analog reference voltage		0		V
VI_{H}	"H" input voltage	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	0.8 V_{CC}		V_{CC}
VI_{H}	"H" input voltage (Selecting VI_{HL} level input)	P20–P27	0.5 V_{CC}		V_{CC}
VI_{H}	"H" input voltage	RESET, X_{IN} , X_{CIN} , CNV_{SS}	0.8 V_{CC}		V_{CC}
VI_{H}	"H" input voltage	USB D+, USB D–	2.0		3.8
VI_{L}	"L" input voltage	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	0		0.2 V_{CC}
VI_{L}	"L" input voltage (Selecting VI_{HL} level input)	P20–P27	0		0.16 V_{CC}
VI_{L}	"L" input voltage	RESET, X_{IN} , X_{CIN} , CNV_{SS}	0		0.2 V_{CC}
VI_{L}	"L" input voltage	USB D+, USB D–			0.8
$\Sigma I_{OH(peak)}$	"H" total peak output current (Note 1)	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			-80 mA
$\Sigma I_{OL(peak)}$	"L" total peak output current (Note 1)	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			80 mA
$\Sigma I_{OH(avg)}$	"H" total average output current (Note 1)	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			-40 mA
$\Sigma I_{OL(avg)}$	"L" total average output current (Note 1)	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			40 mA
$I_{OH(peak)}$	"H" peak output current (Note 2)	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			-10 mA
$I_{OL(peak)}$	"L" peak output current (Note 2)	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			10 mA
$I_{OH(avg)}$	"H" average output current (Note 3)	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			-5.0 mA
$I_{OL(avg)}$	"L" average output current (Note 3)	P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			5.0 mA
$f(X_{IN})$	Main clock input frequency (Notes 4, 5)	1		24	MHz
$f(X_{CIN})$	Sub-clock input frequency (Notes 4, 6)		32.768	50/5.0	kHz/MHz

Notes 1: The total peak output current is the peak value of the peak currents flowing through all the applicable ports. The total average output current is the average value measured over 100 ms flowing through all the applicable ports.

2: The peak output current is the peak current flowing in each port.

3: The average output current is an average value measured over 100 ms.

4: The duty of oscillation frequency is 50 %.

5: Connect a ceramic resonator or a quartz-crystal oscillator between the X_{IN} and X_{OUT} pins. Its maximum oscillation frequency must be 24 MHz. However, make sure to set ϕ to 12 MHz or slower. More faster clocks are required as the $f(X_{IN})$ when using the frequency synthesizer as possible.

6: Connect a ceramic resonator or a quartz-crystal oscillator between the X_{CIN} and X_{COUT} pins. Its maximum oscillation frequency must be 50 kHz. Input an external clock having 5 MHz frequency (max.) from the X_{CIN} pin.

Electrical Characteristics

In $V_{CC} = 5$ V

Table 11 Electrical characteristics (1) ($V_{CC} = 4.15$ to 5.25 V, $V_{SS} = 0$ V, $T_a = -20$ to 70° C, unless otherwise noted)

Symbol	Parameter	Test conditions	Limits			Unit
			Min.	Typ.	Max.	
V_{OH}	"H" output voltage P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	$I_{OH} = -10$ mA	$V_{CC} - 2.0$			V
V_{OH}	"H" output voltage USB D+, USB D-	USB+, and USB- pins pull-down via a resistor of $15\text{ k}\Omega \pm 5\%$ USB+ pin pull-up to Ext. Cap. pin via a resistor of $1.5\text{ k}\Omega \pm 5\%$	2.8		3.6	V
V_{OL}	"L" output voltage P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	$I_{OL} = 10$ mA			2.0	V
V_{OL}	"L" output voltage USB D+, USB D-	USB+, and USB- pins pull-down via a resistor of $15\text{ k}\Omega \pm 5\%$ USB+ pin pull-up to Ext. Cap. pin via a resistor of $1.5\text{ k}\Omega \pm 5\%$			0.3	V
$V_{T+}-V_{T-}$	Hysteresis INT0, INT1, RDY, HOLD, P20–P27 (Note 1)			0.5		V
$V_{T+}-V_{T-}$	Hysteresis URXD, SCLK, SRXD, SRDY, CTS			0.5		V
$V_{T+}-V_{T-}$	Hysteresis RESET			0.5		V
I_{IH}	"H" input current P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	$V_I = V_{CC}$			5.0	μ A
I_{IH}	"H" input current RESET, CNVss				5.0	μ A
I_{IH}	"H" input current XIN			9.0	20	μ A
I_{IH}	"H" input current XCIN				5.0	μ A
I_{IL}	"L" input current P00–P07, P10–P17, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	$V_I = V_{SS}$			-5.0	μ A
I_{IL}	"L" input current RESET				-5.0	μ A
I_{IL}	"L" input current CNVss				-20	μ A
I_{IL}	"L" input current XIN			-9.0	-20	μ A
I_{IL}	"L" input current XCIN				-5.0	μ A
I_{IL}	"L" input current P20–P27	$V_I = V_{SS}$ Pull-ups "off"			-5.0	μ A
			$V_{CC} = 5.0$ V, $V_I = V_{SS}$ Pull-ups "on"	-30	-65	-140
VRAM	RAM hold voltage	When clock is stopped	2.0		5.25	V

Note 1: This spec is hysteresis of key input interrupt.

In $V_{CC} = 5$ VTable 12 Electrical characteristics (2) ($V_{CC} = 4.15$ to 5.25 V, $V_{SS} = 0$ V, $T_a = -20$ to 70°C , unless otherwise noted)

Symbol	Parameter	Test conditions	Limits			Unit
			Min.	Typ.	Max.	
ICC	Power source current (Output transistor is isolated.)	Normal mode (Note 1) $f(XIN) = 24$ MHz, $\phi = 12$ MHz USB operating Frequency synthesizer ON		40	90	mA
		Wait mode (Note 2) $f(XIN) = 24$ MHz, $\phi = 12$ MHz USB block enabled, USB clock stopped, Frequency synthesizer ON		5.0	11	mA
		Wait mode (Note 3) $f(XCIN) = 32$ kHz, $\phi = 16$ kHz USB block disabled Frequency synthesizer OFF USB transceiver DC-DC converter OFF			10	μA
		Stop mode USB transceiver DC-DC converter ON Low current mode (USBC3 = "1")		100	250	μA
		Stop mode USB transceiver DC-DC converter OFF $T_a = 25^\circ\text{C}$			1.0	μA
		Stop mode USB transceiver DC-DC converter OFF $T_a = 70^\circ\text{C}$			10	μA

<Test conditions>

Notes 1: Operating in single-chip mode

Clock input from XIN pin (XOUT oscillator stopped)
USB operating with USB transceiver DC-DC converter enabled
Operating functions: Frequency synthesizer, CPU, UART, DMAC, Timers
Disabled functions: Serial I/O

2: Operating in single-chip mode with Wait mode

Clock input from XIN pin (XOUT oscillator stopped)
USB suspended due to USB clock stopped with USB transceiver DC-DC converter enabled
Operating functions: Frequency synthesizer, Timers
Disabled functions: CPU, UART, DMAC and Serial I/O

3: Operating in single-chip mode with Wait mode

XIN - XOUT oscillator stopped
Clock input from $XCIN$ pin (Xcout oscillator stopped)
USB stopped, USB clock stopped and USB transceiver DC-DC converter disabled
Operating functions: Timers
Disabled functions: Frequency synthesizer, CPU, UART, DMAC and Serial I/O

Timing Requirements

In $V_{CC} = 5$ V

Table 13 Timing requirements ($V_{CC} = 4.15$ to 5.25 V, $V_{SS} = 0$ V, $T_a = -20$ to 70° C, unless otherwise noted)

Symbol	Parameter	Limits			Unit
		Min.	Typ.	Max.	
$tw(RESET)$	Reset input "L" pulse width	2			μs
$tc(XIN)$	Main clock input cycle time (Note)	41.66			ns
$twh(XIN)$	Main clock input "H" pulse width	$0.4 \cdot tc(XIN)$			ns
$twl(XIN)$	Main clock input "L" pulse width	$0.4 \cdot tc(XIN)$			ns
$tc(XCIN)$	Sub-clock input cycle time	200			ns
$twh(XCIN)$	Sub-clock input "H" pulse width	$0.4 \cdot tc(XCIN)$			ns
$twl(XCIN)$	Sub-clock input "L" pulse width	$0.4 \cdot tc(XCIN)$			ns
$tc(INT)$	INT0, INT1 input cycle time	200			ns
$twh(INT)$	INT0, INT1 input "H" pulse width	90			ns
$twl(INT)$	INT0, INT1 input "L" pulse width	90			ns
$td(\phi - TOUT)$	Timer TOUT delay time			15	ns
$tc(SCLKE)$	Serial I/O external clock input cycle time	400			ns
$twh(SCLKE)$	Serial I/O external clock input "H" pulse width	190			ns
$twl(SCLKE)$	Serial I/O external clock input "L" pulse width	180			ns
$tsu(SRXD-SCLKE)$	Serial I/O input setup time (external clock)	15			ns
$th(SCLKE-SRXD)$	Serial I/O input hold time (external clock)	10			ns
$td(SCLKE-STXD)$	Serial I/O output delay time (external clock)			25	ns
$tv(SCLKE-SRDY)$	Serial I/O SRDY valid time (external clock)			26	ns
$tc(SCLKi)$	Serial I/O internal clock output cycle time	166.66			ns
$twh(SCLKi)$	Serial I/O internal clock output "H" pulse width	$0.5 \cdot tc(SCLKi) - 5$			ns
$twl(SCLKi)$	Serial I/O internal clock output "L" pulse width	$0.5 \cdot tc(SCLKi) - 5$			ns
$tsu(SRXD-SCLKi)$	Serial I/O input setup time (internal clock)	20			ns
$th(SCLKi-SRXD)$	Serial I/O input hold time (internal clock)	5			ns
$td(SCLKi-STXD)$	Serial I/O output delay time (internal clock)			5	ns

Note: Make sure not to exceed 12 MHz of ϕ , in other words, $tc(\phi) \geq 83.33$ ns. For example, set bit 7 of the clock control register (CCR) to "0" in the case of $tc(XIN) < 41.66$ ns.

In $V_{CC} = 5$ V**Table 14 Timing requirements and switching characteristics in memory expansion and microprocessor modes**(V_{CC} = 4.15 to 5.25 V, V_{SS} = 0 V, T_A = -20 to 70°C, unless otherwise noted)

Symbol	Parameter	Limits			Unit
		Min.	Typ.	Max.	
tc(ϕ)	ϕ clock cycle time	83.33			ns
twH(ϕ)	ϕ clock "H" pulse width	0.5*tc(ϕ) - 5			ns
twL(ϕ)	ϕ clock "L" pulse width	0.5*tc(ϕ) - 5			ns
td(ϕ - AH)	AB15-AB8 delay time			31	ns
tv(ϕ - AH)	AB15-AB8 valid time	0			ns
td(ϕ - AL)	AB7-AB0 delay time			33	ns
tv(ϕ - AL)	AB7-AB0 valid time	0			ns
td(ϕ - WR)	WR delay time			6	ns
tv(ϕ - WR)	WR valid time	0			ns
td(ϕ - RD)	RD delay time			6	ns
tv(ϕ - RD)	RD valid time	0			ns
td(ϕ - SYNC)	SYNCOUT delay time			6	ns
tv(ϕ - SYNC)	SYNCOUT valid time	0			ns
td(ϕ - DMA)	DMAOUT delay time			25	ns
tv(ϕ - DMA)	DMAOUT valid time	0			ns
tsu(RDY- ϕ)	RDY setup time	21			ns
th(ϕ - RDY)	RDY hold time	0			ns
tsu(HOLD- ϕ)	HOLD setup time	21			ns
th(ϕ - HOLD)	HOLD hold time	0			ns
td(ϕ - HLDAL)	HOLD "L" delay time			25	ns
td(ϕ - HLDAH)	HOLD "H" delay time			25	ns
tsu(DB- ϕ)	Data bus setup time	7			ns
th(ϕ - DB)	Data bus hold time	0			ns
td(ϕ - DB)	Data bus delay time			22	ns
tv(ϕ - DB)	Data bus valid time (Note 1)	13			ns
td(ϕ - EDMA)	EDMA delay time			12	ns
tv(ϕ - EDMA)	EDMA valid time	0			ns
twL(WR) (Note 2)	WR pulse width	0.5*tc(ϕ) - 5			ns
twL(RD) (Note 2)	RD pulse width	0.5*tc(ϕ) - 5			ns
td(AH-WR)	AB15-AB8 valid time before WR	0.5*tc(ϕ) - 28			ns
td(AL-WR)	AB7-AB0 valid time before WR	0.5*tc(ϕ) - 30			ns
tv(WR-AH)	AB15-AB8 valid time after WR	0			ns
tv(WR-AL)	AB7-AB0 valid time after WR	0			ns
td(AH-RD)	AB15-AB8 valid time before RD	0.5*tc(ϕ) - 28			ns
td(AL-RD)	AB7-AB0 valid time before RD	0.5*tc(ϕ) - 30			ns
tv(RD-AH)	AB15-AB8 valid time after RD	0			ns
tv(RD-AL)	AB7-AB0 valid time after RD	0			ns
tsu(RDY-WR)	RDY setup time before WR	27			ns
th(WR-RDY)	RDY hold time after WR	0			ns
tsu(RDY-RD)	RDY setup time before RD	27			ns
th(RD-RDY)	RDY hold time after RD	0			ns
tsu(DB-RD)	Data bus setup time before RD	13			ns
th(RD-DB)	Data bus hold time after RD	0			ns
td(WR-DB)	Data bus delay time before WR			20	ns
tv(WR-DB)	Data bus valid time after WR (Note 1)	10			ns
tv(WR-EDMA)	EDMA delay time after WR	0			ns
tv(RD-EDMA)	EDMA valid time after RD	0			ns
tr(D+), tr(D-)	USB output rise time, CL = 50 pF	4		20	ns
tr(D+), tr(D-)	USB output fall time, CL = 50 pF	4		20	ns

Notes 1: Test conditions: $I_{OHL} = \pm 5\text{mA}$, $C_L = 50\text{ pF}$
2: $t_{wL}(\text{RD}) = ((n + 0.5) \cdot t_{c(\text{PHI})}) - 5\text{ ns}$ ($n = \text{wait number}$)
 $t_{wL}(\text{WR}) = ((n + 0.5) \cdot t_{c(\text{PHI})}) - 5\text{ ns}$ ($n = \text{wait number}$)
For example, two software waits, $\text{PHI} = 12\text{ MHz}$ operating
 $t_{wL}(\text{RD}) = 2.5 \cdot t_{c(\text{PHI})} - 5\text{ ns} = 203.33\text{ ns}$

Recommended Operating Conditions In $V_{CC} = 3\text{ V}$

Table 15 Recommended operating conditions ($V_{CC} = 3.0$ to 3.6 V , $V_{SS} = 0\text{ V}$, $T_a = -20$ to 70°C , unless otherwise noted)

Symbol	Parameter	Limits			Unit
		Min.	Typ.	Max.	
V_{CC}	Power source voltage	3.0	3.3	3.6	V
AV_{CC}	Analog reference voltage	3.0	3.3	V_{CC}	V
V_{SS}	Power source voltage		0		V
AV_{SS}	Analog reference voltage		0		V
Ext. Cap.	DC-DC converter voltage	3.0	3.3	3.6	V
VI_{H}	"H" input voltage P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	0.8 V_{CC}		V_{CC}	V
VI_{H}	"H" input voltage (Selecting $VI_{H,L}$ level input) P20–P27	0.5 V_{CC}		V_{CC}	V
VI_{H}	"H" input voltage RESET, X_{IN} , X_{CIN} , CNV_{SS}	0.8 V_{CC}		V_{CC}	V
VI_{H}	"H" input voltage USB D+, USB D–	2.0			V
VI_{L}	"L" input voltage P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	0		0.2 V_{CC}	V
VI_{L}	"L" input voltage (Selecting $VI_{H,L}$ level input) P20–P27	0		0.16 V_{CC}	V
VI_{L}	"L" input voltage RESET, X_{IN} , X_{CIN} , CNV_{SS}	0		0.2 V_{CC}	V
VI_{L}	"L" input voltage USB D+, USB D–			0.8	mA
$\Sigma I_{OH(\text{peak})}$	"H" total peak output current (Note 1) P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			-80	mA
$\Sigma I_{OL(\text{peak})}$	"L" total peak output current (Note 1) P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			80	mA
$\Sigma I_{OH(\text{avg})}$	"H" total average output current (Note 1) P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			-40	mA
$\Sigma I_{OL(\text{avg})}$	"L" total average output current (Note 1) P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			40	mA
$I_{OH(\text{peak})}$	"H" peak output current (Note 2) P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			-10	mA
$I_{OL(\text{peak})}$	"L" peak output current (Note 2) P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			10	mA
$I_{OH(\text{avg})}$	"H" average output current (Note 3) P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			-5.0	mA
$I_{OL(\text{avg})}$	"L" average output current (Note 3) P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87			5.0	mA
$f(X_{IN})$	Main clock input frequency (Notes 4, 5)	1		24	MHz
$f(X_{CIN})$	Sub-clock input frequency (Notes 4, 6)		32.768	50/5.0	kHz/MHz

Notes 1: The total peak output current is the peak value of the peak currents flowing through all the applicable ports. The total average output current is the average value measured over 100 ms flowing through all the applicable ports.

2: The peak output current is the peak current flowing in each port.

3: The average output current is an average value measured over 100 ms.

4: The duty of oscillation frequency is 50 %.

5: Connect a ceramic resonator or a quartz-crystal oscillator between the X_{IN} and X_{OUT} pins. Its maximum oscillation frequency must be 24 MHz. However, make sure to set ϕ to 6 MHz or slower. More faster clocks are required as the $f(X_{IN})$ when using the frequency synthesizer as possible.

6: Connect a ceramic resonator or a quartz-crystal oscillator between the X_{CIN} and X_{COUT} pins. Its maximum oscillation frequency must be 50 kHz. Input an external clock having 5 MHz (max.) frequency from the X_{CIN} pin.

Electrical Characteristics

In $V_{CC} = 3$ V

Table 16 Electrical characteristics (1) ($V_{CC} = 3.0$ to 3.6 V, $V_{SS} = 0$ V, $T_a = -20$ to 70 °C, unless otherwise noted)

Symbol	Parameter	Test conditions	Limits			Unit
			Min.	Typ.	Max.	
V_{OH}	"H" output voltage P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	$I_{OH} = -1$ mA	$V_{CC} - 1.0$			V
V_{OH}	"H" output voltage USB D+, USB D-	USB+, and USB- pins pull-down via a resistor of $15\text{ k}\Omega \pm 5\%$ USB+ pin pull-up to Ext. Cap. pin via a resistor of $1.5\text{ k}\Omega \pm 5\%$	2.8		3.6	V
V_{OL}	"L" output voltage P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	$I_{OL} = 1$ mA			1.0	V
V_{OL}	"L" output voltage USB D+, USB D-	USB+, and USB- pins pull-down via a resistor of $15\text{ k}\Omega \pm 5\%$ USB+ pin pull-up to Ext. Cap. pin via a resistor of $1.5\text{ k}\Omega \pm 5\%$	0		0.3	V
$V_{T+}-V_{T-}$	Hysteresis INT0, INT1, RDY, HOLD, P20–P27 (Note 1)			0.3		V
$V_{T+}-V_{T-}$	Hysteresis URXD, SCLK, SRXD, SRDY, CTS			0.3		V
$V_{T+}-V_{T-}$	Hysteresis RESET			0.3		V
I_{IH}	"H" input current P00–P07, P10–P17, P20–P27, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	$V_I = V_{CC}$			5.0	μA
I_{IH}	"H" input current RESET, CNVss				5.0	μA
I_{IH}	"H" input current XIN			9.0	20	μA
I_{IH}	"H" input current XCIN				5.0	μA
I_{IL}	"L" input current P00–P07, P10–P17, P30–P37, P40–P44, P50–P57, P60–P67, P70–P74, P80–P87	$V_I = V_{SS}$			-5.0	μA
I_{IL}	"L" input current RESET				-5.0	μA
I_{IL}	"L" input current CNVss				-20	μA
I_{IL}	"L" input current XIN			-9.0	-20	μA
I_{IL}	"L" input current XCIN				-5.0	μA
I_{IL}	"L" input current P20–P27	$V_I = V_{SS}$ Pull-ups "off"			-5.0	μA
I_{IL}	"L" input current P20–P27		$V_{CC} = 3.0$ V, $V_I = V_{SS}$ Pull-ups "on"	-10	-20	-50
VRAM	RAM hold voltage	When clock is stopped	2.0			V

Note 1: This spec is hysteresis of key input interrupt.

In $V_{CC} = 3$ VTable 17 Electrical characteristics (2) ($V_{CC} = 3.0$ to 3.6 V, $V_{SS} = 0$ V, $T_a = -20$ to 70 °C, unless otherwise noted)

Symbol	Parameter	Test conditions	Limits			Unit
			Min.	Typ.	Max.	
ICC	Power source current (Output transistor is isolated.)	Normal mode (Note 1) $f(XIN) = 24$ MHz, $\phi = 6$ MHz USB operating Frequency synthesizer ON		25	45	mA
		Wait mode (Note 2) $f(XIN) = 24$ MHz, $\phi = 6$ MHz USB block enabled, USB clock stopped, Frequency synthesizer ON		2.5	6	mA
		Wait mode (Note 3) $f(XCIN) = 32$ kHz, $\phi = 16$ kHz USB block disabled Frequency synthesizer OFF USB transceiver DC-DC converter OFF			6	μA
		Stop mode USB transceiver DC-DC converter OFF $T_a = 25$ °C			1.0	μA
		Stop mode USB transceiver DC-DC converter OFF $T_a = 70$ °C			10	μA

<Test conditions>

Notes 1: Operating in single-chip mode

Clock input from XIN pin (XOUT oscillator stopped)
USB operating with USB transceiver DC-DC converter enabled
Operating functions: Frequency synthesizer, CPU, UART, DMAC, Timers
Disabled functions: Serial I/O

2: Operating in single-chip mode with Wait mode

Clock input from XIN pin (XOUT oscillator stopped)
USB suspended due to USB clock stopped with USB transceiver DC-DC converter enabled
Operating functions: Frequency synthesizer, Timers
Disabled functions: CPU, UART, DMAC and Serial I/O

3: Operating in single-chip mode with Wait mode

XIN - XOUT oscillator stopped
Clock input from XCIN pin (XCOUT oscillator stopped)
USB stopped, USB clock stopped and USB transceiver DC-DC converter disabled
Operating functions: Timers
Disabled functions: Frequency synthesizer, CPU, UART, DMAC and Serial I/O

Timing Requirements

In $V_{CC} = 3\text{ V}$

Table 18 Timing requirements ($V_{CC} = 3.0$ to 3.6 V , $V_{SS} = 0\text{ V}$, $T_a = -20$ to 70°C , unless otherwise noted)

Symbol	Parameter	Limits			Unit
		Min.	Typ.	Max.	
$tw(\text{RESET})$	Reset input "L" pulse width	2			μs
$tc(X_{IN})$	Main clock input cycle time (Note)	41.66			ns
$twh(X_{IN})$	Main clock input "H" pulse width	$0.4 \cdot tc(X_{IN})$			ns
$twl(X_{IN})$	Main clock input "L" pulse width	$0.4 \cdot tc(X_{IN})$			ns
$tc(X_{CIN})$	Sub-clock input cycle time	200			ns
$twh(X_{CIN})$	Sub-clock input "H" pulse width	$0.4 \cdot tc(X_{CIN})$			ns
$twl(X_{CIN})$	Sub-clock input "L" pulse width	$0.4 \cdot tc(X_{CIN})$			ns
$tc(\text{INT})$	INT0, INT1 input cycle time	250			ns
$twh(\text{INT})$	INT0, INT1 input "H" pulse width	110			ns
$twl(\text{INT})$	INT0, INT1 input "L" pulse width	110			ns
$td(\phi - T_{OUT})$	Timer T_{OUT} delay time			17	ns
$tc(\text{SCLKE})$	Serial I/O external clock input cycle time	450			ns
$twh(\text{SCLKE})$	Serial I/O external clock input "H" pulse width	220			ns
$twl(\text{SCLKE})$	Serial I/O external clock input "L" pulse width	190			ns
$tsu(\text{SRXD-SCLKE})$	Serial I/O input setup time (external clock)	20			ns
$th(\text{SCLKE-SRXD})$	Serial I/O input hold time (external clock)	15			ns
$td(\text{SCLKE-STXD})$	Serial I/O output delay time (external clock)			34	ns
$tv(\text{SCLKE-SRDY})$	Serial I/O SRDY valid time (external clock)			35	ns
$tc(\text{SCLKI})$	Serial I/O internal clock output cycle time	300			ns
$twh(\text{SCLKI})$	Serial I/O internal clock output "H" pulse width	$0.5 \cdot tc(\text{SCLKI}) - 5$			ns
$twl(\text{SCLKI})$	Serial I/O internal clock output "L" pulse width	$0.5 \cdot tc(\text{SCLKI}) - 5$			ns
$tsu(\text{SRXD-SCLKI})$	Serial I/O input setup time (internal clock)	20			ns
$th(\text{SCLKI-SRXD})$	Serial I/O input hold time (internal clock)	5			ns
$td(\text{SCLKI-STXD})$	Serial I/O output delay time (internal clock)			5	ns

Note: Make sure not to exceed 6 MHz of ϕ , in other words, $tc(\phi) \geq 166.66\text{ ns}$.

In $V_{CC} = 3\text{ V}$ **Table 19 Timing requirements and switching characteristics in memory expansion and microprocessor modes**(V_{CC} = 3.0 to 3.6 V, V_{SS} = 0 V, Ta = -20 to 70°C, unless otherwise noted)

Symbol	Parameter	Limits			Unit
		Min.	Typ.	Max.	
tc(ϕ)	ϕ clock cycle time	166.66			μs
twH(ϕ)	ϕ clock "H" pulse width	0.5•tc(ϕ) - 5			ns
twL(ϕ)	ϕ clock "L" pulse width	0.5•tc(ϕ) - 5			ns
td(ϕ - AH)	AB15-AB8 delay time			45	ns
tv(ϕ - AH)	AB15-AB8 valid time	0			ns
td(ϕ - AL)	AB7-AB0 delay time			47	ns
tv(ϕ - AL)	AB7-AB0 valid time	0			ns
td(ϕ - WR)	WR delay time			8	ns
tv(ϕ - WR)	WR valid time	0			ns
td(ϕ - RD)	RD delay time			8	ns
tv(ϕ - RD)	RD valid time	0			ns
td(ϕ - SYNC)	SYNCOUT delay time			11	ns
tv(ϕ - SYNC)	SYNCOUT valid time	0			ns
td(ϕ - DMA)	DMAOUT delay time			26	ns
tv(ϕ - DMA)	DMAOUT valid time	0			ns
tsu(RDY- ϕ)	RDY setup time	35			ns
th(ϕ - RDY)	RDY hold time	0			ns
tsu(HOLD- ϕ)	HOLD setup time	21			ns
th(ϕ - HOLD)	HOLD hold time	0			ns
td(ϕ - HLDAL)	HOLD "L" delay time			30	ns
td(ϕ - HLDAH)	HOLD "H" delay time			30	ns
tsu(DB- ϕ)	Data bus setup time	9			ns
th(ϕ - DB)	Data bus hold time	0			ns
td(ϕ - DB)	Data bus delay time			30	ns
tv(ϕ - DB)	Data bus valid time (Note 1)	15			ns
td(ϕ - EDMA)	EDMA delay time			15	ns
tv(ϕ - EDMA)	EDMA valid time	0			ns
twL(WR) (Note 2)	WR pulse width	0.5•tc(ϕ) - 6			ns
twL(RD) (Note 2)	RD pulse width	0.5•tc(ϕ) - 6			ns
td(AH-WR)	AB15-AB8 valid time before WR	0.5•tc(ϕ) - 33			ns
td(AL-WR)	AB7-AB0 valid time before WR	0.5•tc(ϕ) - 35			ns
tv(WR-AH)	AB15-AB8 valid time after WR	0			ns
tv(WR-AL)	AB7-AB0 valid time after WR	0			ns
td(AH-RD)	AB15-AB8 valid time before RD	0.5•tc(ϕ) - 33			ns
td(AL-RD)	AB7-AB0 valid time before RD	0.5•tc(ϕ) - 35			ns
tv(RD-AH)	AB15-AB8 valid time after RD	0			ns
tv(RD-AL)	AB7-AB0 valid time after RD	0			ns
tsu(RDY-WR)	RDY setup time before WR	45			ns
th(WR-RDY)	RDY hold time after WR	0			ns
tsu(RDY-RD)	RDY setup time before RD	45			ns
th(RD-RDY)	RDY hold time after RD	0			ns
tsu(DB-RD)	Data bus setup time before RD	18			ns
th(RD-DB)	Data bus hold time after RD	0			ns
td(WR-DB)	Data bus delay time after WR			28	ns
tv(WR-DB)	Data bus valid time after WR (Note 1)	12			ns
tv(WR-EDMA)	EDMA delay time after WR	0			ns
tv(RD-EDMA)	EDMA valid time after RD	0			ns
tr(D+), tr(D-)	USB output rise time, CL = 50 pF	4		20	ns
tr(D+), tr(D-)	USB output fall time, CL = 50 pF	4		20	ns

Notes 1: Test conditions: $I_{OHL} = \pm 5\text{mA}$, $C_L = 50\text{ pF}$

2: $t_{wL}(RD) = ((n + 0.5) \cdot t_c(\text{PHI})) - 5\text{ ns}$ (n = wait number)
 $t_{wL}(WR) = ((n + 0.5) \cdot t_c(\text{PHI})) - 5\text{ ns}$ (n = wait number)
For example, two software waits, $\text{PHI} = 12\text{ MHz}$ operating
 $t_{wL}(RD) = 2.5 \cdot t_c(\text{PHI}) - 5\text{ ns} = 203.33\text{ ns}$


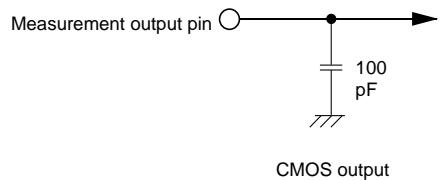


Fig. 71 Circuit for measuring output switching characteristics (1)

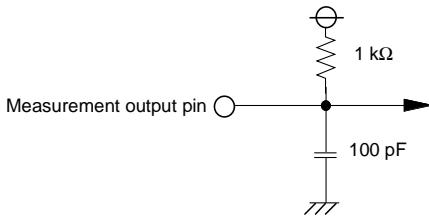


Note: This diagram applies when bit 7 of the serial I/O control register 1 is "1".




Fig. 72 Circuit for measuring output switching characteristics (2)

● Timing diagram

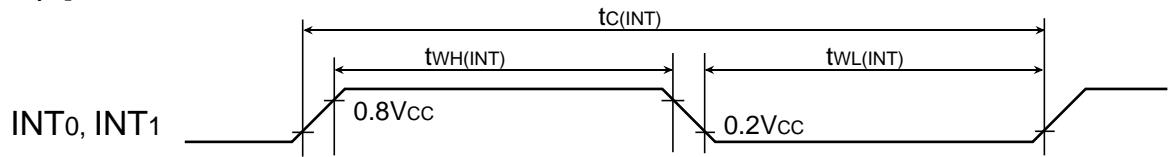[Interrupt]



[Input]

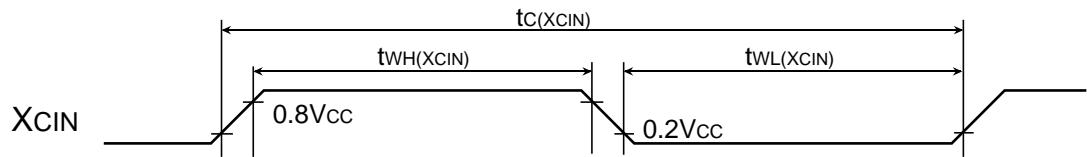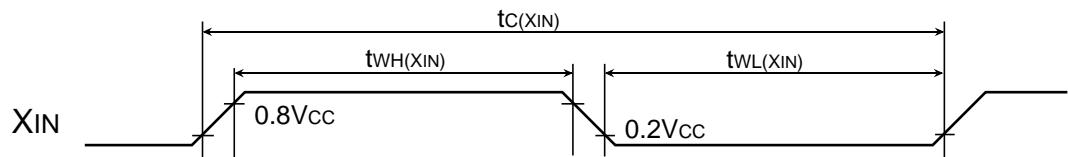

[Timer]

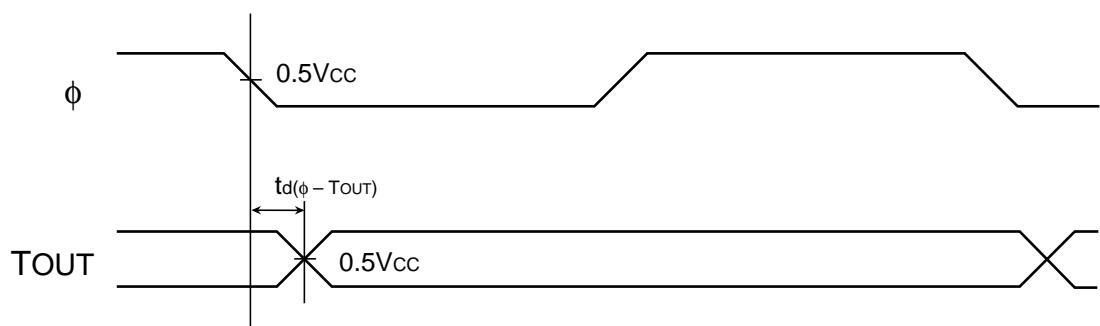


Fig. 73 Timing diagram (1)

● Timing diagram

[Serial I/O]

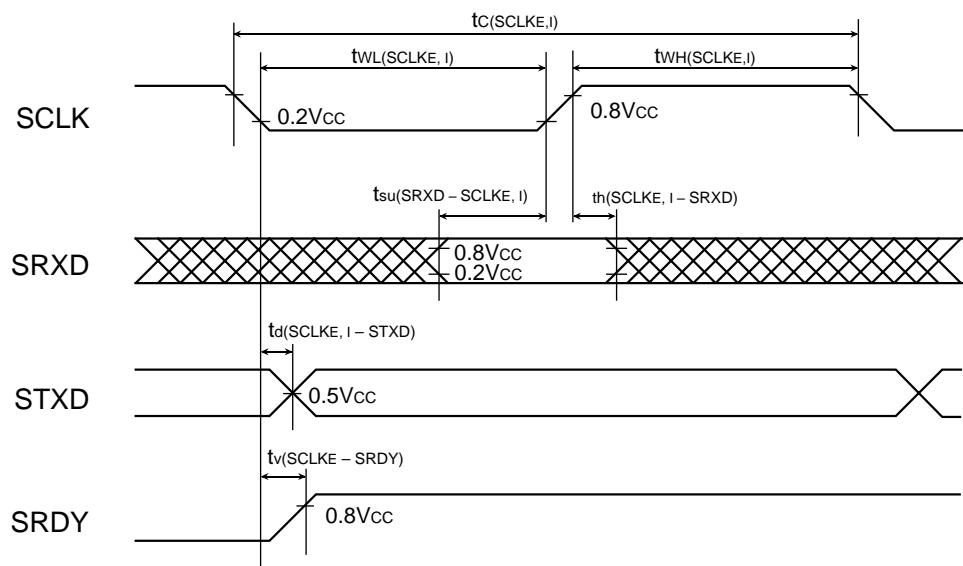


Fig. 74 Timing diagram (2)



Fig. 75 Timing diagram (3)

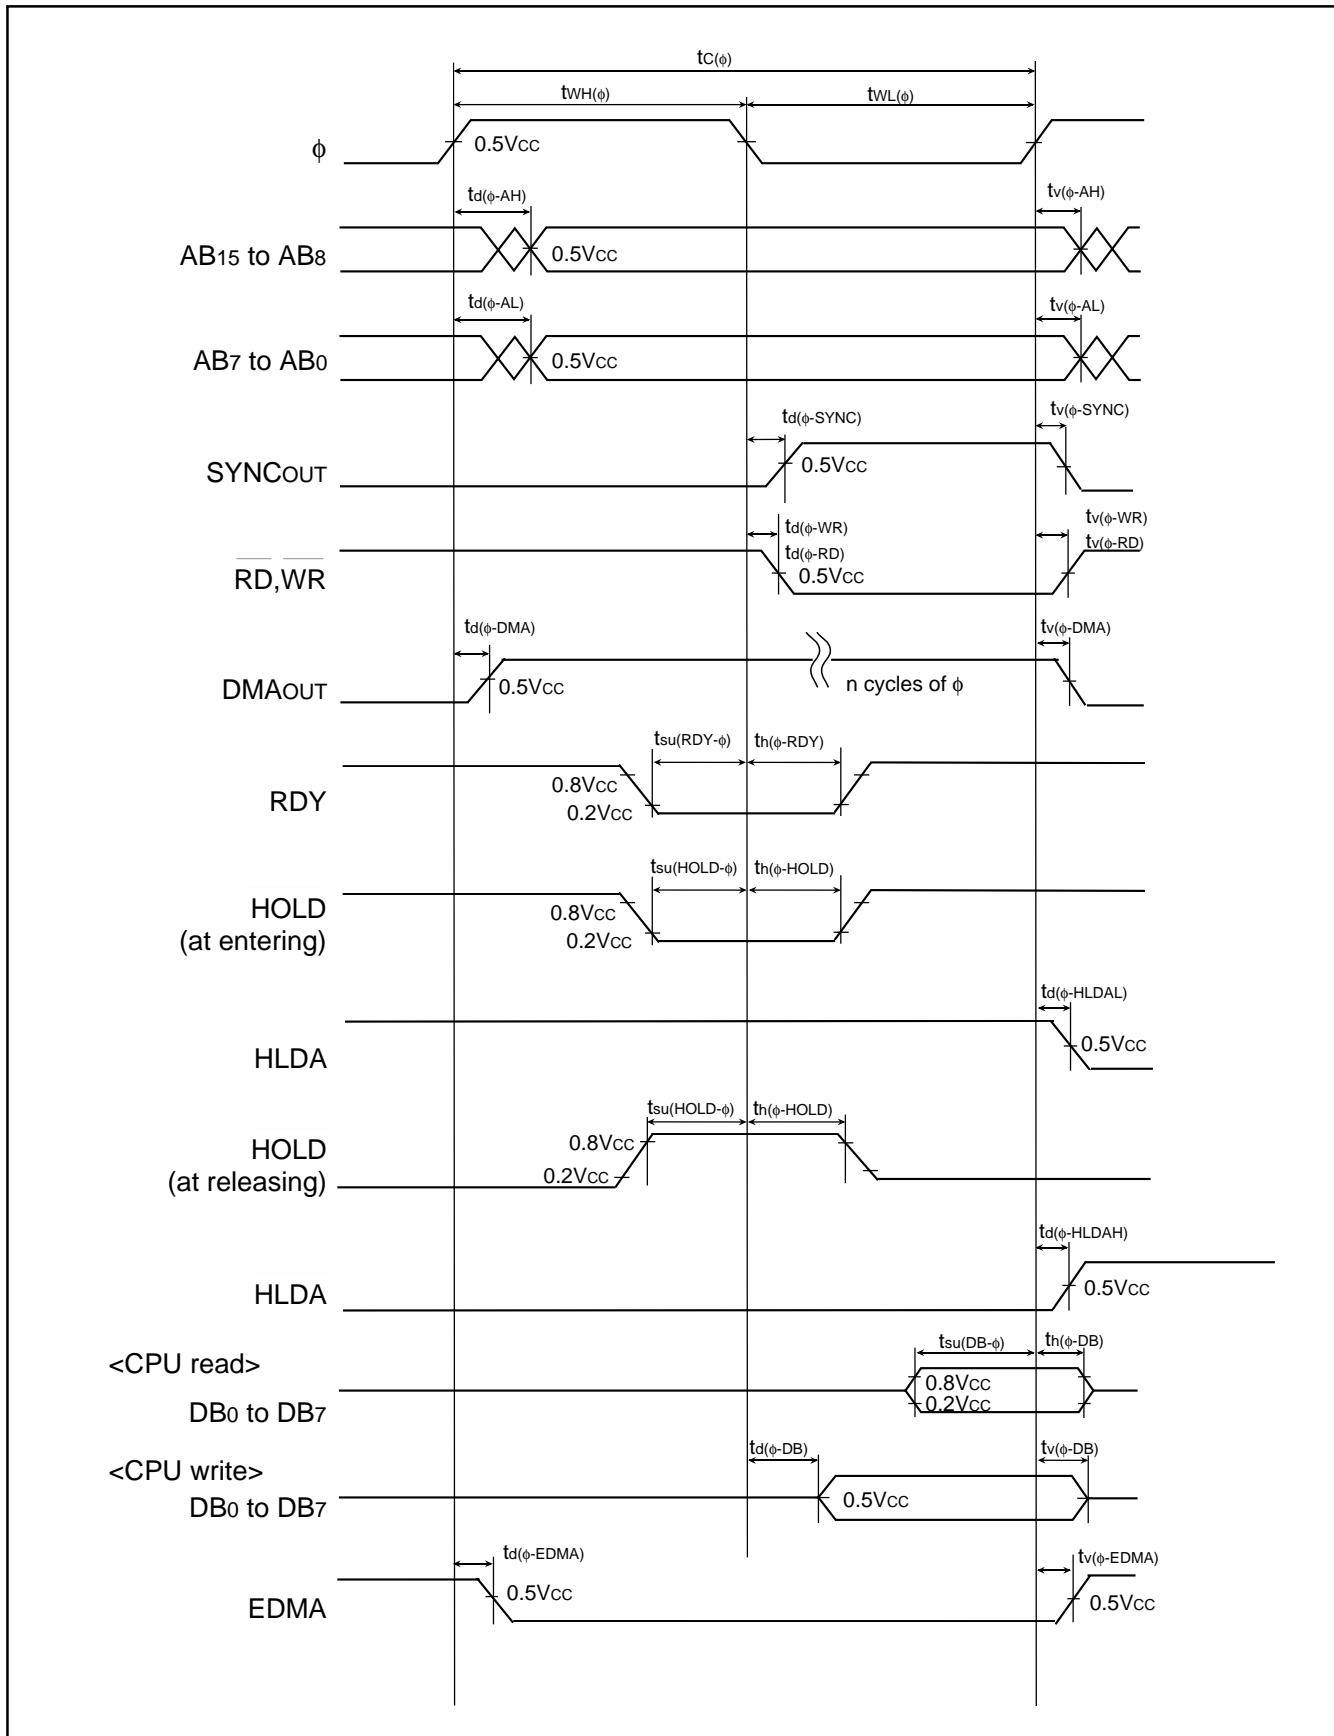


Fig. 76 Timing diagram (4); Memory expansion and microprocessor modes

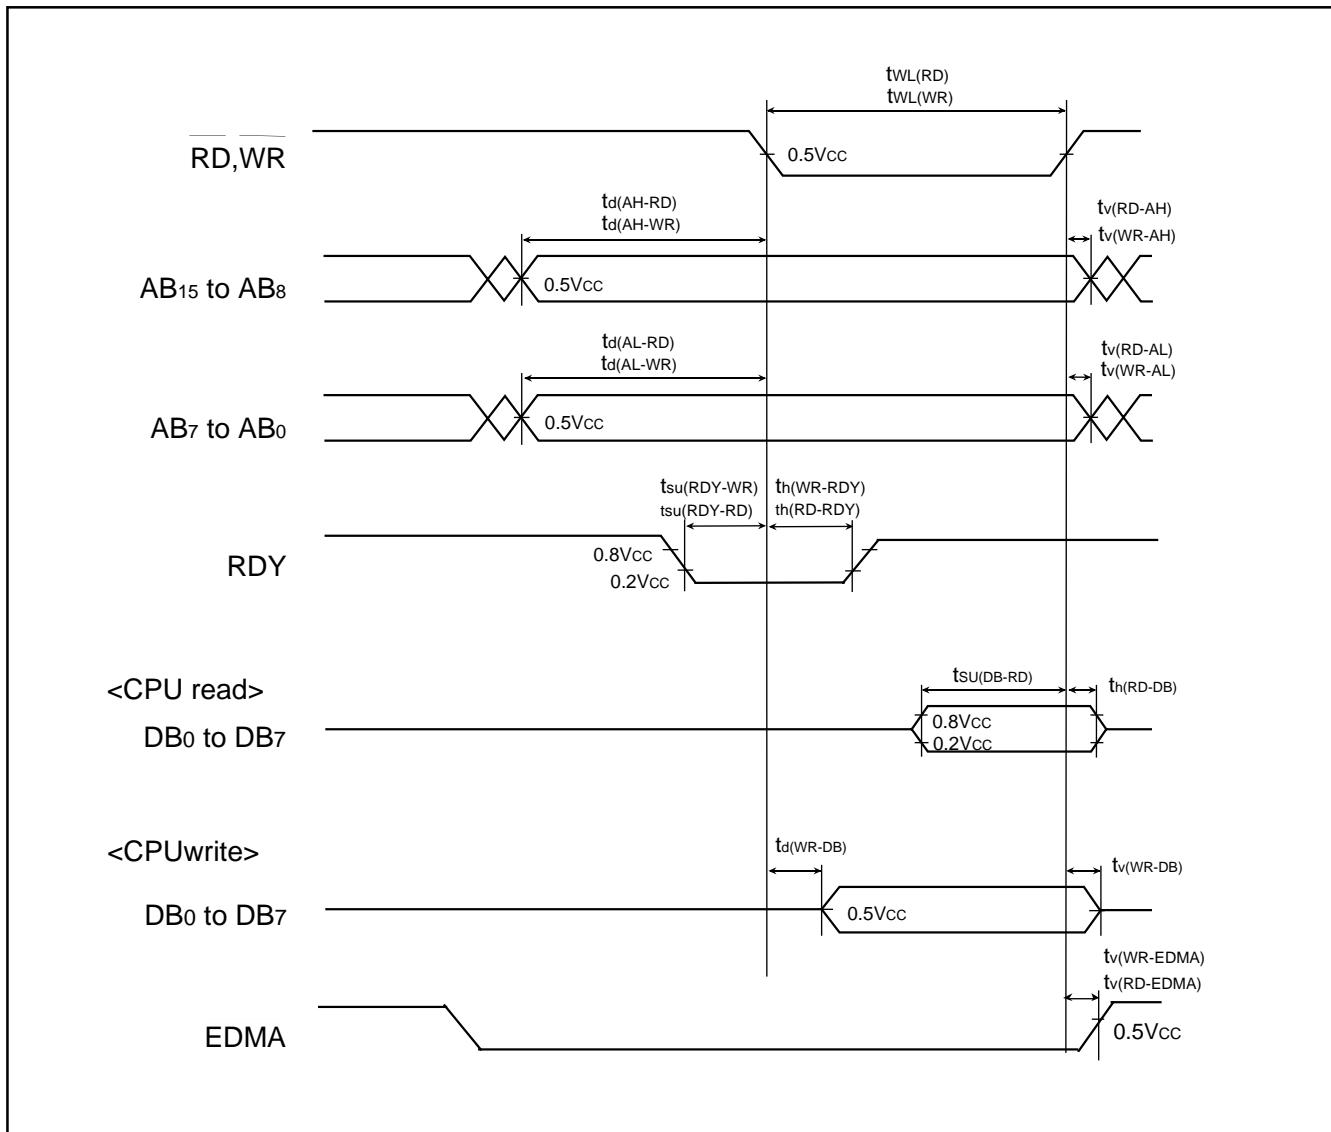


Fig. 77 Timing diagram (5); Memory expansion and microprocessor modes

FLASH MEMORY MODE

The M37643F8FP/HP (flash memory version) has an internal new DINOR (Divided bit line NOR) flash memory that can be rewritten with a single power source when Vcc is 5 V, and 2 power sources when VPP is 5 V and Vcc is 3.3 V in the CPU rewrite and standard serial I/O modes.

For this flash memory, three flash memory modes are available in which to read, program, and erase: the parallel I/O and standard serial I/O modes in which the flash memory can be manipulated using a programmer and the CPU rewrite mode in which the flash memory can be manipulated by the Central Processing Unit (CPU).

Summary

Table 20 lists the summary of the M37643F8 (flash memory version).

This flash memory version has some blocks on the flash memory as shown in Figure 78 and each block can be erased. The flash memory is divided into User ROM area and Boot ROM area.

In addition to the ordinary User ROM area to store the MCU operation control program, the flash memory has a Boot ROM area that is used to store a program to control rewriting in CPU rewrite and standard serial I/O modes. This Boot ROM area has had a standard serial I/O mode control program stored in it when shipped from the factory. However, the user can write a rewrite control program in this area that suits the user's application system. This Boot ROM area can be rewritten in only parallel I/O mode.

Table 20 Summary of M37643F8 (flash memory version)

Item		Specifications
Power source voltage (For Program/Erase)		Vcc = 3.00 – 3.60 V, 4.50 – 5.25 V (f(XIN) = 24 MHz, ϕ = 6 MHz) (Note 1)
VPP voltage (For Program/Erase)		VPP = 4.50 – 5.25 V
Flash memory mode		3 modes; Flash memory can be manipulated as follows: (1) CPU rewrite mode: Manipulated by the Central Processing Unit (CPU) (2) Parallel I/O mode: Manipulated using an external programmer (Note 2) (3) Standard serial I/O mode: Manipulated using an external programmer (Note 2)
Erase block division	User ROM area	See Figure 78.
	Boot ROM area	1 block (4 Kbytes) (Note 3)
Program method		Byte program
Erase method		Batch erasing/Block erasing
Program/Erase control method		Program/Erase control by software command
Number of commands		6 commands
Number of program/Erase times		100 times
ROM code protection		Available in parallel I/O mode and standard serial I/O mode

Notes 1: After programming/erasing at Vcc = 3.0 to 3.6 V, the MCU can operate only at Vcc = 3.0 to 3.6 V.

After programming/erasing at Vcc = 4.5 to 5.25 V or programming/erasing with the exclusive external equipment flash programmer, the MCU can operate at both Vcc = 3.0 to 3.6 V and 4.15 to 5.25 V.

2: In the parallel I/O mode or the standard serial I/O mode, use the exclusive external equipment flash programmer which supports the 7643 Group (flash memory version).

3: The Boot ROM area has had a standard serial I/O mode control program stored in it when shipped from the factory. This Boot ROM area can be rewritten in only parallel I/O mode.

(1) CPU Rewrite Mode

In CPU rewrite mode, the internal flash memory can be operated on (read, program, or erase) under control of the Central Processing Unit (CPU).

In CPU rewrite mode, only the User ROM area shown in Figure 78 can be rewritten; the Boot ROM area cannot be rewritten. Make sure the program and block erase commands are issued for only the User ROM area and each block area.

The control program for CPU rewrite mode can be stored in either User ROM or Boot ROM area. In the CPU rewrite mode, because the flash memory cannot be read from the CPU, the rewrite control program must be transferred to internal RAM area to be executed before it can be executed.

Microcomputer Mode and Boot Mode

The control program for CPU rewrite mode must be written into the User ROM or Boot ROM area in parallel I/O mode beforehand. (If the control program is written into the Boot ROM area, the standard serial I/O mode becomes unusable.)

See Figure 78 for details about the Boot ROM area.

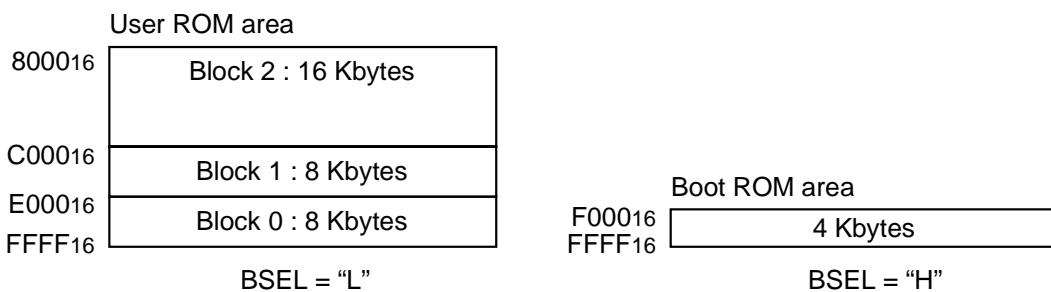
Normal microcomputer mode is entered when the microcomputer is reset with pulling CNVSS pin low. In this case, the CPU starts operating using the control program in the User ROM area.

When the microcomputer is reset by pulling the P36 (\overline{CE}) pin high, the P81 (SCLK) pin high, the CNVSS pin high, the CPU starts operating using the control program in the Boot ROM area. This mode is called the "Boot" mode.


Block Address

Block addresses refer to the maximum address of each block. These addresses are used in the block erase command.

Parallel I/O mode



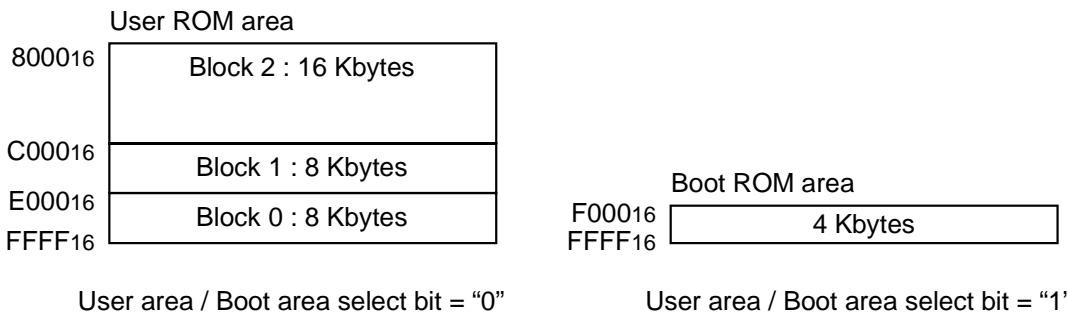CPU rewrite mode, standard serial I/O mode



Notes 1: The Boot ROM area can be rewritten in only parallel I/O mode. (Access to any other areas is inhibited.)

2: To specify a block, use the maximum address in the block.

Fig. 78 Block diagram of built-in flash memory

Outline Performance (CPU Rewrite Mode)

CPU rewrite mode is usable in the single-chip, memory expansion or Boot mode. The only User ROM area can be rewritten in CPU rewrite mode.

In CPU rewrite mode, the CPU erases, programs and reads the internal flash memory by executing software commands. This rewrite control program must be transferred to a memory such as the internal RAM before it can be executed.

The MCU enters CPU rewrite mode by applying 4.50 V to 5.25 V to the CNVss pin and setting "1" to the CPU Rewrite Mode Select Bit (bit 1 of address 006A16). Software commands are accepted once the mode is entered.

Use software commands to control program and erase operations. Whether a program or erase operation has terminated normally or in error can be verified by reading the status register.

Figure 79 shows the flash memory control register.

Bit 0 is the RY/BY status flag used exclusively to read the operating status of the flash memory. During programming and erase operations, it is "0" (busy). Otherwise, it is "1" (ready).

Bit 1 is the CPU Rewrite Mode Select Bit. When this bit is set to "1", the MCU enters CPU rewrite mode. Software commands are accepted once the mode is entered. In CPU rewrite mode, the


CPU becomes unable to access the internal flash memory directly. Therefore, use the control program in a memory other than internal flash memory for write to bit 1. To set this bit to "1", it is necessary to write "0" and then write "1" in succession. The bit can be set to "0" by only writing "0".

Bit 2 is the CPU Rewrite Mode Entry Flag. This flag indicates "1" in CPU rewrite mode, so that reading this flag can check whether CPU rewrite mode has been entered or not.

Bit 3 is the flash memory reset bit used to reset the control circuit of internal flash memory. This bit is used when exiting CPU rewrite mode and when flash memory access has failed. When the CPU Rewrite Mode Select Bit is "1", setting "1" for this bit resets the control circuit. To set this bit to "1", it is necessary to write "0" and then write "1" in succession. To release the reset, it is necessary to set this bit to "0".

Bit 4 is the User Area/Boot Area Select Bit. When this bit is set to "1", Boot ROM area is accessed, and CPU rewrite mode in Boot ROM area is available. In Boot mode, this bit is set to "1" automatically. Reprogramming of this bit must be in a memory other than internal flash memory.

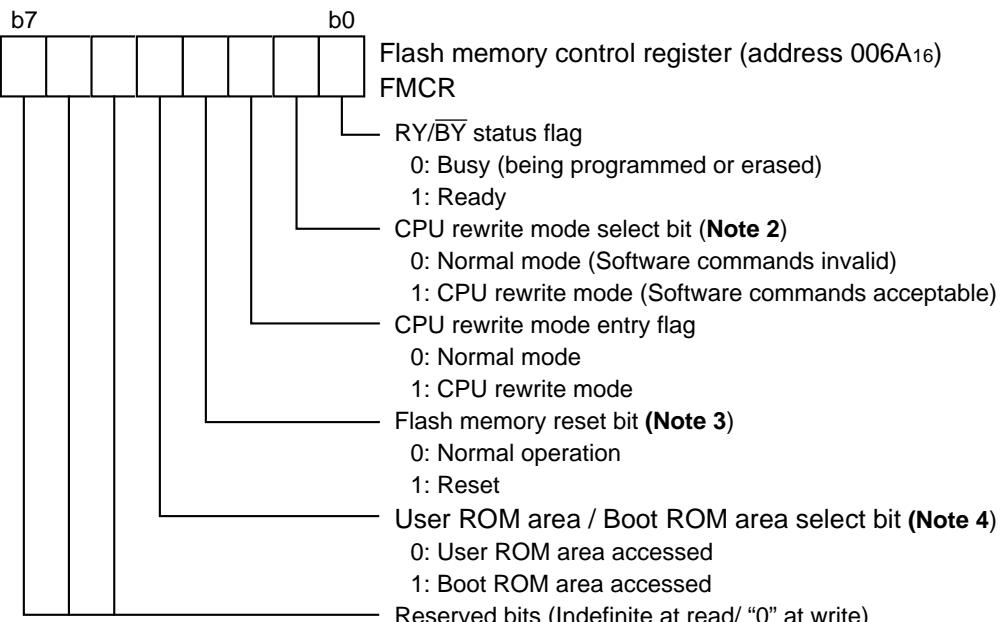Figure 80 shows a flowchart for setting/releasing CPU rewrite mode.



Notes 1: The contents of flash memory control register are "XXX00001" just after reset release.


2: For this bit to be set to "1", the user needs to write "0" and then "1" to it in succession. If it is not this procedure, this bit will not be set to "1". Additionally, it is required to ensure that no interrupt will be generated during that interval.

Use the control program in the area except the built-in flash memory for write to this bit.

3: This bit is valid when the CPU rewrite mode select bit is "1". Set this bit 3 to "0" subsequently after setting bit 3 to "1".

4: Use the control program in the area except the built-in flash memory for write to this bit.

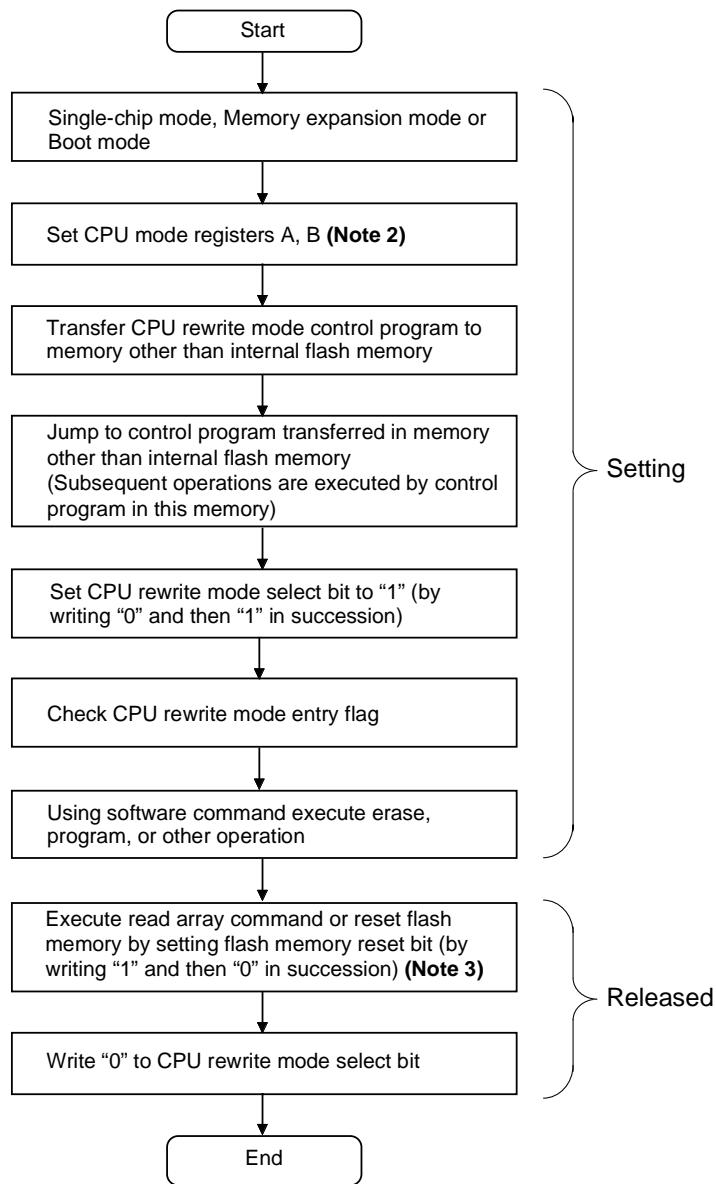Fig. 79 Structure of flash memory control register



Notes 1: When starting the MCU in the single-chip mode or memory expansion mode, supply 4.5 V to 5.25 V to the CNVss pin until checking the CPU rewrite mode entry flag.

2: Set the main clock as follows depending on the XIN divider select bit of clock control register (bit 7 of address 001F16):

- When XIN divider select bit = "0" ($\phi = f(XIN)/4$), the main clock is 24 MHz or less
- When XIN divider select bit = "1" ($\phi = f(XIN)/2$), the main clock is 12 MHz or less.

3: Before exiting the CPU rewrite mode after completing erase or program operation, always be sure to execute the read array command or reset the flash memory.

Fig. 80 CPU rewrite mode set/release flowchart

Notes on CPU Rewrite Mode

The below notes applies when rewriting the flash memory in CPU rewrite mode.

●Operation speed

During CPU rewrite mode, set the internal clock ϕ to 6 MHz or less using the XIN Divider Select Bit (bit 7 of address 001F16).

●Instructions inhibited against use

The instructions which refer to the internal data of the flash memory cannot be used during CPU rewrite mode .

●Interrupts inhibited against use

The interrupts cannot be used during CPU rewrite mode because they refer to the internal data of the flash memory.

●Reset

Reset is always valid. When CNVss is “H” at reset release, the program starts from the address stored in addresses FFFA16 and FFFB16 of the boot ROM area in order that CPU may start in boot mode.

Software Commands (CPU Rewrite Mode)

Table 21 lists the software commands.

After setting the CPU Rewrite Mode Select Bit of the flash memory control register to "1", execute a software command to specify an erase or program operation.

Each software command is explained below.

●Read Array Command (FF16)

The read array mode is entered by writing the command code "FF16" in the first bus cycle. When an address to be read is input in one of the bus cycles that follow, the contents of the specified address are read out at the data bus (DB0 to DB7).

The read array mode is retained intact until another command is written.

●Read Status Register Command (7016)

The read status register mode is entered by writing the command code "7016" in the first bus cycle. The contents of the status register are read out at the data bus (DB0 to DB7) by a read in the second bus cycle.

The status register is explained in the next section.

●Clear Status Register Command (5016)

This command is used to clear the bits SR4 and SR5 of the status register after they have been set. These bits indicate that operation has ended in an error. To use this command, write the command code "5016" in the first bus cycle.

●Program Command (4016)

Program operation starts when the command code "4016" is written in the first bus cycle. Then, if the address and data to program are written in the 2nd bus cycle, program operation (data programming and verification) will start.

Whether the write operation is completed can be confirmed by reading the status register or the RY/BY Status Flag of the flash memory control register. When the program starts, the read status

register mode is entered automatically and the contents of the status register is read at the data bus (DB0 to DB7). The status register bit 7 (SR7) is set to "0" at the same time the write operation starts and is returned to "1" upon completion of the write operation. In this case, the read status register mode remains active until the next command is written.

The RY/BY Status Flag is "0" (busy) during write operation and "1" (ready) when the write operation is completed as is the status register bit 7.

At program end, program results can be checked by reading bit 4 (SR4) of the status register.

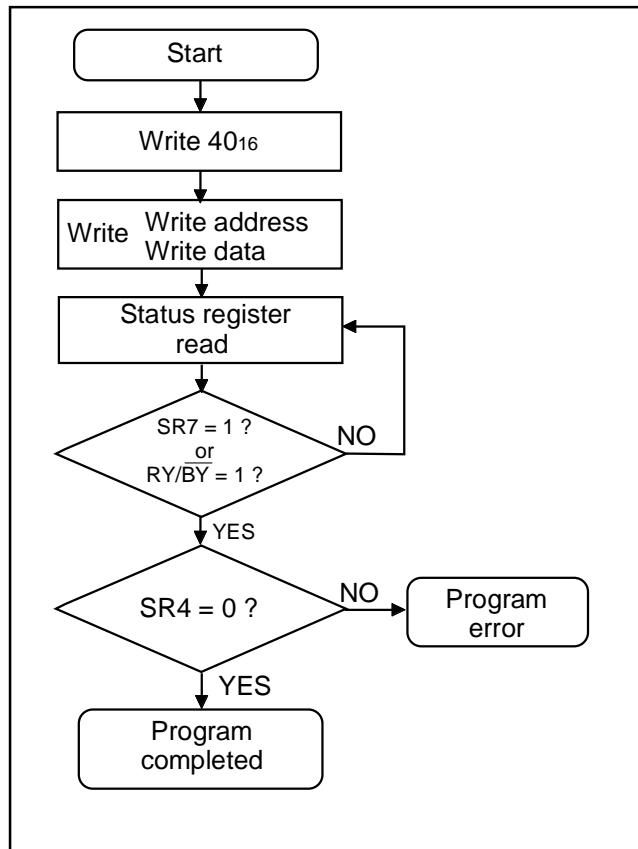


Fig. 81 Program flowchart

Table 21 List of software commands (CPU rewrite mode)

Command	Cycle number	First bus cycle			Second bus cycle		
		Mode	Address	Data (DB0 to DB7)	Mode	Address	Data (DB0 to DB7)
Read array	1	Write	X (Note 4)	FF16			
Read status register	2	Write	X	7016	Read	X	SRD (Note 1)
Clear status register	1	Write	X	5016			
Program	2	Write	X	4016	Write	WA (Note 2)	WD (Note 2)
Erase all blocks	2	Write	X	2016	Write	X	2016
Block erase	2	Write	X	2016	Write	BA (Note 3)	D016

Notes 1: SRD = Status Register Data

2: WA = Write Address, WD = Write Data

3: BA = Block Address to be erased (Input the maximum address of each block.)

4: X denotes a given address in the User ROM area .

●Erase All Blocks Command (2016/2016)

By writing the command code “2016” in the first bus cycle and the confirmation command code “2016” in the second bus cycle that follows, the operation of erase all blocks (erase and erase verify) starts.

Whether the erase all blocks command is terminated can be confirmed by reading the status register or the RY/BY Status Flag of flash memory control register. When the erase all blocks operation starts, the read status register mode is entered automatically and the contents of the status register can be read out at the data bus (DB0 to DB7). The status register bit 7 (SR7) is set to “0” at the same time the erase operation starts and is returned to “1” upon completion of the erase operation. In this case, the read status register mode remains active until another command is written.

The RY/BY Status Flag is “0” during erase operation and “1” when the erase operation is completed as is the status register bit 7 (SR7).

After the erase all blocks end, erase results can be checked by reading bit 5 (SRS) of the status register. For details, refer to the section where the status register is detailed.

●Block Erase Command (2016/D016)

By writing the command code “2016” in the first bus cycle and the confirmation command code “D016” and the block address in the second bus cycle that follows, the block erase (erase and erase verify) operation starts for the block address of the flash memory to be specified.

Whether the block erase operation is completed can be confirmed by reading the status register or the RY/BY Status Flag of flash memory control register. At the same time the block erase operation starts, the read status register mode is automatically entered, so that the contents of the status register can be read out. The status register bit 7 (SR7) is set to “0” at the same time the block erase operation starts and is returned to “1” upon completion of the block erase operation. In this case, the read status register mode remains active until the read array command (FF16) is written.

The RY/BY Status Flag is “0” during block erase operation and “1” when the block erase operation is completed as is the status register bit 7.

After the block erase ends, erase results can be checked by reading bit 5 (SRS) of the status register. For details, refer to the section where the status register is detailed.

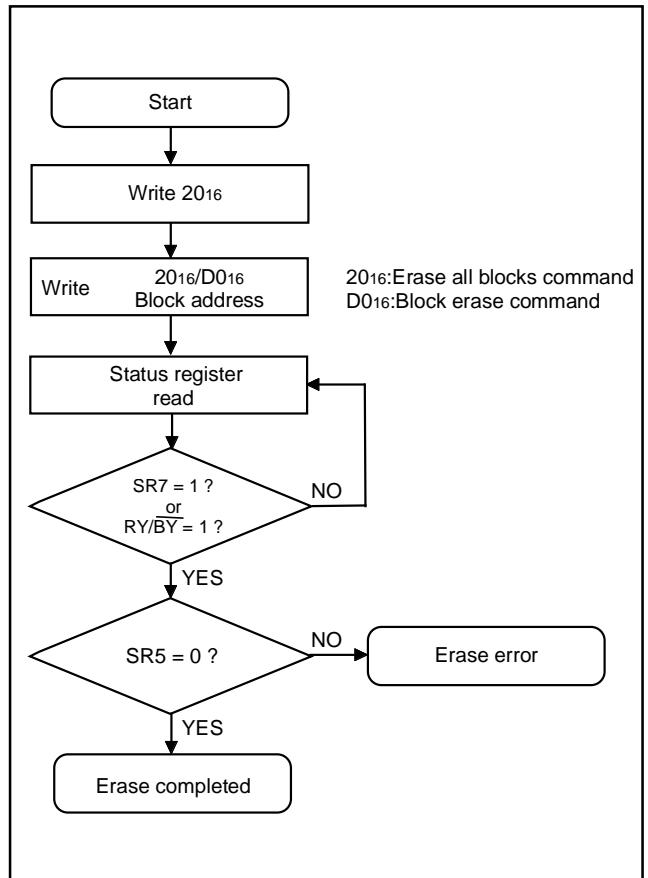


Fig. 82 Erase flowchart

Status Register (SRD)

The status register shows the operating status of the flash memory and whether erase operations and programs ended successfully or in error. It can be read in the following ways:

- (1) By reading an arbitrary address from the User ROM area after writing the read status register command (7016)
- (2) By reading an arbitrary address from the User ROM area in the period from when the program starts or erase operation starts to when the read array command (FF16) is input.

Also, the status register can be cleared by writing the clear status register command (5016).

After reset, the status register is set to "8016".

Table 22 shows the status register. Each bit in this register is explained below.

•Sequencer status (SR7)

The sequencer status indicates the operating status of the flash memory. This bit is set to "0" (busy) during write or erase operation and is set to "1" when these operations ends.

After power-on, the sequencer status is set to "1" (ready).

•Erase status (SR5)

The erase status indicates the operating status of erase operation. If an erase error occurs, it is set to "1". When the erase status is cleared, it is set to "0".

•Program status (SR4)

The program status indicates the operating status of write operation. When a write error occurs, it is set to "1".

The program status is set to "0" when it is cleared.

If "1" is written for any of the SR5 and SR4 bits, the program, erase all blocks, and block erase commands are not accepted. Before executing these commands, execute the clear status register command (5016) and clear the status register.

Also, if any commands are not correct, both SR5 and SR4 are set to "1".

Table 22 Definition of each bit in status register (SRD)

Symbol	Status name	Definition	
		"1"	"0"
SR7 (bit7)	Sequencer status	Ready	Busy
SR6 (bit6)	Reserved	-	-
SR5 (bit5)	Erase status	Terminated in error	Terminated normally
SR4 (bit4)	Program status	Terminated in error	Terminated normally
SR3 (bit3)	Reserved	-	-
SR2 (bit2)	Reserved	-	-
SR1 (bit1)	Reserved	-	-
SR0 (bit0)	Reserved	-	-

Full Status Check

By performing full status check, it is possible to know the execution results of erase and program operations. Figure 83 shows a

full status check flowchart and the action to be taken when each error occurs.

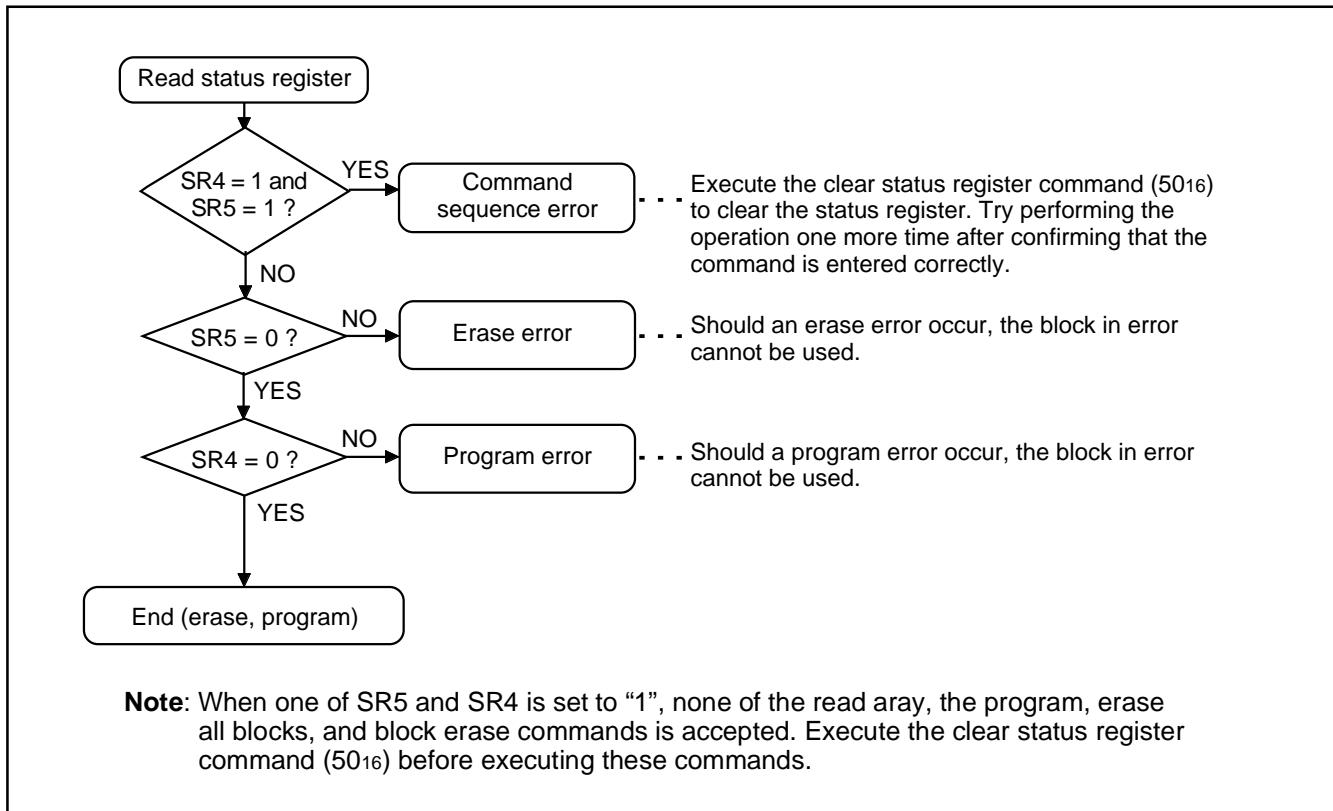


Fig. 83 Full status check flowchart and remedial procedure for errors

Functions To Inhibit Rewriting Flash Memory Version

To prevent the contents of internal flash memory from being read out or rewritten easily, this MCU incorporates a ROM code protect function for use in parallel I/O mode and an ID code check function for use in standard serial I/O mode.

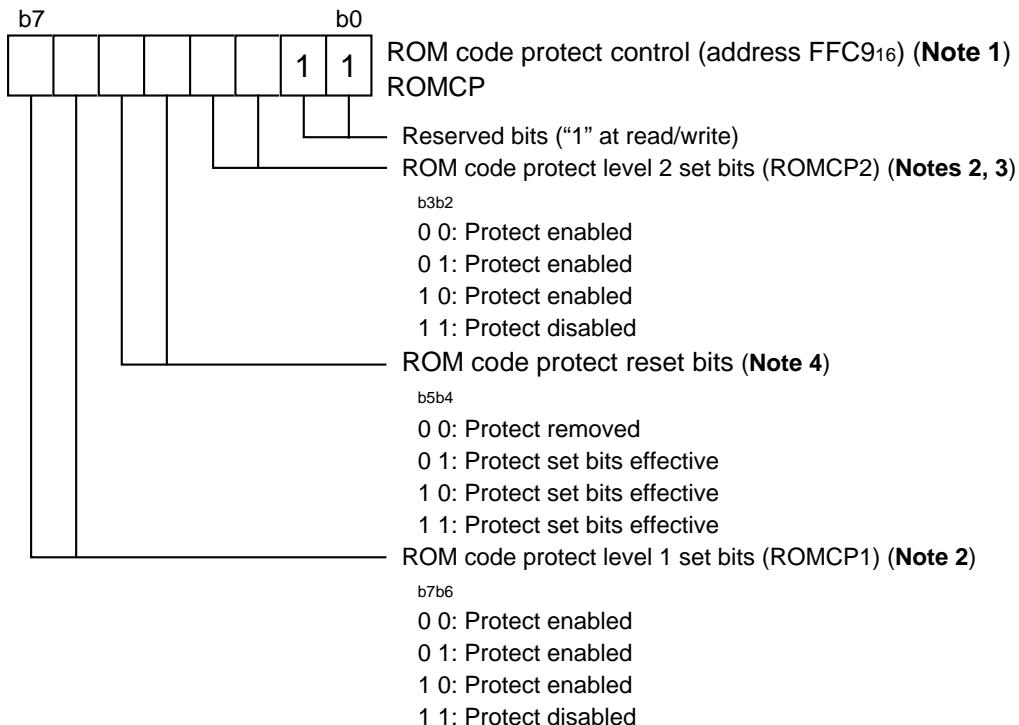
●ROM Code Protect Function (in Parallel I/O Mode)

The ROM code protect function is the function to inhibit reading out or modifying the contents of internal flash memory by using the ROM code protect control (address FFC916) in parallel I/O mode. Figure 84 shows the ROM code protect control (address FFC916). (This address exists in the User ROM area.)

If one or both of the pair of ROM Code Protect Bits is set to "0",

the ROM code protect is turned on, so that the contents of internal flash memory are protected against readout and modification. The ROM code protect is implemented in two levels. If level 2 is selected, the flash memory is protected even against readout by a shipment inspection LSI tester, etc. When an attempt is made to select both level 1 and level 2, level 2 is selected by default.

If both of the two ROM Code Protect Reset Bits are set to "00", the ROM code protect is turned off, so that the contents of internal flash memory can be read out or modified. Once the ROM code protect is turned on, the contents of the ROM Code Protect Reset Bits cannot be modified in parallel I/O mode. Use the serial I/O or CPU rewrite mode to rewrite the contents of the ROM Code Protect Reset Bits.



Notes 1: This area is on the ROM in the mask ROM version.

- 2:** When ROM code protect is turned on, the internal flash memory is protected against readout or modification in parallel I/O mode.
- 3:** When ROM code protect level 2 is turned on, ROM code readout by a shipment inspection LSI tester, etc. also is inhibited.
- 4:** The ROM code protect reset bits can be used to turn off ROM code protect level 1 and ROM code protect level 2. However, since these bits cannot be modified in parallel I/O mode, they need to be rewritten in standard serial I/O mode or CPU rewrite mode.

Fig. 84 Structure of ROM code protect control

ID Code Check Function (in Standard serial I/O mode)

Use this function in standard serial I/O mode. When the contents of the flash memory are not blank, the ID code sent from the programmer is compared with the ID code written in the flash memory to see if they match. If the ID codes do not match, the commands sent from the programmer are not accepted. The ID code consists of 8-bit data, and its areas are FFC216 to FFC816. Write a program which has had the ID code preset at these addresses to the flash memory.

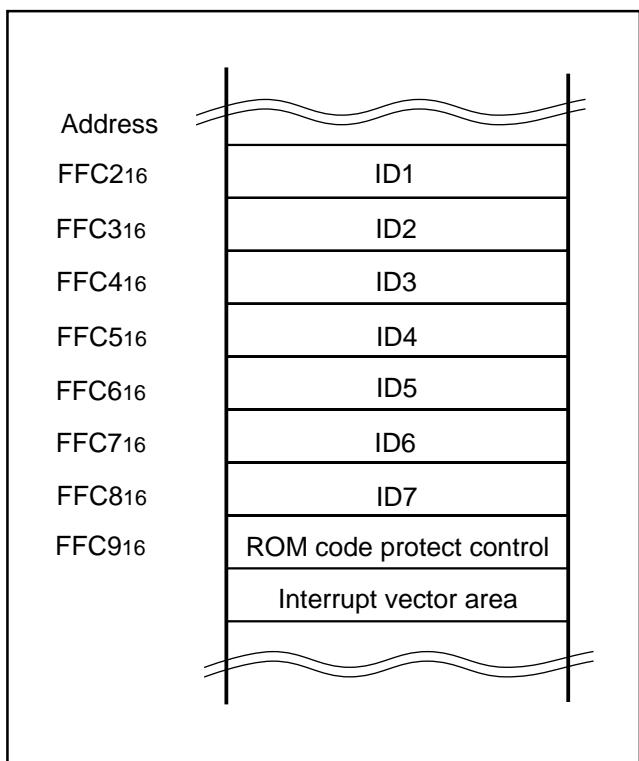


Fig. 85 ID code store addresses

(2) Parallel I/O Mode

Parallel I/O mode is the mode which parallel output and input software command, address, and data required for the operations (read, program, erase, etc.) to a built-in flash memory. Use the exclusive external equipment flash programmer which supports the 7643 Group (flash memory version). Refer to each programmer maker's handling manual for the details of the usage.

User ROM and Boot ROM Areas

In parallel I/O mode, the user ROM and boot ROM areas shown in Figure 88 can be rewritten. Both areas of flash memory can be operated on in the same way.

Program and block erase operations can be performed in the user ROM area. The user ROM area and its block is shown in Figure 78.

The boot ROM area is 4 Kbytes in size. It is located at addresses F00016 through FFFF16. Make sure program and block erase operations are always performed within this address range. (Access to any location outside this address range is prohibited.)

In the Boot ROM area, an erase block operation is applied to only one 4 Kbyte block. The boot ROM area has had a standard serial I/O mode control program stored in it when shipped from the Renesas factory. Therefore, using the device in standard serial I/O mode, you do not need to write to the boot ROM area.

(3) Standard serial I/O Mode

The standard serial I/O mode inputs and outputs the software commands, addresses and data needed to operate (read, program, erase, etc.) the internal flash memory. This I/O is clock synchronized serial. This mode requires the exclusive external equipment (flash programmer).

The standard serial I/O mode is different from the parallel I/O mode in that the CPU controls flash memory rewrite (uses the CPU rewrite mode), rewrite data input and so forth. The standard serial I/O mode is started by connecting "H" to the P36 (\bar{CE}) pin and "H" to the P81 (SCLK) pin and "H" to the CNVss pin (apply 4.5 V to 5.25 V to Vpp from an external source), and releasing the reset operation. (In the ordinary microcomputer mode, set CNVss pin to "L" level.)

This control program is written in the Boot ROM area when the product is shipped from Renesas. Accordingly, make note of the fact that the standard serial I/O mode cannot be used if the Boot ROM area is rewritten in parallel I/O mode. Figures 86 and 87 show the pin connections for the standard serial I/O mode.

In standard serial I/O mode, serial data I/O uses the four serial I/O pins SCLK, SRXD, STXD and SRDY (BUSY). The SCLK pin is the transfer clock input pin through which an external transfer clock is input. The STXD pin is for CMOS output. The SRDY (BUSY) pin outputs "L" level when ready for reception and "H" level when reception starts.

Serial data I/O is transferred serially in 8-bit units.

In standard serial I/O mode, only the User ROM area shown in Figure 88 can be rewritten. The Boot ROM area cannot.

In standard serial I/O mode, a 7-byte ID code is used. When there is data in the flash memory, commands sent from the peripheral unit (programmer) are not accepted unless the ID code matches.

Outline Performance (Standard Serial I/O Mode)

In standard serial I/O mode, software commands, addresses and data are input and output between the MCU and peripheral units (flash programmer, etc.) using 4-wire clock-synchronized serial I/O. In reception, software commands, addresses and program data are synchronized with the rise of the transfer clock that is input to the SCLK pin, and are then input to the MCU via the SRXD pin. In transmission, the read data and status are synchronized with the fall of the transfer clock, and output from the STXD pin.

The STXD pin is for CMOS output. Transfer is in 8-bit units with LSB first.

When busy, such as during transmission, reception, erasing or program execution, the SRDY (BUSY) pin is "H" level. Accordingly, always start the next transfer after the SRDY (BUSY) pin is "L" level.

Also, data and status registers in a memory can be read after inputting software commands. Status, such as the operating state of the flash memory or whether a program or erase operation ended successfully or not, can be checked by reading the status register. Here following explains software commands, status registers, etc.

Table 23 Description of pin function (Standard Serial I/O Mode)

Pin name	Signal name	I/O	Function
Vcc,Vss	Power supply input		Apply 4.50 V – 5.25 V for 5 V version or 3.00 V – 3.60 V for 3 V version to the Vcc pin. Apply 0 V to the Vss pin.
CNVss	CNVss	I	This controls the MCU operating mode. Connect this pin to VPP (= 4.50 V – 5.25 V
RESET	Reset input	I	To reset, input "L" level for 20 cycles or longer clocks of ϕ .
XIN	Clock input		Connect a ceramic or crystal resonator between the XIN and XOUT pins.
XOUT	Clock output		When inputting an externally derived clock, input it from XIN and leave XOUT open.
AVcc, AVss	Analog power supply input		Apply 4.50 V – 5.25 V for 5 V version or 3.00 V – 3.60 V for 3 V version to the AVcc pin. Apply 0 V to the AVss pin.
LPF	LPF	O	Loop filter for the frequency synthesizer. When this pin is not used, leave this open.
Ext.Cap	3.3 V line power supply input	I	Power supply input pin for 3.3 V USB line driver. When this pin is not used, input "H" level.
USB D+	USB D+	I/O	USB D+ signal port. When this pin is not used, input "H" level.
USB D-	USB D-	I/O	USB D- signal port. When this pin is not used, input "L" level.
P00 to P07	I/O port P0	I/O	When these ports are not used, input "L" or "H" level, or leave them open in output mode.
P10 to P17	I/O port P1	I/O	
P20 to P27	I/O port P2	I/O	
P30 to P35, P37	I/O port P3	I/O	
P36	\overline{CE} input	I	Input "H" level.
P40 to P44	I/O port P4	I/O	When these ports are not used, input "L" or "H" level, or leave them open in output mode.
P50 to P57	I/O port P5	I/O	
P60 to P67	I/O port P6	I/O	
P70 to P74	I/O port P7	I/O	
P80	BUSY output	O	This is a BUSY output pin.
P81	SCLK input	I	This is a serial clock input pin.
P82	SRXD input	I	This is a serial data input pin.
P83	STXDoutput	O	This is a serial data output pin.
P84 to P87	I/O port P8	I/O	When these ports are not used, input "L" or "H" level, or leave them open in output mode.

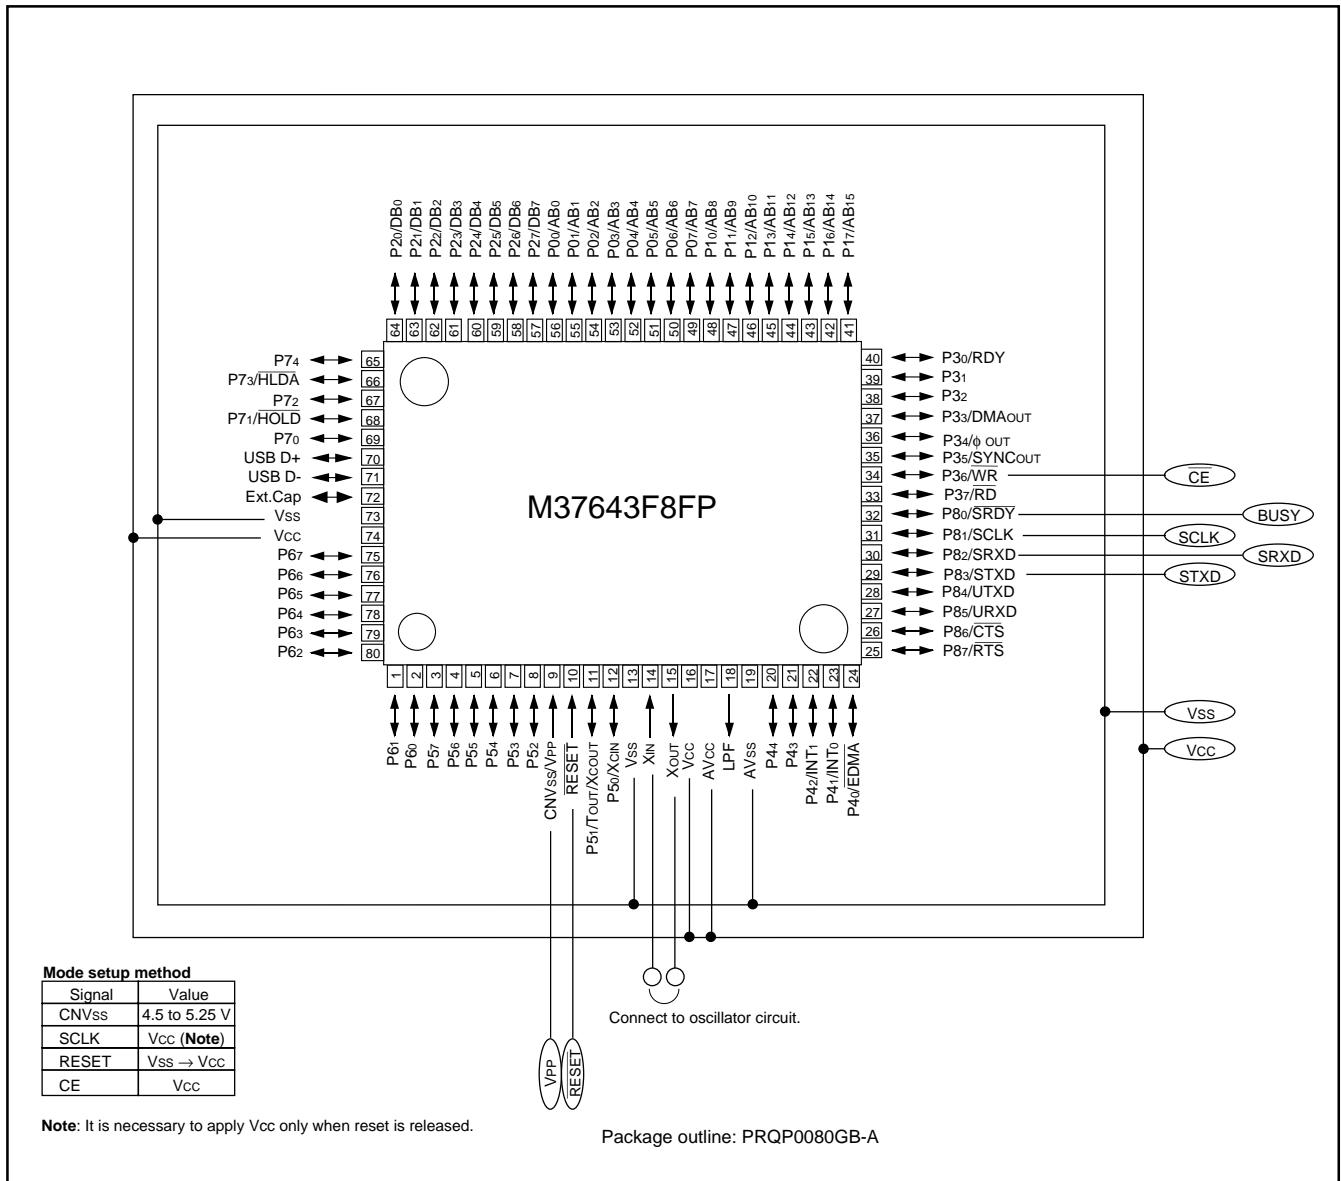


Fig. 86 Pin connection diagram in standard serial I/O mode (1)

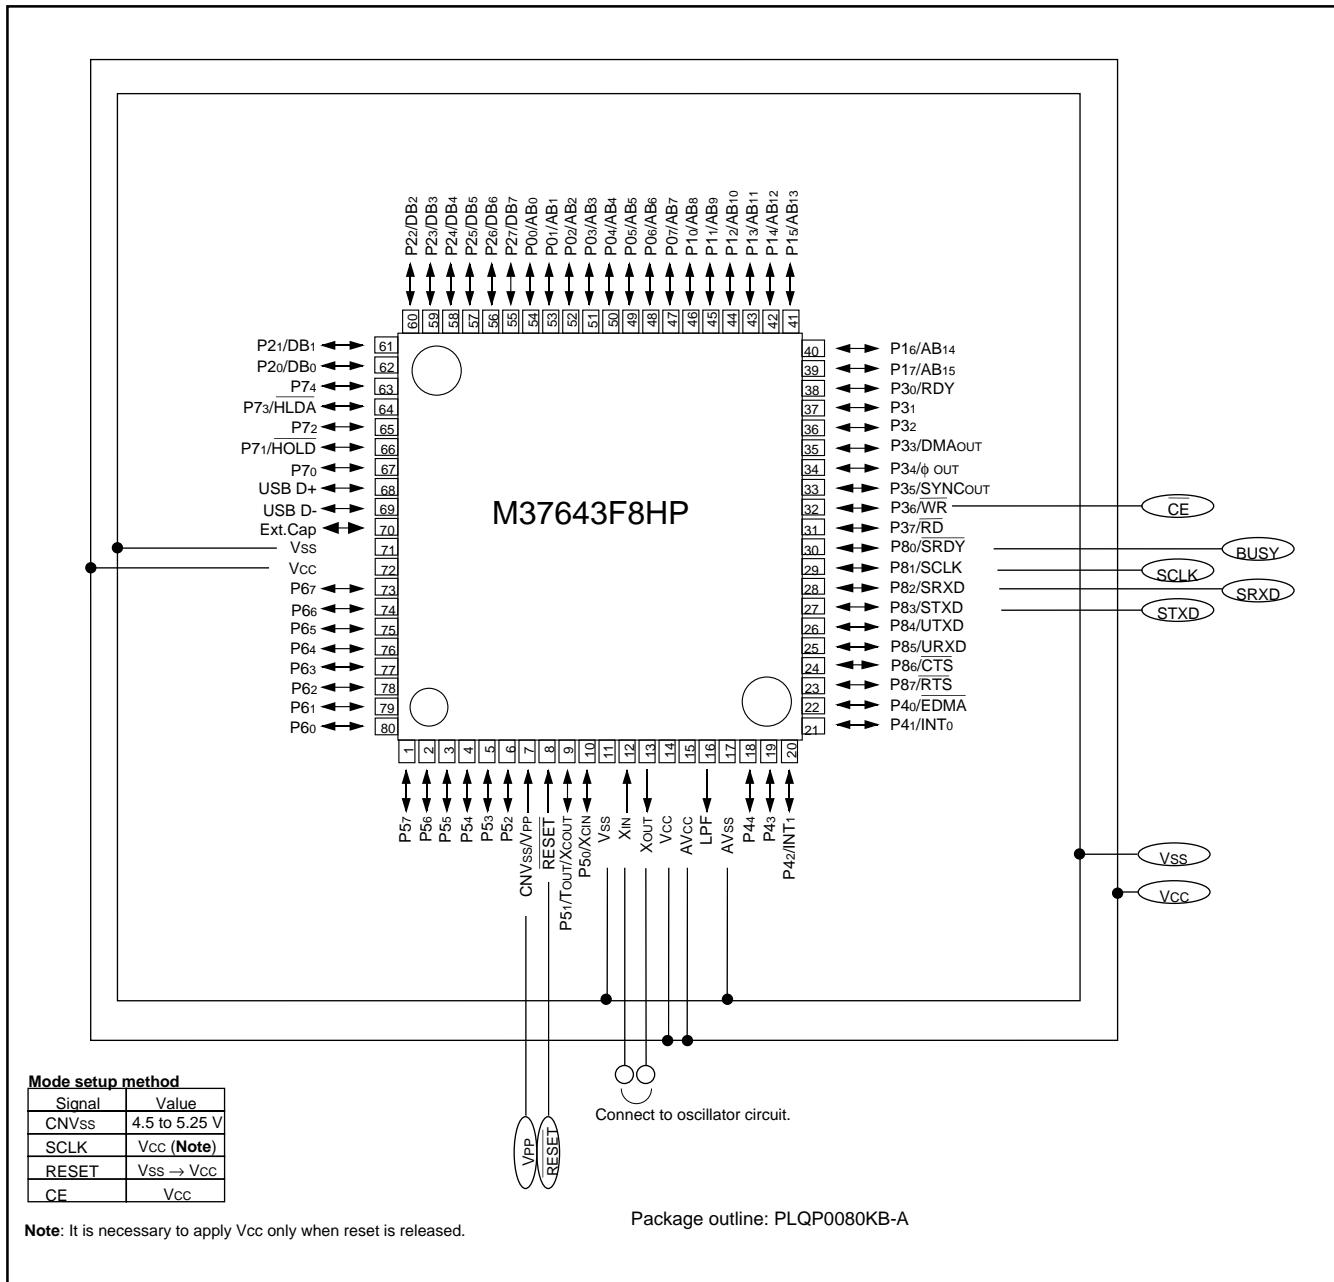


Fig. 87 Pin connection diagram in standard serial I/O mode (2)

Software Commands (Standard Serial I/O Mode)

Table 24 lists software commands. In standard serial I/O mode, erase, program and read are controlled by transferring software

commands via the SRXD pin. Software commands are explained here below.

Table 24 Software commands (Standard serial I/O mode)

Control command	1st byte transfer	2nd byte	3rd byte	4th byte	5th byte	6th byte	When ID is not verified
1 Page read	FF16	Address (middle)	Address (high)	Data output	Data output	Data output	Data output to 259th byte	Not acceptable
2 Page program	4116	Address (middle)	Address (high)	Data input	Data input	Data input	Data input to 259th byte	Not acceptable
3 Block erase	2016	Address (middle)	Address (high)	D016				Not acceptable
4 Erase all blocks	A716	D016						Not acceptable
5 Read status register	7016	SRD output	SRD1 output					Acceptable
6 Clear status register	5016							Not acceptable
7 ID code check	F516	Address (low)	Address (middle)	Address (high)	ID size	ID1	To ID7	Acceptable
8 Download function	FA16	Size (low)	Size (high)	Check-sum	Data input	To required number of times		Not acceptable
9 Version data output function	FB16	Version data output	Version data output to 9th byte	Acceptable				
10 Boot ROM area output function	FC16	Address (middle)	Address (high)	Data output	Data output	Data output	Data output to 259th byte	Not acceptable

Notes1: Shading indicates transfer from the internal flash memory microcomputer to a programmer. All other data is transferred from an external equipment (programmer) to the internal flash memory microcomputer.

2: SRD refers to status register data. SRD1 refers to status register 1 data.

3: All commands can be accepted for the products of which boot ROM area is totally blank.

4: Address low is AB0 to AB7; Address middle is AB8 to AB15; Address high is AB16 to AB23.

●Page Read Command

This command reads the specified page (256 bytes) in the flash memory sequentially one byte at a time. Execute the page read command as explained here following.

- (1) Transfer the “FF16” command code with the 1st byte.
- (2) Transfer addresses AB8 to AB15 and AB16 to AB23 with the 2nd and 3rd bytes respectively.
- (3) From the 4th byte onward, data (DB0 to DB7) for the page (256 bytes) specified with addresses AB8 to AB23 will be output sequentially from the smallest address first synchronized with the fall of the clock.

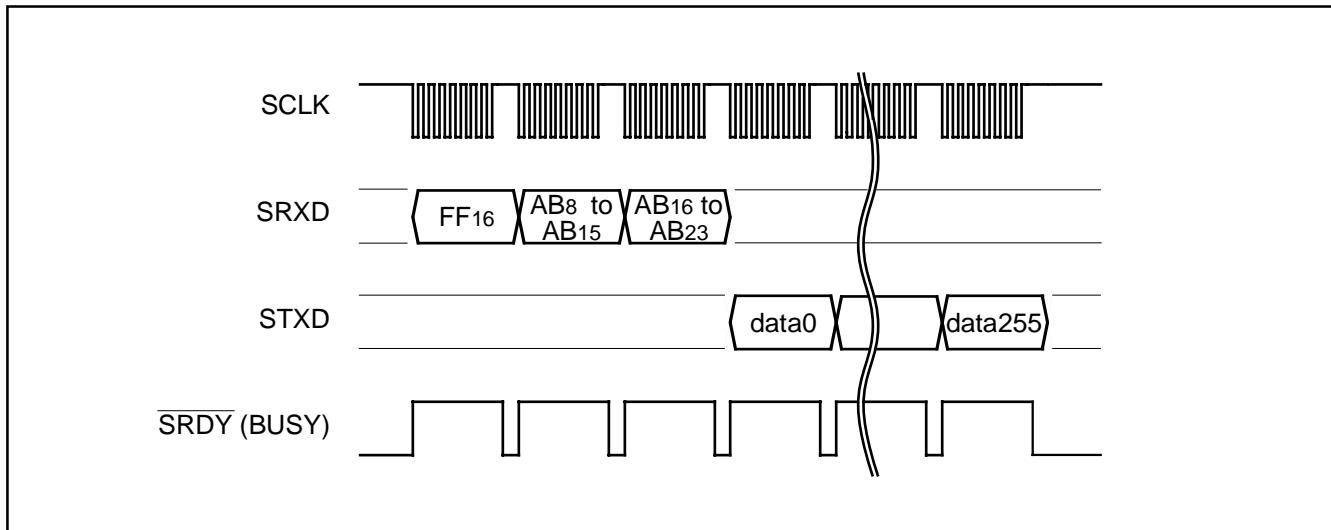


Fig. 88 Timing for page read

●Read Status Register Command

This command reads status information. When the “7016” command code is transferred with the 1st byte, the contents of the status register (SRD) with the 2nd byte and the contents of status register 1 (SRD1) with the 3rd byte are read.

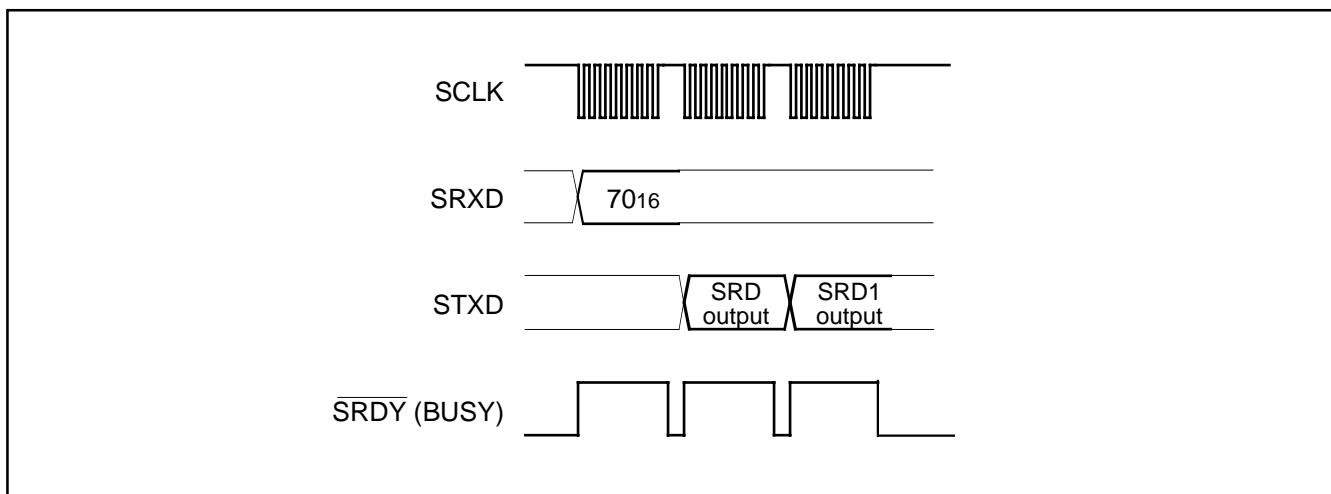


Fig. 89 Timing for reading status register

●Clear Status Register Command

This command clears the bits (SR3 to SR5) which are set when the status register operation ends in error. When the "5016" command code is sent with the 1st byte, the aforementioned bits are cleared. When the clear status register operation ends, the SRDY (BUSY) signal changes from "H" to "L" level.

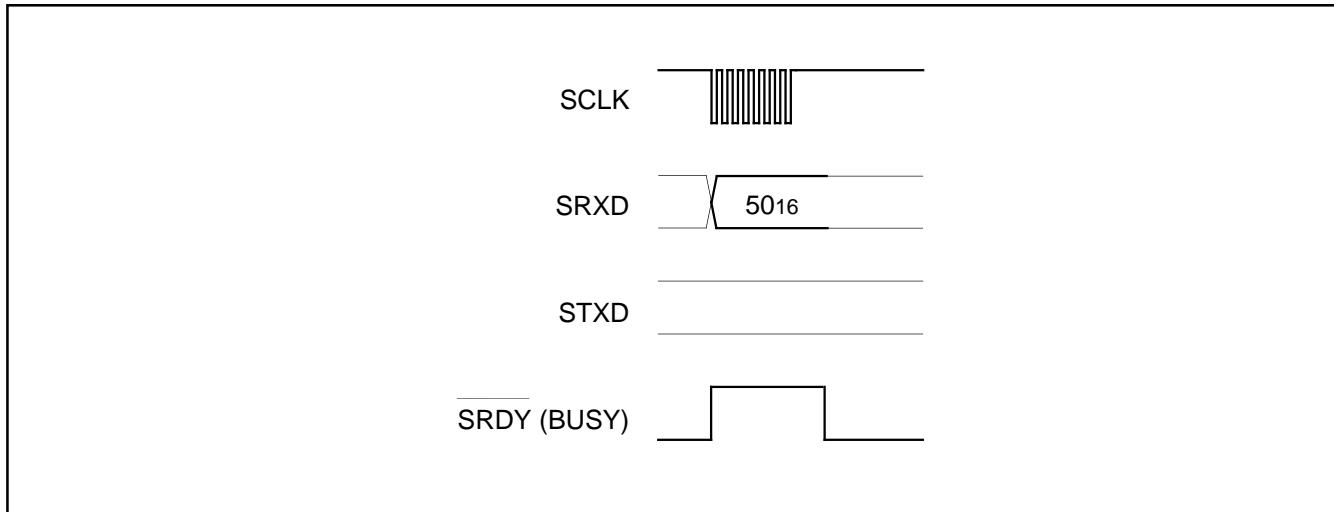


Fig. 90 Timing for clear status register

●Page Program Command

This command writes the specified page (256 bytes) in the flash memory sequentially one byte at a time. Execute the page program command as explained here following.

- (1) Transfer the "4116" command code with the 1st byte.
- (2) Transfer addresses AB8 to AB15 and AB16 to AB23 with the 2nd and 3rd bytes respectively.

- (3) From the 4th byte onward, as write data (DB0 to DB7) for the page (256 bytes) specified with addresses A8 to A23 is input sequentially from the smallest address first, that page is automatically written.

When reception setup for the next 256 bytes ends, the SRDY (BUSY) signal changes from "H" to "L" level. The result of the page program can be known by reading the status register. For more information, see the section on the status register.

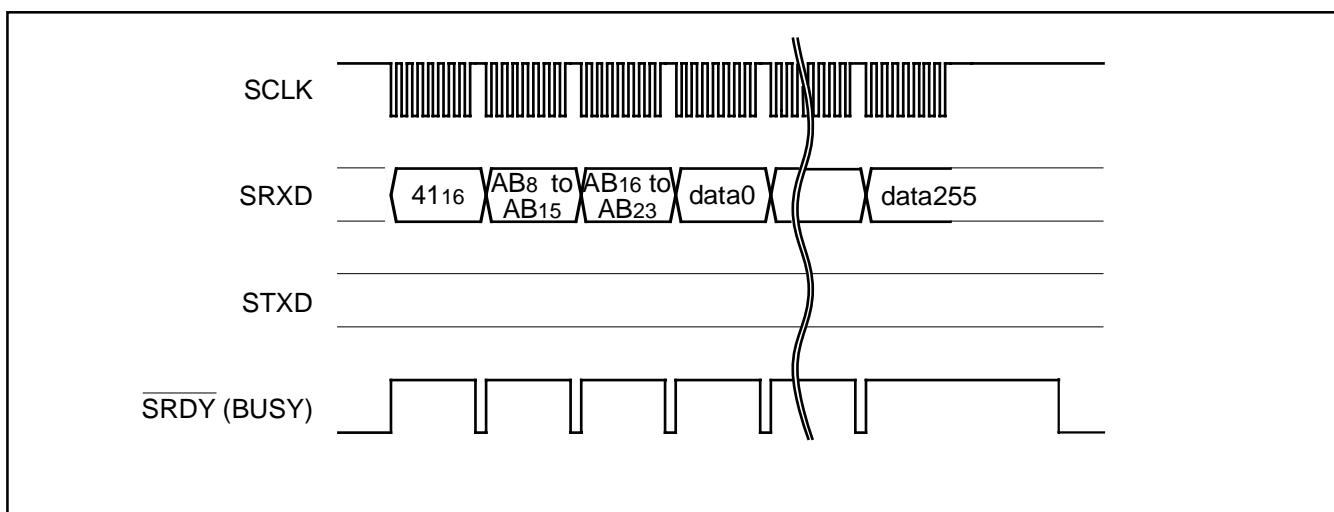


Fig. 91 Timing for page program

●Block Erase Command

This command erases the contents of the specified block. Execute the block erase command as explained here following.

- (1) Transfer the “2016” command code with the 1st byte.
- (2) Transfer addresses AB8 to AB15 and AB16 to AB23 with the 2nd and 3rd bytes respectively.
- (3) Transfer the verify command code “D016” with the 4th byte.

With the verify command code, the erase operation will start for the specified block in the flash memory. Set the addresses AB8 to AB23 to the maximum address of the specified block.

When block erasing ends, the SRDY (BUSY) signal changes from “H” to “L” level. The result of the erase operation can be known by reading the status register.

For more information, see the section on the status register.

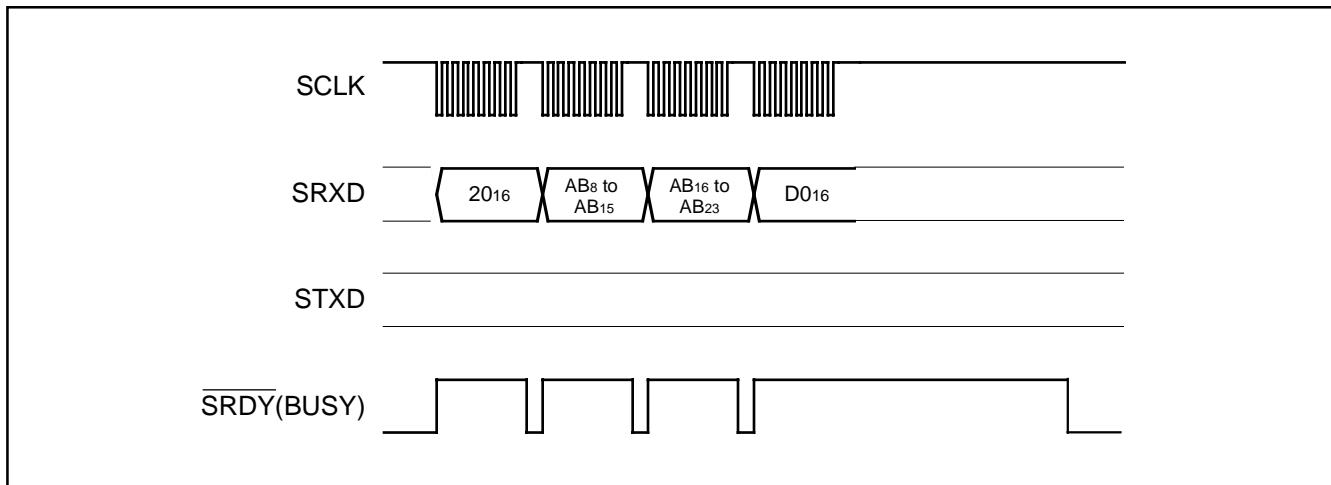


Fig. 92 Timing for block erasing

●Erase All Blocks Command

This command erases the contents of all blocks. Execute the erase all blocks command as explained here following.

- (1) Transfer the “A716” command code with the 1st byte.
- (2) Transfer the verify command code “D016” with the 2nd byte.

With the verify command code, the erase operation will start and continue for all blocks in the flash memory.

When erase all blocks end, the SRDY (BUSY) signal changes from “H” to “L” level. The result of the erase operation can be known by reading the status register.

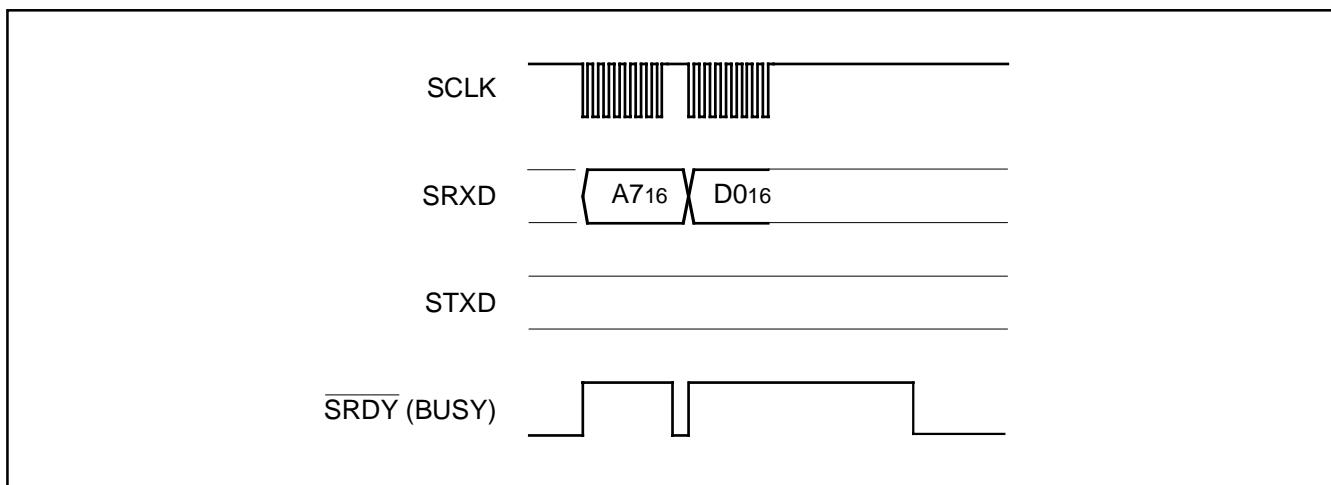


Fig. 93 Timing for erase all blocks

●Download Command

This command downloads a program to the RAM for execution.

Execute the download command as explained here following.

- (1) Transfer the “FA16” command code with the 1st byte.
- (2) Transfer the program size with the 2nd and 3rd bytes.
- (3) Transfer the check sum with the 4th byte. The check sum is added to all data sent with the 5th byte onward.
- (4) The program to execute is sent with the 5th byte onward.

When all data has been transmitted, if the check sum matches, the downloaded program is executed. The size of the program will vary according to the internal RAM.

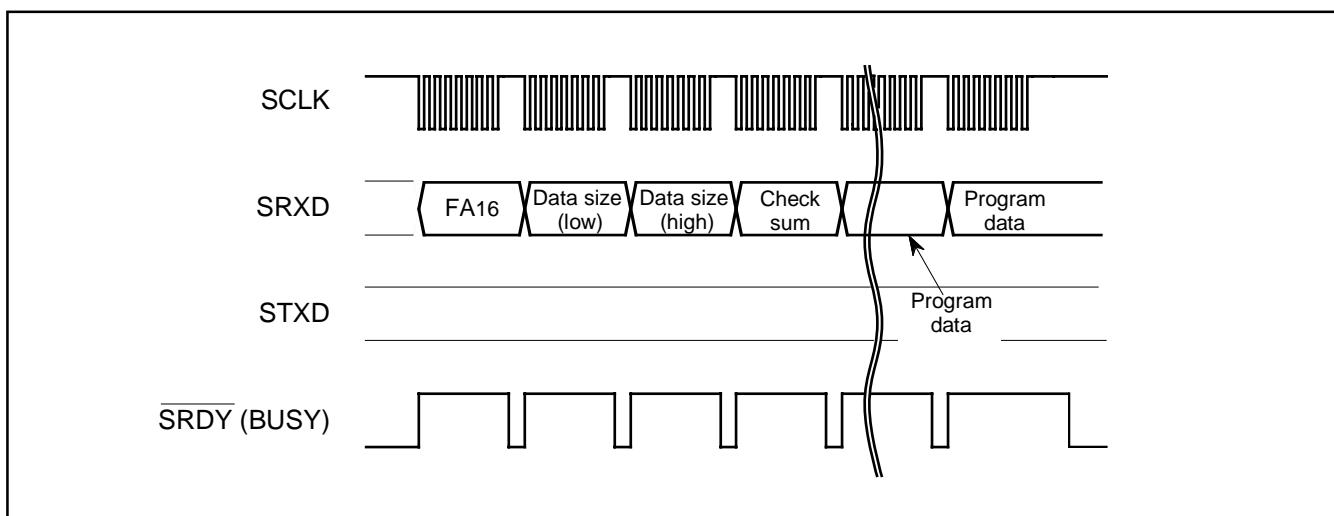


Fig. 94 Timing for download

●Version Information Output Command

This command outputs the version information of the control program stored in the Boot ROM area. Execute the version information output command as explained here following.

(1) Transfer the "FB16" command code with the 1st byte.

(2) The version information will be output from the 2nd byte onward.

This data is composed of 8 ASCII code characters.

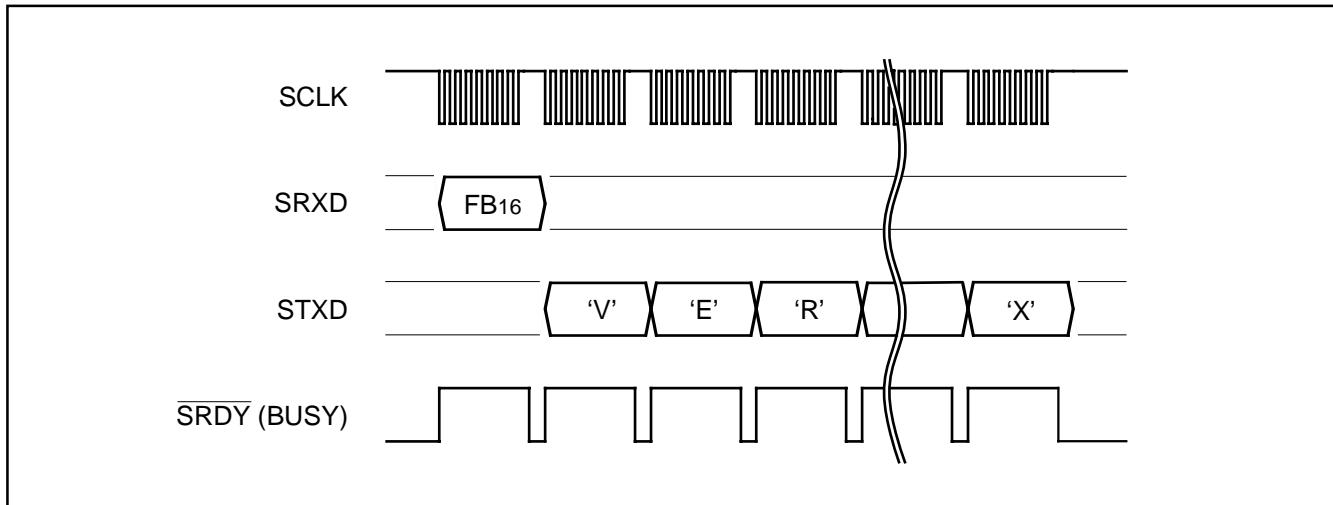


Fig. 95 Timing for version information output

●Boot ROM Area Output Command

This command reads the control program stored in the Boot ROM area in page (256 bytes) unit. Execute the Boot ROM area output command as explained here following.

(1) Transfer the "FC16" command code with the 1st byte.

(2) Transfer addresses AB8 to AB15 and AB16 to AB23 with the 2nd and 3rd bytes respectively.

(3) From the 4th byte onward, data (DB0 to DB7) for the page (256 bytes) specified with addresses AB8 to AB23 will be output sequentially from the smallest address first synchronized with the fall of the clock.

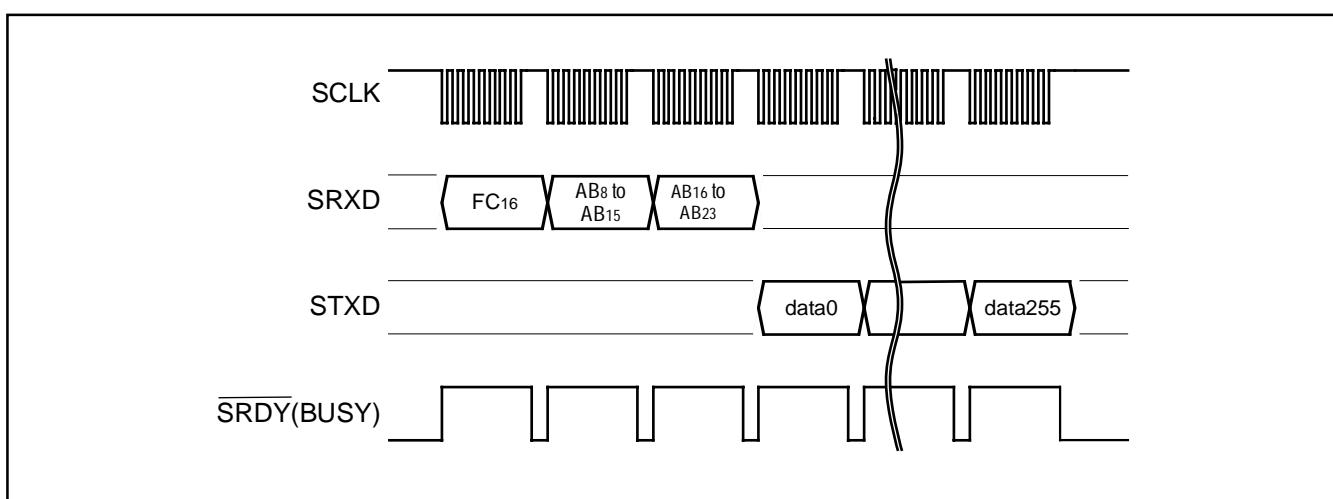


Fig. 96 Timing for Boot ROM area output

●ID Code Check

This command checks the ID code. Execute the boot ID check command as explained here following.

- (1) Transfer the "F516" command code with the 1st byte.
- (2) Transfer addresses AB0 to AB7, AB8 to AB15 and AB16 to AB23 ("0016") of the 1st byte of the ID code with the 2nd and 3rd respectively.
- (3) Transfer the number of data sets of the ID code with the 5th byte.
- (4) Transfer the ID code with the 6th byte onward, starting with the 1st byte of the code.

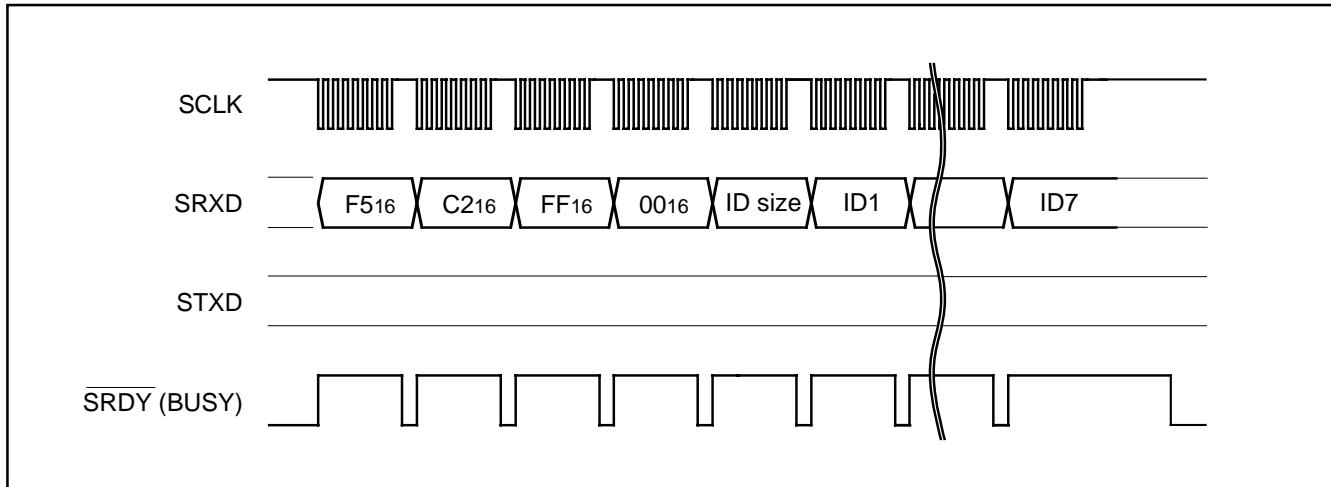


Fig. 97 Timing for ID check

●ID Code

When the flash memory is not blank, the ID code sent from the serial programmer and the ID code written in the flash memory are compared to see if they match. If the codes do not match, the command sent from the serial programmer is not accepted. An ID code contains 8 bits of data. Area is, from the 1st byte, addresses FFC216 to FFC816. Write a program into the flash memory, which already has the ID code set for these addresses.

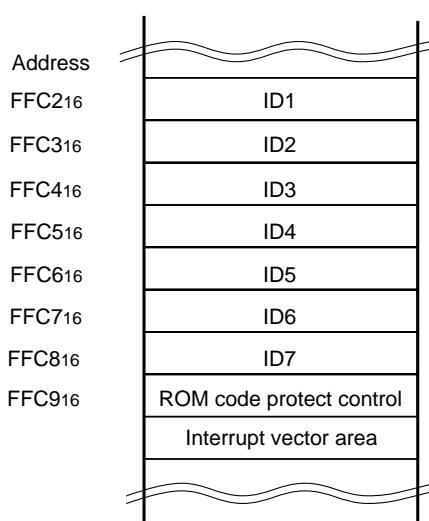


Fig. 98 ID code storage addresses

●Status Register (SRD)

The status register indicates operating status of the flash memory and status such as whether an erase operation or a program ended successfully or in error. It can be read by writing the read status register command (7016). Also, the status register is cleared by writing the clear status register command (5016). Table 25 lists the definition of each status register bit. After releasing the reset, the status register becomes "8016".

●Sequencer status (SR7)

The sequencer status indicates the operating status of the the flash memory.

After power-on and recover from deep power down mode, the sequencer status is set to "1" (ready).

This status bit is set to "0" (busy) during write or erase operation and is set to "1" upon completion of these operations.

●Erase status (SR5)

The erase status indicates the operating status of erase operation. If an erase error occurs, it is set to "1". When the erase status is cleared, it is set to "0".

●Program status (SR4)

The program status indicates the operating status of write operation. If a program error occurs, it is set to "1". When the program status is cleared, it is set to "0".

Table 25 Definition of each bit of status register (SRD)

SRD0 bits	Status name	Definition	
		"1"	"0"
SR7 (bit7)	Sequencer status	Ready	Busy
SR6 (bit6)	Reserved	-	-
SR5 (bit5)	Erase status	Terminated in error	Terminated normally
SR4 (bit4)	Program status	Terminated in error	Terminated normally
SR3 (bit3)	Reserved	-	-
SR2 (bit2)	Reserved	-	-
SR1 (bit1)	Reserved	-	-
SR0 (bit0)	Reserved	-	-

● **Status Register 1 (SRD1)**

The status register 1 indicates the status of serial communications, results from ID checks and results from check sum comparisons. It can be read after the status register (SRD) by writing the read status register command (7016). Also, status register 1 is cleared by writing the clear status register command (5016). Table 26 lists the definition of each status register 1 bit. This register becomes "0016" when power is turned on and the flag status is maintained even after the reset.

● **Boot update completed bit (SR15)**

This flag indicates whether the control program was downloaded to the RAM or not, using the download function.

● **Check sum consistency bit (SR12)**

This flag indicates whether the check sum matches or not when a program, is downloaded for execution using the download function.

● **ID code check completed bits (SR11 and SR10)**

These flags indicate the result of ID code checks. Some commands cannot be accepted without an ID code check.

● **Data reception time out (SR9)**

This flag indicates when a time out error is generated during data reception. If this flag is attached during data reception, the received data is discarded and the MCU returns to the command wait state.

Table 26 Definition of each bit of status register 1 (SRD1)

SRD1 bits	Status name	Definition	
		"1"	"0"
SR15 (bit7)	Boot update completed bit	Update completed	Not Update
SR14 (bit6)	Reserved	-	-
SR13 (bit5)	Reserved	-	-
SR12 (bit4)	Checksum match bit	Match	Mismatch
SR11 (bit3) SR10 (bit2)	ID code check completed bits	00	Not verified
		01	Verification mismatch
		10	Reserved
		11	Verified
SR9 (bit1)	Data reception time out	Time out	Normal operation
SR8 (bit0)	Reserved	-	-

Full Status Check

Results from executed erase and program operations can be known by running a full status check. Figure 99 shows a flowchart of the full status check and explains how to remedy errors which occur.


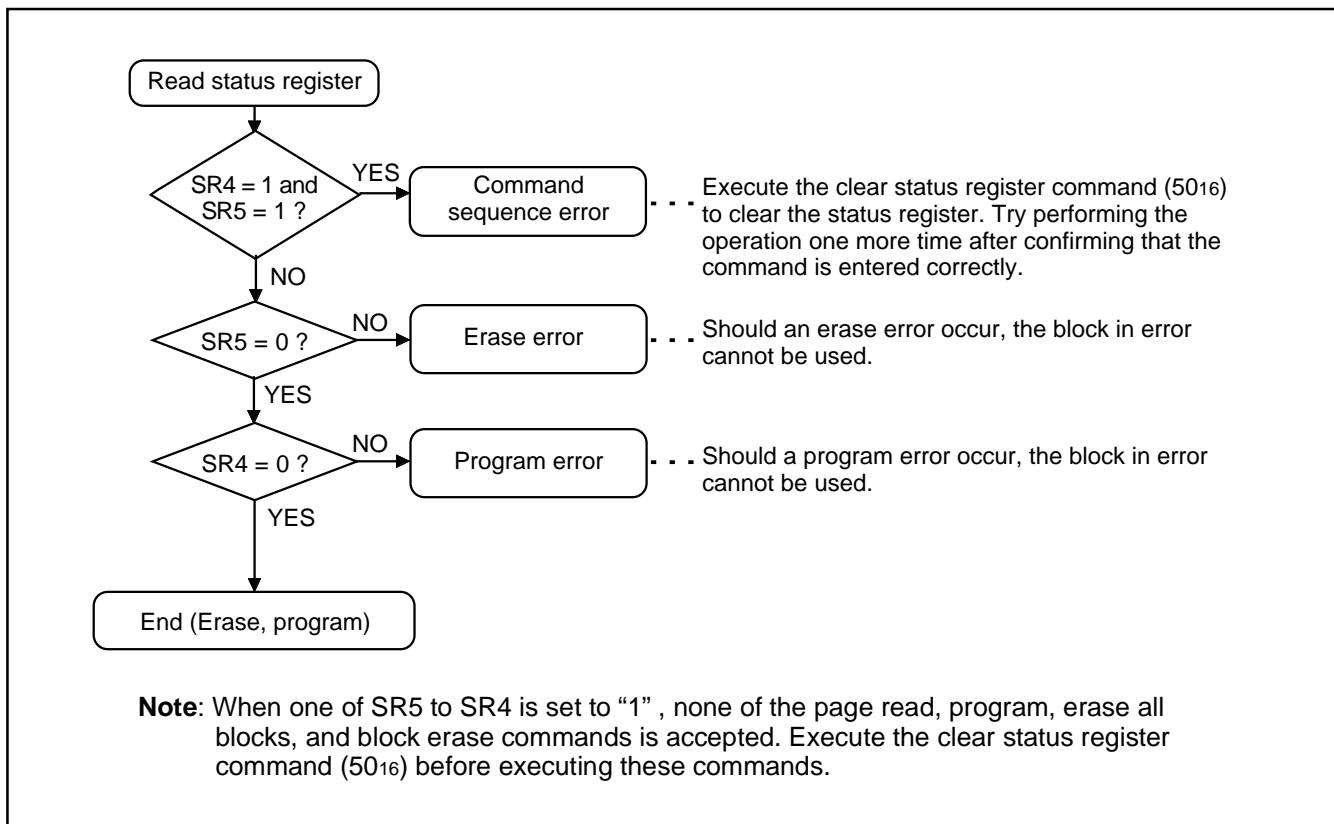


Fig. 99 Full status check flowchart and remedial procedure for errors

Example Circuit Application for Standard Serial I/O Mode

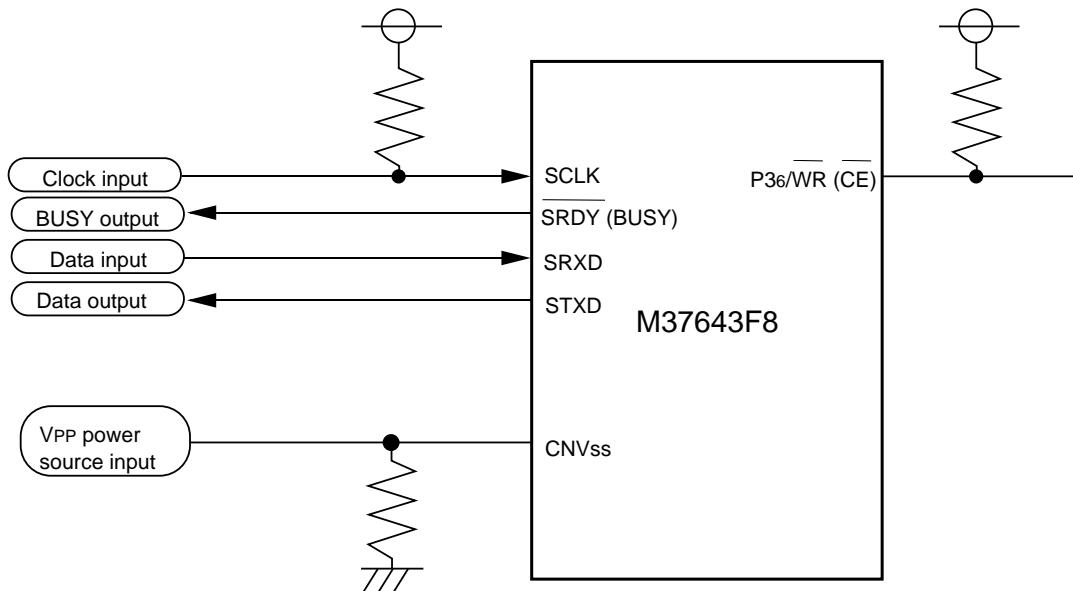Figure 100 shows a circuit application for the standard serial I/O mode. Control pins will vary according to a programmer, therefore see a programmer manual for more information.



Notes 1: Control pins and external circuitry will vary according to a programmer. For more information, see the programmer manual.

2: In this example, the Vpp power supply is supplied from an external source (programmer). To use the user's power source, connect to 4.5 V to 5.25 V.

Fig. 100 Example circuit application for standard serial I/O mode

NOTES ON PROGRAMMING

Processor Status Register

• The contents of the processor status register (PS) after a reset are undefined, except for the interrupt disable flag (I) which is "1". After a reset, initialize flags which affect program execution. In particular, it is essential to initialize the index X mode (T) and the decimal mode (D) flags because of their effect on calculations.

• To reference the contents of the processor status register (PS), execute the **PHP** instruction once then read the contents of (S+1). If necessary, execute the **PLP** instruction to return the PS to its original status.

A **NOP** instruction must be executed after every **PLP** instruction.

• A **SEI** instruction must be executed before every **PLP** instruction. A **NOP** instruction must be executed before every **CLI** instruction.

BRK Instruction

It can be detected that the **BRK** instruction interrupt event or the least priority interrupt event by referring the stored B flag state. Refer to the stored B flag state in the interrupt routine.

Decimal Calculations

When decimal mode is selected, the values of the V flags are invalid.

The carry flag (C) is set to "1" if a carry is generated as a result of the calculation, or is cleared to "0" if a borrow is generated. To determine whether a calculation has generated a carry, the C flag must be initialized to "0" before each calculation. To check for a borrow, the C flag must be initialized to "1" before each calculation.

Multiplication and Division Instructions

• The index X mode (T) and the decimal mode (D) flags do not affect the **MUL** and **DIV** instruction.

Instruction Execution Time

The instruction execution time is obtained by multiplying the frequency of the internal clock ϕ by the number of cycles needed to execute an instruction.

The number of cycles required to execute an instruction is shown in the list of machine instructions.

Timers

• If a value n (between 0 and 255) is written to a timer latch, the frequency division ratio is $1/(n+1)$.

• P51/XCOUT/TOUT pin cannot function as an I/O port when XCIN - XCOUT is oscillating. When XCIN - XCOUT oscillation is not used or XCOUT oscillation drive is disabled, this pin can function as the TOUT output pin of the timer 1 or 2.

When using the TOUT output function and $f(XCIN)$ divided by 2 is used as the timer 1 count source (bit 2 of T123M = "1"), disable XCOUT oscillation drive (bit 5 of CCR = "1").

Ports

• When the data register (port latch) of an I/O port is modified with the bit managing instruction (**SEB**, **CLB** instructions) the value of the unspecified bit may be changed.

• In standby state (the stop mode by executing the **STP** instruction, and the wait mode by executing the **WIT** instruction) for low-power dissipation, do not make input levels of an I/O port "undefined", especially for I/O ports of the P-channel and the N-channel open-drain.

Pull-up (connect the port to Vcc) or pull-down (connect the port to Vss) these ports through a resistor.

When determining a resistance value, note the following points:

- (1) External circuit
- (2) Variation of output levels during the ordinary operation

When using built-in pull-up or pull-down resistor, note on varied current values.

- (1) When setting as an input port : Fix its input level
- (2) When setting as an output port : Prevent current from flowing out to external

Serial I/O

Do not write to the serial I/O shift register during a transfer when in SPI compatible mode.

UART

• The all error flags PER, FER, OER and SER are cleared to "0" when the UART status register is read, at the hardware reset or initialization by setting the Transmit Initialization Bit. These flags are also cleared to "0" by execution of bit test instructions such as **BBC** and **BCS**.

• The transmission interrupt request bit might be set and the interrupt request is generated by setting the transmit initialization bit to "1" even when selecting timing that either of the following flags is set to "1" as timing where the transmission interrupt is generated:

- (1) Transmit buffer empty flag is set to "1"
- (2) Transmit complete flag is set to "1".

Therefore, when the transmit interrupt is used, set the transmit interrupt enable bit to transmit enabled as the following sequence:

- (1) Transmit initialization bit is set to "1"
- (2) Transmit interrupt request bit is set to "0"
- (3) Transmit interrupt enable bit is set to "1".

• Do not update a value of UART baud rate generator in the condition of transmission enabled or reception enabled. Disable transmission and reception before updating the value. If the former data remains in the UART transmit buffer registers 1 and 2 when transmission is enabled, an undefined data might be output.

- The receive buffer full interrupt request is not generated if receive errors are detected at receiving.

- If a character bit length is 7 bits, bit 7 of the UART transmit/receive buffer register 1 and bits 0 to 7 of the UART transmit/receive buffer register 2 are ignored at transmitting; they are invalid at receiving.

If a character bit length is 8 bits, bits 0 to 7 of the UART transmit/receive buffer register 2 are ignored at transmitting; they are invalid at receiving.

If a character bit length is 9 bits, bits 1 to 7 of the UART transmit/receive buffer register 2 are ignored at transmitting; they are "0" at receiving.

USB

- When the USB Reset Interrupt Status Flag is kept at "1", all other flags in the USB internal registers (addresses 005016 to 005F16) will return to their reset status. However, the following registers are not affected by the USB reset: USB control register (address 001316), Frequency synthesizer control register (address 006C16), Clock control register (address 001F16), and USB endpoint-x FIFO register (addresses 006016 to 006216).

- When not using the USB function, set the USB Line Driver Supply Enable Bit of the USB control register (address 001316) to "1" for power supply to the internal circuits (at Vcc = 5V).

- The IN_PKT_RDY Bit can be set by software even when using the AUTO_SET function.

- When writing to USB-related registers, set the USB Clock Enable Bit to "1", then perform the write after four ϕ cycle waits.

- When using the MCU at Vcc = 3.3V, set the USB Line Driver Supply Enable Bit to "0" (line driver disable). Note that setting the USB Line Driver Current Control Bit (USBC3) doesn't affect the USB operation.

- Read one packet data from the OUT FIFO before clearing the OUT_PKT_RDY Flag. If the OUT_PKT_RDY Flag is cleared while one packet data is being read, the internal read pointer cannot operate normally.

- Use the transfer instructions such as **LDA** and **STA** to set the registers: USB interrupt status registers 1, 2 (addresses 005216, 005316); USB endpoint 0 IN control register (address 005916); USB endpoint x IN control register (address 005916); USB endpoint x OUT control register (address 005A16). Do not use the read-modify-write instructions such as the **SEB** or the **CLB** instruction.

When writing to bits shown by Table 27 using the transfer instruction such as **LDA** or **STA**, a value which never affect its bit state is required. Take the following sequence to change these bits contents:

- Store the register contents onto a variable or a data register.
- Change the target bit on the variable or the data register. Simultaneously mask the bit so that its bit state cannot be changed. (See to Table 27.)
- Write the value from the variable or the data register to the register using the transfer instruction such as **LDA** or **STA**.

- To use the AUTO_SET function for an IN transfer when the AUTO_SET bit is set to 1, set the FIFO to single buffer mode.

Table 27 Bits of which state might be changed owing to software write

Register name	Bit name	Value not affecting state (Note)
USB endpoint 0 IN control register	IN_PKT_RDY (b1)	"0"
	DATA_END (b3)	"0"
	FORCE_STALL (b4)	"1"
USB endpoint x (x = 1, 2) IN control register	IN_PKT_RDY (b0)	"0"
USB endpoint x (x = 1, 2) OUT control register	OUT_PKT_RDY (b0)	"1"
	FORCE_STALL (b4)	"1"

Note: Writing this value will not change the bit state, because this value cannot be written to the bit by software.

Frequency Synthesizer

- The frequency synthesizer and DC-DC converter must be set up as follows when recovering from a Hardware Reset:
 - (1) Enable the frequency synthesizer after setting the frequency synthesizer related registers (addresses 006C16 to 006F16). Then wait for 2 ms.
 - (2) Check the Frequency Synthesizer Lock Status Bit. If "0", wait for 0.1 ms and then recheck.
 - (3) When using the USB built-in DC-DC converter, set the USB Line Driver Supply Enable Bit of the USB control register to "1". This setting must be done 2 ms or more after the setup described in step (1). The USB Line Driver Current Control Bit must be set to "0" at this time. (When Vcc = 3.3V, the setting explained in this step is not necessary.)
 - (4) After waiting for (C + 1) ms so that the external capacitance pin (Ext. Cap. pin) can reach approximately 3.3 V, set the USB Clock Enable Bit to "1". At this time, "C" equals the capacitance (μ F) of the capacitor connected to the Ext. Cap. pin. For example, if 2.2 μ F and 0.1 μ F capacitors are connected to the Ext. Cap. in parallel, the required wait will be (2.3 + 1) ms.
 - (5) After enabling the USB clock, wait for 4 or more f cycles, and then set the USB Enable Bit to "1". After enabling USB clock, read or write the USB internal registers (address 005016 to 006216 with the exception of USBC, CCR and PSC) .
- Bits 6 and 5 of the frequency synthesizer control register (address 006C16) are initialized to "11" after reset release. Make sure to set bits 6 and 5 to "10" after the Frequency Synthesizer Lock Status Bit goes to "1".
- When using the frequency synthesized clock function, we recommend using the fastest frequency possible of f(XIN) or f(XCIN) as an input clock for the PLL. Owing to the PLL mechanism, the PLL controls the speed of multiplied clocks from the source clock. As a result, when the source clock input is lower, the generated clock becomes less stable. This is because more multipliers are needed and the speed control is very rough. Higher source clock input generates a stabler clock, as less multipliers are needed and the speed control is more accurate. However, if the input clock frequency is relatively high, the PLL clock generator can quickly lock-up the output clock to the source and make the output clock very stable.
- Set the value of frequency synthesizer multiply register 2 (FSM2) so that the fPIN is 1 MHz or higher.

DMA

- In the memory expansion mode and microprocessor mode, the DMAOUT pin outputs "H" during a DMA transfer.
- Do not access the DMAC-related registers by using a DMAC transfer. The destination address data and the source address data will collide in the DMAC internal bus.
- When using the USB FIFO as the DMA transfer source, make sure that, if you use the AUTO_SET function, short packet data

does not get mixed in with the transfer data.

- When setting the DMAC channel x enable bit (bit 7 of address 004116) to "1", be sure simultaneously to set the DMAC channel x transfer initiation source capture register reset bit (bit 6 of address 004116) to "1". If this is not performed, an incorrect data will be transferred at the same time when the DMAC is enabled.

Memory Expansion Mode & Microprocessor Mode

- In both memory expansion mode and microprocessor mode, use the LDM instruction or STA instruction to write to port P3 (address 000E16). When using the Read-Modify-Write instruction (**SEB** instruction, **CLB** instruction) you will need to map a memory that the CPU can read from and write to.
- In the memory expansion mode, if the internal and external memory areas overlap, the internal memory becomes the valid memory for the overlapping area. When the CPU performs a read or a write operation on this overlapped area, the following things happen:
 - (1) Read

The CPU reads out the data in the internal memory instead of in the external memory. Note that, since the CPU will output a proper read signal, address signal, etc., the memory data at the respective address will appear on the external data bus.
 - (2) Write

The CPU writes data to both the internal and external memories.
- The wait function is serviceable at accessing an external memory.

Stop Mode

- When the **STP** instruction is executed, bit 7 of the clock control register (address 001F16) goes to "0". To return from stop mode, reset CCR7 to "1".
- When using fSYN (set Internal System Clock Select Bit (CPMA6) to "1") as the internal system clock, switch CPMA6 to "0" before executing the **STP** instruction. Reset CPMA6 after the system returns from Stop Mode and the frequency synthesizer has stabilized. CPMA6 does not need to be switched to "0" when using the **WIT** instruction.
- When the **STP** instruction is being executed, all bits except bit 4 of the timer 123 mode register (address 002916) are initialized to "0". It is not necessary to set T123M1 (Timer 1 Count Stop Bit) to "0" before executing the **STP** instruction. After returning from Stop Mode, reset the timer 1 (address 002416), timer 2 (address 002516), and the timer 123 mode register (address 002916).

USAGE NOTES

Oscillator Connection Notice

The built-in feedback register ($1\text{ M}\Omega$) and the dumping resistor ($400\text{ }\Omega$) is internally connected between pins XIN and XOUT.

Power Source Voltage

When the power source voltage value of a microcomputer is less than the value which is indicated as the recommended operating conditions, the microcomputer does not operate normally and may perform unstable operation.

In a system where the power source voltage drops slowly when the power source voltage drops or the power supply is turned off, reset a microcomputer when the power source voltage is less than the recommended operating conditions and design a system not to cause errors to the system by this unstable operation.

Power Supply Pins Treatment Notice

Please connect $0.1\text{ }\mu\text{F}$ and $4.7\text{ }\mu\text{F}$ capacitors in parallel between pins Vcc and Vss, and pins AVss and AVcc.

These capacitors must be connected as close as possible between the DC supply and GND pins, and also the analog supply pin and corresponding GND pin.

Wiring patterns for these supply and GND pins must be wider than other signal patterns.

These filter capacitors should not be placed near the LPF pins as they will cause noise problems

Reset Pin Treatment Notice (Noise Elimination)

If the reset input signal rises very slowly, we recommend attaching a capacitor, such as a 1000 pF ceramic capacitor with excellent high frequency characteristics, between the RESET pin and the Vss pin.

Please note the following two issues for this capacitor connection.

- (1) Capacitor wiring pattern must be as short as possible (within 20 mm).
- (2) The user must perform an application level operation test.

LPF Pin Treatment Notice

All passive components must be located as close as possible to the LPF pin.

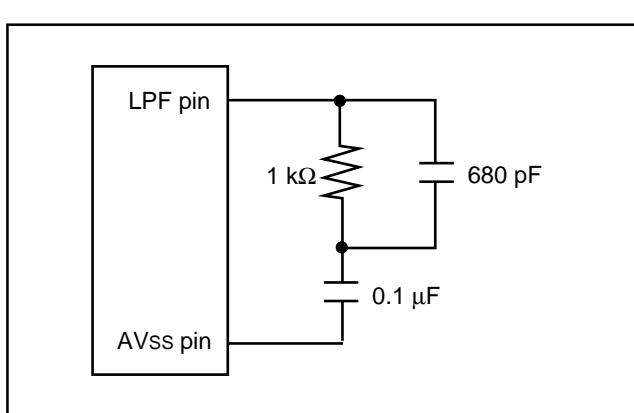


Fig. 101 Passive components near LPF pin

AVss and AVcc Pin Treatment Notice (Noise Elimination)

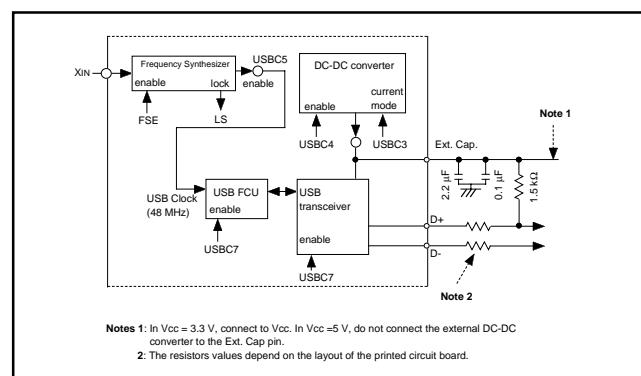
An insulation connector (Ferrite Beads) must be connected between AVss and Vss pins and between AVcc and Vcc pins.

USB Transceiver Treatment (Noise Elimination)

The Full-Speed USB2.0 specification requires a driver -impedance 28 to $44\text{ }\Omega$. (Refer to Clause 7.1.1.1 Full-speed (12 Mb/s) Driver Characteristics in the USB specification.) In order to meet the USB specification impedance requirements, connect a resistor ($27\text{ }\Omega$ to $33\text{ }\Omega$ recommended) in series to the USB D+ pin and the USB D- pin.

In addition, in order to reduce the ringing and control the falling/rising timing of USB D+/D- and a crossover point, connect a capacitor between the USB D+/D- pins and the Vss pin if necessary. The values and structure of those peripheral elements depend on the impedance characteristics and the layout of the printed circuit board. Accordingly, evaluate your system and observe waveforms before actual use and decide use of elements and the values of resistors and capacitors.

Connect a capacitor between the Ext. Cap. pin and the Vss pin. The capacitor should have a $2.2\text{ }\mu\text{F}$ capacitor (Tantalum capacitor) and a $0.1\text{ }\mu\text{F}$ capacitor (ceramic capacitor) connected in parallel. Figure 102 for the proper positions of the peripheral components.



Notes 1: In Vcc = 3.3 V, connect to Vcc. In Vcc = 5 V, do not connect the external DC-DC converter to the Ext. Cap. pin.

2: The resistors values depend on the layout of the printed circuit board.

Fig.102 Peripheral circuit

In Vcc = 3.3 V operation, connect the Ext. Cap. pin directly to the Vcc pin in order to supply power to the USB transceiver. In addition, you will need to disable the DC-DC converter in this operation (set bit 4 of the USB control register to "0".) If you are using the bus powered supply in Vcc = 3.3 V operation, the DC-DC converter must be placed outside the MCU.

In Vcc = 5 V operation, do not connect the external DC-DC converter to the Ext. Cap. pin. Use the built-in DC-DC converter by enabling the USB line driver.

Make sure the USB D+/D- lines do not cross any other wires. Keep a large GND area to protect the USB lines. Also, make sure you use a USB specification compliant connector for the connection.

USB Communication

In applications requiring high-reliability, we recommend providing the system with protective measures such as USB function initialization by software or USB reset by the host to prevent USB communication from being terminated unexpectedly, for example due to external causes such as noise.

Clock Input/Output Pin Wiring (Noise Elimination)

- (1) Make the wiring for the input/output pins as short as possible.
- (2) Make the wiring across the grounding lead of the capacitor which is connected to an oscillator and the Vss pin of the MCU as short as possible (within 20 mm)
- (3) Make sure to isolate the oscillation Vss pattern from other patterns for oscillation circuit-use only.

Oscillator Wiring (Noise Elimination)

(1) Keeping oscillator away from large current signal lines

Install a microcomputer (and especially an oscillator) as far as possible from signal lines, including USB signal lines, where a current larger than the tolerance of current value flows. When a large current flows through those signal lines, strong noise occurs because of mutual inductance.

(2) Installing oscillator away from signal lines where potential levels change frequently

Install an oscillator and a connecting pattern of an oscillator away from signal lines where potential levels change frequently. Also, do not cross such signal lines over the clock lines or the signal lines which are sensitive to noise.

Terminate Unused Pins

(1) Output ports : Open

(2) Input ports :

Connect each pin to Vcc or Vss through each resistor of 1 kΩ to 10 kΩ.

Ports that permit the selecting of a built-in pull-up or pull-down resistor can also use this resistor. As for pins whose potential affects to operation modes such as pins CNVss, INT or others, select the Vcc pin or the Vss pin according to their operation mode.

(3) I/O ports :

- Set the I/O ports for the input mode and connect them to Vcc or Vss through each resistor of 1 kΩ to 10 kΩ.

Ports that permit the selecting of a built-in pull-up or pull-down resistor can also use this resistor. Set the I/O ports for the output mode and open them at "L" or "H".

- When opening them in the output mode, the input mode of the initial status remains until the mode of the ports is switched over to the output mode by the program after reset. Thus, the potential at these pins is undefined and the power source current may increase in the input mode. With regard to an effects on the system, thoroughly perform system evaluation on the user side.

- Since the direction register setup may be changed because of a program runaway or noise, set direction registers by program periodically to increase the reliability of program.
- At the termination of unused pins, perform wiring at the shortest possible distance (20 mm or less) from microcomputer pins.

Electric Characteristic Differences Between Mask ROM and Flash Memory Version MCUs

There are differences in electric characteristics, operation margin, noise immunity, and noise radiation between Mask ROM and Flash Memory version MCUs due to the difference in the manufacturing processes.

When manufacturing an application system with the Flash Memory version and then switching to use of the Mask ROM version, please perform sufficient evaluations for the commercial samples of the Mask ROM version.


ROM ORDERING METHOD

- 1.Mask ROM Order Confirmation Form
- 2.Mark Specification Form
- 3.Data to be written to ROM, in EPROM form (three identical copies) or one floppy disk.
- For the mask ROM confirmation and the mark specifications, refer to the "Renesas Technology Corp." Homepage (<http://www.renesas.com>).

PACKAGE OUTLINE


PRQP0080GB-A

JEITA Package Code	RENESAS Code	Previous Code	MASS[Typ.]
P-QFP80-14x20-0.80	PRQP0080GB-A	80P6N-A	1.6g

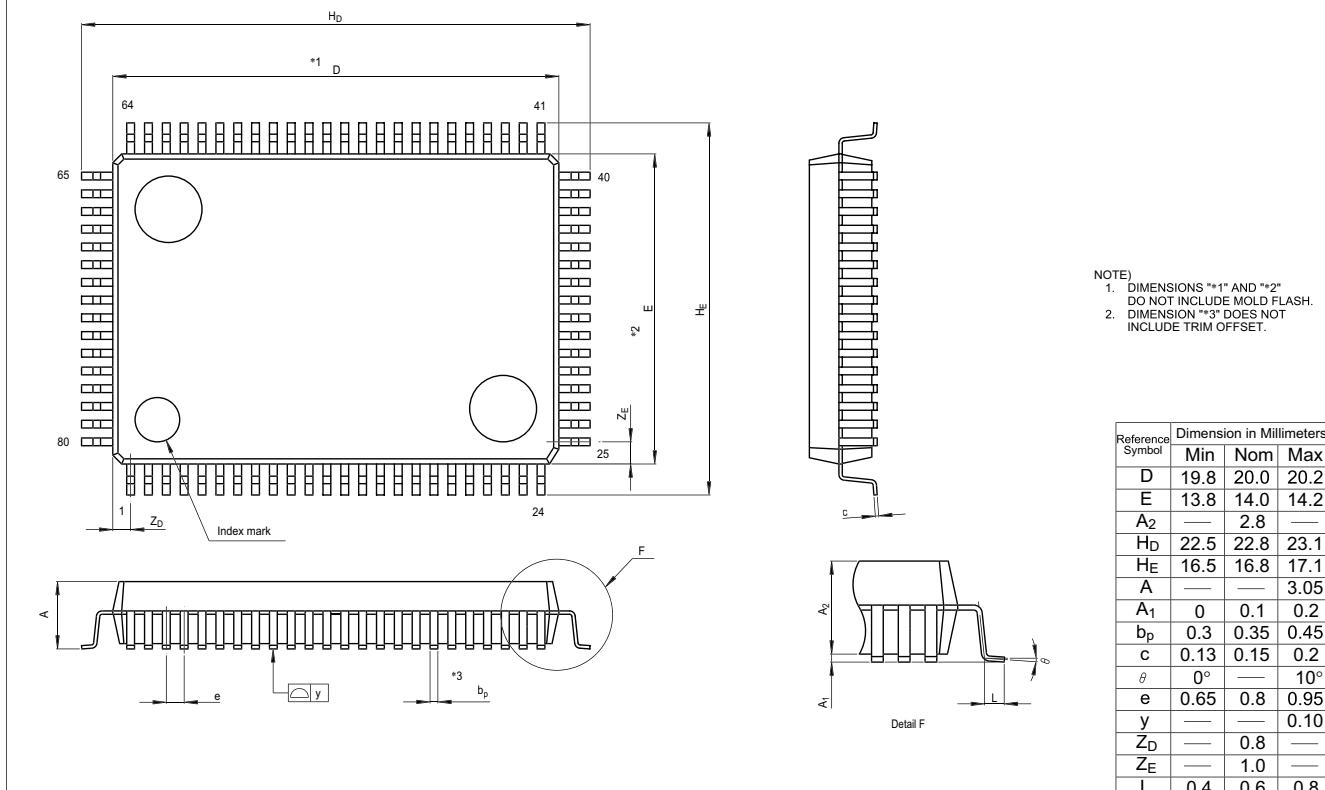


PLQP0080KB-A

JEITA Package Code	RENESAS Code	Previous Code	MASS[Typ.]
P-LQFP80-12x12-0.50	PLQP0080KB-A	80P6Q-A	0.5g

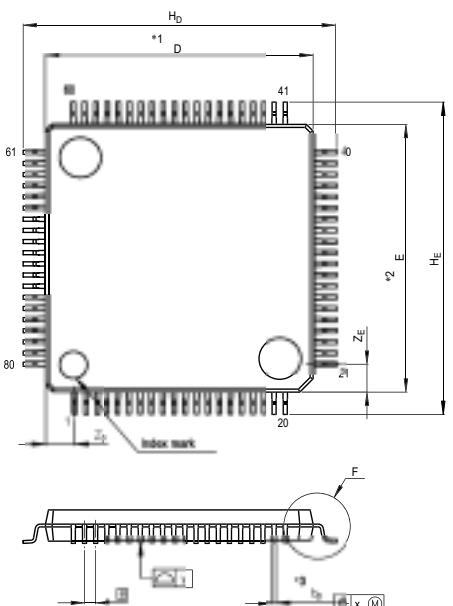


NOTE)

1. DIMENSIONS "*1" AND "*2" DO NOT INCLUDE MOLD FLASH.
2. DIMENSION "*3" DOES NOT INCLUDE TRIM OFFSET.



Terminal cross section

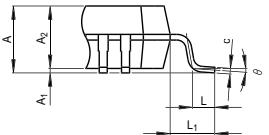

Detail F

Reference Symbol	Dimension in Millimeters		
	Min	Nom	Max
D	11.9	12.0	12.1
E	11.9	12.0	12.1
A ₂	—	1.4	—
H _D	13.8	14.0	14.2
H _E	13.8	14.0	14.2
A	—	—	1.7
A ₁	0	0.1	0.2
b _p	0.15	0.20	0.25
b ₁	—	0.18	—
c	0.09	0.145	0.20
c ₁	—	0.125	—
θ	0°	—	10°
[e]	—	0.5	—
x	—	—	0.08
y	—	—	0.08
Z _D	—	1.25	—
Z _E	—	1.25	—
L	0.3	0.5	0.7
L ₁	—	1.0	—

REVISION HISTORY

7643 GROUP DATA SHEET

Rev.	Date	Description	
		Page	Summary
0.50	Jan. 24, 2003	–	First edition issued
1.00	Jul. 30, 2003	All pages	<p>“PRELIMINARY...” eliminated.</p> <p>16 Fig.12: (2) Port P2 revised.</p> <p>17 Fig.13: (7) Port P51 revised.</p> <p>21 Table 7: Note 2; “overrun/underrun” eliminated.</p> <p>49 Fig.42: Note added.</p> <p>51 Fig.44: Note 4 added.</p> <p>52 Fig.45: Bit 3 revised and Note 4 added.</p> <p>59 Fig.55: (55) and (56) revised.</p> <p>72 VT⁺–VT⁻ Hysteresis INT0, INT1, RDY, HOLD, P20–P27: Note added.</p> <p>75 td (φ-EDMA), tv (φ-EDMA): revised.</p> <p>77 VT⁺–VT⁻ Hysteresis INT0, INT1, RDY, HOLD, P20–P27: Note added.</p> <p>80 tv (φ-DMA), td (φ-EDMA), tv (φ-EDMA): revised.</p> <p>114 Table 27 revised.</p> <p>116 USAGE NOTES: Oscillator Connection Notice revised.</p>
2.00	Aug. 28, 2006	All pages	<p>Package names “80P6N-A” → “PRQP0080GB-A” revised</p> <p>Package names “80P6Q-A” → “PLQP0080KB-A” revised</p> <p>51 Fig. 44 “5: To use the AUTO_SET function to single buffer mode.” added</p> <p>60 CLOCK GENERATING CIRCUIT; “No external resistor is needed resistor exists on-chip.” → “No external resistor is needed depending on conditions.”</p> <p>Fig. 64; Pulled up added, NOTE added</p> <p>113 UART; “•Do not update an undefined data might be output.” added</p> <p>114 USB; “•To use the AUTO_SET function to single buffer mode.” added</p> <p>116 Power Source Voltage added</p> <p>117 USB Communication added</p> <p>“For the mask ROM confirmation http://www.infomicon.maec.co.jp/indexe.htm” → “For the mask ROM confirmation (http://www.renesas.com).”</p> <p>118 Package outline revised</p>

Renesas Technology Corp. Sales Strategic Planning Div. Nippon Bldg., 2-6-2, Ohte-machi, Chiyoda-ku, Tokyo 100-0004, Japan

Keep safety first in your circuit designs!

1. Renesas Technology Corp. puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corp. product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corp. or a third party.
2. Renesas Technology Corp. assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corp. without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor for the latest product information before purchasing a product listed herein.
4. The information described here may contain technical inaccuracies or typographical errors.
5. Renesas Technology Corp. assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.
6. Please also pay attention to information published by Renesas Technology Corp. by various means, including the Renesas Technology Corp. Semiconductor home page (<http://www.renesas.com>).
7. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corp. assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
8. Renesas Technology Corp. semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
9. The prior written approval of Renesas Technology Corp. is necessary to reprint or reproduce in whole or in part these materials.
10. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination.
11. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
12. Please contact Renesas Technology Corp. for further details on these materials or the products contained therein.



RENESAS SALES OFFICES

<http://www.renesas.com>

Refer to "<http://www.renesas.com/en/network>" for the latest and detailed information.

Renesas Technology America, Inc.

450 Holger Way, San Jose, CA 95134-1368, U.S.A.
Tel: <1> (408) 382-7500, Fax: <1> (408) 382-7501

Renesas Technology Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.
Tel: <44> (1628) 585-100, Fax: <44> (1628) 585-900

Renesas Technology (Shanghai) Co., Ltd.

Unit 204, 205, AZIACenter, No.1233 Lujiazui Ring Rd, Pudong District, Shanghai, China 200120
Tel: <86> (21) 5877-1818, Fax: <86> (21) 6887-7898

Renesas Technology Hong Kong Ltd.

7th Floor, North Tower, World Finance Centre, Harbour City, 1 Canton Road, Tsimshatsui, Kowloon, Hong Kong
Tel: <852> 2265-6688, Fax: <852> 2730-6071

Renesas Technology Taiwan Co., Ltd.

10th Floor, No.99, Fushing North Road, Taipei, Taiwan
Tel: <886> (2) 2715-2888, Fax: <886> (2) 2713-2999

Renesas Technology Singapore Pte. Ltd.

1 Harbour Front Avenue, #06-10, Keppel Bay Tower, Singapore 098632
Tel: <65> 6213-0200, Fax: <65> 6278-8001

Renesas Technology Korea Co., Ltd.

Kukje Center Bldg. 18th Fl., 191, 2-ka, Hangang-ro, Yongsan-ku, Seoul 140-702, Korea
Tel: <82> (2) 796-3115, Fax: <82> (2) 796-2145

Renesas Technology Malaysia Sdn. Bhd.

Unit 906, Block B, Menara Amcorp, Amcorp Trade Centre, No.18, Jalan Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: <603> 7955-9390, Fax: <603> 7955-9510