

RL78/G23

Operation State Switching

Introduction

The application note shows the register setting sequence for the switch of RL78/G23 operation state, using the Operation State Control. After reset, it operates in the HS mode. The flash operation mode is switched one by one by the button pressing (HS mode \rightarrow LS mode \rightarrow LP mode \rightarrow HS mode, repetition at the following).

Target Device

RL78/G23

When applying the sample program covered in this application note to another microcomputer, modify the program according to the specifications for the target microcomputer and conduct an extensive evaluation of the modified program.

Contents

1.	Specifications	3
1.1	Overview of Specifications	3
1.2	Outline of Operation	4
2.	Operation Confirmation Conditions	5
3.	Hardware Descriptions	6
3.1	Example of Hardware Configuration	6
3.2	List of Pins Used	6
4.	Software Explanation	7
4.1	Setting of Option byte	7
4.2	List of Constants	7
4.3	List of Variables	8
4.4	List of Functions	8
4.5	Specification of Functions	9
4.6	Flowcharts	10
4.6.1	1 Main Processing	10
4.6.2	2 Flash Operation Mode Switching (HS) Processing	11
4.6.3	B Flash Operation Mode Switching (LS) Processing	12
4.6.4	Flash Operation Mode Switching (LP) Processing	13
4.6.5	5 External Interrupt (INTP0) Processing	14
5.	Sample Code	15
6.	Reference Documents	15

1. Specifications

1.1 Overview of Specifications

Pressing the button generates an INTP0 interrupt and changes flash operation mode. After cycling through all operation transition states supported by RL78/G23, the state immediately after a reset is restored. LED1 and LED2 indicate flash operation modes.

Table 1-1 shows the peripheral function to be used and its use. Figure 1-1 shows the transitions of flash operation modes. Table 1-2 provides details and transitions of operation states.

Table 1-1 Peripheral functions used and their uses

Peripheral Function	Use
External interrupt	Switch input
Port output	Controls the LEDs (LED1, LED2) connected to the
	P52 and P53 pins.

Figure 1-1 Operation state transition sequence order

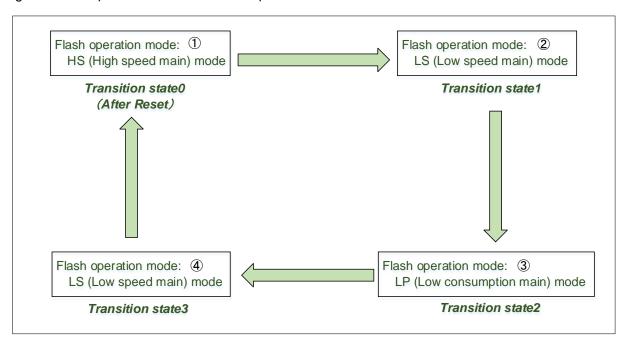


Table 1-2 Operation state detail and operation state transition

	Flash operation mode	LED1	LED2	Operation clock	Range of operation voltage (Electrical characteristics)
1	HS mode (after reset)	Turning on	Turning on	32 MHz	1.8 V to 5.5 V (1 to 32MHz: 1. 8 V to 5.5 V)
2	LS mode	Turning on	Turning off	16 MHz	1.8 V to 5.5 V (1 to 24 MHz: 1.8 V to 5.5 V)
3	LP mode	Turning off	Turning on	2 MHz	1.8 V to 5.5 V (1 to 2 MHz: 1.6 V to 5.5 V)
4	LS mode	Turning on	Turning off	16 MHz	1.8 V to 5.5 V (1 to 24 MHz: 1.8 V to 5.5 V)

Modes ① to ④ are cycled through when the button is pressed.

1.2 Outline of Operation

Each time a falling edge of the P137 / INTP0 pin is detected when the switch is pressed, the CPU clock and operating mode are switched.

The following describes the main settings.

(1) Initial settings for input/output ports

P52 and P53 pins: Set as output ports (used for LED ON control)

Table 1-3 Initial Settings for Input/Output Ports (P52 and P53 Pins)

Register/Bit Name	Setting Value	Content
P5 register	00H	Output data of P52 and P53 is set to 0.
POM5 register	00H	Output mode of P52 and P53 is set to normal output mode.
PM5 register	00H	P52 and P53 are set to output mode.

- (2) Initial settings for the clock generation circuit.
- Set flash operation mode to HS (high-speed main) mode.
 (Use the user option byte (000C2H/ 040C2H) for this setting.)
- Set the frequency of the high-speed on-chip oscillator clock to 32 MHz.
- Select the main system clock (f_{MAIN}) for the CPU/peripheral hardware clock (f_{CLK}).
- (3) Initial settings for interrupt processing
 - Set the effective edge of the INTP0 pin to falling edge to enable switch input.
 - Check the pin voltage level at intervals of approximately 5 ms for determining switch input. When the voltage level is identical twice in a row, switch input is determined to be effective (chattering removed).

Table 1-4 Initial Settings for Input/Output Ports (P137/INTP0 Pin)

Register/Bit Name	Setting Value	Content
MK0L register	FFH	INTP0 interrupt prohibited
IF0L register	00H	INTP0 interrupt request flag clear
PR10L register	FFH	Level 3 is specified as INTP0 interrupt priority.
PR00L register	FFH	
EGP0 register	00H	Falling edge is specified as INTP0 effective edge.
EGN0 register	01H	

2. Operation Confirmation Conditions

The operation of the sample code provided with this application note has been tested under the following conditions.

Table 2-1 Operation Confirmation Conditions


Item	Description
MCU used	RL78/G23 (R7F100GLG)
Board used	RL78/G23-64p Fast Prototyping Board (RTK7RLG230CLG000BJ)
Operating frequency	High-speed on-chip oscillator clock (f _{IH}): 32 MHz, 16 MHz, 2 MHz
Operating voltage	5.0 V (can be operated at 2.0 V to 5.5 V) LVD0 detection voltage: Reset mode At rising edge TYP. 1.90V (1.84 V to 1.95 V) At falling edge TYP. 1.86V (1.80 V to 1.91 V)
Integrated development environment (CS+)	CS+ for CC E8.09.00 from Renesas Electronics Corp.
C compiler (CS+)	CC-RL V1.12.00 from Renesas Electronics Corp.
Integrated development environment (e2studio)	e2studio V2023-04 (23.4.0) from Renesas Electronics Corp.
C compiler (e2studio)	CC-RL V1.12.00 from Renesas Electronics Corp.
Integrated development environment (IAR)	IAR Embedded Workbench for Renesas RL78 V4.21.2 from IAR Systems Corp.
C compiler (IAR)	IAR C/C++ Compiler for Renesas RL78 V4.21.2.2420 from IAR Systems Corp.
Smart configurator (SC)	V1.6.0 from Renesas Electronics Corp.
Board support package (BSP)	V1.60 from Renesas Electronics Corp.

3. Hardware Descriptions

3.1 Example of Hardware Configuration

Figure 3-1 shows an example of the hardware configuration used in the application note.

Figure 3-1 Hardware Configuration

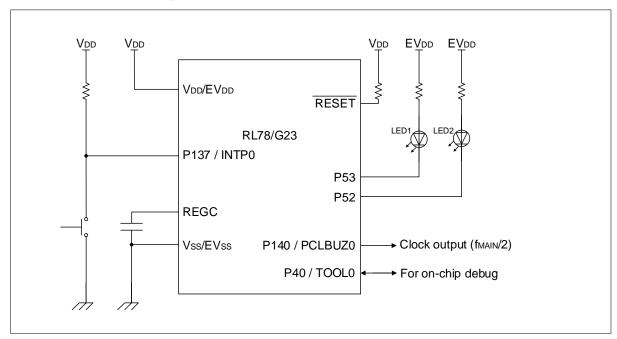

- Note 1. This simplified circuit diagram was created to show an overview of connections only. When actually designing your circuit, make sure the design includes appropriate pin handling and meets electrical characteristic requirements (connect each input-only port to VDD or Vss through a resistor).
- Note 2. Connect any pins whose name begins with EV_{SS} to V_{SS} , and any pins whose name begins with EV_{DD} to V_{DD} , respectively.
- Note 3. VDD must not be lower than the reset release voltage (VLVDO) that is specified for the LVDO.

3.2 List of Pins Used

Table 3-1 shows the pins used and their functions.

Table 3-1 Pins used and their functions

Pin name	I/O	Function
P53	Output	LED1 turning on control
P52	Output	LED2 turning on control
P137 / INTP0	Input	Operation state switching
P140 / PCLBUZ0	Output	Clock output

Caution

In this application note, only the used pins are processed. When actually designing your circuit, make sure the design includes sufficient pin processing and meets electrical characteristic requirements.

4. Software Explanation

4.1 Setting of Option byte

Table 4-1 shows the option byte settings. Please set the appropriate value to fit the different system.

Table 4-1 Option Byte Settings

Address	Setting Value	Contents
000C0H / 040C0H	11101111B	Disables the watchdog timer.
		(Counting stopped after reset)
000C1H / 040C1H	11111110B	LVD0 detection voltage: reset mode At rising edge TYP. 1.90V (1.84 V to 1.95 V) At falling edge TYP. 1.86V (1.80 V to 1.91 V)
000C2H / 040C2H	11101000B	HS mode, High-speed on-chip oscillator clock (f _{IH}): 32 MHz
000C3H / 040C3H	10000101B	Enables on-chip debugging

4.2 List of Constants

Table 4-2 lists the constants that are used in the sample code.

Table 4-2 Constants used in sample code

Constant Name	Setting Value	Description
_00_TRANSITION_STATUS_0	00H	Transition status 0
_01_TRANSITION_STATUS_1	01H	Transition status 1
_02_TRANSITION_STATUS_2	02H	Transition status 2
_03_TRANSITION_STATUS_3	03H	Transition status 3
LED_ON	00H	LED control: ON
LED_OFF	01H	LED control: OFF
WAITCOUNT_32M	8000	5 ms count value during HS 32 MHz operation
WAITCOUNT_16M	4000	5 ms count value during LS 16 MHz operation
WAITCOUNT_2M	500	5 ms count value during LP 2 MHz operation

4.3 List of Variables

Table 4-3 lists global variables.

Table 4-3 Global variables

Туре	Variable identifier	Content	Use function
uint16_t	g_transition_status	Transition state variable	main (), r_Config_INTC_intp0_interrupt ()

4.4 List of Functions

Table 4-4 shows a list of functions.

Table 4-4 Functions

Function name	Outline
r_switch_flashmode_to_HS	The flash operation state is switched to the HS mode.
r_switch_flashmode_to_LS	The flash operation state is switched to the LS mode.
r_switch_flashmode_to_LP	The flash operation state is switched to the LP mode.
r_Config_INTC_intp0_interrupt	External interrupt processing.

4.5 Specification of Functions

The function specifications of the sample code are shown below.


r_switch_flashmode_t	to_HS
Overview	The flash operation state is switched to the HS mode.
Header	r_cg_macrodriver.h, r_cg_userdefine.h
Declaration	void r_switch_flashmode_to_HS (void)
Description	The flash operation state is switched to the HS mode.
Argument	None
Return value	None
r_switch_flashmode_t	to_LS
Overview	The flash operation state is switched to the LS mode.
Header	r_cg_macrodriver.h, r_cg_userdefine.h
Declaration	void r_switch_flashmode_to_LS (void)
Description	The flash operation state is switched to the LS mode.
Argument	None
Return value	None
r_switch_flashmode_t	to_LP
Overview	The flash operation state is switched to the LP mode.
Header	r_cg_macrodriver.h, r_cg_userdefine.h
Declaration	void r_switch_flashmode_to_LP (void)
Description	The flash operation state is switched to the LP mode.
Argument	None
Return value	None
r_Config_INTC_intp0	_interrupt
Overview	External interrupt processing
Header	r_cg_macrodriver.h, r_cg_userdefine.h, Config_INTC.h
Declaration	static voidnear r_Config_INTC_intp0_interrupt (void)
Description	Pushing button calls this function where operation state switching is executed.
Argument	None
Return value	None

4.6 Flowcharts

4.6.1 Main Processing

Figure 4-1 shows the flowchart of the main processing.


Figure 4-1 Main Processing

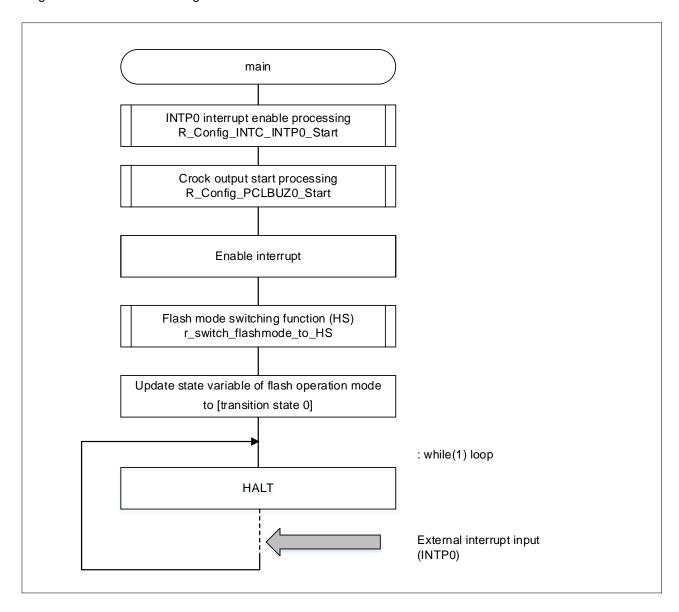

4.6.2 Flash Operation Mode Switching (HS) Processing

Figure 4-2 shows the flowchart of the flash operation mode switching (HS) processing.


Figure 4-2 Flash Operation Mode Switching (HS) Processing

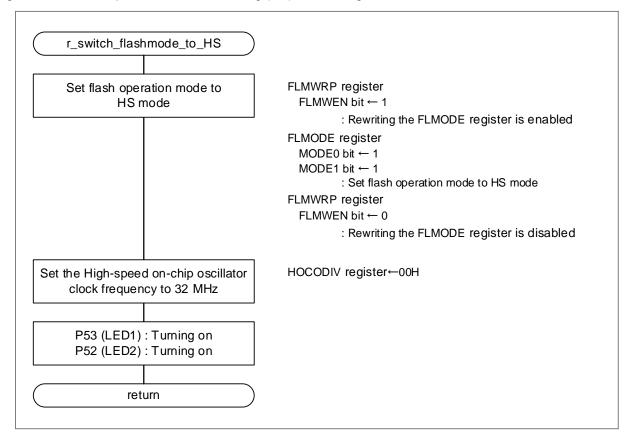

4.6.3 Flash Operation Mode Switching (LS) Processing

Figure 4-3 shows the flowchart of the flash operation mode switching (LS) processing.


Figure 4-3 Flash Operation Mode Switching (LS) Processing

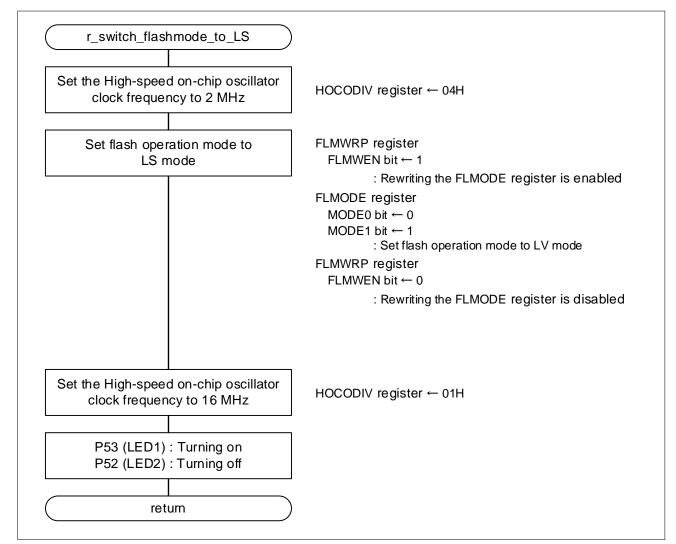

4.6.4 Flash Operation Mode Switching (LP) Processing

Figure 4-4 shows the flowchart of the flash operation mode switching (LP) processing.


Figure 4-4 Flash Operation Mode Switching (LP) Processing

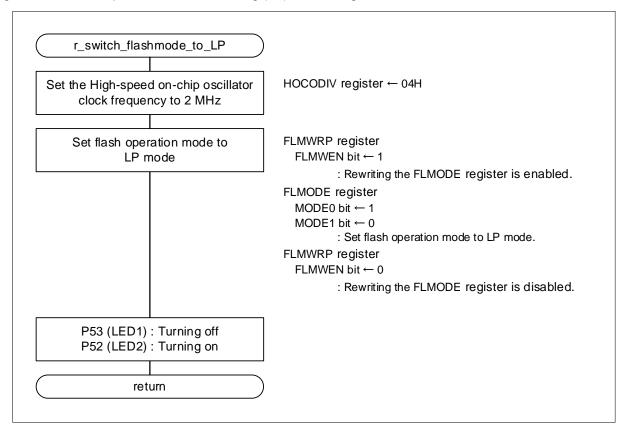

4.6.5 External Interrupt (INTP0) Processing

Figure 4-5 shows the flowchart of the external interruption (INTP0) processing.

Figure 4-5 External Interrupt (INTP0) Processing

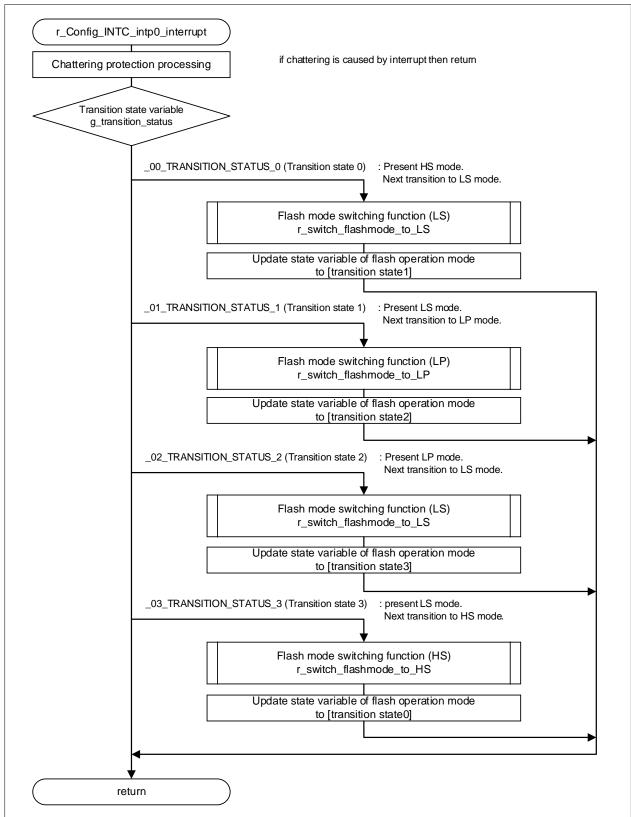

5. Sample Code

Sample code can be downloaded from the Renesas Electronics website.

6. Reference Documents

RL78/G23 User's Manual: Hardware (R01UH0896J) RL78 family user's manual software (R01US0015J)

The latest versions can be downloaded from the Renesas Electronics website.

Technical update

The latest versions can be downloaded from the Renesas Electronics website.

All trademarks and registered trademarks are the property of their respective owners.

Revision History

		Description	
Rev.	Date	Page	Summary
1.00	2021.04.13	_	First Edition
1.01	2021.07.12	5	Updated the Operation Confirmation Conditions
1.02	2023.10.6	5	Updated the Operation Confirmation Conditions

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

- 6. Voltage application waveform at input pin
 - Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).
- 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not quaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

- 1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
- 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
- 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others
- 4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
- 5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
- 6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

- 7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
- 8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
- 12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
- 13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit: www.renesas.com/contact/.