# Tsi382A (QFP) Evaluation Board User Manual

Formal June 2009 60E204B\_MA001\_01



#### **Trademarks**

TUNDRA is a registered trademark of Tundra Semiconductor Corporation (Canada, U.S., and U.K.). TUNDRA, the Tundra logo, Tsi382A, and Silicon Behind the Network, are trademarks of Tundra Semiconductor Corporation. All other registered and unregistered marks (including trademarks, service marks and logos) are the property of their respective owners. The absence of a mark identifier is not a representation that a particular product name is not a mark.

#### Copyright

Copyright © June 2009 Tundra Semiconductor Corporation. All rights reserved. Published in Canada

This document contains information that is proprietary to Tundra and may be used for non-commercial purposes within your organization in support of Tundra products. No other use or transmission of all or any part of this document is permitted without written permission from Tundra, and must include all copyright and other proprietary notices. Use or transmission of all or any part of this document in violation of any applicable Canadian or other legislation is hereby expressly prohibited.

User obtains no rights in the information or in any product, process, technology or trademark which it includes or describes, and is expressly prohibited from modifying the information or creating derivative works without the express written consent of Tundra.

#### **Disclaimer**

Tundra assumes no responsibility for the accuracy or completeness of the information presented, which is subject to change without notice. Tundra products may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request. In no event will Tundra be liable for any direct, indirect, special, incidental or consequential damages, including lost profits, lost business or lost data, resulting from the use of or reliance upon the information, whether or not Tundra has been advised of the possibility of such damages. The information contained in this document does not affect or change Tundra's product warranties.

Mention of non-Tundra products or services is for information purposes only and constitutes neither an endorsement nor a recommendation.

As this information will change over time, please ensure you have the most recent version by contacting a member of the Tundra technical support team, or by checking the Support section of www.tundra.com.



# **Contents**

Abo	out th	nis Do	cument	5
	Relat	ed Inform	nation	5
	Term	s		5
	Revis	sion Histo	ory	5
1.	Boa	rd Des	sign	7
	1.1		ew	
	1.2		terface	
	1.2	1.2.1	Overview	
		1.2.2	IDSEL Signals	
		1.2.3	Interrupt Signals	
		1.2.4	Pull-up Signals	
	1.3		nterface	
	1.4		Management	
	1.7	1.4.1	Power Regulation	
		1.4.2	Power Requirements	
		1.4.3	Power Sequencing	
		1.4.4	System Power Design	
		1.4.4	PCI Vaux (PCI Auxiliary) Support	
	1.5		Management	
	1.3	1.5.1	PCI	
		1.5.1	System Clock Distribution	
	1.6		Interfaces	
	1.0	1.6.1	JTAG Interface.	
		1.6.2	EEPROM Interface	
	1.7	1.6.3	GPIO Interface	
	1.7		are Reset	
	1.8	Logic A	Analyzer Connectivity	17
2.	Cor	nfigura	able Options	19
	2.1	Switch	es	19
		2.1.1	DIP Switches	19
		2.1.2	Push Button	23
	2.2	Shunt J	Jumpers	24
		2.2.1	J6 Shunt Jumper	25
		2.2.2	J21 Shunt Jumper	25
	2.3	Debug	Headers	
		2.3.1	J22 Tsi382 JTAG	
		2.3.2	J23 Logic Analyzer PADs	
	2.4	Connec	ctors	
		2.4.1	J1, J2, J36, J37 Connectors	
		2.4.2	J3 ATX Power Connector	

4 Contents

	2.4.3	P1 x1 PCIe Finger Connector	0
2.5	LEDs	q	1



# **About this Document**

This document describes how to test the key features of the Tsi382 (LQFP package variant) using the Tsi382 evaluation board. It can be used in conjunction with the *Tsi382 Evaluation Board Schematics*.

# **Related Information**

- Tsi382 User Manual
- Tsi382 Evaluation Board Schematics
- PCI Express Base Specification (Revision 1.1)
- PCI Express CEM Specification (Revision 1.1)
- PCI Express-to-PCI/PCI-X Bridge Specification (Revision 1.0)

## **Terms**

Term	Definition
PCIe	PCI Express
SerDes	Serial/De-serializer

# **Revision History**

60E204B\_MA001\_01, Formal, June 2009

This is the first version of the Tsi382 (LQFP) Evaluation Board User Manual.

6 About this Document



# 1. Board Design

Topics discussed include the following:

- "Overview" on page 7
- "PCI Interface" on page 9
- "PCIe Interface" on page 10
- "Power Management" on page 10
- "Clock Management" on page 14
- "Other Interfaces" on page 15
- "Hardware Reset" on page 16
- "Logic Analyzer Connectivity" on page 17

# 1.1 Overview

The key features of the Tsi382 evaluation board include the following (see also Figure 1):

- Single x1 lane, 2.5 Gbps PCIe 1.1 compatible riser card (extended height form factor)
- Four PCI slots
- 32-bit PCI bus, 25–66 MHz operation
- PCI power support through system or external supply
- PCIe compliance/debugging test points

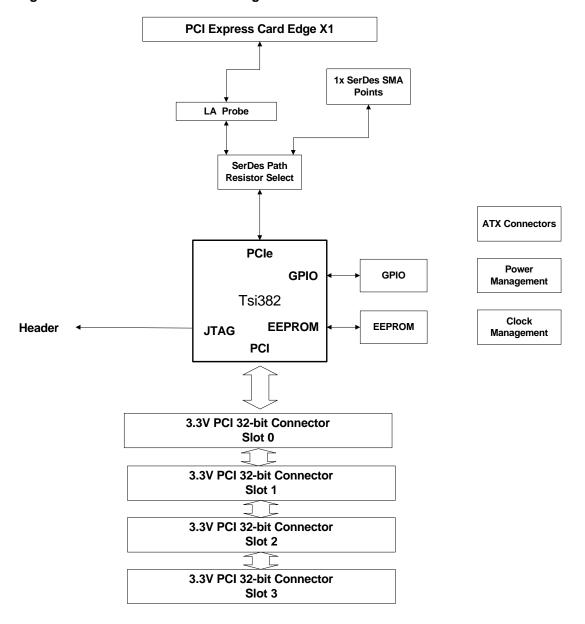


Figure 1: Evaluation Board Block Diagram

# 1.2 PCI Interface

#### 1.2.1 Overview

The PCI Interface is implemented on the board with four slots, in which one is an R/A mounted connector on the top of the board. All PCI connectors are compliant with the PCI 3.0 specification. Appropriate clearance is provided such that up to four PCI cards can be inserted for testing while the board is in an open-chassis standard ATX case.

The PCI Interface supports four slots operating at 25, 33, 50, or 66 MHz.

# 1.2.2 IDSEL Signals

IDSEL signals are connected in the following order:

- Slot 0 R/A connector top slot: 150 ohms to AD16 (Device 0)
- Slot 1 150 ohms to AD17 (Device 1)
- Slot 2 150 ohms to AD19 (Device 3)
- Slot 3 150 ohms AD18 (Device 2)

### 1.2.3 Interrupt Signals

The PCI interrupt signals are connected to the slots as shown in the following table.

**Table 1: PCI Interrupt Routing** 

Tsi382	Slot 0	Slot 1	Slot 3	Slot 4
А	Α	В	D	С
В	В	С	А	D
С	С	D	В	А
D	D	А	С	В

#### 1.2.4 Pull-up Signals

The following pull-ups are added to the PCI bus, in which a value of 8.2Kohm is used.

**Table 2: PCI Pull-up Signals** 

Signal	Description
PCI_REQ#[0:3]	Bus request
PCI_GNT#[0:3]	Bus grant
PCI_FRAME#	Control signal
PCI_IRDY#, PCI_TRDY#	Control signal

Table 2: PCI Pull-up Signals (Continued)		
Signal	Description	

Signal	Description
PCI_STOP#	Control signal
PCI_SERR#	System error
PCI_PERR#	Parity error
PCI_DEVSEL#	Device select line
PCI_INT#[A:D]	Interrupt line
PCI_PME#	PCI Power Management Event occurred

### 1.3 PCle Interface

The Tsi382 evaluation board implements a single lane PCIe Interface. It is designed to connect to a PCIe system with a standard x1 finger connector. The system must provide the REFCLK and PERSTN signals. The PCIe Interface has the following design elements:

- Supports hot insertion and removal
- Mid-bus logic analyzer pads for PCIe RXD/TXD signal probing
- AC coupling on the TXD lanes
- JTAG TDI TDO loopback for chain continuity



The PCIE\_REXT signal must be tied to ground through a 190-ohm resistor.

# 1.4 Power Management

## 1.4.1 Power Regulation

The evaluation board's power regulation is implemented as follows:

- Digital 3.3V power supply available from DC/DC regulator or ATX supply
- Digital 1.2V switching regulator
- PCIe supplies filtered using EMI ferrite networks

To support PCI cards, the following additional power resources are included:

- 12V to 5V DC/DC converter
- 12V to 3.3V DC/DC converter
- External power connectors ATX 20-pin connector for supplying all power from an ATX power supply

### 1.4.2 Power Requirements

The power requirements and implementation for the Tsi382 is as follows.

**Table 3: Tsi382 Power Requirements** 

Supply Name	Symbol	Supplied Source
Device Core	1.2V_384	DC/DC switching regulator w/Enable pin
PCIe 1.2V Core	1.2V_A_384	Passive Filter
PCI 3.3V supply	3.3V_384	Power switch w optional Ferrite filter to reduce EMI/noise from PCI environment
PCIe 3.3V supply	3.3V_A_384	Passive Filter

The target power draw of the Tsi382 is a maximum of 1W, all supplies combined. The supplies to the Tsi382 are controlled during ramp up using enable pins on regulators and switches.

#### 1.4.2.1 PCle

The *PCIe CEM Specification 1.1* defines power limits on PCIe slots according to the number of lanes available on a card. Power rules regarding x1 PCIe slots are a maximum of 25W slot. Current limits are included in Table 4.

**Table 4: PCIe Connector Current Limits** 

Rail	Current
3.3V	ЗА
12V	2.1A

The usage of the 12V supply provides access to the full 25W available from the system to the board. The PCIe pinout design includes more 12V power pins as it allows more power-per-pin capability. The evaluation board regulates all power from the 12V system rail; however, 3.3V from the system remains unused.

www.tundra.com

#### 1.4.2.2 PCI

The PCISIG defines the power rules regarding PCI cards as a maximum of 25 Watts per card (All power rails combined power draw). The individual current limits on voltage rails are included in Table 5.

**Table 5: PCI Connector Current Limits** 

Rail	Current
3.3V	7.6A
5V	5A
-12V	100mA
12V	500mA

It is not possible to provide the full power required to the PCI bus without violating the specification while drawing power from only a x1 PCIe system. Up to 23W not including regulator efficiency losses can be made available. The evaluation board provides the power requirements in one of two ways depending on the application:

- PCIe system power
- ATX System connector

The following conditions summarize the power available for a single PCI card without external supply. An efficiency of 85% is taken into account for switching regulators. These limits can be exceeded in cases where the system can provide more than the suggested limit, which is usually only implemented in hot swap systems.

Table 6: PCI Connector Current Limit with No External Supply

Rail	Supplying Topology	Current (Maximum)
3.3V	12V to 3.3V regulator	6A
12V	12V directly	500mA
-12V	N/A	N/A
5V	12V to 5V regulator	4A

For additional slots, or in cases where the system cannot supply enough power, a separate ATX power connector is used to power the card. The evaluation board senses the presence of this supply, and disables the slave PCIe slot power. For the case of a separate external ATX supply, all four slots are provided with the required power.

### 1.4.3 Power Sequencing

On power-up, the board's power sequence is as follows:

- 1. 1.2V powered on
- 2. PCI I/O slot power and pull-ups, and Tsi382 3.3V


12V/-12V/5V PCI are not sequence controlled.

### 1.4.4 System Power Design

Figure 2 illustrates the power distribution for the riser card. The following list is a functional summary of the power design:

- 1. Sequencing control over the following rails:
  - 3.3V PCI
  - 3.3V Tsi382 I/O/PCIe A<sub>VDD</sub>
  - 1.2V Tsi382 Core/PCIe V<sub>DD</sub>
- 2. ATX 20-pin connector override, which disables all power draw from the PCIe system.

Figure 2: System Power Distribution

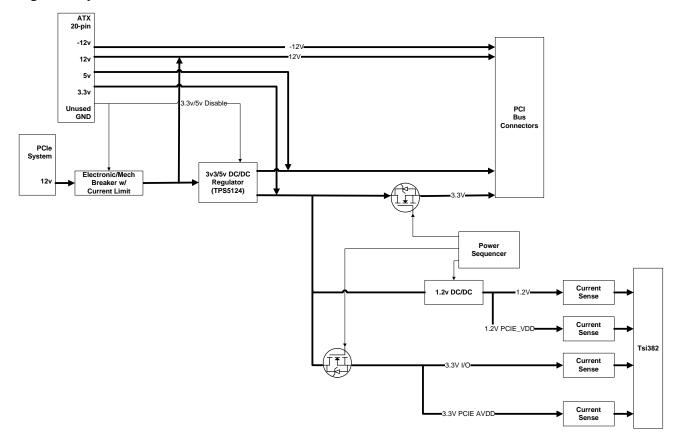

## 1.4.5 PCI Vaux (PCI Auxiliary) Support

PCI connectors are provided with a 3.3V supply to the vaux pins only during operation. There is no support for this power supply in standby mode.

# 1.5 Clock Management

The Tsi382 requires up to two input clocks to operate:

- 25–66 MHz clock for PCI
- 100-MHz reference clock for PCIe

The PCI and PCIe input clocks are briefly discussed.



The Tsi382 supports five PCI clock outputs, PCI\_CLKO[0:4]. The Tsi382 evaluation board demonstrates only PCI\_CLKO[0:1].

#### 1.5.1 PCI

The evaluation board supports master and slave clocking for PCI.

- Master When in master mode, the Tsi382 generates the required PCI clock for all slots.
- Slave When in slave mode, an on-board selectable 25–66 MHz clock generator is used.

On-board resistor muxes are used to multiplex either Tsi382's PCI clock or the external clock generator.

#### 1.5.1.1 PCle

For PCIe clocking, a 100-MHz differential HCSL clock source is required. The clock source is available in two forms:


- Edge connector clock source This clock source synchronizes the system SerDes with the Tsi382.
- On-board 100-MHz reference This clock source can separate the clock domains between the bridge and the root complex.

The two PCIe clock sources are multiplexed with an analog multiplexer to select between the system clock or on-board clock (see Figure 3).

### 1.5.2 System Clock Distribution

The following figure shows the distribution of the system clock on the Tsi382 evaluation board.

Figure 3: System Clock Distribution

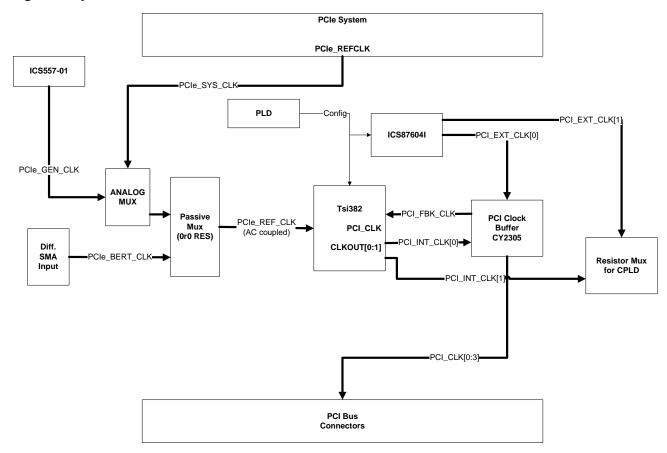

# 1.6 Other Interfaces

#### 1.6.1 JTAG Interface

To support debug and testing of device, JTAG access to the Tsi382 is available using a standard JTAG header for Wiggler connection.



For more information about accessing the Tsi382 using JTAG, see the *Tundra JTAG Register Access Software Application Note* (80A8000\_AN001).

#### 1.6.2 EEPROM Interface

A single EEPROM device socket is available for programming the Tsi382's registers during startup. The socket is in an 8-pin DIP format.

www.tundra.com

#### 1.6.3 GPIO Interface

The GPIO Interface is comprised of the following:

- On-board LEDs on GPIO lines
- Available 100mil Header to send/receive external 3.3V level signals


The following list outlines the connections to GPIO:

- External I/O header:
  - J7.1: NC
  - J7.2: GPIO0
  - J7.3: GPIO1
  - J7.4: GPIO2
  - J7.5: GPIO3
  - J7.6: Connected to ground
- LEDs:
  - D11: GPIO0, active led when driven low
  - D1: GPIO1, active led when driven low
  - D13: GPIO2, active led when driven low
  - D12: GPIO3, active led when driven low

# 1.7 Hardware Reset

The following figure shows the reset options of the Tsi382 evaluation board.

#### Figure 4: Board Reset

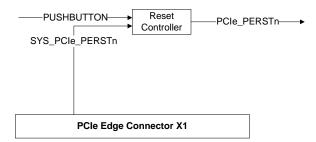

Three levels of reset are available:

- Cold reset This reset is applied during power up. System (card edge) PCIe\_PERSTn is muxed with the board's reset controller.
- Warm reset This reset is activated by a push-button reset on the board.
- Hot reset This reset is activated by the in-band message sent by the root complex. No supporting hardware is necessary.



For more information on cold, warm, and hot reset levels, see the "Resets, Clocking, and Initialization Options" chapter in the *Tsi382 User Manual*.

# 1.8 Logic Analyzer Connectivity

The serial buses have Midbus pads (TMS818 probe) for visibility of SerDes lines using a pre-processor. Each probing pad provides access to the RX and TX segments of a x1 link.

To access the PCI bus, a Nexus PCI interposer card can be used with Tektronix mictor cables. The card can be plugged into any PCI edge slot, or in-line with the device under test.



# 2. Configurable Options

Topics discussed include the following:


- "Switches" on page 19
- "Shunt Jumpers" on page 24
- "Debug Headers" on page 26
- "Connectors" on page 29
- "LEDs" on page 31

# 2.1 Switches

#### 2.1.1 DIP Switches


Switches S1 to S6 combine four, small slide switches identified with numbers 1 to 4 (see Figure 6 for individual switch definition).

Figure 5: DIP Switch Package/Individual Switch Position

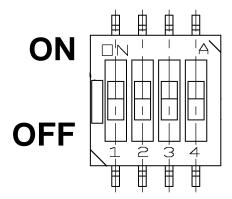

www.tundra.com

Figure 6: Switch Locations

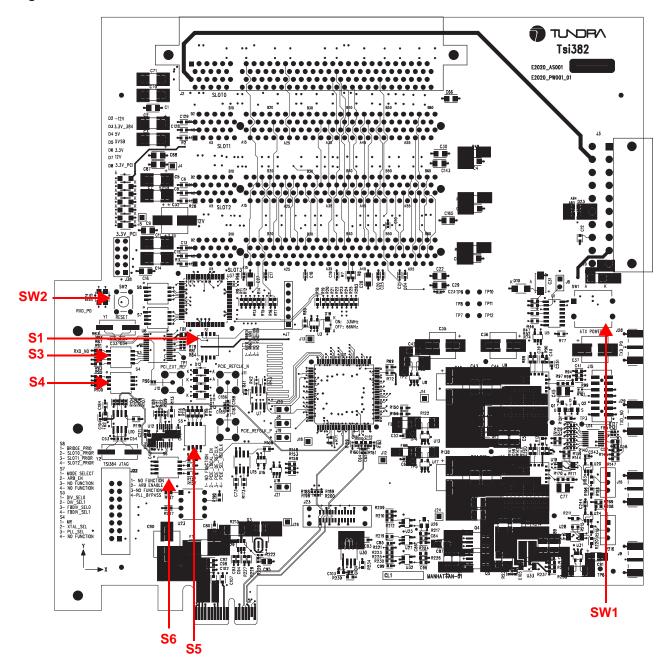

Switch S1 is used to manually set PCI bus modes.

Table 7: S1 Settings

Switch Number	Description	Default State	On/Off Setting
1	M66EN	ON	ON = Connects M66EN to all cards OFF = Forces M66EN high if S1.2 OFF
2	M66EN	OFF	ON = Forces M66EN to GND OFF = Disables forcing M66EN to GND

Switches S3 and S4 are used to set the PCI bus external clock frequency. By default the PCI bus clock source is the Tsi382. The external clock can only be connected to the PCI bus by replacing resistors on the board. When an external clock source is used, an on-board PLL is used to set the proper bus clock frequency. Table 8 contains the clock frequency settings for S3.

Table 8: S3 Settings

Switch Number	Description	Default State	On/Off Setting
1	DIV_SEL0	OFF	[FBDIV_SEL1, FBDIV_SEL0, DIV_SEL1, DIV_SEL0]
2	DIV_SEL1	OFF ON = 1 OFF = 0 0,0,0,0 = x + 4 0,0,0,1 = x + 3	
3	FBDIV_ SEL0		0,0,0,1=x 3
4	FBDIV_ SEL1	OFF	0,0,1,0 = x 2 0,0,1,1 = x 1 0,1,0,0 = x 5.33 0,1,0,1 = x 4 0,1,1,0 = x 2.667 0,1,1,1 = x 1.33 1,0,0,0 = x 6.667 1,0,0,1 = x 5 1,0,1,0 = x 3.33 1,0,1,1 = x 1.67 1,1,0,0 = x 8 1,1,0,1 = x 6 1,1,1,0 = x 4 1,1,1,1 = x 2

www.tundra.com

Switch S4 controls the external clock PLL.

Table 9: S4 Settings

Switch Number	Description	Default State	On/Off Setting
1	PLL Reset	ON	ON = PLL in reset. PLL clock outputs are low.  OFF = PLL is active and clock outputs are enabled.
2	XTAL select	OFF	ON = Clock source for PLL is reference clock from connector J10 OFF = Clock source for PLL is a 25-MHz oscillator.
3	PLL select	OFF	ON = PLL is bypassed.  OFF = PLL is enabled. External clock source is multiplied as per S3 setting
4	No function	-	-

Switch S5 controls the PCIe clock multiplexer and the on-board PCIe reference clock PLL.

Table 10: S5 Settings

Switch Number	Description	Default State	On/Off Setting
1	No Function	-	-
2	PCIe on-board PLL enable	ON	ON = On-board PCIe reference clock PLL is disabled.  OFF = On-board PCIe reference clock PLL is enabled.
3	PCIe clock multiplexer enable	OFF	ON = On-board PCIe clock multiplexer is disabled.  OFF = On-board PCIe clock multiplexer is enabled.
4	PCIe clock source select	OFF	ON = On-board PCIe reference clock is used.  OFF = System PCIe reference clock is used.

Switch S6 configures Tsi382's power-up options.

Table 11: S6 Settings

Switch Number	Description	Default State	On/Off Setting
1	No function	•	-
2	Internal arbiter option	ON	ON = Internal arbiter is enabled OFF = Internal arbiter is disabled

Table 11: S6 Settings (Continued)

Switch Number	Description	Default State	On/Off Setting
3	No function	-	-
4	PCI PLL bypass	ON	ON = PLL is enabled OFF = PLL is bypassed

### 2.1.2 Push Button


SW1 is used to turn the ATX power supply ON. This switch is used only when the Tsi382 evaluation board is powered up with a stand-alone ATX power supply.

SW2 is used to reset the evaluation board. When pushing the reset button, the board is reset the same way a PCIe system reset would reset the board.

# 2.2 Shunt Jumpers

Shunt jumpers control special features on the evaluation board (see Figure 7). These jumpers are explained in the following sub-sections.

**Figure 7: Shunt Jumper Locations** 

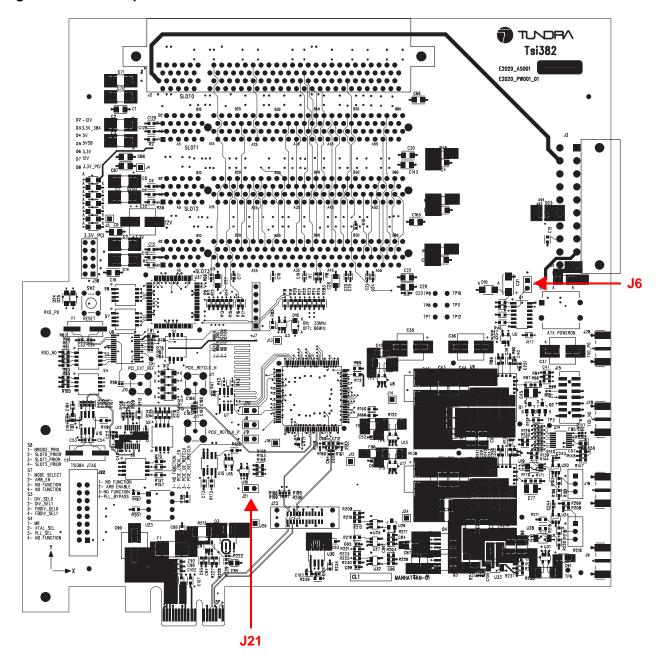

# 2.2.1 J6 Shunt Jumper

J6 is used to bypass the On/Off push button to enable the ATX power supply.

**Table 12: J6 Shunt Jumper Setting** 

Jumper Setting	Default State	Function	
Installed	Removed	Forces ATX power supply ON.	
Removed		Normal operation, ATX power supply is turned On/OFF from push button.	


# 2.2.2 J21 Shunt Jumper

J21 is used to force the Tsi382 into a special debug mode. The Default State for this jumper is ON.

# 2.3 Debug Headers

Debug headers are used to connect to signals on the evaluation board (see Figure 8). This section provides header pinouts.

Figure 8: Debug Header Locations

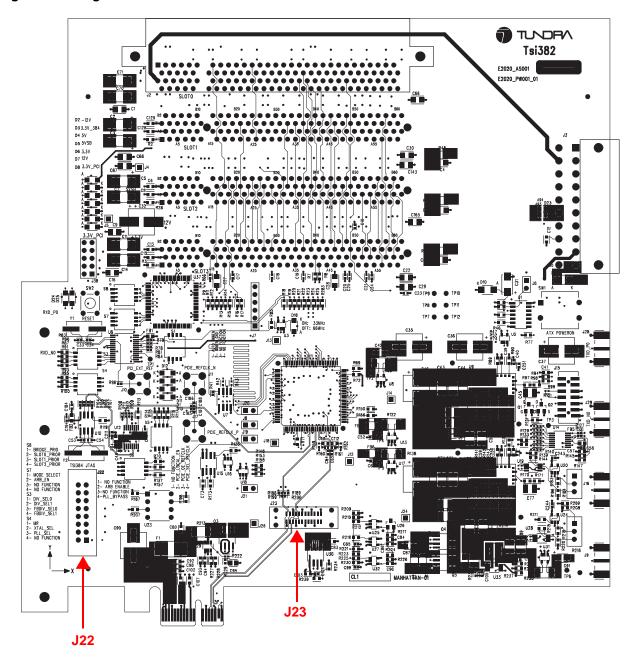

### 2.3.1 J22 Tsi382 JTAG

Table 13: J22 Pin Assignment

Pin Number	Signal Assignment	Pin Location
1	TDO	
2	NC	J22
3	TDI	
4	3.3V	16 15
5	NC	14 13
6	3.3V	12 11
7	TCK	
8	NC	10 9
9	TMS	8 🔵 7
10	NC	6 6 5
11	NC	4  3
12	GND	
13	NC	2 10
14	NC	
15	NC	
16	GND	


# 2.3.2 J23 Logic Analyzer PADs

**Table 14: J23 Pin Assignment** 

Pin Number	Signal Assignment	Pin Location
1	PCIE_RXD_EDG_P0	
2	GND	
3	PCIE_RXD_EDG_N0	
4	PCIE_TXD_EDG_P0	
5	GND	J23
6	PCIE_TXD_EDG_N0	
7	N/C	
8	GND	2 4 6 8 10 12 14 15 18 20 22 24
9	N/C	
10	N/C	
11	GND	
12	N/C	
13	N/C	
14	GND	
15	N/C	
16	N/C	
17	GND	
18	N/C	
19	N/C	
20	GND	
21	N/C	
22	N/C	
23	GND	
24	N/C	

# 2.4 Connectors

**Figure 9: Board Connector Locations** 

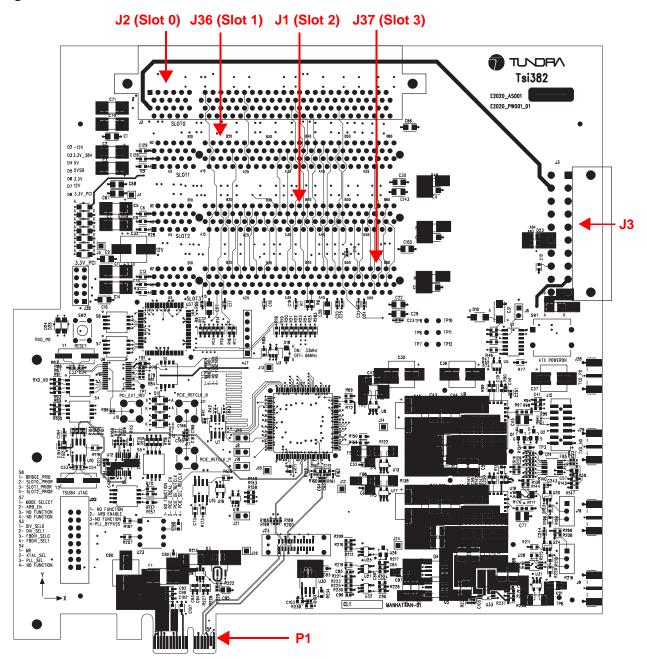

# 2.4.1 J1, J2, J36, J37 Connectors

These connectors are used to connect a plug-in card to the Tsi382's PCI Interface. The connectors' pin assignments are as per the PCI standard for 32-bit connectors.

#### 2.4.2 J3 ATX Power Connector

A standard ATX power supply can be used to power up the board when used stand alone (not plugged into a PCIe system).

**Table 15: J3 Pin Assignment** 

Pin Number	Signal Assignment	J3 Pin Location
1	3.3V	
2	3.3V	J3
3	GND	
4	5V	11 1
5	GND	12 2
6	5V	
7	GND	14 4
8	N.C.	15 5
9	5VSB	16 6
10	12V	17 7
11	3.3V	18 6 8
12	-12V	19 9
13	GND	20 10
14	GND	
15	GND	
16	GND	
17	GND	
18	N.C.	
19	5V	
20	5V	

## 2.4.3 P1 x1 PCle Finger Connector

The pin assignment for the finger connector is as per the PCIe standard. Note that the JTAG signals TDI and TDO are connected together on the board.

# 2.5 LEDs

LEDs D2–D8 indicate voltage supplies that are present on the evaluation board. Depending on whether your board is powered from the PCIe slot or the ATX power connector, the LEDs will indicate the source of power for the board.

Figure 10: LED Locations

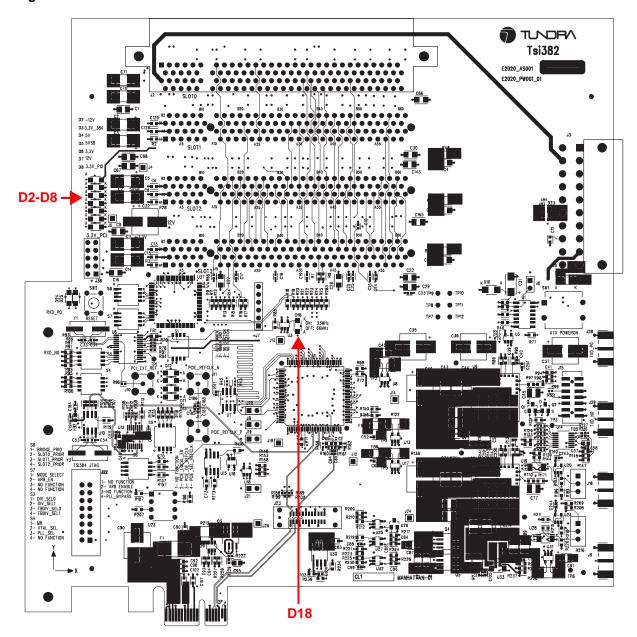


Table 16: D2-D8 LEDs

LED	Name	Description	
D2	-12V	This indicates -12V is applied to the evaluation board through the ATX connector.	
D3	3.3V_384	This indicates 3.3V is applied to the Tsi382.	
D4	5V	This indicates 5V is applied to the evaluation board.	
D5	5VSB	This indicates 5V is applied to the evaluation board through the ATX connector.	
D6	3.3V	This indicates 3.3V is applied to the evaluation board.	
D7	12V	This indicates 12V is applied to the evaluation board.	
D8	3.3VPCI	This indicates 3.3V (power applied to PCI slots) is applied to the evaluation board.	

Table 17: D18 LED

LED	Description	Default State	On/Off Setting
D18	PCI 66 MHz	OFF	OFF = The Tsi382 PCI Interface is operating at 66 MHz. ON = The Tsi382 PCI Interface is operating at 33 MHz.