

RL78/G10

R01AN4758EJ0100

Rev.1.00

May.31.19

Hand dryer Introduction

This application note explains how to realize a hand dryer using RL78/G10

Target Device

RL78/G10

When applying the sample program covered in this application note to another microcontroller, modify the program according to the specifications of the microcontroller and conduct an extensive evaluation of the modified program.

Contents

1.	Specifications	3
1.1	Temperature Sensor	4
1.2	Fan Control circuit	4
1.3	Heater Control circuit	4
1.4	Human Sensor	4
2.	Operation Check Conditions	5
3.	Hardware Descriptions	6
3.1	Hardware Configuration	6
3.2	List of Pins used	6
4.	Software Descriptions	7
4.1	Operation Summary	7
4.2	List of Option Byte Setting	7
4.3	List of Variables	7
4.4	List of Functions (Subroutines)	7
4.5	Function Specifications	8
4.6	Flowcharts	10
4.6.1	Initial Setting Function	10
4.6.2	2 System Function	11
4.6.3	3 I/O Port Setup	12
4.6.4	CPU Clock Setup	13
4.6.5	5 A/D converter Setup	14
4.6.6	S Interrupt Setup	15
4.6.7	Main Processing	16
4.6.8	Initialization Function	17
4.6.9	B Enable Interrupt Setting	17
Revi	ision History	20

1. Specifications

In this application note, when the hand dryer is turned on, external interrupt from the human sensor is enabled. When the human sensor detects the hand, it turns on the fan(P03=H). Also, control heater power according to the room temperature. When the room temperature is below 20°C, turn on the heater(P04=H). When the room temperature exceeds 20°C, turn off the heater(P04=L).

When the human sensor detects no hand, the fan and heater are turned off (P03=L, P04=L).

	Table 1.1 Room	Temperature	and port's	output of List
--	----------------	-------------	------------	----------------

Human Sensor	Room Temperature	Fan	Heater
No detection	_	OFF (P03 = L)	OFF (P04 = L)
With detection	Over 20°C	ON (P03 = H)	ON (P04 = L)
With detection	20°C or Less	ON (P03 = H)	ON (P04 = H)

Figure 1.1 shows the system configuration outline.

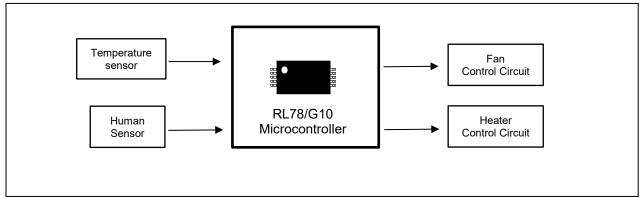


Figure 1.1 the system configuration

1.1 Temperature Sensor

In this application note, a temperature sensor is used having an output that changes in proportion to the change in temperature. When actually designing the circuit, be sure to satisfy the electrical characteristics.

Temperature sensor used:

Measurement temperature range: -40°C to +125°C

Relationship between voltage and temperature: Vout = $10 \text{mV}/^{\circ}\text{C} \times (\text{Temperature}^{\circ}\text{C}) + 500 \text{mV}$

For example, 700 mV at 20°C.

1.2 Fan Control circuit

In this application note, an AC fan motor is used. Since AC fan motor cannot be directly connected to the microcontroller for be connected to AC power, use a photo triac coupler in the fan control circuit. The AC fan motor connected to the AC power supply is controlled ON/OFF with the port output of microcomputer through the photo triac coupler.

1.3 Heater Control circuit

In this application note, the heater is connected to AC power. The heater connected to the AC power supply is controlled ON/OFF with the port output of microcomputer through the photo triac coupler.

1.4 Human Sensor

This application system uses a module with a pyroelectric infrared sensor (hereinafter called a human sensor). According to the specifications, the system begins to monitor all around the sensor at some seconds after power on and changes the output level of the signal to low when an object of approximately 35°C such as a human move. When actually preparing application circuits, make sure to design them to satisfy the electrical characteristics.

2. Operation Check Conditions

The sample code contained in this application note has been checked under the conditions listed in the table below.

Table 2.1 Operation Check Conditions

Item	Description
Microcontroller used	RL78/G10 (R5F10Y47ASP)
Operating frequency	High-speed on-chip oscillator (HOCO) clock: 20 MHz
	CPU/peripheral hardware clock: 20 MHz
Operating voltage	5.0 V (can run on a voltage range of 2.7 V to 5.5 V.)
	SPOR operation: Max 2.90 V at rise(2.76~3.02V)
	Min 2.84 V at fall(2.70~2.96V)
Integrated development	CS+ for CC V6.01.00 from Renesas Electronics Corp.
environment (CS+)	
C compiler (CS+)	CC-RL V1.06.00 from Renesas Electronics Corp.
Integrated development	e² studio V5.1.0.022 from Renesas Electronics Corp.
environment (e ² studio)	
C compiler (e² studio)	CC-RL V1.06.00 from Renesas Electronics Corp.

Caution: The code in this application note applies only to the RL78/G10 (R5F10Y47ASP).

3. Hardware Descriptions

3.1 Hardware Configuration

Figure 3.1 shows an example of the hardware configuration for the system described in this application note.

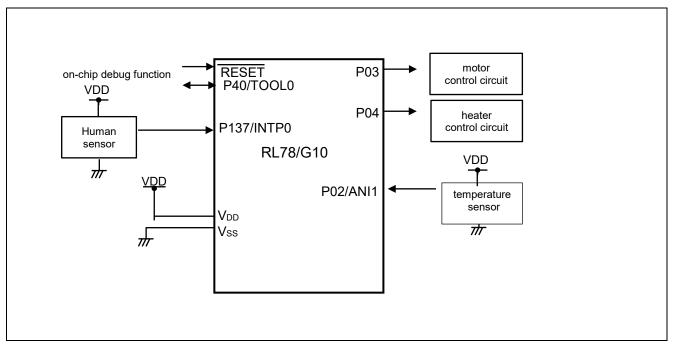


Figure 3.1 the hardware configuration used for this application

Notes: 1. The above figure is a simplified circuit image for showing the outline of the connections. The actual circuit should be designed so that the pins are handled appropriately and that the electrical characteristics are satisfied (input-only ports should be each connected to V_{DD} or V_{SS} via a resistor).

2. V_{DD} must be equal to or greater than the reset release voltage (V_{SPOR}) specified with SPOR.

3.2 List of Pins used

Table 3.1 lists the pins used and their functions.

Table 3.1 Pin Used and Their Functions

Pin Name	I/O	Description
P137/INTP0	Input	Signal input from human sensor
P02/ANI1	Input	Analog input port for temperature
P03	Output	Fan drive port(output)
P04	Output	Heater drive port(output)

4. Software Descriptions

4.1 Operation Summary

In this application note, used port function, A/D converter and interrupt function of RL78/G10.Port function control to the fan and heater of ON/OFF. output voltage from temperature sensor is converted by A/D converter. Interrupt detects the signal from human sensor.

4.2 List of Option Byte Setting

Table 4.1 shows the option byte settings.

Table 4.1 Option Byte Settings

Address	Setting	Description
000C0H	11101111B	Disables the watchdog timer. (Stops counting after the release from
		the reset state.)
000C1H	11100111B	SPOR detection voltage: 2.90 V at fall; 2.84 V at rise
000C2H	11111001B	HOCO: 20 MHz
000C3H	10000101B	Enables the on-chip debugger.

4.3 List of Variables

Table 4.2 lists the global variables.

Table 4.2 Global Variables

Туре	Variable Name	Contents	Function Used
int16_t	temperature_value	Temperature data	main()
uint8_t	g_flag_Intp	Interrupt	main()

4.4 List of Functions (Subroutines)

lists the functions (subroutines).

Function (Subroutine) Name	Outline
R_MAIN_UserInitnote	User application initialization
R_ADC_Start	A/D converter start
R_ADC_Get_Result()	Function of getting temperature data

Note These functions are automatically generated by the integrated development environment.

4.5 Function Specifications

This section gives the specifications of the functions used in the sample program.

[Function Name] R_MAIN_UserInit		
Synopsis	User Application Initialization	
Header	r_cg_macrodriver.h	
	r_cg_userdefine.h	
Declaration	void R_MAIN_UserInit(void)	
Explanation	Performs initialization necessary for the operation of the application.	
Arguments	None	
Return value	None	
Remarks	None	

[Function Name] R_ADC_Start		
Synopsis	A/D converter conversion start	
Header	r_cg_macrodriver.h	
	r_cg_adc.h	
	r_cg_userdefine.h	
Declaration	void R_ADC_Start(void)	
Explanation	anation Enables A/D converter conversion.	
Arguments None		
Return value None		
Remarks	None	

[Function Name] R_ADC_Get_Result		
Synopsis	Temperature data get	
Header	r_cg_macrodriver.h	
	r_cg_adc.h	
	r_cg_userdefine.h	
Declaration	void R_ADC_Get_Result (void)	
Explanation	A/D converter result	
Arguments	None	
Return value	None	
Remarks	None	

[Function Name] R_INTC0_Start		
Synopsis	Interrupt start	
Header	r_cg_macrodriver.h	
	r_cg_intp.h	
	r_cg_userdefine.h	
Declaration	void R_INTC0_Start (void)	
Explanation	Interrupt start	
Arguments None		
Return value None		
Remarks	None	

[Function Name] main			
Synopsis	Main function		
Header	_		
Declaration	Main processing function for the sample codes		
Explanation	None		
Arguments	None		
Return value	None		

4.6 Flowcharts

Figure 4.1 shows an overall flow of the sample program described in this application note.

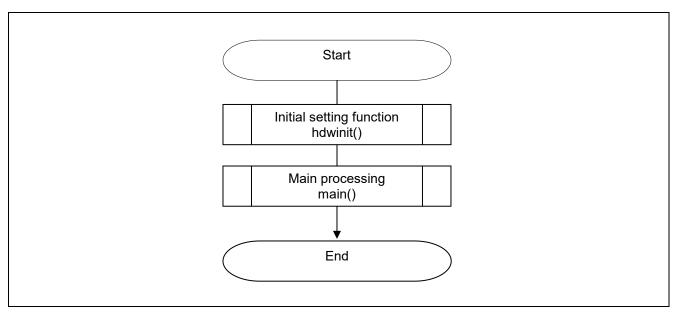


Figure 4.1 the overall flow

4.6.1 Initial Setting Function

Figure 4.2 shows the flowchart of the initial setting function.

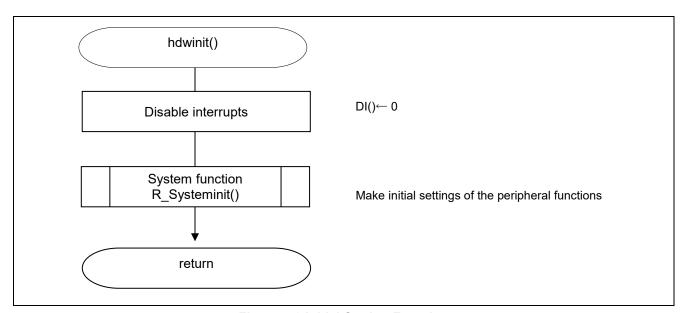


Figure 4.2 Initial Setting Function

4.6.2 System Function

Figure 4.3 shows the flowchart of the system function.

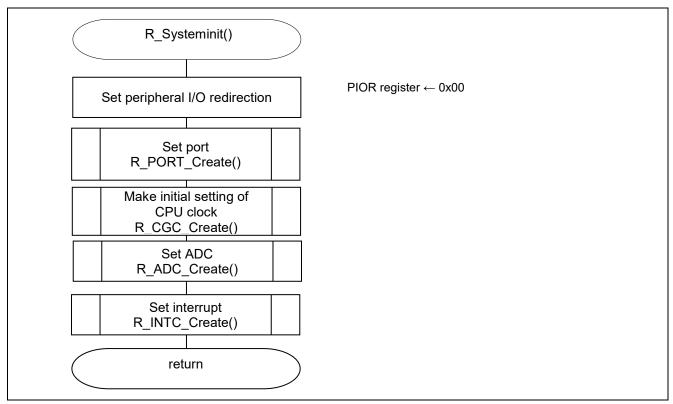


Figure 4.3 System Function

4.6.3 I/O Port Setup

Figure 4.4 shows the flowchart for setting up the I/O ports.

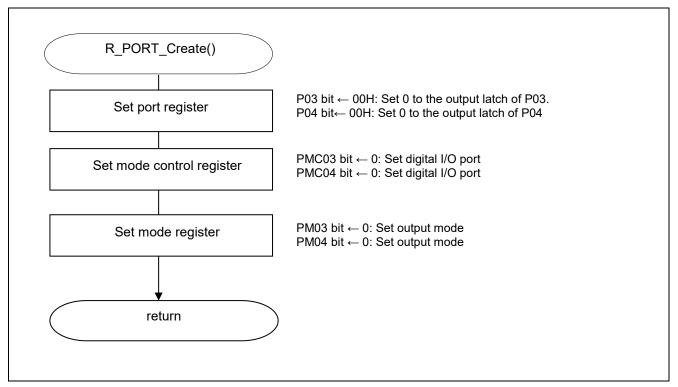


Figure 4.4 I/O Port Setup

Notes: 1. For details on register setting when using the ports as the alternate functions of the peripheral functions, refer to the RL78/G10 User's Manual: Hardware.

2. Provide proper treatment for unused pins so that their electrical specifications are observed. Connect each of unused input-only ports to VDD or VSS via a separate resistor.

4.6.4 CPU Clock Setup

Figure 4.5 shows the flowchart for setting up the CPU clock.

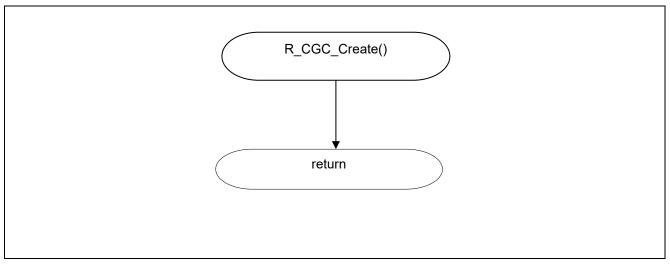


Figure 4.5 CPU Clock Setup

4.6.5 A/D converter Setup

Figure 4.6 shows the flowchart for setting up the A/D converter.

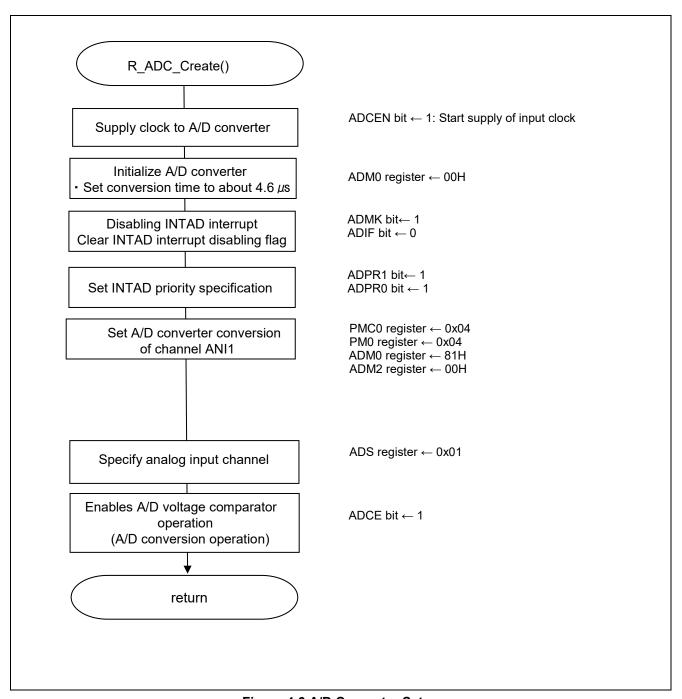


Figure 4.6 A/D Converter Setup

4.6.6 Interrupt Setup

Figure 4.7 shows the flowchart for setting up the interrupt.

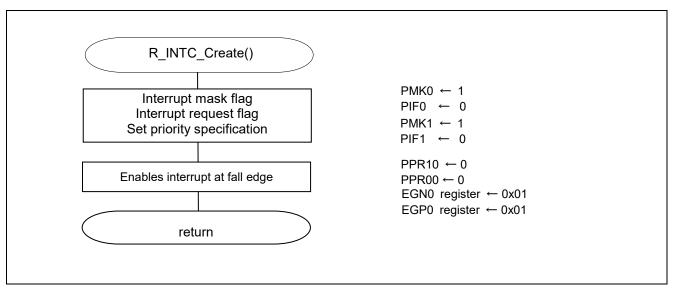


Figure 4.7 Interrupt Setup

4.6.7 Main Processing

Figure 4.8 shows the flowchart of the main processing.

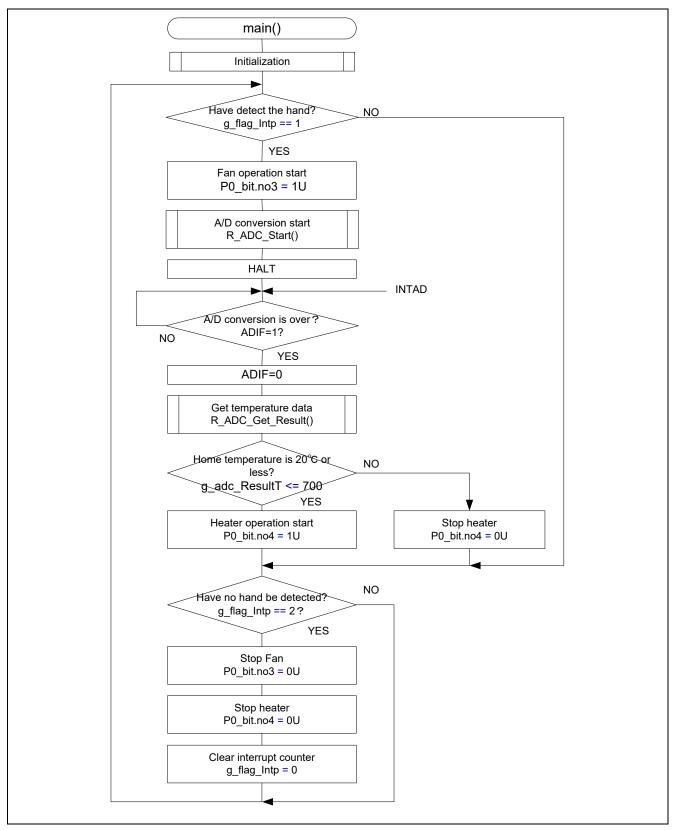


Figure 4.8 Main Processing

4.6.8 Initialization Function

Figure 4.9 shows the flowchart for setting the initialization.

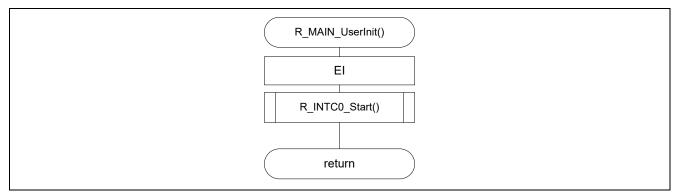


Figure 4.9 Initialization Function

4.6.9 Enable Interrupt Setting

Figure 4.10 shows the flowchart for setting the enable interrupt.

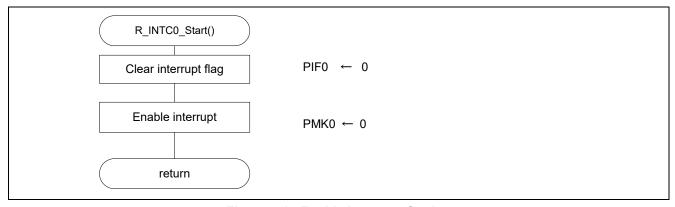


Figure 4.10 Enable Interrupt Setting

4.6.10 A/D Conversion Start Setting

Figure 4.11 shows the flowchart for setting the A/D conversion start.

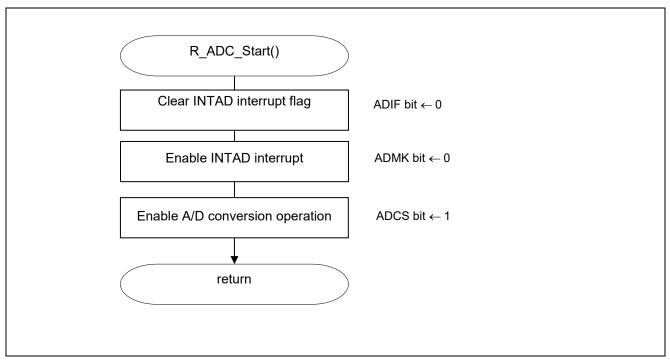


Figure 4.11 A/D Converter Operation Start Setting

4.6.11 Temperature Data Acquisition Processing

Figure 4.12 shows the flowchart for temperature data acquisition processing.

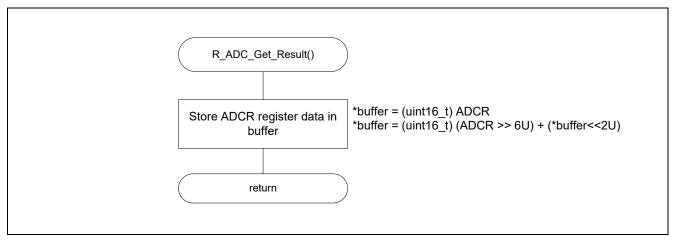


Figure 4.12 Temperature Data Acquisition Processing

Revision History

		Description	
Rev.	Date	Page	Summary
1.00	May.31.2019	-	-

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

- 6. Voltage application waveform at input pin
 - Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).
- 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not quaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

- 1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
- 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
- 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
- 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

- 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
- 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
- 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
- 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
- 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit: www.renesas.com/contact/