

# **Application Note**

# 78K0

**8-Bit Single-Chip Microcontrollers** 

The Usage of POC and LVI

78K0/Kx2 Series

78K0/Fx2 Series

78K0/Lx2 Series

### **NOTES FOR CMOS DEVICES**

### 1. VOLTAGE APPLICATION WAVEFORM AT INPUT PIN

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between VIL (MAX) and VIH (MIN) due to noise, etc., the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between VIL (MAX) and VIH (MIN).

# 2. HANDLING OF UNUSED INPUT PINS

Unconnected CMOS device inputs can be cause of malfunction. If an input pin is unconnected, it is possible that an internal input level may be generated due to noise, etc., causing malfunction. CMOS devices behave differently than Bipolar or NMOS devices. Input levels of CMOS devices must be fixed high or low by using pull-up or pull-down circuitry. Each unused pin should be connected to VDD or GND via a resistor if there is a possibility that it will be an output pin. All handling related to unused pins must be judged separately for each device and according to related specifications governing the device.

### 3. PRECAUTION AGAINST ESD

A strong electric field, when exposed to a MOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop generation of static electricity as much as possible, and quickly dissipate it when it has occurred. Environmental control must be adequate. When it is dry, a humidifier should be used. It is recommended to avoid using insulators that easily build up static electricity. Semiconductor devices must be stored and transported in an antistatic container, static shielding bag or conductive material. All test and measurement tools including work benches and floors should be grounded. The operator should be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions need to be taken for PW boards with mounted semiconductor devices.

## 4. STATUS BEFORE INITIALIZATION

Power-on does not necessarily define the initial status of a MOS device. Immediately after the power source is turned ON, devices with reset functions have not yet been initialized. Hence, power-on does not guarantee output pin levels, I/O settings or contents of registers. A device is not initialized until the reset signal is received. A reset operation must be executed immediately after power-on for devices with reset functions.

# 5. INPUT OF SIGNAL DURING POWER OFF STATE

Do not input signals or an I/O pull-up power supply while the device is not powered. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Input of signals during the power off state must be judged separately for each device and according to related specifications governing the device.

# **Disclaimer**

- The information in this document is current as of July, 2007. The information is subject to change without
  notice. For actual design-in, refer to the latest publications of NEC Electronics data sheets or data books,
  etc., for the most up-to-date specifications of NEC Electronics products. Not all products and/or types are
  available in every country. Please check with an NEC Electronics sales representative for availability and
  additional information.
- No part of this document may be copied or reproduced in any form or by any means without the prior
  written consent of NEC Electronics. NEC Electronics assumes no responsibility for any errors that may
  appear in this document.
- NEC Electronics does not assume any liability for infringement of patents, copyrights or other intellectual
  property rights of third parties by or arising from the use of NEC Electronics products listed in this
  document or any other liability arising from the use of such products. No license, express, implied or
  otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Electronics
  or others.
- Descriptions of circuits, software and other related information in this document are provided for
  illustrative purposes in semiconductor product operation and application examples. The incorporation of
  these circuits, software and information in the design of a customer's equipment shall be done under the
  full responsibility of the customer. NEC Electronics assumes no responsibility for any losses incurred by
  customers or third parties arising from the use of these circuits, software and information.
- While NEC Electronics endeavors to enhance the quality, reliability and safety of NEC Electronics
  products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated
  entirely. To minimize risks of damage to property or injury (including death) to persons arising from
  defects in NEC Electronics products, customers must incorporate sufficient safety measures in their
  design, such as redundancy, fire-containment and anti-failure features.
- NEC Electronics products are classified into the following three quality grades: "Standard", "Special" and "Specific".
  - The "Specific" quality grade applies only to NEC Electronics products developed based on a customer-designated "quality assurance program" for a specific application. The recommended applications of an NEC Electronics product depend on its quality grade, as indicated below. Customers must check the quality grade of each NEC Electronics product before using it in a particular application.
  - "Standard": Computers, office equipment, communications equipment, test and measurement

equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots.

"Special": Transportation equipment (automobiles, trains, ships, etc.), traffic control systems,

anti-disaster systems, anti-crime systems, safety equipment and medical equipment

(not specifically designed for life support).

"Specific": Aircraft, aerospace equipment, submersible repeaters, nuclear reactor control

systems, life support systems and medical equipment for life support, etc.

The quality grade of NEC Electronics products is "Standard" unless otherwise expressly specified in NEC Electronics data sheets or data books, etc. If customers wish to use NEC Electronics products in applications not intended by NEC Electronics, they must contact an NEC Electronics sales representative in advance to determine NEC Electronics' willingness to support a given application.

### (Note)

(1) "NEC Electronics" as used in this statement means NEC Electronics Corporation and also includes its majority-owned subsidiaries.

(2) "NEC Electronics products" means any product developed or manufactured by or for NEC Electronics (as defined above).

M8E 02. 11-1

# **Regional Information**

Some information contained in this document may vary from country to country. Before using any NEC product in your application, please contact the NEC office in your country to obtain a list of authorized representatives and distributors. They will verify:

- Device availability
- Ordering information
- Product release schedule
- Availability of related technical literature
- Development environment specifications (for example, specifications for third-party tools and components, host computers, power plugs, AC supply voltages, and so forth)
- Network requirements

In addition, trademarks, registered trademarks, export restrictions, and other legal issues may also vary from country to country.

### NEC Electronics America Inc.

Santa Clara, California
Tel: 408-588-6000
800-366-9782
Fax: 408-588-6130
800-729-9288

### NEC Electronics (Europe) GmbH

Duesseldorf, Germany Tel: 0211-65 030 Fax: 0211-65 03 1327

### Sucursal en España

Madrid, Spain Tel: 091-5042787 Fax: 091-5042860

# Succursale Française

Vélizy-Villacoublay, France Tel: 01-30-67 58 00 Fax: 01-30-67 58 99

### Filiale Italiana

Milano, Italy Tel: 02-66 75 41 Fax: 02-66 75 42 99

### Branch The Netherlands

Eindhoven, The Netherlands Tel: 040-244 58 45 Fax: 040-244 45 80

### Branch Sweden

Taeby, Sweden Tel: 08-63 80 820 Fax: 08-63 80 388

### United Kingdom Branch

Milton Keynes, UK Tel: 01908-691-133 Fax: 01908-670-290

# NEC Electronics Hong Kong Ltd.

Hong Kong Tel: 2886-9318 Fax: 2886-9022/9044

### NEC Electronics Hong Kong Ltd.

Seoul Branch Seoul, Korea Tel: 02-528-0303 Fax: 02-528-4411

### NEC Electronics Singapore Pte. Ltd.

Singapore Tel: 65-6253-8311 Fax: 65-6250-3583

### NEC Electronics Taiwan Ltd.

Taipei, Taiwan Tel: 02-2719-2377 Fax: 02-2719-5951

# Introduction

# **Target Readers**

This application note is intended for users who understand the basic functions the 78K0/Fx2/Kx2/Lx2 family products and who will use those products to design application systems.

### **Purpose**

The purpose of this application note is to help the user to understand the functionality and the benefit of the Power On Clear (POC) and the Low Voltage Detector (LVI). These features are implemented in all microcontrollers of the 78K0/Fx2/Kx2 and Lx2 – Subseries. The handling and usage shown in this document are for reference, only. The correct operation is not guaranteed if these samples are implemented as they are described here. The user has to adapt the usage and handling of both functions to the application specific needs.

### Organization

This application note consists of the following main sections:

- Functionality of the POC
- Functionality of the LVI
- Software example how to use the LVI

### **How to Read this Application Note**

It is assumed that the reader of this application note has a general knowledge in the fields of electrical engineering, logic circuits and microcontrollers.

- To gain a general understanding of functions:
- → Read this application note in the order of the **CONTENTS**. The mark "<R>" shows major revised points. The revised points can be easily searched by copying an "<R>" in the PDF file and specifying it in the "Find what:" field.
- To learn more about the 78K0/Fx2/Kx2/Lx2's hardware functions:
- $\rightarrow$  See the user's manual for each 78K0 product series .

### **Conventions**

Data significance: Higher digits on the left and lower digits on the right Active low representation: xxx (overscore over pin or signal name)

Note: Footnote for item marked with Note in the text

Caution: Information requiring particular attention

**Remark**: Supplementary information Numeral representation: Binary.....xxxx or xxxxB

Decimal .....xxxx Hexadecimal .....xxxxH

# **Table of Contents**

CHAPTER 1	RELATED DEVICES	8
CHAPTER 2	OVERVIEW	9
2.1 Power	On Clear (POC) – Functional Descripton	9
2.2 Low V	oltage Detector (LVI) – Functional Descripton	10
CHAPTER 3	OPERATION	11
3.1 Function	on of Power On Clear (POC)	11
	hort Software Example to Setup the Option Byte	
3.2 Function	on of Low Voltage Detector (LVI)	13
	/IM register	
3.2.2 L\	VIS register	13
CHAPTER 4	SOFTWARE FUNCTIONS	14
4.1 Softwa	are Example for the Low Voltage Detector (LVI)	14
4.2 Descri	ption – Software Example	14
4.3 LVI So	ftware Example – Source Code	15
CHAPTER 5	VALID SPECIFICATION	18
CHAPTER 6	REVISON HISTORY	19

# **List of Figures**

Figure 2-1.	Exmple for an external RESET circuit	9
Figure 2-2.	Example for an external LVI input circuit	10

# CHAPTER 1 RELATED DEVICES

All devices listed below are incorporating the same Power On Clear (POC) and the same Low Voltage Detector (LVI) function.

Consequently, this application note can be used as a reference example for all devices from this list:

# **Device List::**

78K0/KB2:	μPD78F050x, μPD78F0503D
78K0/KC2:	μPD78F051x, μPD78F0513D, μPD78F0515D
78K0/KD2:	μPD78F052x, μPD78F0527D
78K0/KE2:	μPD78F053x, μPD78F0537D
78K0/KF2:	μPD78F054x, μPD78F0547D
78K0/FC2:	μPD78F0881, μPD78F0882, μPD78F0883
78K0/FC2:	μPD78F0884, μPD78F0885, μPD78F0886
78K0/FE2:	μPD78F0887, μPD78F0888, μPD78F0889, μPD78F0890
78K0/FF2:	μPD78F0891x, μPD78F08892, μPD78F0893
78K0/LE2:	μPD78F036x, μPD78F0363D
78K0/LF2:	μPD78F037x, μPD78F0376D
78K0/LF2:	μPD78F038x, μPD78F0386D
78K0/LG2:	μPD78F039x, μPD78F0397D

# CHAPTER 2 OVERVIEW


# 2.1 Power On Clear (POC) – Functional Descripton

All devices in the products families listed before incorporate a Power On Clear (POC) function. This function generates a proper internal RESET signal while the supply voltage (VDD) for the microcontroller is switched on. This internal RESET signal generation will eliminate the need for a complex external RESET circuitry.

Although, a proper internal RESET signal will be generated by the POC function, an external pull-up resistor must be always connected to the RESET input pin of a microcontroller. Otherwise the microcontroller will not operate in the specified condition. The external RESET input has still the priority to generate an internal RESET signal if a low level is applied to the RESET input pin. Needless to say, the external RESET input has Schmitt-Trigger behaviour.

A typical example for an external pull-up resistor is given here:

Figure 2-1. Exmple for an external RESET circuit

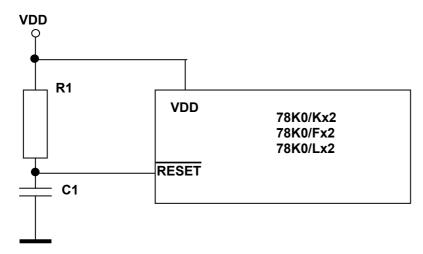

Recommended values for R1 and C1: R1 = 100K ... 10K, C1 = 1nF ... 10nF

The purpose of capacitor C1 is to eliminate some spikes (maybe generated by EMI), which could cause some unexpected internal RESET's.


Depending on the supply voltage rise time (if the rise time is slow or fast), there are two configurations possible for the POC function. In order to adapt the correct Power On Reset function to each and every rise time of the VDD, an Option Byte must be set during the virgin flash programming. There are two possible examples given in Chapter 3.1

# 2.2 Low Voltage Detector (LVI) – Functional Descripton

All devices in the products families listed before incorporate a Low Voltage Detector (LVI), which allows the device to detect if the supply voltage falls below a certain threshold. When the supply voltage is crossing the dedicated (in advanced programmed) threshold voltage in falling direction either an internal interrupt (LVI Interrupt) or an internal RESET signal can be generated, automatically. Up to 16 different threshold voltage levels are possible to select (i.e. 4.24V down to 1.93V). For details, please refer to the corresponding device User's Manual.

Beside the programmable internal threshold voltages the devices also support an external input with a fixed threshold voltage [1.21V (typ)] The external LVI input (EXLVI/P120) can be used to detect a voltage fail prior to the power supply of the microcontroller (VDD) will disappear. Due to the fact, the power supply for the microcontroller (VDD) is usually buffered by an external capacitor (C1 > 10uF), the voltage will decrease more slow then  $V_{Batt}$ . The LVI interrupt will be generated when the input voltage (V2) to EXLVI is below 1.21V (i.e.  $V_{Batt}$  will fail). In this case, the microcontroller can still operate, because the microcontroller is buffered by the voltage supplied by the capacitor C1. An example for possible application circuit is given here:

Figure 2-2. Example for an external LVI input circuit

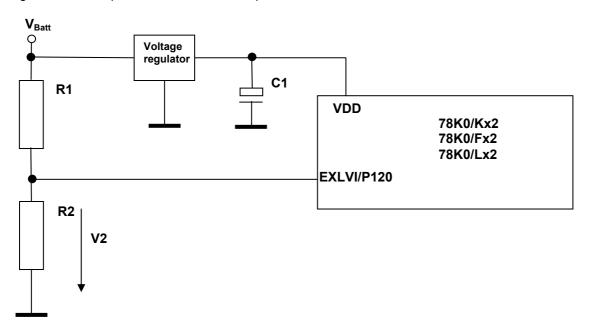

Normal operation:  $V2 = V_{Batt} \times R2 / (R1 + R2) > 1.31V$ LVI execution:  $V2 = V_{Batt} \times R2 / (R1 + R2) < 1.11V$ 

The main intention of this application note is to give the user some basic ideas for the operation of the Low Voltage Detector (LVI).

The Low Voltage Detector (LVI) can also be used to confirm if the supply voltage for the microcontroller has reached a certain level. The confirmation for the correct voltage might be necessary to be executed before an external oscillator is switched on or before an A/D conversion is started or before an EEPROM emulation can be executed? A software example to confirm if the supply voltage has reached the specified level is given in the Chapter 3.2.

### CHAPTER 3 OPERATION

# 3.1 Function of Power On Clear (POC)

The Power On Clear (POC) release voltage is fixed for all products to 1.59V (+/- 150mV). On the other hand, the real supply voltage range for a correct CPU operation is starting at 1.8V (VDD = 1.8V to 5.5V). Therefore, to make sure that the supply voltage will reach at least 1.8V or more, the rise time of the supply voltage must fulfil a certain requirement. In other words, the rise time of the supply voltage (VDD) must be at least 0.5V/ms or faster. In case, the supply voltage will rise up slower then 0.5V/ms, there is a possibility to keep the CPU in a kind of a wait mode until the supply voltage reaches a level of 2.7V.

The user can select by a corresponding setting of a flash Option Byte on which voltage level the CPU should start operation. In any case, the CPU will start operation using the internal 8MHz oscillator. The relevant option byte is located on a fixed ROM address at 0x0081. Please refer to the corresponding device User's Manual, Chapter "Option Byte"

### **Condition 1:**

The supply voltage in the user application will rise up with 0.5V/ms or faster (i.e. 1V/ms, 2V/ms, ...) In this case, the option byte (called "POCMODE") can be set to  $\rightarrow$  00h Address: 0x0081 = 0x00;

In this case, the CPU will start operation at > 1.8V, because there is in any case an internal wait time [approx. 3.2ms (typ)] where the internal voltage regulator (REGC) becomes stable after the RESET was released by the POC.

# **Condition 2:**

The supply voltage in the user application will rise up with less then 0.5V/ms or slower (i.e. 0.4V/ms, 0.3V/ms, 0.2V/ms, ...)

In this case, the option byte (called "POCMODE") must be set to  $\rightarrow$  01h

Address: 0x0081 = 0x01;

In this case, the CPU will not start operation before the supply voltage reaches 2.7V or more.

### Remark:

After the CPU has started operation at 2.7V or more, the LVI can be used to program a threshold voltage even less then 2.7V (down to 1.93V) to enter a defined state (i.e LVI Interrupt generation or LVI RESET generation) in case the supply voltage false down.

# 3.1.1 Short Software Example to Setup the Option Byte.

Here is a software example how to define the Option Bytes for the Watchdog Timer and the POCMODE using the IAR Workbench:

```
/* -----
** option byte definitions
*/
#pragma constseg =OPTBYTE
 _root const unsigned char optbyte [2] = \{0x6E, 0x01\};
//
//
       WDT Window size = 100%
//
      WDT State = Stopped
//
       WDT Interval time = fosc/2**17
//
       Internal low speed oscillator (240kHz) can be stopped by software
//
11
       POCMODE = 0x01; The CPU will be released at 2.7V
       POCMODE = 0x00; The POC will release the CPU at > 1.8V
//
//
#pragma constseg = default
```

# 3.2 Function of Low Voltage Detector (LVI)

The Low Voltage Detector (LVI) can either generate an internal interrupt or it can alternatively generate an internal RESET signal. The user can select between two sources which one should trigger the LVI function:

- An internal programmable threshold voltage selected by the LVIS Register
- An external threshold voltage selected by the EXLVI/P120 input. In this case, the threshold voltage is fixed to 1.21V (+/- 100mV)

# 3.2.1 LVIM register

The selection between interrupt or internal RESET generation is performed by the LVIMD flag of the LVIM register. If LVIMD=0 the interrupt generation is selected, if LVIMD=1 internal RESET generation is selected.

Further flags of the LVIM register are:

LVION = 0 → disable LVI operation

LVION = 1 → enable LVI operation

LVISEL = 0 → detects level of VDD

LVISEL = 1 → detects level of EXLVI input [1.21V (typ)]

LVIF = 0 → Will indicate the supply voltage VDD (or the input voltage to EXLVI) > detection voltage

LVIF = 1 → Will indicate the supply voltage VDD (or the input voltage to EXLVI) < detection voltage

# 3.2.2 LVIS register

The specific threshold voltage can be selected by the LVI - Register. The minimum threshold voltage is 1.93V and the maximum threshold voltage is 4.24V. In between these levels there are 14 other threshold voltage levels selectable. For more details please refer to the corresponding User's Manual.

### Caution:

Any write access to the LVIS - or LVIM - Register must be done when the Low Voltage Detection function is disabled by **(LVION = 0)** 

# CHAPTER 4 SOFTWARE FUNCTIONS

# 4.1 Software Example for the Low Voltage Detector (LVI)

The enclosed software example shows a possible solution to confirm by the LVI function that the power supply of the microcontroller has reached its specified voltage range before the external oscillator (i.e. 20MHz) is switched on by the user.

# 4.2 Description – Software Example

The below given software example will execute the following steps:

- Check for the RESET source, was it a RESET by the LVI or was it any other RESET source?
- Initialize the LVIS and the LVIM register in case of any other RESET
- Start up the external oscillator (i.e. 20MHz) when VDD > 4.0V
- Wait for the external oscillator to become stable
- Switch peripheral and CPU clock to the external oscillator clock
- Switch of the internal high-speed oscillator (8MHz) to save some current

# 4.3 LVI Software Example - Source Code

# **General Conditions:**

```
1. After any kind of RESET release
2. The Option Byte for the POC mode selection (0x0081) is 0x00 or 0x01
                // After Power On Reset, the CPU operation will be released when VDD > 1.8V)
 (POCMODE = 0)
 (POCMODE = 1
                // After Power On Reset, the CPU operation will be released when VDD > 2.7V)
void LVI ExtClock Init (void)
           // Here the CPU will operate with the internal High Speed oscillator (8MHz)
   LVIMK = 1;
                          // Disable the LVI Interrupt
   if(LVION == 0)
                          // Check if LVION = 1? If yes, it was a RESET caused by the LVI.
                          // In this case, the LVIM and LVIS register initialization must be skipped!!
       LVISEL = 0; // Detect the level of the supply voltage (VDD)
       LVIS = 0x00; // Select a detection voltage of VDD > 4.24V
       LVION = 1;
                          // Enable the voltage detection function
                            // f<sub>b</sub> --> 240kHz internal Low-speed oscillator
  TMHMD1 = 0x70;
                            // set period for > 10us to wait for LVI operation stabilization (refer to UM)
  CMP01 = 0x05;
  TMIFH1 = 0;
                           // Clear TMIFH1 request flag
  TMHE1 = 1;
                          // Enable Timer operation
  While (TMIFH1 !=1); // Wait for > 10us to secure that the LVI is working correct
       no operation();
  TMHE1 = 0;
                          // Stop Timer
  TMIFH1 = 0;
                           // Clear the Timer Request flag
```

```
while (LVIF == 1); // Wait for VDD to become 4.24V, or more
                          // For VDD < 4.24V the Low-voltage detection flag (LVIF) is "1"
       no operation();
 LVIIF = 0;
                          // Clear the LVI Interrupt request flag
// Now, we will start the external 20MHz resonator
                          // For fx > 10MHz ---> AMPH = 1
 AMPH
        = 1;
                          // For fx <= 10MHz ---> AMPH = 0
                          // Don't use external active clock
  EXCLK = 0;
 OSCSEL = 1;
                          // Enable external Resonator (crystal or ceramic) at X1, X2
                         // Allow external clock to operate
 MOC = 0x00;
                      // Wait for main clock to become stable (3.27ms @ 20MHz)
  while (OSTC < 0x1F)
 __no_operation();
}
  OSTS = 0x05;
                          // Select an oscillator stabilization
                          // time after a STOP mode release
 XSEL = 1;
                         // Switch the peripheral clock to external clock
 MCM0 = 1;
                         // Switch CPU clock to external clock
  while (MCS != 1)
                         // Wait for the real switch from internal
  __no_operation();
                          // clock (8MHz) to the external system clock
```

# CHAPTER 5 VALID SPECIFICATION

Item	Date published	Document No.	Document Title
1	Jul 2007 or later	U17328E	78K0/KB2 User's Manual
2	Feb 2007 or later	U17336E	78K0/KC2 User's Manual
3	May 2006 or later	U17312E	78K0/KD2 User's Manual
4	May 2006 or later	U17260E	78K0/KE2 User's Manual
5	May 2006 or later	U17397E	78K0/KF2 User's Manual
6	Mar 2007 or later	U17555E	78K0/FC2 User's Manual
7	Mar 2007 or later	U17554E	78K0/FE2 User's Manual
8	Mar 2007 or later	U17553E	78K0/FF2 User's Manual
9	Jul 2006 or later	U17734E	78K0/LE2 User's Manual
10	Aug 2006 or later	U17504E	78K0/LF2 User's Manual
11	Sep 2006 or later	U17473E	78K0/LG2 User's Manual

# CHAPTER 6 REVISON HISTORY

Item	Date published	Document No.	Comment
1	Jul 2007	U18876EE1V0AN00	1 <sup>st</sup> Release