

# Smart Configurator for RL78 V1.2.0

R20UT4874EC0103

Rev.1.03

Jan.20.22

## Release Note

### Introduction

Thank you for using the Smart Configurator for RL78.

This document describes the restrictions and points for caution. Read this document before using the product.

### Contents

1. Introduction.....	3
1.1 System requirements.....	3
1.1.1 PC.....	3
1.1.2 Development Environments .....	3
2. Support List .....	4
2.1 Support Devices List.....	4
2.2 Support Components List.....	5
2.3 New support .....	7
2.3.1 Import / Export component configuration feature is supported .....	7
2.3.2 The default value for preference setting "Creation date" has been updated. ....	7
2.3.3 Added the option to disable the generation of PDF files .....	8
2.3.4 Code generation operation will be triggered when build project .....	8
2.3.5 BSP revision update and version check supported.....	9
2.3.6 Improvement for Overview page .....	9
3. Changes .....	10
3.1 Correction of issues/limitations.....	10
3.1.1 Fixed the UARTA callback function calling for 1-byte transmission.....	10
3.2 Specification changes .....	11
3.2.1 Improvement for deleting E20 emulator selection in on-chip debug setting .....	11
3.2.2 Adding output disable code to <i>R_Config_UARTn_Stop()</i> function .....	12
3.2.3 Improvement for no <i>R_Systeminit()</i> function declaration issue in <i>r_cg_macrodriver.h</i> .....	12
3.2.4 Improvement for Smart Configurator can be opened when porting the e <sup>2</sup> studio project into CS+ ....	12
3.2.5 Improvement for "Input buffer" function in PORT .....	12
3.2.6 New API added for ELCL .....	13
3.2.7 Improvement for IIC Communication code.....	13
3.2.8 Improvement for ELCL initialization function calling.....	14
3.2.9 Improvement for pin allocation to use "PIORn=0" as default selection.....	14
3.2.10 Improvement for the register banks can be the same if they have the same priority .....	14

3.2.11	Improvement for reserving RAM area when On-Chip debug trace function used .....	15
3.2.12	Improvement for supporting LLVM C++ project .....	17
3.2.13	Improvement for UARTA transfer rate range .....	17
3.2.14	Improvement for avoiding create an entry in DTC reserved RAM area of the on-chip debug trace... ..	17
4.	List of RENESAS TOOL NEWS AND TECHNICAL UPDATE .....	18
5.	Points for Limitation .....	19
5.1	List of Limitation.....	19
5.2	Details of Limitation .....	19
5.2.1	Note on extra help document issue.....	19
5.2.2	Note on the clock setting in UART transmission/reception function .....	19
5.2.3	Note on using communication components simultaneously .....	20
5.2.4	Note on opening smart configurator in CS+ .....	20
5.2.5	Note on Smart Configurator Component setting in e <sup>2</sup> studio “Preferences” dialogue.....	21
5.2.6	Note on "Download ELCL modules" function .....	22
6.	Points for Caution .....	23
6.1	List of Caution.....	23
6.1.1	About the build error message such as “section .bss virtual address range overlaps with .dtc_vectortable”. .....	23
6.1.2	About the installation of the Smart Configurator. ....	24
	Revision History.....	25

## 1. Introduction

Smart Configurator is a utility for combining software to meet your needs. It supports the following three functions related to the embedding of Renesas drivers in your systems: importing middleware, generating driver code, and setting pins.

### 1.1 System requirements

Smart Configurator for RL78 V1.2.0 operating environment is as follows.

#### 1.1.1 PC

- IBM PC/AT compatibles (Windows® 10 64 bit, Windows® 8.1 64 bit)
- Processor: 1 GHz or higher (must support hyper-threading, multi-core CPUs)
- Memory capacity: 4 GB or more recommended.
- Hard disk capacity: 300 MB or more spare capacity
- Display: 1024 x 768 or higher resolution, 65,536 or more colors

#### 1.1.2 Development Environments

- Renesas Electronics Compiler for RL78 [CC-RL] V1.11 or later
- LLVM for Renesas RL78 10.0.0.202110 or later
- IAR Embedded Workbench for Renesas RL78 V4.21.1 or later
- SMS Assembler <sup>Note</sup> V1.00.00 or later

Note:

If you want to add SMS Assembler to e<sup>2</sup> studio, install it from the integrated installer of e<sup>2</sup> studio 21-04 or later. ([e<sup>2</sup> studio](#))

As with other compilers, select and install from the [Additional Software] - [Renesas Toolchains & Utilities] tab of the e<sup>2</sup> studio setup wizard.

## 2. Support List

### 2.1 Support Devices List

Below is a list of devices supported by the Smart Configurator for RL78 V1.2.0.

**Table 2-1 Support Devices**

Group (HW Manual number)	PIN	Device name
RL78/G23 Group (R01UH0896EJ0100)	30pin	R7F100GAFxSP, R7F100GAGxSP, R7F100GAHxSP, R7F100GAJxSP
	32pin	R7F100GBFxNP, R7F100GBGxNP, R7F100GBHxNP, R7F100GBJxNP, R7F100GBFxFP, R7F100GBGxFP, R7F100GBHxFP, R7F100GBJxFP
	36pin	R7F100GCFxLA, R7F100GCGxLA, R7F100GCHxLA, R7F100GCJxLA
	40pin	R7F100GEFxNP, R7F100GEGxNP, R7F100GEHxNP, R7F100GEJxNP
	44pin	R7F100GFFxFP, R7F100GFGxFP, R7F100GFHxFP, R7F100GFJxFP, R7F100GFKxFP, R7F100GFLxFP, R7F100GFNxFP
	48pin	R7F100GGFxFB, R7F100GGGxFB, R7F100GGHxFB, R7F100GGJxFB, R7F100GGKxFB, R7F100GGLxFB, R7F100GGNxFB, R7F100GGFxNP, R7F100GGGxNP, R7F100GGHxNP, R7F100GGJxNP, R7F100GGKxNP, R7F100GGLxNP, R7F100GGNxNP
	52pin	R7F100GJFxFA, R7F100GJGxFA, R7F100GJHxFA, R7F100GJJxFA, R7F100GJKxFA, R7F100GJLxFA, R7F100GJNxFA
	64pin	R7F100GLFxFA, R7F100GLGxFA, R7F100GLHxFA, R7F100GLJxFA, R7F100GLKxFA, R7F100GLLxFA, R7F100GLNxFA, R7F100GLFxFB, R7F100GLGxFB, R7F100GLHxFB, R7F100GLJxFB, R7F100GLKxFB, R7F100GLLxFB, R7F100GLNxFB, R7F100GLFxLA, R7F100GLGxLA, R7F100GLHxLA, R7F100GLJxLA, R7F100GLKxLA, R7F100GLLxLA, R7F100GLNxLA
	80pin	R7F100GMGxFA, R7F100GMHxFA, R7F100GMJxFA, R7F100GMKxFA, R7F100GMLxFA, R7F100GMNxFA, R7F100GMGxFB, R7F100GMHxFB, R7F100GMJxFB, R7F100GMKxFB, R7F100GMLxFB, R7F100GMNxFB
	100pin	R7F100GPGxFB, R7F100GPHxFB, R7F100GPJxFB, R7F100GPKxFB, R7F100GPLxFB, R7F100GPNxFB, R7F100GPGxFA, R7F100GPHxFA, R7F100GPJxFA, R7F100GPKxFA, R7F100GPLxFA, R7F100GPNxFA
128pin	R7F100GSJxFB, R7F100GSKxFB, R7F100GSLxFB, R7F100GSNxFB	

## 2.2 Support Components List

Below is a list of Components supported by the Smart Configurator for RL78 V1.2.0.

**Table 2-2 Support Components (1/2)**

✓: Support, -: Non-support

No	Components	Mode	RL78/G23	Remarks
1	A/D Converter	-	✓	
2	Clock Output/Buzzer Output Controller	-	✓	
3	Comparator	-	✓	
4	CSI Communication	Transmission	✓	
		Reception	✓	
		Transmission/reception	✓	
5	D/A Converter	-	✓	
6	Data Transfer Controller	-	✓	
7	Delay Counter	-	✓	
8	Divider Function	-	✓	
9	External Event Counter	-	✓	
10	IIC Communication (Master mode)	-	✓	
11	IIC Communication (Slave mode)	-	✓	
12	Input Pulse Interval Measurement	-	✓	
13	Input Signal High-/Low-Level Width Measurement	-	✓	
14	Interrupt Controller	-	✓	
15	Interval Timer	8 bit count mode	✓	
		16 bit count mode	✓	
		16 bit capture mode	✓	
		32 bit count mode	✓	
16	Key Interrupt	-	✓	
17	One-Shot Pulse Output	-	✓	
18	Ports	-	✓	
19	PWM Output	-	✓	
20	Real-Time Clock	-	✓	
21	Remote Control Signal Receiver	-	✓	
22	SNOOZE Mode Sequencer	-	✓	
23	Square Wave Output	-	✓	

Table 2-3 Support Components (2/2)

✓: Support, -: Non-support

No	Components	Mode	RL78/G23	Remarks
24	UART Communication	Transmission	✓	
		Reception	✓	
		Transmission/reception	✓	
25	Voltage Detector	-	✓	
26	Watchdog Timer	-	✓	
27	Logic & Event Link Controller	-	✓	Need download in Smart Configurator RL78

## 2.3 New support

### 2.3.1 Import / Export component configuration feature is supported

The Import/Export configuration feature is supported. The component configurations can be exported to a xml file and can be imported from the xml file into another Smart Configurator project.

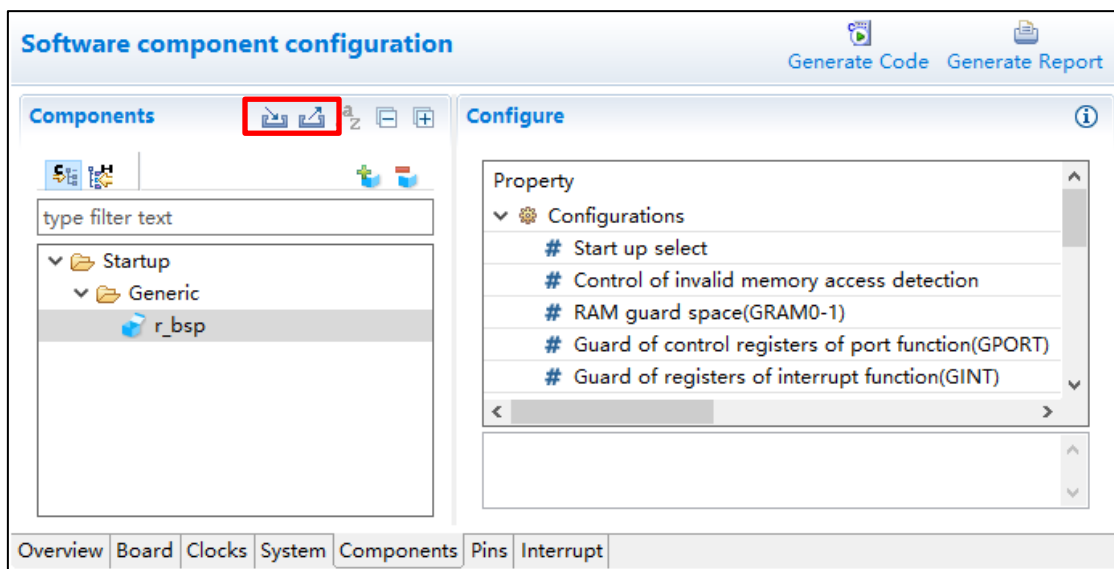


Figure 2-1 Import / Export configuration feature on the “Component” page

### 2.3.2 The default value for preference setting "Creation date" has been updated.

The default value for preference setting "Creation date" has been updated from "Output" to "No output".

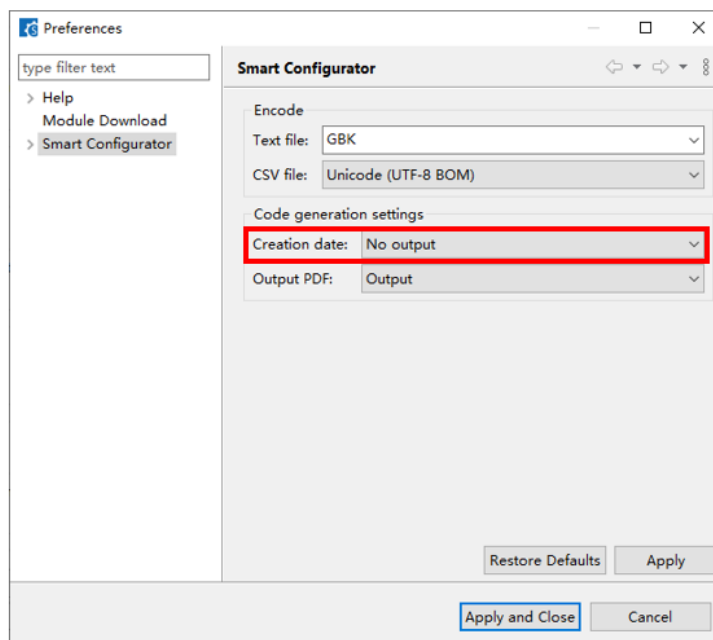


Figure 2-2 The default value for the “Create date” preference setting

### 2.3.3 Added the option to disable the generation of PDF files

Added the option to disable the generation of PDF files into the user project when the RL78 Software System Integration components are added.

To use this option, please navigate to the Smart Configurator preferences page in [Window] - [Preferences] - [Smart Configurator] and set the "Output PDF" item to 'No output'.

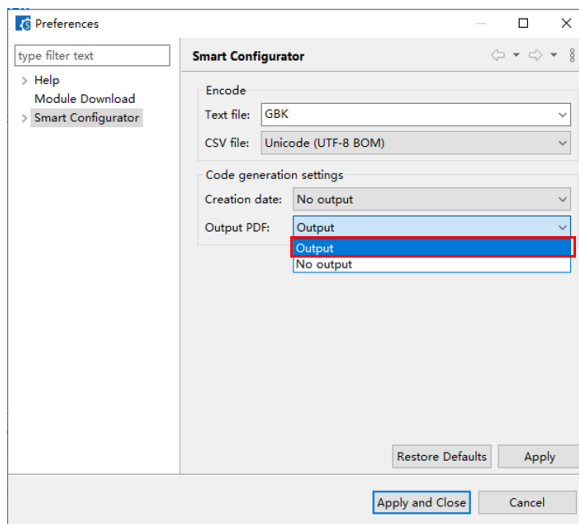


Figure 2-3 The option of output PDF files setting

### 2.3.4 Code generation operation will be triggered when build project

Under e<sup>2</sup> studio 2022-01, auto-generate code feature was introduced as when a project is built, code generation operation will be triggered firstly to prevent mismatch between the settings in the GUI and the built codes.

If user don't want to use this function, please use the below way to turn off it:

- Open project properties and unselect "SC Code Generation Builder"

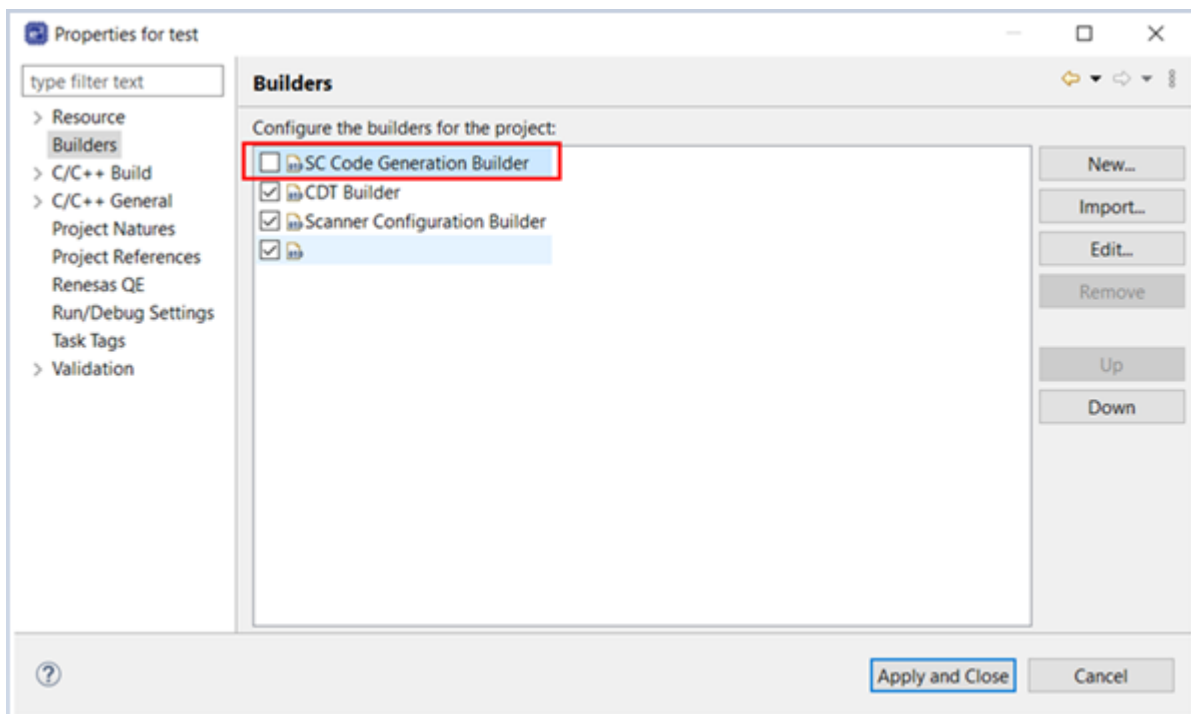


Figure 2-4 Project property setting to turn off code generation on build



### 2.3.5 BSP revision update and version check supported

- 1) Updated the default BSP added when creating a Smart Configurator project to rev.1.13.
- 2) Added a version check macro (BSP\_CFG\_CONFIGURATOR\_VERSION) to use Smart Configurator and BSP in the correct combination. The default value is 1020 (Smart Configurator version 1.2.0).
  - a) "BSP\_CFG\_CONFIGURATOR\_VERSION" was generated in r\_bsp\_config.h as following:

```

/* Version number of Smart Configurator.
This macro definitions is updated by Smart Configurator.
If you are using e2studio, set the following values.
2021-04 : 1001
2021-07 : 1010
2021-10 : 1010
If you are using Smart the standalone version of Smart Configurator,
set the following values.
v1.0.1 : 1001
v1.1.0 : 1010
*/
#define BSP_CFG_CONFIGURATOR_VERSION (1020) /* Generated value. Do not edit this
manually */

```

- b) When user use with older versions of Smart Configurator, there will occur with build errors as following.  
 error: "Make sure that the value of BSP\_CFG\_CONFIGURATOR\_VERSION defined in r\_config/r\_bsp\_config.h matches the version of Smart Configurator you are using. If they do not match, change the settings. If they match, you need to upgrade your Smart Configurator. Please upgrade Smart Configurator."

### 2.3.6 Improvement for Overview page

The "Overview" page has been updated to provide additional links to "Videos" and "What's New" information etc.

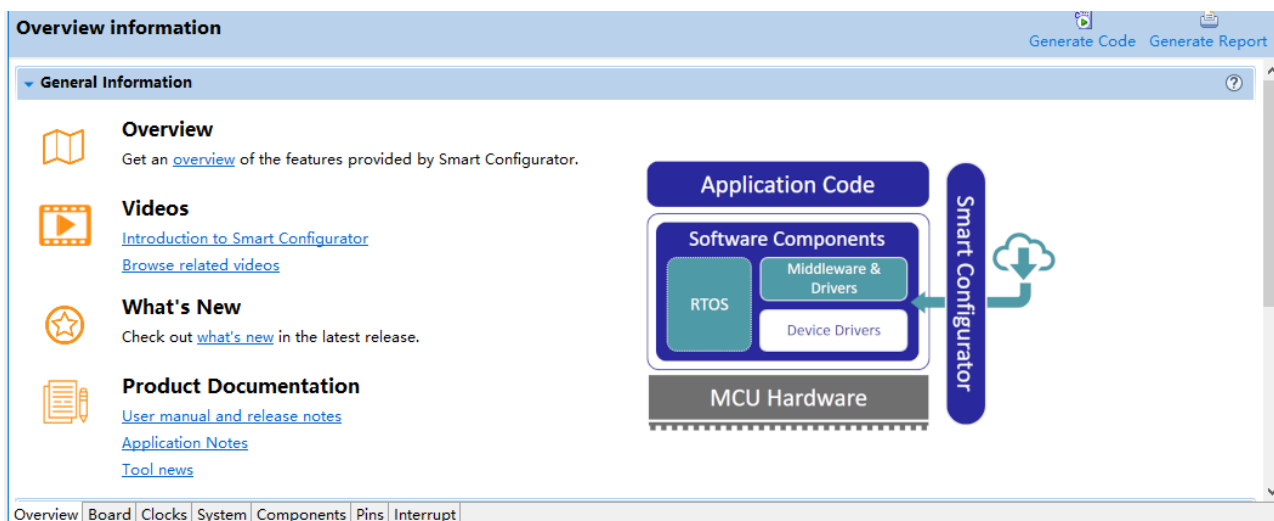


Figure 2-5 Overview page

### 3. Changes

This chapter describes changes to the Smart Configurator for RL78 V1.2.0.

#### 3.1 Correction of issues/limitations

**Table 3-1 List of Correction of issues/limitations**

✓: Applicable, -: Not Applicable

No	Description	RL78/G23	Remarks
1	Fixed the UARTA callback function calling for 1-byte transmission	✓	

##### 3.1.1 Fixed the UARTA callback function calling for 1-byte transmission

When using UARTA transmission function to transmit data in [Continuous transmission by polling] mode, no matter 1-byte or several data, the generation code specification is unified as the following:

- [Transmission end] callback function cannot be selected on GUI.
- In {Config\_UARTAn}\_user.c file,
  - r\_{Config\_UARTAn}\_PollingEnd\_UserCode () is added
  - r\_{Config\_UARTAn}\_send\_1byte () and R\_{Config\_UARTAn}\_Send\_Polling () are removed

Detailed usage can be referred to latest User's Manual of RL78 API Reference.

## 3.2 Specification changes

Table 3-2 List of Specification changes

✓ : Applicable, - : Not Applicable

No	Description	RL78/G23	Remarks
1	Improvement for deleting E20 emulator selection in on-chip debug setting	✓	
2	Adding output disable code to R_Config_UARTn_Stop() function	✓	
3	Improvement for no R_Systeminit() function declaration issue in macrodriver.h	✓	
4	Improvement for Smart Configurator can be opened when porting the e <sup>2</sup> studio project into CS+	✓	
5	Improvement for "Input buffer" function in PORT	✓	
6	New API added for ELCL	✓	
7	Improvement for IIC Communication code	✓	
8	Improvement for ELCL initialization function calling	✓	
9	Improvement for pin allocation to use "PIORn=0" as default selection	✓	
10	Improvement for the register banks can be the same if they have the same priority	✓	
11	Improvement for reserving RAM area when On-Chip debug trace function used	✓	
12	Improvement for supporting LLVM C++ project	✓	
13	Improvement for UARTA transfer rate range	✓	
14	Improvement for avoiding create an entry in DTC reserved RAM area of the on-chip debug trace	✓	

### 3.2.1 Improvement for deleting E20 emulator selection in on-chip debug setting

The E20 emulator doesn't support RL78/G23. From Smart Configurator for RL78 V1.2.0, E20 emulator selection is deleted from [System] page. When the old project with E20 selected loaded, the setting will be changed to "E2 Lite" automatically.

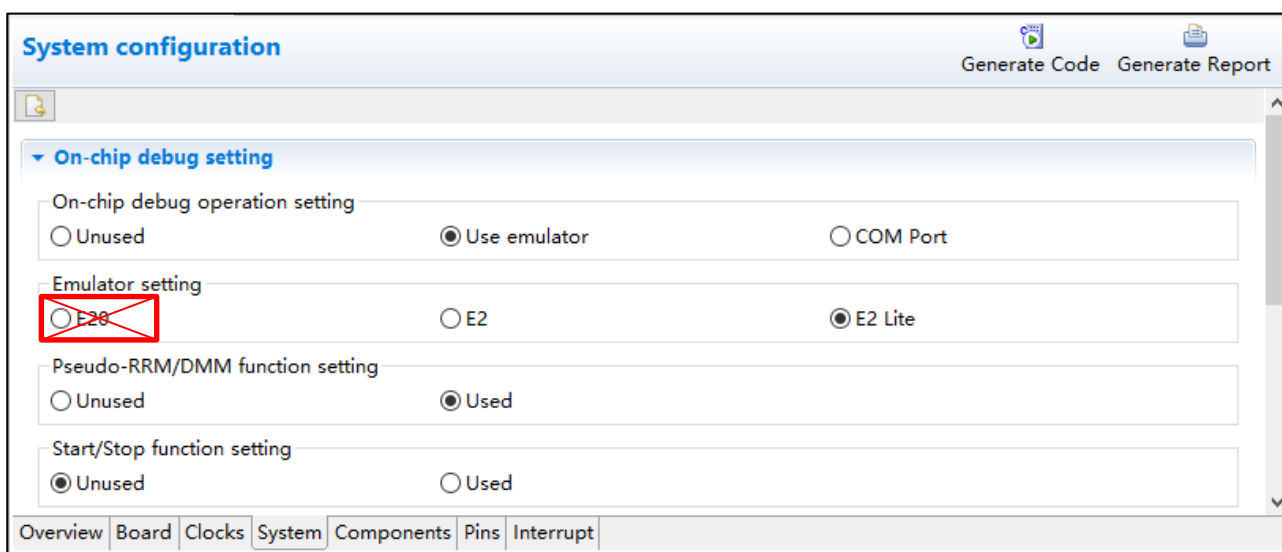


Figure 3-1 Deleted E20 emulator support

### 3.2.2 Adding output disable code to *R\_Config\_UARTn\_Stop()* function

When UARTn in SAUm operate as Transmission mode, UARTn output disable setting (SOEmn = 0) is generated in *R\_Config\_UARTn\_Stop()* function.

```

/*****
* Function Name: R_Config_UART0_Stop
* Description  : This function stops UART0 module operation.
* Arguments   : None
* Return Value: None
*****/
void R_Config_UART0_Stop(void)
{
    STMK0 = 1U; /* disable INTST0 interrupt */
    ST0 |= 0001 SAU_CHO_STOP_TRG_ON; /* disable UART0 transmit */
    SOE0 &= (uint16_t)~ 0001 SAU_CHO_OUTPUT_ENABLE; /* disable UART0 output */
    STIFO = 0U; /* clear INTST0 interrupt flag */
}

```

Figure 3-2 Added UART0 output disable operation in Stop function

### 3.2.3 Improvement for no *R\_Systeminit()* function declaration issue in *r\_cg\_macrodriver.h*

When set the API output function as [Output only initialization API function] in Preferences setting, the *R\_Systeminit()* function declaration can be generated in *r\_cg\_macrodriver.h*.

### 3.2.4 Improvement for Smart Configurator can be opened when porting the e<sup>2</sup> studio project into CS+

From Smart Configurator for RL78 V1.2.0, when open an existing e<sup>2</sup> studio Smart configuration project (exported by e<sup>2</sup> studio "Renesas common project file" feature) in CS+, the configuration settings can be opened after launching Smart Configurator.

### 3.2.5 Improvement for "Input buffer" function in PORT

The "Input buffer" is changed to "Input buffer OFF". And "Input buffer OFF" selection is only available when port is used as output function.

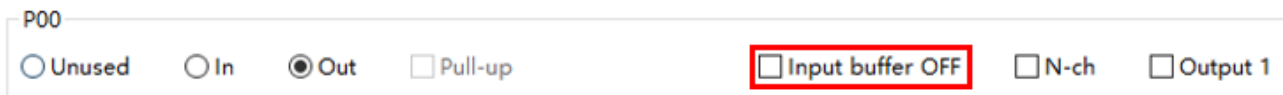


Figure 3-3 "Input buffer OFF" function in PORT

In *R\_<Config\_PORT>\_Create()* code generation:

- When "Input buffer OFF" is inactive or uncheck, *\_00\_PDIDISnx\_INPUT\_BUFFER\_ON* is set into PDIDIS register.
- When "Input buffer OFF" is active and checked, *\_xx\_PDIDISnx\_INPUT\_BUFFER\_OFF* is set into PDIDIS register.

```

void R_Config_PORT_Create(void)
{
    /* Set PORT0 registers */
    .....
    PDIDIS0 = _00_PDIDISn4_INPUT_BUFFER_ON | _00_PDIDISn3_INPUT_BUFFER_ON |
             _00_PDIDISn2_INPUT_BUFFER_ON | _01_PDIDISn0_INPUT_BUFFER_OFF;
    .....

    R_Config_PORT_Create_UserInit();
}

```

### 3.2.6 New API added for ELCL

New API functions are generated for ELCL component when output ELCL signal is selected as INTELCL:

- R\_Config\_ELCL\_xxxFunction\_Start
- R\_Config\_ELCL\_xxxFunction\_Stop
- interrupt handler function r\_Config\_ELCL\_xxxFunction\_interrupt

### 3.2.7 Improvement for IIC Communication code

When using IIC Communication (Master mode) component and selected resource as IIC0n, the generation code is improved to easily understand.

- 1) Added detailed comment for the SDA&SCL pin's waiting operation in R\_Config\_IICmn\_StartCondition() and R\_Config\_IICmn\_StopCondition() functions.

```

.....
* Function Name: R_Config_IIC00_StartCondition
* Description : This function starts the IIC00 condition.
* Arguments : None
* Return Value : None
.....
void R_Config_IIC00_StartCondition(void)
{
    volatile uint8_t w_count;

    S00 &= (uint16_t)~_0001_SAU_CH0_DATA_OUTPUT_1; /* clear IIC00 SDA */

    /* Set delay to secure a hold time after SDA output low. The delay time depend on slave device.
    Here set 5us as default base on current clock */
    for (w_count = 0U; w_count <= IIC00_WAITTIME; w_count++)
    {
        NOP();
    }

    S00 &= (uint16_t)~_0100_SAU_CH0_CLOCK_OUTPUT_1; /* clear IIC00 SCL */
    SOE0 |= _0001_SAU_CH0_OUTPUT_ENABLE; /* enable IIC00 output */
    SS0 |= _0001_SAU_CH0_START_TRG_ON; /* enable IIC00 */

    /* Set delay to secure a hold time after SCL output low. The delay time depend on slave device.
    Here set 5us as default base on current clock */
    for (w_count = 0U; w_count <= IIC00_WAITTIME; w_count++)
    {
        NOP();
    }
}

```

Figure 3-4 Added detail comment for SDA/SCL pin's waiting operation

- 2) Added the code to clear error detection flag and calling R\_Config\_IICmn\_StopCondition() function in IICm interrupt handler function, so that the next send/receive operation can work correctly.

```

static void __near r_Config_IIC00_interrupt(void)
{
    volatile uint16_t w_count;

    /* Set delay to secure a hold time after SDA, SDL output. The delay time depend on slave device.
    Here set 20us as default base on current clock */
    for (w_count = 0U; w_count <= IIC00_WAITTIME_2; w_count++)
    {
        NOP();
    }

    if ((0x0002U == (SSR00 & _0002_SAU_PARITY_ERROR)) && (0U != g_iic00_tx_count))
    {
        SIR00 |= _0002_SAU_SIRMN_PECTMN; /* clear ACK error detection flag */
        R_Config_IIC00_StopCondition();
        r_Config_IIC00_callback_master_error(MD_NACK);
    }
    else if ((0x0001U == (SSR00 & _0001_SAU_OVERRUN_ERROR)) && (0U != g_iic00_tx_count))
    {
        SIR00 |= _0001_SAU_SIRMN_OVCTMN; /* clear overrun error detection flag */
        R_Config_IIC00_StopCondition();
        r_Config_IIC00_callback_master_error(MD_OVERRUN);
    }
    else
    {

```


Figure 3-5 Clear error detection flag and calling R\_Config\_IICmn\_StopCondition() function

### 3.2.8 Improvement for ELCL initialization function calling

From Smart Configurator for RL78 V1.2.0, ELCL initialize function: R\_Config\_ELCL\_XXXFunction\_Create() is called in R\_Systeminit() in generated code.

### 3.2.9 Improvement for pin allocation to use "PIORn=0" as default selection

From Smart Configurator for RL78 V1.2.0, improve pin allocation to use "PIORn=0" as default selection,

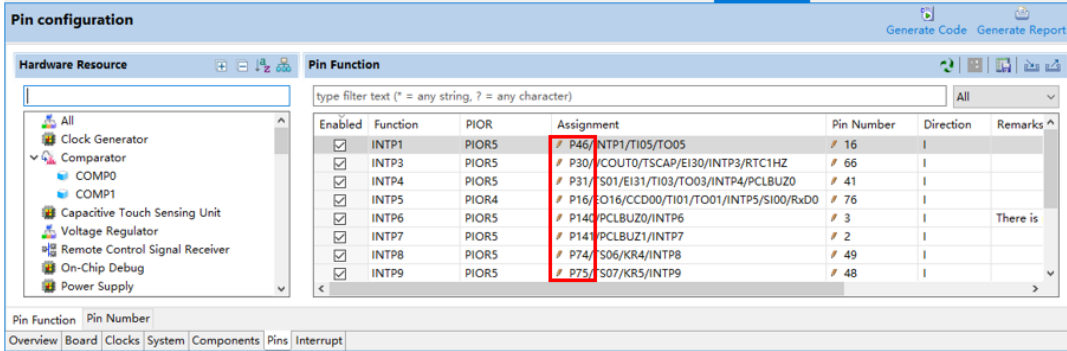

Bit	Alternative function	128- and 100-pin Setting value	
		0	1
PIOR5	INTP1	P45	P56
	INTP3	P30	P57
	INTP4	P31	P146
	INTP5	P143	P84
	INTP7	P141	P85
	INTP8	P74	P86
	INTP9	P75	P87
	TXD1	P02	P82
	RXD1	P03	P81
PIOR4	SCL10	P04	P80
	SDA10	P03	P81
	SI10	P03	P81
	SO10	P02	P82
	SK10	P04	P80
	PCLBUZ1	P141	P55
	INTP5	P15	P12

Figure 3-6 PIOR default setting

### 3.2.10 Improvement for the register banks can be the same if they have the same priority

User can config the same register bank value when the priority of interrupts is same.

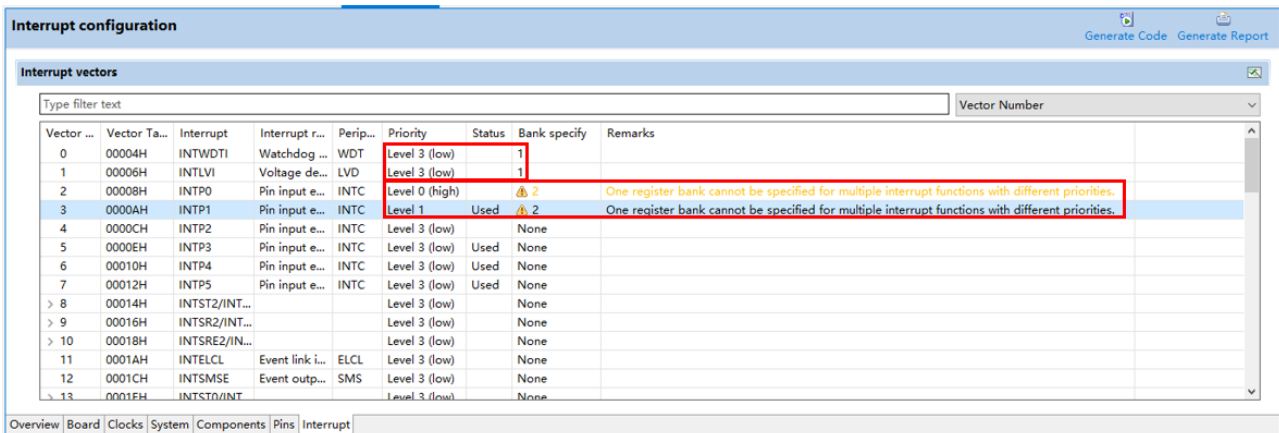


Figure 3-7 Interrupt register bank

### 3.2.11 Improvement for reserving RAM area when On-Chip debug trace function used

Smart Configurator can set the trace RAM area setting in CS+ and e<sup>2</sup> studio automatically.

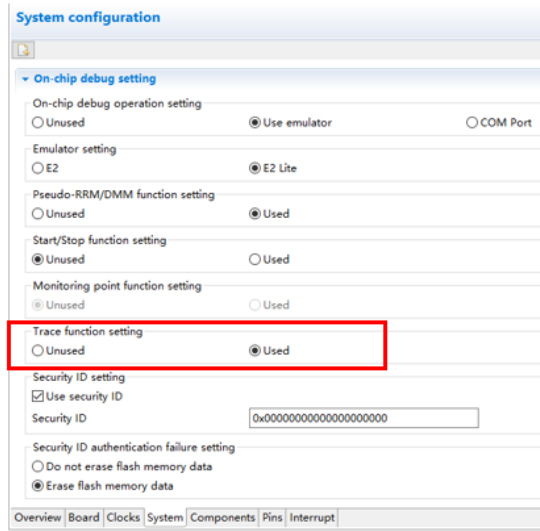


Figure 3-8 Smart Configurator trace function setting

In CS+:

The “Control allocation to trace RAM area” option is affected by Smart Configurator trace function setting:

- 1) When the Smart Configurator trace function setting is Used  
The Control allocation to trace RAM area value is “Yes(Error message)(-OCDTR)”.
- 2) When the Smart Configurator trace function setting is Unused  
The Control allocation to trace RAM area value is “No”.

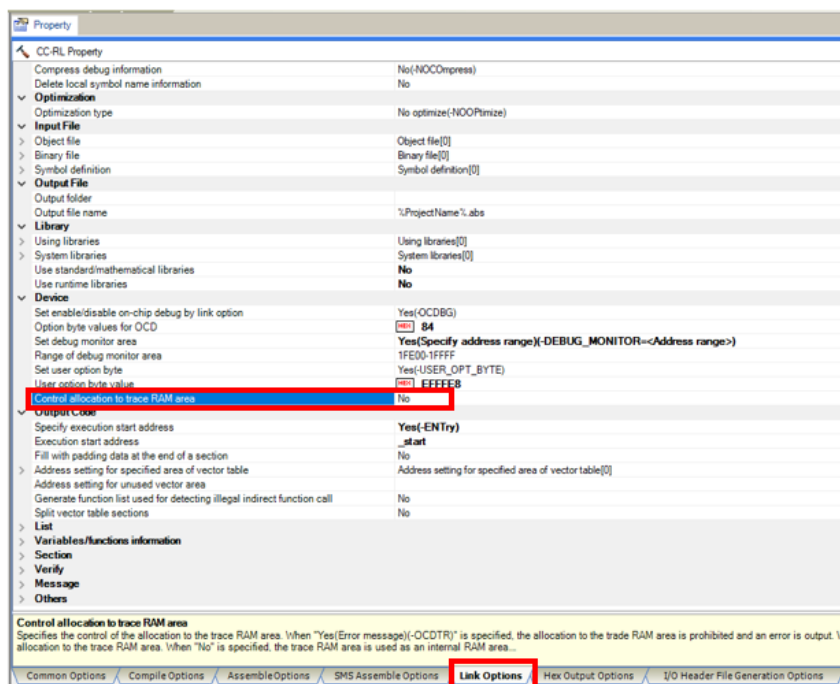


Figure 3-9 Control allocation to trace RAM area setting in CS+

In e<sup>2</sup> studio with LLVM for Renesas RL78 C/C++ Executable Project:

- 1) When the Smart Configurator trace function setting is Used  
linker\_script.ld file:

```
.....
.ocd_traceram 0xfc300Note1 (NOLOAD) : AT(0xfc300)
{
    KEEP(*(.ocd_traceram))
} >RAM
.....
```

**Note1:** Start RAM address depending on the products.

r\_cg\_vector\_table.c:

```
.....
/* Secure trace RAM area */
#define OCDTRACERAM_SECT __attribute__((section (".ocd_traceram")))
uint8_t Ocd_TraceRam[1024Note1] OCDTRACERAM_SECT;
.....
```

**Note1:** RAM size depending on the products.

In e2 studio with Renesas CC-RL C/C++ Executable Project

The "The RAM area without section" option is affect by Smart Configurator trace function setting:

- 1) When the Smart Configurator trace function setting is Used  
The RAM area without section value is "Self RAM and trace RAM area".
- 2) When the Smart Configurator trace function setting is Unused  
The RAM area without section value is "None".

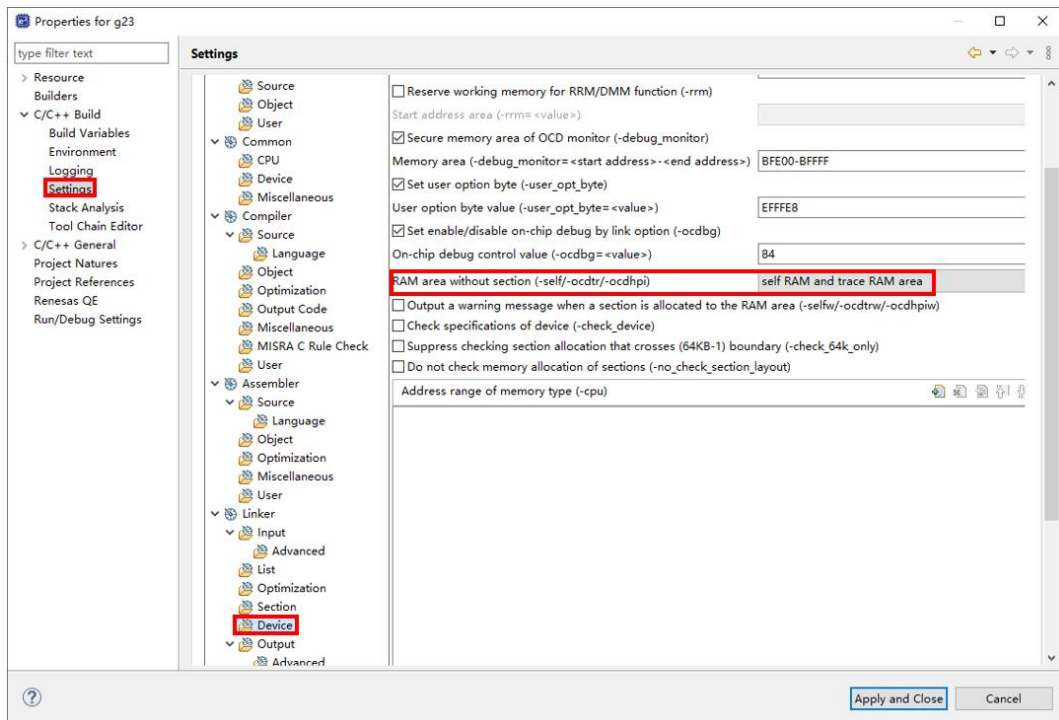


Figure 3-10 RAM area without section in e2 studio



### 3.2.12 Improvement for supporting LLVM C++ project

Extern "C" code can be generated by Smart Configurator, so that Smart Configurator generation code can be built successfully with a RL78 LLVM C++ project in e<sup>2</sup> studio.

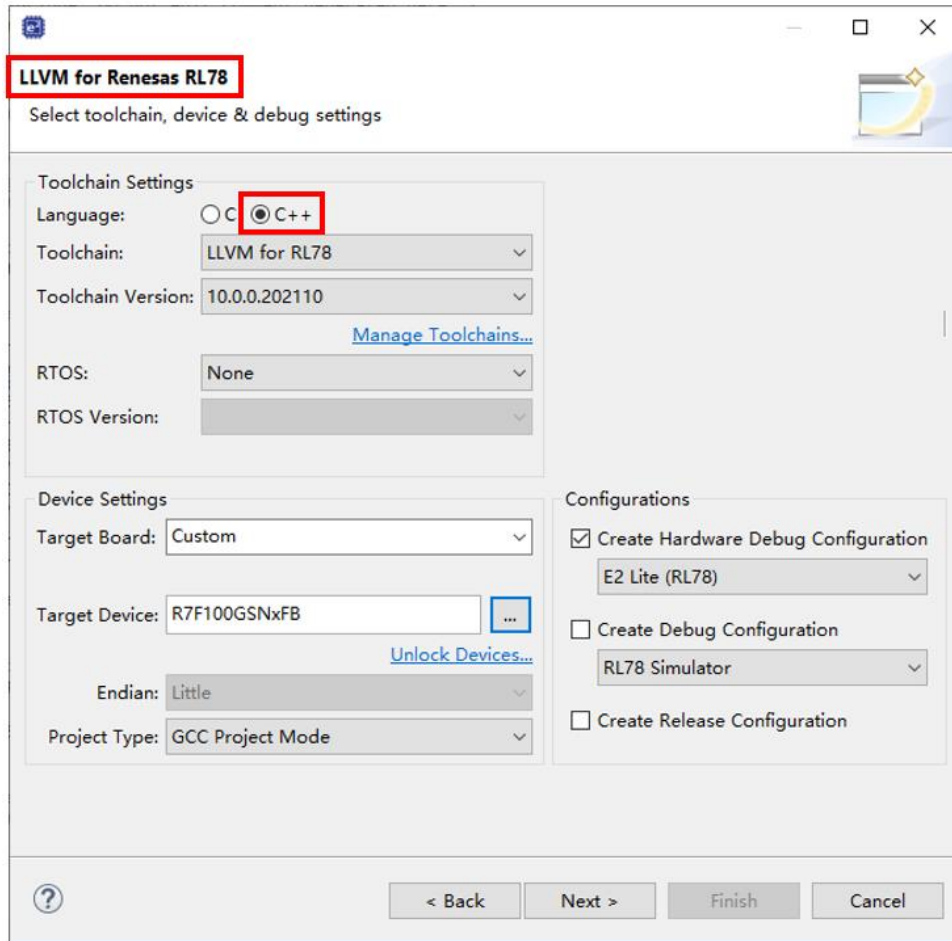


Figure 3-11 C++ project in LLVM compiler

### 3.2.13 Improvement for UARTA transfer rate range

UARTA maximum transfer rate is change from 19200 bps to 153600 bps.

### 3.2.14 Improvement for avoiding create an entry in DTC reserved RAM area of the on-chip debug trace

"NOLOAD" handling is added in linker script file to avoid creating an entry when use the reserved RAM area of the on-chip debug trace.

linker\_script.ld file:

```
.....
.dtc_vectortable 0xffd00 (NOLOAD) : AT(0xffd00)
{
    KEEP(*( .dtc_vectortable))
} >RAM
.dtc_controldata_0 0xffd40 (NOLOAD) : AT(0xffd40)
{
    KEEP(*( .dtc_controldata_0))
} >RAM
.....
```

#### 4. List of RENESAS TOOL NEWS AND TECHNICAL UPDATE

Below is a list of notifications delivered by RENESAS TOOL NEWS and TECHNICAL UPDATE.

Issue date	Document No.	Description	Applicable MCUs	Fixed version
Oct. 01, 2021	R20TS0757	1. Notes on creating LLVM for Renesas RL78 C/C++ Executable Project 2. Notes on using Port Input buffer function <a href="https://www.renesas.com/jp/zh/document/tnn/notes-e-studio-smart-configurator-plug-smart-configurator-rl78">https://www.renesas.com/jp/zh/document/tnn/notes-e-studio-smart-configurator-plug-smart-configurator-rl78</a>	RL78/G23	V1.2.0

## 5. Points for Limitation

This section describes points for limitation regarding the Smart Configurator for RL78 V1.2.0.

### 5.1 List of Limitation

Table 5-1 List of Limitation

✓: Applicable, -: Not Applicable

No	Description	RL78/G23	Remarks
1	Note on extra help document issue	✓	
2	Note on the clock setting in UART transmission/reception function	✓	
3	Note on using communication components simultaneously	✓	
4	Note on opening smart configurator in CS+	✓	
5	Note on Smart Configurator Component menu in e <sup>2</sup> studio "Preferences" dialogue	✓	
6	Note on "Download ELCL modules" function	✓	

### 5.2 Details of Limitation

#### 5.2.1 Note on extra help document issue

For Smart Configurator, there is an extra help "Smart Browser" under "[Help] > [Help Contents]".

Please ignore it.

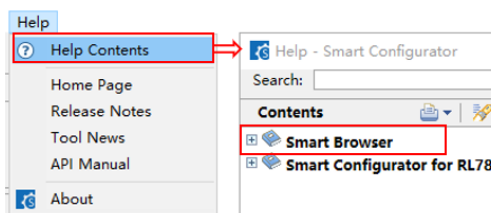


Figure 5-1 Extra help issue

#### 5.2.2 Note on the clock setting in UART transmission/reception function

When use UART transmission/reception functions, the clock setting on "Transmission" and "Reception" should be set as the same value. Otherwise, the reception side cannot receive data correctly.

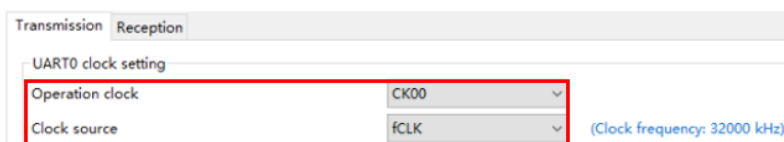


Figure 5-2 The clock setting in Transmission and Reception side of UART

### 5.2.3 Note on using communication components simultaneously

When use UARTn reception function, please note to avoid using CSIn1 and IICn1 functions of odd channels at the same time.

<80-, 100-, and 128-pin products>

Unit	Channel	Used as SPI (CSI)	Used as UART	Used as Simplified I <sup>2</sup> C
0	0	CSI00	UART0	IIC00
	1	CSI01		IIC01
	2	CSI10	UART1	IIC10
	3	CSI11		IIC11
1	0	CSI20	UART2 (supporting LIN-bus)	IIC20
	1	CSI21		IIC21
	2	CSI30	UART3	IIC30
	3	CSI31		IIC31

Figure 5-3 Multiple communication components

### 5.2.4 Note on opening smart configurator in CS+

To open smart configurator in CS+ successfully, the \*.scfg file (which is under CS+ project folder) name should be same as the project name. Otherwise, smart configurator will be opened with an empty window.

Due to this restriction, please take care in the following two operations:

- When exporting e<sup>2</sup> studio project (by e<sup>2</sup> studio "Renesas common project file" feature) to CS+, please check the \*.scfg file name should be same as the project name
- When creating a new CS+ project, please be sure there is no extra .scfg file under the target project folder. If there are more than one .scfg file under this folder, you will see the [File selection] dialogue when open smart configurator. Please ignore it by click [OK] with any selection.

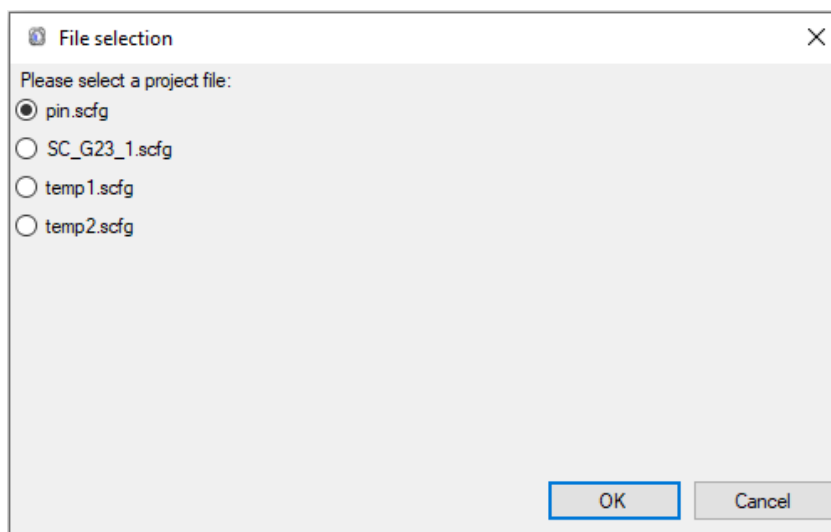


Figure 5-4 [File selection] dialogue

### 5.2.5 Note on Smart Configurator Component setting in e<sup>2</sup> studio “Preferences” dialogue

When user not selected RX family for e<sup>2</sup> studio 2022-01 installation, the Smart Configurator’s Component setting menu in e<sup>2</sup> studio Preference dialog will not be shown.

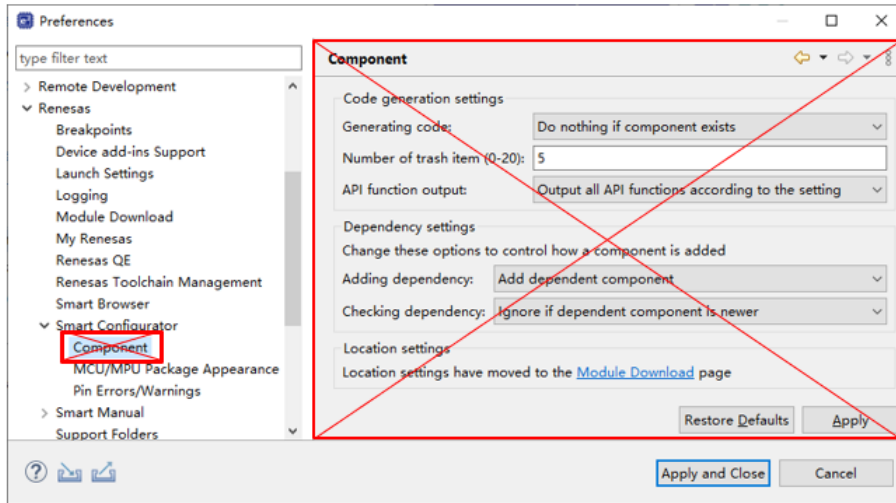


Figure 5-5 Smart Configurator Component menu in e<sup>2</sup> studio Preference dialog will not be shown

If user want to set Smart Configurator Component preference setting rather than using default preference setting, please select RX family in Setup wizard during installation, then Smart Configurator Component menu will be shown in Preferences dialogue.

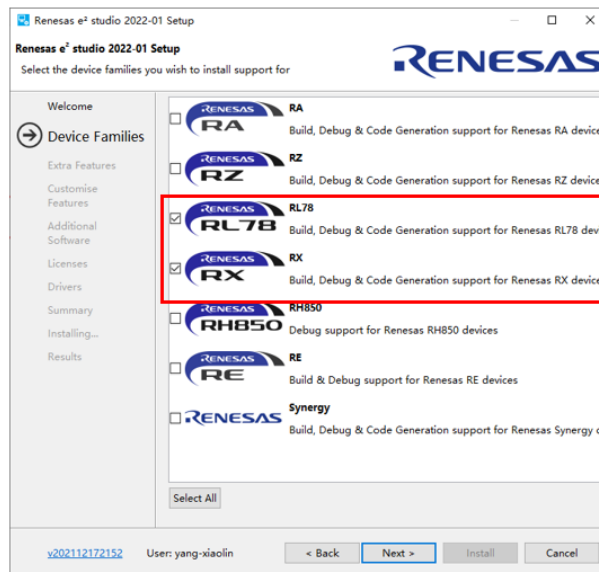


Figure 5-6 Select RX family during e<sup>2</sup> studio Setup wizard

### 5.2.6 Note on "Download ELCL modules" function

For Smart Configurator for RL78 V1.2.0, the ELCL download function is not available. When user click [Download ELCL modules](#) link in New Component dialog, the user selected ELCL modules will not be downloaded from web. Therefore, the ELCL module published on the Web is included in Smart Configurator for RL78 V1.2.0, so you can use it without having to download it.

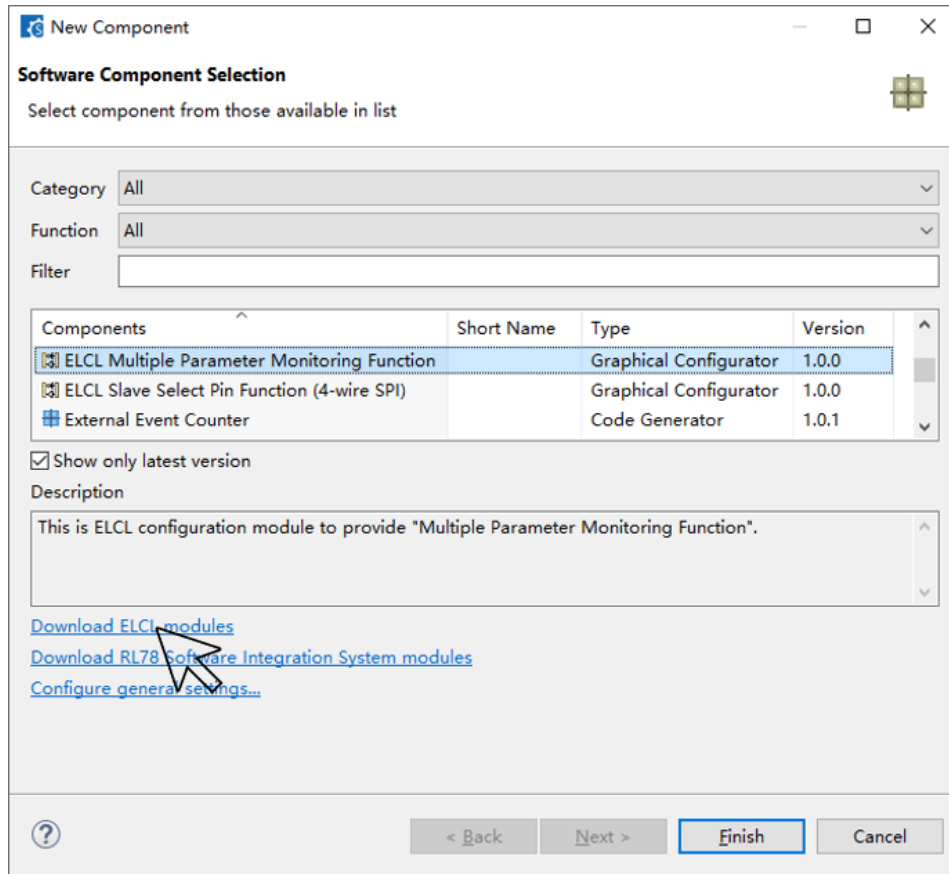


Figure 5-7 ELCL modules download link in New Component dialog

If the ELCL sample code uses an ELCL module that is not displayed in the component list, copy the ELCL module included in the sample code to the "\RL78\_Modules\ELCL\_Modules" folder in the folder where Smart Configurator is installed. After copying the ELCL module, restart the Smart Configurator.

- \${Smart Configurator installation folder}\RL78\_Modules\ELCL\_Modules

## 6. Points for Caution

This section describes points for caution regarding the Smart Configurator for RL78 V1.2.0.

### 6.1 List of Caution

Table 6-1 List of Caution

✓: Applicable, -: Not Applicable

No	Description	RL78/G23	Remarks
1	About the build error message such as “section .bss virtual address range overlaps with .dtc_vectortable”.	✓	
2	About the installation of the Smart Configurator.	✓	

#### 6.1.1 About the build error message such as “section .bss virtual address range overlaps with .dtc\_vectortable”.

When user use many components and DTC component together, the generated code build might fail due to some section address overlaps.

```

CDT Build Console [LLVM_R7F100GCJxLA_case1]
ld.lld: error: section .bss virtual address range overlaps with .dtc_vectortable
>>> .bss range is [0xF9F00, 0xF9F31]
>>> .dtc_vectortable range is [0xF9F00, 0xF9F27]

ld.lld: error: section .bssf virtual address range overlaps with .dtc_controldata_0
>>> .bssf range is [0xF9F32, 0xF9F7F]
>>> .dtc_controldata_0 range is [0xF9F40, 0xF9F47]

ld.lld: error: section .bss load address range overlaps with .dtc_vectortable
>>> .bss range is [0xF9F00, 0xF9F31]
>>> .dtc_vectortable range is [0xF9F00, 0xF9F27]

ld.lld: error: section .bssf load address range overlaps with .dtc_controldata_0
>>> .bssf range is [0xF9F32, 0xF9F7F]
>>> .dtc_controldata_0 range is [0xF9F40, 0xF9F47]
clang: error: ld.lld command failed with exit code 1 (use -v to see invocation)
makefile:110: recipe for target 'LLVM_R7F100GCJxLA_case1.elf' failed
make: *** [LLVM_R7F100GCJxLA_case1.elf] Error 1
"make -j8 all" terminated with exit code 2. Build might be incomplete.

18:09:07 Build Failed. 2 errors, 0 warnings. (took 1s.846ms)
    
```

Figure 6-1 Build error message

Workaround:

The smart configurator cannot set “.bss” and “.bssf” section address. So user should consider to modify “.bss” and “.bssf” section address manually or change the DTC base address to avoid such section overlap error.

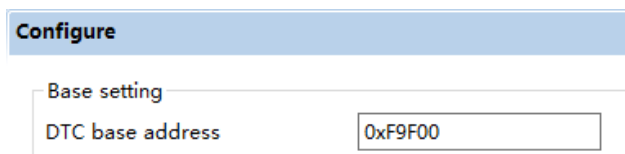


Figure 6-2 DTC base address setting

**6.1.2 About the installation of the Smart Configurator.**

Do not set more than 64 characters for the installation directory.

You might see an error message "The specified path is too long" and will not be able to install Smart Configurator.



**Revision History**

Rev.	Date	Description	
		Page	Summary
1.01	Apr 13, 2021	-	First edition issued
1.02	Jul 20, 2021	3	Update 1.1.2 Development Environments
		4	Update HW manual number in table "Table 2 1 Support Devices"
		7 - 10	Update "2.3 New support"
		9 - 13	Update "3. Changes"
		14-15	Update "4. Points for Limitation"
1.03	Jan 20, 2022	7 - 9	Update "2.3 New support"
		10 - 17	Update "3. Changes"
		18	Add 4. List of RENESAS TOOL NEWS AND TECHNICAL UPDATE
		19-23	Update "5. Points for Limitation"
		24	Add 6. Points for Caution

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

### 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

### 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

### 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

### 5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

### 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

### 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

### 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

### Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan

[www.renesas.com](http://www.renesas.com)

### Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

### Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/).