

Renesas RA Family

Getting Started with PWM Output with Sub Nanosecond Delay

Introduction

This application note describes the creation of a design that generates Pulse Width Modulation (PWM) outputs using the General PWM Timer (GPT) Enhanced High-Resolution modules on Renesas RA6M3 MCUs and shows how to adjust these PWM outputs using a PWM Output Delay circuit with an offset to delay the waveform by nanoseconds.

Some typical applications for PWM with nanosecond delays are power supply control, motor control, inverter control, battery charging, digital lighting control, and power factor correction (PFC).

This application note walks through all the necessary steps, including the following:

- Board setup.
- Application overview.
- FSP configuration.
- Application design highlights.
- Using the General-Purpose Timer to generate PWM output.
- Using the PWM Output Delay circuit to adjust PWM output.

Required Resources

Development tools and software

- e² studio 2025-04.1 (25.4.1)
- Renesas Flexible Software Package (FSP) v6.0.0

Hardware

- [Renesas EK-RA6M3](#) kit (RA6M3 MCU Group)
- Oscilloscope (at least two channels)

Reference Manuals

- RA Flexible Software Package Documentation Release 6.0.0
- Renesas RA6M3 Group User's Manual Rev.1.20
- EK-RA6M3-v1.0 Schematics

Contents

1. Application Overview	3
2. GPT Timer Enhanced High-Resolution Channels	3
3. Board Setup	3
4. FSP Configuration	5
4.1 Components Tab	6
4.2 Stacks Tab.....	7
4.3 Module Configuration	8
4.3.1 GPT Timers, PWM Output Pins	8
4.3.2 GPT Timers, Pin Configuration	10
4.3.3 GPT Timers, PWM Configuration.....	11
4.3.4 PWM Delay Generation Circuit	12
4.3.5 Set Up PWM Delay Generation Circuit	14
5. Application Code Highlights	16
6. Importing and Building the Project	17
7. Downloading the Executable to the EK-RA6M3 Kit.....	18
8. Output Waveforms.....	18
Website and Support	22
Revision History.....	23

Table 1. Switch settings for EK-RA6M3

Switch	Setting
J8	Jumper on pins 1-2
J9	Open

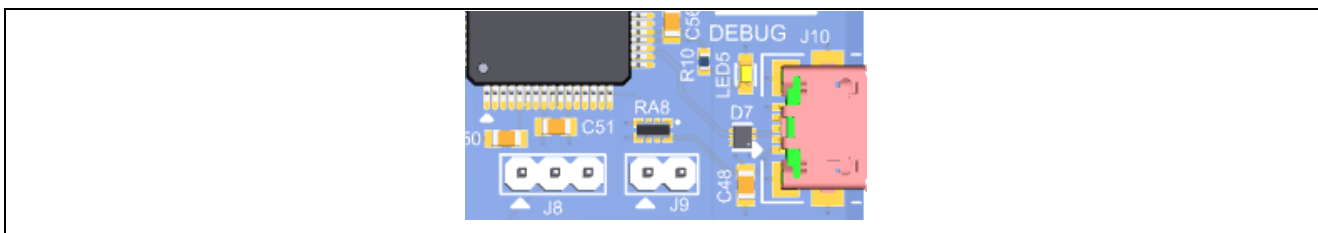


Figure 3. J8 and J9 on EK-RA6M3

The figure below shows the EK-RA6M3 kit.

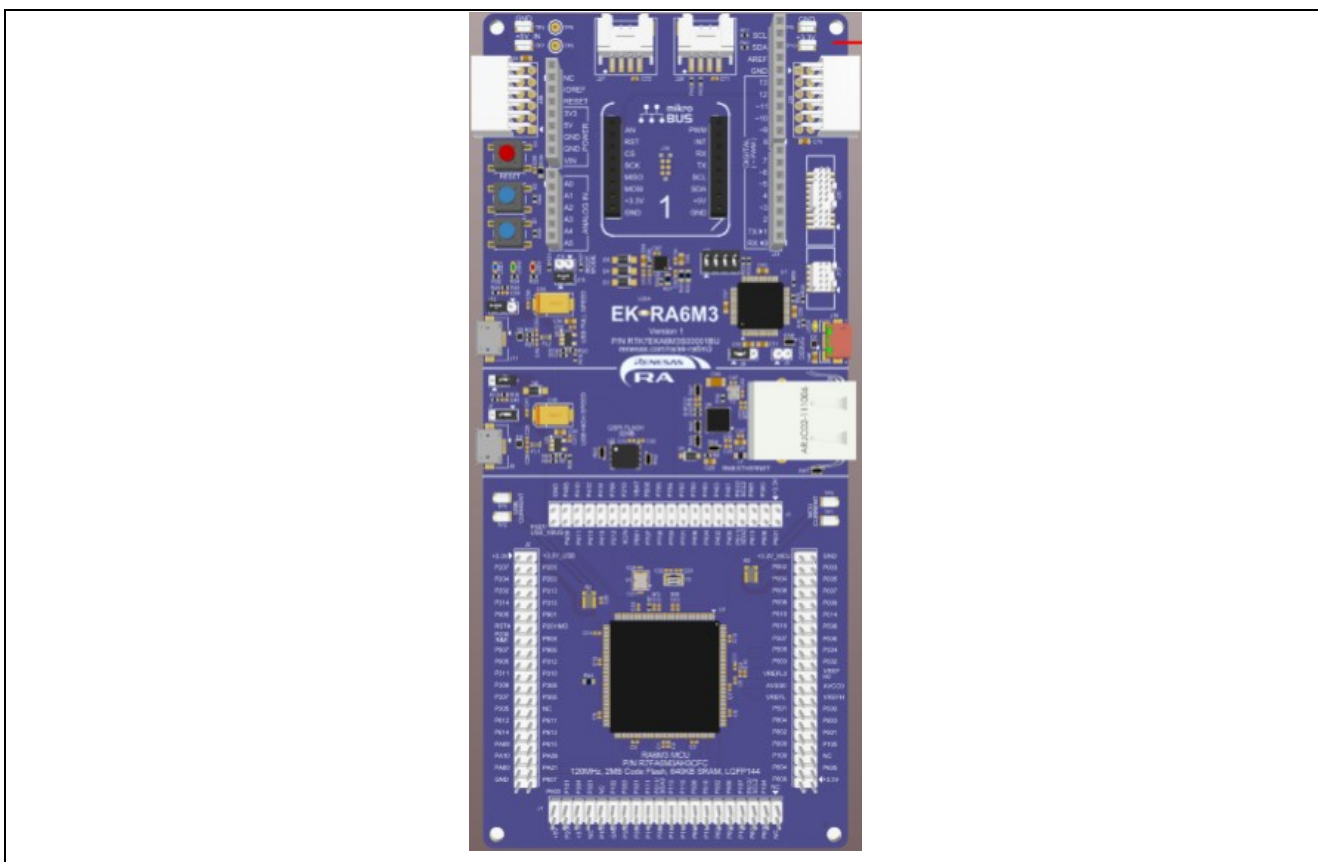


Figure 4. EK-RA6M3 Kit

4. FSP Configuration

When writing an FSP application, the FSP must first be configured. For more information, refer to the Renesas Flexible Software Package (FSP) user manual.

In this application, the FSP configuration is stored in a file named `configuration.xml`. Double-click on this file to open the **RA Configuration** tab for the project.

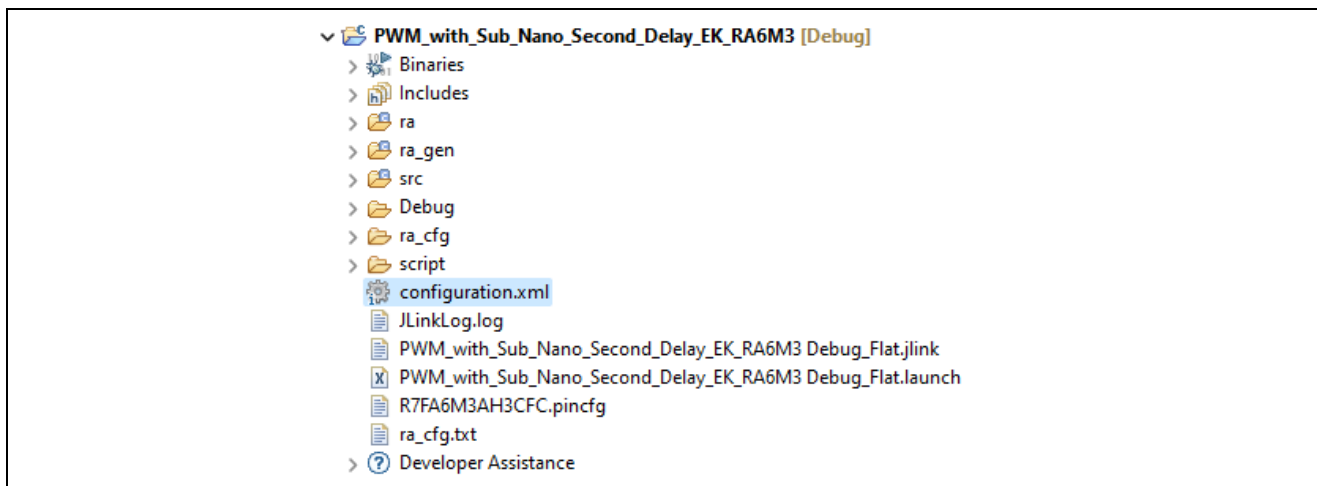


Figure 5. configuration.xml on the Project Plane

When a project is built from scratch, this configuration tab is where you will perform the initial configuration of the FSP. As shown in Figure 6, the RA Configuration pane contains a **Summary** tab highlighting the items that can be configured along with a scrolling window that lists all the software components currently selected for this project. Below this scrolling window are tabs that allow tailoring of the FSP to the needs of the specific application.


For the purposes of this application note, we will highlight a few of the details of the FSP configuration, such as the interrupt controller (`r_icu`) and the general PWM timer (`r_gpt`), as they pertain to this application. For additional details, refer to the FSP User's Manual on how to configure the FSP.

When the project has been configured appropriately, click the **Generate Project Content**, the green arrow button above the summary screen, to build all the auto-generated files necessary to implement the defined components.

Summary
▶ Generate Project Content




Project Summary

Board: EK-RA6M3
Device: R7FA6M3AH3CFC
Core: CM4
Toolchain: GCC ARM Embedded
Toolchain Version: 13.2.1.arm-13-7
FSP Version: 6.0.0
Project Type: Flat
Location: C:/application_p...th_Sub_Nano_Second_Delay_EK_RA6M3



Selected software components

Board support package for R7FA6M3AH3CFC	v6.0.0
Board support package for RA6M3	v6.0.0
Board support package for RA6M3 - FSP Data	v6.0.0
Board support package for RA6M3 - Events	v6.0.0
Board support package for RA6M3 - Linker	v6.0.0
Arm CMSIS Version 6 - Core (M)	v6.1.0+fsp.6.0.0
RA6M3-EK Board Support Files	v6.0.0
Board Support Package Common Files	v6.0.0
General PWM Timer	v6.0.0
External Interrupt	v6.0.0
I/O Port	v6.0.0

Summary
BSP
Clocks
Pins
Interrupts
Event Links
Linker Sections
Stacks
Components

Figure 6. Summary of the Application Configuration

4.1 Components Tab

The **Components** tab shows the FSP modules that are used in this application. As shown in Figure 7, components are broken down into several categories.

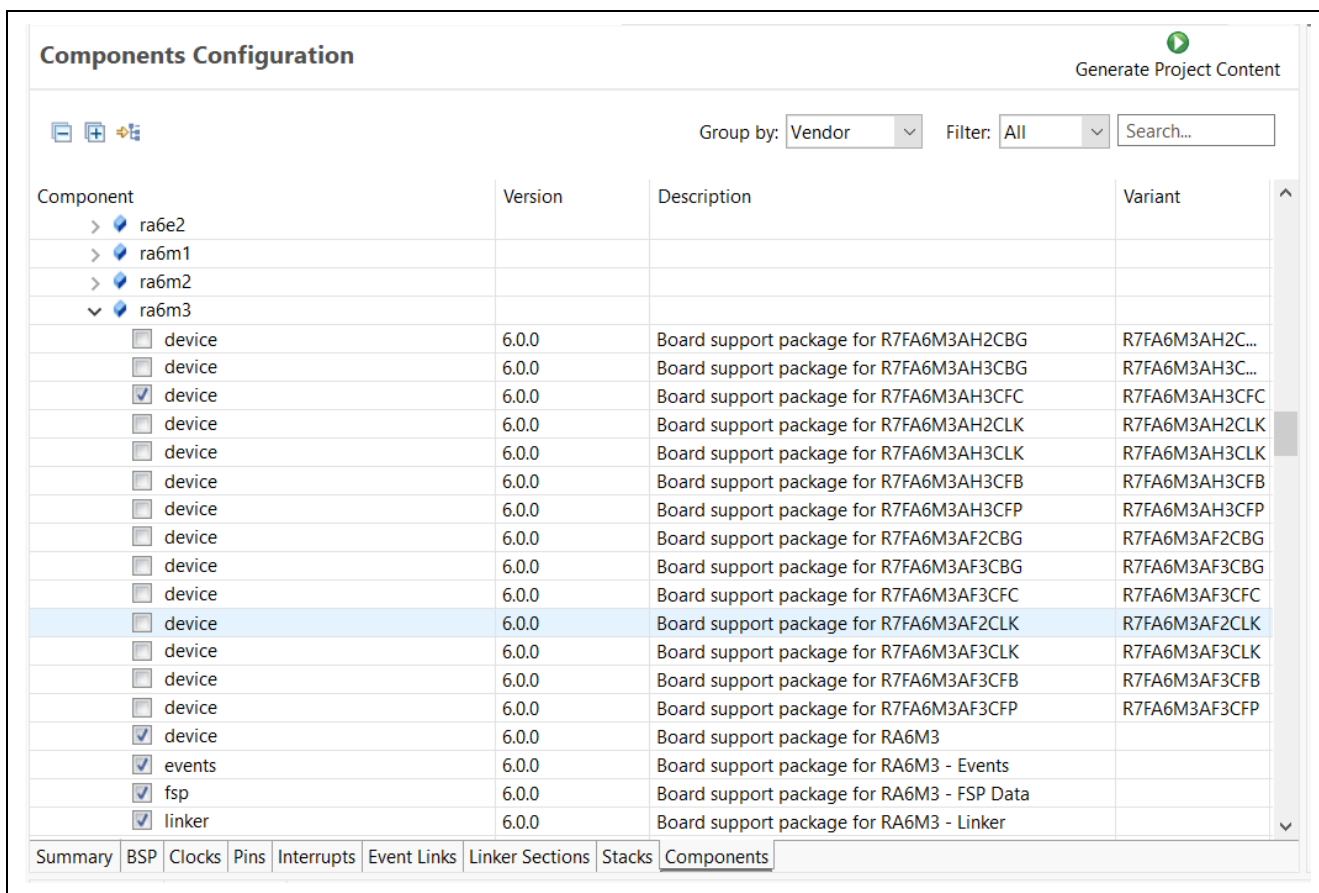



Figure 7. Components Tab Categories

You may expand any of the categories by clicking the arrow to the left of the category name.

The main FSP modules used in this application note are the general PWM timer (r_gpt), and the external input (r_icu).

4.2 Stacks Tab

The **Stacks** tab is where you can add and configure the threads that the FSP automatically creates for your application. You define a new thread by clicking the **New Stack** button  and then entering a unique name for the new thread. Once the new thread is added, the modules that the thread will use, along with any thread objects, must be defined.

As an example, after clicking HAL/**Common**, you should see something like the screen capture shown in Figure 8. This shows that the project requires multiple modules, for example, the r_icu driver which is used to control push buttons on the EK-RA6M3 kit.

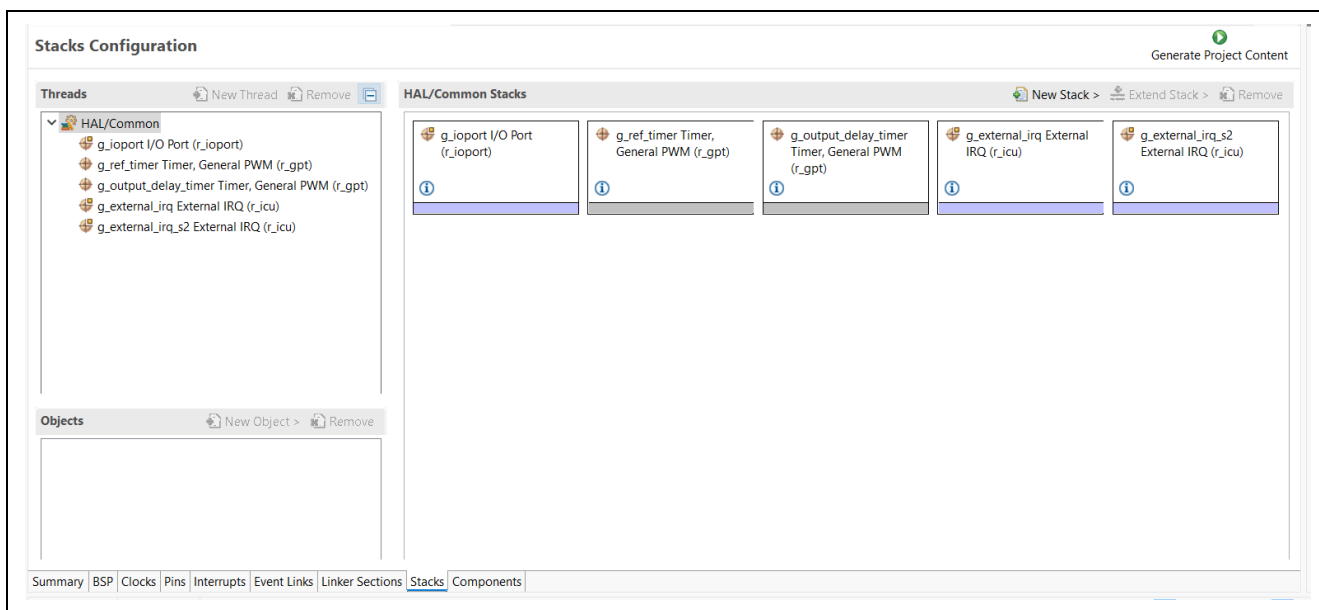



Figure 8. Properties and Modules Used for the Application

Additional modules can be added to any thread by clicking the  New Stack button. If the appropriate components have been added prior to adding modules to the threads, there should not be any errors. As an example, Figure 9 shows how to add a GPT timer to the Timer Thread. The timer is added by choosing **(+) New Stack > Search > r_gpt**.

If the exact component is not chosen when the module is selected, the FSP automatically selects it. If the FSP detects errors with the module addition, it prefaces the module with an error. Errors can be examined by hovering over the module name.

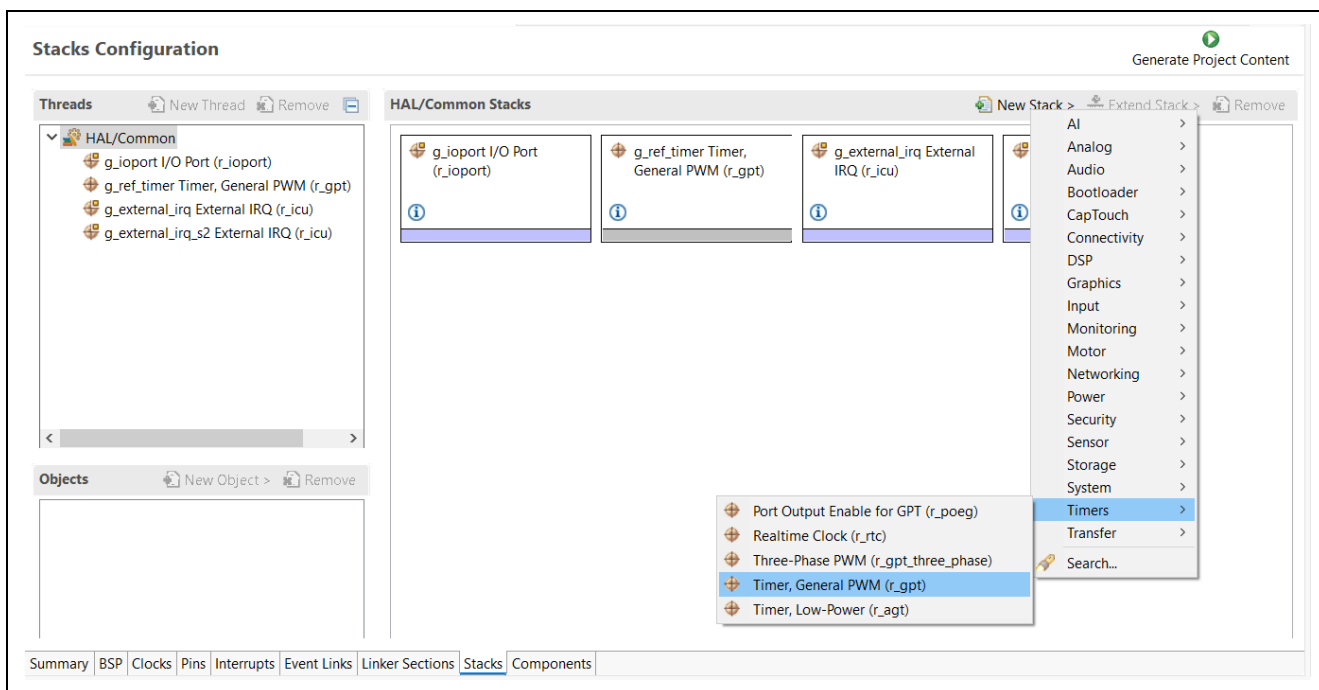


Figure 9. Adding r_gpt driver

4.3 Module Configuration

The properties must be configured once the new module has been added to the project. The properties depend on the module(s) that have been added. Use the **Properties** tab to configure them.

4.3.1 GPT Timers, PWM Output Pins

In this application note, the GPT timer channel 0 is used as the reference timer with the PWM output pin GTIOCA on P415. The GPT timer channel 1 is used as the output delay timer with PWM output pins, GTIOCA on P105, and GTIOCB on P104.

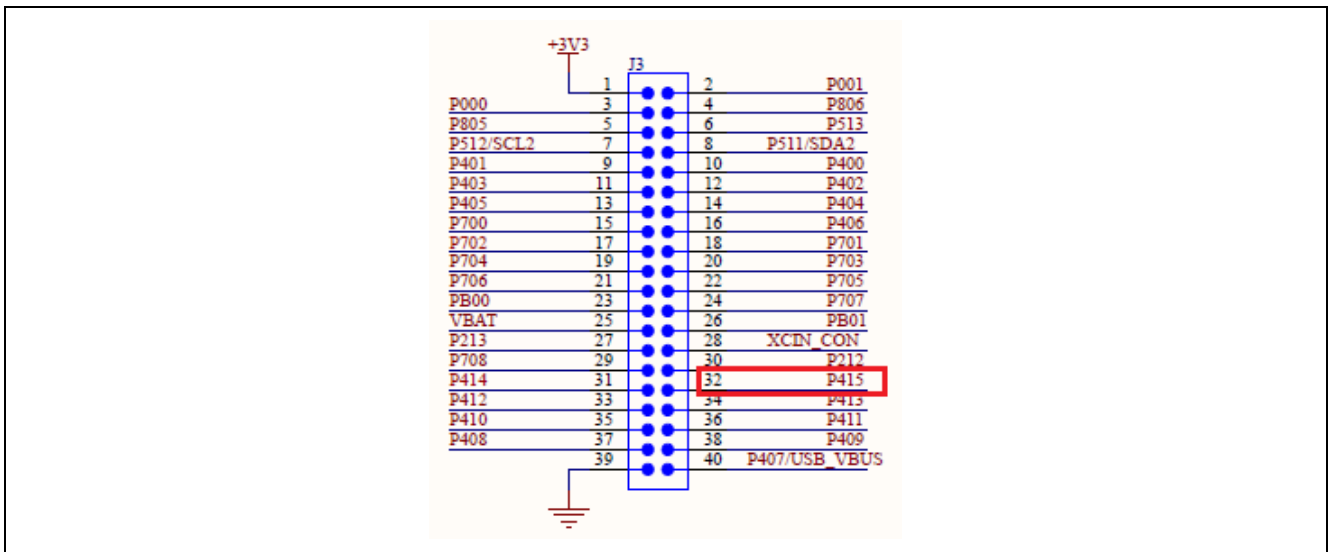


Figure 10. GPT Channel 0 GTIOCA Pin (P415)

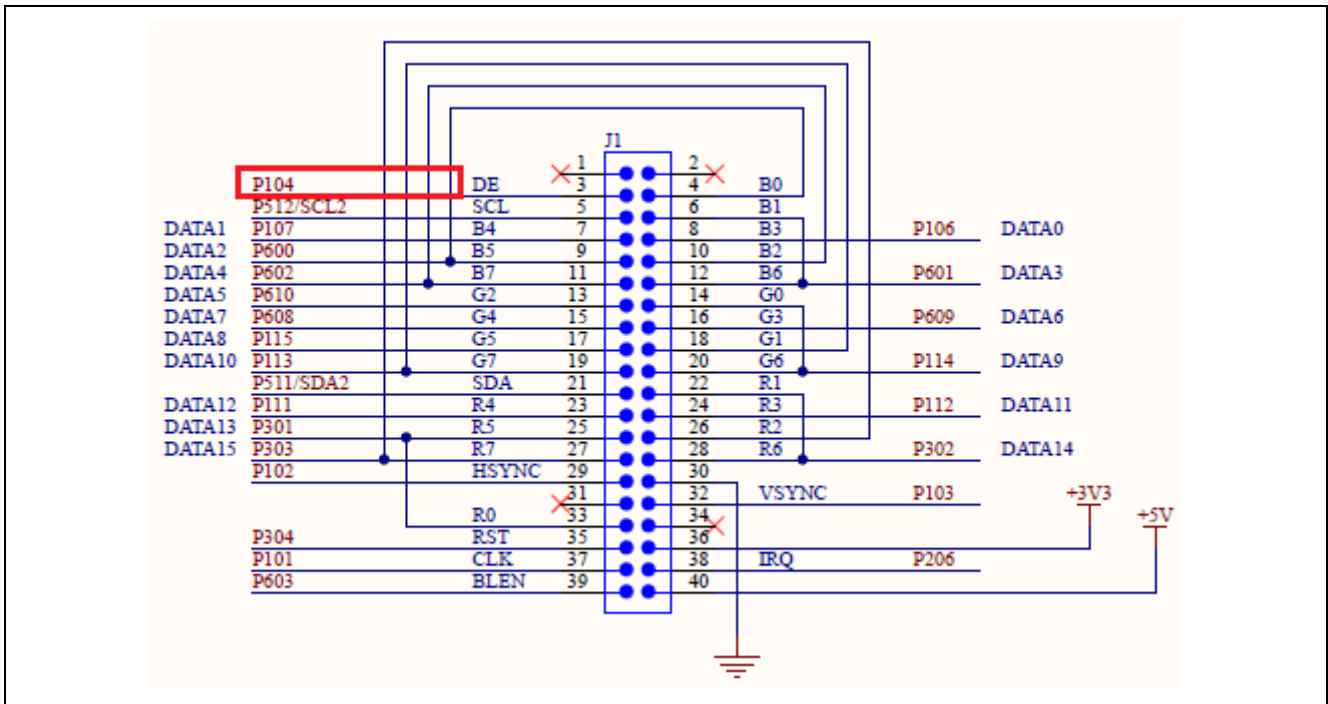


Figure 11. GPT Channel 1 GTIOCB Pin (P104)

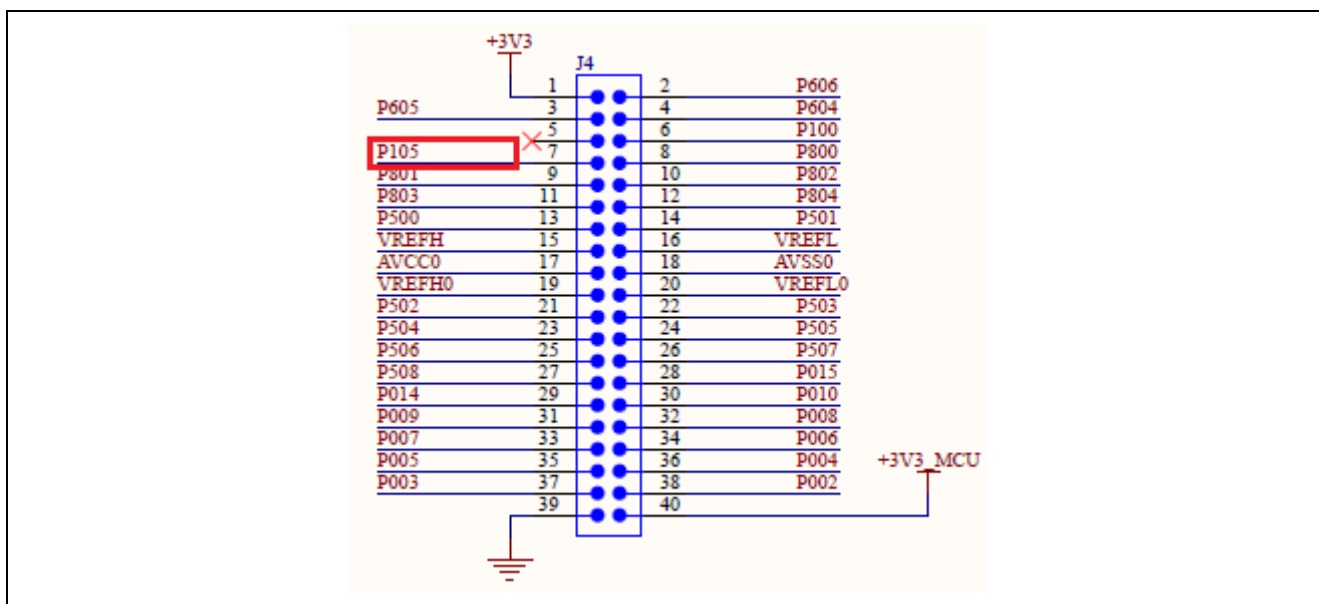


Figure 12. GPT Channel 1 GTIOCA Pin (P105)

4.3.2 GPT Timers, Pin Configuration

In **Pin Configuration**, set P415 as the GTIOCA output of GPT channel 0, set the Pin Group Selection to mixed, and set the **Operation Mode** to GTIOCA or GTIOCB.

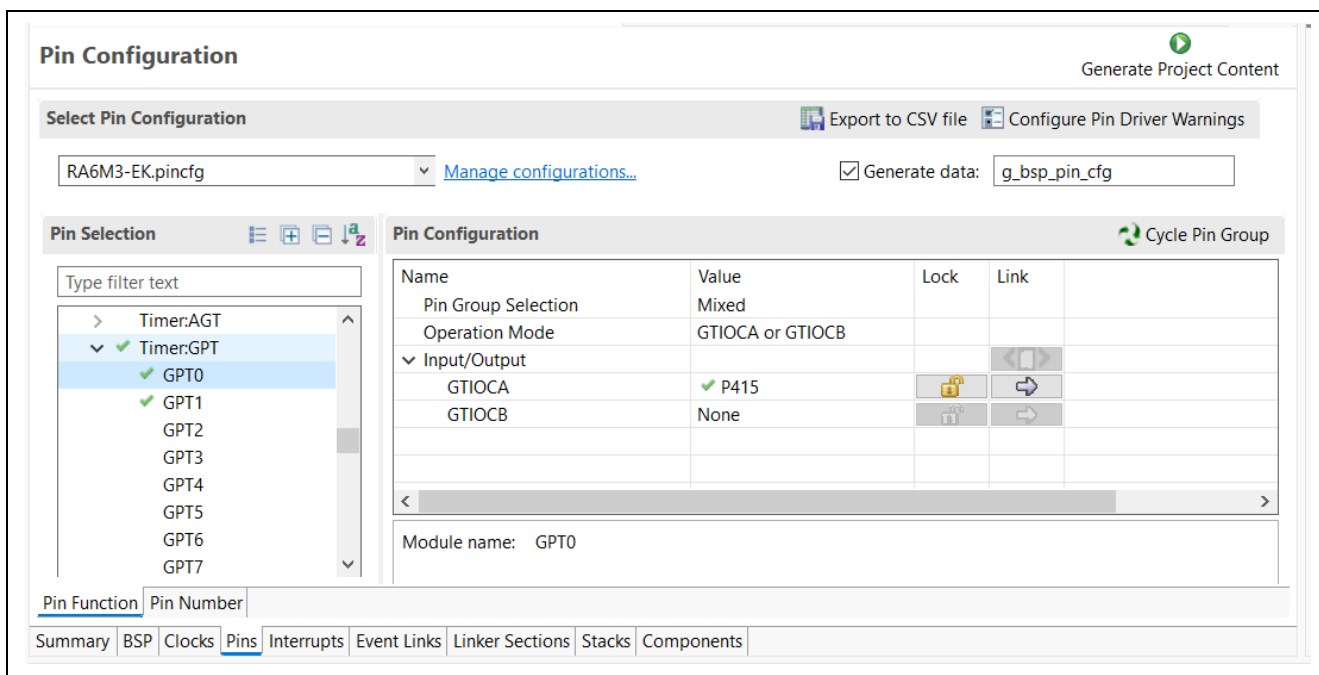


Figure 13. GPT Channel 0 Pin Configuration

In **Pin Configuration**, set P105 as the GTIOCA output of the GPT channel 1 and set P104 as GTIOCA output for the same channel. Set the **Pin Group Selection** to mixed and set the **Operation Mode** to GTIOCA and GTIOCB.

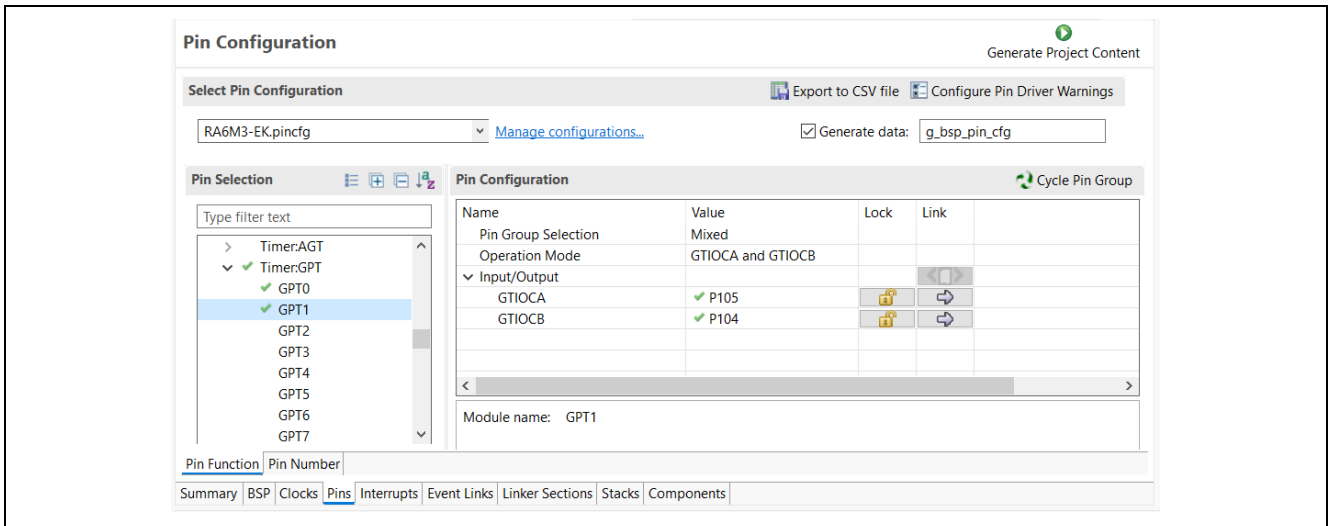


Figure 14. GPT Channel 1 Pin Configuration

4.3.3 GPT Timers, PWM Configuration

The reference timer (GPT channel 0) is set in PWM mode with timing and duty cycle as follows.

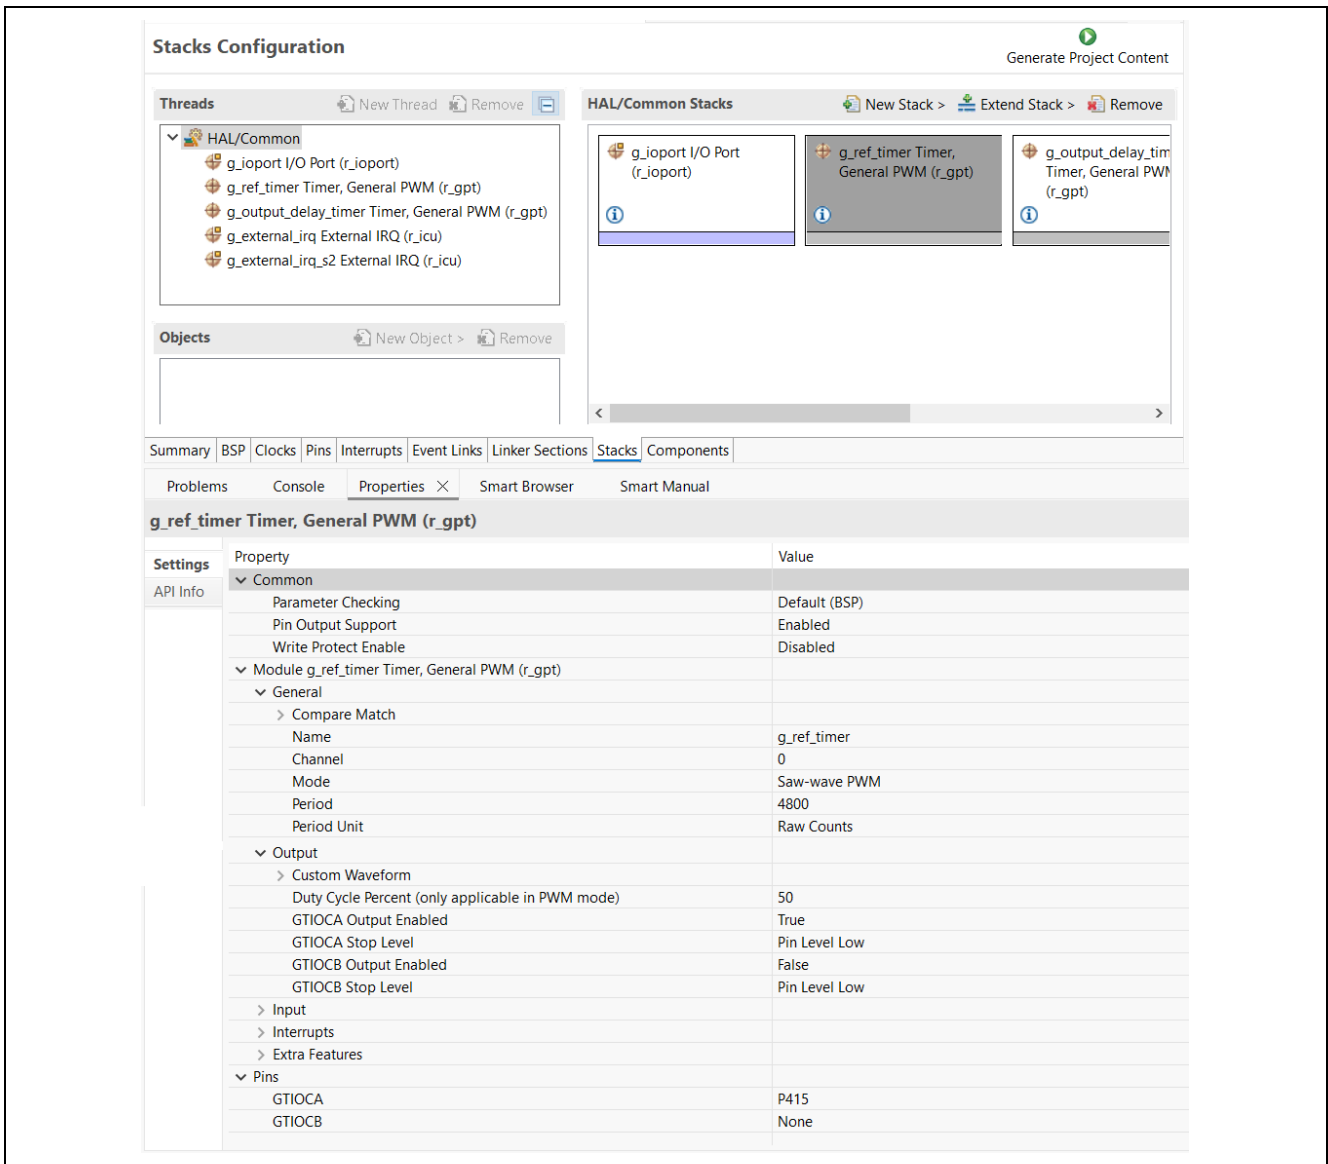


Figure 15. GPT Channel 0 Configuration

The output delay timer (GPT channel 1) is set in PWM mode with timing and duty cycle as follows.

The screenshot displays the 'Stacks Configuration' interface. On the left, a tree view under 'HAL/Common' lists several components, with 'g_output_delay_timer Timer, General PWM (r_gpt)' selected. The main area shows three stack components: 'g_output_delay_timer', 'g_external_irq External IRQ (r_icu)', and 'g_external_irq_s2 External IRQ (r_icu)'. Below this, a table provides the configuration details for the selected timer.

Settings	Property	Value
API Info	Common	
	Parameter Checking	Default (BSP)
	Pin Output Support	Enabled
	Write Protect Enable	Disabled
	Module g_output_delay_timer Timer, General PWM (r_gpt)	
	General	
	Compare Match	
	Name	g_output_delay_timer
	Channel	1
	Mode	Saw-wave PWM
	Period	4800
	Period Unit	Raw Counts
	Output	
	Custom Waveform	
	Duty Cycle Percent (only applicable in PWM mode)	50
	GTIOCA Output Enabled	True
	GTIOCA Stop Level	Pin Level Low
	GTIOCB Output Enabled	True
	GTIOCB Stop Level	Pin Level Low
	Input	
Interrupts		
Extra Features		
Pins		
GTIOCA	P105	
GTIOCB	P104	

Figure 16. GPT Channel 1 Configuration

4.3.4 PWM Delay Generation Circuit

The RA6M3 MCU has four-channel delay circuits that can connect to the General PWM Timer (GPT). Figure 17 shows its block diagram.

The circuit can control the rise and fall timing of the two PWM output pins with an accuracy of up to 1/32 times the period of the GPT clock (PCLKD), for channel 0/1/2/3.

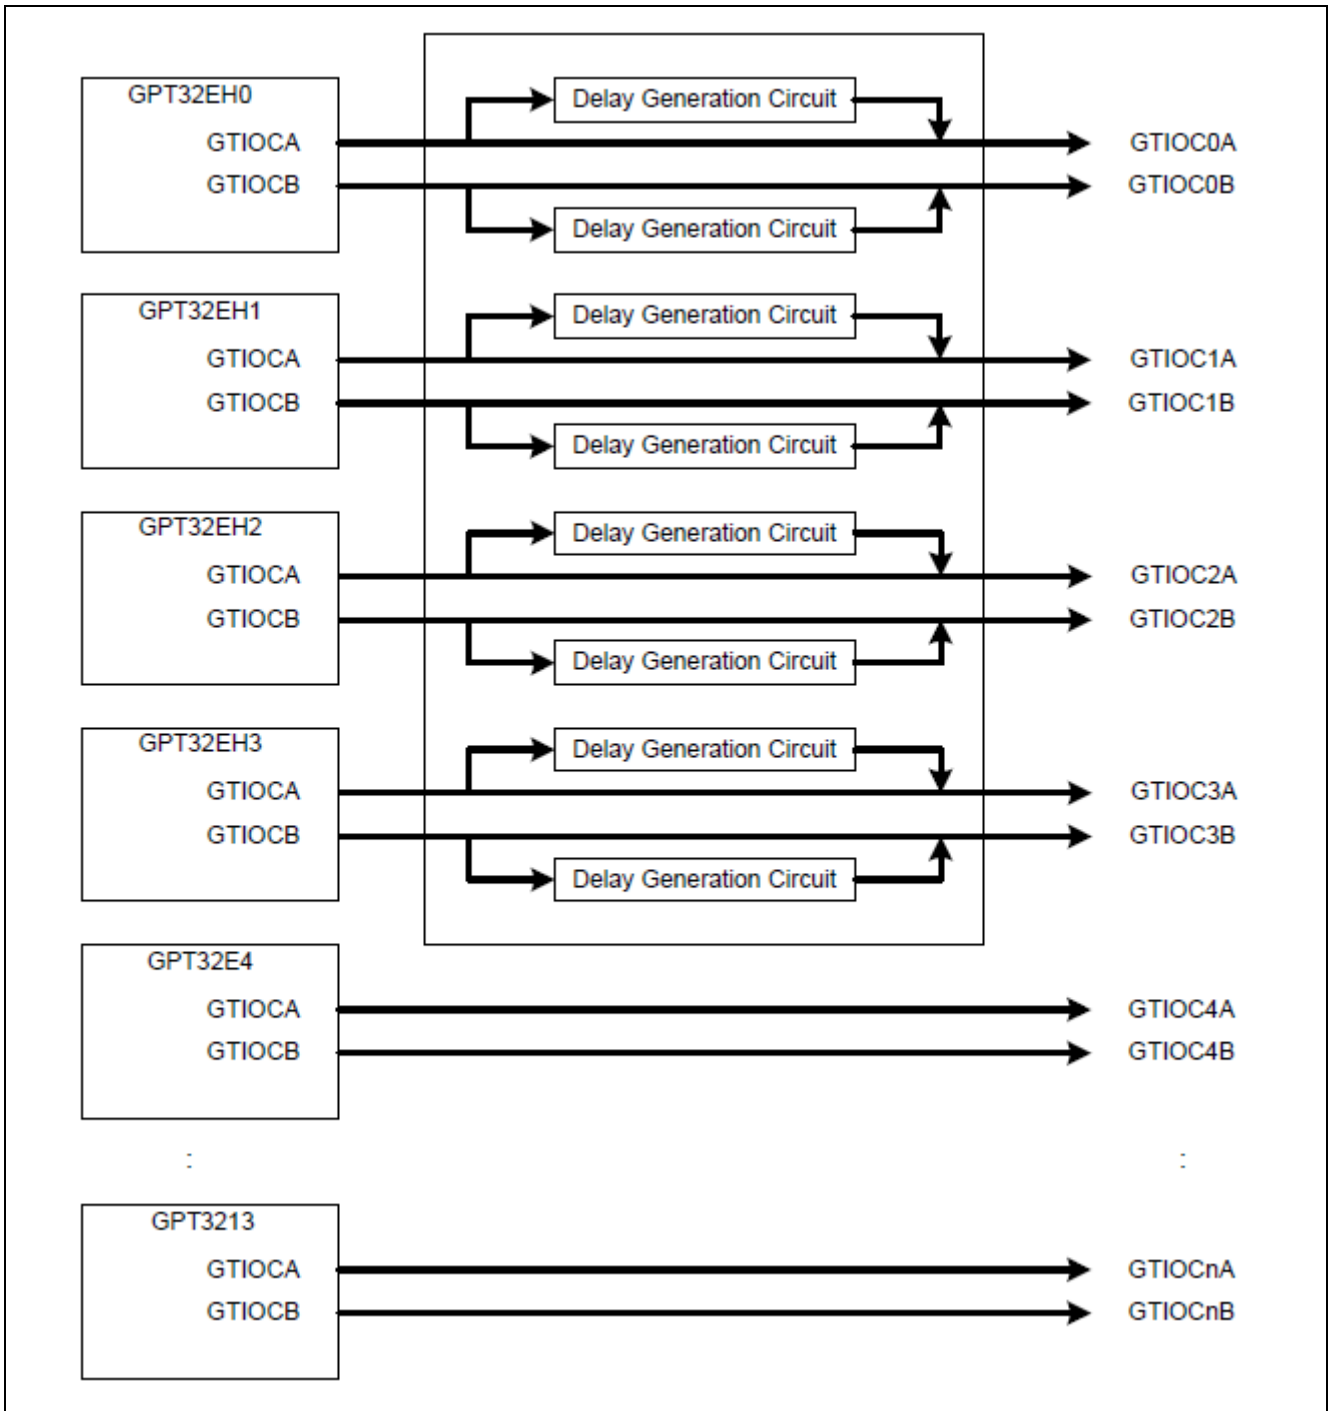


Figure 17. PWM Delay Generation Circuit Block Diagram

Figure 18 lists PWM delay generation circuit I/O pins available in RA6M3 MCU.

I/O pin	I/O	Function
GTIOC0A	Output	Delayed output of GTIOCA pin of GPT channel 0
GTIOC0B	Output	Delayed output of GTIOCB pin of GPT channel 0
GTIOC1A	Output	Delayed output of GTIOCA pin of GPT channel 1
GTIOC1B	Output	Delayed output of GTIOCB pin of GPT channel 1
GTIOC2A	Output	Delayed output of GTIOCA pin of GPT channel 2
GTIOC2B	Output	Delayed output of GTIOCB pin of GPT channel 2
GTIOC3A	Output	Delayed output of GTIOCA pin of GPT channel 3
GTIOC3B	Output	Delayed output of GTIOCB pin of GPT channel 3

Figure 18. PWM Delay Generation Circuit I/O Pins

4.3.5 Set Up PWM Delay Generation Circuit

The FSP provides register definitions for the PWM Generation Circuit in the MCU header file, such as R7FA6M3AH.h, shown in Figure 19.

```

/**
 * @brief PWM Delay Generation Circuit (R_GPT_ODC)
 */
typedef struct /*!< (@ 0x4007B000) R_GPT_ODC Structure */
{
    union
    {
        __IOM uint16_t GTDLYCR1; /*!< (@ 0x00000000) PWM Output Delay Control Register1 */

        struct
        {
            __IOM uint16_t DLLLEN : 1; /*!< [0..0] DLL Operation Enable */
            __IOM uint16_t DLYRST : 1; /*!< [1..1] PWM Delay Generation Circuit Reset */
            uint16_t : 6;
            __IOM uint16_t FRANGE : 1; /*!< [8..8] GPT core clock Frequency Range */
            uint16_t : 7;
        } GTDLYCR1_b;
    };

    union
    {
        __IOM uint16_t GTDLYCR2; /*!< (@ 0x00000002) PWM Output Delay Control Register2 */

        struct
        {
            __IOM uint16_t DLYBS0 : 1; /*!< [0..0] PWM Delay Generation Circuit bypass */
            __IOM uint16_t DLYBS1 : 1; /*!< [1..1] PWM Delay Generation Circuit bypass */
            __IOM uint16_t DLYBS2 : 1; /*!< [2..2] PWM Delay Generation Circuit bypass */
            __IOM uint16_t DLYBS3 : 1; /*!< [3..3] PWM Delay Generation Circuit bypass */
            uint16_t : 4;
            __IOM uint16_t DLYEN0 : 1; /*!< [8..8] PWM Delay Generation Circuit enable */
            __IOM uint16_t DLYEN1 : 1; /*!< [9..9] PWM Delay Generation Circuit enable */
            __IOM uint16_t DLYEN2 : 1; /*!< [10..10] PWM Delay Generation Circuit enable */
            __IOM uint16_t DLYEN3 : 1; /*!< [11..11] PWM Delay Generation Circuit enable */
            __IOM uint16_t DLYDENB0 : 1; /*!< [12..12] PWM Delay Generation Circuit Disenable for GTIOCB */
            uint16_t : 3;
        } GTDLYCR2_b;
    };

    __IM uint16_t RESERVED[10];
    __IOM R_GPT_ODC_GTDLYR_Type GTDLYR[4]; /*!< (@ 0x00000018) PWM DELAY RISING */
    __IOM R_GPT_ODC_GTDLYR_Type GTDLYF[4]; /*!< (@ 0x00000028) PWM DELAY FALLING */
} R_GPT_ODC_Type; /*!< Size = 56 (0x38)

```

Figure 19. Register Definitions for PWM Delay Generation Circuit in R7FA6M3AH.h

You can directly access the above registers to set up and adjust the PWM Delay Generation circuit.

Figure 20 shows the initialization sequence for the PWM Delay Generation Circuit.

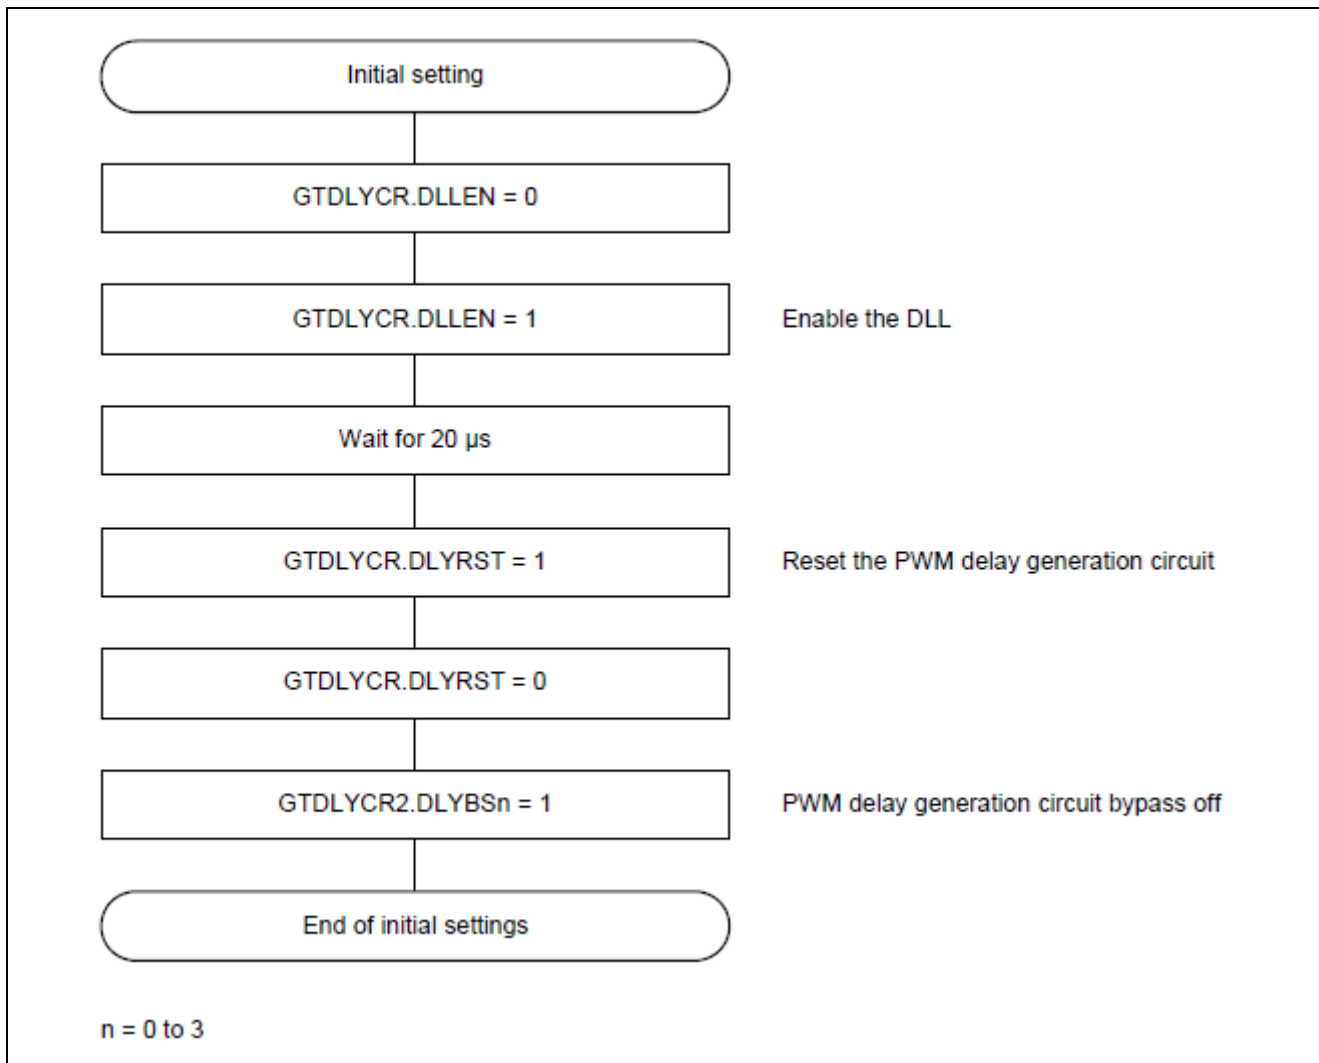


Figure 20. Initialization Flow for the PWM Delay Generation Circuit

In the PWM delay generation circuit, delay can be applied to rising and falling edges of the PWM output to an accuracy of 1/32 of the period of the GPT operation clock (PCLKD). This is described in section 23.3.3, PWM Output Operating Mode in R01UH0886 User’s Manual. Delays associated with the settings are reflected in the PWM output with the timing described in section 24.3.2, Timing for Transfer of GTDLYRnA, GTLDYRnB, GTDLYFnA, and GTDLYFnB Register Settings in the R01UH0886 User’s Manual on the Renesas website. The figure below shows the association between the GTDLYRnA, GTLDYRnB, GTDLYFnA, and GTDLYFnB registers and the PWM outputs.

PWM output pin	Rising-edge delay setting register	Falling-edge delay setting register
GTIOC0A	GTDLYR0A	GTDLYF0A
GTIOC0B	GTDLYR0B	GTDLYF0B
GTIOC1A	GTDLYR1A	GTDLYF1A
GTIOC1B	GTDLYR1B	GTDLYF1B
GTIOC2A	GTDLYR2A	GTDLYF2A
GTIOC2B	GTDLYR2B	GTDLYF2B
GTIOC3A	GTDLYR3A	GTDLYF3A
GTIOC3B	GTDLYR3B	GTDLYF3B

Figure 21. Association Between PWM Output Pins and Delay Setting

When the PWM delay generation circuit is in use, the timing with which a PWM output signal rises and falls can be controlled to an accuracy of 1/32 of the period of the GPT operation clock (PCLKD). When this option is not in use, the period of the PWM output waveform is controlled to accuracy of one period of PCLKD.

Additionally, the delay settings also control the periods at high and low level for the PWM waveform to the given accuracy. PWM delay generation circuit channels can be individually enabled or disabled.

5. Application Code Highlights

This section details some highlights of the application.

```

    * @brief This function is setting up GPT/PWM timer
fsp_err_t gpt_ref_timer_PWM_init(void)
{
    fsp_err_t err = FSP_SUCCESS;
    /* Open GPT */
    err = R_GPT_Open(&g_ref_timer_ctrl, &g_ref_timer_cfg);
    if(FSP_SUCCESS != err)
    {
        return err;
    }
    /* Enable GPT Timer */
    err = R_GPT_Enable(&g_ref_timer_ctrl);
    /* Handle error */
    if (FSP_SUCCESS != err)
    {
        return err;
    }
    /* Reset GPT timer */
    err = R_GPT_Reset(&g_ref_timer_ctrl);

    return err;
}

    * @brief This function is setting up GPT/PWM timer
fsp_err_t gpt_output_delay_timer_PWM_init(void)
{
    fsp_err_t err = FSP_SUCCESS;
    /* Open GPT */
    err = R_GPT_Open(&g_output_delay_timer_ctrl, &g_output_delay_timer_cfg);
    if(FSP_SUCCESS != err)
    {
        return err;
    }
    /* Enable GPT Timer */
    err = R_GPT_Enable(&g_output_delay_timer_ctrl);
    /* Handle error */
    if (FSP_SUCCESS != err)
    {
        return err;
    }
    /* Reset GPT timer */
    err = R_GPT_Reset(&g_output_delay_timer_ctrl);

    return err;
}

```

Figure 22. Initialize GPT Timers


```

void odc_init(void)
{
    /* Initialize the PWM Delay Generation Circuit */
    R_GPT_PwmOutputDelayInitialize();

    /* GPT0 (Ref PWM) & GPT1 (PWM Output Delay) simultaneously */
    R_GPT0->GTSTR = 0x00000003;
}
    
```

Figure 23. Initialize PWM Delay Generation Circuit

```

/* Wait for the pushbutton S1 to to be pressed and the GPT1 (PWM Output Delay) overflow to occur at the same time */
if((true == g_sw1_press) && ( 1 == g_output_delay_overflow_flag ))
{
    /* Clear user pushbutton flag */
    g_sw1_press = false;

    /* Set output delays */
    /* for rising edge, pin A */
    err = R_GPT_PwmOutputDelaySet(&g_output_delay_timer_ctrl,
                                GPT_PWM_OUTPUT_DELAY_EDGE_RISING,
                                output_delay_s1,
                                GPT_IO_PIN_GTIOCA);

    if(err != FSP_SUCCESS)
    {
        APP_ERR_TRAP(err);
    }

    /* for falling edge, pin B */
    err = R_GPT_PwmOutputDelaySet(&g_output_delay_timer_ctrl,
                                GPT_PWM_OUTPUT_DELAY_EDGE_FALLING,
                                output_delay_s1,
                                GPT_IO_PIN_GTIOCB);

    if(err != FSP_SUCCESS)
    {
        APP_ERR_TRAP(err);
    }

    output_delay_s1++;
    if(output_delay_s1 >= 32)
    {
        output_delay_s1 = 0;
    }
}
    
```

Figure 24. Add Delays on Rising Edge and Falling Edge of PWM Waveform

6. Importing and Building the Project

To bring the application into e² studio, follow these steps:

1. Launch e² studio.
2. In the workspace launcher, browse to the chosen workspace.
3. Close the **Welcome** window.
4. In e² studio go to **File > Import**.
5. In the **Import** dialog box, pick **Existing Projects into Workspace**.
6. Select the archive file.
7. Select the project and click **Finish**.
8. Open `configuration.xml`.
9. Click on **Generate Project Content** on the FSP configurator window.
10. Now build the project.

7. Downloading the Executable to the EK-RA6M3 Kit

To connect and run the code, follow these steps:

1. Connect the PC to the USB port next to the Ethernet jack silkscreened DEBUG using the USB cable.
2. Go to **Run > Debug configurations**.
3. Click **Debug**. The program will break at the reset handler.
4. Click **Switch** to the **Debug perspective** when prompted by the e² studio.
5. Click **Run > Resume**.
6. Press S1 to adjust the output delay on GPT channel 1 GTIOCA rising edge and GTIOCB falling edge.
Press S2 to adjust the output delay on GPT channel 1 GTIOCB rising edge and GTIOCA falling edge.

8. Output Waveforms

The project generates 25-kHz PWM output on P415 (GPT channel 0 GTIOCA), P105 (GPT channel 1 GTIOCA) and P104 (GPT channel 1 GTIOCB).

The following figures show the picture of initial output waveforms on these pins with P415 output in yellow, P105 in green and P104 in blue.

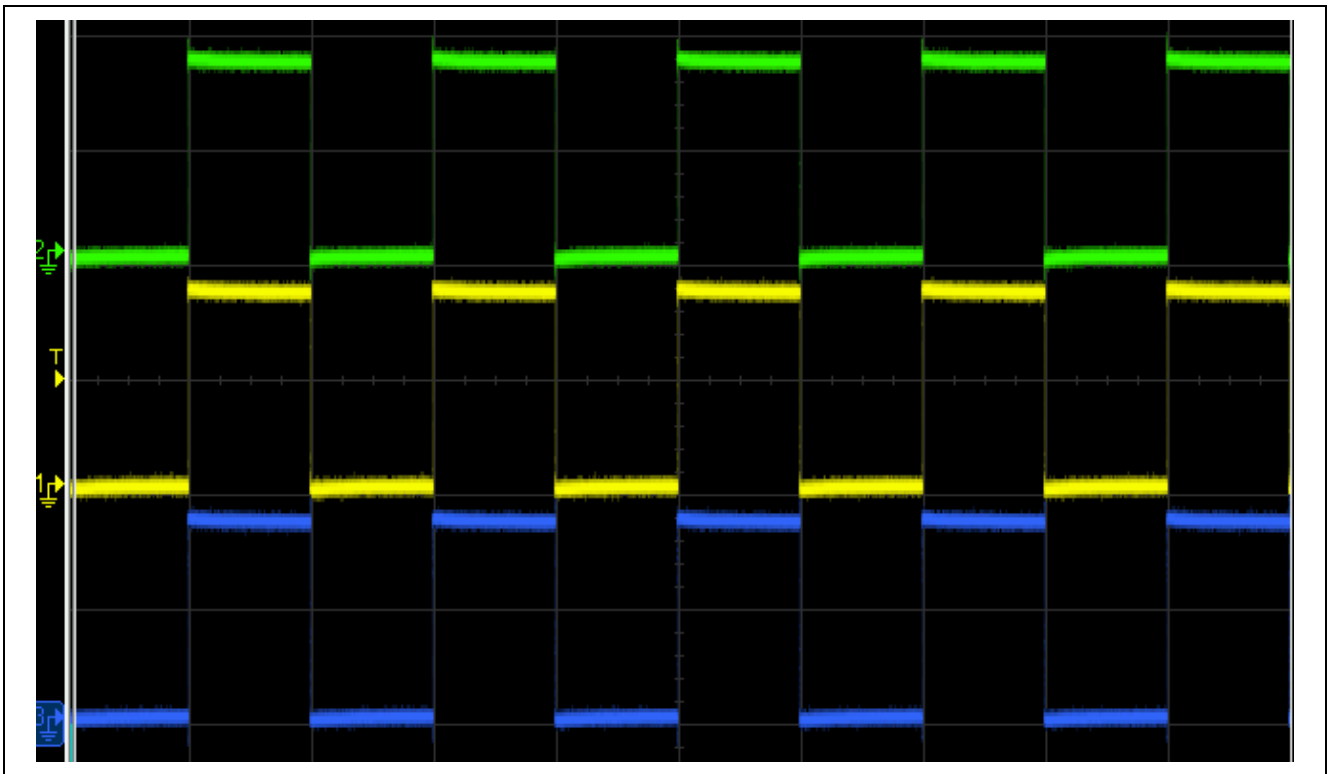


Figure 25. Initial Output Waveforms

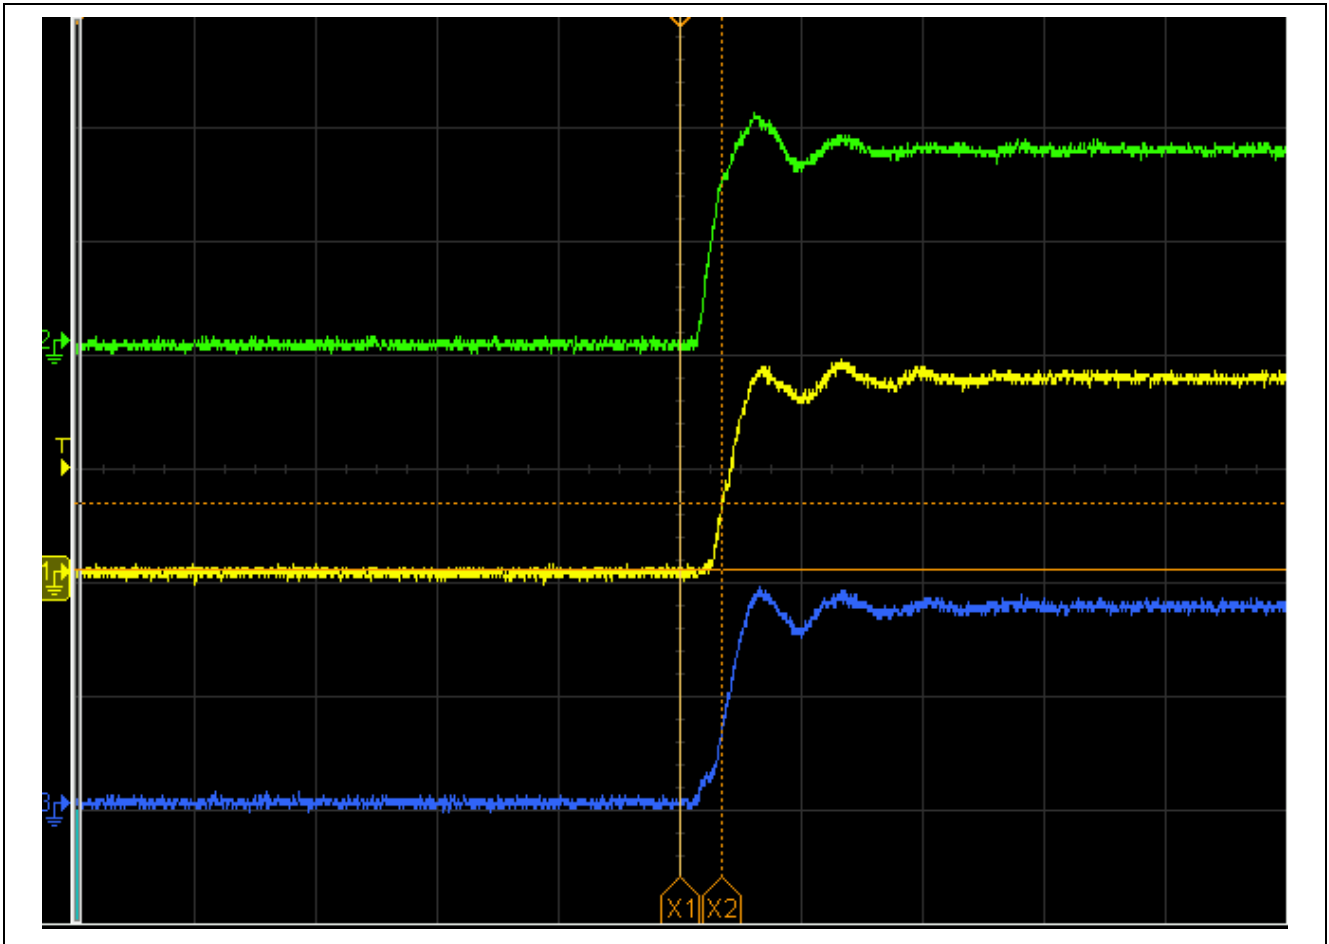


Figure 26. Output Waveforms with No Delay

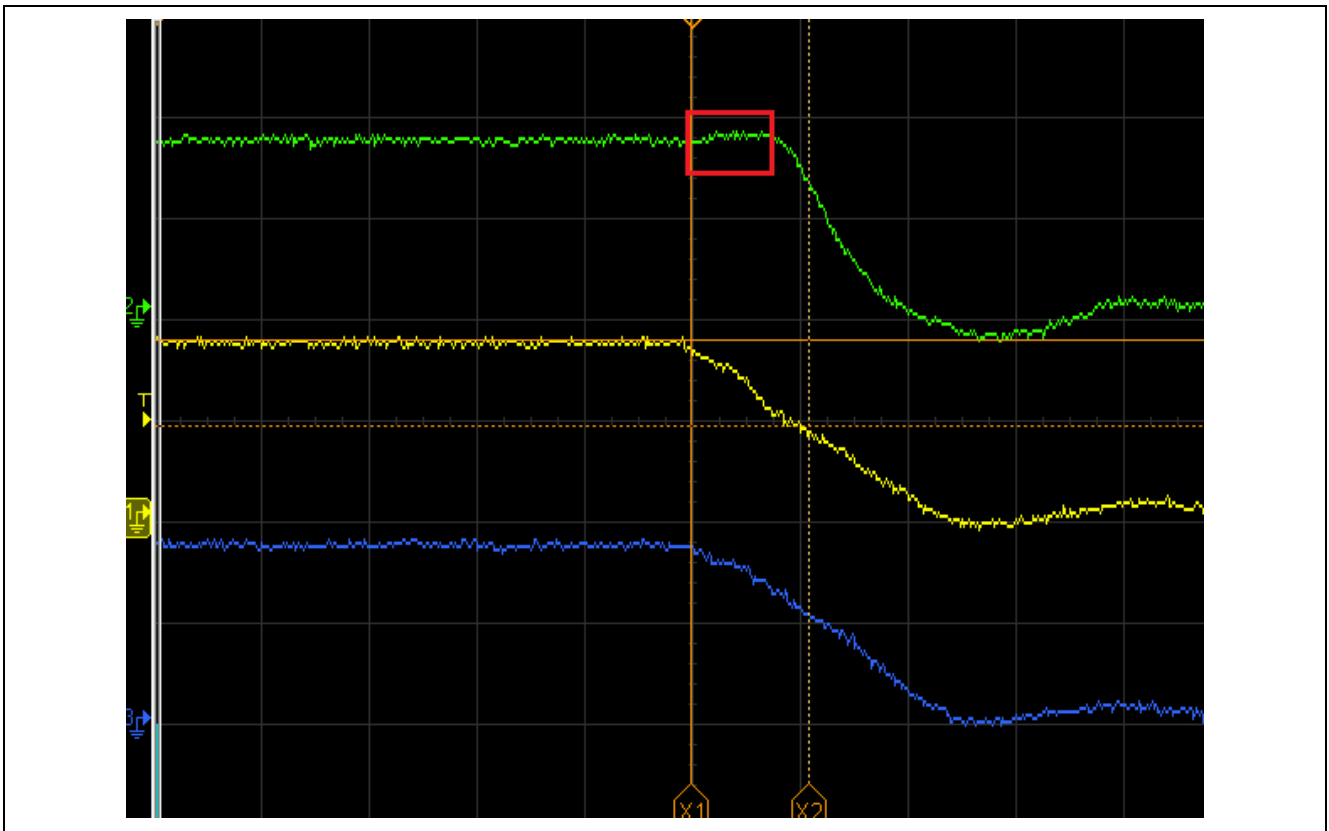


Figure 27. Output Waveforms with Delay on Falling Edge GTIOCA1: GTDLYF[1].A = 16.

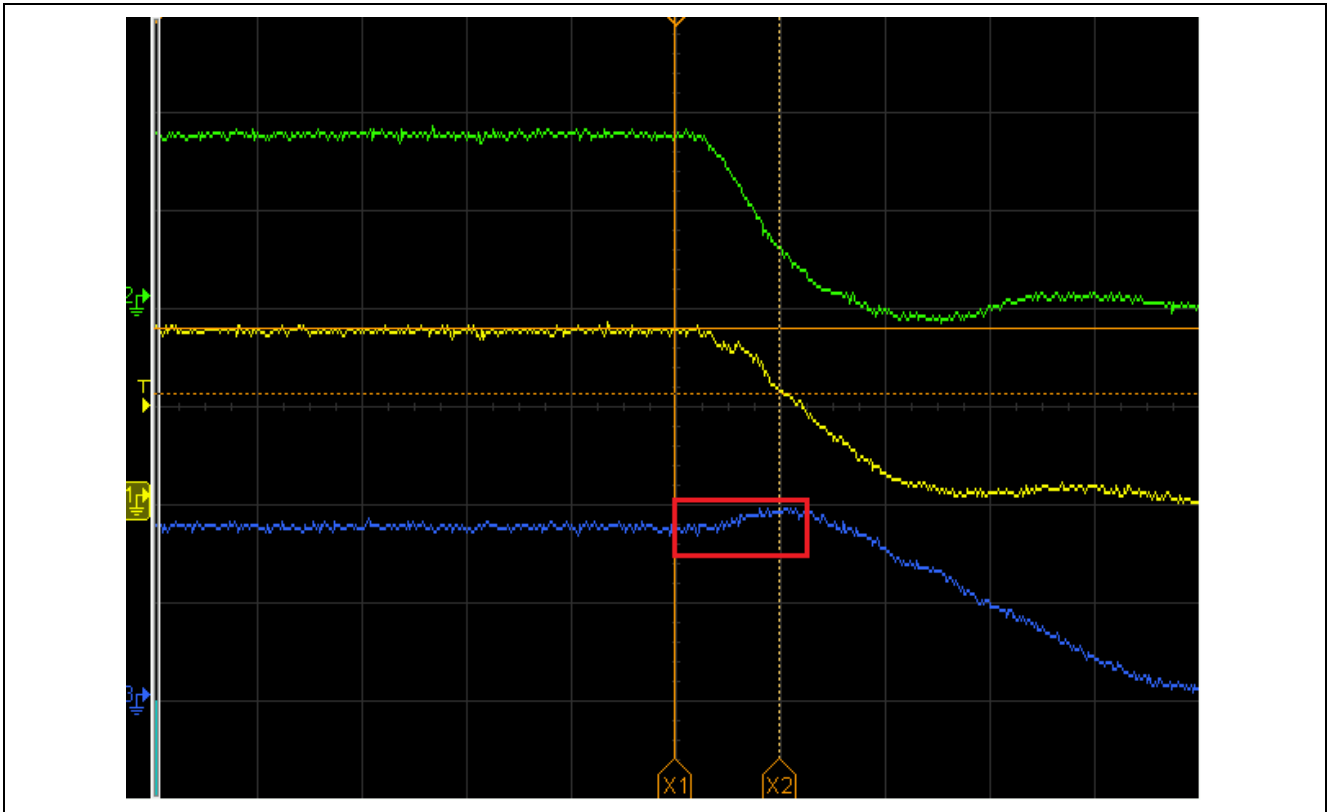


Figure 28. Output Waveforms with Delay on Falling Edge GTIOCB1: GTDLYF[1].B = 31.

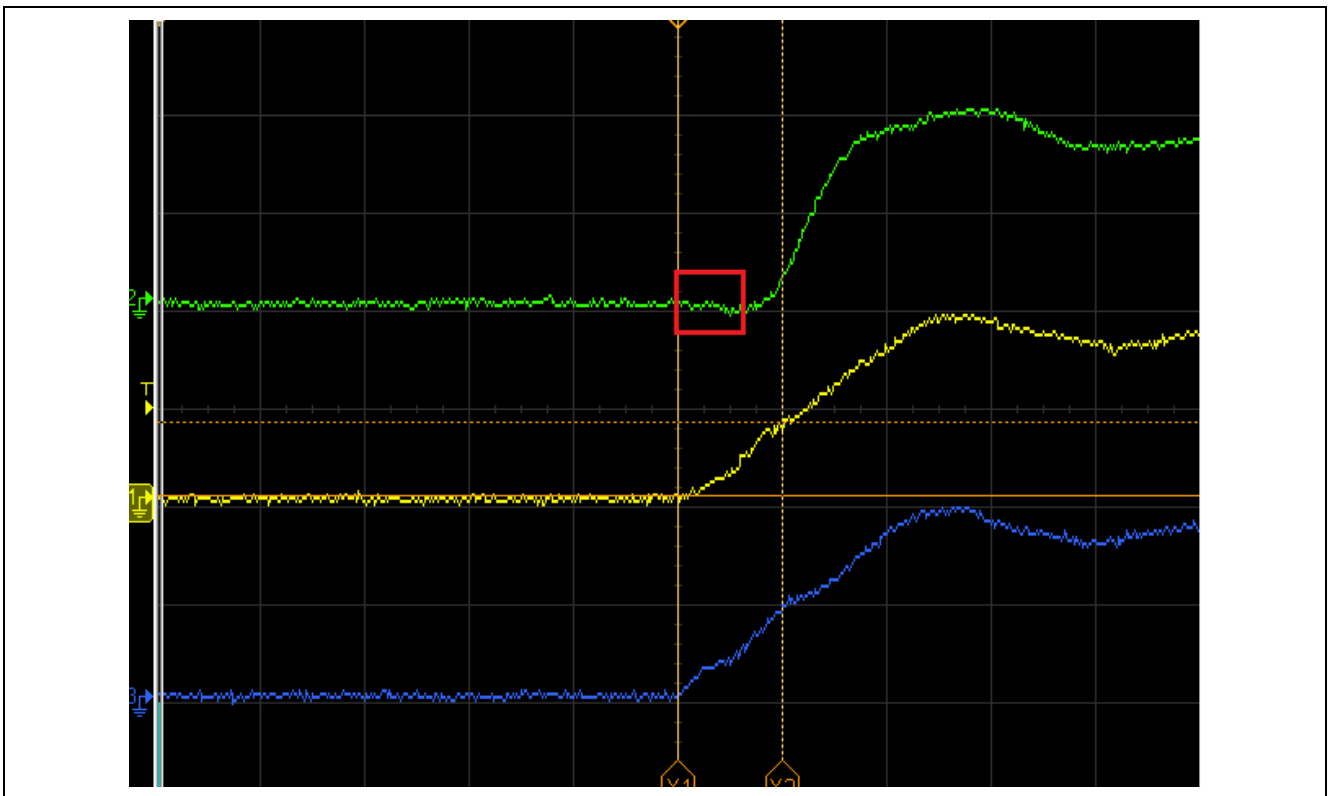


Figure 29. Output Waveforms with Delay on Rising Edge GTIOCA1: GTDLYR[1].A = 16.

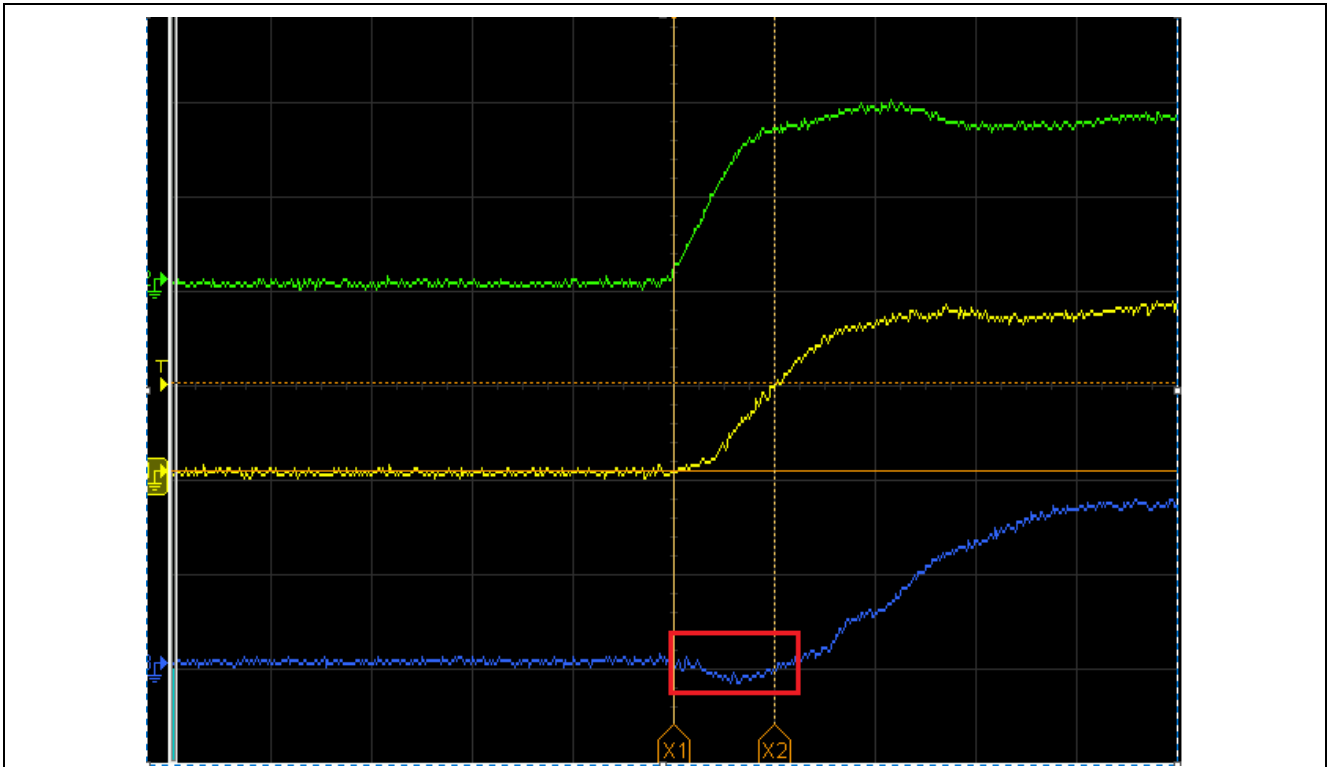


Figure 30. Output Waveforms with Delay on Rising Edge GTIOCB1: GTDLYR[1].B = 31.

Website and Support

Visit the following vanity URLs to learn about key elements of the RA family, download components and related documentation, and get support.

RA Product Information	www.renesas.com/ra
RA Product Support Forum	www.renesas.com/ra/forum
RA Flexible Software Package	www.renesas.com/FSP
Renesas Support	www.renesas.com/support

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Feb.16.22	-	Initial version
1.01	Aug.03.23	-	Updated for FSP v4.4.0
1.02	Jul.16.24	-	Updated for FSP v5.2.0
1.03	Jul.08.25	-	Updated for FSP v6.0.0

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity.

Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:

www.renesas.com/contact/.