

## RL78 Family

### RL78 Microcontroller (RL78 Protocol C) Serial Programming Guide

---

#### Introduction

This application note describes the specifications of the boot firmware in RL78 microcontrollers. If the firmware is used in a way that does not conform with the descriptions in this document, correct operation is not guaranteed.

#### Target Device

RL78 Family

Please refer to the following site for target devices compatible with RL78 protocol C.

<https://en-support.renesas.com/knowledgeBase/16979203>

## Contents

|       |  |    |
|-------|--|----|
| 1.    | Terminology .....  | 6  |
| 1.1   | Boot Firmware .....  | 6  |
| 1.2   | Flash Memory .....   | 6  |
| 1.3   | Device or Microcontroller .....                            | 6  |
| 1.4   | Programmer or Host .....                                   | 6  |
| 1.5   | Flash Memory Programming Mode .....                        | 6  |
| 1.6   | Flash Options .....  | 6  |
| 2.    | System Architecture .....                                  | 7  |
| 2.1   | Block Diagram .....  | 7  |
| 3.    | Communication Modes .....                                  | 8  |
| 3.1   | Single-Line UART Communications .....                      | 8  |
| 3.2   | Dedicated UART Communications .....                        | 10 |
| 4.    | General Procedures .....                                   | 11 |
| 4.1   | Initialization Phase .....                                 | 12 |
| 4.1.1 | Procedure of Processing .....                              | 12 |
| 4.2   | Communication Establishment Phase .....                    | 12 |
| 4.2.1 | Procedure of Processing .....                              | 12 |
| 4.2.2 | Timing Charts of Communication Establishment .....         | 13 |
| 4.3   | Authentication Phase .....                                 | 15 |
| 4.3.1 | Procedure of Processing .....                              | 15 |
| 4.4   | Command Acceptance Phase .....                             | 16 |
| 4.4.1 | Procedure of Processing .....                              | 16 |
| 5.    | Packet Format .....  | 16 |
| 5.1   | Command Packet .....                                       | 16 |
| 5.2   | Data Packet .....  | 17 |
| 5.3   | CMD: Command Code .....                                    | 17 |
| 5.4   | STS: Status Code .....                                     | 18 |
| 6.    | Commands .....   | 19 |
| 6.1   | Reset Command .....  | 19 |
| 6.1.1 | Sequence Diagram .....                                     | 19 |
| 6.1.2 | List of Packets to be Transmitted .....                    | 20 |
| 6.1.3 | Procedure of Processing .....                              | 20 |
| 6.1.4 | Status Information Returned from the Microcontroller ..... | 21 |
| 6.2   | Verify Command .....                                       | 22 |
| 6.2.1 | Sequence Diagram .....                                     | 22 |
| 6.2.2 | List of Packets to be Transmitted .....                    | 23 |

|        |  |    |
|--------|--|----|
| 6.2.3  | Procedure of Processing.....                               | 25 |
| 6.2.4  | Status Information Returned from the Microcontroller ..... | 26 |
| 6.3    | Block Erase Command .....                                  | 27 |
| 6.3.1  | Sequence Diagram .....                                     | 27 |
| 6.3.2  | List of Packets to be Transmitted .....                    | 27 |
| 6.3.3  | Procedure of Processing.....                               | 28 |
| 6.3.4  | Status Information Returned from the Microcontroller ..... | 29 |
| 6.4    | Block Blank Check Command .....                            | 30 |
| 6.4.1  | Sequence Diagram .....                                     | 30 |
| 6.4.2  | List of Packets to be Transmitted .....                    | 31 |
| 6.4.3  | Procedure of Processing.....                               | 32 |
| 6.4.4  | Status Information Returned from the Microcontroller ..... | 32 |
| 6.5    | Programming Command.....                                   | 33 |
| 6.5.1  | Sequence Diagram .....                                     | 33 |
| 6.5.2  | List of Packets to be Transmitted .....                    | 34 |
| 6.5.3  | Procedure of Processing.....                               | 36 |
| 6.5.4  | Status Information Returned from the Microcontroller ..... | 38 |
| 6.6    | Baud Rate Set Command .....                                | 39 |
| 6.6.1  | Sequence Diagram .....                                     | 39 |
| 6.6.2  | List of Packets to be Transmitted .....                    | 40 |
| 6.6.3  | Procedure of Processing.....                               | 41 |
| 6.6.4  | Status Information Returned from the Microcontroller ..... | 42 |
| 6.6.5  | List of Parameters .....                                   | 43 |
| 6.7    | Security ID Authentication Command.....                    | 44 |
| 6.7.1  | Sequence Diagram .....                                     | 44 |
| 6.7.2  | List of Packets to be Transmitted .....                    | 45 |
| 6.7.3  | Procedure of Processing.....                               | 46 |
| 6.7.4  | Status Information Returned from the Microcontroller ..... | 46 |
| 6.8    | Security Set Command .....                                 | 47 |
| 6.8.1  | Sequence Diagram .....                                     | 47 |
| 6.8.2  | List of Packets to be Transmitted .....                    | 48 |
| 6.8.3  | Procedure of Processing.....                               | 49 |
| 6.8.4  | Status Information Returned from the Microcontroller ..... | 50 |
| 6.8.5  | Notes on Using this Command .....                          | 50 |
| 6.9    | Security Get Command.....                                  | 51 |
| 6.9.1  | Sequence Diagram .....                                     | 51 |
| 6.9.2  | List of Packets to be Transmitted .....                    | 51 |
| 6.9.3  | Procedure of Processing.....                               | 53 |
| 6.9.4  | Status Information Returned from the Microcontroller ..... | 53 |
| 6.10   | Security Release Command .....                             | 54 |
| 6.10.1 | Sequence Diagram .....                                     | 54 |

|        |  |    |
|--------|--|----|
| 6.10.2 | List of Packets to be Transmitted .....                    | 55 |
| 6.10.3 | Procedure of Processing.....                               | 56 |
| 6.10.4 | Status Information Returned from the Microcontroller ..... | 57 |
| 6.10.5 | Notes on Using this Command .....                          | 57 |
| 6.11   | Extra Option Set Command .....                             | 58 |
| 6.11.1 | Sequence Diagram .....                                     | 58 |
| 6.11.2 | List of Packets to be Transmitted .....                    | 59 |
| 6.11.3 | Procedure of Processing.....                               | 61 |
| 6.11.4 | Status Information Returned from the Microcontroller ..... | 61 |
| 6.11.5 | Notes on Using this Command .....                          | 62 |
| 6.12   | BTBLS Set Command (RL78/L23 only) .....                    | 63 |
| 6.12.1 | Sequence Diagram .....                                     | 63 |
| 6.12.2 | List of Packets to be Transmitted .....                    | 64 |
| 6.12.3 | Procedure of Processing.....                               | 65 |
| 6.12.4 | Status Information Returned from the Microcontroller ..... | 66 |
| 6.12.5 | Notes on Using this Command .....                          | 66 |
| 6.13   | BTBLS Get Command (RL78/L23 only) .....                    | 67 |
| 6.13.1 | Sequence Diagram .....                                     | 67 |
| 6.13.2 | List of Packets to be Transmitted .....                    | 68 |
| 6.13.3 | Procedure of Processing.....                               | 69 |
| 6.13.4 | Status Information Returned from the Microcontroller ..... | 69 |
| 6.14   | Flash Read Protection Set Command .....                    | 70 |
| 6.14.1 | Sequence Diagram .....                                     | 70 |
| 6.14.2 | List of Packets to be Transmitted .....                    | 71 |
| 6.14.3 | Procedure of Processing.....                               | 71 |
| 6.14.4 | Status Information Returned from the Microcontroller ..... | 73 |
| 6.14.5 | Notes on Using this Command .....                          | 73 |
| 6.15   | Flash Shield Window Set Command .....                      | 74 |
| 6.15.1 | Sequence Diagram .....                                     | 74 |
| 6.15.2 | List of Packets to be Transmitted .....                    | 75 |
| 6.15.3 | Procedure of Processing.....                               | 76 |
| 6.15.4 | Status Information Returned from the Microcontroller ..... | 77 |
| 6.15.5 | Notes on Using this Command .....                          | 77 |
| 6.16   | Flash Shield Window Get Command .....                      | 78 |
| 6.16.1 | Sequence Diagram .....                                     | 78 |
| 6.16.2 | List of Packets to be Transmitted .....                    | 78 |
| 6.16.3 | Procedure of Processing.....                               | 80 |
| 6.16.4 | Status Information Returned from the Microcontroller ..... | 80 |
| 6.17   | Checksum Command .....                                     | 81 |
| 6.17.1 | Sequence Diagram .....                                     | 81 |
| 6.17.2 | List of Packets to be Transmitted .....                    | 81 |

|   |     |
|---|-----|
| 6.17.3 Procedure of Processing.....   | 82  |
| 6.17.4 Status Information Returned from the Microcontroller .....   | 83  |
| 6.18 Silicon Signature Command .....  | 84  |
| 6.18.1 Sequence Diagram .....   | 84  |
| 6.18.2 List of Packets to be Transmitted .....  | 84  |
| 6.18.3 Procedure of Processing.....   | 86  |
| 6.18.4 Status Information Returned from the Microcontroller .....   | 86  |
| 7. Flowcharts .....   | 87  |
| 7.1 Initial Communications.....   | 87  |
| 7.2 Acquiring Signature Information .....   | 88  |
| 7.3 Rewriting Code Flash Memory or Data Flash Memory.....   | 89  |
| 7.4 Rewriting Security Flag Settings (when IFPR is Set to 1) .....  | 90  |
| 7.5 Rewriting Security Flag Settings (when IFPR is Set to 0 and there is No Need to Confirm Completion of Settings for the Flags other than IFPR) ..... | 91  |
| 7.6 Rewriting Security Flag Settings (when IFPR is Set to 0 and Completion of Settings for the Flags Other than IFPR Requires Confirmation).....        | 92  |
| 7.7 Rewriting Flash Shield Window Settings .....  | 93  |
| 7.8 Rewriting BTBLS (RL78/L23 only) .....   | 94  |
| 7.9 Rewriting Flash Read Protection Settings .....  | 95  |
| 7.10 Rewriting Extra Option Settings.....   | 96  |
| 7.11 Erasing Security Information.....  | 97  |
| 7.12 Cancelling Command Processing.....   | 98  |
| 7.13 Timeout .....  | 99  |
| Revision History .....  | 101 |

## 1. Terminology

The following terms used in this application note are defined below.

1. Boot firmware
2. Flash memory
3. Device or microcontroller
4. Programmer or host
5. Flash memory programming mode
6. Flash options

### 1.1 Boot Firmware

"Boot firmware" refers to a program that is embedded in the device in advance for the purpose of controlling rewriting of the flash memory.

### 1.2 Flash Memory

Flash memory consists of "code flash memory", from which programs can be executed, and "data flash memory" for storing data.

### 1.3 Device or Microcontroller

The RL78 microcontroller is called the "device" or "microcontroller" in this document.

### 1.4 Programmer or Host

The tool used to rewrite the on-chip flash memory of the device, such as a flash memory programmer, is called the "programmer" or "host".

### 1.5 Flash Memory Programming Mode

The state in which the programmer is connected to the device and the boot firmware is activated is called "flash memory programming mode".

For details, refer to section 4.2, Communication Establishment Phase.

### 1.6 Flash Options

The security flags, flash shield window, flash read protection, and extra options are collectively called the "flash options".

## 2. System Architecture

An RL78 microcontroller has embedded boot firmware to control rewriting of its flash memory. The firmware controls rewriting of the contents of on-chip flash memory through the transmission and reception of commands between the programmer and RL78 microcontroller via serial communications.

In flash memory programming mode, control commands sent from the programmer are received through the communications interface. Flash memory is rewritten according to the received commands and the results are sent to the programmer.

### 2.1 Block Diagram

Figure 2-1 is a block diagram of the boot firmware in an RL78 microcontroller.

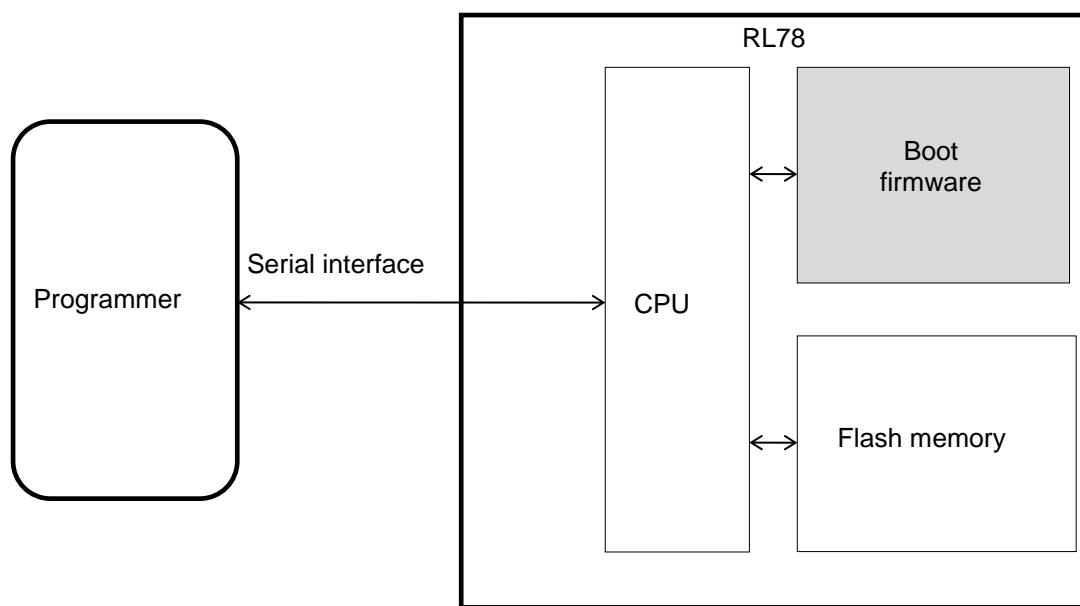


Figure 2-1 Block Diagram

### 3. Communication Modes

The boot firmware supports the following two communication modes.


1. Single-line UART communications
2. Dedicated UART communications

#### 3.1 Single-Line UART Communications

The boot firmware supports single-line UART communications in which data are transmitted and received through a single line.

Figure 3-1 shows a block diagram of single-line UART communications.

Table 3-1 shows the specifications of communications.

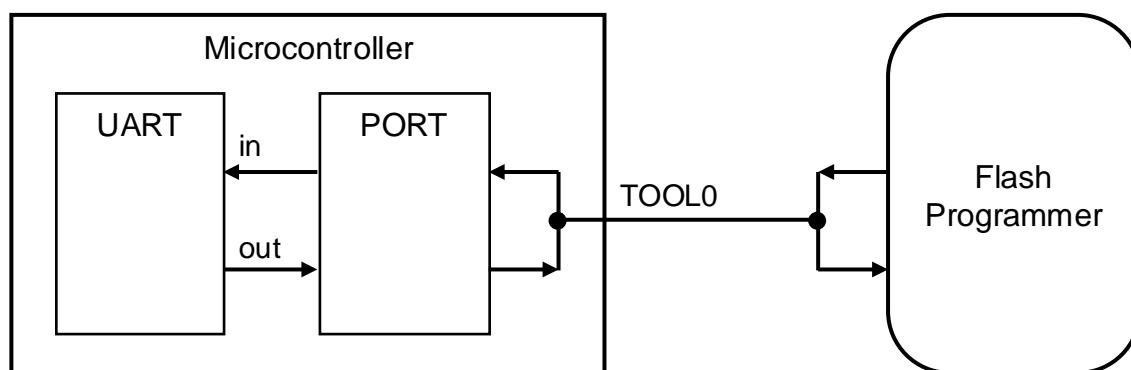

**Figure 3-1 Single-Line UART Communications**

**Table 3-1 Specifications of Communications**

| Port                | TOOL0  |  |
|---------------------|--|--|
| Communication rates | 115,200 bps<br>250,000 bps<br>500,000 bps<br>1,000,000 bps | Initial rate   |
| Data length         | 8 bits   | LSB-first transfer   |
| Parity bit          | No parity  |  |
| Stop bits           | 2 bits<br>1 bit  | For transmission to the boot firmware<br>For transmission from the boot firmware |



In the cases where this is required, insert the waiting time listed in Table 3-2 between data transmissions from the host to the boot firmware.

**Table 3-2 Waiting Time**

| CPU Operating Frequency | Communication Rate | Waiting Time |
|-------------------------|--------------------|--------------|
| 32 MHz                  | Don't care         | None         |
| 24 MHz                  | Don't care         | None         |
| 2 MHz                   | 1 Mbps             | 80 us        |
|                         | 500 Kbps           |              |
|                         | 250 Kbps           |              |
|                         | 115200 bps         | None         |


Note: Subsequent operation is not guaranteed if the communication cable is disconnected during communications.

### 3.2 Dedicated UART Communications

The boot firmware supports dedicated UART communications in which data are transmitted and received through two lines.

Figure 3-2 shows a block diagram of dedicated UART communications.

Table 3-3 shows the specifications of communications.

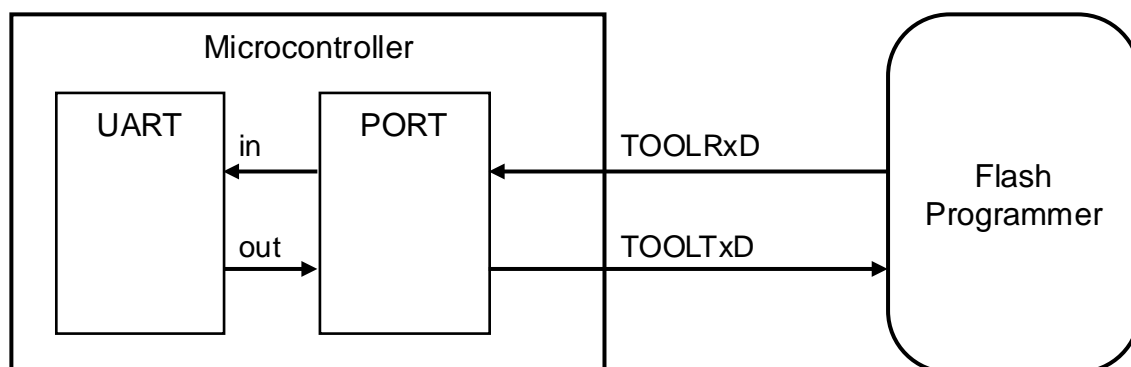

**Figure 3-2 Dedicated UART Communications**

**Table 3-3 Specifications of Communications**

|                     |   |
|---------------------|---|
| Port                | TOOLRxD (reception)<br>TOOLTxD (transmission) |
| Communication rates | Same as for single-line UART communications   |
| Data length         | Same as for single-line UART communications   |
| Parity bit          | Same as for single-line UART communications   |
| Stop bits           | Same as for single-line UART communications   |


Insert the same waiting time as that for single-line UART communications under the same conditions between data transmissions from the host to the boot firmware.

Note: Subsequent operation is not guaranteed if the communication cable is disconnected during communications.

## 4. General Procedures

The boot firmware is executed in the following order after release from the reset state. The order of this sequence is fixed.

1. Initialization phase
2. Communication establishment phase
3. Authentication phase
4. Command acceptance phase
5. Command packet reception

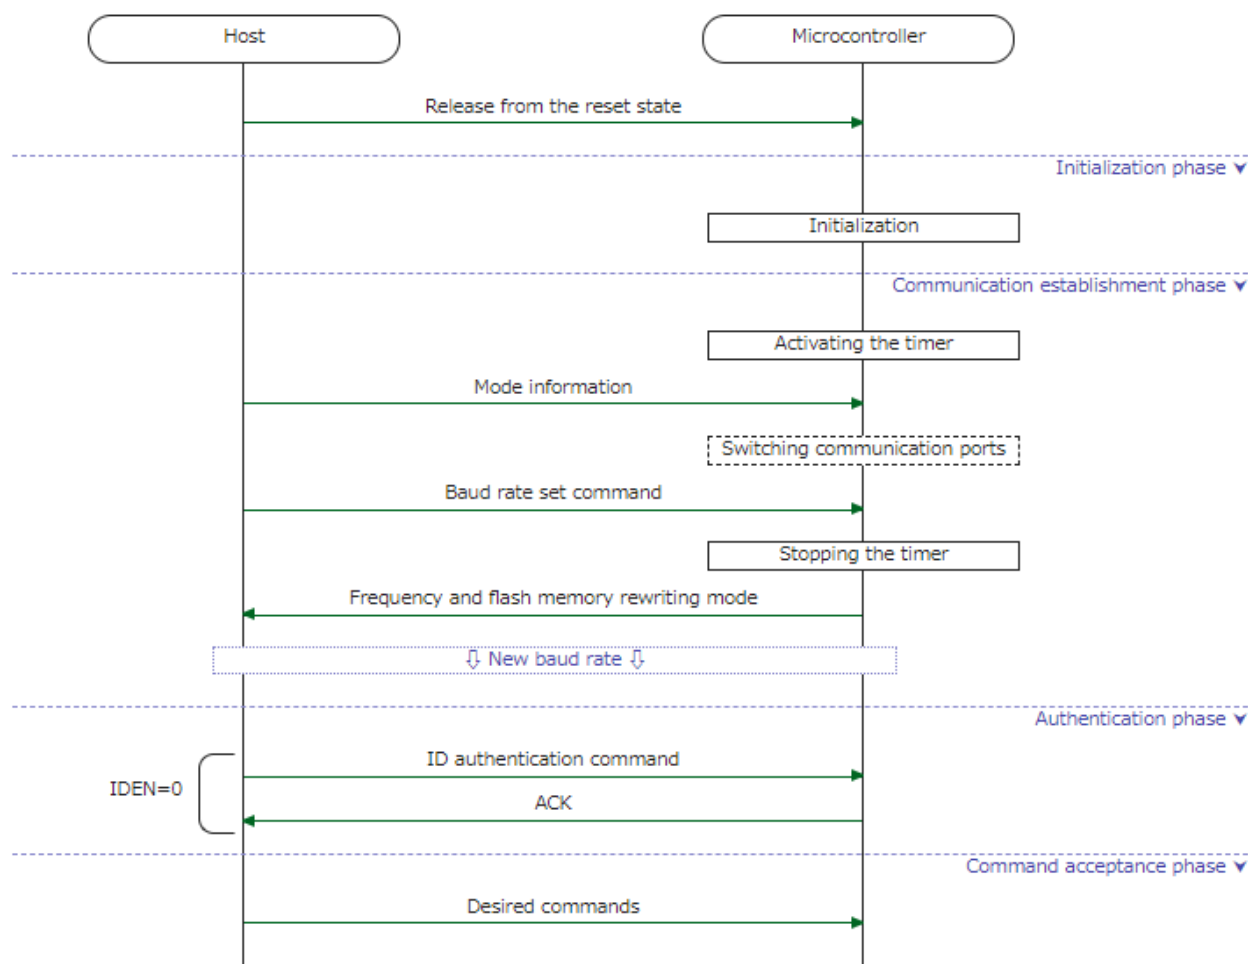

Note: The Baud Rate Set command and Security ID Authentication command can only be executed once in the initial sequence.

**Figure 4-1 Sequence Diagram**

## 4.1 Initialization Phase

The required peripheral functions of the device are initialized in this phase. After the initialization processing, execution proceeds to the communication establishment phase.

### 4.1.1 Procedure of Processing

After release from the reset state, the boot firmware initializes peripheral functions of the device.

- After initialization is successfully completed, execution proceeds to the communication establishment phase.

## 4.2 Communication Establishment Phase

The boot firmware sets up the communication pins and baud rate according to the specified communication mode.

After reception of the communication mode information (1 byte), the firmware only accepts the Baud Rate Set command.

After successful execution of the Baud Rate Set command, execution proceeds to either of the following phases.

- Authentication phase if the device is in flash memory programming mode and ID authentication is enabled
- Command acceptance phase if the device is in flash memory programming mode and ID authentication is disabled

Note: Communications are at 115.2 Kbps until the Baud Rate Set command is received.

### 4.2.1 Procedure of Processing

The boot firmware activates a timer and prepares for reception of the communication mode information.

- After activation of a timer, the firmware waits until the TOOL0 signal goes high and then prepares for reception.

After the preparation for reception, the firmware receives the communication mode information (1 byte) and analyzes the mode.

- If the received communication mode information is "3Ah", the device operates in single-line UART flash memory programming mode. (The communication pin is not switched.)
- If the received communication mode information is "00h", the device operates in dedicated UART flash memory programming mode. (The communication pins are switched to TOOLTxD and TOOLRxD.)
- If the received communication mode information is neither of the above values, execution enters an infinite loop, after which, an internal reset will be generated due to a timer interrupt.

After successful completion of the mode analysis, the firmware receives a command packet and analyzes it.


After successful completion of the packet analysis, the Baud Rate Set command is executed.

(For details, refer to section 6.6, Baud Rate Set Command.)

- If the Baud Rate Set command is abnormally terminated, execution enters an infinite loop, after which, an internal reset will be generated.
- If the Baud Rate Set command is successfully completed and ID authentication is enabled, execution proceeds to the authentication phase.
- If the Baud Rate Set command is successfully completed and ID authentication is disabled, execution proceeds to the command acceptance phase.

4.2.2 Timing Charts of Communication Establishment


Figure 4-2 shows a timing chart of dedicated UART communications.  
Figure 4-3 shows a timing chart of single-line UART communications.  
Figure 4-4 shows a timing chart when the mode information is illegal.

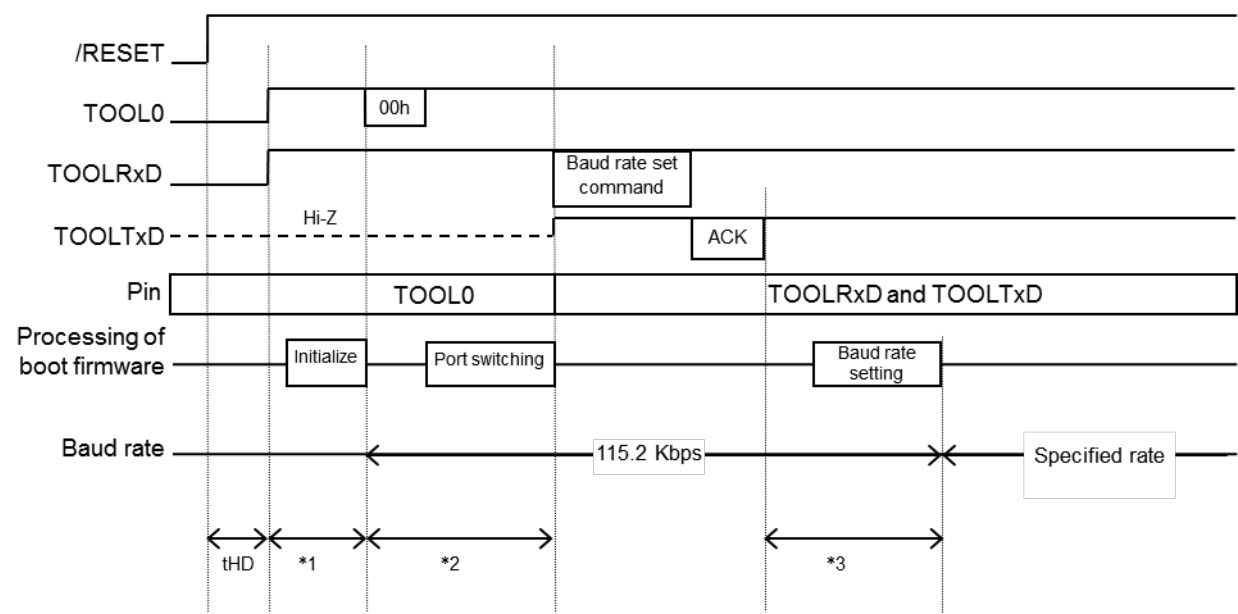

Note: For the tHD value, refer to the user’s manual of the device.


- \*1: 2 ms
- \*2: 50 us
- \*3: 1 ms

Figure 4-2 Timing Chart of Dedicated UART Communications

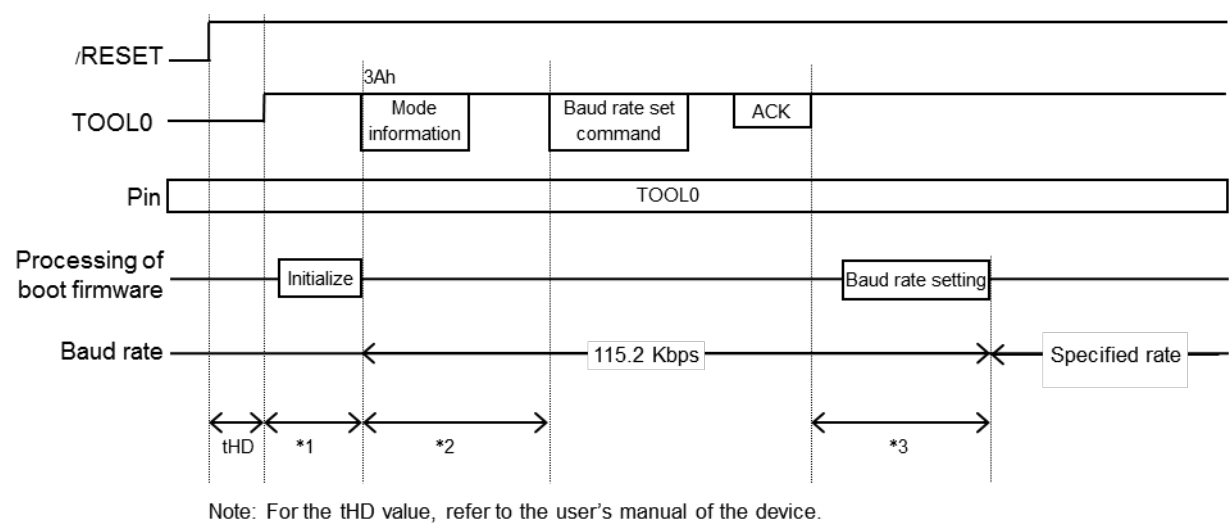

- \*1: 2 ms
- \*2: 50 us
- \*3: 1 ms

Figure 4-3 Timing Chart of Single-Line UART Communications

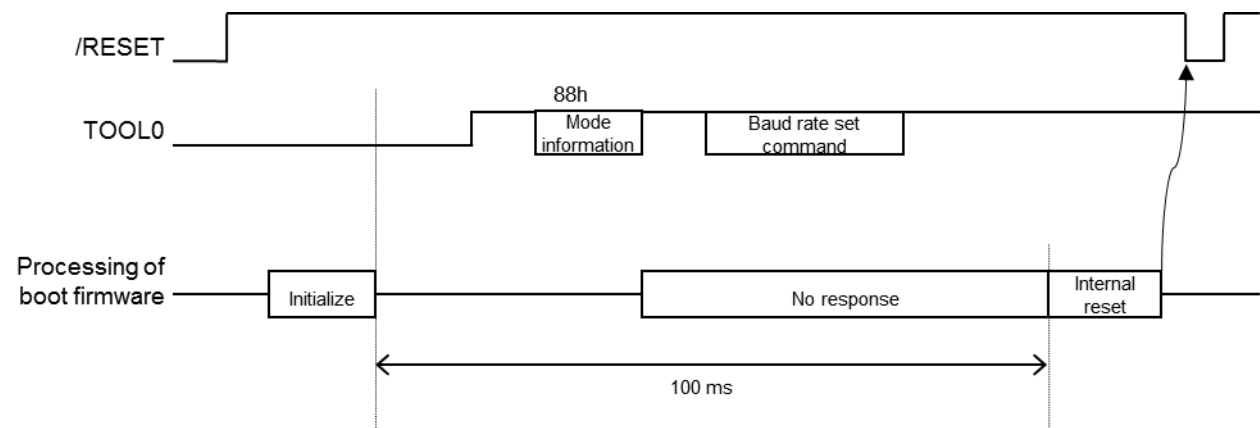

The timer is activated after initialization by the boot firmware is completed.

Figure 4-4 Timing Chart when the Mode Information is Illegal

### 4.3 Authentication Phase

The programmer connection ID for serial programming is authenticated in this phase. Only the Security ID Authentication command is accepted.

After successful execution of the Security ID Authentication command, execution proceeds to the command acceptance phase.

#### 4.3.1 Procedure of Processing

Upon receiving a command packet, the boot firmware analyzes it.

After successful completion of the packet analysis, the Security ID Authentication command is executed.

(For details, refer to section 6.7, Security ID Authentication Command.)

- If the Security ID Authentication command is abnormally terminated, execution enters an infinite loop.
- If the Security ID Authentication command is successfully completed, execution proceeds to the command acceptance phase.

## 4.4 Command Acceptance Phase

Commands other than the Baud Rate Set or Security ID Authentication command can be accepted in this phase.

Note: Use the Reset command and check the results to determine whether execution is currently in the command acceptance phase.

### 4.4.1 Procedure of Processing

Upon receiving a command packet, the boot firmware analyzes it.

After successful completion of the packet analysis, the received command is executed.

(For details, refer to the descriptions of individual commands.)

- After the end of command execution, execution does not proceed to any other phase.

## 5. Packet Format

### 5.1 Command Packet

The host sends command packets to the boot firmware in the following format.

Table 5-1 shows the format of a command packet.

**Table 5-1 Format of a Command Packet**

| Symbol              | Size           | Value | Description   |
|---------------------|----------------|-------|---|
| SOH                 | 1 byte         | 01h   | Start data of the packet  |
| LEN                 | 1 byte         | —     | Packet length (total length of the CMD and command information fields)<br>[00h: 256 bytes]  |
| CMD                 | 1 byte         | —     | Command code  |
| Command information | 1 to 255 bytes | —     | Command information<br>Examples:<br>For the Programming command: Address range for writing<br>For the Block Erase command: Address of the block to be erased  |
| SUM                 | 1 byte         | —     | Checksum of the values from the LEN field to the last data in the command information<br>Example:<br>$\text{LEN} + \text{CMD} + \text{command information (1)} + \text{command information (2)} + \dots + \text{command information (n)} + \text{SUM} = 00\text{h}$ |
| ETX                 | 1 byte         | 03h   | End data of the packet  |



## 5.2 Data Packet

The host and boot firmware transfer data in the following format.

Table 5-2 shows the format of a data packet.

**Table 5-2 Format of a Data Packet**

| Symbol       | Size           | Value     | Description  |
|--------------|----------------|-----------|--|
| STX          | 1 byte         | 02h       | Start data of the packet   |
| LEN          | 1 byte         | -         | Packet length (total length of the data field)<br>[00h: 256 bytes]   |
| Data         | 1 to 256 bytes | -         | Data for transmission<br>Examples:<br>For the Programming command: Data to be written<br>For transmission of the status: Status code   |
| SUM          | 1 byte         | -         | Checksum of the values from the LEN field to the last data in the data field<br>Example:<br>$LEN + data(1) + data(2) + \dots + data(n) + SUM = 00h$  |
| ETX<br>(ETB) | 1 byte         | 03h (17h) | ETX: End data of the packet when there are no data packets to be sent after this packet<br>ETB: End data of the packet when data are divided into multiple packets and remaining data packets are to be sent after this packet |

## 5.3 CMD: Command Code

Table 5-3 is a list of the command codes (CMD).

**Table 5-3 List of Command Codes (CMD)**

| Value | Name                               | Description  |
|-------|------------------------------------|--|
| 00h   | Reset command                      | Returns ACK.   |
| 13h   | Verify command                     | Verifies the data in the target area.                          |
| 22h   | Block Erase command                | Erases the data in the target area.                            |
| 32h   | Block Blank Check command          | Checks if the target area is blank.                            |
| 40h   | Programming command                | Writes data to the target area.                                |
| 9Ah   | Baud Rate Set command              | Specifies the baud rate and frequency for UART communications. |
| 9Ch   | Security ID Authentication command | Authenticates the programmer connection ID.                    |
| A0h   | Security Set command               | Specifies the security flag information.                       |
| A1h   | Security Get command               | Returns the security flag information.                         |
| A2h   | Security Release command           | Initializes the security information.                          |
| A5h   | Extra Option Set command           | Specifies extra options.                                       |
| A6h   | BTBLS Set command (RL78/L23 only)  | Specifies the BTBLS.   |
| A7h   | BTBLS Get command (RL78/L23 only)  | Returns the BTBLS information.                                 |
| ABh   | Flash Read Protection Set command  | Specifies read protection for blocks.                          |
| ACH   | Flash Shield Window Set command    | Specifies the flash shield window.                             |
| ADh   | Flash Shield Window Get command    | Returns the settings of the flash shield window.               |
| B0h   | Checksum command                   | Calculates the checksum of the specified area.                 |
| C0h   | Silicon Signature command          | Returns the signature information.                             |

## 5.4 STS: Status Code

Table 5-4 is a list of the status codes (STS).

**Table 5-4 List of Status Codes (STS)**

| Value | Name                    | Description   |
|-------|-------------------------|---|
| 04h   | Command number error    | The specified command code is undefined or the received command is not allowed in the current phase.          |
| 05h   | Parameter error         | A specified parameter was out of the allowable range.   |
| 06h   | ACK                     | Response in case of successful operation  |
| 07h   | Checksum error          | The calculated checksum value does not match the SUM value in the packet.                                     |
| 0Fh   | Verification error      | A non-matching value was found during verification.   |
| 10h   | Protection error        | The attempted processing has been prohibited by the Security Set command.                                     |
| 15h   | NACK                    | The packet structure is illegal, etc.   |
| 1Ah   | Erase error             | Erase error   |
| 1Bh   | Blank error             | Blank error (A non-blank location has been found.)  |
| 1Ch   | Write error             | Write error   |
| 23h   | Frequency error         | Generating a correct frequency for rewriting the flash memory from the specified parameters was not possible. |
| 24h   | ID authentication error | Failure in authentication of the programmer connection ID   |

## 6. Commands

### 6.1 Reset Command

The host uses this command to check the state of the boot firmware.

#### 6.1.1 Sequence Diagram

Figure 6-1 is a diagram of the Reset command sequence.

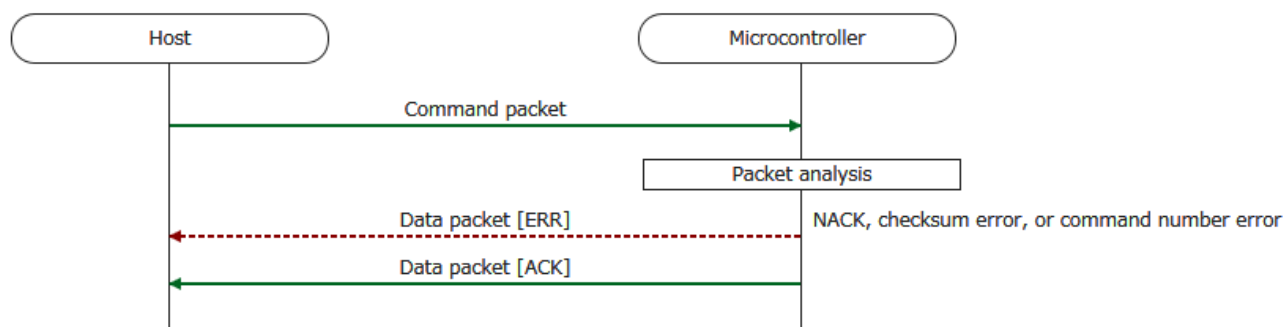


Figure 6-1 Reset Command

### 6.1.2 List of Packets to be Transmitted

Table 6-1 to Table 6-3 respectively show the command packet and two types of data packet (for ACK and ERR).

**Table 6-1 Command Packet**

|     |          |     |
|-----|----------|-----|
| SOH | (1 byte) | 01h |
| LEN | (1 byte) | 01h |
| CMD | (1 byte) | 00h |
| SUM | (1 byte) | FFh |
| ETX | (1 byte) | 03h |

**Table 6-2 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-3 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.1.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, ACK is sent.

- ACK is sent.

Note: The flash memory remains in the same state as before the command was received.

### 6.1.4 Status Information Returned from the Microcontroller

Table 6-4 lists the status information.

**Table 6-4 Status Information**

| <b>Condition</b>   | <b>STS</b>           |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| Execution is in the command acceptance phase.  | ACK                  |

## 6.2 Verify Command

This command is used to compare the data in an area specified as an address range with the data received from the host. The code flash memory or data flash memory is specifiable but specifying a range that extends beyond the boundary of the code flash memory or data flash memory is not allowed. The addresses where the target area starts and ends must be the addresses where given blocks start and end.

When a non-matching value is found, the verification error code is returned after the last verification of the specified range.

### 6.2.1 Sequence Diagram

Figure 6-2 is a diagram of the Verify command sequence.

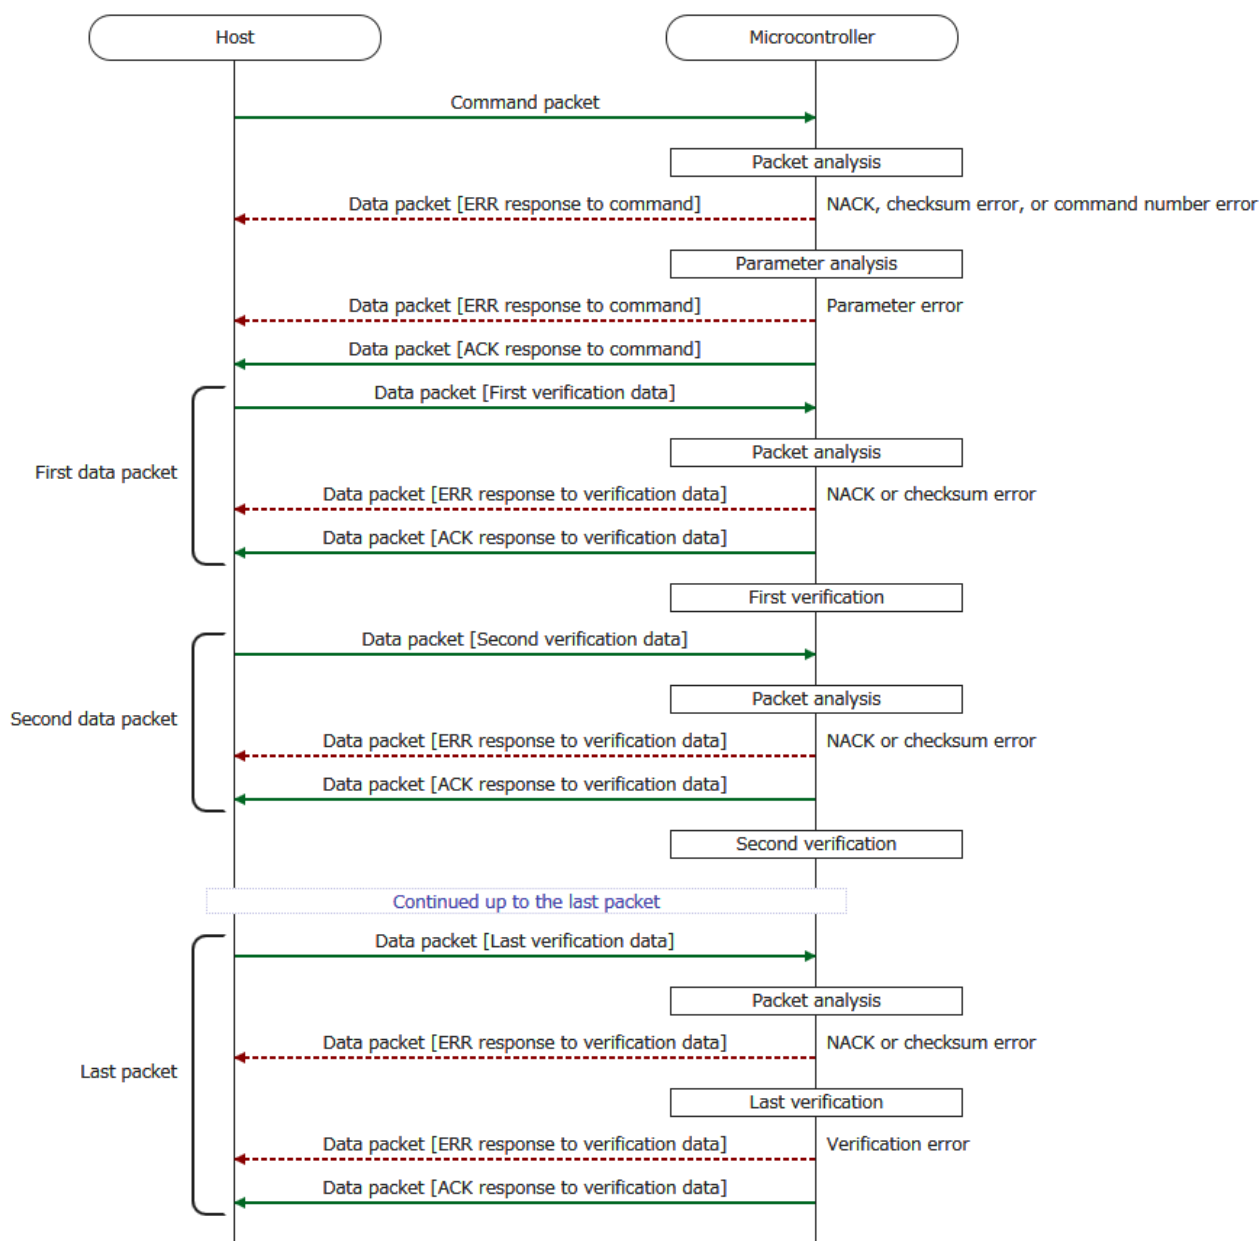


Figure 6-2 Verify Command

### 6.2.2 List of Packets to be Transmitted

Table 6-5 to Table 6-11 respectively show the command packet and six types of data packet (for verification data, last verification data, ACK response to command, ERR response to command, ACK response to verification data, and ERR response to verification data).

**Table 6-5 Command Packet**

|     |           |  |
|-----|-----------|--|
| SOH | (1 byte)  | 01h  |
| LEN | (1 byte)  | 07h  |
| CMD | (1 byte)  | 13h  |
| SAD | (3 bytes) | Start address<br>Order of transfer: Low → Middle → High<br>Example: 23800h = 00h → 38h → 02h |
| EAD | (3 bytes) | End address<br>Order of transfer: Low → Middle → High<br>Example: 3FFFFh = FFh → FFh → 03h   |
| SUM | (1 byte)  | Checksum value   |
| ETX | (1 byte)  | 03h  |

**Table 6-6 Data Packet [Verification Data]**

|     |             |                     |
|-----|-------------|---------------------|
| STX | (1 byte)    | 02h                 |
| LEN | (1 byte)    | 00h (256 bytes)     |
| DAT | (256 bytes) | Data to be verified |
| SUM | (1 byte)    | Checksum value      |
| ETB | (1 byte)    | 17h                 |

**Table 6-7 Data Packet [Last Verification Data]**

|     |             |                     |
|-----|-------------|---------------------|
| STX | (1 byte)    | 02h                 |
| LEN | (1 byte)    | 00h (256 bytes)     |
| DAT | (256 bytes) | Data to be verified |
| SUM | (1 byte)    | Checksum value      |
| ETX | (1 byte)    | 03h                 |

**Table 6-8 Data packet [ACK Response to Command]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-9 Data Packet [ERR Response to Command]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

**Table 6-10 Data Packet [ACK Response to Verification Data]**

|                                  |          |           |
|----------------------------------|----------|-----------|
| STX                              | (1 byte) | 02h       |
| LEN                              | (1 byte) | 02h       |
| STS<br>(communication<br>status) | (1 byte) | 06h (ACK) |
| STS<br>(verification<br>status)  | (1 byte) | 06h (ACK) |
| SUM                              | (1 byte) | F2h       |
| ETX                              | (1 byte) | 03h       |

**Table 6-11 Data Packet [ERR Response to Verification Data]**

|                                  |          |                |
|----------------------------------|----------|----------------|
| STX                              | (1 byte) | 02h            |
| LEN                              | (1 byte) | 02h            |
| STS<br>(communication<br>status) | (1 byte) | Status code    |
| STS<br>(verification<br>status)  | (1 byte) | Status code    |
| SUM                              | (1 byte) | Checksum value |
| ETX                              | (1 byte) | 03h            |



### 6.2.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If SAD is greater than EAD, the parameter error code is sent.
- If SAD or EAD is neither in the code flash memory area nor in the data flash memory area, the parameter error code is sent.
- If the area specified by SAD and EAD extends beyond the boundary of the code flash memory or data flash memory, the parameter error code is sent.
- If either or both of SAD and EAD are not the correct addresses where a block starts or ends, the parameter error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

- If none of the above errors has occurred, ACK is sent.

After successful completion of the parameter analysis, a data packet is received and packet analysis is executed.

- Reception of STX is recognized as the start of a data packet.  
If the received value is not STX, the firmware waits until STX arrives.
- If the received data packet for the last verification data does not end with ETX, the STS (communication status code) is set to "NACK".
- If a received data packet that is not for the last verification data does not end with ETB, the STS (communication status code) is set to "NACK".
- If the SUM value in the received data packet does not match the calculated checksum value, the STS (communication status code) is set to "checksum error".
- If the LEN value in the received data packet does not match the actual length of the packet, the STS (communication status code) is set to "NACK".
- If any of the above errors has occurred, the error code is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

If the received data packet is not for the last verification data, ACK is sent and verification is executed.

- ACK is sent and verification is executed.
- After the end of verification (regardless of whether the result of verification was successful or abnormal), the next data packet is received.

If the received data packet is for the last verification data, verification is executed and ACK is not sent.

- If a non-matching value is found anywhere in the specified area, the STS (verification status code) is set to "verification error", the error code is sent, and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

- On successful completion of the verification, ACK is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

## 6.2.4 Status Information Returned from the Microcontroller

Table 6-12 lists the status information.

**Table 6-12 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received command packet does not end with ETX.   | NACK                 |
| The SUM value in the received command packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.  | Command number error |
| The LEN value in the received command packet does not match the actual length of the packet.   | NACK                 |
| SAD is greater than EAD.   | Parameter error      |
| SAD or EAD is neither in the code flash memory area nor in the data flash memory area.   | Parameter error      |
| The area specified by SAD and EAD extends beyond the boundary of the code flash memory or data flash memory.   | Parameter error      |
| SAD or EAD is not the correct address of the start or end of a block, respectively.  | Parameter error      |
| The received data packet does not end with ETX or ETB.   | NACK                 |
| The total number of data items that have been received exceeds the size of the specified area.   | NACK                 |
| The total number of data items that have been received including the last data packet (with ETX appended) does not reach the size of the specified area. | NACK                 |
| The LEN value in the received data packet does not match the actual length of the packet.  | NACK                 |
| The SUM value in the received data packet does not match the calculated checksum value.  | Checksum error       |
| A non-matching value has been found.   | Verification error   |
| Processing has been successfully completed.  | ACK                  |

### 6.3 Block Erase Command

This command is used to erase the data in a single block specified by its address. The code flash memory or data flash memory is specifiable. The target address must be aligned with a block boundary.

#### 6.3.1 Sequence Diagram

Figure 6-3 is a diagram of the Block Erase command sequence.

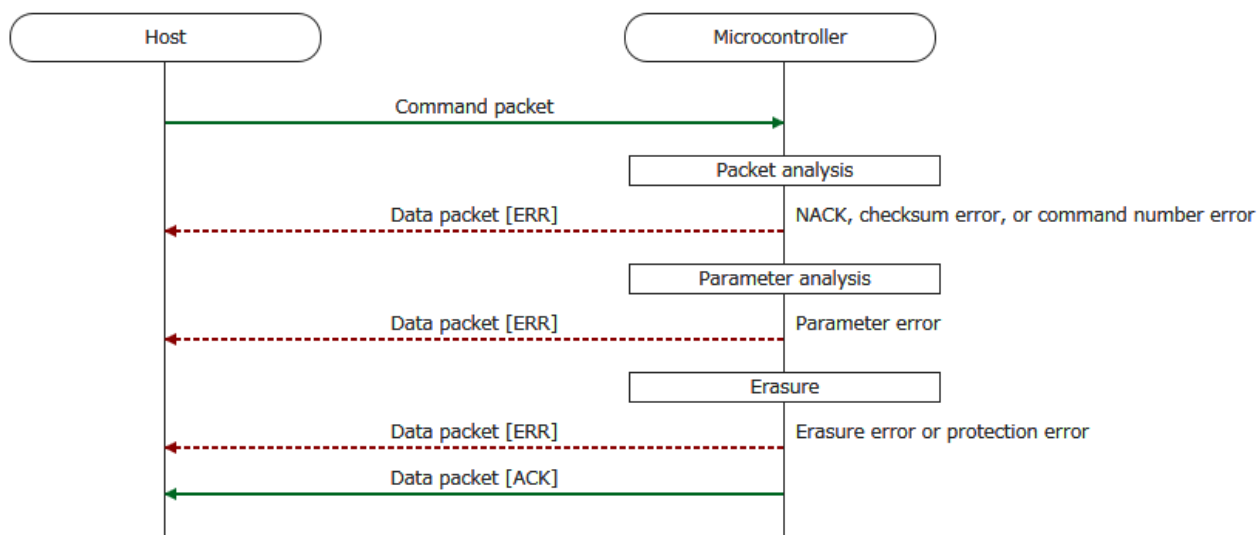


Figure 6-3 Block Erase Command

#### 6.3.2 List of Packets to be Transmitted

Table 6-13 to Table 6-15 respectively show the command packet and two types of data packet (for ACK and ERR).

Table 6-13 Command Packet

|     |           |  |
|-----|-----------|--|
| SOH | (1 byte)  | 01h  |
| LEN | (1 byte)  | 04h  |
| CMD | (1 byte)  | 22h  |
| SAD | (3 bytes) | Start address      Order of transfer: Low → Middle → High<br>Example: 23400h = 00h → 34h → 02h |
| SUM | (1 byte)  | Checksum value   |
| ETX | (1 byte)  | 03h  |

**Table 6-14 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| EX  | (1 byte) | 03h       |

**Table 6-15 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.3.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If SAD is neither in the code flash memory area nor in the data flash memory area, the parameter error code is sent.
- If SAD is not aligned with a block boundary, the parameter error code is sent.
- If either of the above errors has occurred, execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

After successful completion of the parameter analysis, erasure is executed.

- If an erasure error (ERER) has occurred during the erasure processing, the erasure error code is sent.
- If a sequencer error (SEQER) has occurred during the erasure processing, the protection error code is sent.
- If either of the above errors has occurred, execution returns to the command wait state.

Notes: 1. The state of the specified area in the flash memory becomes undefined.  
 2. If another command is executed immediately after either an erasure error or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.  
 If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after an erasure error or a protection error.

- On successful completion of the erasure, ACK is sent and execution returns to the command wait state.

Note: The specified area of the flash memory is set to the erased state.

### 6.3.4 Status Information Returned from the Microcontroller

Table 6-16 lists the status information.

**Table 6-16 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| SAD is neither in the code flash memory area nor in the data flash memory area.      | Parameter error      |
| SAD is not aligned with a block boundary.  | Parameter error      |
| A sequencer error has occurred during the erasure processing.                        | Protection error     |
| An erasure error has occurred during the erasure processing.                         | Erase error          |
| Processing has been successfully completed.  | ACK                  |

## 6.4 Block Blank Check Command

This command is used to perform blank checking of an area specified as an address range. The code flash memory or data flash memory is specifiable but specifying a range that extends beyond the boundary of the code flash memory or data flash memory is not allowed. The addresses of the target area must be specified as boundaries in block units.

### 6.4.1 Sequence Diagram

Figure 6-4 is a diagram of the Block Blank Check command sequence.

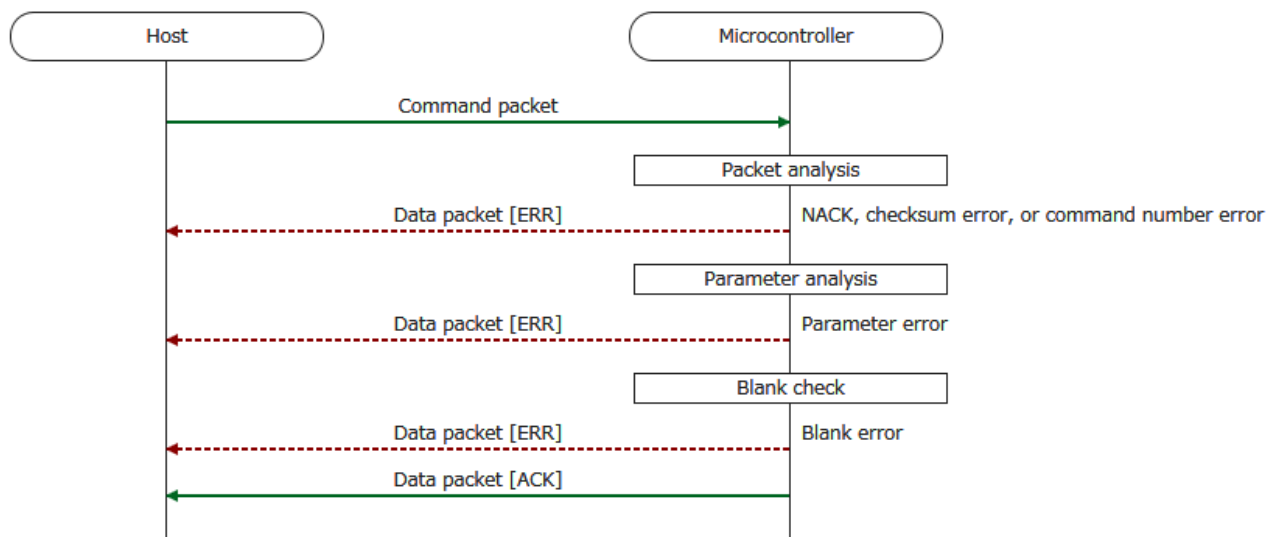


Figure 6-4 Block Blank Check Command

### 6.4.2 List of Packets to be Transmitted

Table 6-17 to Table 6-19 respectively show the command packet and two types of data packet (for ACK and ERR).

**Table 6-17 Command Packet**

|     |           |                |   |
|-----|-----------|----------------|---|
| SOH | (1 byte)  | 01h            |   |
| LEN | (1 byte)  | 08h            |   |
| CMD | (1 byte)  | 32h            |   |
| SAD | (3 bytes) | Start address  | Order of transfer: Low → Middle → High<br>Example: 23400h = 00h → 34h → 02h   |
| EAD | (3 bytes) | End address    | Order of transfer: Low → Middle → High<br>Example: 3FFFFh = FFh → FFh → 03h   |
| TAR | (1 byte)  | Target area    | 00h: Area specified by SAD and EAD<br>01h: Area specified by SAD and EAD and the following areas<br>BTFLG: Boot Flag<br>BTPR: Boot Block Cluster Protection<br>SEPR: Block Erase Protection<br>WRPR: Write Protection<br>IDEN: ID Authentication Enable<br>IFPR: Interface Protection *<br>CMPR: Extra Option Area Protection<br>SWPR: Flash Read Protection Area Setting Protection<br>FSWS: FSW Start Block<br>FSWE: FSW End Block<br>FSPR: Flash Shield Window Protection<br>FSWC: Flash Shield Window Control<br><br>Note: * When IFPR = 0, the area is always judged as blank. |
| SUM | (1 byte)  | Checksum value |   |
| ETX | (1 byte)  | 03h            |   |

**Table 6-18 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-19 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.4.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If SAD is greater than EAD, the parameter error code is sent.
- If SAD or EAD is neither in the code flash memory area nor in the data flash memory area, the parameter error code is sent.
- If the area specified by SAD and EAD extends beyond the boundary of the code flash memory or data flash memory, the parameter error code is sent.
- If SAD or EAD is not aligned with a block boundary, the parameter error code is sent.
- If the specified TAR value is not allowed for this command, the parameter error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

After successful completion of the parameter analysis, blank checking is executed.

- If a blank error has occurred during blank checking for the area specified by SAD and EAD, the blank error code is sent and execution returns to the command wait state.

Notes: 1. The flash memory remains in the same state as before the command was received.

2. If another command is executed immediately after a blank error and if the command execution is unsuccessful, an incorrect error code may be returned.

If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after a blank error.

- On successful completion of blank checking, ACK is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

### 6.4.4 Status Information Returned from the Microcontroller

Table 6-20 lists the status information.

**Table 6-20 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received command packet does not end with ETX.   | NACK                 |
| The SUM value in the received command packet does not match the calculated checksum value.                   | Checksum error       |
| Execution of the given command is not allowed in the current phase.  | Command number error |
| The LEN value in the received command packet does not match the actual length of the packet.                 | NACK                 |
| SAD is greater than EAD.   | Parameter error      |
| SAD or EAD is neither in the code flash memory area nor in the data flash memory area.                       | Parameter error      |
| The area specified by SAD and EAD extends beyond the boundary of the code flash memory or data flash memory. | Parameter error      |
| SAD or EAD is not aligned with a block boundary.   | Parameter error      |
| The specified TAR value is not allowed for this command.   | Parameter error      |
| A blank error has occurred during the blank checking of the specified area.                                  | Blank error          |
| Processing has been successfully completed.  | ACK                  |



## 6.5 Programming Command

This command is used to write the data received from the host to an area specified as an address range. The code flash memory or data flash memory is specifiable but specifying a range that extends beyond the boundary of the code flash memory or data flash memory is not allowed. The addresses where the target area starts and ends must be the addresses where given blocks start and end.

### 6.5.1 Sequence Diagram

Figure 6-5 is a diagram of the Programming command sequence.

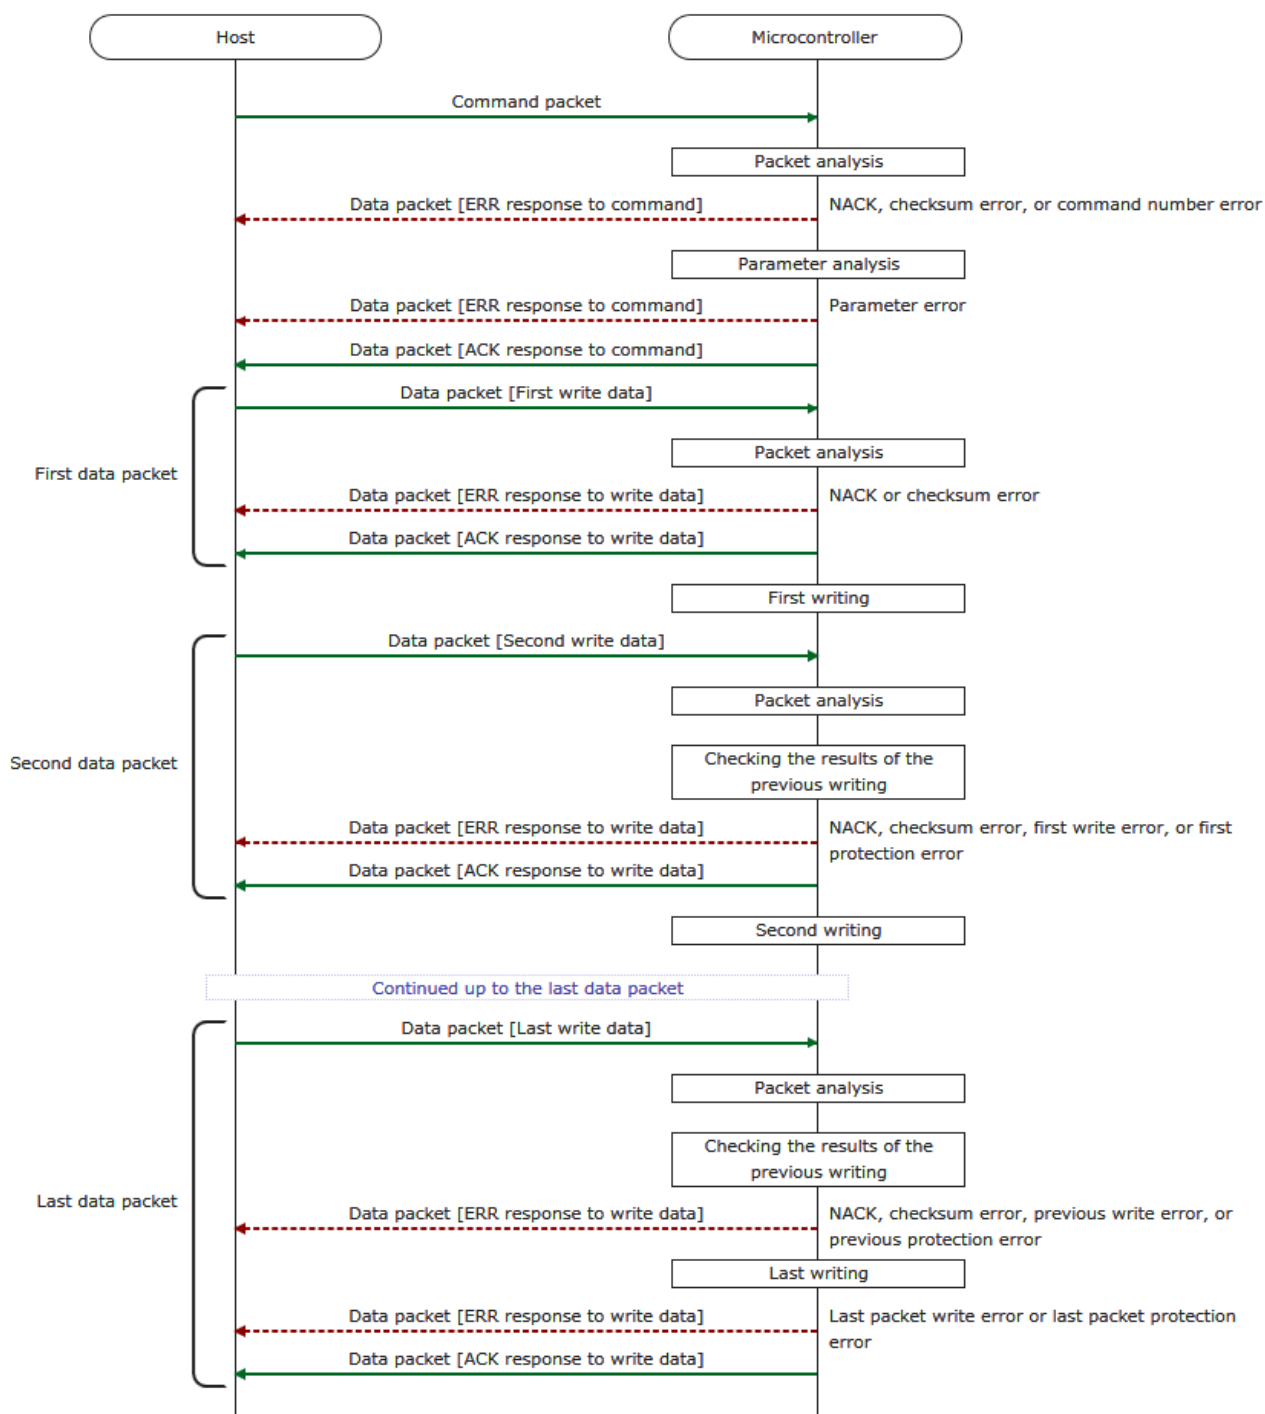


Figure 6-5 Programming Command

### 6.5.2 List of Packets to be Transmitted

Table 6-21 to Table 6-27 respectively show the command packet and six types of data packet (for write data, last write data, ACK response to command, ERR response to command, ACK response to write data, and ERR response to write data).

**Table 6-21 Command Packet**

|     |           |                |   |
|-----|-----------|----------------|---|
| SOH | (1 byte)  | 01h            |   |
| LEN | (1 byte)  | 07h            |   |
| CMD | (1 byte)  | 40h            |   |
| SAD | (3 bytes) | Start address  | Order of transfer: Low → Middle → High<br>Example: 23400h = 00h → 34h → 02h |
| EAD | (3 bytes) | End address    | Order of transfer: Low → Middle → High<br>Example: 3FFFFh = FFh → FFh → 03h |
| SUM | (1 byte)  | Checksum value |   |
| ETX | (1 byte)  | 03h            |   |

**Table 6-22 Data Packet [Write Data]**

|     |             |                    |
|-----|-------------|--------------------|
| STX | (1 byte)    | 02h                |
| LEN | (1 byte)    | 00h (256 bytes)    |
| DAT | (256 bytes) | Data to be written |
| SUM | (1 byte)    | Checksum value     |
| ETB | (1 byte)    | 17h                |

**Table 6-23 Data Packet [Last Write Data]**

|     |             |                    |
|-----|-------------|--------------------|
| STX | (1 byte)    | 02h                |
| LEN | (1 byte)    | 00h (256 bytes)    |
| DAT | (256 bytes) | Data to be written |
| SUM | (1 byte)    | Checksum value     |
| ETX | (1 byte)    | 03h                |

**Table 6-24 Data Packet [ACK Response to Command]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-25 Data Packet [ERR Response to Command]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

**Table 6-26 Data Packet [ACK Response to Write Data]**

|                                  |          |           |
|----------------------------------|----------|-----------|
| STX                              | (1 byte) | 02h       |
| LEN                              | (1 byte) | 02h       |
| STS<br>(communication<br>status) | (1 byte) | 06h (ACK) |
| STS (writing<br>status)          | (1 byte) | 06h (ACK) |
| SUM                              | (1 byte) | F2h       |
| ETX                              | (1 byte) | 03h       |

**Table 6-27 Data Packet [ERR Response to Write Data]**

|                                  |          |                |
|----------------------------------|----------|----------------|
| STX                              | (1 byte) | 02h            |
| LEN                              | (1 byte) | 02h            |
| STS<br>(communication<br>status) | (1 byte) | Status code    |
| STS (writing<br>status)          | (1 byte) | Status code    |
| SUM                              | (1 byte) | Checksum value |
| ETX                              | (1 byte) | 03h            |

### 6.5.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If SAD is greater than EAD, the parameter error code is sent.
- If SAD or EAD is neither in the code flash memory area nor in the data flash memory area, the parameter error code is sent.
- If the area specified by SAD and EAD extends beyond the boundary of the code flash memory or data flash memory, the parameter error code is sent.
- If either or both of SAD and EAD are not the correct addresses where a block starts or ends, the parameter error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

- If none of the above errors has occurred, ACK is sent.

After successful completion of the parameter analysis, a data packet is received and packet analysis is executed.

- Reception of STX is recognized as the start of a data packet.  
If the received value is not STX, the firmware waits until STX arrives.
- If the received data packet for the last write data does not end with ETX, the STS (communication status code) is set to "NACK".
- If a received data packet that is not for the last verification data does not end with ETB, the STS (communication status code) is set to "NACK".
- If the SUM value in the received data packet does not match the calculated checksum value, the STS (communication status code) is set to "checksum error".
- If the LEN value in the received data packet does not match the actual length of the packet, the STS (communication status code) is set to "NACK".
- If any of the above errors has occurred for the first write data, the error code is sent and execution returns to the command wait state with no further processing being done.

Note: The flash memory remains in the same state as before the command was received.

- For the second or subsequent write data, the results of the previous data writing are checked regardless of whether any of the above errors has occurred.

If the received data packet is for the second or subsequent write data, the results of the previous writing are checked.

- If a write error has occurred during the processing for writing of the previous data packet, the STS (writing status code) is set to "write error".
- If a sequencer error has occurred during the processing for writing of the previous data packet, the STS (writing status code) is set to "protection error".
- If either of the above errors has occurred, the error code is sent and execution returns to the command wait state.

Notes: 1. The state of the specified area in the flash memory becomes undefined.  
2. If another command is executed immediately after either a write error or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.  
If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after a write error or a protection error.

If the received data packet is not for the last write data, ACK is sent and processing for writing is executed.

- ACK is sent and processing for writing is executed.
- After the end of the processing for writing, the next data packet is received.

If the received data packet is for the last write data, processing for writing is executed and ACK is not sent.

- Processing for writing is executed and ACK is not sent.
- If a write error has occurred during the processing for writing, the STS (writing status code) is set to "write error".
- If a sequencer error has occurred during the processing for writing, the STS (writing status code) is set to "protection error".
- If either of the above errors has occurred, the error code is sent and execution returns to the command wait state.

Notes: 1. The state of the specified area in the flash memory becomes undefined.  
2. If another command is executed immediately after either a write error or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.  
If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after a write error or a protection error.

- On successful completion of the processing for writing, ACK is sent and execution returns to the command wait state.

Note: The specified area of the flash memory is set to the written state.

### 6.5.4 Status Information Returned from the Microcontroller

Table 6-28 lists the status information.

**Table 6-28 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received command packet does not end with ETX.   | NACK                 |
| The SUM value in the received command packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.  | Command number error |
| The LEN value in the received command packet does not match the actual length of the packet.   | NACK                 |
| SAD is greater than EAD.   | Parameter error      |
| SAD or EAD is neither in the code flash memory area nor in the data flash memory area.   | Parameter error      |
| The area specified by SAD and EAD extends beyond the boundary of the code flash memory or data flash memory.                         | Parameter error      |
| SAD or EAD is not the correct address of the start or end of a block, respectively.  | Parameter error      |
| The received data packet does not end with ETX or ETB.   | NACK                 |
| The total number of data items that have been received exceeds the size of the specified area.                                       | NACK                 |
| The total number of data items that have been received including the last data packet does not reach the size of the specified area. | NACK                 |
| The LEN value in the received data packet does not match the actual length of the packet.  | NACK                 |
| The SUM value in the received data packet does not match the calculated checksum value.  | Checksum error       |
| A sequencer error has occurred during the processing for writing.  | Protection error     |
| A write error has occurred during the processing for writing.  | Write error          |
| Processing has been successfully completed.  | ACK                  |


## 6.6 Baud Rate Set Command

This command is used to receive the communication baud rate and VDD voltage settings from the host and set up the operating frequency of the device and communication baud rate.

If this command includes an error, the boot firmware becomes unresponsive and waits for a device reset to be applied due to the time limit of the 100-ms timer.

### 6.6.1 Sequence Diagram

Figure 6-6 is a diagram of the Baud Rate Set command sequence.

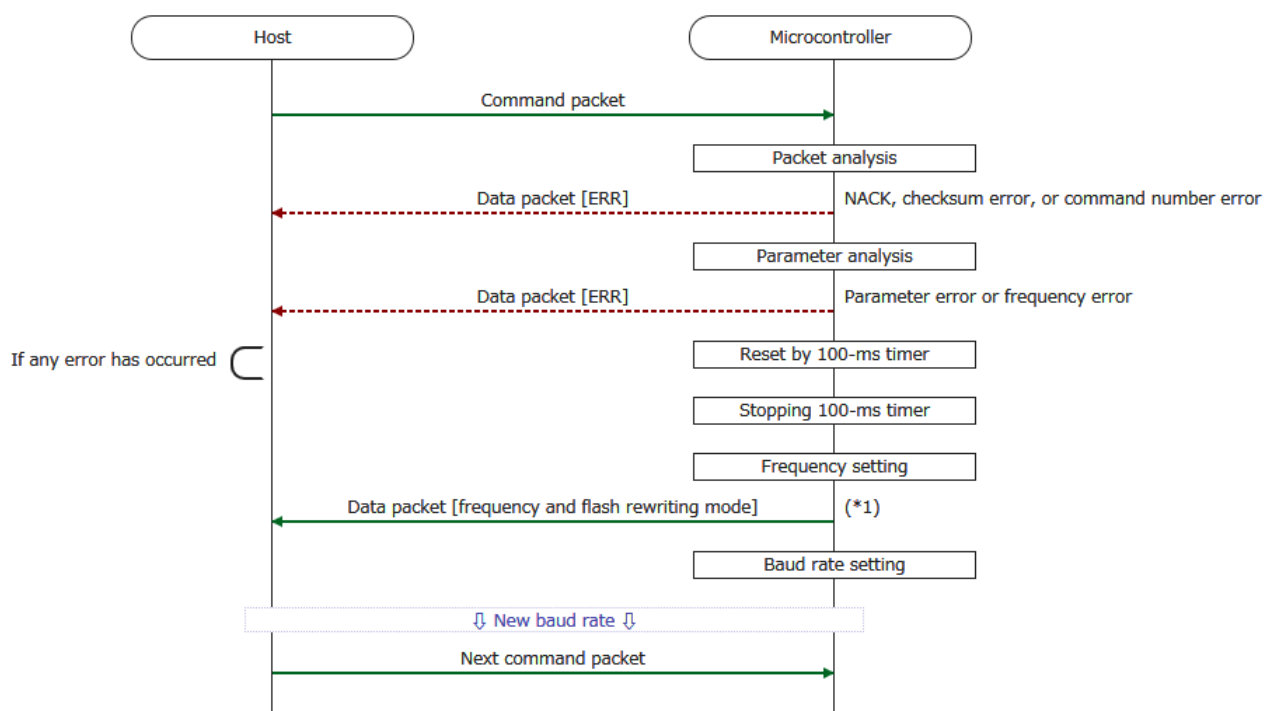

\*1: Transmit the next packet no less than 1 ms after reception of this packet.

**Figure 6-6 Baud Rate Set Command**

## 6.6.2 List of Packets to be Transmitted

Table 6-29 to Table 6-31 respectively show the command packet and two types of data packet (for frequency and flash memory rewriting mode and for ERR).

**Table 6-29 Command Packet**

|     |          |   |   |
|-----|----------|---|---|
| SOH | (1 byte) | 01h   |   |
| LEN | (1 byte) | 03h   |   |
| CMD | (1 byte) | 9Ah   |   |
| BRT | (1 byte) | Communication baud rate   | 00h: 115.2 Kbps<br>01h: 250 Kbps<br>02h: 500 Kbps<br>03h: 1 Mbps<br><br>Note: A value not listed here generates a parameter error.  |
| VDD | (1 byte) | VDD voltage to be applied (in 100-mV units)<br>(Truncate the digits after the decimal point.) | Example: 1.89 (V) → 18.9 (100 mV) → 18 → 12h<br><br>Notes: 1. A value equivalent to less than 1.6 V generates a parameter error.<br>2. When FRQSEL3 = 0, a value equivalent to less than 1.8 V generates a frequency error. |
| SUM | (1 byte) | Checksum value  |   |
| ETX | (1 byte) | 03h   |   |

**Table 6-30 Data Packet [Frequency and Flash Memory Rewriting Mode]**

|     |          |   |  |
|-----|----------|---|--|
| STX | (1 byte) | 02h   |  |
| LEN | (1 byte) | 03h   |  |
| STS | (1 byte) | 06h (ACK)   |  |
| FRQ | (1 byte) | CPU operating frequency (MHz)<br>(Truncate the digits after the decimal point.) | Example: 30.9 (MHz) → 30 → 1Eh                 |
| FPM | (1 byte) | Flash memory rewriting mode   | 00h: Full-speed mode<br>01h: Wide-voltage mode |
| SUM | (1 byte) | Checksum value  |  |
| ETX | (1 byte) | 03h   |  |

**Table 6-31 Data Packet [ERR]**

|     |          |                |  |
|-----|----------|----------------|--|
| STX | (1 byte) | 02h            |  |
| LEN | (1 byte) | 01h            |  |
| STS | (1 byte) | Status code    |  |
| SUM | (1 byte) | Checksum value |  |
| ETX | (1 byte) | 03h            |  |



### 6.6.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If the specified BRT value (communication baud rate) exceeds the allowable range, the parameter error code is sent.
- If the specified VDD value (VDD voltage to be applied) exceeds the allowable range, the parameter error code is sent.
- If generating a correct frequency for rewriting the flash memory from the specified parameters is not possible, the frequency error code is sent.
- If any of the above errors has occurred, execution enters an infinite loop with no further processing being done, after which, an internal reset will be generated.

Note: The flash memory remains in the same state as before the command was received.

After successful completion of the parameter analysis, the timer is stopped, the frequency is set up, and a data packet is returned.

- After the timer is stopped and the frequency is set up, the CPU operating frequency and the flash memory rewriting mode are sent.

Notes: 1. The flash memory remains in the same state as before the command was received.  
2. Before sending the next command packet, wait for no less than 1 ms after this response.

After the data packet is returned, the communication baud rate is set up.

- In the flash memory programming mode, execution proceeds to either of the following phases.
  - If ID authentication is enabled: Authentication phase
  - If ID authentication is disabled: Command acceptance phase

#### 6.6.4 Status Information Returned from the Microcontroller

Table 6-32 lists the status information.

**Table 6-32 Status Information**

| Condition   | STS                  |
|---|----------------------|
| The received packet does not end with ETX.  | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.                            | Checksum error       |
| Execution of the given command is not allowed in the current phase.   | Command number error |
| The LEN value in the received packet does not match the actual length of the packet.                          | NACK                 |
| The BRT value in the received packet is not allowed for this command.   | Parameter error      |
| The VDD value in the received packet is not allowed for this command.   | Parameter error      |
| Generating a correct frequency for rewriting the flash memory from the specified parameters was not possible. | Frequency error      |
| Processing has been successfully completed.   | ACK                  |

### 6.6.5 List of Parameters

Table 6-33 is a list of parameters (operating frequency and flash memory rewriting mode) to be returned in response to this command and the conditions for returning parameters.

**Table 6-33 List of Parameters**

| Condition        |                              |                   | Parameter               |                             |
|------------------|------------------------------|-------------------|-------------------------|-----------------------------|
| VDD              | Flash Operating Mode         | HOCO Frequency *1 | CPU Operating Frequency | Flash Memory Rewriting Mode |
| 1.8 V or higher  | HS (high-speed main) mode *2 | 32 MHz            | 32 MHz                  | Full-speed mode             |
|                  |                              | 24 MHz            | 24 MHz                  |                             |
| Lower than 1.8 V |                              | 32 MHz            | 2 MHz                   | Wide-voltage mode           |
|                  |                              | 24 MHz            | Frequency error         |                             |

Notes: 1. This frequency is selected according to an option byte setting (bit 3 at address 000C2h).


2. The flash memory programming mode is set to HS (high-speed main) mode regardless of the option byte setting.

## 6.7 Security ID Authentication Command

This command is used to authenticate the programmer connection ID that is received from the programmer.

### 6.7.1 Sequence Diagram

Figure 6-7 is a diagram of the Security ID Authentication command sequence.

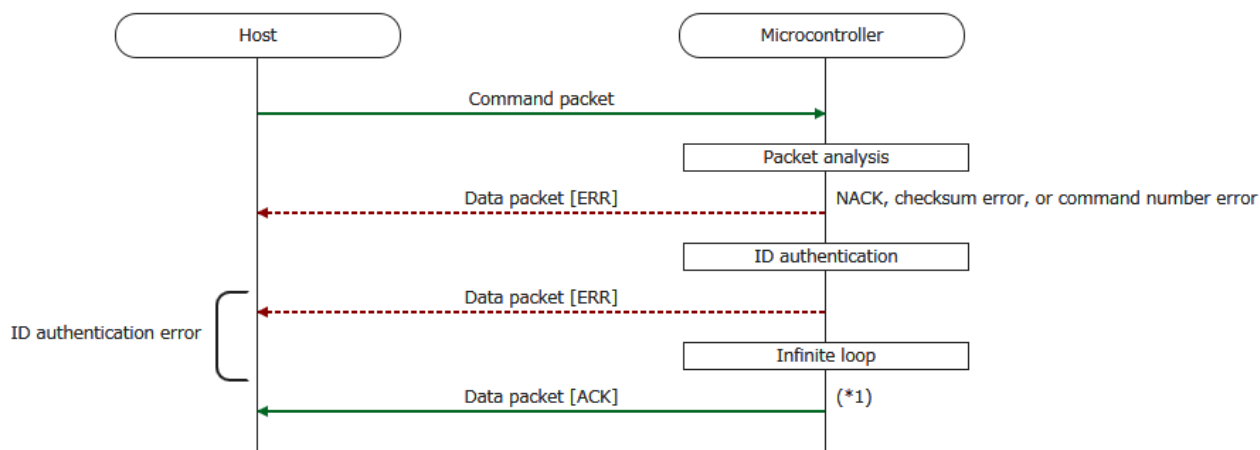

\*1: Transmit the next command no less than 1 ms after reception of this packet.

**Figure 6-7 Security ID Authentication Command**

### 6.7.2 List of Packets to be Transmitted

Table 6-34 to Table 6-36 respectively show the command packet and two types of data packet (for ACK and ERR).

**Table 6-34 Command Packet**

|     |            |  |  |     |     |     |     |     |     |     |      |
|-----|------------|--|--|-----|-----|-----|-----|-----|-----|-----|------|
| SOH | (1 byte)   | 01h  |  |     |     |     |     |     |     |     |      |
| LEN | (1 byte)   | 0Bh  |  |     |     |     |     |     |     |     |      |
| CMD | (1 byte)   | 9Ch  |  |     |     |     |     |     |     |     |      |
| IDC | (10 bytes) | ID code  | When the security ID code is stored in the flash memory as shown below, the IDC should be sent in the order 01h, 23h, ..., 00h, and 11h. |     |     |     |     |     |     |     |      |
|     |            | Correspondence between IDC values and storage addresses: |  |     |     |     |     |     |     |     |      |
|     |            | C4h  | C5h  | C6h | C7h | C8h | C9h | CAh | CBh | CCh | CDh  |
|     |            | 01   | 23   | 45  | 67  | 89  | AB  | CD  | EF  | 00  | 11   |
|     |            | Order of IDC transmission:                               |  |     |     |     |     |     |     |     |      |
|     |            | 1st  | 2nd  | 3rd | 4th | 5th | 6th | 7th | 8th | 9th | 10th |
|     |            | 01   | 23   | 45  | 67  | 89  | AB  | CD  | EF  | 00  | 11   |
| SUM | (1 byte)   | Checksum value   |  |     |     |     |     |     |     |     |      |
| ETX | (1 byte)   | 03h  |  |     |     |     |     |     |     |     |      |

**Table 6-35 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-36 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.7.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, the received ID is authenticated.

- In case of failure in ID authentication, the ID authentication error code is sent and execution enters an infinite loop.

Note: The flash memory remains in the same state as before the command was received.

- In case of pass in ID authentication, ACK is sent and execution proceeds to the command acceptance phase.

Note: The flash memory remains in the same state as before the command was received.

### 6.7.4 Status Information Returned from the Microcontroller

Table 6-37 lists the status information.

**Table 6-37 Status Information**

| Condition  | STS                     |
|--|-------------------------|
| The received packet does not end with ETX.   | NACK                    |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error          |
| Execution of the given command is not allowed in the current phase.                  | Command number error    |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                    |
| Failure in ID authentication   | ID authentication error |
| Execution is in the command acceptance phase.  | ACK                     |

## 6.8 Security Set Command

This command is used to make settings of the security flags according to the information received from the host.

### 6.8.1 Sequence Diagram

Figure 6-8 is a diagram of the Security Set command sequence.

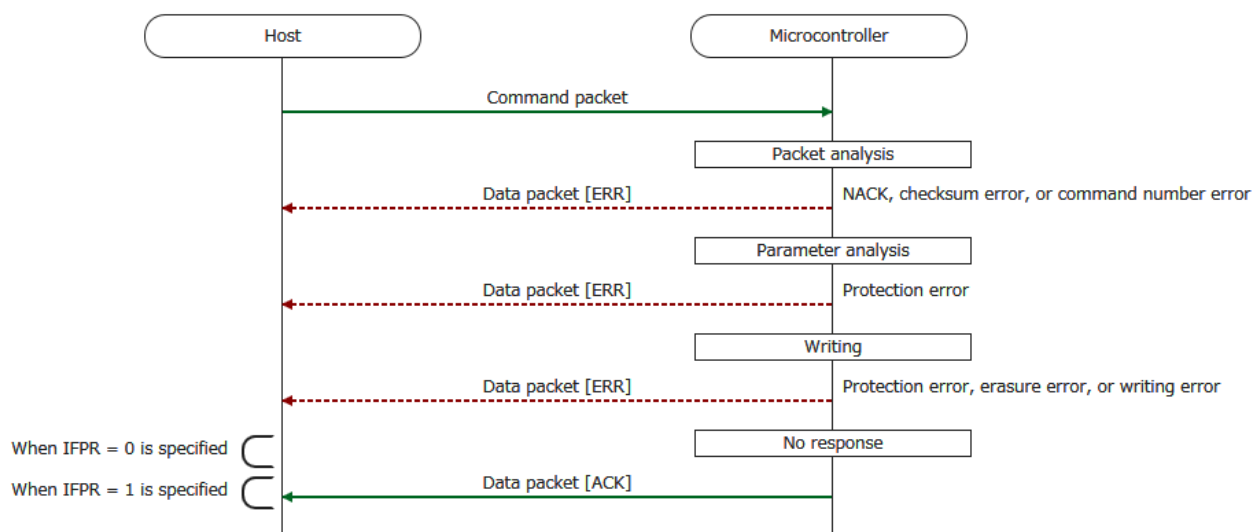


Figure 6-8 Security Set Command

## 6.8.2 List of Packets to be Transmitted

Table 6-38 to Table 6-40 respectively show the command packet and two types of data packet (for ACK and ERR).

**Table 6-38 Command Packet**

|     |          |                 |  |
|-----|----------|-----------------|--|
| SOH | (1 byte) | 01h             |  |
| LEN | (1 byte) | 04h             |  |
| CMD | (1 byte) | A0h             |  |
| SF1 | (1 byte) | Security flag 1 | [Bit 0] 1<br>[Bit 1] BTPR (Boot block cluster protection)<br>0: Rewriting of boot cluster 0 is disabled.<br>1: Rewriting of boot cluster 0 is enabled.<br>[Bit 2] SEPR (Block erase protection)<br>0: Block erasure is disabled.<br>1: Block erasure is enabled.<br>[Bit 3] 1<br>[Bit 4] WRPR (Write protection)<br>0: Writing is disabled.<br>1: Writing is enabled.<br>[Bit 5] 1<br>[Bit 6] 1<br>[Bit 7] 1                     |
| SF2 | (1 byte) | Security flag 2 | [Bit 0] IDEN (ID authentication enable)<br>0: Authentication of programmer connection ID is enabled.<br>1: Authentication of programmer connection ID is disabled.<br>[Bit 1] 1<br>[Bit 2] IFPR (Interface protection)<br>0: Connection of a programmer or an on-chip debugger is disabled.<br>1: Connection of a programmer or an on-chip debugger is enabled.<br>[Bit 3] 1<br>[Bit 4] 1<br>[Bit 5] 1<br>[Bit 6] 1<br>[Bit 7] 1 |
| RSV | (1 byte) | Reserved        | Not used. Any value from 00h to FFh can be specified.  |
| SUM | (1 byte) | Checksum value  |  |
| ETX | (1 byte) | 03h             |  |



**Table 6-39 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-40 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.8.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If modifying SEPR, WRPR, BTPR, or IDEN from 0 to 1 is attempted, the protection error code is sent.
- If the above error has occurred, execution returns to the command wait state.

Note: The flash options remain in the same state as before the command was received.

After successful completion of the parameter analysis, the flash options are rewritten.

- If an erasure error has occurred during the rewriting processing, the erasure error code is sent.
- If a write error has occurred during the rewriting processing, the write error code is sent.
- If a sequencer error has occurred during the rewriting processing, the protection error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Notes: 1. If an erasure error or a write error has occurred, the state of the flash options becomes undefined.  
 2. If a protection error has occurred, the flash options remain in the same state as before the command was received.  
 3. If another command is executed immediately after an erasure error, a write error, or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.  
 If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after an erasure error, a write error, or a protection error.

- On successful completion of the rewriting processing, ACK is sent and execution returns to the command wait state.

Note: When IFPR = 0, ACK is not sent and the firmware becomes unresponsive.

### 6.8.4 Status Information Returned from the Microcontroller

Table 6-41 lists the status information.

**Table 6-41 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| Prohibited settings are attempted.   | Protection error     |
| An erasure error has occurred.   | Erasure error        |
| A write error has occurred.  | Write error          |
| A sequencer error has occurred.  | Protection error     |
| Processing has been successfully completed.  | ACK                  |

### 6.8.5 Notes on Using this Command

Table 6-42 is a list of notes on using this command.

**Table 6-42 Notes on Using this Command**

|     |  |
|-----|--|
| (1) | After IFPR has been set to 0, the boot firmware becomes unresponsive and ACK is not returned. Even after a subsequent reset, the firmware will remain unresponsive.<br><br>To check the results of settings for the flags other than IFPR, execute this command separately for the flags other than IFPR and for IFPR — that is, execute this command twice.<br>For details of the procedure, refer to section 7.6, Rewriting Security Flag Settings (when IFPR is Set to 0 and Completion of Settings for the Flags Other than IFPR Requires Confirmation). |
| (2) | When IDEN has been set to 0, it cannot be returned to 1 even by issuing the Security Release command.<br><br>When SEPR or BTPR has been set to 0, the Security Release command cannot be executed. In this case, no security settings including those for the above flags can be erased.   |
| (3) | The security settings made by this command take effect as soon as the command execution is completed. (There is no need to reset the device to make the settings effective after this command.)  |

## 6.9 Security Get Command

This command is used to send the current settings of the security flags to the host.

### 6.9.1 Sequence Diagram

Figure 6-9 is a diagram of the Security Get command sequence.

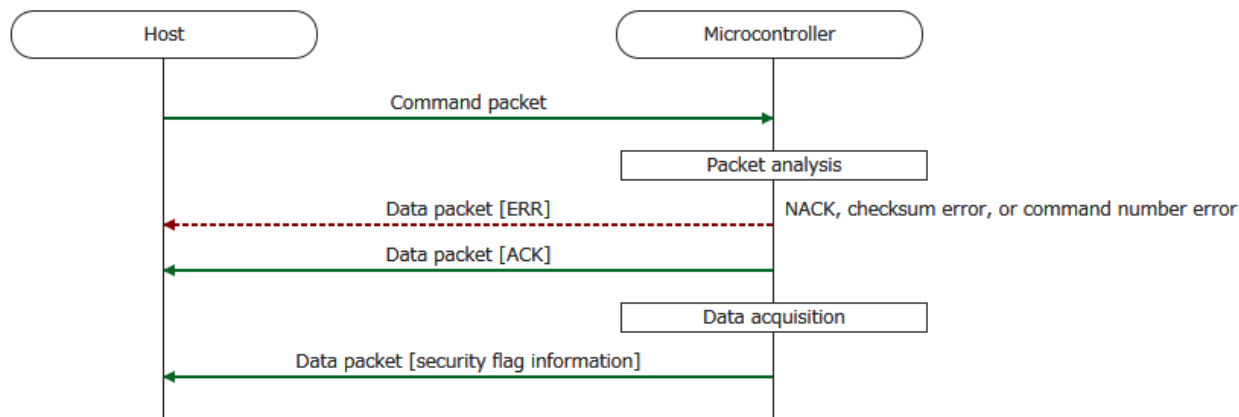


Figure 6-9 Security Get Command

### 6.9.2 List of Packets to be Transmitted

Table 6-43 to Table 6-46 respectively show the command packet and three types of data packet (for security flag information, ACK, and ERR).

Table 6-43 Command Packet

|     |          |     |
|-----|----------|-----|
| SOH | (1 byte) | 01h |
| LEN | (1 byte) | 01h |
| CMD | (1 byte) | A1h |
| SUM | (1 byte) | 5Eh |
| ETX | (1 byte) | 03h |

**Table 6-44 Data Packet [Security Flag Information]**

|     |          |                 |  |
|-----|----------|-----------------|--|
| STX | (1 byte) | 02h             |  |
| LEN | (1 byte) | 03h             |  |
| SF1 | (1 byte) | Security flag 1 | [Bit 0] BTFLG (Boot flag)<br>0: Booting is from boot cluster 1.<br>1: Booting is from boot cluster 0.<br>[Bit 1] BTPR (Boot block cluster protection)<br>0: Rewriting of boot cluster 0 is disabled.<br>1: Rewriting of boot cluster 0 is enabled.<br>[Bit 2] SEPR (Block erase protection)<br>0: Block erasure is disabled.<br>1: Block erasure is enabled.<br>[Bit 3] 0<br>[Bit 4] WRPR (Write protection)<br>0: Writing is disabled.<br>1: Writing is enabled.<br>[Bit 5] 0<br>[Bit 6] 0<br>[Bit 7] 0   |
| SF2 | (1 byte) | Security flag 2 | [Bit 0] IDEN (ID authentication enable)<br>0: Authentication of programmer connection ID is enabled.<br>1: Authentication of programmer connection ID is disabled.<br>[Bit 1] 0<br>[Bit 2] IFPR (Interface protection)<br>0: Connection of a programmer or an on-chip debugger is disabled.<br>1: Connection of a programmer or an on-chip debugger is enabled *<br>[Bit 3] SWPR (Flash read protection area setting protection)<br>0: Rewriting of the read-protected block is disabled.<br>1: Rewriting of the read-protected block is enabled.<br>[Bit 4] CMPR (Extra option area protection)<br>0: Writing to the extra option area is disabled.<br>1: Writing to the extra option area is enabled.<br>[Bit 5] 0<br>[Bit 6] 0<br>[Bit 7] 0 |
| RSV | (1 byte) | Reserved        | Unuse  |
| SUM | (1 byte) | Checksum value  |  |
| ETX | (1 byte) | 03h             |  |

Note: When IFPR = 0, execution of this command is not possible. Therefore, the returned IFPR value will always be 1 when this command is executed.

**Table 6-45 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-46 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.9.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, ACK is sent in response to the command packet.

- ACK is sent in response to the command packet.

After ACK is sent, the security flag information is read.

- The information read from the security flags is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

### 6.9.4 Status Information Returned from the Microcontroller

Table 6-47 lists the status information.

**Table 6-47 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| Processing has been successfully completed.  | ACK                  |

## 6.10 Security Release Command

This command is used to erase the currently set security information (flash options). Erasure of the flash option settings is only possible when the code flash memory and data flash memory areas are blank.

The Security Release command can only be executed when all of the following conditions are satisfied.

- Neither the "block erasure protection" nor "boot block cluster protection" is set.
- The code flash memory and data flash memory\* are blank.
- The "interface protection (protection against connection with a programmer or an on-chip debugger)" is not set.
- Authentication of programmer connection ID is disabled, or the ID matches the expected one when authentication is enabled.

Note: Only for the microcontrollers incorporating data flash memory

### 6.10.1 Sequence Diagram

Figure 6-10 is a diagram of the Security Release command sequence.

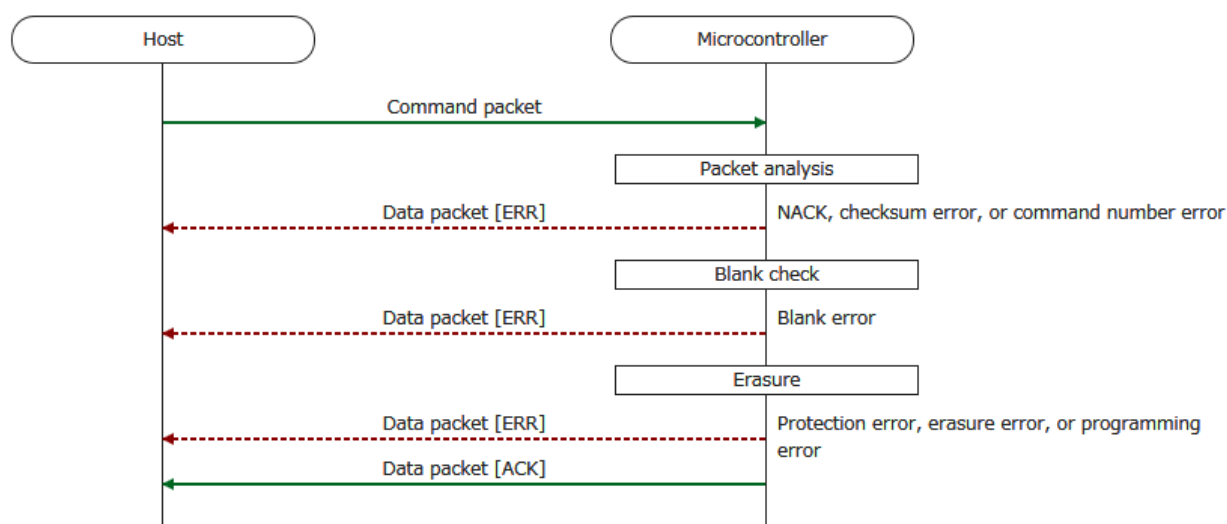


Figure 6-10 Security Release Command

### 6.10.2 List of Packets to be Transmitted

Table 6-48 to Table 6-50 respectively show the command packet and two types of data packet (for ACK and ERR).

**Table 6-48 Command Packet**

|     |          |     |
|-----|----------|-----|
| SOH | (1 byte) | 01h |
| LEN | (1 byte) | 01h |
| CMD | (1 byte) | A2h |
| SUM | (1 byte) | 5Dh |
| ETX | (1 byte) | 03h |

**Table 6-49 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-50 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.10.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, blank checking is executed.

- If the code flash memory or data flash memory has a non-blank area, the blank error code is sent.

Notes: 1. The flash memory remains in the same state as before the command was received.

2. If another command is executed immediately after a blank error and if the command execution is unsuccessful, an incorrect error code may be returned.

If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after a blank error.

After successful completion of blank checking, the flash options are erased.

- If an erasure error has occurred (ERER has been set in FSASTL) during the erasure processing, the erasure error code is sent.
- If a write error has occurred (WRER has been set in FSASTL) during the erasure processing, the write error code is sent.
- If a sequencer error has occurred (SEQER or ESEQER has been set in FSASTL) during the erasure processing, the protection error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Notes: 1. If an erasure error or a write error has occurred, the state of the flash options becomes undefined.

2. If a protection error has occurred, the flash options remain in the same state as before the command was received.

3. If another command is executed immediately after an erasure error, a write error, or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.

If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after an erasure error, a write error, or a protection error.

- On successful completion of the erasure, ACK is sent and execution returns to the command wait state.



#### 6.10.4 Status Information Returned from the Microcontroller

Table 6-51 lists the status information.

**Table 6-51 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| The code flash memory or data flash memory has a non-blank area.                     | Blank error          |
| An erasure error has occurred.   | Erasure error        |
| A write error has occurred.  | Write error          |
| A sequencer error has occurred.  | Protection error     |
| Processing has been successfully completed.  | ACK                  |

#### 6.10.5 Notes on Using this Command

Table 6-52 is a list of notes on using this command.

**Table 6-52 Notes on Using this Command**


|     |   |
|-----|---|
| (1) | The security settings erased by this command become ineffective as soon as the command execution is completed.<br>(There is no need to reset the device to make the security ineffective after this command.)   |
| (2) | For the security settings that can be erased by this command, refer to the following sections. <ul style="list-style-type: none"><li>• 6.8, Security Set Command</li><li>• 6.11, Extra Option Set Command</li><li>• 6.12, Flash Read Protection Set Command</li><li>• 6.13, Flash Shield Window Set Command</li></ul> |

## 6.11 Extra Option Set Command

This command is used to make settings of the specified extra options.

### 6.11.1 Sequence Diagram

Figure 6-11 is a diagram of the Extra Option Set command sequence.

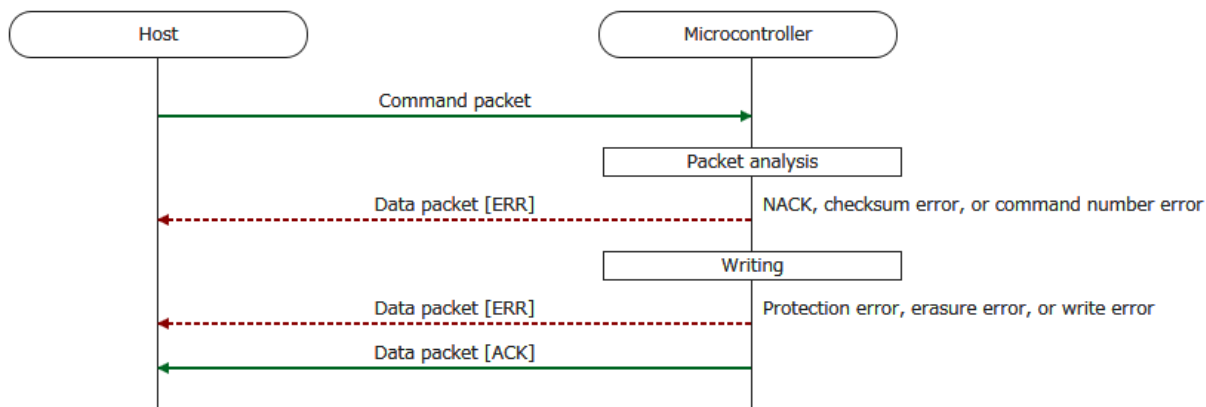

**Figure 6-11 Extra Option Set Command**

### 6.11.2 List of Packets to be Transmitted

Table 6-53 to Table 6-56 respectively show the command packet, order of transmission of the extra option data (EOD), and two types of data packet (for ACK and ERR).

**Table 6-53 Command Packet**

|       |          |  |
|-------|----------|--|
| SOH   | (1 byte) | 01h  |
| LEN   | (1 byte) | 0Fh  |
| CMD   | (1 byte) | A5h  |
| EOD1  | (1 byte) | Extra option      Extra option data to be written  |
| EOD2  | (1 byte) | Extra option      Extra option data to be written  |
| EOD3  | (1 byte) | Extra option      Extra option data to be written  |
| EOD4  | (1 byte) | Extra option      Extra option data to be written  |
| EOD5  | (1 byte) | Extra option      Extra option data to be written  |
| EOD6  | (1 byte) | Extra option      Extra option data to be written  |
| EOD7  | (1 byte) | Extra option      Extra option data to be written  |
| EOD8  | (1 byte) | Extra option      Extra option data to be written  |
| EOD9  | (1 byte) | Extra option      Extra option data to be written  |
| EOD10 | (1 byte) | Extra option      Extra option data to be written  |
| EOD11 | (1 byte) | Extra option      Extra option data to be written  |
| EOD12 | (1 byte) | Extra option      Extra option data to be written  |
| EOD13 | (1 byte) | Extra option      Extra option data to be written  |
| EOD14 | (1 byte) | Extra option      [Bits 3 to 0] All 1<br>[Bit 4] CMPR (Extra option area protection)<br>0: Writing to the extra option area is disabled.<br>1: Writing to the extra option area is enabled.<br>[Bits 7 to 5] All 1 |
| SUM   | (1 byte) | Checksum value   |
| ETX   | (1 byte) | 03h  |

**Table 6-54 Order of Transmission of the Extra Option Data (EOD)**

|                                 |      |      |      |      |      |      |      |      |
|---------------------------------|------|------|------|------|------|------|------|------|
| Data to be written              | EOD1 | EOD2 | EOD3 | EOD4 | EOD5 | EOD6 | EOD7 | EOD8 |
| Order of parameter transmission | 1st  | 2nd  | 3rd  | 4th  | 5th  | 6th  | 7th  | 8th  |

|                                 |      |       |       |       |       |       |
|---------------------------------|------|-------|-------|-------|-------|-------|
| Data to be written              | EOD9 | EOD10 | EOD11 | EOD12 | EOD13 | EOD14 |
| Order of parameter transmission | 9th  | 10th  | 11th  | 12th  | 13th  | 14th  |

**Table 6-55 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-56 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.11.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, the extra option information is written.

- If an erasure error has occurred (ERER has been set in FSASTL) during the processing for writing, the erasure error code is sent.
- If a write error has occurred (WRER has been set in FSASTL) during the processing for writing, the write error code is sent.
- If a sequencer error has occurred (SEQER or ESEQER has been set in FSASTL) during the processing for writing, the protection error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Notes: 1. If an erasure error or a write error has occurred, the state of the extra options in the flash memory becomes undefined.  
 2. If a protection error has occurred, the flash memory remains in the same state as before the command was received.  
 3. If another command is executed immediately after an erasure error, a write error, or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.  
 If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after an erasure error, a write error, or a protection error.

- On successful completion of the processing for writing, ACK is sent and execution returns to the command wait state.

Note: The extra option area of the flash memory is set to the written state.

### 6.11.4 Status Information Returned from the Microcontroller

Table 6-57 lists the status information.

**Table 6-57 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| An erasure error has occurred.   | Erasure error        |
| A write error has occurred.  | Write error          |
| A sequencer error has occurred.  | Protection error     |
| Processing has been successfully completed.  | ACK                  |

### 6.11.5 Notes on Using this Command

Table 6-58 is a list of notes on using this command.

**Table 6-58 Notes on Using this Command**


|     |  |
|-----|--|
| (1) | After CMPR has been set to 0, rewriting of the parameters for extra options, including CMPR itself, becomes impossible.<br>(In this case, the settings cannot be erased even by issuing the Security Release command.) |
| (2) | To rewrite the previously set parameters for extra options, execute the Security Release command first and then rewrite them.  |
| (3) | The security settings made by this command take effect as soon as the command execution is completed. (There is no need to reset the device to make the settings effective after this command.)                        |

## 6.12 BTBLS Set Command (RL78/L23 only)

This command is used to write BAPR and BTBLS received from the host to extra option area.

### 6.12.1 Sequence Diagram

Figure 6-12 is a diagram of the BTBLS Set command sequence.

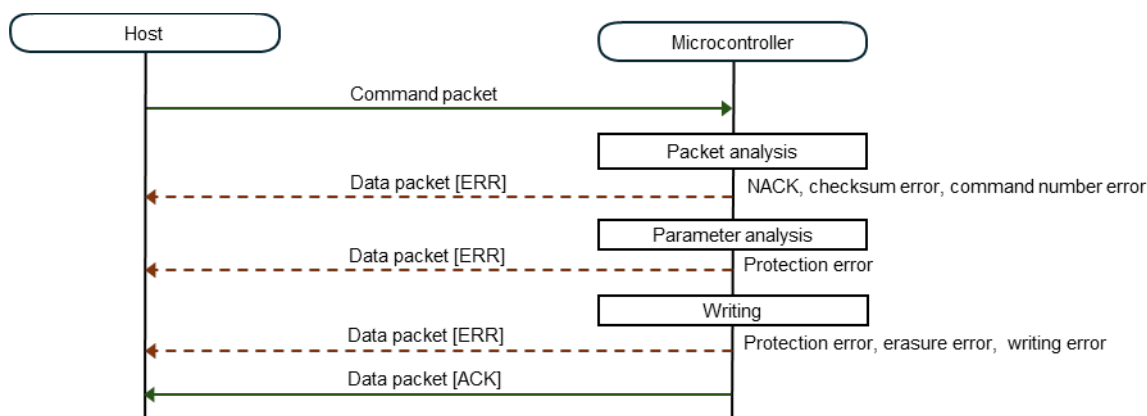

**Figure 6-12 BTBLS Set Command**

### 6.12.2 List of Packets to be Transmitted

Table 6-59 to Table 6-62 respectively show the command packet, BTBLS for Boot Cluster Size and data packet (for BTBLS for Boot Cluster SizeACK and ERR).

**Table 6-59 Command Packet**

|     |           |   |
|-----|-----------|---|
| SOH | (1 byte)  | 01h   |
| LEN | (1 byte)  | 01h   |
| CMD | (1 byte)  | A6h   |
| BTB | (1 bytes) | BTBLS+BAPR [Bits 3 to 0] BTBLS (Boot cluster size)<br>[Bits 4] 1<br>[Bits 5] BAPR (BTBLS protection)<br>0:Rewriting of BTBLS is disabled.<br>1:Rewriting of BTBLS is enabled.<br>1:<br>[Bits 6] 1<br>[Bits 7] 1 |
| SUM | (1 byte)  | Checksum value  |
| ETX | (1 byte)  | 03h   |

**Table 6-60 BTBLS for Boot Cluster Size**

| BTBLS [Bits 3 to 0] | Boot cluster size       |
|---------------------|-------------------------|
| 0000                | 2 KB                    |
| 0001                | 4 KB                    |
| 0010                | 8 KB                    |
| 0011                | 16 KB                   |
| 0100                | 32 KB <sup>Note1</sup>  |
| 0101                | 64 KB <sup>Note2</sup>  |
| 0110                | 128 KB                  |
| 0111                | Bank swapping is in use |
| 1111                | 16 KB (default)         |

Note 1 This value can be set for products with a code flash memory size of 128 KB to 512 KB.

Note 2 This value can be set for products with a code flash memory size of 256 KB and 512 KB.

**Table 6-61 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-62 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |



### 6.12.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If modifying BAPR from 0 to 1 is attempted, the protection error code is sent.
- If modifying BTBLS to another value when the current value of BAPR is 0 or BTBLS is already set, the protection error code is sent.

Note “Already set” means that BTBLS  $\neq$  all 1.

- If the above error has occurred, execution returns to the command wait state.

Note The flash memory remain in the same state as before the command was received.

After successful completion of the parameter analysis, the flash options are rewritten.

- If an erasure error has occurred (ERER has been set in FSASTL) during the erasure processing, the erasure error code is sent.
- If a write error has occurred (WRER has been set in FSASTL) during the erasure processing, the write error code is sent.
- If a sequencer error has occurred (SEQR or ESEQR has been set in FSASTL) during the erasure processing, the protection error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Notes: 1. If an erasure error or a write error has occurred, the state of the extra options in the flash memory becomes undefined.  
2. If a protection error has occurred, the flash memory remains in the same state as before the command was received.  
3. If another command is executed immediately after an erasure error, a write error, or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.  
If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after an erasure error, a write error, or a protection error.

- On successful completion of the processing for writing, ACK is sent and execution returns to the command wait state.

Note: The extra option area of the flash memory is set to the written state.

### 6.12.4 Status Information Returned from the Microcontroller

Table 6-63 lists the status information.

**Table 6-63 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| An erasure error has occurred.   | Erasure error        |
| A write error has occurred.  | Write error          |
| A sequencer error has occurred.  | Protection error     |
| Processing has been successfully completed.  | ACK                  |

### 6.12.5 Notes on Using this Command

Table 6-64 is a list of notes on using this command.

**Table 6-64 Notes on Using this Command**


|     |  |
|-----|--|
| (1) | <p>The security settings made by this command take effect as soon as the command execution is completed. (There is no need to reset the device to make the settings effective after this command.)</p> <p>As a precaution related to this specification, if the flash memory is rewritten first while swap is enabled (BTFLG is set) and then BTBLS is changed with this command, the rewriting result may differ from expectations because the swap size is switched after the rewriting is completed.</p> <p>To avoid this, it is recommended to follow one of the following procedures when rewriting flash memory with swap enabled.</p> <ul style="list-style-type: none"> <li>• First, use this command to change the BTBLS, and then use the block erase command and write command to rewrite the flash memory.</li> <li>• Execute the Security Release command to rewrite the flash memory after returning all security, including BTFLG, to its initial state.</li> </ul> |
| (2) | <p>To rewrite the previously set parameters for BAPR and BTBLS, execute the Security Release command first and then rewrite them.</p>  |

## 6.13 BTBLS Get Command (RL78/L23 only)

This command is used to send the current settings of the BAPR and BTBLS to the host.

### 6.13.1 Sequence Diagram

Figure 6-13 is a diagram of the Flash Read Protection Set command sequence.

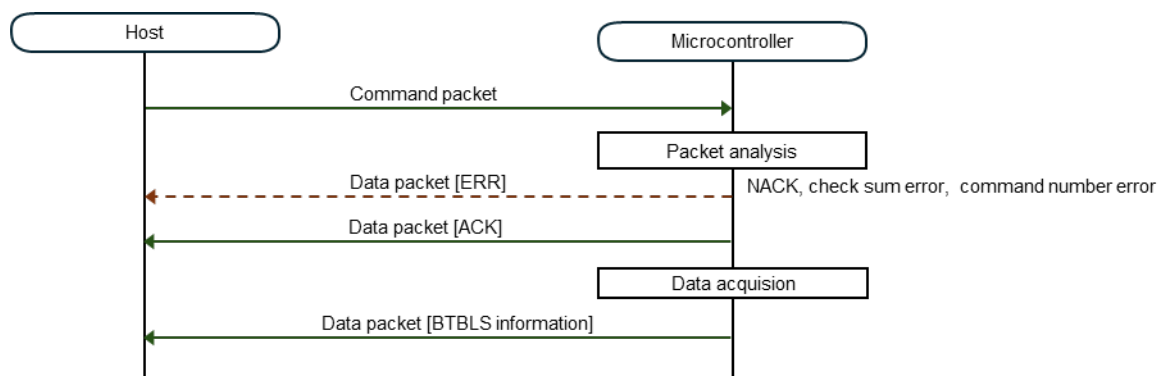

**Figure 6-13 BTBLS Get Command**

### 6.13.2 List of Packets to be Transmitted

Table 6-65 to Table 6-68 respectively show the command packet and three types of data packet (for BTBLS information, ACK and ERR).

**Table 6-65 Command Packet**

|     |          |     |
|-----|----------|-----|
| SOH | (1 byte) | 01h |
| LEN | (1 byte) | 01h |
| CMD | (1 byte) | A7h |
| SUM | (1 byte) | 58H |
| ETX | (1 byte) | 03h |

**Table 6-66 Data Packet [BTBLS information]**

|     |          |  |
|-----|----------|--|
| STX | (1 byte) | 02h  |
| LEN | (1 byte) | 01h  |
| BTB | (1 byte) | BTBLS+BAPR<br>[Bits 3 to 0] BTBLS (Boot cluster size)<br>Refer Table 6-60<br>[Bits 4] 0<br>[Bits 5] BAPR (BTBLS protection)<br>0:Rewriting of BTBLS is disabled.<br>1:Rewriting of BTBLS is enabled.<br><br>[Bits 6] 0<br>[Bits 7] 0 |
| SUM | (1 byte) | Checksum value   |
| ETX | (1 byte) | 03h  |

**Table 6-67 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-68 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.13.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, ACK is sent in response to the command packet.

- ACK is sent in response to the command packet.

After ACK is sent, the BTBLS information is read.

- The information read from the BTBLS information is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

### 6.13.4 Status Information Returned from the Microcontroller

Table 6-69 lists the status information.

**Table 6-69 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| Processing has been successfully completed.  | ACK                  |

## 6.14 Flash Read Protection Set Command

This command is used to write the settings for read protection of blocks received from the host.

### 6.14.1 Sequence Diagram

Figure 6-14 is a diagram of the Flash Read Protection Set command sequence.

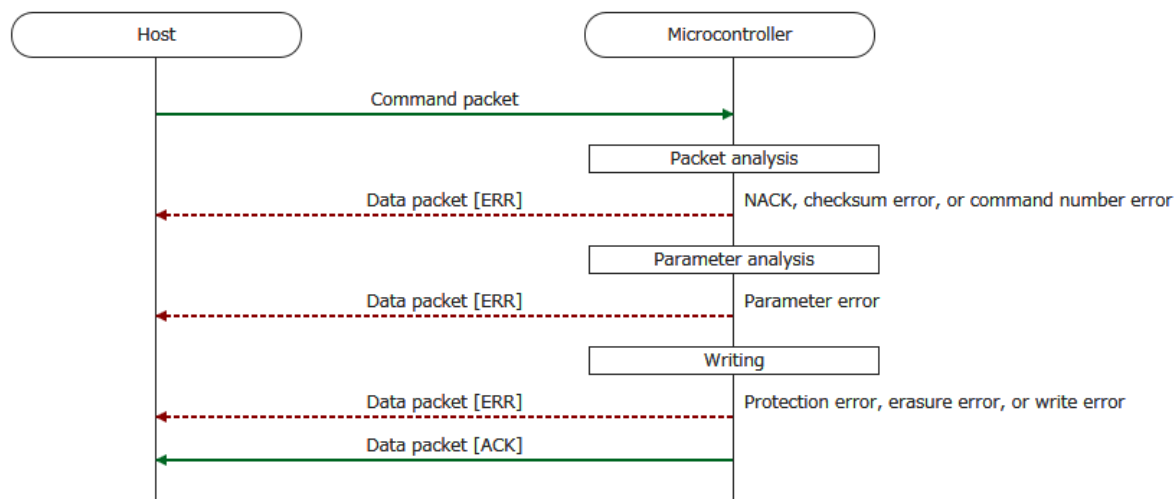


Figure 6-14 Flash Read Protection Set Command

### 6.14.2 List of Packets to be Transmitted

Table 6-70 to Table 6-72 respectively show the command packet and two types of data packet (for ACK and ERR).

**Table 6-70 Command Packet**

|     |           |  |
|-----|-----------|--|
| SOH | (1 byte)  | 01h  |
| LEN | (1 byte)  | 05h  |
| CMD | (1 byte)  | ABh  |
| RDS | (2 bytes) | Read-protected block (start block)<br>[Bits 8 to 0] Read-protected block (start block)<br>[Bits 15 to 9] All 1<br>Order of transfer: Low → High<br>Example: Transmitted parameter values = 12h, FEh<br>→ Read-protected block (start block) = 18<br>(12h is written to the bits for setting the start block of the read-protected blocks.)   |
| RDE | (2 bytes) | Read-protected block (end block)<br>[Bits 8 to 0] Read-protected block (end block)<br>[Bits 14 to 9] All 1<br>[Bit 15] SWPR (Flash read protection area setting protection)<br>0: Rewriting of the read-protected blocks is disabled.<br>1: Rewriting of the read-protected blocks is enabled.<br>Order of transfer: Low → High<br>Example: Transmitted parameter values = 24h, 7Eh<br>→ Read-protected block (end block) = 36 and SWPR = 0<br>(24h is written to the bits for setting the end block of the read-protected blocks and 0 is written to the SWPR bit.) |
| SUM | (1 byte)  | Checksum value   |
| ETX | (1 byte)  | 03h  |

**Table 6-71 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-72 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.14.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If the area specified by RDS and RDE contains the option byte area or programmer connection ID area, the parameter error code is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

After successful completion of the parameter analysis, the flash options are rewritten.

- If an erasure error has occurred (ERER has been set in FSASTL) during the rewriting processing, the erasure error code is sent.
- If a write error has occurred (WRER has been set in FSASTL) during the rewriting processing, the write error code is sent.
- If a sequencer error has occurred (SEQER or ESEQER has been set in FSASTL) during the rewriting processing, the protection error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

- Notes:
1. If an erasure error or a write error has occurred, the state of the flash options becomes undefined.
  2. If a protection error has occurred, the flash options remain in the same state as before the command was received.
  3. If another command is executed immediately after an erasure error, a write error, or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.  
If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after an erasure error, a write error, or a protection error.
- On successful completion of the rewriting processing, ACK is sent and execution returns to the command wait state.



#### 6.14.4 Status Information Returned from the Microcontroller

Table 6-73 lists the status information.

**Table 6-73 Status Information**

| Condition   | STS                  |
|---|----------------------|
| The received packet does not end with ETX.  | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.                | Checksum error       |
| Execution of the given command is not allowed in the current phase.                               | Command number error |
| The LEN value in the received packet does not match the actual length of the packet.              | NACK                 |
| The area specified by RDS and RDE contains the option byte area or programmer connection ID area. | Parameter error      |
| An erasure error has occurred.  | Erase error          |
| A write error has occurred.   | Write error          |
| A sequencer error has occurred.   | Protection error     |
| Processing has been successfully completed.   | ACK                  |

#### 6.14.5 Notes on Using this Command

Table 6-74 is a list of notes on using this command.

**Table 6-74 Notes on Using this Command**

|     |   |
|-----|---|
| (1) | After SWPR has been set to 0, rewriting of the parameters for the read-protected blocks, including SWPR itself, becomes impossible.<br>Note that the settings of the parameters including SWPR can be erased by issuing the Security Release command. |
| (2) | The security settings made by this command take effect as soon as the command execution is completed. (There is no need to reset the device to make the settings effective after this command.)   |

## 6.15 Flash Shield Window Set Command

This command is used to write the settings for the flash shield window received from the host.

### 6.15.1 Sequence Diagram

Figure 6-15 is a diagram of the Flash Shield Window Set command sequence.

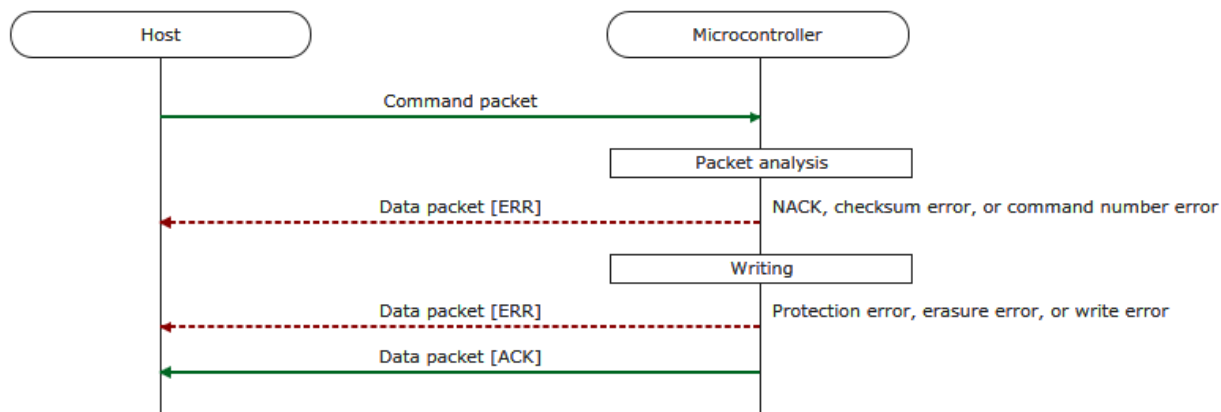


Figure 6-15 Flash Shield Window Set Command

### 6.15.2 List of Packets to be Transmitted

Table 6-75 to Table 6-77 respectively show the command packet and two types of data packet (for ACK and ERR).

**Table 6-75 Command Packet**

|     |           |                        |  |
|-----|-----------|------------------------|--|
| SOH | (1 byte)  | 01h                    |  |
| LEN | (1 byte)  | 05h                    |  |
| CMD | (1 byte)  | ACh                    |  |
| SWS | (2 bytes) | FSW start block + FSPR | [Bits 8 to 0] FSWS (FSW start block)<br>[Bits 14 to 9] All 1<br>[Bit 15] FSPR (Flash shield window protection)<br>0: Rewriting of the settings for the FSW start block, FSW end block, and FSWC is disabled.<br>1: Rewriting of the settings for the FSW start block, FSW end block, and FSWC is enabled.<br><br>Order of transfer: Low → High<br>Example: Transmitted parameter values = 02h, 7Eh<br>→ FSW start block = block 2 and FSPR = 0 |
| SWE | (2 bytes) | FSW end block + FSWC   | [Bits 8 to 0] FSWE (FSW end block)<br>[Bits 14 to 9] All 1<br>[Bit 15] FSWC (Flash shield window control)<br>0: Rewriting is disabled in the area specified as the FSW and enabled outside the area.<br>1: Rewriting is enabled in the area specified as the FSW and disabled outside the area.<br><br>Order of transfer: Low → High<br>Example: Transmitted parameter values = 40h, 7Fh<br>→ FSW end block = block 320 and FSWC = 0           |
| SUM | (1 byte)  | Checksum value         |  |
| ETX | (1 byte)  | 03h                    |  |

**Table 6-76 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-77 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.15.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, the flash options are rewritten.

- If an erasure error has occurred (ERER has been set in FSASTL) during the rewriting processing, the erasure error code is sent.
- If a write error has occurred (WRER has been set in FSASTL) during the rewriting processing, the write error code is sent.
- If a sequencer error has occurred (SEQER or ESEQER has been set in FSASTL) during the rewriting processing, the protection error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Notes: 1. If an erasure error or a write error has occurred, the state of the flash options becomes undefined.  
2. If a protection error has occurred, the flash options remain in the same state as before the command was received.  
3. If another command is executed immediately after an erasure error, a write error, or a protection error and if the command execution is unsuccessful, an incorrect error code may be returned.  
If the return of an incorrect error code may produce any problem, reset the device before executing another command immediately after an erasure error, a write error, or a protection error.

- On successful completion of the rewriting processing, ACK is sent and execution returns to the command wait state.

### 6.15.4 Status Information Returned from the Microcontroller

Table 6-78 lists the status information.

**Table 6-78 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| An erasure error has occurred.   | Erasure error        |
| A write error has occurred.  | Write error          |
| A sequencer error has occurred.  | Protection error     |
| Processing has been successfully completed.  | ACK                  |

### 6.15.5 Notes on Using this Command

Table 6-79 is a list of notes on using this command.

**Table 6-79 Notes on Using this Command**


|     |   |
|-----|---|
| (1) | After FSPR has been set to 0, rewriting of the parameters for the flash shield window, including FSPR itself, becomes impossible.<br>Note that the settings of the parameters including FSPR can be erased by issuing the Security Release command. |
| (2) | The security settings made by this command take effect as soon as the command execution is completed. (There is no need to reset the device to make the settings effective after this command.)   |

## 6.16 Flash Shield Window Get Command

This command is used to send the current settings of the flash shield window to the host.

### 6.16.1 Sequence Diagram

Figure 6-16 is a diagram of the Flash Shield Window Get command sequence.

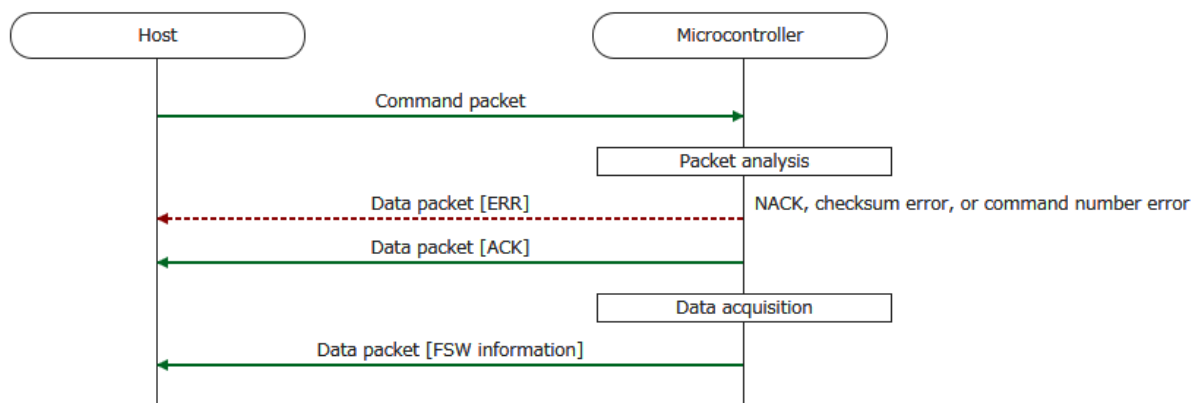

**Figure 6-16 Flash Shield Window Get Command**

### 6.16.2 List of Packets to be Transmitted

Table 6-80 to Table 6-83 respectively show the command packet and three types of data packet (for flash shield window information, ACK, and ERR).

**Table 6-80 Command Packet**

|     |          |     |
|-----|----------|-----|
| SOH | (1 byte) | 01h |
| LEN | (1 byte) | 01h |
| CMD | (1 byte) | ADh |
| SUM | (1 byte) | 52h |
| ETX | (1 byte) | 03h |

**Table 6-81 Data packet [Flash Shield Window Information]**

|     |           |   |
|-----|-----------|---|
| STX | (1 byte)  | 02h   |
| LEN | (1 byte)  | 04h   |
| SWS | (2 bytes) | <div> <div> FWS start block + FSPR </div> <div> [Bits 8 to 0] FSWS (FSW start block)<br/> [Bits 14 to 9] All 0<br/> [Bit 15] FSPR (Flash shield window protection)<br/> 0: Rewriting of the settings for the FSW start block, FSW end block, and FSWC is disabled.<br/> 1: Rewriting of the settings for the FSW start block, FSW end block, and FSWC is enabled.<br/><br/> Order of transfer: Low → High<br/> Example: Transmitted parameter values = 02h, 80h<br/> → FSW start block = block 2 and FSPR = 1 </div> </div> |
| SWE | (2 bytes) | <div> <div> FSW end block + FSWC </div> <div> [Bits 8 to 0] FSWE (FSW end block)<br/> [Bits 14 to 9] All 0<br/> [Bit 15] FSWC (Flash Shield Window control)<br/> 0: Rewriting is disabled in the area specified as FSW and enabled outside the area.<br/> 1: Rewriting is enabled in the area specified as FSW and disabled outside the area.<br/><br/> Order of transfer: Low → High<br/> Example: Transmitted parameter values = 40h, 81h<br/> → FSW end block = block 320 and FSWC = 1 </div> </div>                     |
| SUM | (1 byte)  | Checksum value  |
| ETX | (1 byte)  | 03h   |

Note: When FSWS and FSWE are set to the same value, the following values are returned as this is an exceptional case.

— FSW start block: 0

— FSW end block: Number of the last block of the code flash memory

In this case, rewriting is enabled in all blocks regardless of the FSWC setting.

**Table 6-82 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-83 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.16.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, ACK is sent in response to the command packet.

- ACK is sent in response to the command packet.

After ACK is sent, the flash shield window information is read.

- The read information of the flash shield window is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

### 6.16.4 Status Information Returned from the Microcontroller

Table 6-84 lists the status information.

**Table 6-84 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| Processing has been successfully completed.  | ACK                  |



## 6.17 Checksum Command

This command is used to return the checksum value for an area specified as an address range. The code flash memory or data flash memory is specifiable but specifying a range that extends beyond the boundary of the code flash memory or data flash memory is not allowed. The addresses where the target area starts and ends must be the addresses where given blocks start and end.

### Calculation of checksum:

The initial value of the checksum is set to 0000h, and the data in the specified area are read in byte units and subtracted from the current checksum value in order. Generation of borrowing during the calculation is ignored.

### 6.17.1 Sequence Diagram

Figure 6-17 is a diagram of the Checksum command sequence.

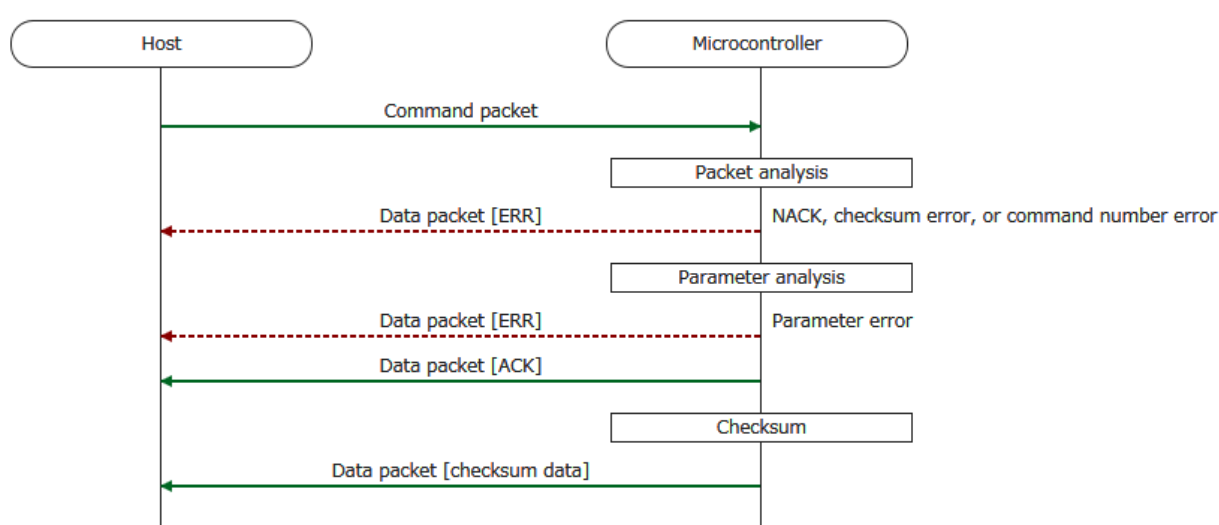


Figure 6-17 Checksum Command

### 6.17.2 List of Packets to be Transmitted

Table 6-85 to Table 6-88 respectively show the command packet and three types of data packet (for checksum data, ACK, and ERR).

Table 6-85 Command Packet

|     |           |                |   |
|-----|-----------|----------------|---|
| SOH | (1 byte)  | 01h            |   |
| LEN | (1 byte)  | 07h            |   |
| CMD | (1 byte)  | B0h            |   |
| SAD | (3 bytes) | Start address  | Order of transfer: Low → Middle → High<br>Example: 23400h = 00h → 34h → 02h |
| EAD | (3 bytes) | End address    | Order of transfer: Low → Middle → High<br>Example: 3FFFFh = FFh → FFh → 03h |
| SUM | (1 byte)  | Checksum value |   |
| ETX | (1 byte)  | 03h            |   |

**Table 6-86 Data Packet [Checksum Data]**

|     |           |                |   |
|-----|-----------|----------------|---|
| STX | (1 byte)  | 02h            |   |
| LEN | (1 byte)  | 02h            |   |
| DAT | (2 bytes) | Checksum data  | Order of transfer: Low → High<br>Example: 0123h = 23h → 01h |
| SUM | (1 byte)  | Checksum value |   |
| ETX | (1 byte)  | 03h            |   |

**Table 6-87 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-88 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.17.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

After successful completion of the packet analysis, parameter analysis is executed.

- If SAD is greater than EAD, the parameter error code is sent.
- If SAD or EAD is neither in the code flash memory area nor in the data flash memory area, the parameter error code is sent.
- If the area specified by SAD and EAD extends beyond the boundary of the code flash memory or data flash memory, the parameter error code is sent.
- If either or both of SAD and EAD are not the correct addresses where a block starts or ends, the parameter error code is sent.
- If any of the above errors has occurred, execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

- If none of the above errors has occurred, ACK is sent.

After successful completion of the parameter analysis, the checksum is calculated.

- The calculated checksum value is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

#### 6.17.4 Status Information Returned from the Microcontroller

Table 6-89 lists the status information.

**Table 6-89 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received command packet does not end with ETX.   | NACK                 |
| The SUM value in the received command packet does not match the calculated checksum value.                   | Checksum error       |
| Execution of the given command is not allowed in the current phase.  | Command number error |
| The LEN value in the received command packet does not match the actual length of the packet.                 | NACK                 |
| SAD is greater than EAD.   | Parameter error      |
| SAD or EAD is neither in the code flash memory area nor in the data flash memory area.                       | Parameter error      |
| The area specified by SAD and EAD extends beyond the boundary of the code flash memory or data flash memory. | Parameter error      |
| SAD or EAD is not the correct address of the start or end of a block, respectively.                          | Parameter error      |
| Checksum calculation has started.  | ACK                  |

6.18 Silicon Signature Command

This command is used to have the device send its signature information to the host.

6.18.1 Sequence Diagram

Figure 6-18 is a diagram of the Silicon Signature command sequence.

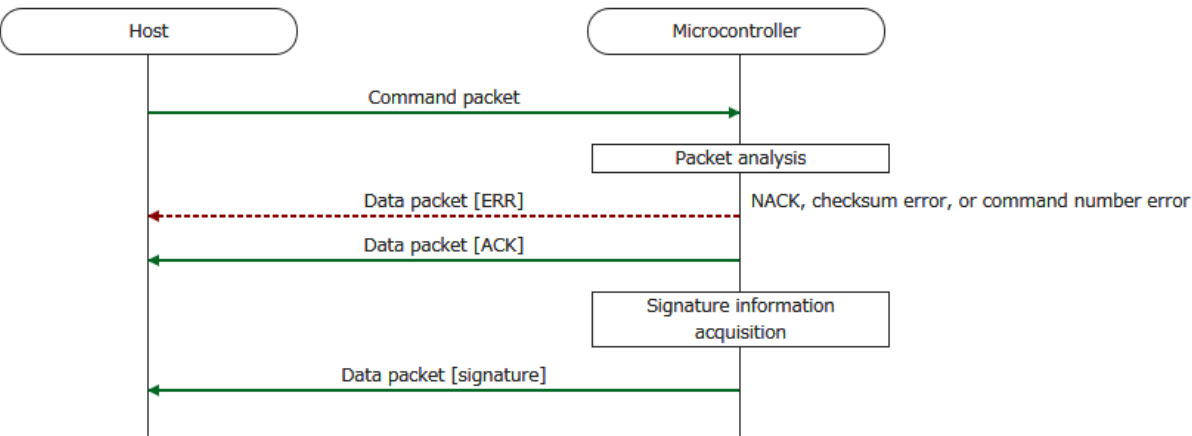


Figure 6-18 Silicon Signature Command

6.18.2 List of Packets to be Transmitted

Table 6-90 to Table 6-93 respectively show the command packet and three types of data packet (for signature, ACK, and ERR).

Table 6-90 Command Packet

|     |          |     |
|-----|----------|-----|
| SOH | (1 byte) | 01h |
| LEN | (1 byte) | 01h |
| COM | (1 byte) | C0h |
| SUM | (1 byte) | 3Fh |
| ETX | (1 byte) | 03h |

**Table 6-91 Data Packet [Signature]**

|     |            |  |  |
|-----|------------|--|--|
| STX | (1 byte)   | 02h                                    |  |
| LEN | (1 byte)   | 16h                                    |  |
| DVC | (3 bytes)  | Device function code                   | RL78/L23 = 10h, 00h, 0Dh<br>Except RL78/L23 = 10h, 00h, 0Ah  |
| DEV | (10 bytes) | Device name (ASCII code)               | Example: R7F100GAJ = 52h, 37h, 46h, 31h, 30h, 30h, 47h, 41h, 4Ah, 20h  |
| CFE | (3 bytes)  | Last address of code flash memory area | Order of transfer: Low → Middle → High<br>Example: F0FFFh = FFh → 0Fh → 0Fh  |
| DFE | (3 bytes)  | Last address of data flash memory area | Order of transfer: Low → Middle → High<br>Example: F4FFFh = FFh → 4Fh → 0Fh<br>If the device does not incorporate data flash memory, these values are all fixed to 00H.<br>Example: Not incorporated = 00h → 00h → 00h |
| FWV | (3 bytes)  | Boot firmware version                  | Example: V1.23 = 1h, 2h, 3h  |
| SUM | (1 byte)   | Checksum value                         |  |
| ETX | (1 byte)   | 03h                                    |  |

**Table 6-92 Data Packet [ACK]**

|     |          |           |
|-----|----------|-----------|
| STX | (1 byte) | 02h       |
| LEN | (1 byte) | 01h       |
| STS | (1 byte) | 06h (ACK) |
| SUM | (1 byte) | F9h       |
| ETX | (1 byte) | 03h       |

**Table 6-93 Data Packet [ERR]**

|     |          |                |
|-----|----------|----------------|
| STX | (1 byte) | 02h            |
| LEN | (1 byte) | 01h            |
| STS | (1 byte) | Status code    |
| SUM | (1 byte) | Checksum value |
| ETX | (1 byte) | 03h            |

### 6.18.3 Procedure of Processing

Upon reception of the command packet, packet analysis is executed.

- If the packet analysis has been successfully completed, ACK is sent.

After ACK is sent, the signature information is sent.

- Signature information is sent and execution returns to the command wait state.

Note: The flash memory remains in the same state as before the command was received.

### 6.18.4 Status Information Returned from the Microcontroller

Table 6-94 lists the status information.

**Table 6-94 Status Information**

| Condition  | STS                  |
|--|----------------------|
| The received packet does not end with ETX.   | NACK                 |
| The SUM value in the received packet does not match the calculated checksum value.   | Checksum error       |
| Execution of the given command is not allowed in the current phase.                  | Command number error |
| The LEN value in the received packet does not match the actual length of the packet. | NACK                 |
| Processing has been successfully completed.  | ACK                  |

## 7. Flowcharts

### 7.1 Initial Communications


Figure 7-1 is a flowchart of initial communications.



**Figure 7-1 Initial Communications**

## 7.2 Acquiring Signature Information

Figure 7-2 is a flowchart of the acquisition of signature information.

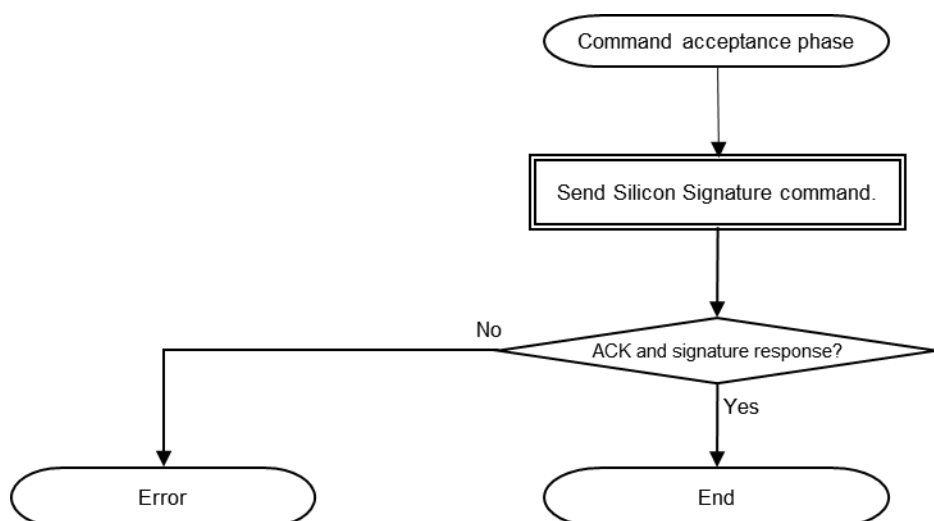

**Figure 7-2 Acquiring Signature Information**



### 7.3 Rewriting Code Flash Memory or Data Flash Memory

Figure 7-3 is a flowchart of rewriting the code flash memory or data flash memory.


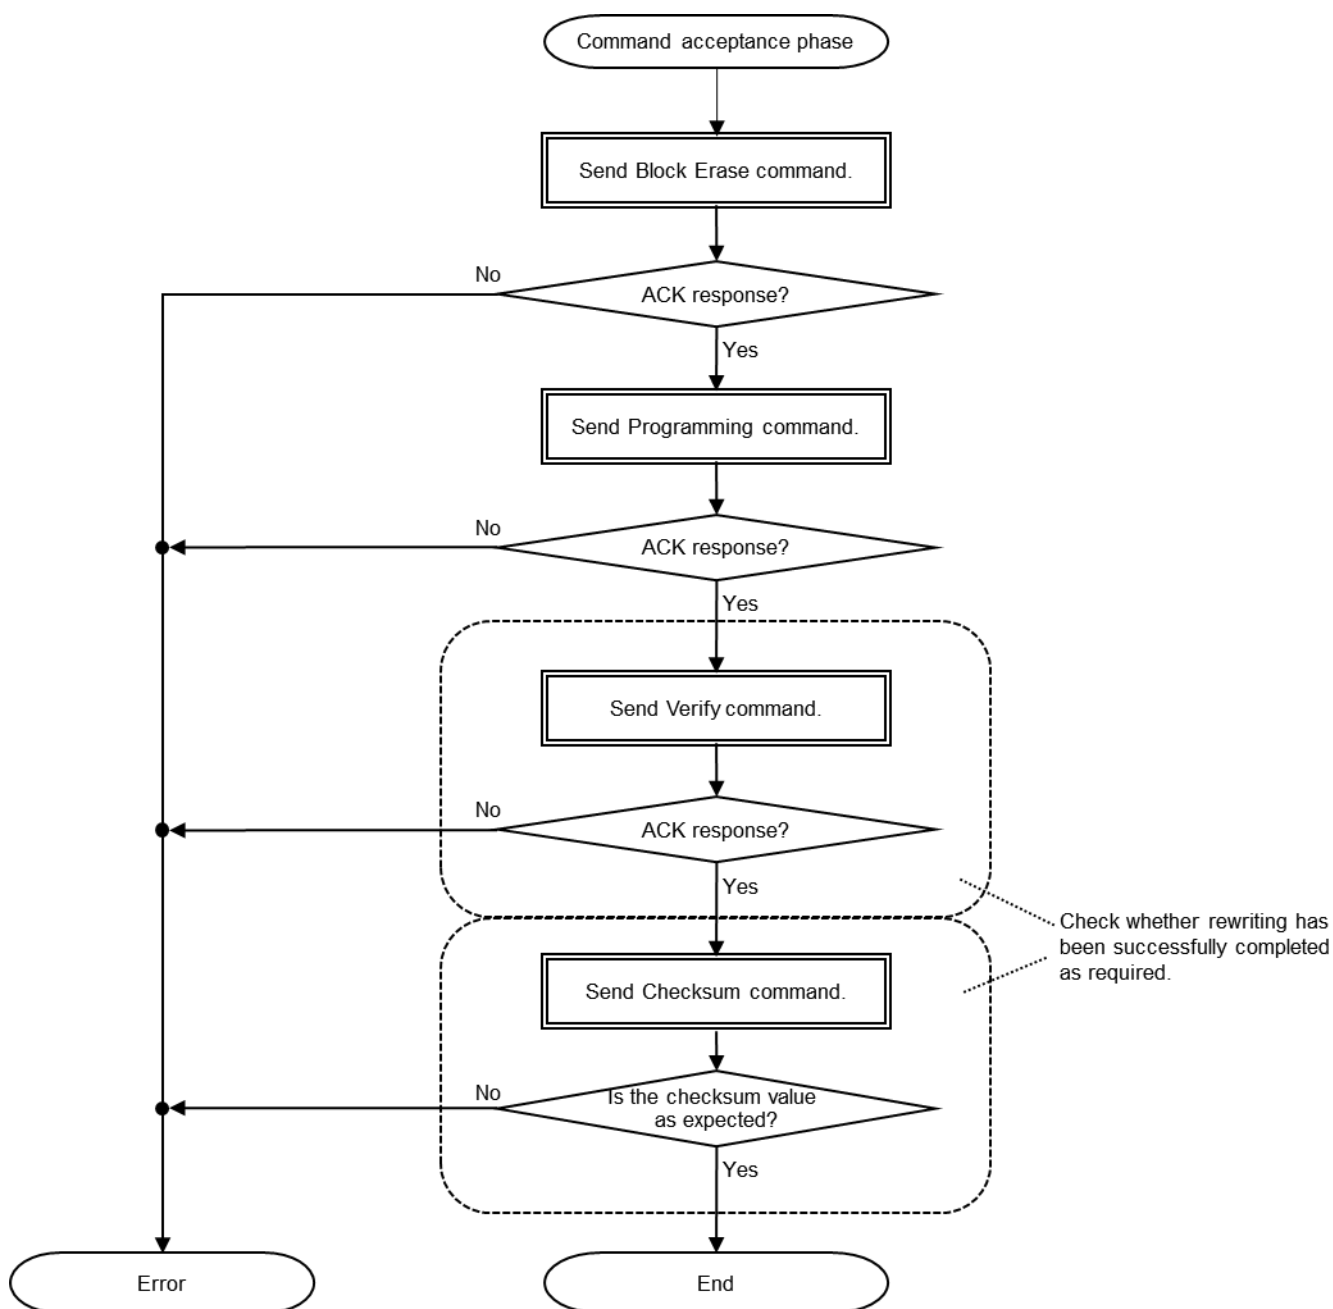


Figure 7-3 Rewriting Code Flash Memory or Data Flash Memory

## 7.4 Rewriting Security Flag Settings (when IFPR is Set to 1)


Figure 7-4 is a flowchart of rewriting security flag settings (when IFPR is set to 1).

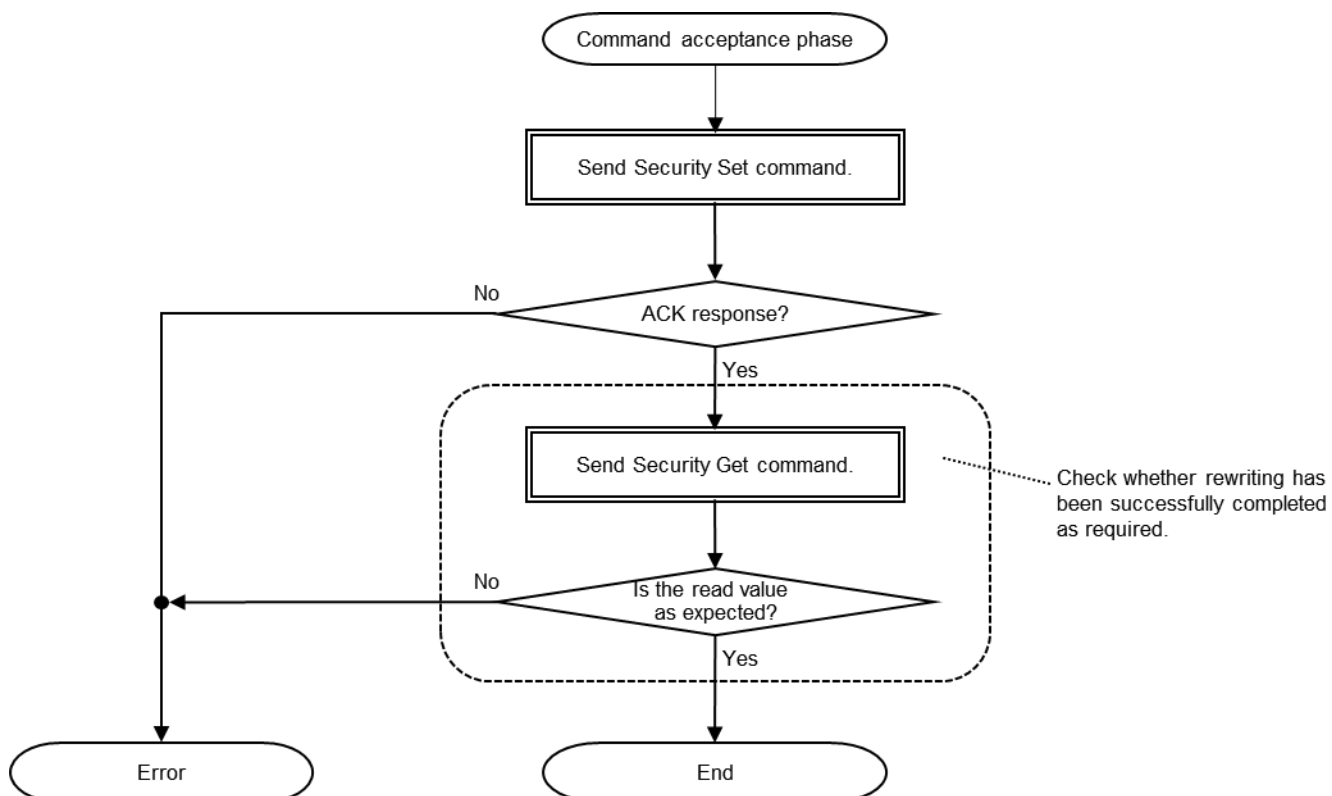

**Figure 7-4** Rewriting Security Flag Settings (when IFPR is Set to 1)

## 7.5 Rewriting Security Flag Settings (when IFPR is Set to 0 and there is No Need to Confirm Completion of Settings for the Flags other than IFPR)


Figure 7-5 is a flowchart of rewriting security flag settings (when IFPR is set to 0 and there is no need to confirm completion of settings for the flags other than IFPR).

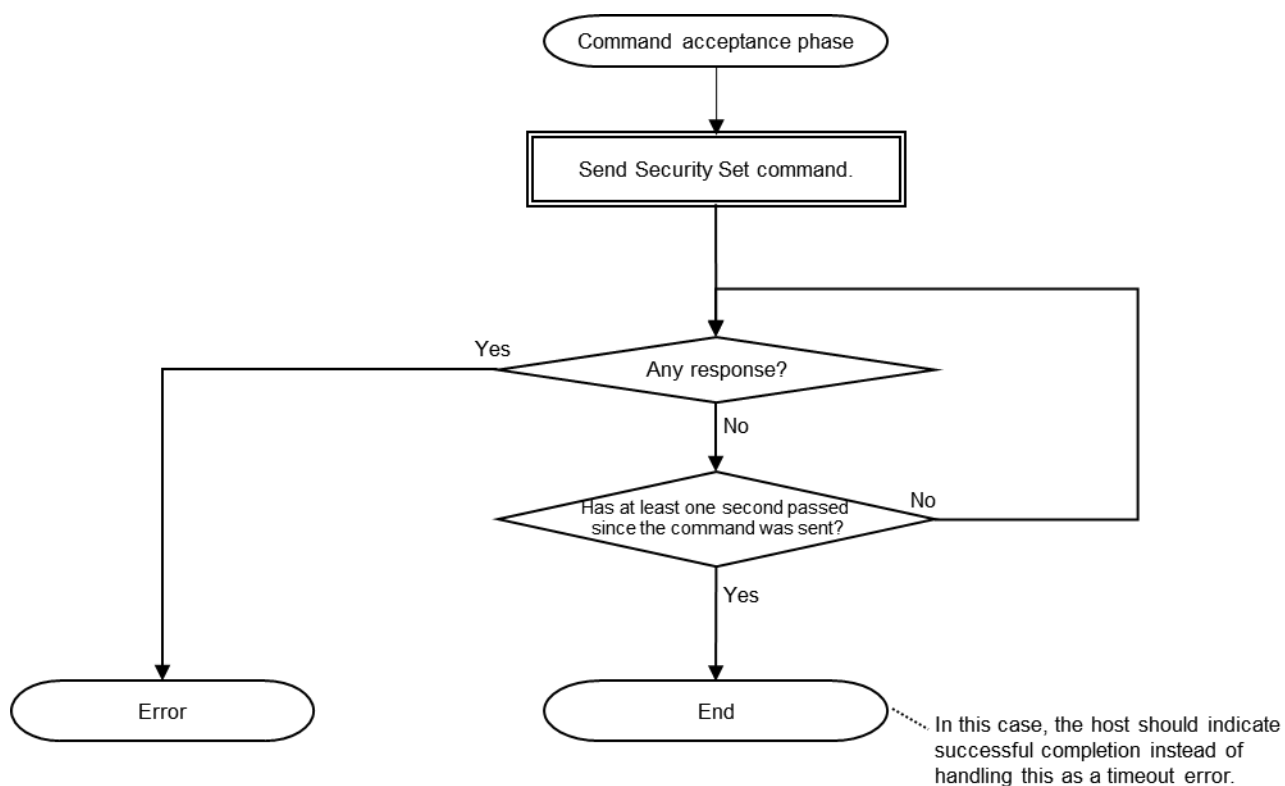

**Figure 7-5 Rewriting Security Flag Settings (when IFPR is Set to 0 and there is No Need to Confirm Completion of Settings for the Flags Other than IFPR)**

## 7.6 Rewriting Security Flag Settings (when IFPR is Set to 0 and Completion of Settings for the Flags Other than IFPR Requires Confirmation)


Figure 7-6 is a flowchart of rewriting security flag settings (when IFPR is set to 0 and completion of settings for the flags other than IFPR requires confirmation).

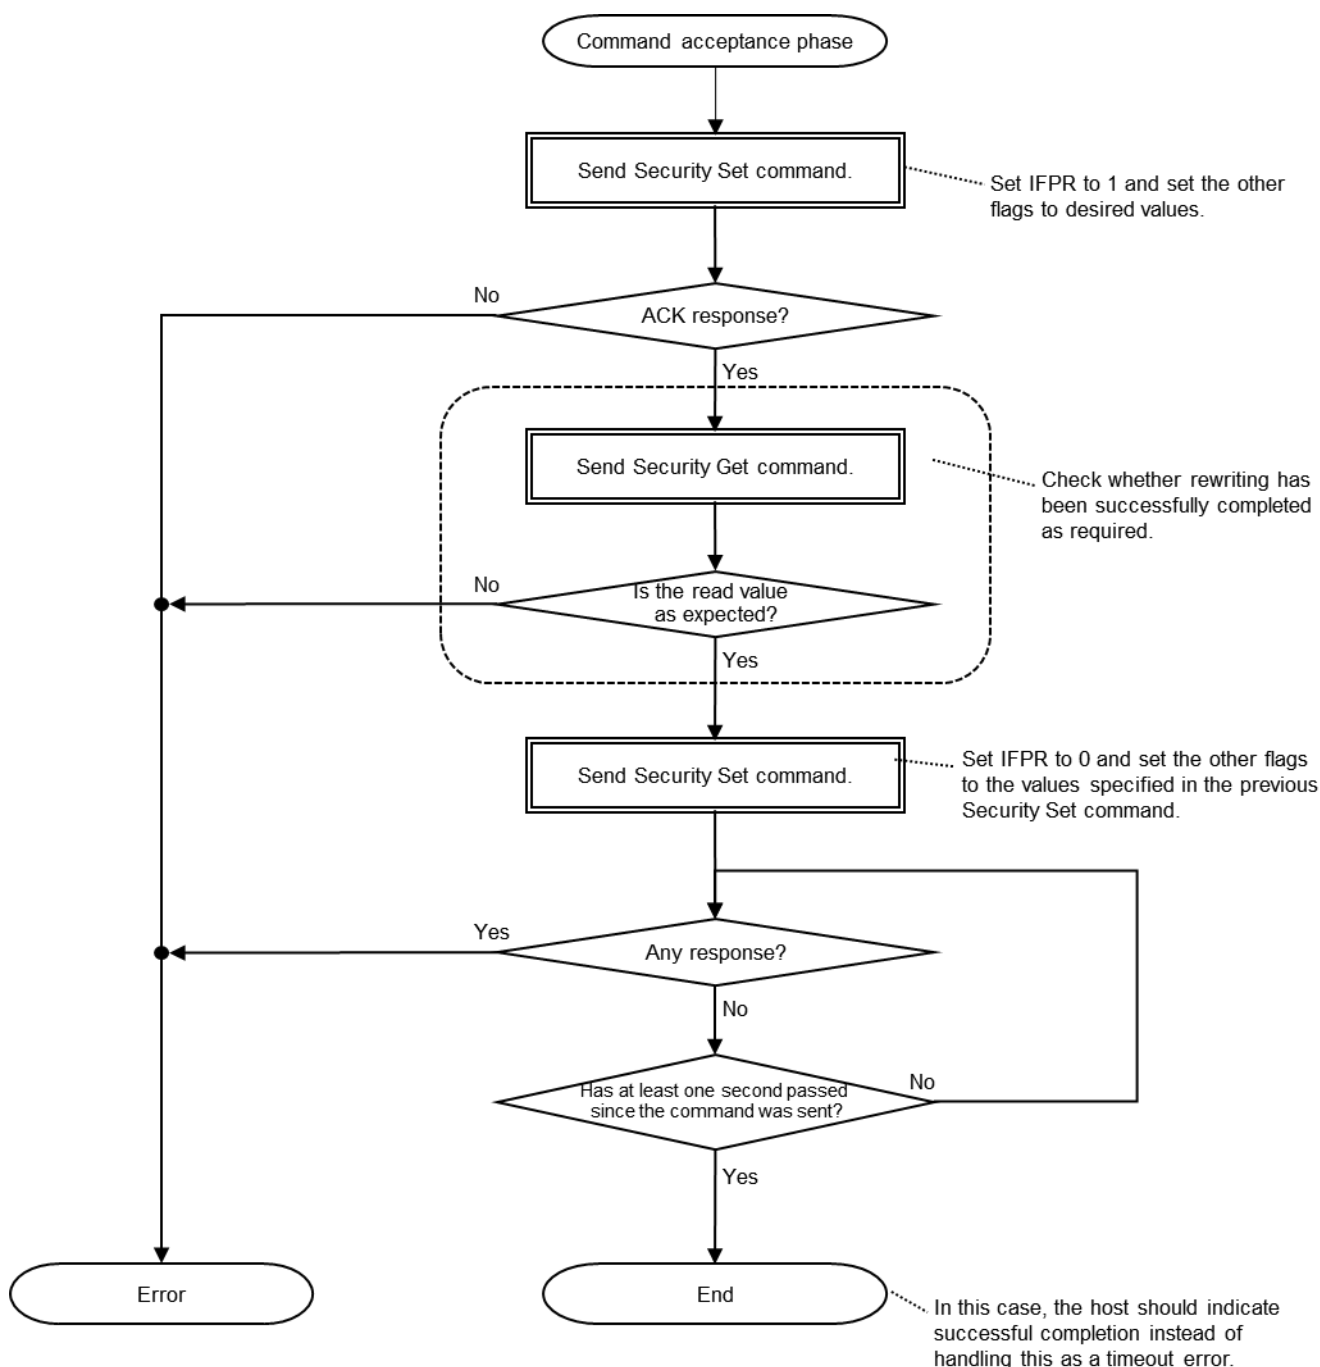

**Figure 7-6 Rewriting Security Flag Settings (when IFPR is Set to 0 and Completion of Settings for the Flags Other than IFPR Requires Confirmation)**

## 7.7 Rewriting Flash Shield Window Settings


Figure 7-7 is a flowchart of rewriting flash shield window settings.

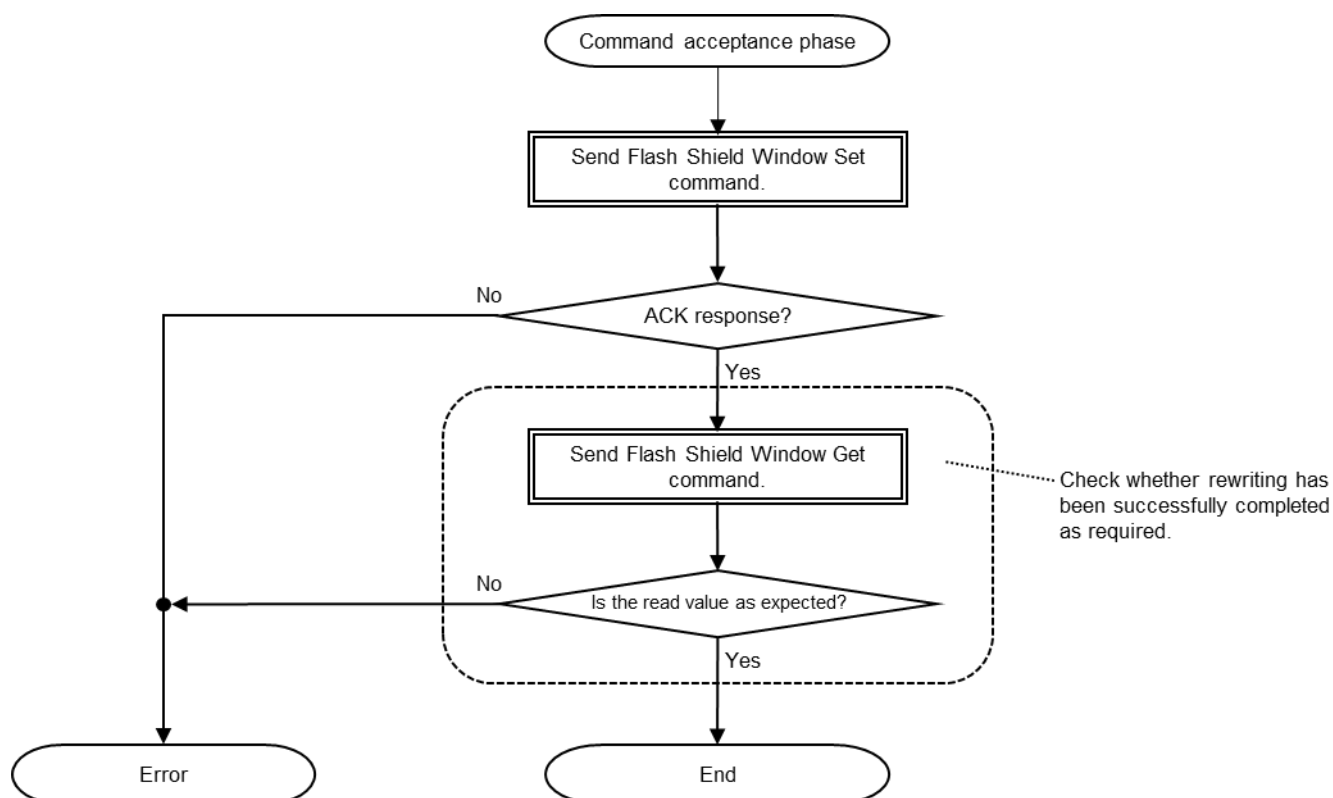

**Figure 7-7 Rewriting Flash Shield Window Settings**

## 7.8 Rewriting BTBLS (RL78/L23 only)


Figure 7-8 is a flowchart of rewriting flash shield window settings.

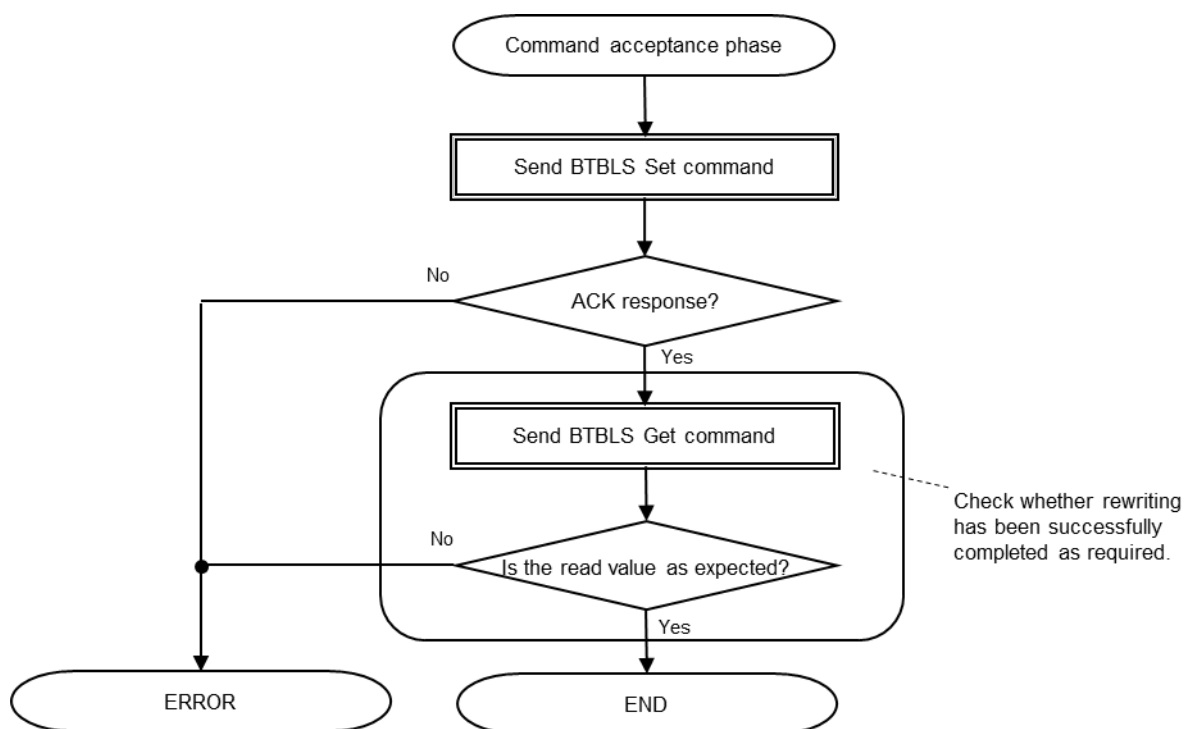

**Figure 7-8 Rewriting BTBLS**

## 7.9 Rewriting Flash Read Protection Settings


Figure 7-8 is a flowchart of rewriting flash read protection settings.

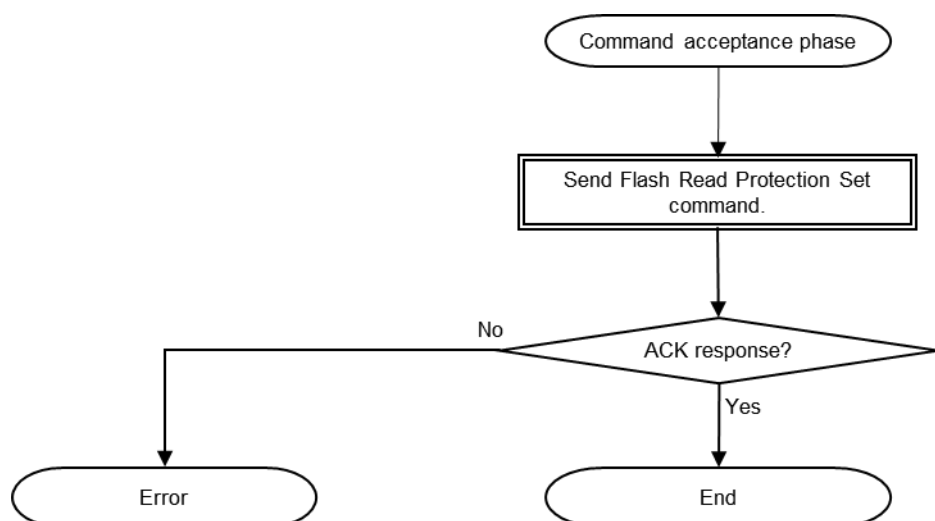

**Figure 7-9 Rewriting Flash Read Protection Settings**

## 7.10 Rewriting Extra Option Settings

Figure 7-9 is a flowchart of rewriting extra option settings.

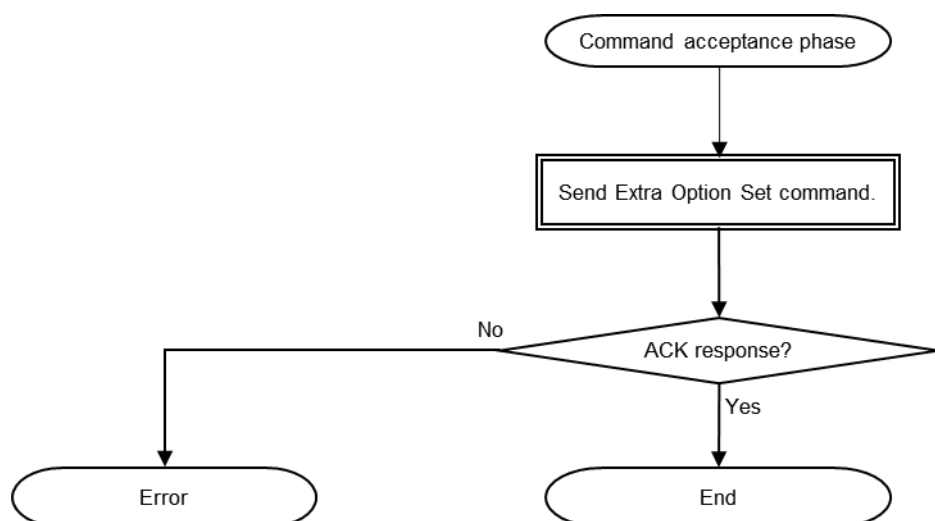

**Figure 7-10** Rewriting Extra Option Settings



## 7.11 Erasing Security Information

Figure 7-10 is a flowchart of erasing the security information.

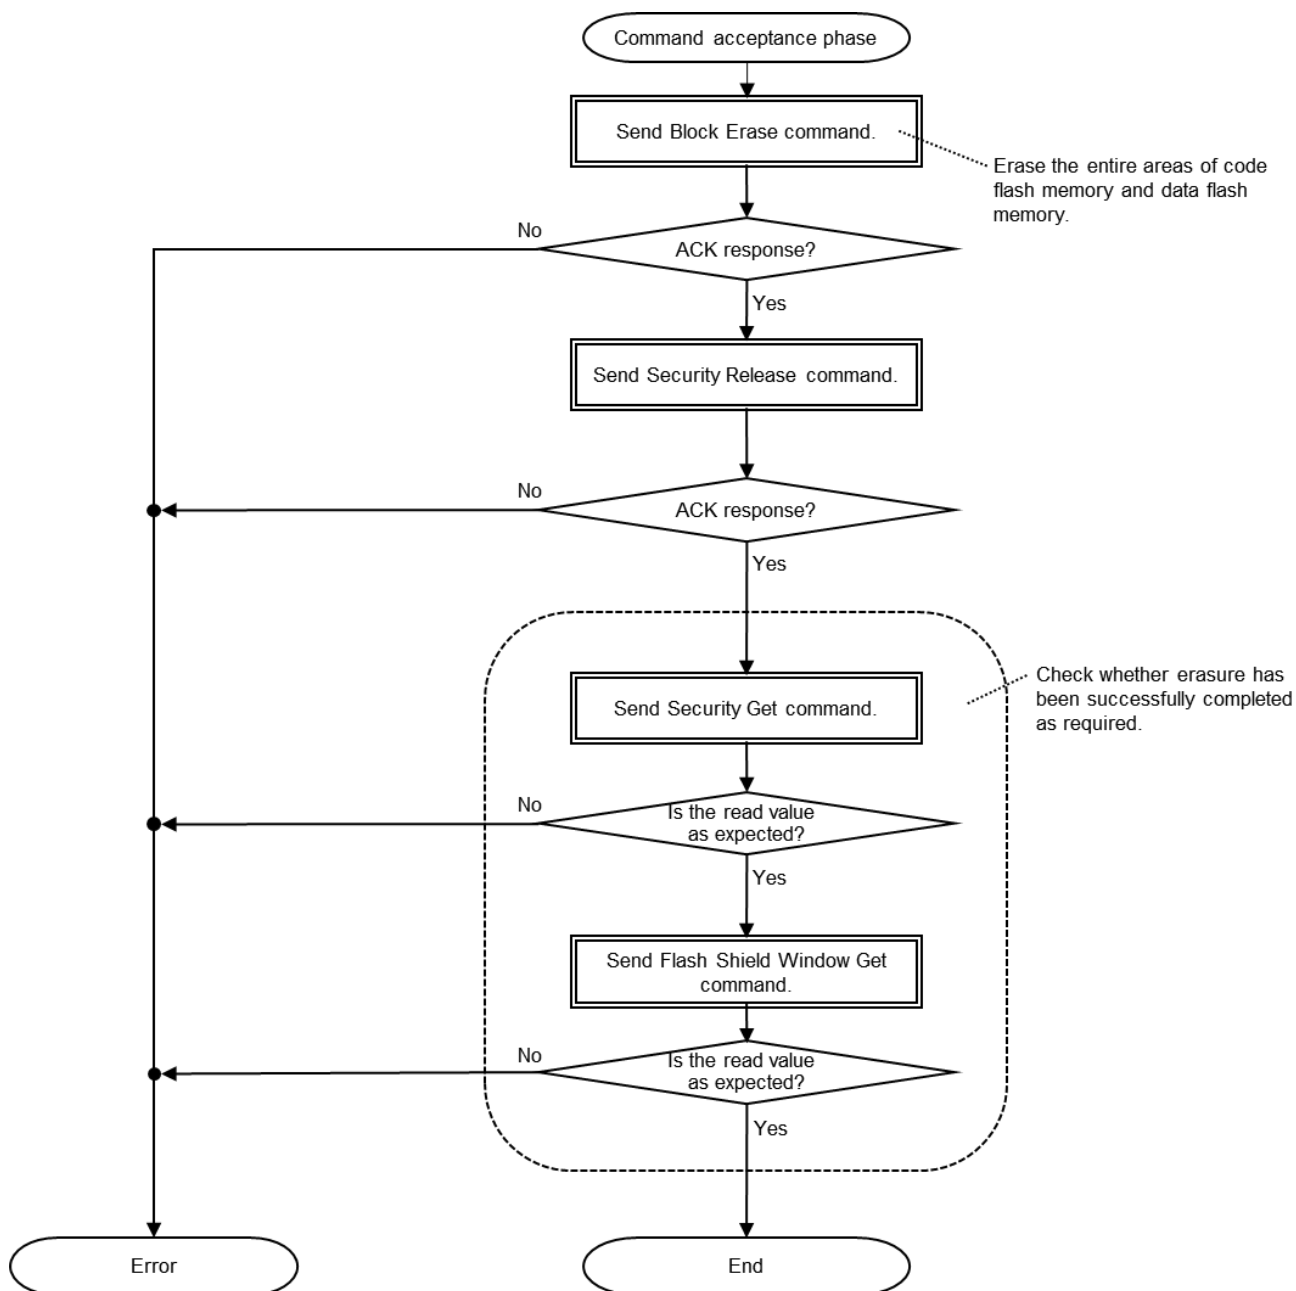


Figure 7-11 Erasing Security Information

7.12 Cancelling Command Processing

For a command involving data packet transmission from the programmer, the command processing can be cancelled by the intentional transmission of an abnormal data packet, which returns execution to the command acceptance phase.

Figure 7-11 is a flowchart of cancelling command processing.

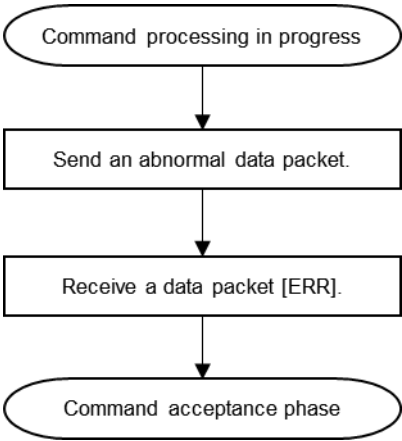


Figure 7-12 Cancelling Command Processing

Example of an Abnormal Data Packet:

| Command             | Timing of Cancellation            | Example of an Abnormal Data Packet |          |                      |  |
|---------------------|-----------------------------------|------------------------------------|----------|----------------------|--|
| Verify command      | Transmission of verification data | STX                                | (1 byte) | 02h                  |  |
|                     |                                   | LEN                                | (1 byte) | 01h                  |  |
| Programming command | Transmission of write data        | Data                               | (1 byte) | 00h                  |  |
|                     |                                   | SUM                                | (1 byte) | FFh                  |  |
|                     |                                   | EXT or ETB                         | (1 byte) | FFh (abnormal value) |  |

### 7.13 Timeout

The following shows a flowchart of judging the timeout of a response and gives rough standards of timeout times.

Note: If IFPR has been set to 0 by the Security Set command, no response is the expected result. For details, see the flowchart of rewriting security flag settings.

Figure 7-12 is a flowchart of judging a timeout.

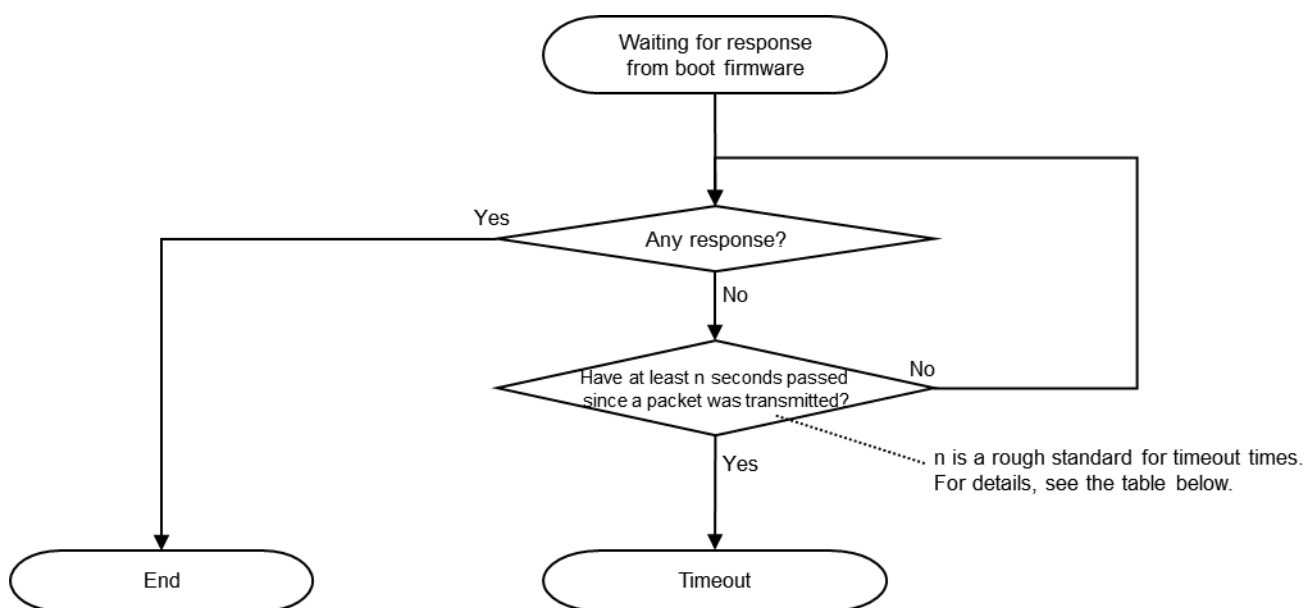


Figure 7-13 Timeout

#### Rough Standards of Timeout Times:

| Command          | Timing                 | Rough Standards of Timeout Times (ms)  |
|------------------|------------------------|--|
| Checksum command | ACK response           | 1000   |
|                  | Checksum data response | Code flash memory:<br>$(96 \div \text{CPU operating frequency (MHz)}) \times \text{specified number of blocks}$<br>Example: When the CPU operating frequency is 2 MHz and an area of 128 Kbytes (one block = 2 Kbytes) is specified<br>$(96 \div 2) \times 64 = 3072 \text{ (ms)}$<br>Data flash memory:<br>$(12 \div \text{CPU operating frequency (MHz)}) \times \text{specified number of blocks}$<br>Example: When the CPU operating frequency is 2 MHz and an area of 8 Kbytes (one block = 256 bytes) is specified<br>$(12 \div 2) \times 32 = 192 \text{ (ms)}$ |
| Other commands   | All packet responses   | 1000   |

All trademarks and registered trademarks are the property of their respective owners.

## Revision History

| Rev. | Date      | Description |  |
|------|-----------|-------------|--|
|      |           | Page        | Summary  |
| 1.00 | Jul.01.21 | —           | First edition issued   |
| 1.10 | Aug.27.25 |             | 1.10 edition issued  |
|      |           | Page17      | Table 5-3 List of Command Codes (CMD)<br>BTBLS Set command ( RL78/L23 only) and<br>BTBLS Get command ( RL78/L23 only) added  |
|      |           | Page 52     | Table 6 44 Data Packet [Security Flag Information<br>Corrected BLB to RSV  |
|      |           | Page 63     | 6.12 BTBLS Set command (RL78/L23 only) added   |
|      |           | Page 67     | 6.13 BTBLS Get command (RL78/L23 only) added   |
|      |           | Page 79     | Table 6-81<br>Collected SWS [bit14:9] all 1 to all 0<br>Collected SWE [bit14:9] all 1 to all 0   |
|      |           | Page 94     | 7.8 Rewriting BTBLS (RL78/L23 only) added  |
|      |           | Page 99     | Rough Standards of Timeout Times (ms)<br>Correction of formulas for code flash memory and data flash<br>memory<br>Incorrect:<br>$96 \div \text{CPU operating frequency (MHz)} \times \text{specified number of blocks}$<br>Correct:<br>$12 \div \text{CPU operating frequency (MHz)} \times \text{specified number of blocks}$ |
| 1.20 | Nov.18.25 |             | 1.20 edition issued  |
|      |           | Page 1      | Target Device item added   |
|      |           | Page 64     | Table 6-60 BTBLS for Boot Cluster Size<br>Enter the boot cluster size at the time of BTBLS value 0111<br>“Bank swapping is in use”   |
|      |           | Page 85     | Table 6-91 Data Packet [Signature]<br>DVC(Device function code) description changes<br>RL78/L23 = 10h, 00h, 0Dh<br>Except RL78/L23 = 10h, 00h, 0Ah   |
| 1.30 | Nov.28.25 | Page 99     | Rough Standards of Timeout Times (ms)<br>Correction of formula for code flash memory<br>Incorrect:<br>$12 \div \text{CPU operating frequency (MHz)} \times \text{specified number of blocks}$<br>Correct:<br>$96 \div \text{CPU operating frequency (MHz)} \times \text{specified number of blocks}$                           |
|      |           |             |  |

# General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

## 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

## 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

## 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

## 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

## 5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

## 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

## 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

## 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/).