

RX65N-2MB Group

RYZ014A PMOD LTE Connectivity with
RX65N MCU
Quick Start Guide

Renesas RX Family
RX600 Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:

www.renesas.com/contact/.

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Renesas RX65N-2MB Disclaimer

By using this RX65N-2MB, the User accepts the following terms, which are in addition to, and control in the event of disagreement, with Renesas' General Terms and Conditions available at <https://www.renesas.com/legal-notice>.

The RX65N-2MB is not guaranteed to be error free, and the entire risk as to the results and performance of the RX65N-2MB is assumed by the User. The RX65N-2MB is provided by Renesas on an "as is" basis without warranty of any kind whether express or implied, including but not limited to the implied warranties of good workmanship, fitness for a particular purpose, title, merchantability, and non-infringement of intellectual property rights. Renesas expressly disclaims any implied warranty.

Renesas does not consider the RX65N-2MB to be a finished product and therefore the RX65N-2MB may not comply with some requirements applicable to finished products, including, but not limited to recycling, restricted substances and electromagnetic compatibility regulations. Refer to Certifications section, for information about certifications and compliance information for the RX65N-2MB. It is the kit User's responsibility to make sure the kit meets any local requirements applicable to their region.

Renesas or its affiliates shall in no event be liable for any loss of profit, loss of data, loss of contract, loss of business, damage to reputation or goodwill, any economic loss, any reprogramming or recall costs (whether the foregoing losses are direct or indirect) nor shall Renesas or its affiliates be liable for any other direct or indirect special, incidental or consequential damages arising out of or in relation to the use of this RX65N-2MB, even if Renesas or its affiliates have been advised of the possibility of such damages.

Renesas has used reasonable care in preparing the information included in this document, but Renesas does not warrant that such information is error free nor does Renesas guarantee an exact match for every application or parameter to part numbers designated by other vendors listed herein. The information provided in this document is intended solely to enable the use of Renesas products. No express or implied license to any intellectual property right is granted by this document or in connection with the sale of Renesas products. Renesas reserves the right to make changes to specifications and product descriptions at any time without notice. Renesas assumes no liability for any damages incurred by you resulting from errors in or omissions from the information included herein. Renesas cannot verify, and assumes no liability for, the accuracy of information available on another company's website.

Precautions

This Evaluation Kit is only intended for use in a laboratory environment under ambient temperature and humidity conditions. A safe separation distance should be used between this and any sensitive equipment. Its use outside the laboratory, classroom, study area, or similar such area invalidates conformity with the protection requirements of the Electromagnetic Compatibility Directive and could lead to prosecution.

The product generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off or on, you are encouraged to try to correct the interference by one or more of the following measures:

- Ensure attached cables do not lie across the equipment.
- Reorient the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Power down the equipment when not in use.
- Consult the dealer or an experienced radio/TV technician for help.

Note: It is recommended that wherever possible shielded interface cables are used.

The product is potentially susceptible to certain EMC phenomena. To mitigate against them it is recommended that the following measures be undertaken:

- The user is advised that mobile phones should not be used within 10 m of the product when in use.
- The user is advised to take ESD precautions when handling the equipment.

The Evaluation Kit does not represent an ideal reference design for an end product and does not fulfill the regulatory standards for an end product.

Renesas RX Family

RYZ014A PMOD with RSK-RX65N-2MB
Contents

1. Introduction.....	6
1.1 Assumptions and Advisory Notes.....	6
2. Kit Contents.....	6
3. RSK-RX65N-2MB Kit Setup.....	6
4. Overview of the RYZ014A PMOD Example Project	7
5. Running the RYZ014A PMOD Example Project.....	7
5.1 Flashing the Example Program on the RSK-RX65N-2MB Board	8
5.2 Connecting and Powering Up the RSK-RX65N-2MB Board	10
5.3 Running the RYZ014A PMOD Example Project	11
6. Activating the SIM Card	14
7. Troubleshooting.....	15
7.1 Hardware Setup.....	16
7.2 SIM Card Activation Problem	16
7.3 Illegible/No Terminal Output (Tera Term)	16
7.4 Unable to Read RYZ014A Board Information	17
7.5 Contact Renesas Support	17
8. Next Steps.....	17
9. Website and Support	20
Revision History.....	21

Figures

Figure 1. RSK-RX65N-2MB Setup with RYZ014A PMOD Board Connected.....	7
Figure 2. Creating a New Project on Renesas Flash Programmer	8
Figure 3. Enabling Auto Authentication	8
Figure 4. Main Window of Renesas Flash Programmer After Creating a New Project.....	9
Figure 5. Connections to the RX65N-2MB Board After Flashing	10
Figure 6. USB Serial Device in Windows Device Manager	11
Figure 7. Selecting the Serial Port on Tera Term	11
Figure 8. Selecting 115200 on the Speed Pulldown	12
Figure 9. Welcome and Main Menu.....	12

Figure 10. Board Information	13
Figure 11. RYZ014A PMOD Information	13
Figure 12. Validation Steps of SIM Activation	14
Figure 13. Validating SIM Activation – SIM Card Active	14
Figure 14. Activating the SIM Card.....	15
Figure 15. Opening the Configurator	18
Figure 16. Opening the Perspective	18
Figure 17. Modifying the Device Selection	19
Figure 18. Generate Code from Smart Configurator	19
Figure 19. Building the Project	19

1. Introduction

This Quick Start Guide (QSG) provides:

- An overview of the RYZ014A PMOD example project for the RSK-RX65N-2MB board.
- Instructions for flashing the RYZ014A PMOD example project code using Renesas Flash Programmer.
- Instructions for running the RYZ014A PMOD example project on the RSK-RX65N-2MB board.

1.1 Assumptions and Advisory Notes

1. Tool experience: It is assumed that the user has prior experience in using terminal emulation programs such as Tera Term.
2. Subject knowledge: It is assumed that the user has basic knowledge about microcontrollers, embedded systems, LTE communication and AT commands.
3. The screen shots provided throughout this document are for reference. The actual screen content may differ depending on the version of software and development tools used.

2. Kit Contents

The following components are required:

1. RYZ014A PMOD module with antenna (RTKYZ014A0B00000BE)
2. RSK-RX65N-2MB board (RX65N-2MB-Starter-Kit-Plus)
3. E2 Lite Debugger (RX5N-2MB-Starter-Kit-Plus)
4. AC Power Adapter 5VDC with center positive (RX65N-2MB-Starter-Kit-Plus)
5. 2x USB device cables (type-A male to mini-B male)
6. 1x USB cable (type-A male to micro-B)
7. Truphone SIM card (RTKYZ014A0B00000BE)

3. RSK-RX65N-2MB Kit Setup

First, disconnect the 5VDC power to the board. The RYZ014A PMOD board should be connected to PMOD1 with the external antenna attached (Figure 1). The included SIM card must be inserted in the card slot on the underside of the RYZ014A PMOD board. Connect the micro USB cable to RYZ014A (connector CN4) for external powering of PMOD and the other end of cable to a PC USB port. You may now reconnect the 5VDC power cable.

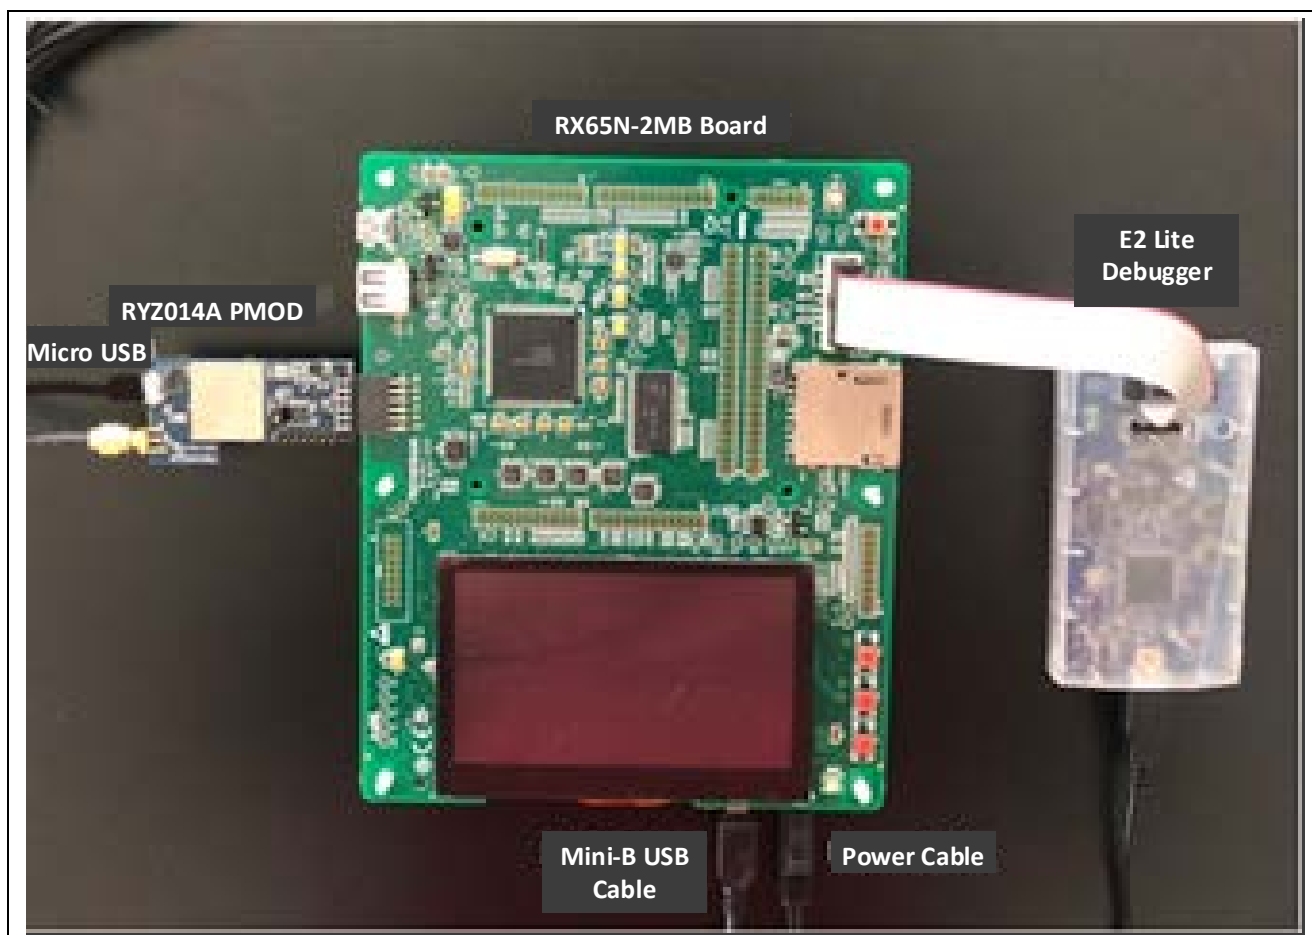


Figure 1. RSK-RX65N-2MB Setup with RYZ014A PMOD Board Connected

4. Overview of the RYZ014A PMOD Example Project

The RYZ014A PMOD example project allows the user to activate, enable and test the RYZ014A PMOD board and SIM card connectivity through a terminal menu.

When the RSK-RX65N-2MB board is running the RYZ014A PMOD example project and is connected to a host PC via the serial port, the kit and RYZ014A PMOD information can be viewed, and the included SIM card activation can be validated.

5. Running the RYZ014A PMOD Example Project

This section lists the requirements and instructions to power up the RSK-RX65N-2MB board, flash the RSK-RX65N-2MB board and run the RYZ014A PMOD example project.

Hardware Requirements

- RSK-RX65N-2MB board
- 2x Mini-B USB device cable
- 1x Micro-B USB device cables
- A PC with at least two USB ports
- AC Power Adapter 5VDC with center positive
- RYZ014A PMOD board with external antenna

Software Requirements

- Windows® 10 operating system
- Tera Term (or similar) terminal console application V4.106 or later
- Renesas Flash Programmer V3.10.00 or later
- RYZ014A PMOD example project Hex File (located in `r20qs0049euxxxx-ryz014a-rsk-rx65n-2mb-truphone-sim.zip > ryz014a_quickstart_rx65n_2mb/ryz014a_quickstart_rx65n_2mb.hex`).

5.1 Flashing the Example Program on the RSK-RX65N-2MB Board

1. Connect the Mini-B connector of the USB device cable to the USB mini-B port (G1USB0) of the RSK-RX65N-2MB board. Next, connect the USB-A end of the device cable to the host PC.
2. Connect the E2 Lite Ribbon cable between the E2 Lite Debugger and the RSK-RX65N-2MB E1/E2 Lite connector. Connect the Mini-B end of the second USB device cable to the E2 Lite Debugger and the Type-A end to the host PC.
3. Connect the power cable from the AC adapter to the power jack on the RSK-RX65N-2MB board (PWR).
4. Open Renesas Flash Programmer and create a new project by using the **File** menu and selecting **New Project**.
5. In the Create a New Project window, select the **RX65x** from the Microcontroller drop-down menu. Next, enter a desired project name and select **E2 emulator Lite** for the Communication Tool and Interface as **2 wire UART**. Click **Connect**.

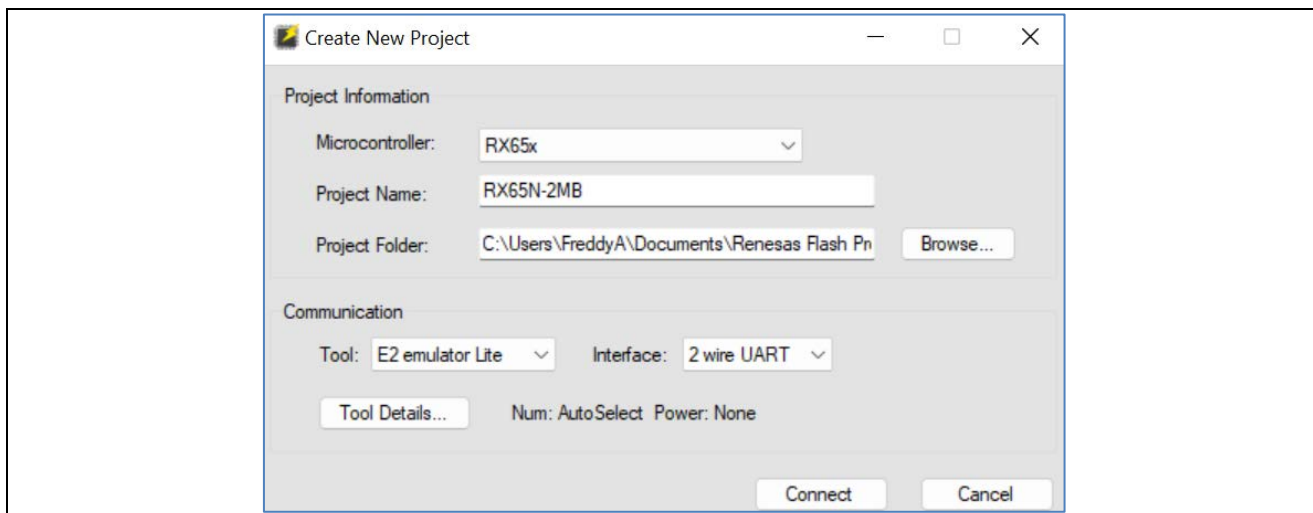


Figure 2. Creating a New Project on Renesas Flash Programmer

6. An authentication window should appear. Then, enable **Auto Authentication** and click **OK**.

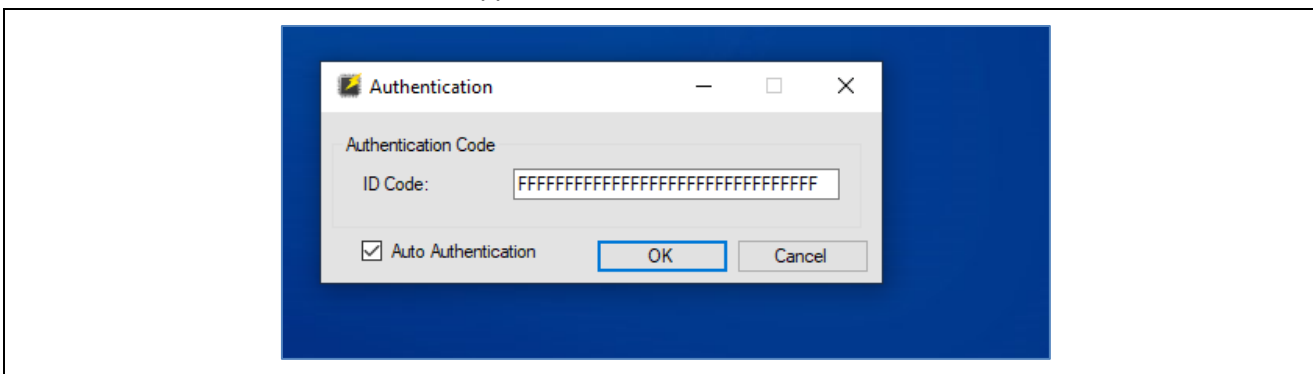


Figure 3. Enabling Auto Authentication

7. Verify the message **Operation Completed** is printed in the main window. Under Program File, click **Browse** to choose to the program file that will be flashed onto the board (Figure 43). Using the file explorer window, navigate to the example project's **Hex File** (located in `r20qs0049euxxx-ryz014a-rsk-rx65n-2mb-truphone-sim.zip > ryz014a_quickstart_rx65n_2mb/ryz014a_quickstart_rx65n_2mb.hex`) and click **Open**.

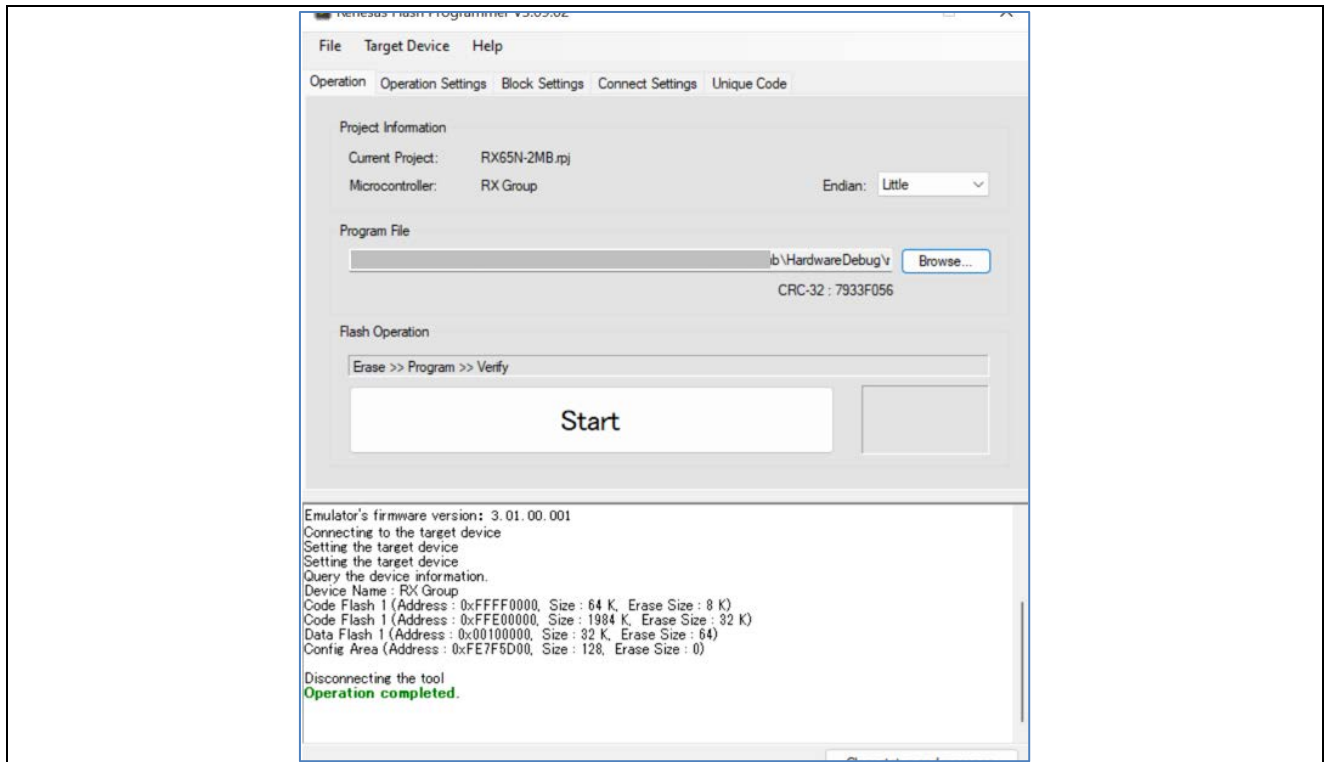


Figure 4. Main Window of Renesas Flash Programmer After Creating a New Project

8. Click **Start** to begin flashing the example project code onto the board. Once completed, the message **Operation completed** should be printed and the status **OK** should be displayed next to the start button.
9. Disconnect the 5VDC power cable from the RSK-RX65N-2MB board.
10. Disconnect the USB Mini-B cable.
11. Disconnect the E2 Lite Emulator ribbon cable from the E2 Lite connector of the RSK-RX65N-2MB board.

5.2 Connecting and Powering Up the RSK-RX65N-2MB Board

1. Connect the RYZ014A PMOD board (with attached external antenna and SIM Card installed) to PMOD1 connector labeled on the board.
2. Connect the Micro-B USB cable to RYZ014A (connector CN4) for external powering of PMOD and the type-A USB end of cable to a PC USB port.
3. Connect the Mini-B connector end of the USB device cable to the USB Mini-B port (G1CUSB0) of the RSK-RX65N-2MB board and the type-A USB end of the cable to the USB port of the host PC.
4. Connect the power cable to the RSK-RX65N-2MB power jack (PWR). 5V_PWR and 3V3_PWR LEDs should be turned on.



Figure 5. Connections to the RX65N-2MB Board After Flashing

5.3 Running the RYZ014A PMOD Example Project

To run the RYZ014A PMOD example project, use the following instructions:

1. On the host PC, open Windows Device Manager. Expand **Ports (COM & LPT)**, locate **USB Serial Device (COMxx)** and note down the COM port number for reference in the next step.

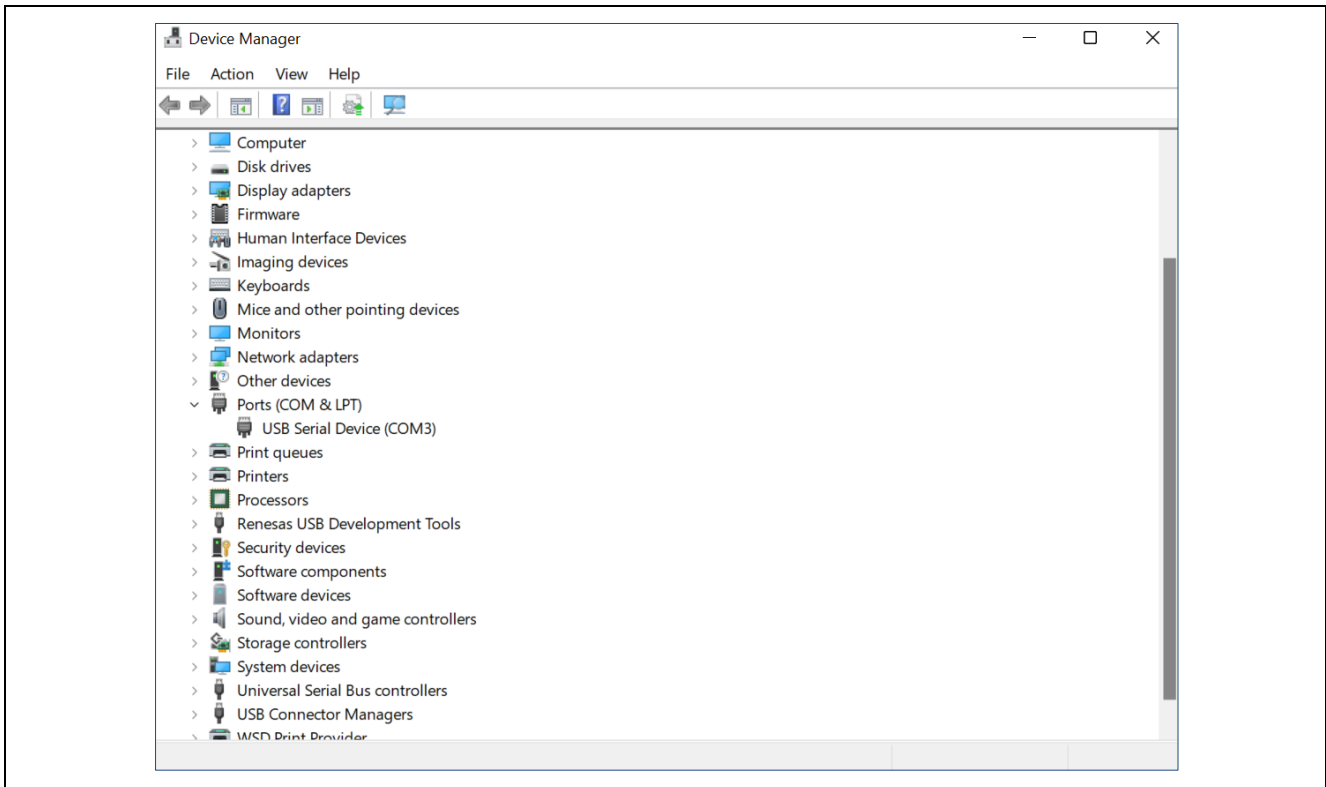


Figure 6. USB Serial Device in Windows Device Manager

2. Open Tera Term, select **Serial** and **COMxx: USB Serial Device (COMxx)** and click **OK**.

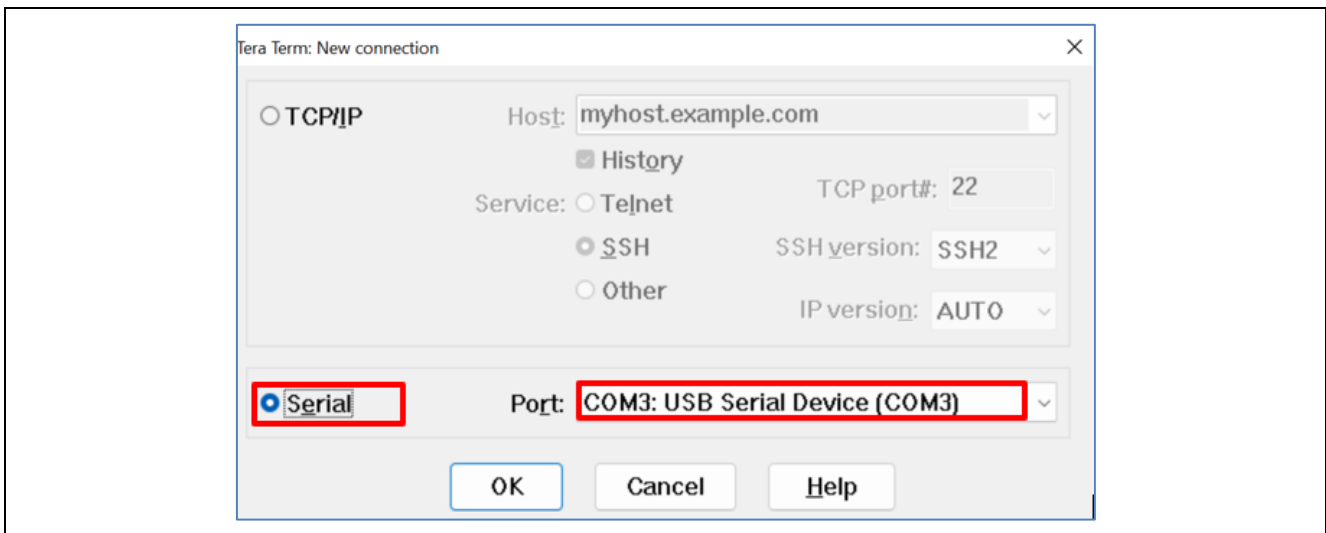


Figure 7. Selecting the Serial Port on Tera Term

- Using the **Setup** menu pull-down, select **Serial port...** and ensure that the speed is set to **115200**, as shown in Figure 8. Click **New setting**.

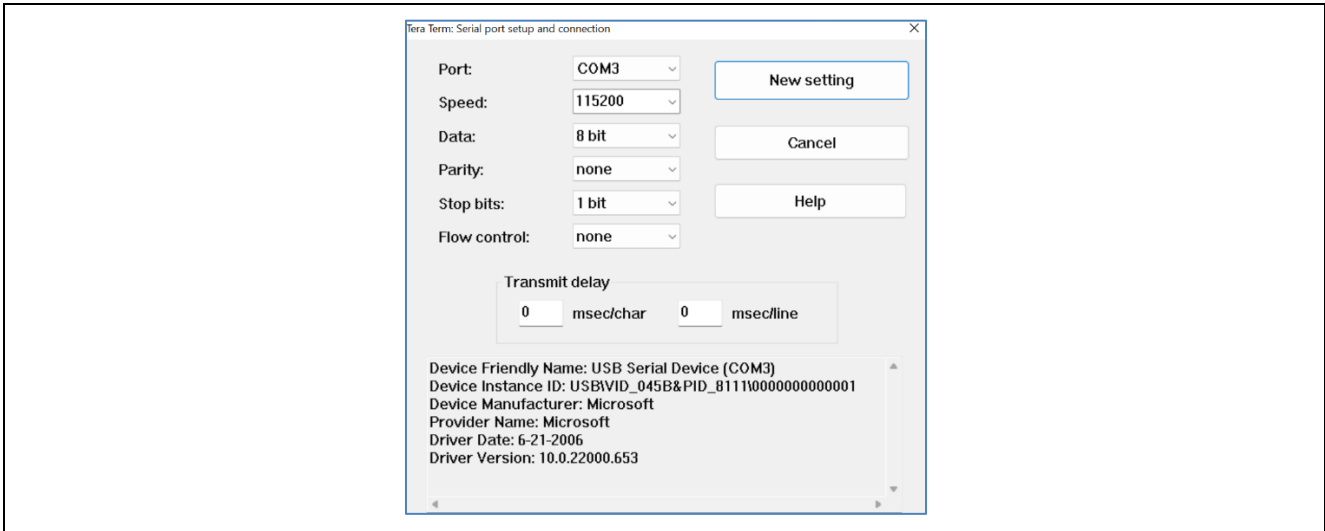


Figure 8. Selecting 115200 on the Speed Pulldown

- Complete the connection. The 'Welcome and Main Menu' screen will be displayed as shown in Figure 98.


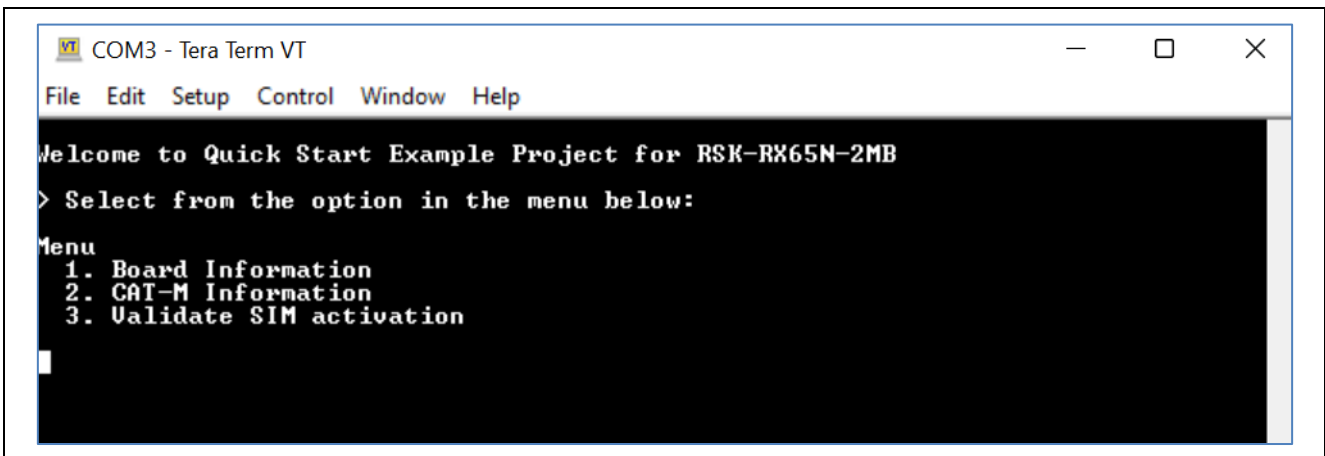


Figure 9. Welcome and Main Menu

5. Press **1** to display the **Board Information** including the kit name, and part number.

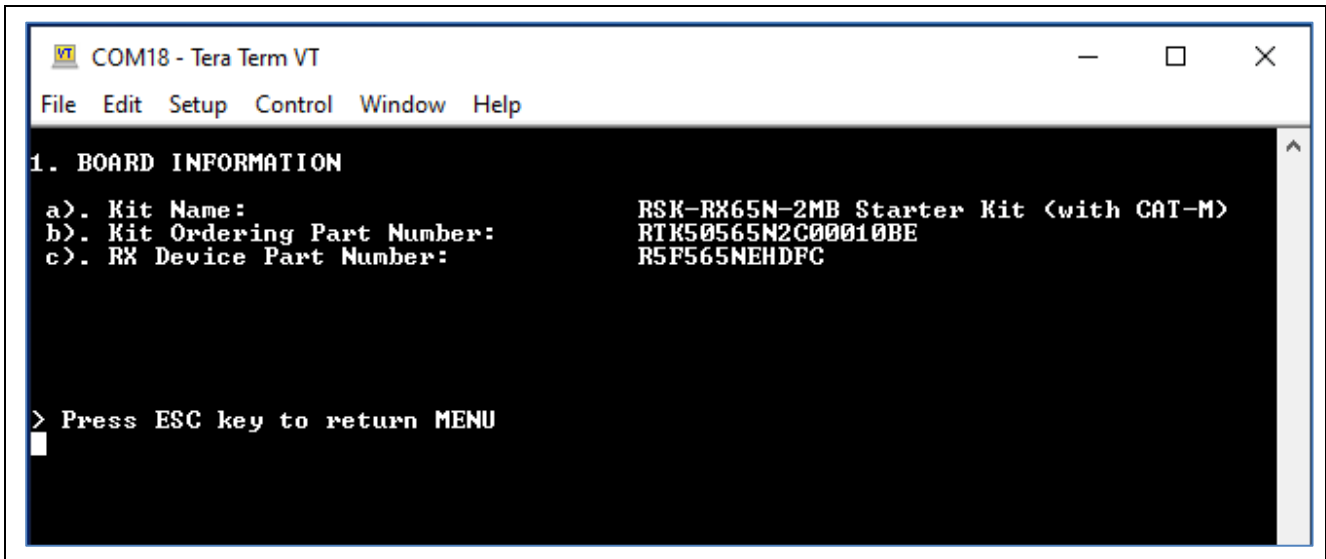


```

COM18 - Tera Term VT
File Edit Setup Control Window Help
1. BOARD INFORMATION
a). Kit Name:                RSK-RX65N-2MB Starter Kit <with CAT-M>
b). Kit Ordering Part Number: RTK50565N2C00010BE
c). RX Device Part Number:   R5F565NEHDFC

> Press ESC key to return MENU
  
```

Figure 10. Board Information

6. Press **ESC** to return to the 'Welcome and Main Menu' screen.
7. Press **2** to display **CAT-M Information**. This menu will communicate with the RYZ014A PMOD module to obtain the ICCID value needed for activating the SIM card. Upon success, the IMEI and ICCID values will be displayed on the terminal screen. The program will continue to attempt to communicate with the RYZ014A PMOD module until it has successfully connected or timed out. After obtaining the ICCID value, go to Truphone truphone.com/connectit to activate the SIM card (see section **Activating the SIM card**).

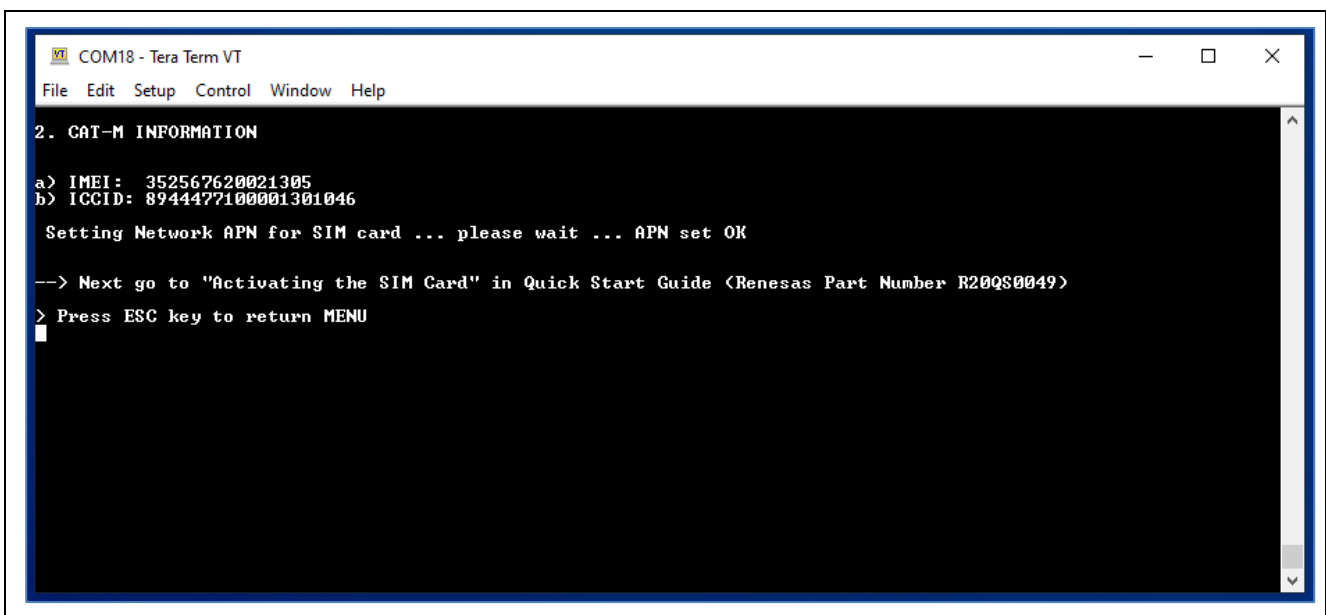

```

COM18 - Tera Term VT
File Edit Setup Control Window Help
2. CAT-M INFORMATION
a> IMEI: 352567620021305
b> ICCID: 8944477100001301046

Setting Network APN for SIM card ... please wait ... APN set OK

--> Next go to "Activating the SIM Card" in Quick Start Guide <Renesas Part Number R20QS0049>
> Press ESC key to return MENU
  
```

Figure 11. RYZ014A PMOD Information


8. Press **ESC** to return to the 'Welcome and Main Menu' screen.
- Press **3** to enter the **Validate SIM Activation** screen. The program will attempt to ping the Quad9 server (IP address 9.9.9.9) for a response to determine whether the SIM card has been activated. The steps of a successful SIM validation are shown in Figure 1211. Upon success, the text "*** SIM card active! ***" will be displayed on the terminal screen (see Figure 1312). If SIM card validation fails, follow the **Troubleshooting** Section.



```
COM18 - Tera Term VT
File Edit Setup Control Window Help
3. Validate SIM activation

Loading ...
Connecting to Network AP...
Getting Network Quality...
Getting Network CERE...
CEREG 1: Registered, home network
Sending Ping...
```

Figure 12. Validation Steps of SIM Activation

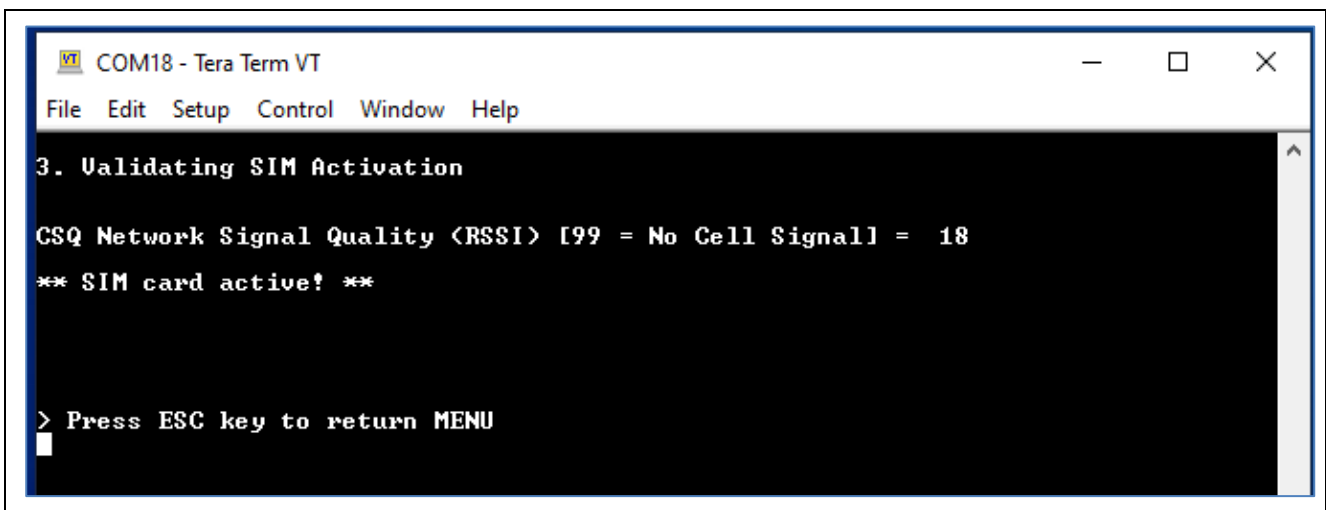

```
COM18 - Tera Term VT
File Edit Setup Control Window Help
3. Validating SIM Activation

CSQ Network Signal Quality <RSSI> [99 = No Cell Signal] = 18
*** SIM card active! ***

> Press ESC key to return MENU
```

Figure 13. Validating SIM Activation – SIM Card Active

9. Press **ESC** to return to the 'Welcome and Main Menu' screen.

6. Activating the SIM Card

To activate the included SIM card, please visit the Truphone SIM Activation platform at truphone.com/connectit and use the following steps:

1. On the Business page, click **Start activation** button under **IoT SIM Activation**.

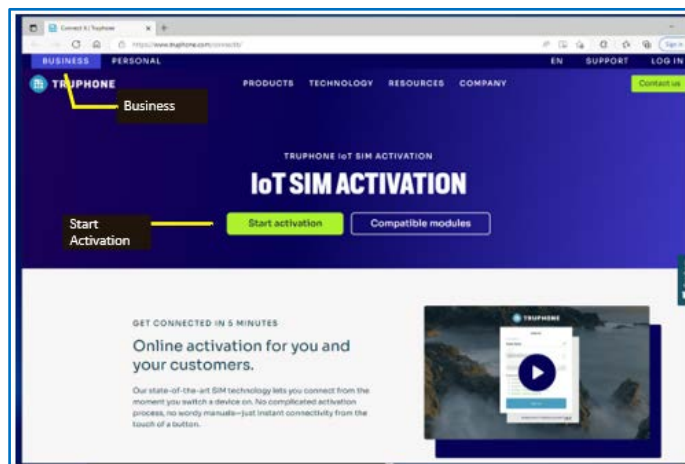


Figure 14. Activating the SIM Card

2. Create a new Truphone Account by selecting **Sign up** (next to **Don't have an account yet?**) and fill-in your full name, Email, and a password. Then Click **Sign up** to create a new account.
3. Select **Personal** as the account type.
4. Select **Get Started**.
5. Verify your email by entering the activation code sent to your email account.
6. Complete the **Profile information** form – then select **Create account**.
7. Select **Activate SIMS** to Activate your individual SIM by **ICCID** and **PUK** found on the SIM Card packaging.
8. Enter the **ICCID** value obtained from the **Running the RYZ014A PMOD example project** section. See the **ICCID** value in Figure 1110 - [RYZ014A PMOD Information](#). Fill other fields as needed.
9. You will receive email confirmation when the SIM Card activation is complete.
10. Ensure the SIM card is inserted in the RYZ014A PMOD. Follow **Running the RYZ014A PMOD example project** section step 8 by using **Menu 3 Validate SIM activation** to verify that the SIM card is activated. The SIM card should be activated on the Truphone SIM Activation platform after 15 minutes and can be validated on the Tera Term terminal as shown in Figure 1211. The time for the SIM Card to be activated by Truphone can vary depending on their system demand. In most cases, if PING Response fails, wait a few more minutes and repeat **Menu 3 Validate SIM activation**.

Disclaimer

The activation steps above are provided by SIM Provider Truphone. They are the most current at the time of publishing this application note. If you need help activating your SIM Card, contact Truphone support iot.truphone.com or [Contact Support | Truphone](#).

If you have a SIM card from any other provider then contact the technical support for that provider.

For any other issue that cannot be resolved please contact Renesas Support at [Technical Support](#).

Note: The SIM card Provider for the QSG example project is Truphone. If you use any other SIM Card provider you must change the Access Point Name required for the SIM Card Provider in your global region. Failure to do so could result in the RYZ014A not connecting to the Cellular network.

To set the Access Point Name (APN) for SIM Card provider other than Truphone

The APN is set in the example project in `/src/r_cellular/r_cellular_config.h`

See `#define CELLULAR_CFG_AP_NAME iot.truphone.com /* APN : Truphone SIM Card */`

7. Troubleshooting

This section includes a common set of issues and how to resolve them. The two types of issues that you may encounter are due to the Hardware setup or SIM Activation. The steps that follow will help to resolve

those types of issues. For any other issue that cannot be resolved please contact Renesas Support at [Technical Support](#).

7.1 Hardware Setup

The first step for any general issue is always to verify that the proper connections are made. For example, Executing Menu 2 **CAT-M Information** results in **** ERROR: Unable to initialize CATM module ****. Refer to Figure 54.

- The power cable is plugged into the power jack of the RSK-RX65N-2MB board.
- The RYZ014A external antenna cable plugged into RYZ014A PMOD.
- The RYZ014A PMOD is connected to PMOD1 port of the RX65N-2MB board.
- The mini-B USB device cable is connected to the serial port (G1CUSB0) of the RSK-RX65N-2MB board. The Type-A end of the device cable is connected to the host PC.
- The micro-USB cable is plugged into the RYZ014A PMOD connector (CN4).
- E2 Lite Debugger is disconnected when trying to run the code.
- Check to see that the SIM card is fully inserted in SIM slot (on the underside of PMOD RYZ014A module). Check for proper SIM card orientation in the slot.

7.2 SIM Card Activation Problem

- If the SIM activation fails, verify that the ICCID number and PUK numbers are correctly entered when activating the SIM card on Truphone IoT SIM activation platform truphone.com/connectit
- If **Menu 3 Validate SIM activation** PING response returns a Ping Failed condition, it can take up to 15 minutes or longer for the card to be activated after performing **Activating the SIM Card** to obtain LTE Network access. In this case, wait at least 15 minutes (or longer) and repeat **Menu 3 Validate SIM activation**.
- SIM cards cannot be activated more than once. To verify whether the SIM card has already been activated, please monitor and manage your SIMs on the Truphone IoT Connectivity Management Platform or contact Truphone support through iot.truphone.com by logging into your account.
- If **Menu 3 Validate SIM activation** PING response continues to return Ping Failed condition, first check the external antenna is connected securely to the RYZ014A PMOD and try again. The CSQ Network Signal Quality (RSSI) could be too low to connect. If the RSSI is 99 then check external antenna is connected. It may be possible that no Cell Network Signal could be detected in your area. An RSSI reading with RSSI = 15 or less indicates marginal or poor reception.

CSQ Network Signal Quality (RSSI) [99 = No Cell Signal] = 15, Marginal Signal Quality

It may be necessary to move the RSK-RX65N-2MB with PMOD to a different location to improve the Network Signal Quality (RSSI) to get an RSSI value in the range of 16 to 98.

- If **Menu 3 Validate SIM activation** continues to fail, verify that the APN is set for the Global Region where the RYZ014A PMOD is trying to connect. The APN setting and LTE Band List depends on your Global Region and the SIM card provider.

The APN is set in the example project in `/src/r_cellular/r_cellular_config.h`

```
See #define CELLULAR_CFG_AP_NAME iot.truphone.com /* Access Point Name : Truphone  
SIM Card */
```

- For all other SIM card issues that cannot be resolved with these troubleshooting steps, contact Truphone support through iot.truphone.com by logging into your account.

7.3 Illegible/No Terminal Output (Tera Term)

This could be caused by the setup of the terminal connection and/or having the E2 Lite Debugger connected after flashing the example code. To fix this, use the following instructions:

- Open Tera Term and on the file menu, go to **Setup > Serial port...** Please make sure the following settings in the setup of the serial connection are set up as such:
 - Speed: 115200
 - Data: 8 bit
 - Parity: None
 - Stop bits: 1 bit
 - Flow Control: None
- Make sure the E2 Lite Debugger ribbon cable is disconnected from the board if the hex file has been flashed onto the board already. Otherwise, follow the same steps in section 5.1, Flashing the Example Program on the RSK-RX65N-2MB Board.

7.4 Unable to Read RYZ014A Board Information

If there is a failure to read the RYZ014A PMOD board and SIM information (IMEI and ICCID), check to confirm the following:

- SIM card is fully inserted in the SIM card slot on the underside of the RYZ014A PMOD board.
- RYZ014A PMOD board is connected to PMOD1 port of the RX65N-2MB board.
- Confirm a micro-USB cable is plugged into the RYZ014A PMOD connector (CN4)

7.5 Contact Renesas Support

For Starter Kit and RYZ014A PMOD related issues that cannot be resolved with these Troubleshooting steps, please contact Renesas Support at renesas.com/support for more help.

8. Next Steps

This section provides overview instructions on how to modify the Quick Start example project. The project can be modified by editing the source code and reconfiguring the device selection, properties of the MCU peripherals, pins, clocks, interrupts, and so forth.

Note: The specific modifications that can be performed to the Quick Start example project are not covered in this QSG.

- Once the Quick Start example project is imported, double-click the `rx65n_2mb_ryz014a.scfg` file to open the configurator. The configurator provides an easy-to-use interface to configure the properties of the MCU and peripherals.

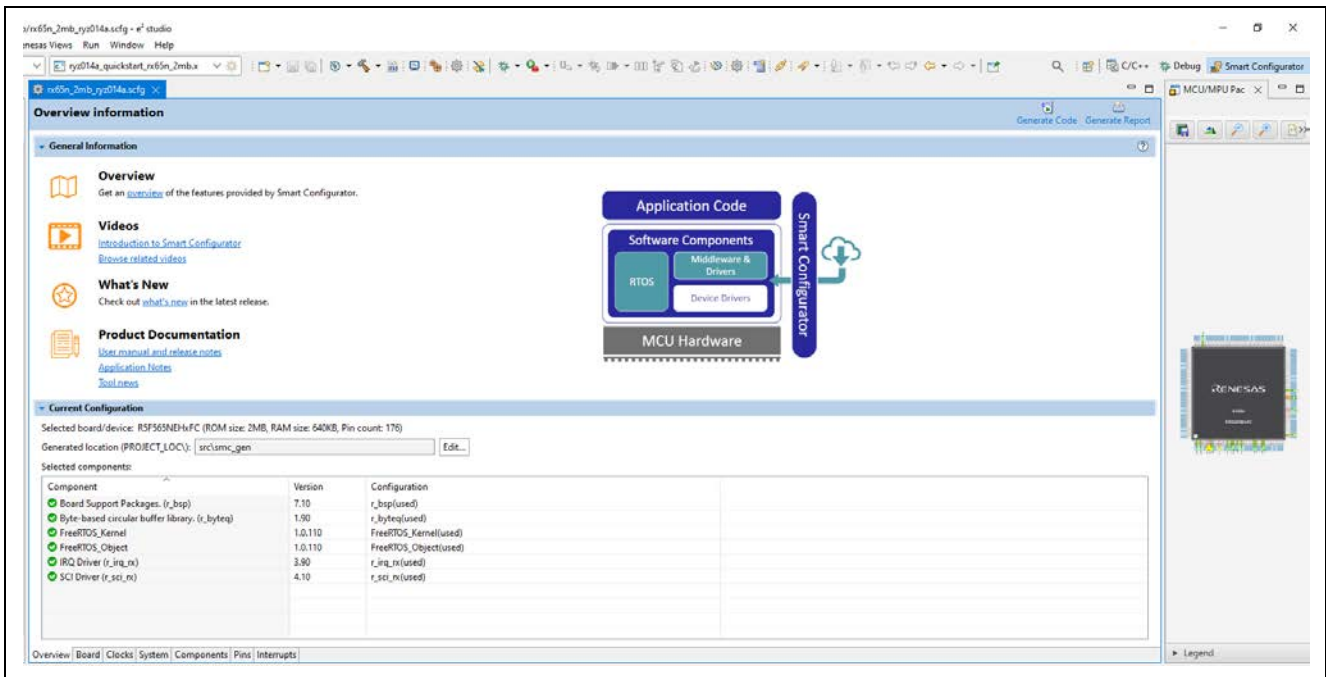


Figure 15. Opening the Configurator

- For example, in the **Board** tab of the configurator, the user can use to modify the Device Selection. Figure 17 illustrates modifying the **Board** selection.

Note: To access the Board properties, the **view** must be set to **Smart Configurator**. Using the Open Perspective button, if necessary.

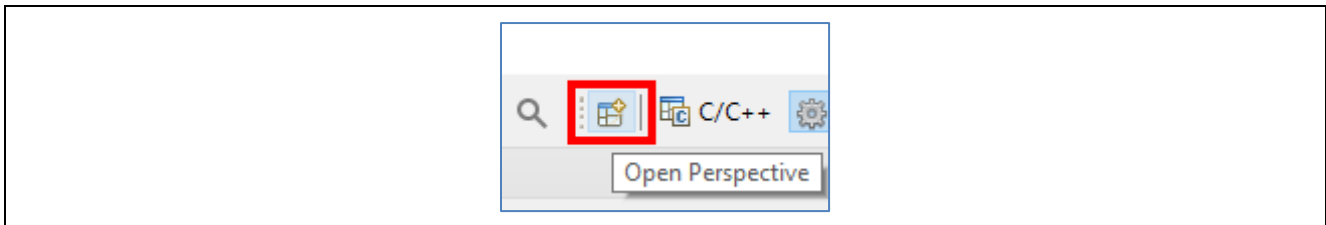


Figure 16. Opening the Perspective

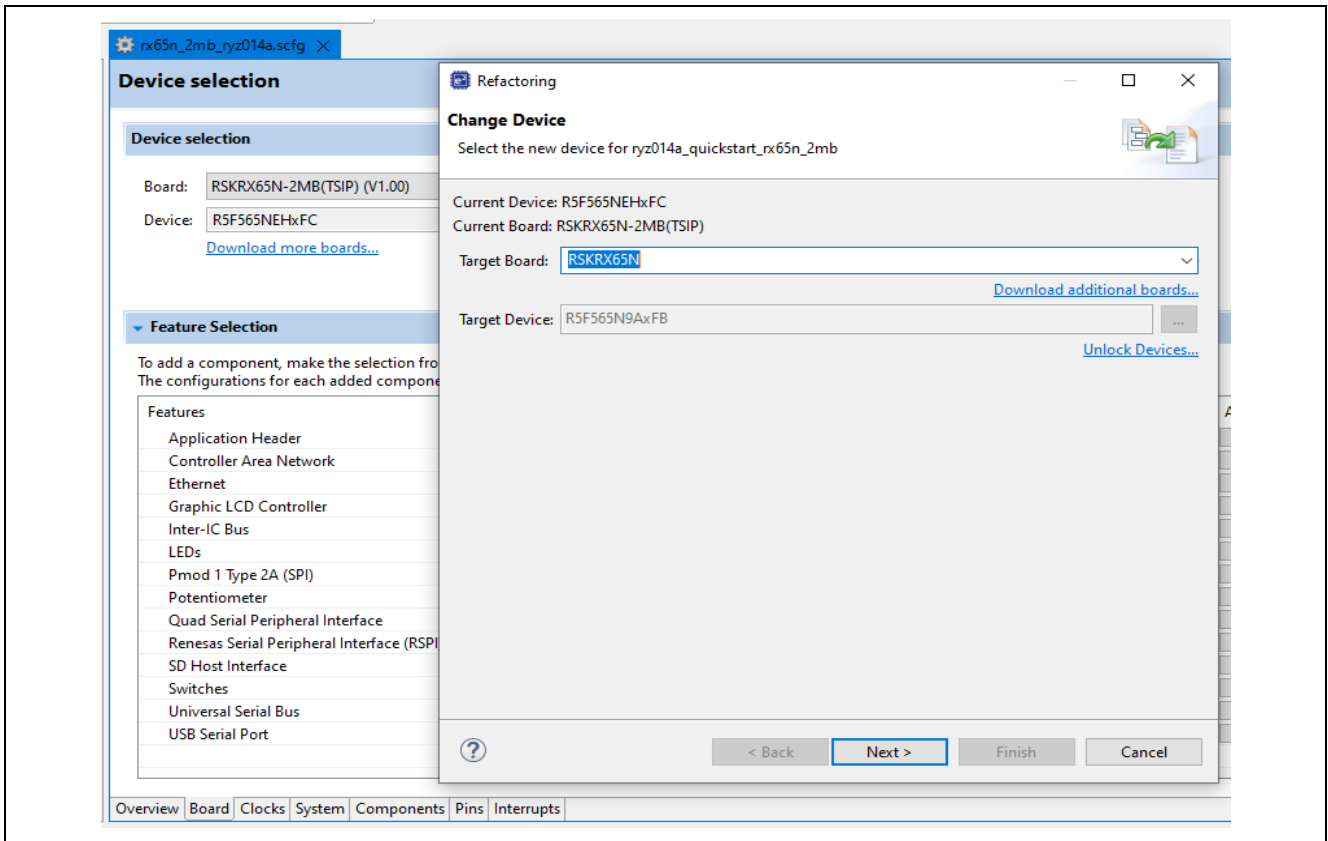


Figure 17. Modifying the Device Selection

3. After the desired modifications are made, click **Generate Code**.

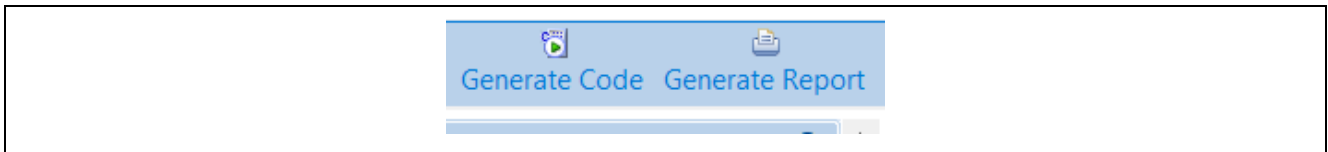


Figure 18. Generate Code from Smart Configurator

4. Modify the source files in the `/src` folder as needed and save the changes.
5. Build the project by clicking the build icon.

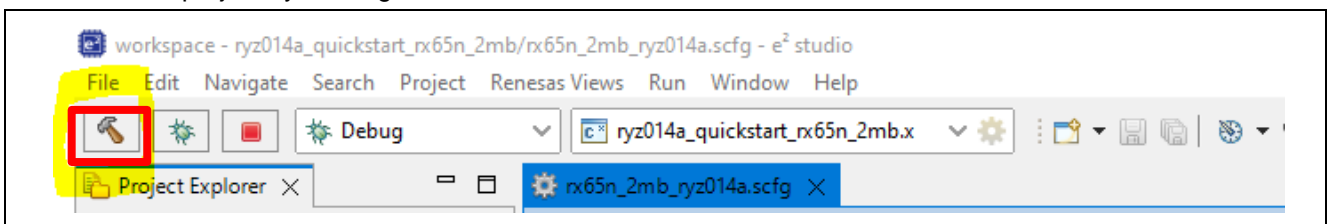


Figure 19. Building the Project

For additional information on porting example projects to other RX MCUs, see the Application Note **Guide for Porting the FIT Project to the Other RX Family** (R01AN4024EJ0100).

Additional information on the RYZ014A and RSK-RX65N-2MB Starter Kit can be found here:

- RYZ014A PMOD Module
renesas.com/RTKYZ014A0B00000BE
- RYZ014A
renesas.com/RYZ014A
- RSK-RX65N-2MB
[rx65n-2mb-starter-kit-plus-renesas-starter-kit-rx65n-2mb](https://renesas.com/rx65n-2mb-starter-kit-plus-renesas-starter-kit-rx65n-2mb)

9. Website and Support

Visit the following URLs to learn about the kit and the RX family of microcontrollers, download tools and documentation, and get support.

RSK-RX65N-2MB Resources	renesas.com/rx/rsk-rx65n-2mb
RX Product Information	renesas.com/rx
RX Product Support Forum	renesasrulz.com/mcu-mpu/rx
Renesas Support	renesas.com/support

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Apr.13.23	—	Initial release

RYZ014A PMOD with RSK-RX65N-2MB – Quick Start Guide

Publication Date: Apr.13.23

Published by: Renesas Electronics Corporation

RYZ014A PMOD with RSK-RX65N-2MB – Quick Start Guide