

**Contents**

1. Overview.....2

2. How to Set Up Clock Matrix for PWM\_PPS Framing – Transmitter .....3

3. How to Set Up Clock Matrix for PWM\_PPS Framing – Receiver .....8

4. Lab Setup and Results .....13

5. Input Output Alignment.....14

6. Revision History.....14

**List of Figures**

Figure 1. ClockMatrix PWM Feature Overview.....2

Figure 2. Timing Commander: System APLL Box .....3

Figure 3. Timing Commander: CLK3 and CLK4 Fields.....3

Figure 4. Timing Commander: Switch to the Bit Sets Tab .....4

Figure 5. Timing Commander: Reference Monitors Location .....4

Figure 6. Timing Commander: Channel in DPLL Mode for Channel 1 .....5

Figure 7. Timing Commander: Configure Outputs 2 and 3.....6

Figure 8. Timing Commander: Configure Encoder 1 .....7

Figure 9. Timing Commander: System APLL .....8

Figure 10. Timing Commander: CLK3 Field .....8

Figure 11. Timing Commander: Reference Monitors Update .....9

Figure 12. Timing Commander: Channel in DPLL Mode for Channel 1 .....10

Figure 13. Timing Commander: Configure the Outputs 2 and 3.....11

Figure 14. Timing Commander: Configure Decoder 3.....11

Figure 15. Lab Setup .....13


Figure 16. PWM Frame .....14

# 1. Overview

This document explains how to configure ClockMatrix for the transmission of Time of Day (ToD) frames using the Pulse Width Modulation (PWM) feature of the device. It discusses how to encode and decode a signal using the PWM feature. Two separate Clock Matrix boards are used in this configuration example: one to encode the ToD frame on a carrier signal, and the other to decode the ToD frame from the carrier signal. By going through this example, a user can use the PWM feature of the device to encode and decode any type of bit pattern (i.e., signature, user defined frame, or ToD frame) on a carrier clock or have working knowledge to do so.

The PWM encoder encodes PPS\_frames that are transmitted on the output clock. It has a PWM demodulator that oversamples the clock and determines the value of the bits that were encoded. The decoder then takes the bits as detected by the demodulator and combines to identify the PWM\_PPS frames. The frames are inserted into the PWM\_FIFO. As a result, the goal is to write on the encoder side and read it on the decoder side as shown in the following diagram.

**Figure 1. ClockMatrix PWM Feature Overview**

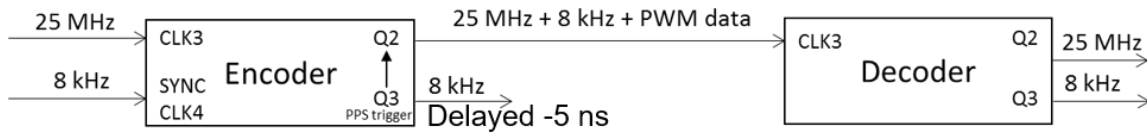

All the GUI bits in this document are needed for the PWM\_PPS to work. The write\_data for the decoder and encoder are mandatory and should be configured exactly as discussed, while the write\_data for the inputs, the reference monitors, DPLLs, and outputs are for illustration purposes only, but can be used to get started.


Timing Commander images are also shown in this document for use with the GUI, instead of register access. Some registers need to be accessed via Bit Sets of the GUI.

The words transmitter/encoder and receiver/decoder are used interchangeably in this document.

## 2. How to Set Up Clock Matrix for PWM\_PPS Framing – Transmitter

1. Configure the SYS\_APLL.

**Figure 2. Timing Commander: System APLL Box**

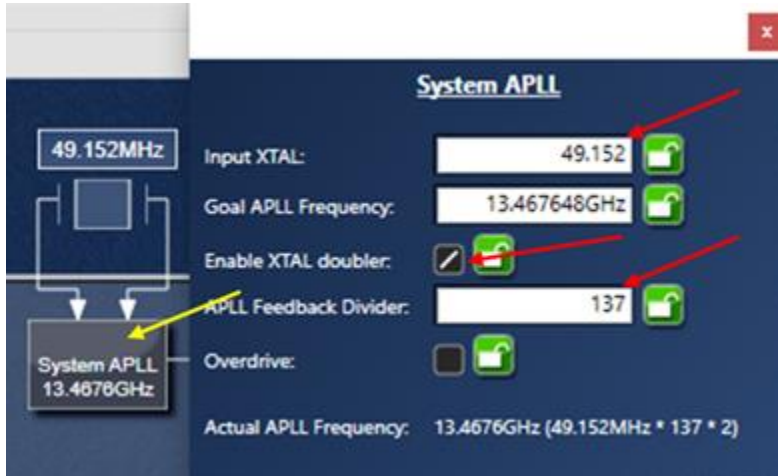


Click on the “System APLL” box and update the settings.

2. Configure the input for the input clock.


Connect the input clock to the configured input on the board. CLK3 is selected as the clock and CLK4 is selected as the corresponding sync pulse.

**Figure 3. Timing Commander: CLK3 and CLK4 Fields**

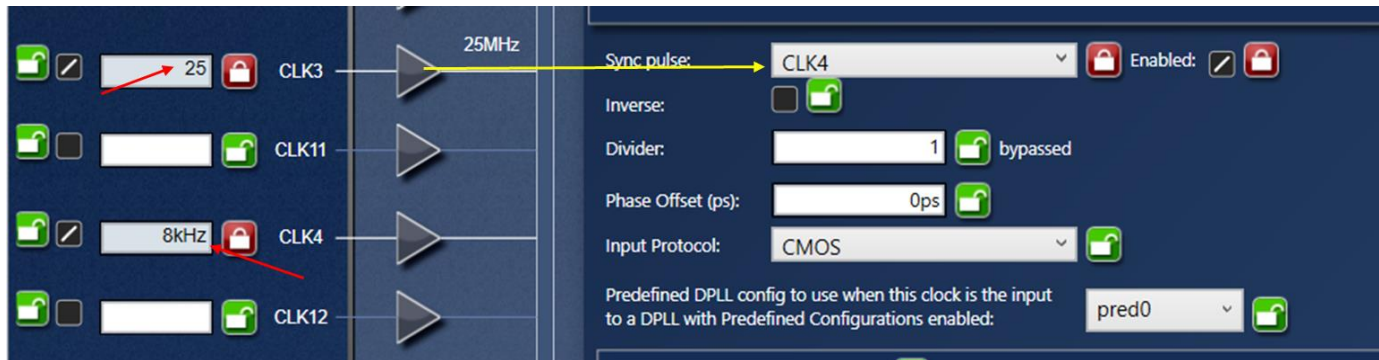

Enter 25 into CLK3 field and enter 8k into CLK4 field on the main menu. Click on the “Buffer” for CLK3 and select “CLK4” as the Sync Pulse. Also, click on the Enable bit.

**Figure 4. Timing Commander: Switch to the Bit Sets Tab**

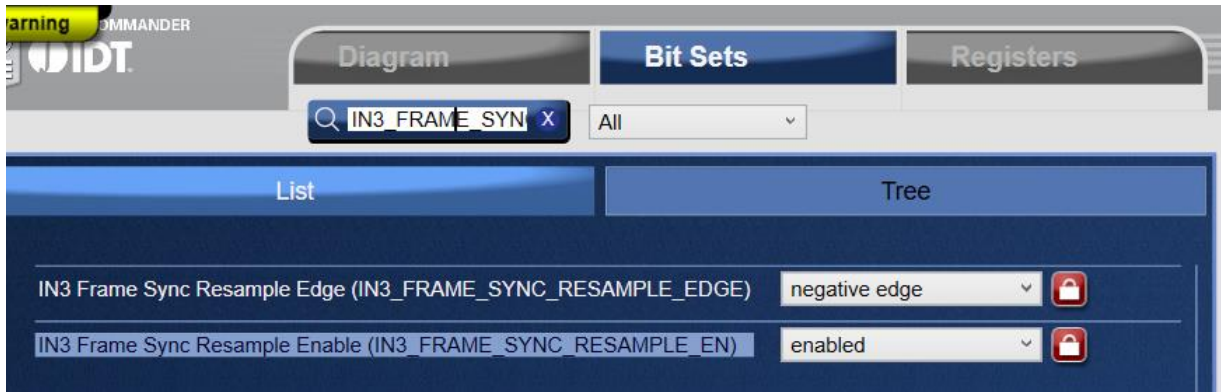

Switch to the Bit Sets Tab and search for “IN3\_FRAME\_SYNC\_RESAMPLE”, then enable the two bits.

3. Configure the reference monitors.

The reference monitor should have the same number as the input being used (e.g., for Input 3, REF\_MON\_3 should be configured). Input 3 is used in the example.

x = Reference Monitor number.

**Figure 5. Timing Commander: Reference Monitors Location**




Reference Monitors are in the CLK Config by clicking the “buffer”.

4. Configure the DPLL (e.g., DPLL 1).

Any DPLL can be configured. DPLL1 is used in the example.

x = DPLL number

**Figure 6. Timing Commander: Channel in DPLL Mode for Channel 1**

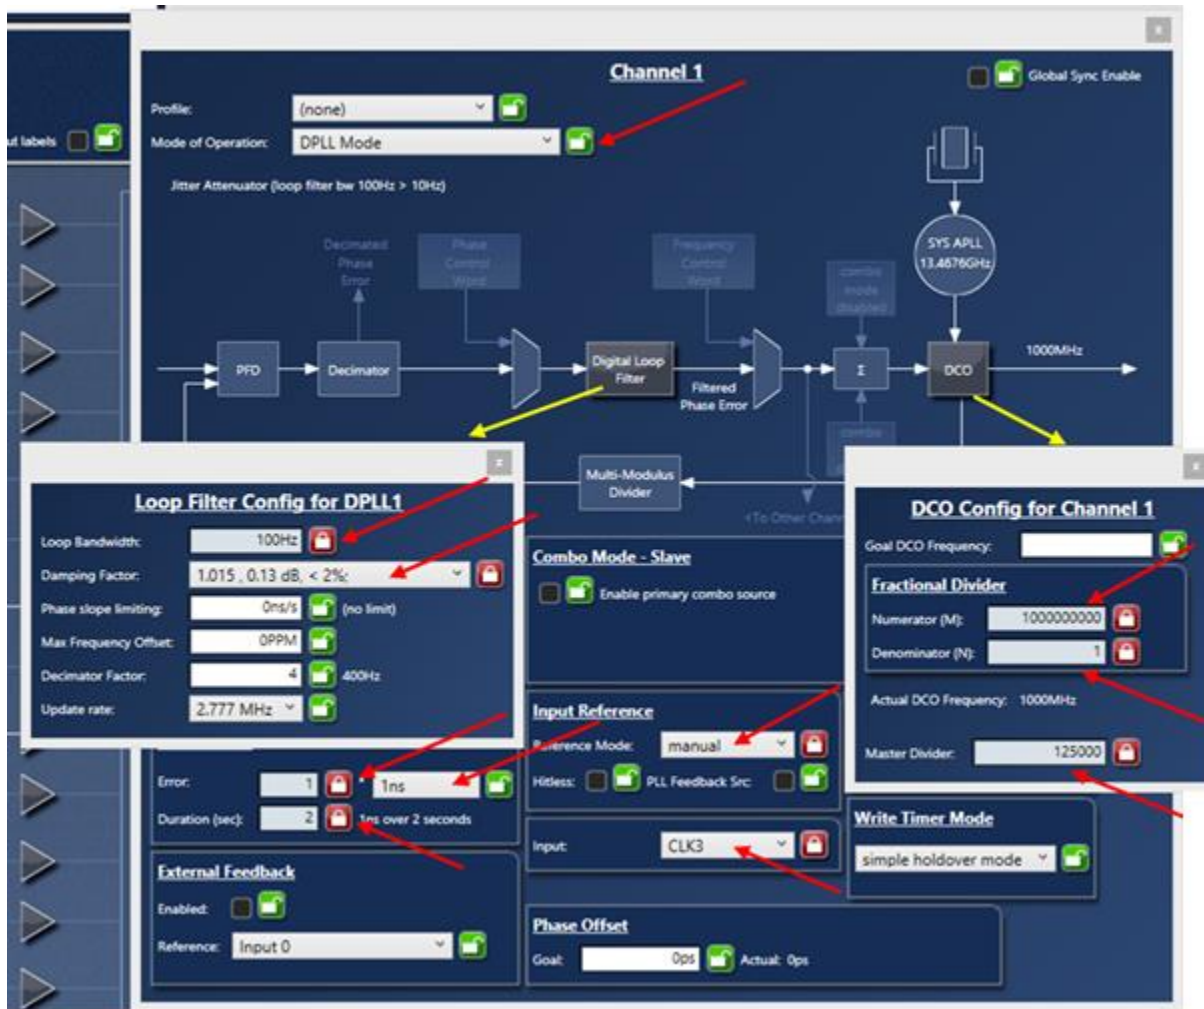


5. Configure the output to be used to send out the PPS\_frames.

The outputs of the DPLL used must be configured (e.g., if DPLL 1 is used, outputs 2 and 3 must be configured). These outputs need to be connected to the input of the decoder on the other board. Differential (P and N) should be used at the output when sending PPS\_frames. The PPS trigger signal must be delayed by -5ns to give the encoder enough setup time.

- a. Output 2 (Q2) to transmit frames. Connect the P of this output to the P of the input configured in the decoder, and the N of this output to the N of the input configured in the decoder.
- b. Output 3 (Q3) used as the PPS trigger

**Figure 7. Timing Commander: Configure Outputs 2 and 3**

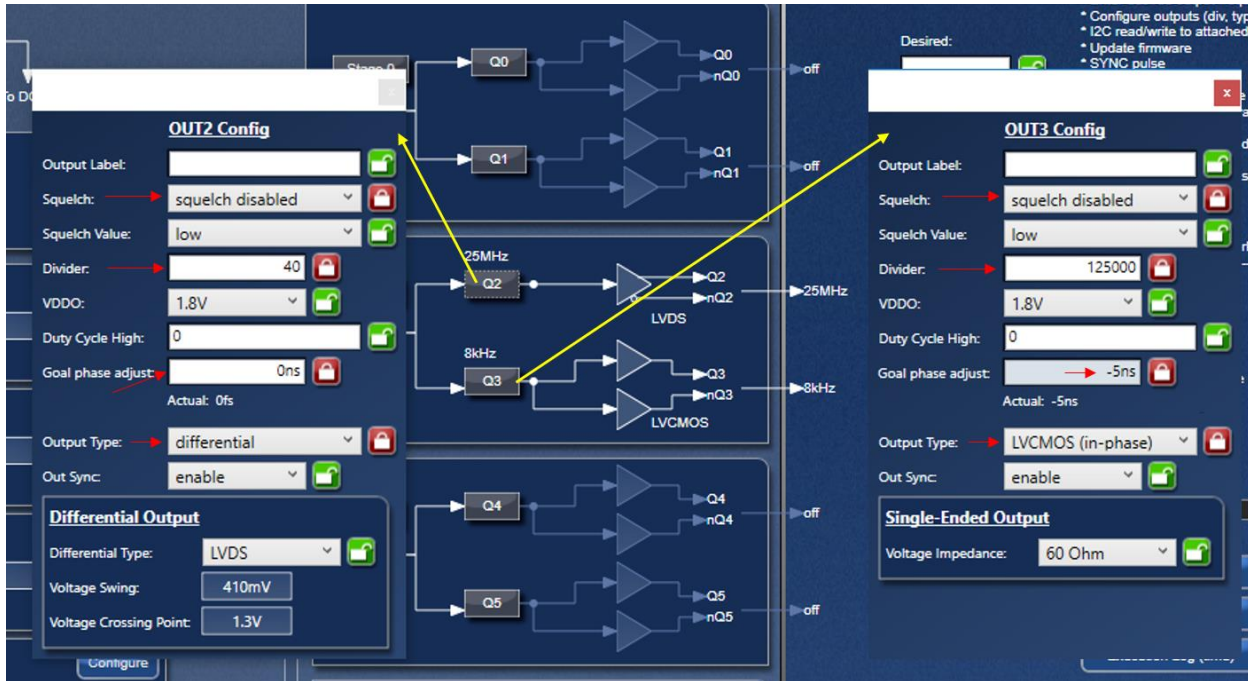

6. Configure the PWM encoder.

The encoder number must correspond to the DPLL number (e.g., encoder 1 is connected to DPLL1). Encoders[0:3] are dual-channel encoders. Encoders[4:7] are single-channel encoders. This example uses a dual-channel encoder.

The source of the PPS (i.e., what the framing data is timed off of) can be triggered either from the divided down output of the same DPLL as the carrier (i.e., synchronous source), or from the ToD accumulators (i.e., asynchronous source). The example in this document uses a synchronous source and does not use the ToD accumulators. The user enters the ToD data directly via a hardware register as described in the next section. In addition, Signature mode is not used because ToD data requires PWM\_PPS.

**Figure 8. Timing Commander: Configure Encoder 1**



Configure Encoder 1 with DPLL1 as the source. Q2 is the carrier and Q3 is the trigger (PPS source)

7. Write directly to the PWM\_TOD hardware register.

Write directly to this hardware register after the configuration and setup to transmit the ToD information.

x = Encoder number

The module address for the PWM\_TOD hardware registers is not in the Programming Guide, so will be written here. Encoder 1 is used in the example.

Module address of:

- PWM\_ENC\_0 = 0x9780
- PWM\_ENC\_1 = 0x9800
- PWM\_ENC\_2 = 0x9880
- PWM\_ENC\_3 = 0x9900
- PWM\_ENC\_4 = 0x9980
- PWM\_ENC\_5 = 0x9A00
- PWM\_ENC\_6 = 0x9A80
- PWM\_ENC\_7 = 0x9B00

Offset address of PWM\_TOD\_\_0 = 0x10. There are 88 bits (11 bytes) to write.

Write to the PWM_TOD hardware register	<pre>:reg_write(PWM_ENC_x + PWM_TOD__0, 88, 0xAABBCCDDEEFF1234567890);</pre>
--	--

There is no GUI control for the hardware registers.


Set up the transmitter and ensure it is working properly. This happens when the DPLL is in a locked state.

### 3. How to Set Up Clock Matrix for PWM\_PPS Framing – Receiver

The SYS\_APLL, Inputs, Reference Monitors, DPLL, and Outputs of the receiver are configured similarly to the transmitter in the previous section.

1. Configure the SYS\_APLL.

**Figure 9. Timing Commander: System APLL**

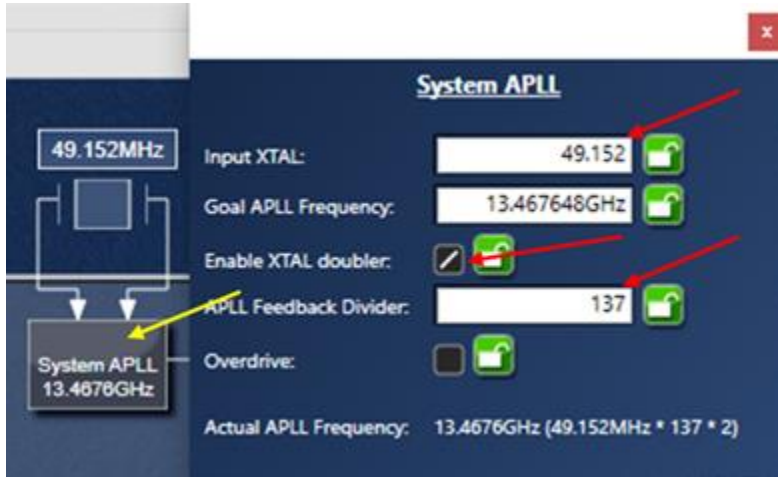


Click on the “System APLL” box and update the settings

2. Configure the input to be used to receive the PWM\_PPS frames.

Connect the output transmitting the PWM\_PPS frames from the transmitter of the first board to the configured input of the receiver on the second board. CLK3 is selected as the receiver input. Decoder 3 is while as the Sync Pulse Input. The decoder and clock index must match.

**Figure 10. Timing Commander: CLK3 Field**

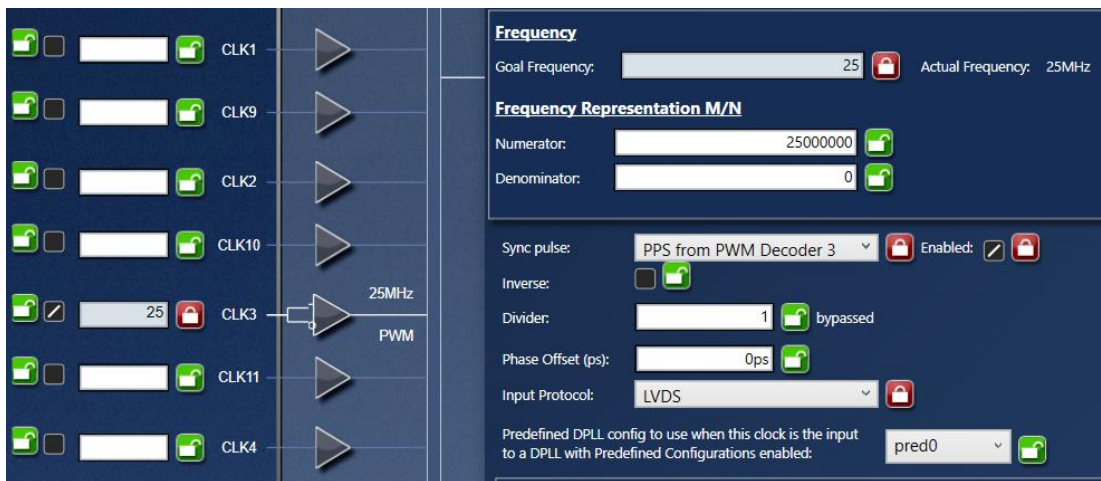

Enter 25 into CLK3 field on the main menu. Click on the “Buffer” for CLK3 and select “PPS from PWM Decoder 3” as the Sync Pulse and the Enable bit. Choose “LVDS” for Input Protocol.



3. Configure the reference monitors.

x = Reference Monitor number.

**Figure 11. Timing Commander: Reference Monitors Update**



The Reference Monitors Update are in the CLK Config by clicking the “buffer”.

4. Configure the DPLL (e.g., DPLL 1).

Any DPLL can be configured. DPLL1 is used in the example.

x = DPLL number

**Figure 12. Timing Commander: Channel in DPLL Mode for Channel 1**



Note: When the receiver DPLL is different than the transmitter DPLL, “Alignment Mode” is selected to be “frame pulse mode”. This selection will lock the embedded PPS source at the input of the receiver to the 8kHz output at the output of the receiver.


5. Configure the receiver output.

The outputs of the DPLL must be configured (e.g., DPLL 1 has outputs 2 and 3).

Output 2 shows the clock signal on which the ToD information was sent. Output 2 is not mandatory.

Output 3 is the frame pulse and is output when PWM information is received at the input of the receiver. Phase adjustments can be done to the 8kHz output frame pulse to align with the incoming frames at 8kHz at the input of the receiver on an oscilloscope. This is done to indicate when the PWM information is sent.

**Figure 13. Timing Commander: Configure the Outputs 2 and 3**

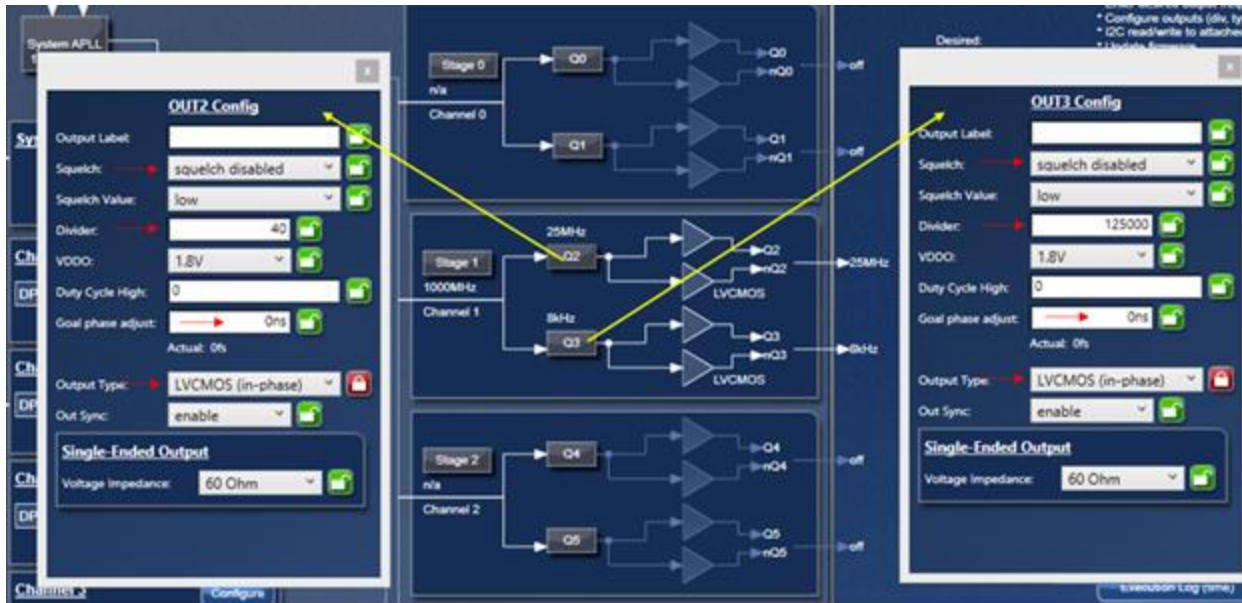

6. Configure the PWM decoder.

The decoder number must correspond to the input number (e.g., decoder 3 is connected to input 3). Decoder 3 is used to match the CLK3 input.

**Figure 14. Timing Commander: Configure Decoder 3**



Configure Decoder 3 to be used with CLK3 input. Switch to the Bit Sets tab and search for “PWM3\_TOD”, then enable the bit.

## 7. Read from the PWM\_FIFO hardware register.

Read from this hardware register after the configuration and setup to get the ToD information that was transmitted. This is where the transmitted PPS-frames are stored (i.e., in the PWM\_FIFO). The value in the PWM\_FIFO hardware registers should match the value in the PWM\_TOD hardware registers.

Clock Matrix supports a procedure to read the ToD information from the FIFO. The pseudocode is as follows:

```
while True:
    while reg_read(PWM_FIFO + PWM_FIFO_STS + EMPTY, 1) & 0x01 == 0:
        reg_write(PWM_FIFO + PWM_FIFO_CTRL_0 + ENABLE_POP, 3, 0x05)
        data = reg_read(PWM_FIFO + PWM_RDATA_0_0 + RDATA, 88)
        tod_data = data & ((2 ** 88) - 1)
        print_address_and_data(PWM_FIFO + PWM_RDATA_0_0 + RDATA, tod_data)
```

The module addresses for the PWM\_FIFO hardware registers are not in the Programming Guide; therefore, they are listed below for reference purposes.

Module address PWM\_FIFO: 0xA380

Offset address of PWM\_FIFO\_CTRL\_0 = 0x00

Offset address of PWM\_FIFO\_STS = 0x02

Offset address of PWM\_RDATA\_0\_0 = 0x10



Once the FIFO is enabled and popped, the user has up to 1 second to retrieve the data from the FIFO.

There is no GUI control for the hardware registers.

### 4. Lab Setup and Results

A picture of the encoder and decoder is shown below. The encoder is on the left and the decoder on the right. Scope plots are also shown in the figure. PWM ToD data is sent when the 8kHz signal is triggered on the encoder. When the decoder receives the PWM data, the data is sent to the FIFO while the DPLL can recover and lock to the 25MHz carrier and the 8kHz frame individually. Only the 8kHz frame is shown below. The same PWM data is sent every  $1/(8\text{kHz})$ .

Figure 15. Lab Setup

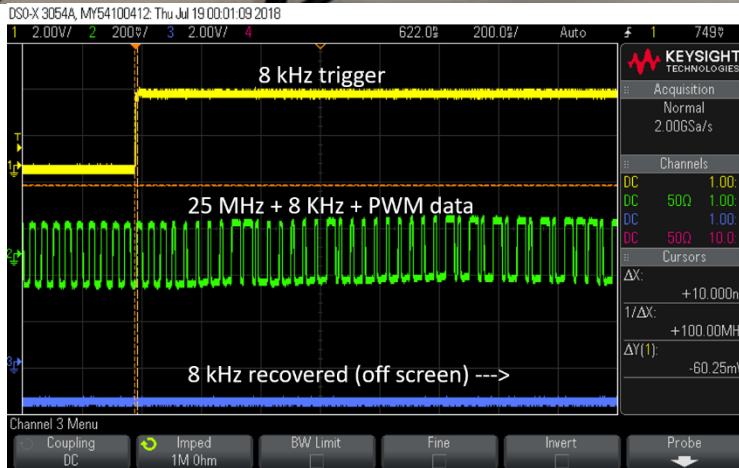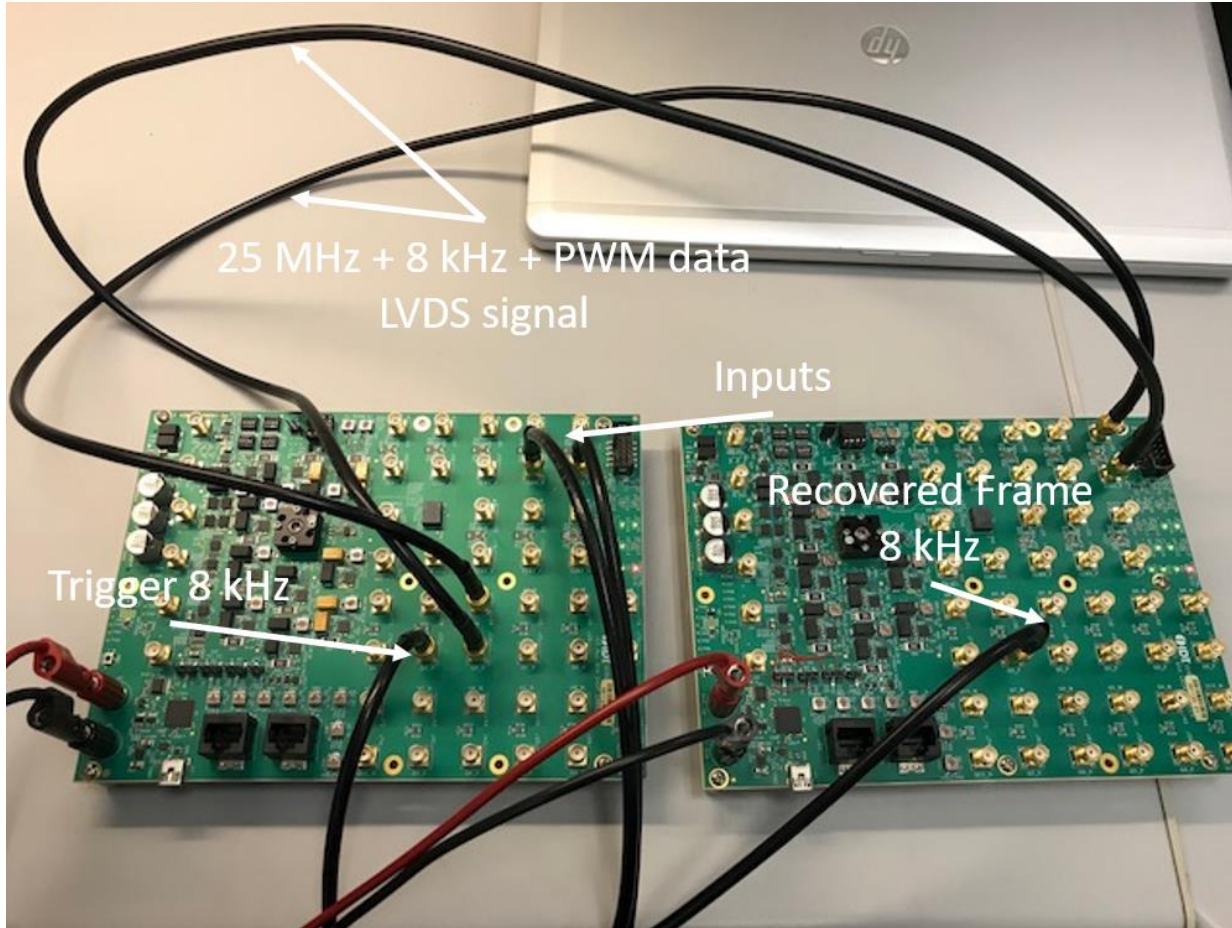

## 5. Input Output Alignment


Sometimes it is useful to align the recovered 8kHz frame output of the decoder to the 8kHz frame input of the encoder. To align the edges, all of the delay cycles must be accounted for as follows:

- Encoder input to output delay = 3 cycles
- Frame pulse sampling delay = 1 cycles
- Decoder input to output delay = 2 cycles
- PWM frame length = 112 cycles
- Total delay = 118 cycles

Therefore, to align the 8kHz frame output at the output of the decoder to the 8kHz frame input at the input of the encoder, the 8kHz frame output requires negative 118 cycles of delay.

The 8kHz output frame pulse is only high after all of the PWM frame is sent. The PWM frame information is shown below and is also in the 8A3x datasheet.

**Figure 16. PWM Frame**

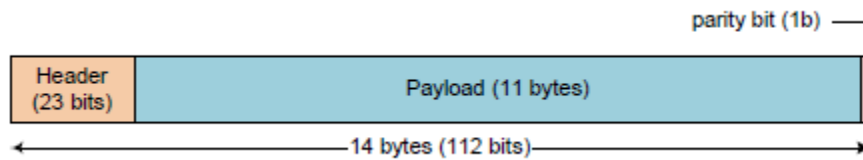

The PWM frame header is comprised of the following:

- Command Code (3 bits)
- Source Encoder ID (8 bits), defined in register SCSR\_PWM\_ENCODER\_ID
- Broadcast (1 bit)
- Destination Decoder ID (8 bits), defined in register SCSR\_PWM\_DECODER\_ID

## 6. Revision History

Revision Date	Description of Change
August 23, 2022	Eliminated pseudo-code.
December 17, 2021	Completed minor, non-technical changes.
August 14, 2018	Initial release.

## IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01 Jan 2024)

### Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

### Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

### Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit [www.renesas.com/contact-us/](http://www.renesas.com/contact-us/).