RENESAS TECHNICAL UPDATE

1753, Shimonumabe, Nakahara-ku, Kawasaki-shi, Kanagawa 211-8668 Japan Renesas Electronics Corporation

Product Category	Package	Document No.	TN-WRP-A019A/E	Rev.	1.00	
Title	Changes of the shipping forms and materials by a unified packing specification	Information Category	Changes of packing specification			
Applicable Product	All the products that the section 2 contents are applicable.	Lot No.	Reference Document			

1. Purpose

We will change our packing materials and shipping forms by applying our unified packing specification.

2. Object products & Changes

NO.	Changed Contents	Objective Products	Reference
1	Change the stacked number of JEDEC trays	Products shipped out by the 5- stacked JEDEC tray form	page2, 5.1, fig.1
2	Change specification of the shipping inner box for JEDEC trays	Products applied the objective inner box	page3, 5.2, fig.2
3	Change specification of the desiccant for JEDEC trays	The products applied the 30g desiccant	page4, 5.3, fig.3
4	Change design of the humidity indicator card (HIC)	All the products shipped out by the moisture barrier bag	page4, 5.4, fig.4
5	Change the humidity sensor portion of humidity indicator card (HIC)	All indicators with 3 levels indication	page4, 5.4, fig.4
6	Change packing specification of the magazines	Magazine products using the gazette bags with gore	page5, 5.5, fig.5
7	Change specification of the shipping inner box for tape & reel	\$\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	page6, 5.6, fig.6

Please refer the detail description from next page.

3. Timing of changes

The change starts from our factory shipping products in May 2014. Please understand that the switching period may vary due to the transition period. For the time being, the present packaged products may be shipped out due to the channel inventory.

4. Others

Please note that references to the packing materials and shipping forms in our previous "Delivery Specifications: Collateral Circumstance" are now replaced by this notice. If you need to revise the present agreed delivery specifications, please contact our business.



Date: Feb. 13, 2014

5. Detail Description

5-1. Change the stacked number of JEDEC trays

Change relates to stacked number of JEDEC trays which are shipped out by the 6 stacked trays to the 9 stacked trays (include 1 cover tray). The products ordered by the prefixed quantity are exception.

Fig.1: The external view for the 6 stacked trays and 9 stacked trays (include 1 cover tray)

Item	Before	After		
External View	Humidity Indicator Card Desiccant	Humidity Indicator Card Desiccant		
Spec.	5 product trays + 1 cover tray	8 product trays + 1 cover tray		

5-2. Change specification of the shipping inner box for JEDEC trays Change relates to the shape of the inner box, protective sheet, and spacer.


Fig.2: The external view for the JEDEC tray shipping inner box, protective sheet, and spacer

Item		iew for the JEDEC tray shipping inner box, protecti Before			After			
External View	Outer View					Tenesas Tangas		
	Open View							
Inner Box Size				Size	(mm)			
		a	b	С	a	b	С	
	b		175	375	75	152	330	
Protective	Protective Sheet		Paper Sheet			Bubble Sheet		
Spacer		Yes			No			

5-3. Change specification of the desiccant for JEDEC trays

Change relates to weight of the bag which is from the 30g x 1 bag to the one of 25g x 2 pockets bag.

Fig.3 External View for the desiccant of shipping JEDEC trays

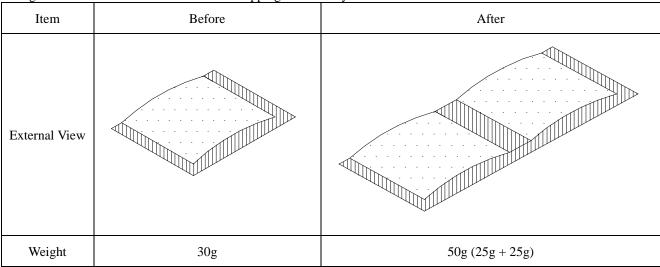

5-4. Change specification of the moisture sensing indicator for JEDEC trays

Change relates to the design of the Humidity Indicator Card, and display of 3 levels humidity indication to the 4 levels humidity indication.

Fig.4: External view for the Humidity Indicator Card (HIC)

Item	Before	After		
External View	COBALT DICHLORIDE FREE Correlation with IPC/AEDEC J-STD-033 Correlation with IPC/AEDEC J-STD-033 Correlation with IPC/AEDEC J-STD-033 and all REACH regulations EXAMINE ITEM IF PINK CHANGE DESICCANT IF PINK WARNING IF PINK WARNING IF PINK WARNING IF PINK WARNING IF PINK UBSCARD IF CIRCLES OVERAUM AVOID METAL CONTACT COBALT DICHLORIDE FREE Correlation with IPC/AEDEC J-STD-033 and all REACH regulations EXAMINE ITEM IF PINK CHANGE DESICCANT IF PINK WARNING IF PINK UBSCARD IF CIRCLES OVERAUM AVOID METAL CONTACT	SMD - HUMITECTOR Humidity Monitor HM-04-OPB Contains Cobal Brombe 10% 20% 30% 40% Read at Lavender CLARIANT www.carlant.com Batsin#.U8H006053		
Moisture Sensing indication	3 levels	4 levels		

5-5. Change packing specification of the magazines Change relates to the size of the inner box, moisture proof bag, and desiccant. There is no change to numbers of magazines in the inner box.

Fig.5: External Vic	Items		Before			After		
	Inner Box (Open)	39 10 10 10			Districts.			
External View	Humidity Barrier Bag	Gazette type			3 ways seal type			
	Desiccant	151	g (5g + 5g + 5			50g (25g + 25g		
Size of Inner Box		Size(mm)					<u>'</u>	
		a	b	с	a	b	С	
		66	130	575	77	172	600	

5-6. Change specification of the shipping inner box for tape & reel The change relates to Φ 330 reel inner box. The white inner box for Φ 330 reels is discontinued, and then it replaced by the brown inner box. At the same time, the logo marks for inner box are unified to one size.

Fig.6: External view for shipping Φ330 reel inner box

Item	Before	After
External View	in the same of the	S. C.
	TO SERVICE SER	